

LCIT RT5000 (B832)

LCIT RT5000 (B832)

 
PARTS CATALOG

This catalog gives the numbers and names of parts on this machine.

1.EXTERIOR (B832)	2
2.1ST/2ND TRAY UNIT 1 (B832).....	4
3.1ST/2ND TRAY UNIT 2 (B832).....	6
4.3RD TRAY UNIT 1 (B832)	8
5.3RD TRAY UNIT 2 (B832)	10
6.PAPER REGISTRATION 1 (B832)	12
7.PAPER REGISTRATION 2 (B832)	14
8.TRANSPORT SECTION 1 (B832)	16
9.TRANSPORT SECTION 2 (B832)	18
10.TRANSPORT SECTION 3 (B832)	20
11.DRIVE SECTION (B832)	22
12.ELECTRICAL SECTION (B832)	24
13.FRAME 1 (B832)	26
14.FRAME 2 (B832)	28
15.FRAME 3 (B832)	30
16.DECALS AND DOCUMENTS (B832)	32
PARTS INDEX	37

March ,15 ' 2006

1.EXTERIOR (B832)

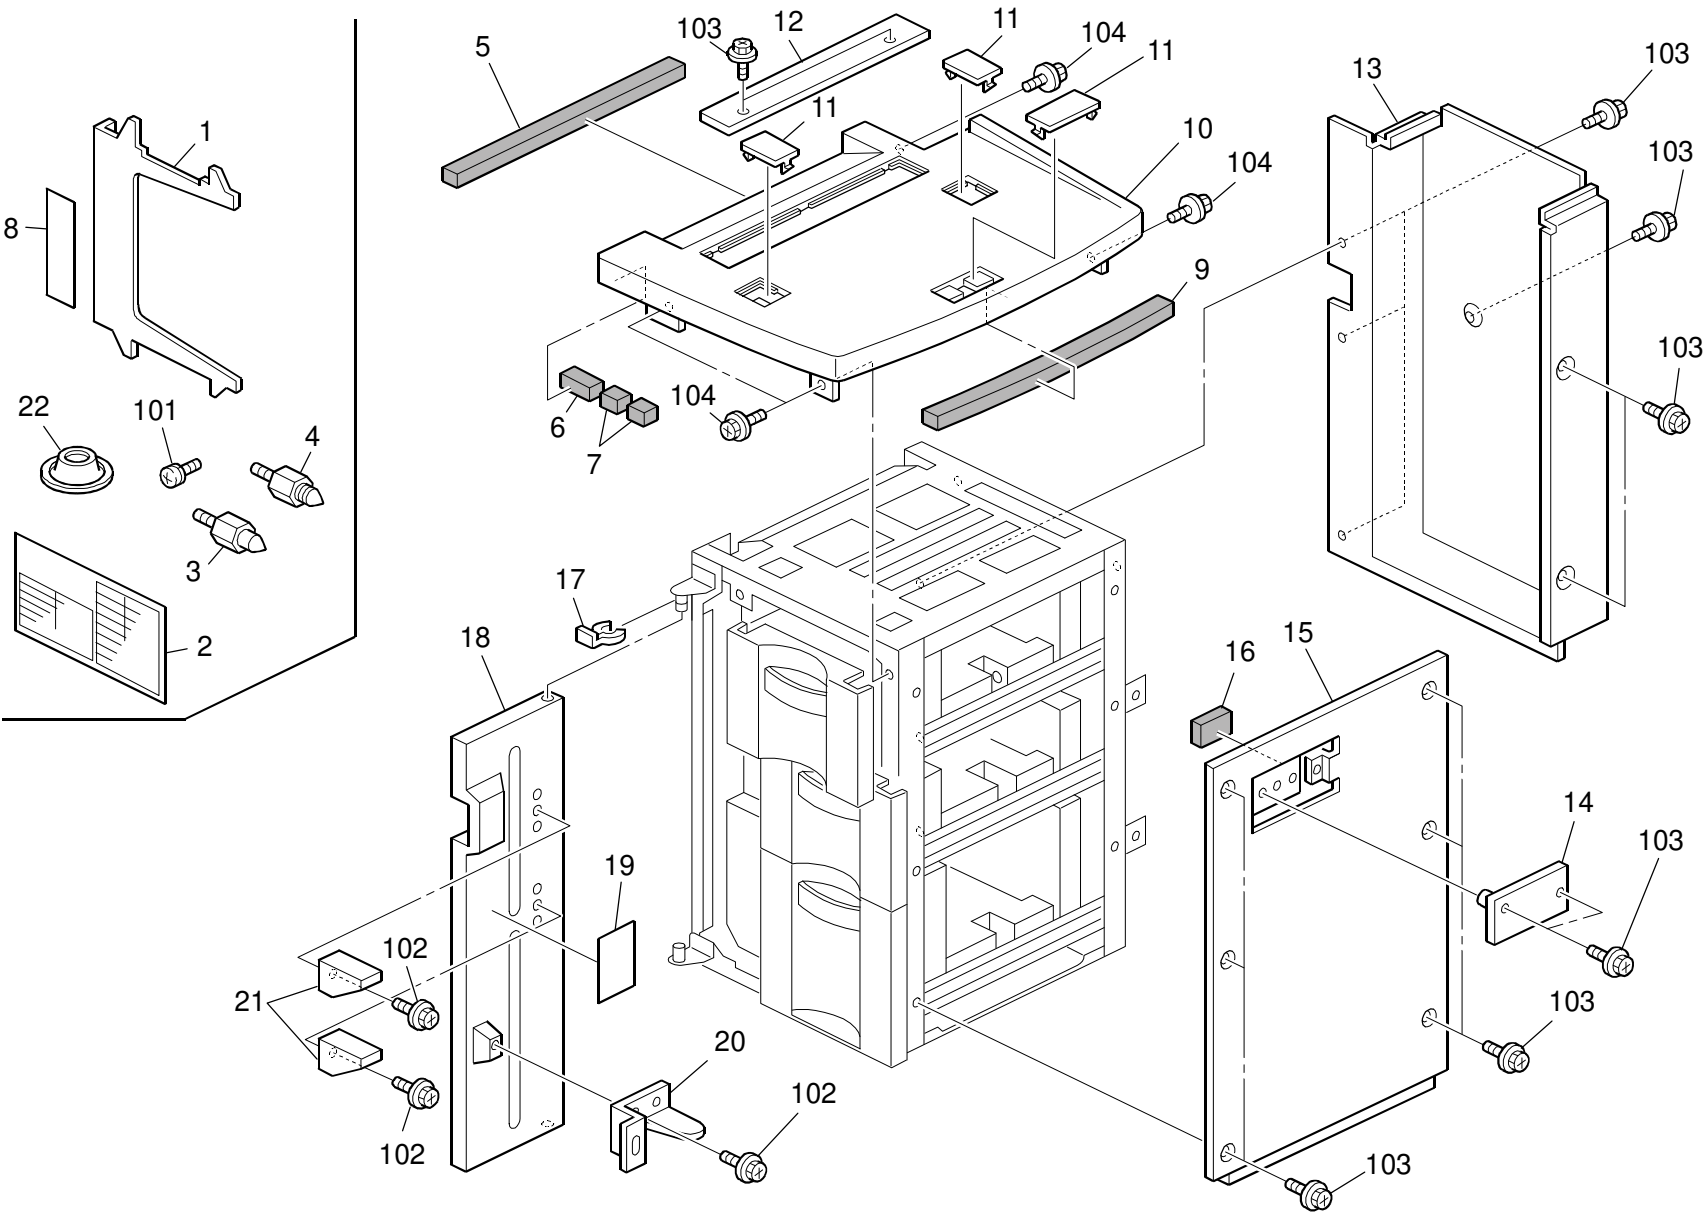 


1.EXTERIOR (B832)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B511 2785	End Fence:Tab	1
2	B832 1308	Decal - Paper Size	1
3	B832 1101	Positioning Pin - Lower	2
4	B832 1100	Positioning Pin - Upper	2
5	B832 1371	Spacer Cushion	1
6	B832 1374	Cover Cushion - Front Left	1
7	B832 1376	Cover Cushion - Front Middle	2
8	B832 1344	Decal - End Fence Tab	1
9	B832 1372	Cover Cushion - Right	1
10	B511 1370	Cover:Upper	1
11	B024 1365	Cap - 38x77	3
12	B511 1378	Cover:Cover:Upper	1
13	B511 1379	Cover - Rear	1
14	B511 1386	Cover:Right:Key Counter	1
15	B511 1385	Cover:Right	1
16	B832 2729	Tray Cushion	1
17	5447 2681	Snap Ring	1
18	B511 1360	Cover:Left	1
19	B832 1309	Decal - Misfeed Removal	1
20	B832 1368	Cover Magnet Catch - Left	1
21	B832 1595	Door Cover - Small	2
22	B132 1226	Holder:Stand	4

Index No.	Part No.	Description	Q'ty Per Assembly
101	0950 4008Z	Philips Truss Screw - M4x8	
102	0450 4008N	Tapping Screw - M4x8	
103	0451 4008N	Tapping Screw:4x8	
104	0451 4012N	Tapping Screw:4x12	

2.1ST/2ND TRAY UNIT 1 (B832)

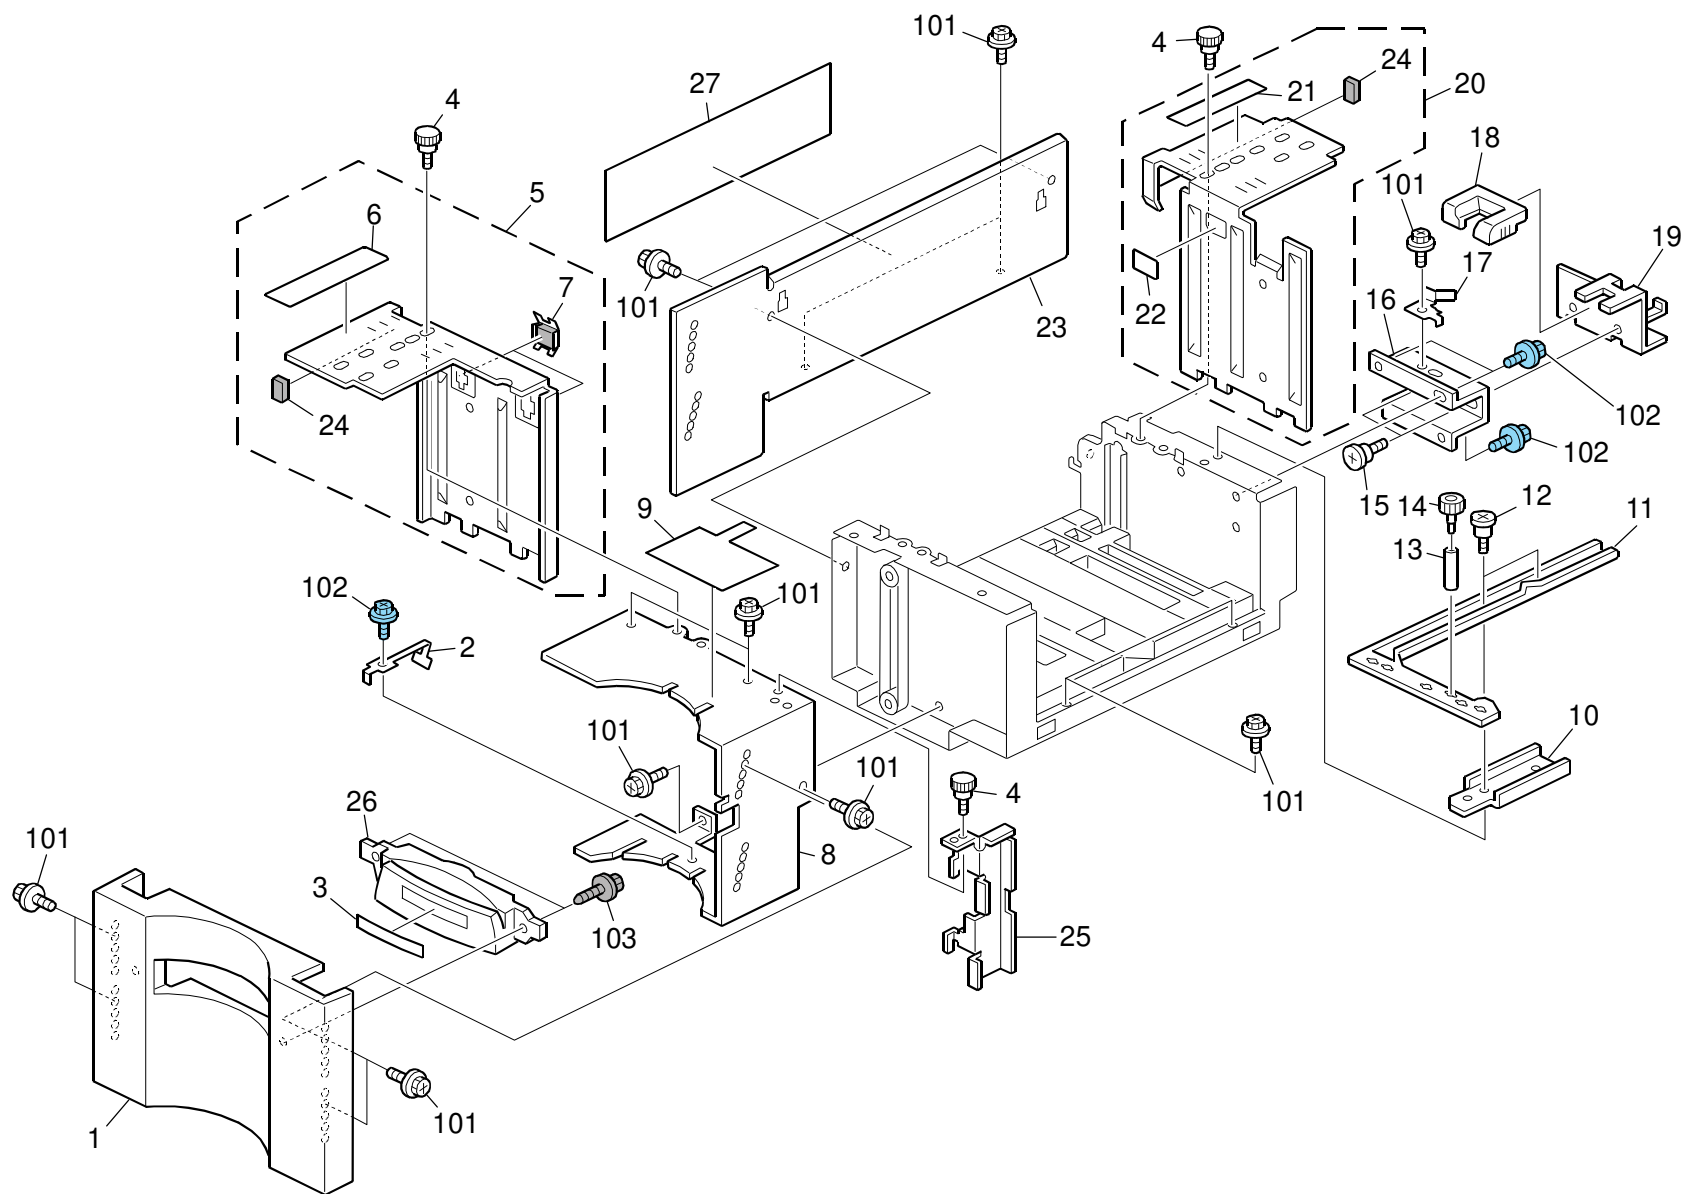 


2.1ST/2ND TRAY UNIT 1 (B832)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B832 1380	Tray Cover (S)	1
2	B511 2895	Stopper:End Fence:No.4	1
2	B511 2896	Stopper:End Fence:No.5	1
3	B832 1312	Decal - Display (4)	1
3	B832 1313	Decal - Display (5)	1
4	B832 2877	Knob Screw:Tray:Guide:Green	2
5	B832 2871	No.1,2 Side Fence - Front (NA)	1
5	B303 2871	Side Fence:Front:No.1,2:Ass'y (EU)	1
6	B832 1304	Decal - Side Fence Front	1
7	B303 2777	Paper Guide Mylar	2
8	B832 2823	Upper Cover - Duplex Tray	1
9	B832 1341	Decal - End Fence Size Indication 4-5	1
10	B511 2783	Guide Fence Bracket	1
11	B511 2660	Slider:End Fence	1
12	AA14 3857	Screw - M4x5	2
13	B511 2788	Silicone Tube:End Fence	1
14	B832 2787	Knob Screw:End Fence:Press Fit	1
15	AA14 3562	Screw:M4:DIA6x1.2	2
16	B511 2886	Sensor Bracket	1
17	B303 2898	Spring Plate	1
18	B303 2888	Paper Size Lever	1
19	B511 2897	Paper Size Actuator	1
20	B832 2898	No.1,2 Side Fence - Rear (NA)	1
20	B511 2875	Side Fence:Rear:No.1,2:Ass'y (EU)	1
21	B832 1305	Decal - Side Fence Rear	1
22	B511 2674	Decal:Display:Paper Volume	1
23	B832 2821	Guide Plate - Front	1
24	B303 2645	Noise Absorber Seal - 16.5x4.2x3	2
25	B511 2852	End Fence:Front:1K	1
26	B247 6634	Grip - Paper Tray Cover	1
27	B832 1343	Decal - Paper Supply 4-5	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	0454 4006Q	Tapping Screw:4x6	
103	0450 4010N	Tapping Screw:M4x10	

3.1ST/2ND TRAY UNIT 2 (B832)

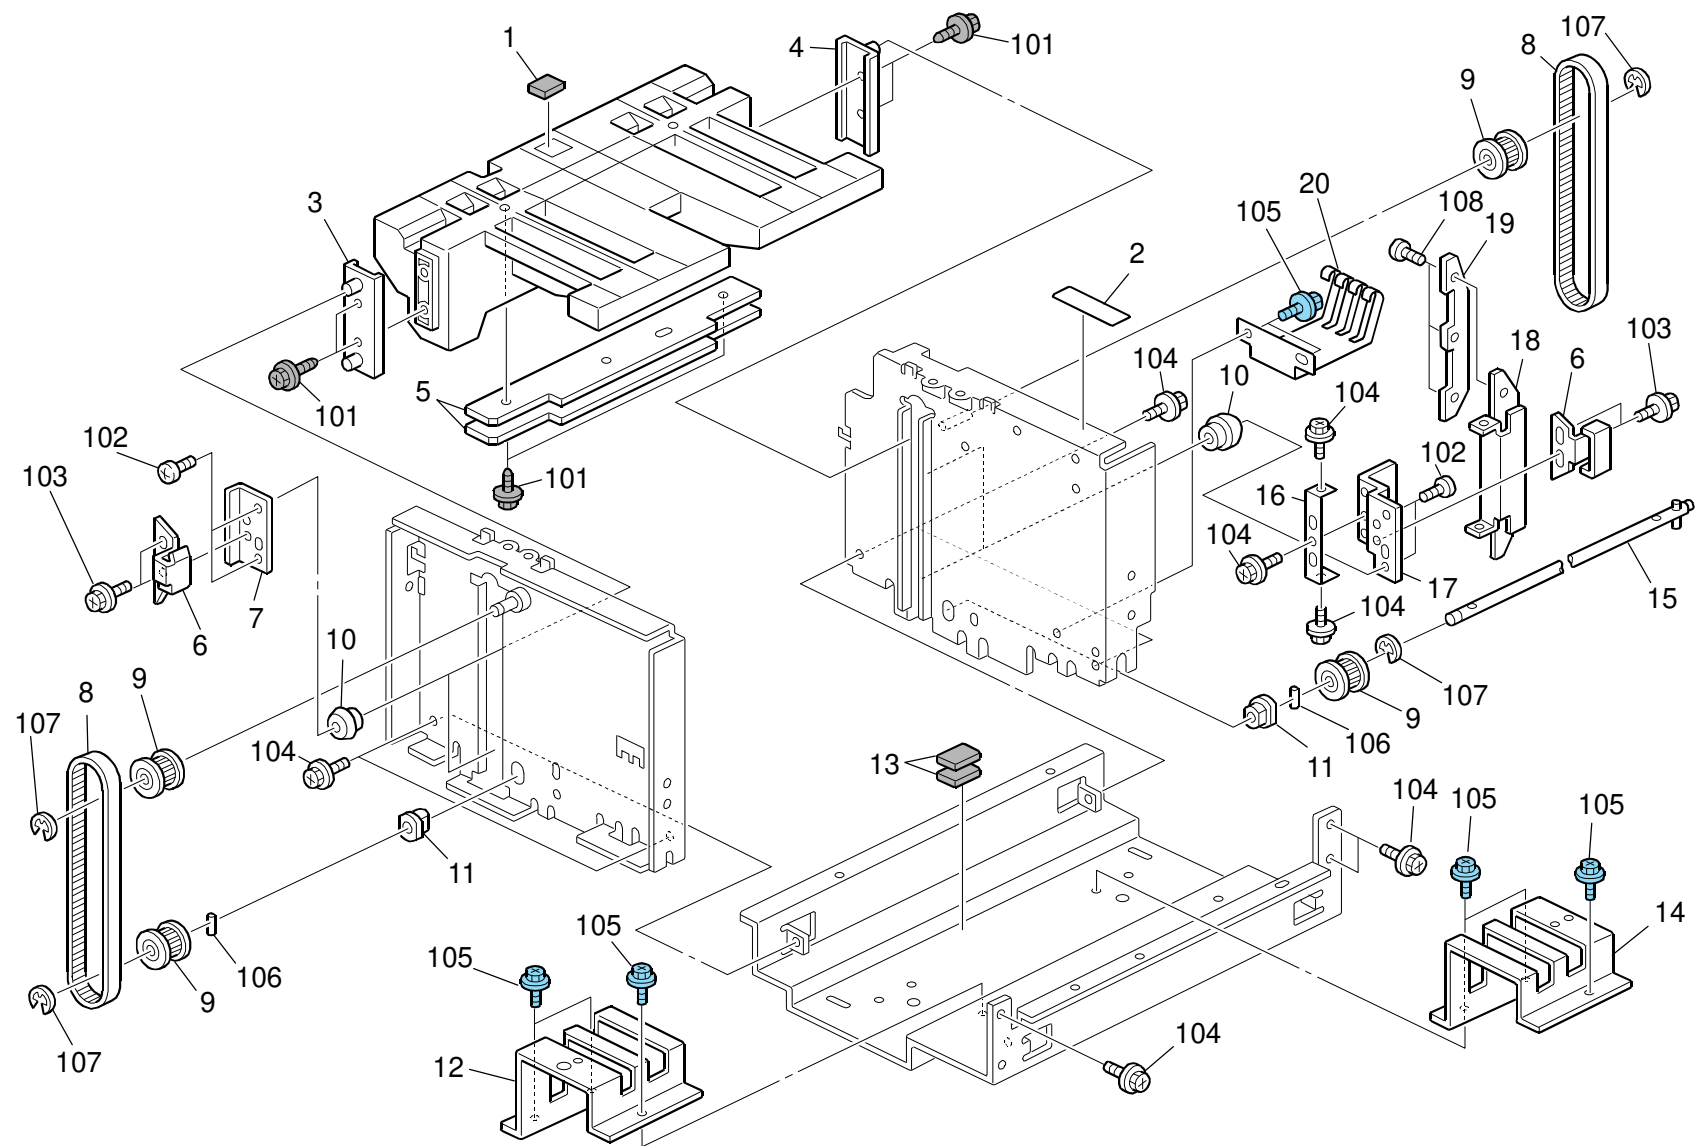 


3.1ST/2ND TRAY UNIT 2 (B832)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A667 2656	Friction Pad	1
2	B303 1303	Decal - Paper Size	1
3	B511 2439	Bracket:Paper Tray:Front	1
4	B511 2438	Bracket:Paper Tray:Rear	1
5	B511 2737	Weight Plate	2
6	B832 2670	Belt Fix Bracket	2
7	B511 2742	Bracket	1
8	AA04 3910	Timing Belt - B100S5M435	2
9	AB03 0548	Pulley - 16T	4
10	A335 4351	Guide Roller	4
11	AA08 2096	Bushing - 8x12x7	2
12	B511 2728	Side Fence Stay - Front	1
13	B832 2729	Tray Cushion	2
14	B511 2729	Side Fence Stay - Rear	1
15	B303 2851	Paper Lift Shaft - 1K	1
16	B832 2757	Spring Plate	1
17	B511 2752	Bracket	1
18	B511 2747	Paper Actuator	1
19	B303 2748	Actuator Cover	1
20	B303 2723	Grounding Plate	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0450 4014P	Tapping Screw - 4x14	
102	0354 0060N	Screw-m4x6	
103	0451 3008N	Tapping Screw - M3x8	
104	0451 4008N	Tapping Screw:4x8	
105	0454 4006Q	Tapping Screw:4x6	
106	0633 0140G	Parallel Pin - 3x14	
107	0720 0060E	Retaining Ring - M6	
108	0314 0040N	Pan Head Screw - M4x4	

4.3RD TRAY UNIT 1 (B832)

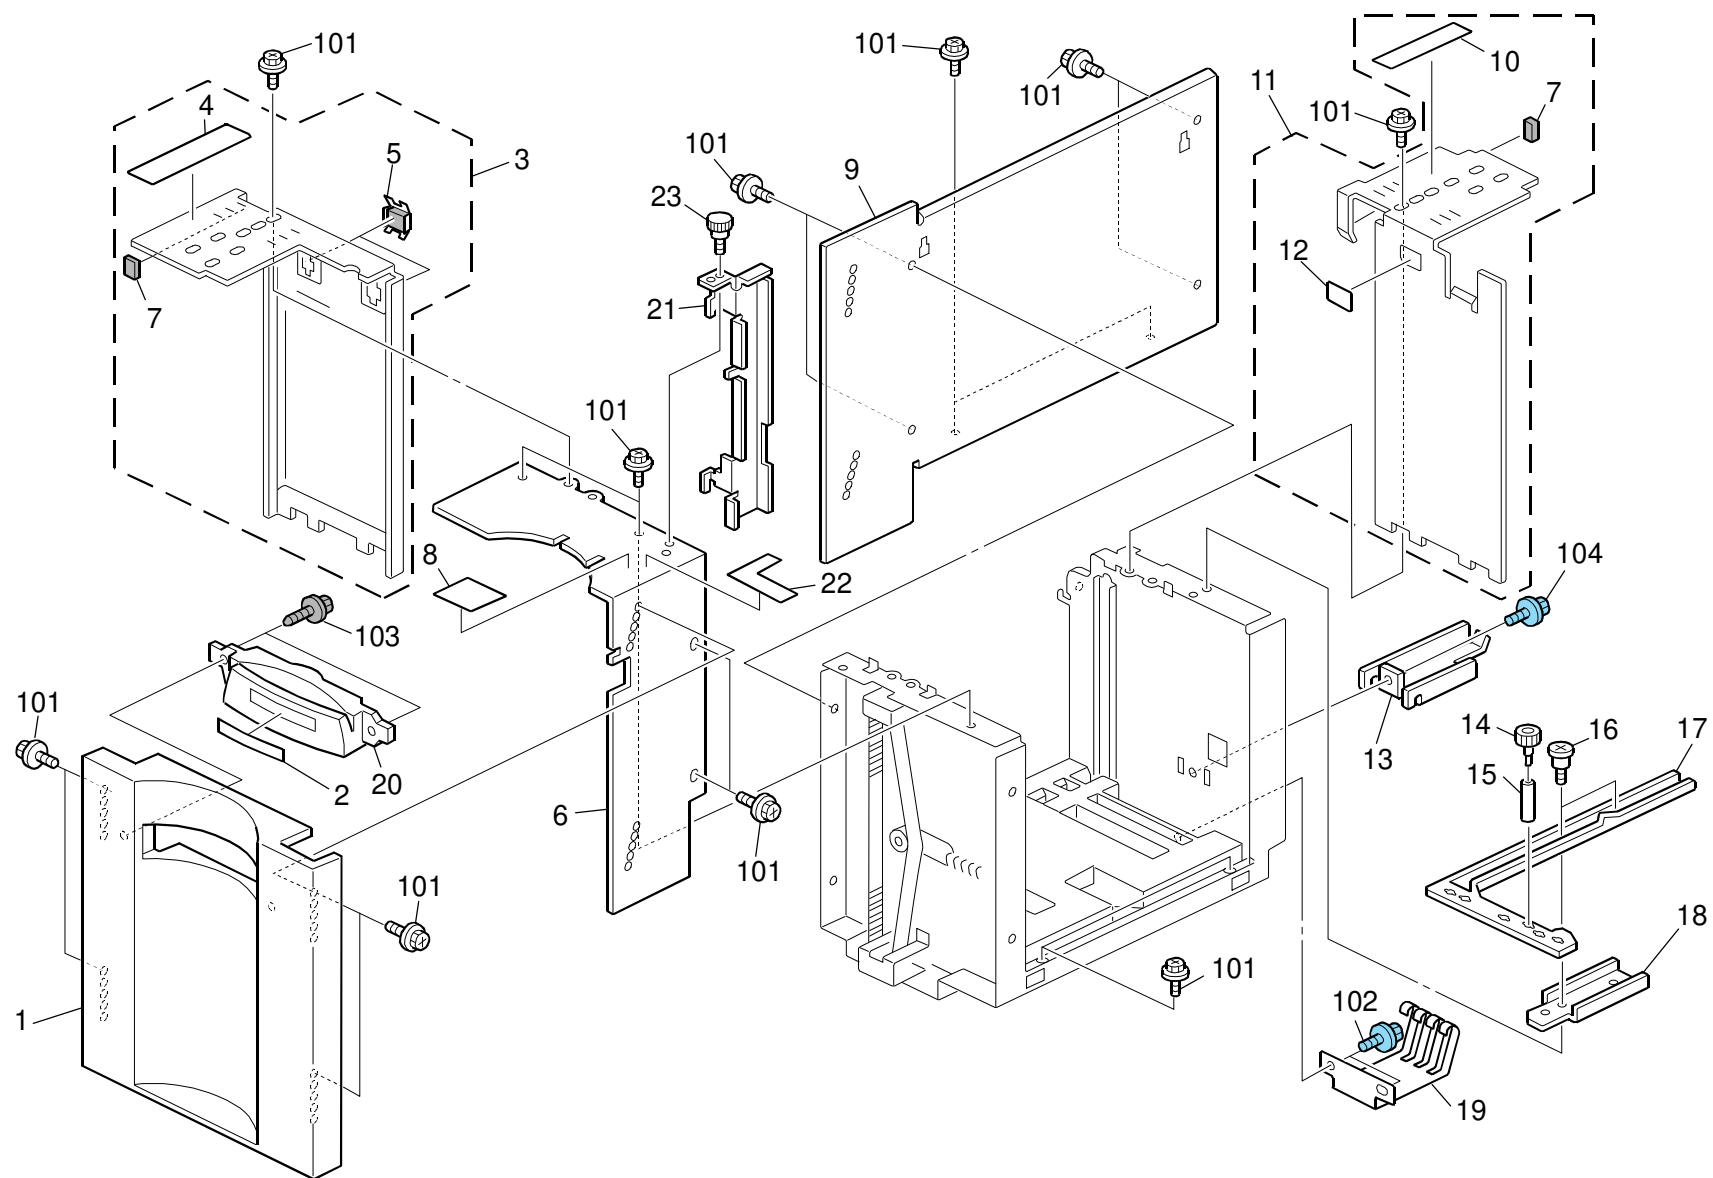 


4.3RD TRAY UNIT 1 (B832)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B832 1381	Tray Cover (L)	1
2	B832 1314	Decal - Display (6)	1
3	B511 2769	Side Fence:Front:No.3:Ass'y	1
4	B832 1304	Decal - Side Fence Front	1
5	B303 2777	Paper Guide Mylar	2
6	B832 2723	Tray Cover - Upper	1
7	B303 2645	Noise Absorber Seal - 16.5x4.2x3	2
8	B832 1311	Decal - Paper Supply (6)	1
9	B832 2721	Guide Plate - Front	1
10	B832 1305	Decal - Side Fence Rear	1
11	B511 2774	Side Fence:Rear:No.3:Ass'y	1
12	B511 2674	Decal:Display:Paper Volume	1
13	B511 2727	Sensor Bracket	1
14	B832 2787	Knob Screw:End Fence:Press Fit	1
15	B511 2788	Silicone Tube:End Fence	1
16	AA14 3857	Screw - M4x5	2
17	B832 2660	End Fence Slider	1
18	B511 2783	Guide Fence Bracket	1
19	B303 2723	Grounding Plate	1
20	B247 6634	Grip - Paper Tray Cover	1
21	B511 2857	End Fence:Front:2.5K	1
22	B511 1342	Decal - End Fence Size Indication 6	1
23	B832 2877	Knob Screw:Tray:Guide:Green	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	0454 4006Q	Tapping Screw:4x6	
103	0450 4010N	Tapping Screw:M4x10	
104	0454 4008Q	Tapping Screw - M4x8	

5.3RD TRAY UNIT 2 (B832)

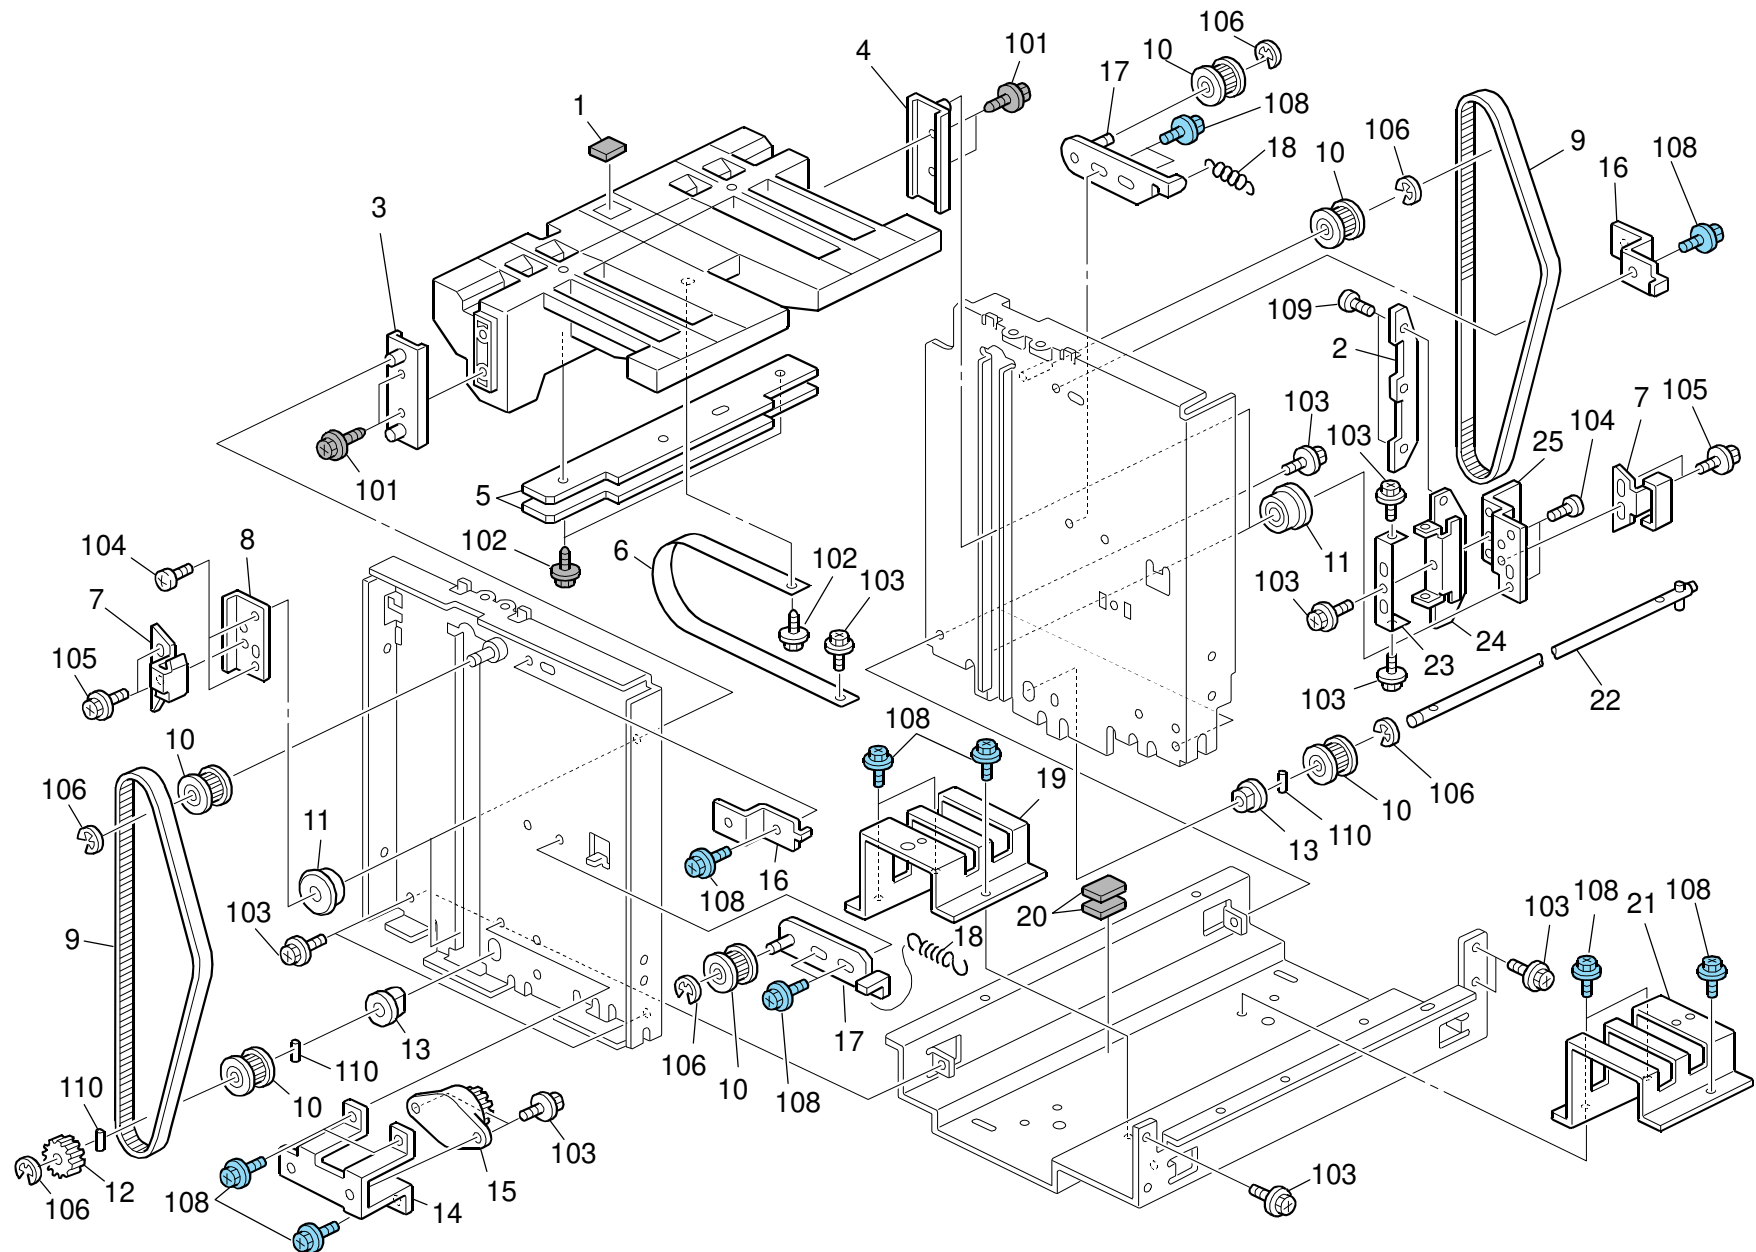 


5.3RD TRAY UNIT 2 (B832)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A667 2656	Friction Pad	1
2	B303 2748	Actuator Cover	1
3	B511 2439	Bracket:Paper Tray:Front	1
4	B511 2438	Bracket:Paper Tray:Rear	1
5	B511 2737	Weight Plate	1
6	B303 2734	Paper Stopper	1
7	B832 2670	Belt Fix Bracket	2
8	B511 2742	Bracket	1
9	AA04 3909	Timing Belt - B100S5M780	2
10	AB03 0548	Pulley - 16T	6
11	A335 4351	Guide Roller	4
12	AB01 4140	Gear - 24Z	1
13	AA08 2096	Bushing - 8x12x7	2
14	B511 2793	Oil Damper Bracket	1
15	B303 2791	Oil Dumper	1
16	B511 2736	Side Plate Bracket	2
17	B511 2761	Tightener Bracket	2
18	A267 2787	Tension Spring - Lock Lever	2
19	B511 2728	Side Fence Stay - Front	1
20	B832 2729	Tray Cushion	2
21	B511 2729	Side Fence Stay - Rear	1
22	B303 2751	Paper Lift Shaft - 2.5K	1
23	B832 2757	Spring Plate	1
24	B511 2747	Paper Actuator	1
25	B511 2752	Bracket	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0450 4014P	Tapping Screw - 4x14	
102	0450 4010N	Tapping Screw:M4x10	
103	0451 4008N	Tapping Screw:4x8	
104	0354 0060N	Screw-M4x6	
105	0451 3008N	Tapping Screw - M3x8	
106	0720 0060E	Retaining Ring - M6	
107	0454 4008Q	Tapping Screw - M4x8	
108	0454 4006Q	Tapping Screw:4x6	
109	0314 0040N	Pan Head Screw - M4x4	
110	0633 0140G	Parallel Pin - 3x14	

6.PAPER REGISTRATION 1 (B832)

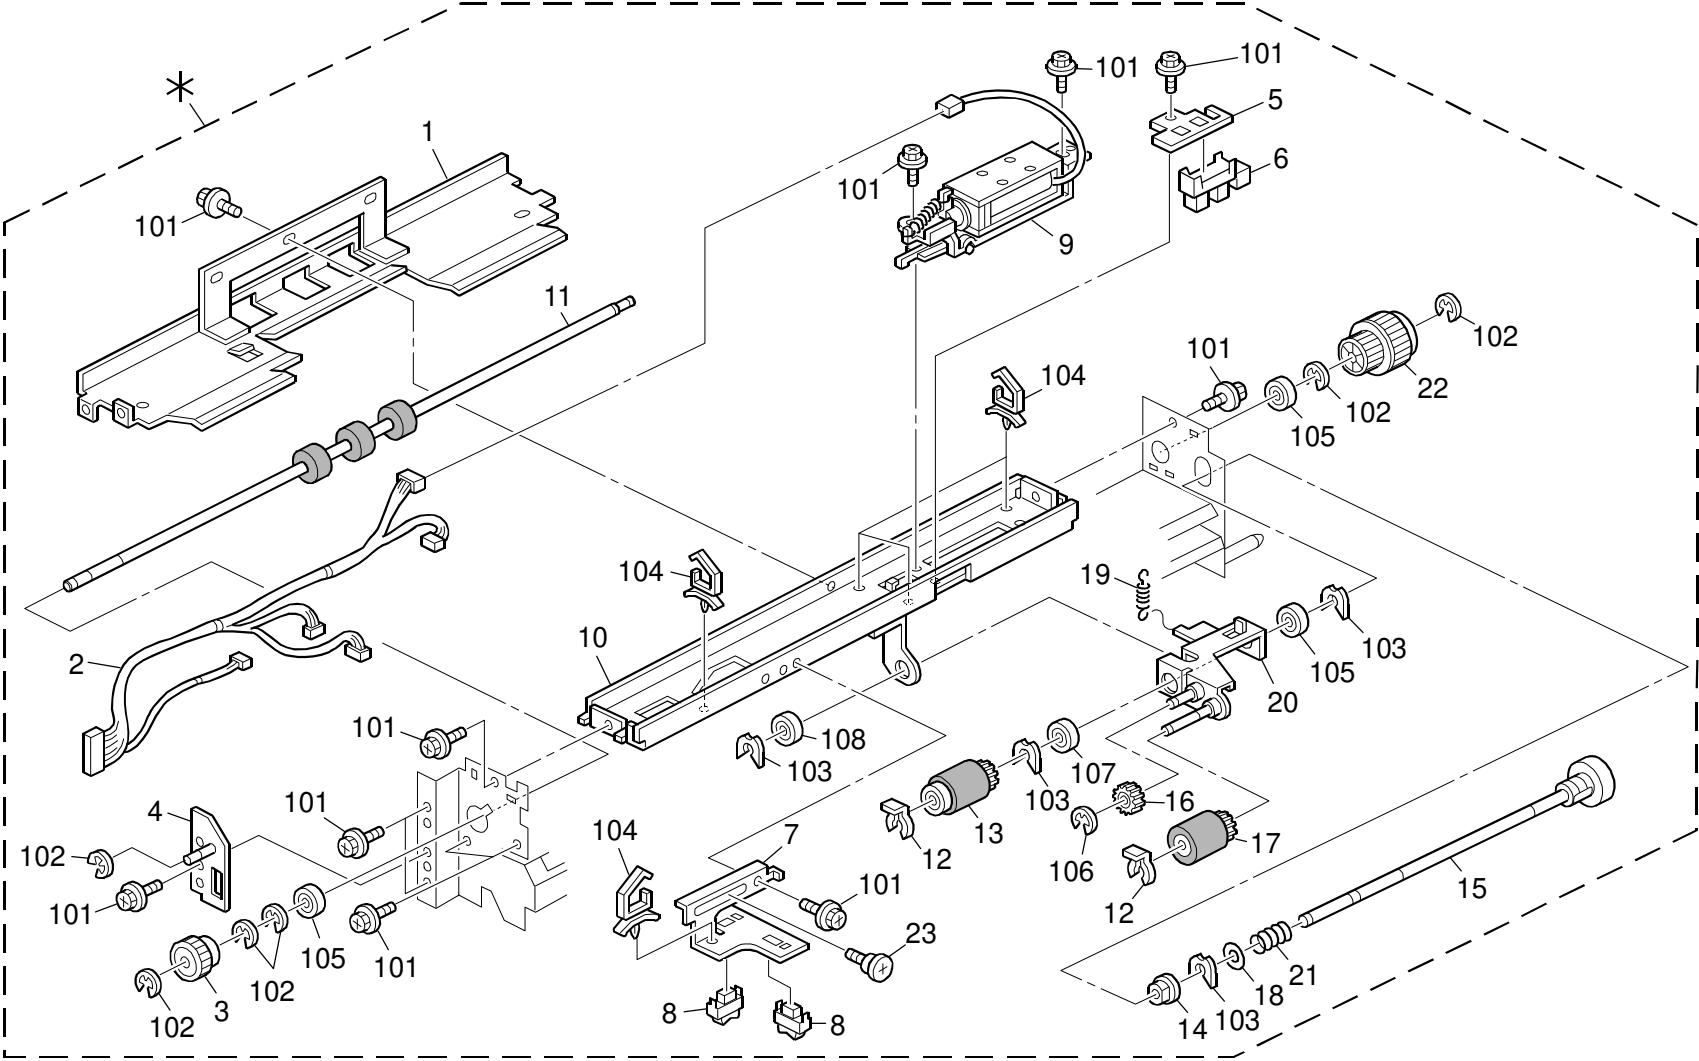 


6.PAPER REGISTRATION 1 (B832)

Index No.	Part No.	Description	Q'ty Per Assembly
*	B832 2500	Paper Feed Unit	1
1	B832 2520	Guide Plate - Feed	1
2	B832 5311	Harness - Paper Feed Unit	1
3	AB01 1478	Gear - 18Z	1
4	B832 2631	Stay	2
5	B511 2677	Sensor Bracket	1
6	AW02 0145	Photointerruptor:Flat	1
7	B832 2577	Paper Feed Sensor Bracket	1
8	AW01 0122	Paper Feed Sensor	2
9	B832 2578	DC Solenoid 24V	1
10	B832 2571	Stay:Feed:Peen	1
11	AF02 1410	Transport Roller	1
12	AA10 0014	Retaining Ring C - Separate	2
13	AF03 1081	Paper Feed Roller:Feed:Manual Feed	1
14	AA08 3015	Roller Clutch	2
15	B832 2585	Feed Roller Shaft	1
16	5447 2706	Gear - 15T	1
17	AF03 0080	Paper Feed Roller:Pickup	1
18	B132 4119	Spacer:Gear:Idler	1
19	AA06 6677	Tension Spring	1
20	B832 2574	Pickup Arm	1
21	AA06 3204	Compression Spring	1
22	AB01 7724	Gear - 23Z/28Z	1
23	AA14 3812	Screw - Scale	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	0720 0060E	Retaining Ring - M6	
103	0805 0088	Retaining Ring - M6	
104	1105 0511	Harness Clamp - LWS-0306ZC	
105	0742 3808	Ball Bearing - 8x16x5	
106	0720 0040E	Retaining Ring - M4	
107	0741 3708	Ball Bearing - 8x12x3.5mm	

7.PAPER REGISTRATION 2 (B832)

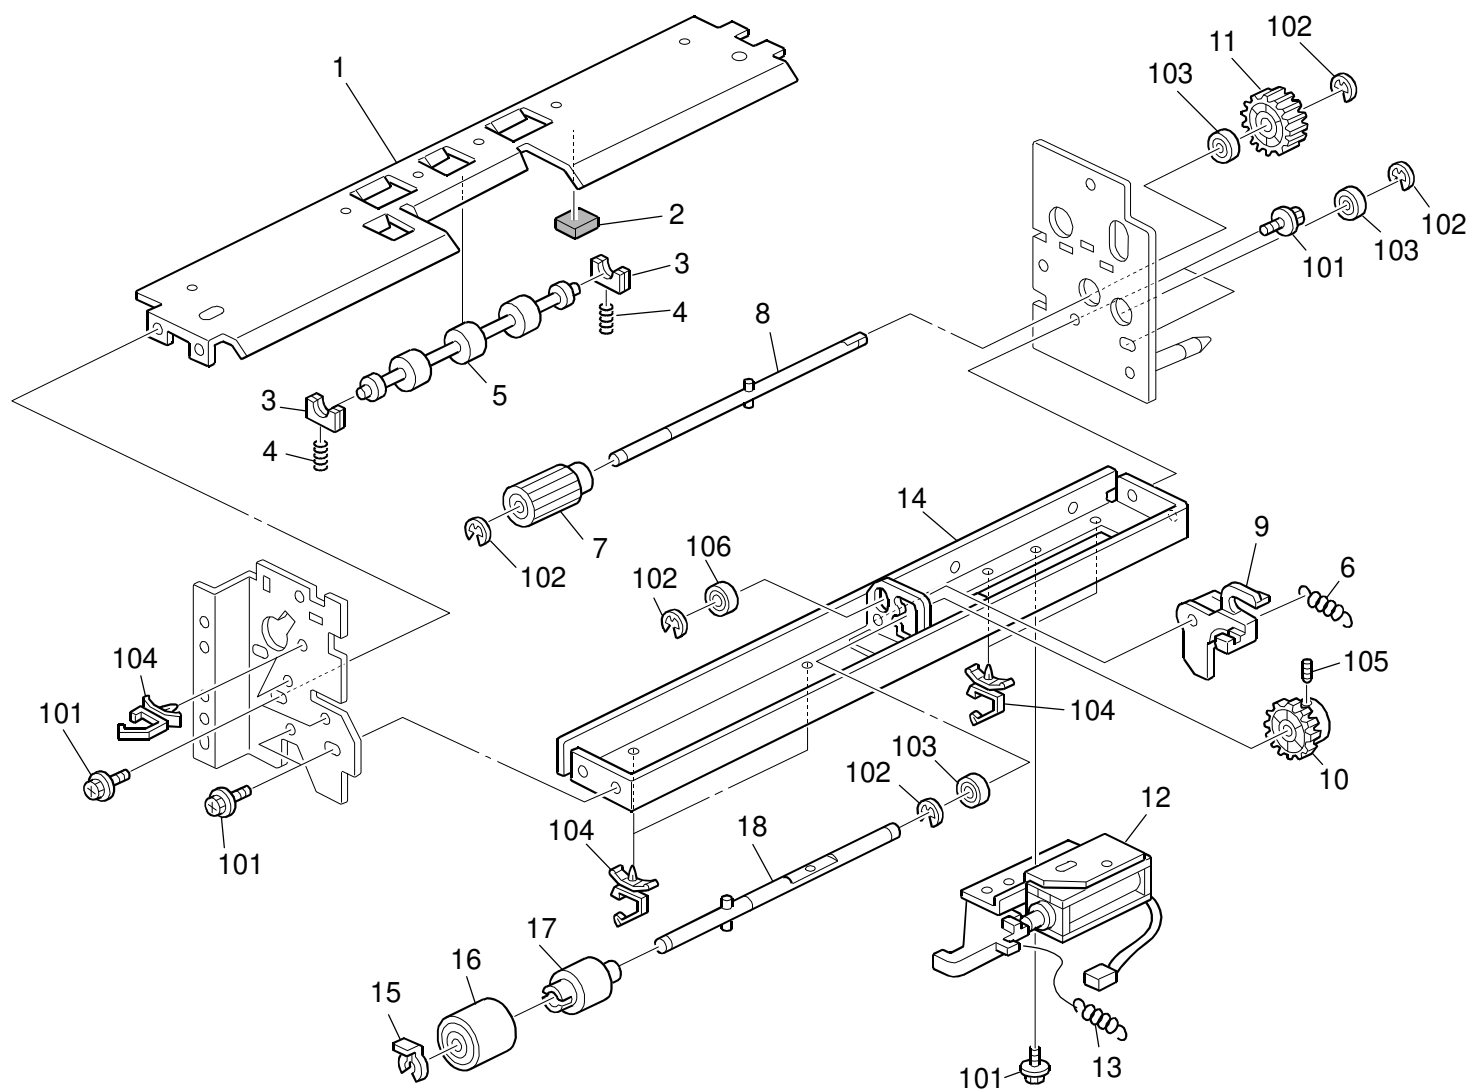 


7.PAPER REGISTRATION 2 (B832)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B832 2535	Reverse Guide Plate	1
2	A229 2692	Damping Insulation	1
3	AA08 4059	Ball Bearing Holder	2
4	B833 2565	Compression Spring	2
5	B834 2568	Transport Roller - Driven	1
6	B833 2567	Tension Spring	1
7	AB01 1392	Drive Reverse Gear - 24Z	1
8	B234 6222	Reverse Drive Shaft	1
9	B303 2556	Reverse Pressure Lever	1
10	AB01 1591	Gear:Reverse	1
11	BB01 3008	Gear - 31Z	1
12	B832 2558	DC Solenoid 24V	1
13	AA06 0575	Release Spring	1
14	B832 2541	Stay	1
15	AA10 0014	Retaining Ring C - Separate	1
16	AF03 2080	Paper Feed Roller:Separate	1
17	B234 6300	Torque Limiter	1
18	B234 6223	Driven Reverse Shaft	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	0720 0040E	Retaining Ring - M4	
103	0741 3706	Ball Bearing - 6x10x3	
104	1105 0511	Harness Clamp - LWS-0306ZC	
105	0573 0030E	Hexagon Headless Set Screw - M3x3	
106	0741 3506	Ball Bearing - 6x12x4 mm	

8.TRANSPORT SECTION 1 (B832)

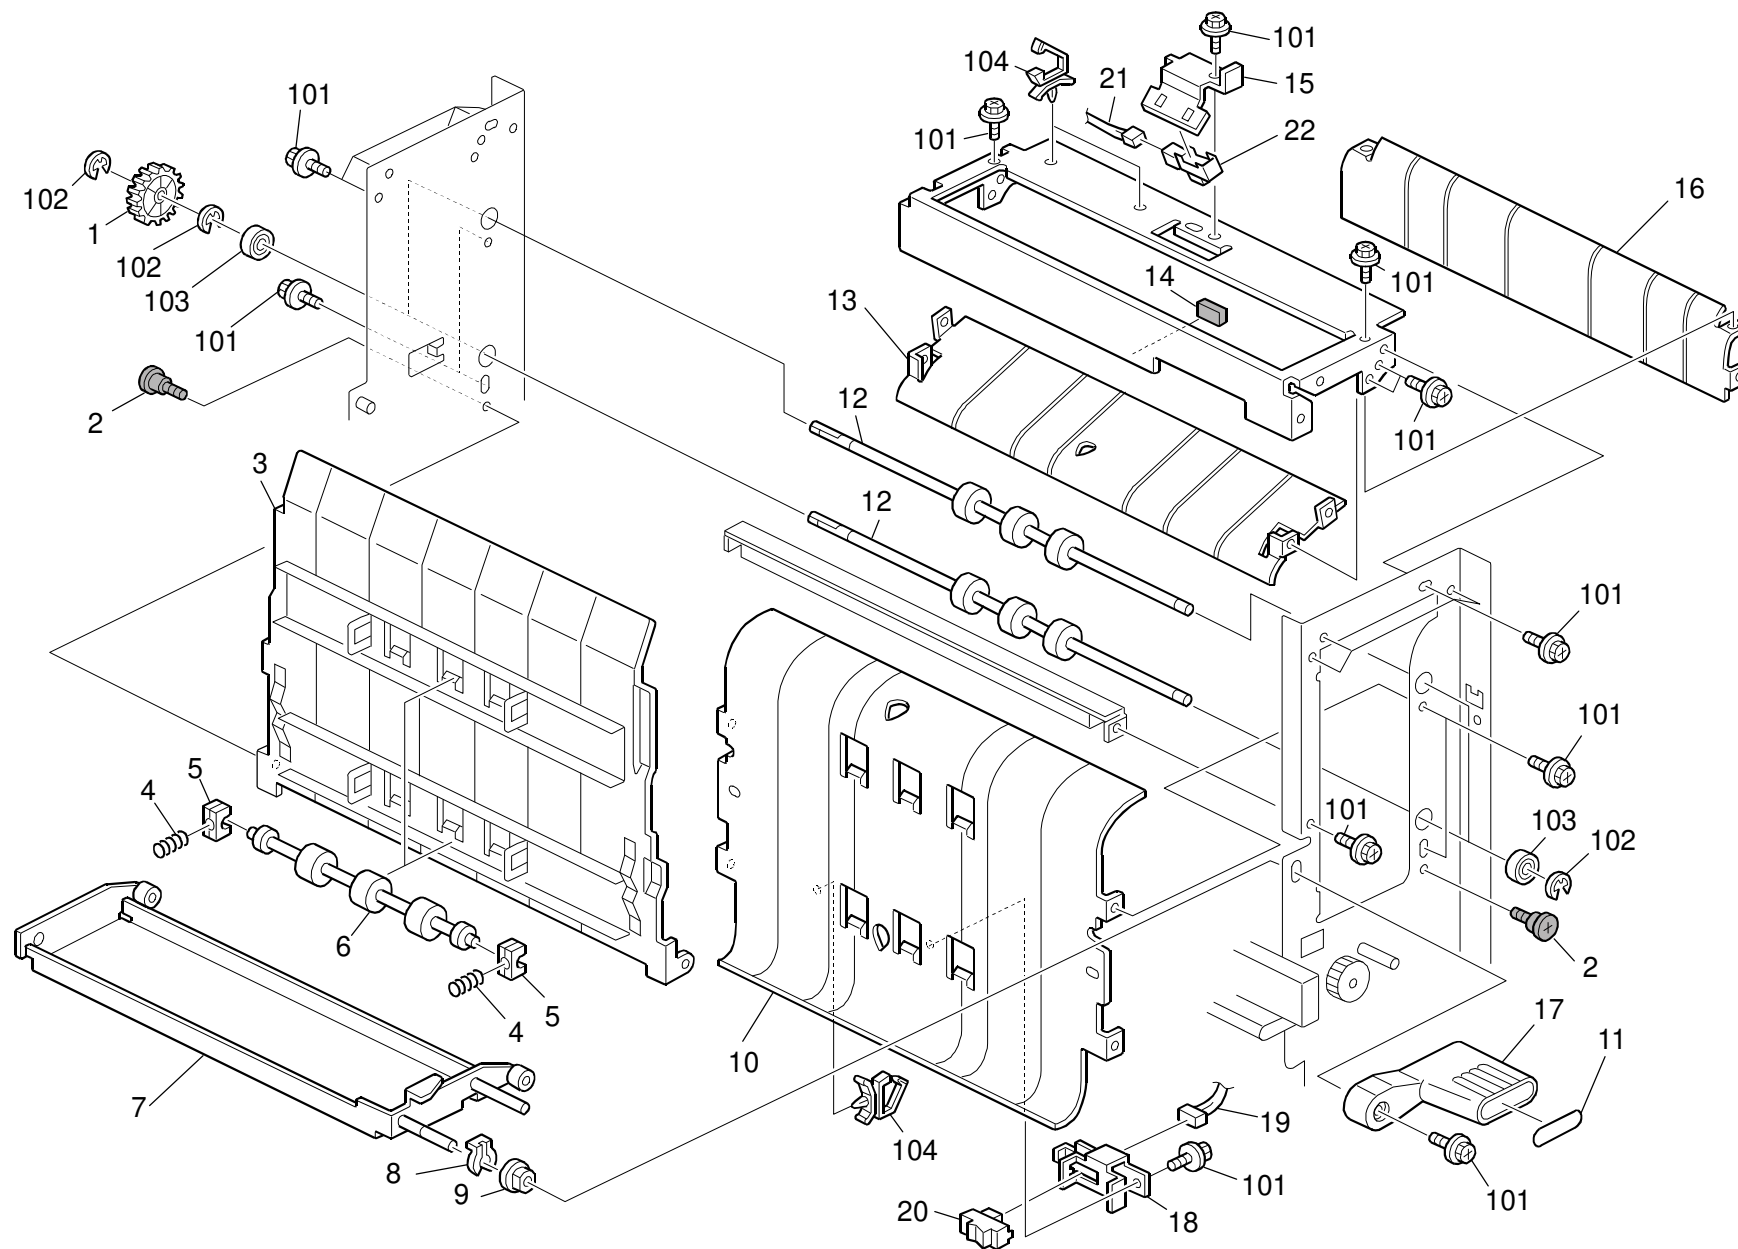 


8.TRANSPORT SECTION 1 (B832)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AB01 3654	Gear - 30Z	2
2	AA14 3810	Development Cover Screw	2
3	B832 3615	Guide Plate - Upper	1
4	AA06 6675	Compression Spring	4
5	AA08 4059	Ball Bearing Holder	4
6	B834 2568	Transport Roller - Driven	2
7	B511 3751	Guide Plate Release Stay - Upper	1
8	5447 2681	Snap Ring	1
9	AA08 2070	Bushing - 8x16x7	1
10	B832 3687	Guide Plate - Upper Right	1
11	B303 1306	Decal - Instruction	1
12	AF02 1411	Drive Transport Roller - CCW	2
13	B511 3302	Guide Plate - Lower	1
14	B832 3909	Bracket Cushion	1
15	B832 3656	Transport Sensor Bracket No.4	1
16	B511 3306	Guide Plate - 7	1
17	B303 3682	Misfeed Removal Knob	1
18	B832 3883	Sensor Bracket	1
19	B832 5330	Harness - Sensor 6	1
20	AW01 0122	Paper Feed Sensor	1
21	B832 5301	Harness - Sensor Foor Way	1
22	AW01 0118	Paper Feed Sensor	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	0720 0060E	Retaining Ring - M6	
103	0742 3808	Ball Bearing - 8x16x5	
104	1105 0511	Harness Clamp - LWS-0306ZC	

9.TRANSPORT SECTION 2 (B832)

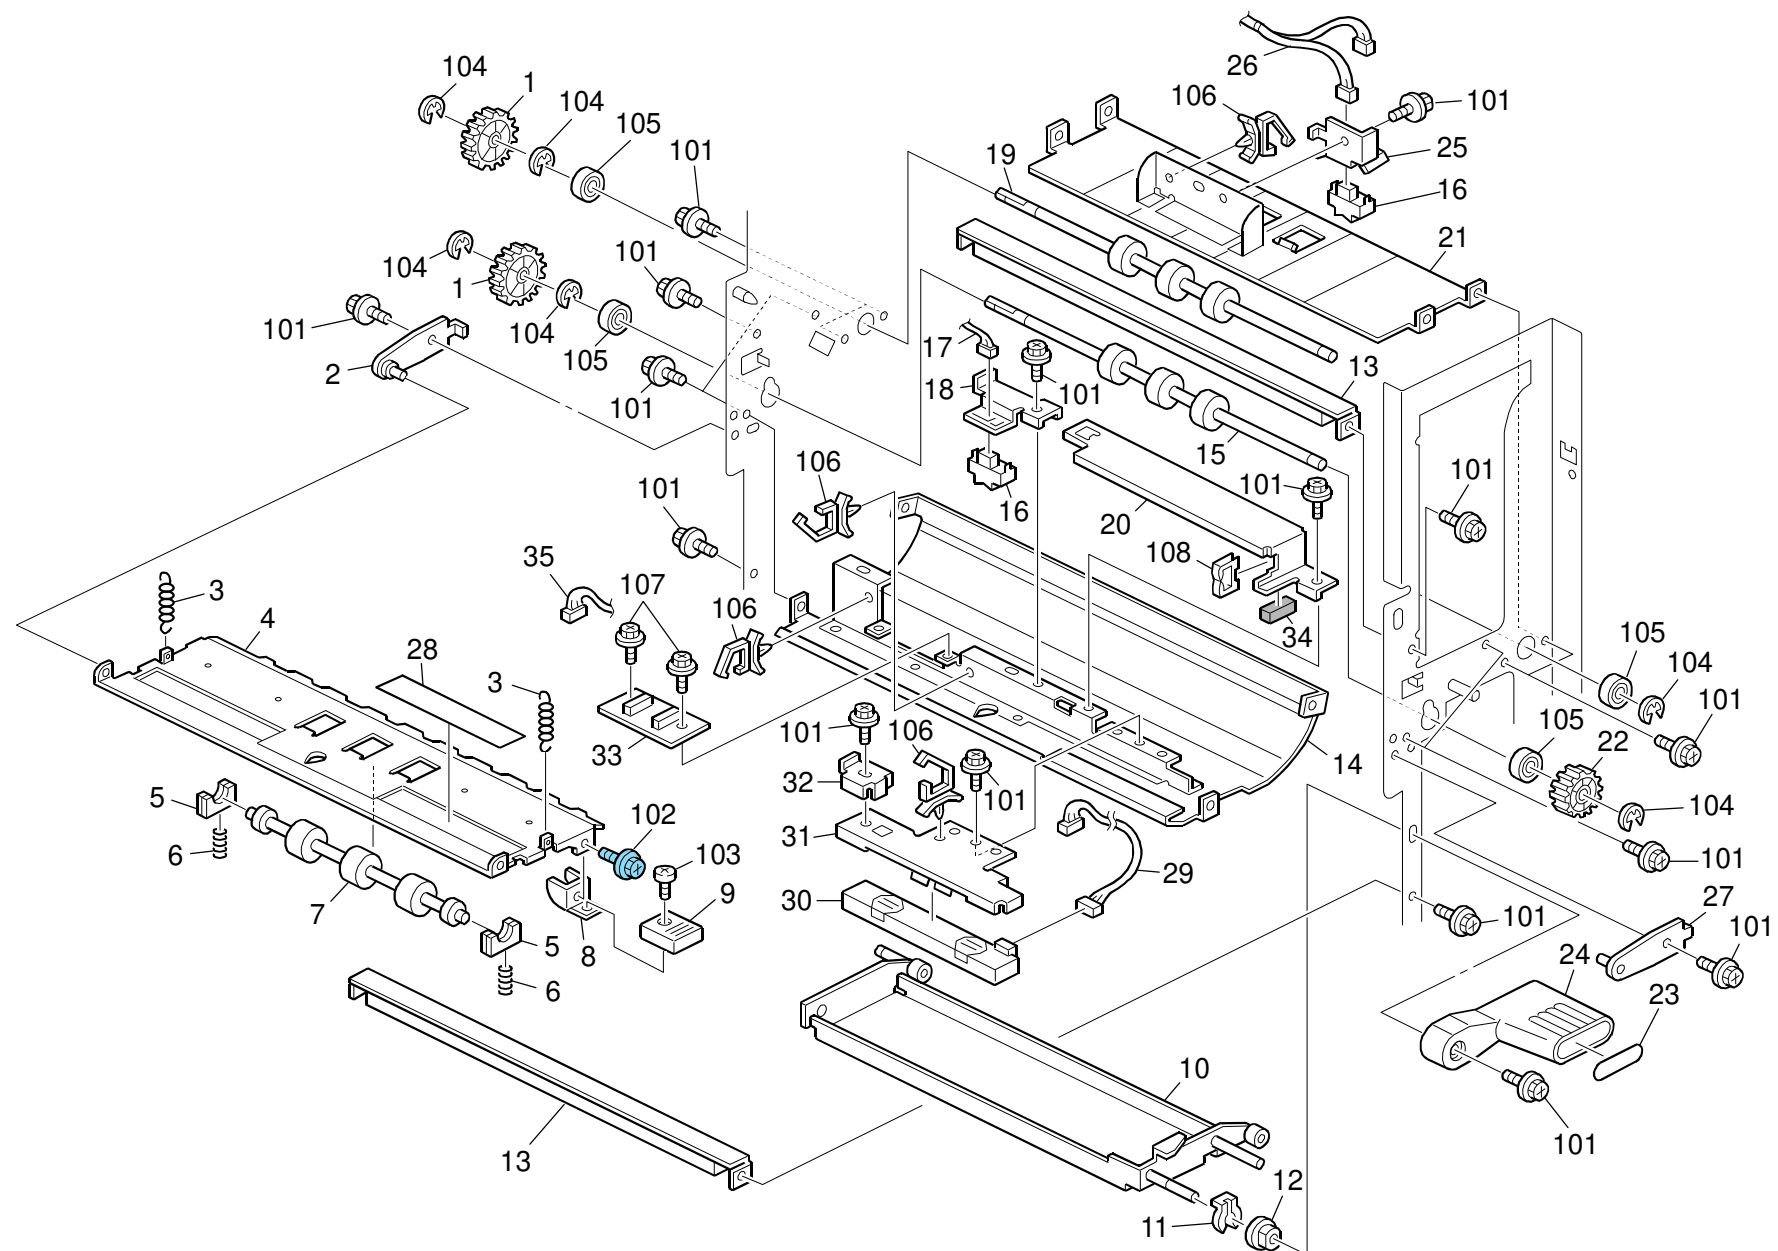 


9.TRANSPORT SECTION 2 (B832)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AB01 3654	Gear - 30Z	2
2	B832 3950	Contact Point Bracket - Rear	1
3	AA06 6680	Spring	2
4	B832 3920	Guide Plate - Lower	1
5	AA08 4059	Ball Bearing Holder	2
6	AA06 6675	Compression Spring	2
7	B834 2568	Transport Roller - Driven	1
8	B511 3637	Lever	1
9	A353 2243	Lever Knob	1
10	B511 3761	Guide Plate Release Stay - Lower	1
11	5447 2681	Snap Ring	1
12	AA08 2070	Bushing - 8x16x7	1
13	B511 3817	Stay: Misfeed Removal: Stopper	2
14	B832 3930	Exit Guide Plate - Middle Upper	1
15	AF02 1413	Drive Transport Roller - Connecting	1
16	AW01 0122	Paper Feed Sensor	1
17	B832 5318	Harness - Sensor Exit	1
18	B832 3915	Cover - Paper Feed Sensor	1
19	AF02 1412	Drive Transport Roller - CW	1
20	B832 3911	PCB Cover	1
21	B832 3688	Entrance Guide Plate - Middle Upper	1
22	AB01 4152	Gear - 32Z	1
23	B303 1307	Decal - Instruction	1
24	B303 3682	Misfeed Removal Knob	1
25	B832 3654	Transport Sensor Stay - Entrance	1
26	B832 5302	Harness - Sensor Middle	1
27	B832 3940	Contact Point Bracket	1
28	B832 3925	Sheet - Registration Sensor	1
29	B832 5340	Harness - Registration Sensor	1
30	B234 2750	Contact Image Sensor	1
31	B832 3685	Sensor Bracket	1
32	B832 3745	Registration Sensor Bracket Holder	1
33	B234 5280	PCB CRB	1
34	B832 3909	Bracket Cushion	1
35	B832 5317	Harness - Interface CRB	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw: 4x8	
102	0454 4008Q	Tapping Screw - M4x8	
103	0313 0040N	Screw: M3x4	
104	0720 0060E	Retaining Ring - M6	
105	0742 3808	Ball Bearing - 8x16x5	
106	1105 0511	Harness Clamp - LWS-0306ZC	
107	0451 3008N	Tapping Screw - M3x8	
108	1105 0358	Edge Saddle - EDS-0607M	

10.TRANSPORT SECTION 3 (B832)

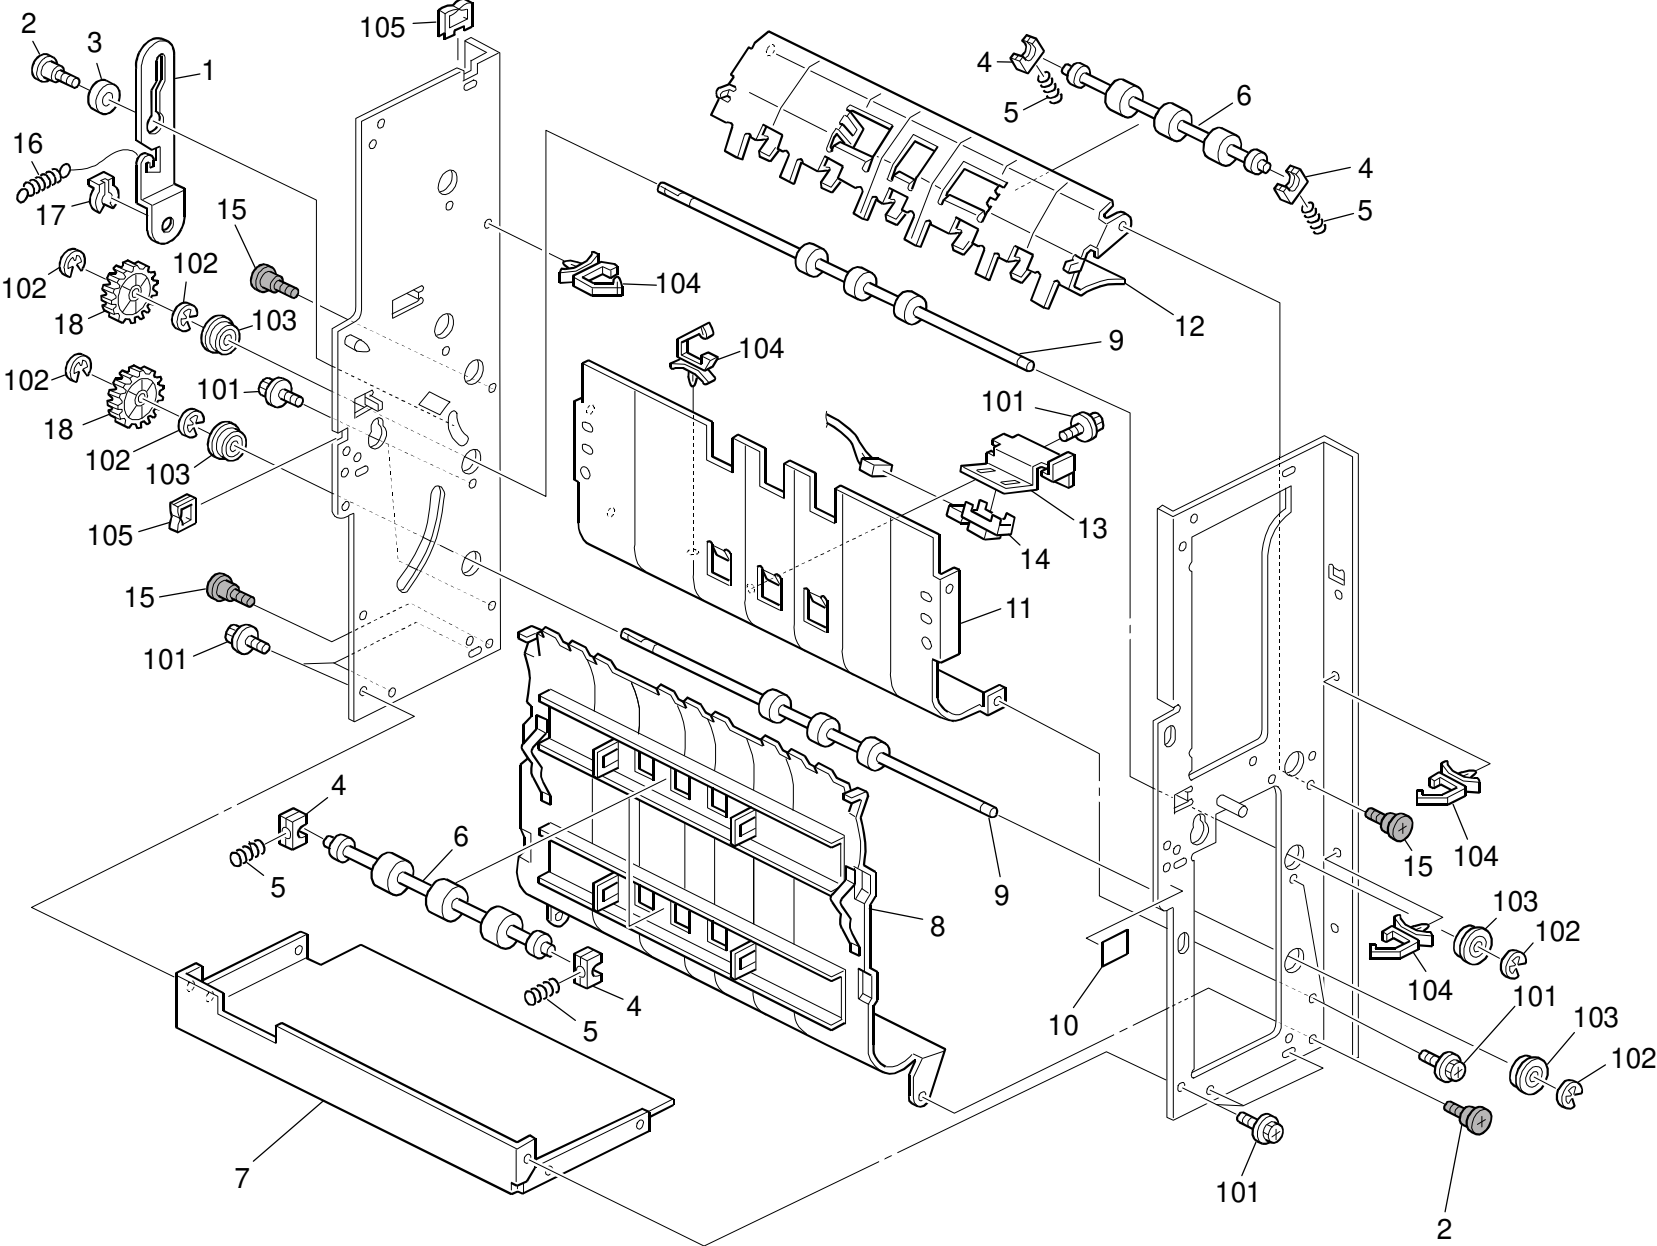 


10.TRANSPORT SECTION 3 (B832)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B511 3680	Linkage Bracket	1
2	5408 2035	Stepped Screw - M4	4
3	B303 3685	Link Spacer	4
4	AA08 4059	Ball Bearing Holder	6
5	AA06 6675	Compression Spring	6
6	B834 2568	Transport Roller - Driven	3
7	B303 3830	Upper Support Stay	1
8	B832 3694	Guide Plate - Lower Left	1
9	AF02 1412	Drive Transport Roller - CW	2
10	B832 1320	Decal - Knob (U6)	1
11	B832 3689	Guide Plate - Lower Right	1
12	B511 3621	Guide Plate - Link	1
13	B832 3655	Transport Sensor Bracket No.6	1
14	AW01 0118	Paper Feed Sensor	1
15	AA14 3810	Development Cover Screw	3
16	AA06 6670	Tension Spring	1
17	5215 2621	Snap Ring - M6	1
18	AB01 3654	Gear - 30Z	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	0720 0060E	Retaining Ring - M6	
103	0742 3808	Ball Bearing - 8x16x5	
104	1105 0511	Harness Clamp - LWS-0306ZC	
105	1105 0358	Edge Saddle - EDS-0607M	

11.DRIVE SECTION (B832)

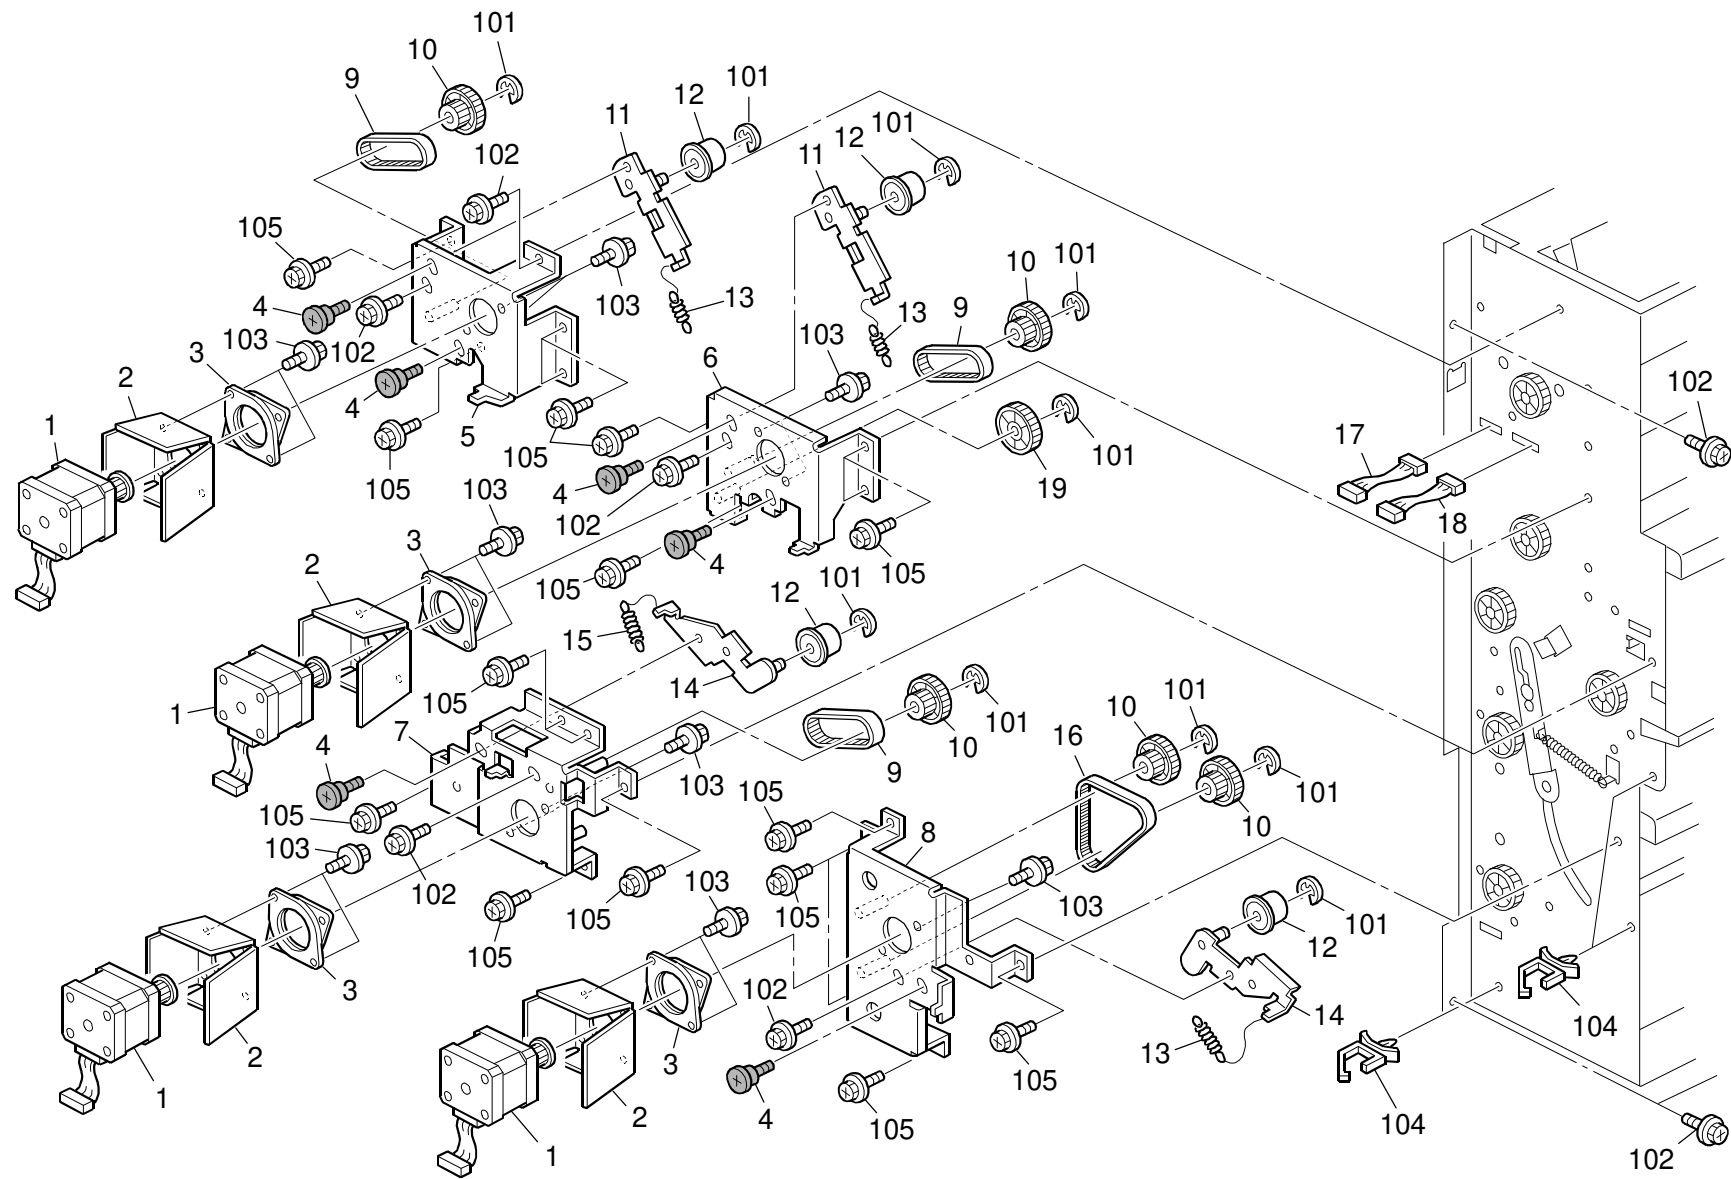 


11.DRIVE SECTION (B832)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AX04 0158	Stepper Motor DC2.64V 6.3W	3
2	B832 3510	Heat Sink	3
3	A232 4666	Cushion - Stepper Motor	3
4	AA14 3810	Development Cover Screw	4
5	B832 3585	Bracket:Drive:Upper:Peen	1
6	B832 3575	Drive Bracket - Entrance	1
7	B832 3595	Drive Bracket - Exit	1
8	B832 3565	Drive Bracket - Lower	5
9	AA04 2551	Timing Belt - S2M128	1
10	AB03 2725	Timing Pulley - 25T/30Z	1
11	B832 3775	Tension Bracket	1
12	AB03 0665	Idler Pulley - 18Z	1
13	B234 6508	Tension Spring	3
14	B832 3785	Tension Bracket - Lower	1
15	AA06 6670	Tension Spring	1
16	AA04 2552	Timing Belt - B60S2M176	2
17	B832 5306	Harness - Sensor Transport	1
18	B832 5305	Harness - Sensor Middle	1
19	AB03 2726	Gear - 30Z	4

Index No.	Part No.	Description	Q'ty Per Assembly
101	0720 0060E	Retaining Ring - M6	
102	0451 4008N	Tapping Screw:4x8	
103	0451 3006N	Tapping Screw - 3x6	
104	1105 0511	Harness Clamp - LWS-0306ZC	
105	0454 4006Q	Tapping Screw:4x6	

12.ELECTRICAL SECTION (B832)

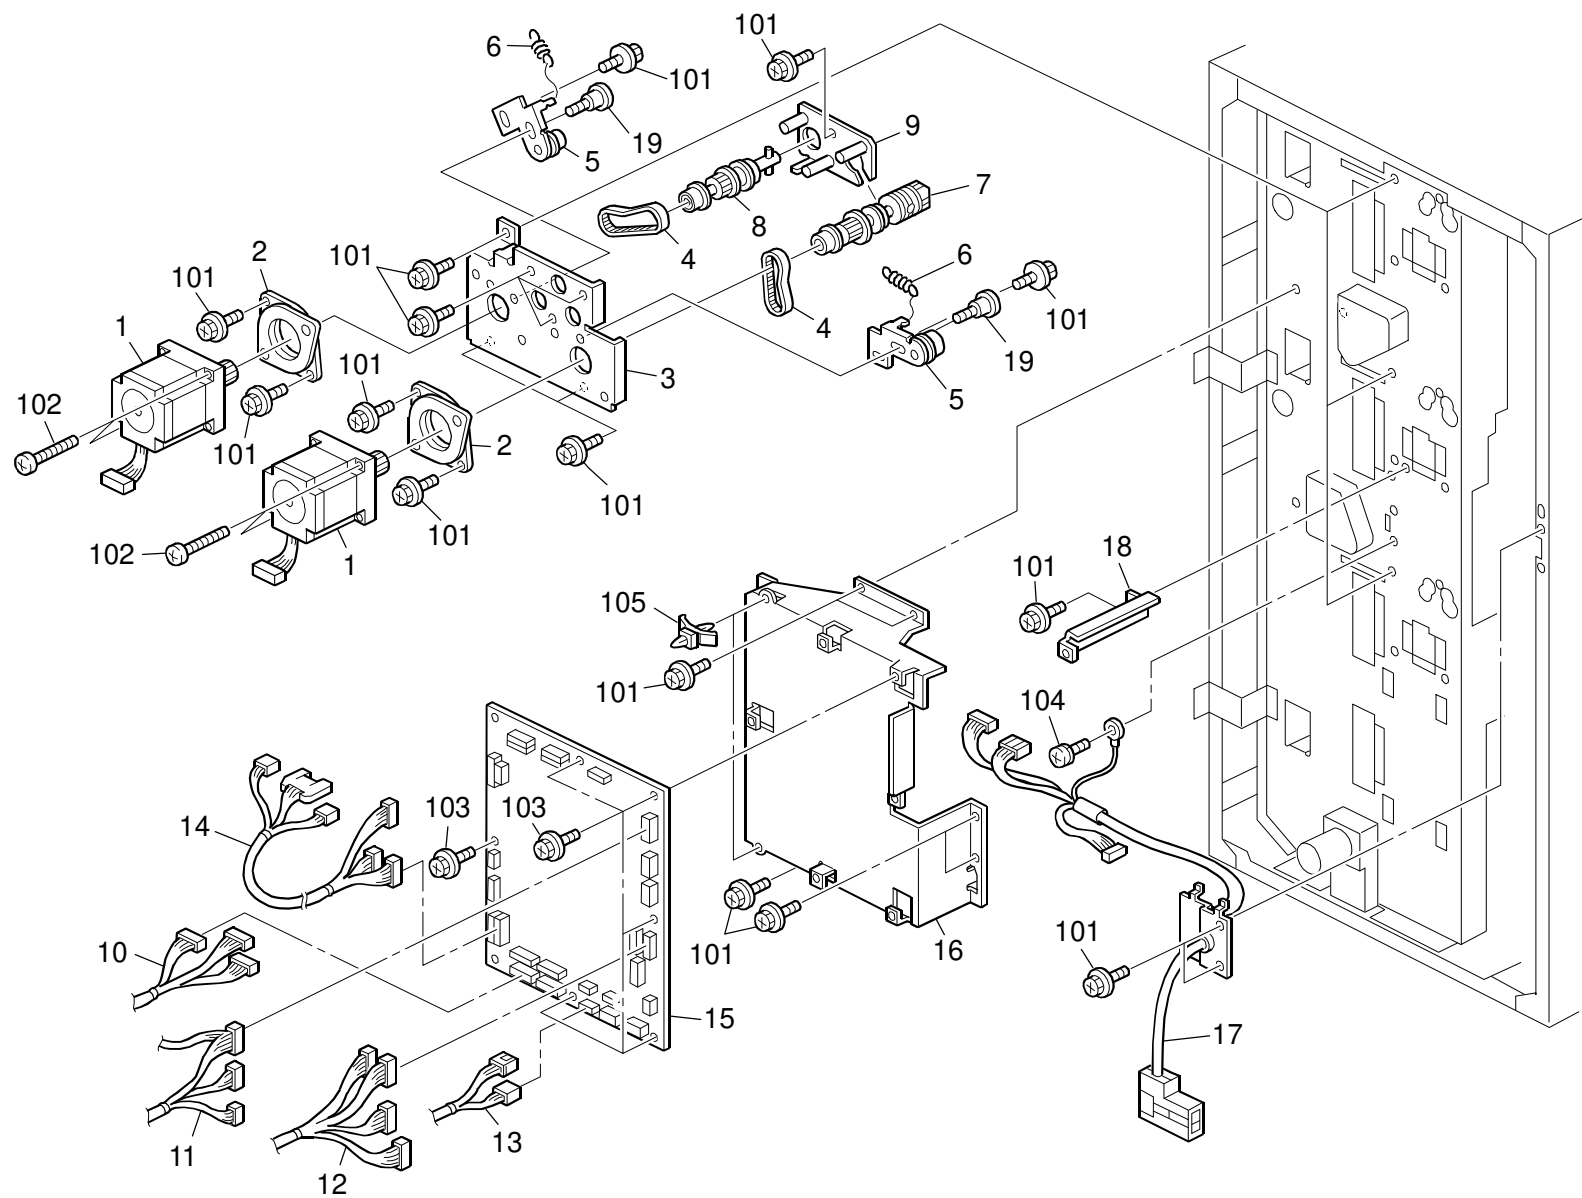 


12.ELECTRICAL SECTION (B832)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AX04 0157	Stepper Motor DC1.68V 6.7W	2
2	AA16 1122	Motor Cushion	2
3	B832 1725	Drive Bracket - Paper Feed Unit	3
4	AA04 2550	Timing Belt - S2M138	2
5	B832 1750	Tension Bracket	2
6	B234 6508	Tension Spring	2
7	B832 1730	Drive Shaft - Grip	1
8	B832 1740	Drive Shaft - Paper Feed	1
9	B832 1718	Drive Bracket	1
10	B832 5312	Harness - Paper Feed Unit	1
11	B832 5300	Harness - Stepper Motor	1
12	B832 5307	Harness - Interface	1
13	B832 5303	Harness - Safety Switch	1
14	B832 5313	Harness - Transport Sensor	1
15	B832 5110	PCB A4 Large Capacity Tray	1
16	B832 1088	PWB Bracket	1
17	B832 5190	Harness - Interface	1
18	B511 1595	Stay:Cover:Rear	2
19	AA14 3562	Screw:M4:DIA6x1.2	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	0314 0080N	Philips Pan Head Screw - M4x8	
103	0451 3008N	Tapping Screw - M3x8	
104	0950 4008Z	Philips Truss Screw - M4x8	
105	1105 0194	PCB Stud	

13.FRAME 1 (B832)

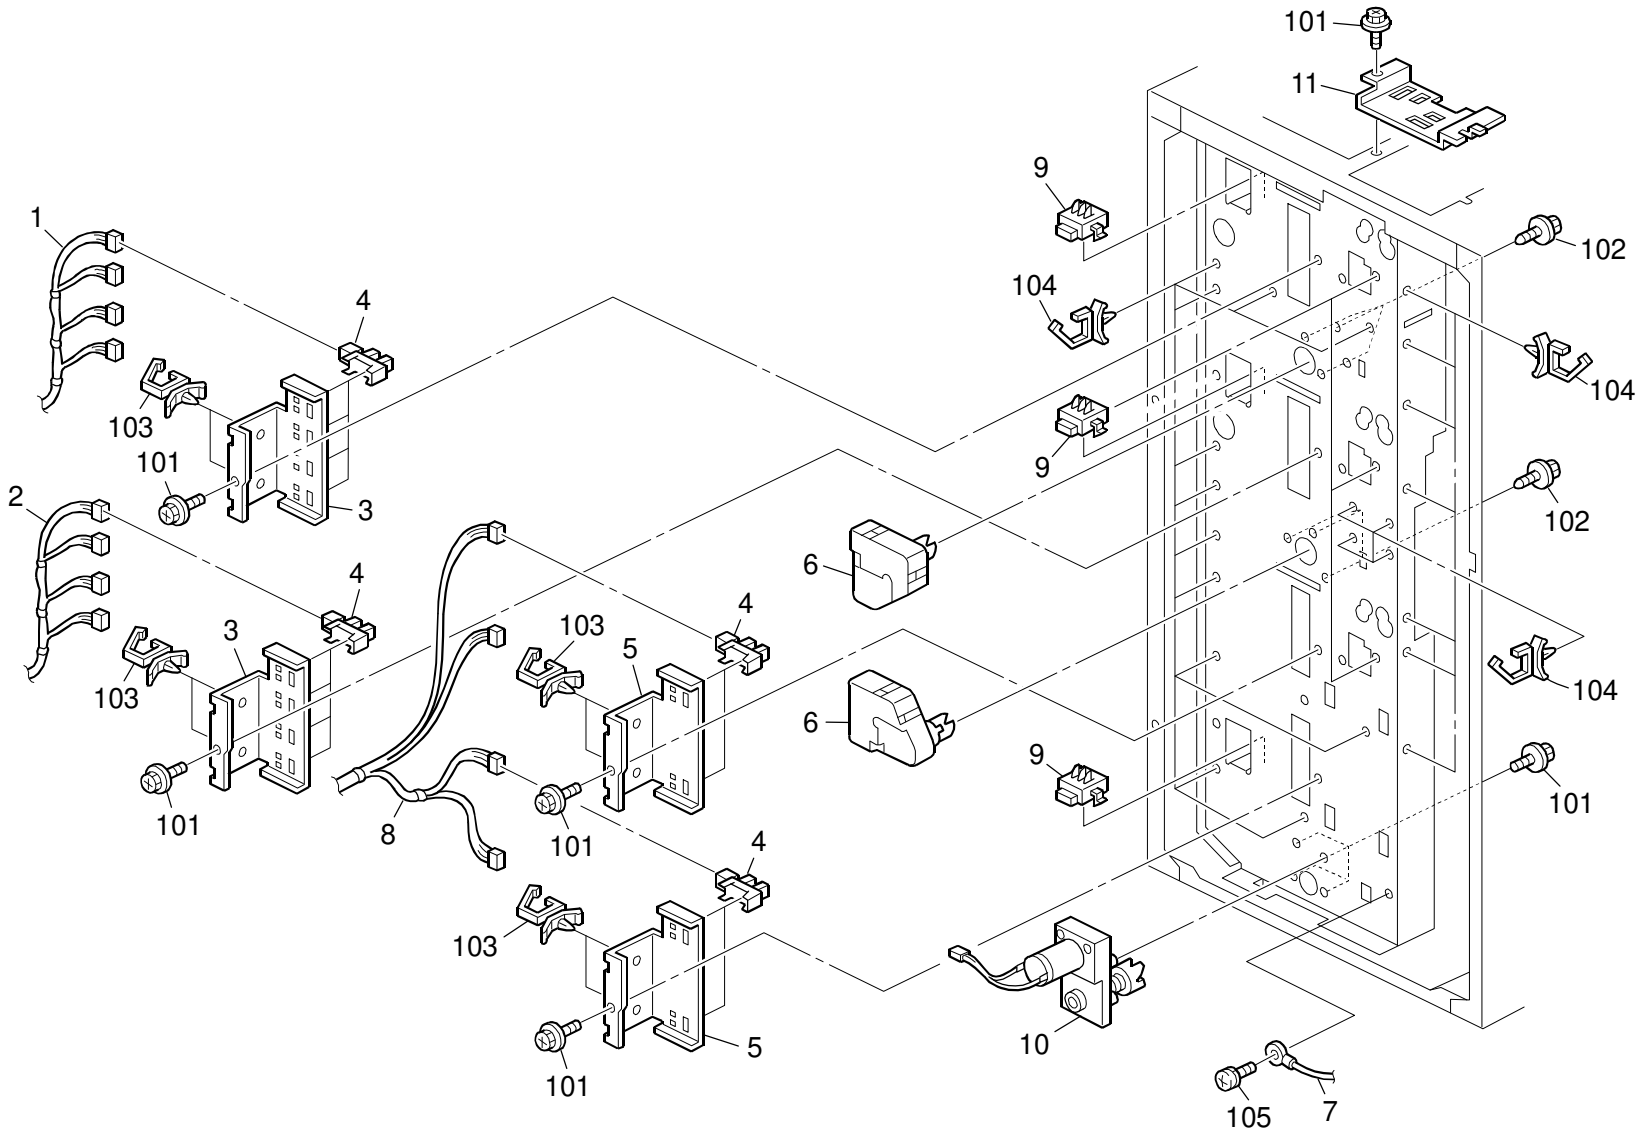 


13.FRAME 1 (B832)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B832 5308	Harness - Paper Volume Sensor 4T	1
2	B832 5309	Harness - Paper Volume Sensor 5T	1
3	B303 1181	Sensor Bracket	2
4	AW02 0145	Photointerruptor:Flat	12
5	B303 1182	Sensor Bracket	2
6	B132 6760	DC Motor 24V 19.6W	2
7	B832 5315	Harness - Earth	1
8	B832 5310	Harness - Paper Volume Sensor 6T	1
9	H515 5054	Paper Size Sensor	1
10	B832 1021	DC Motor 24V 19.6W	1
11	B832 1065	Connector Bracket	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	0451 4010N	Tapping Screw:4x10	
103	1105 0508	Harness Clamp - LWS-0711	
104	1105 0488	Harness Clamp	
105	0950 4008Z	Philips Truss Screw - M4x8	

14.FRAME 2 (B832)

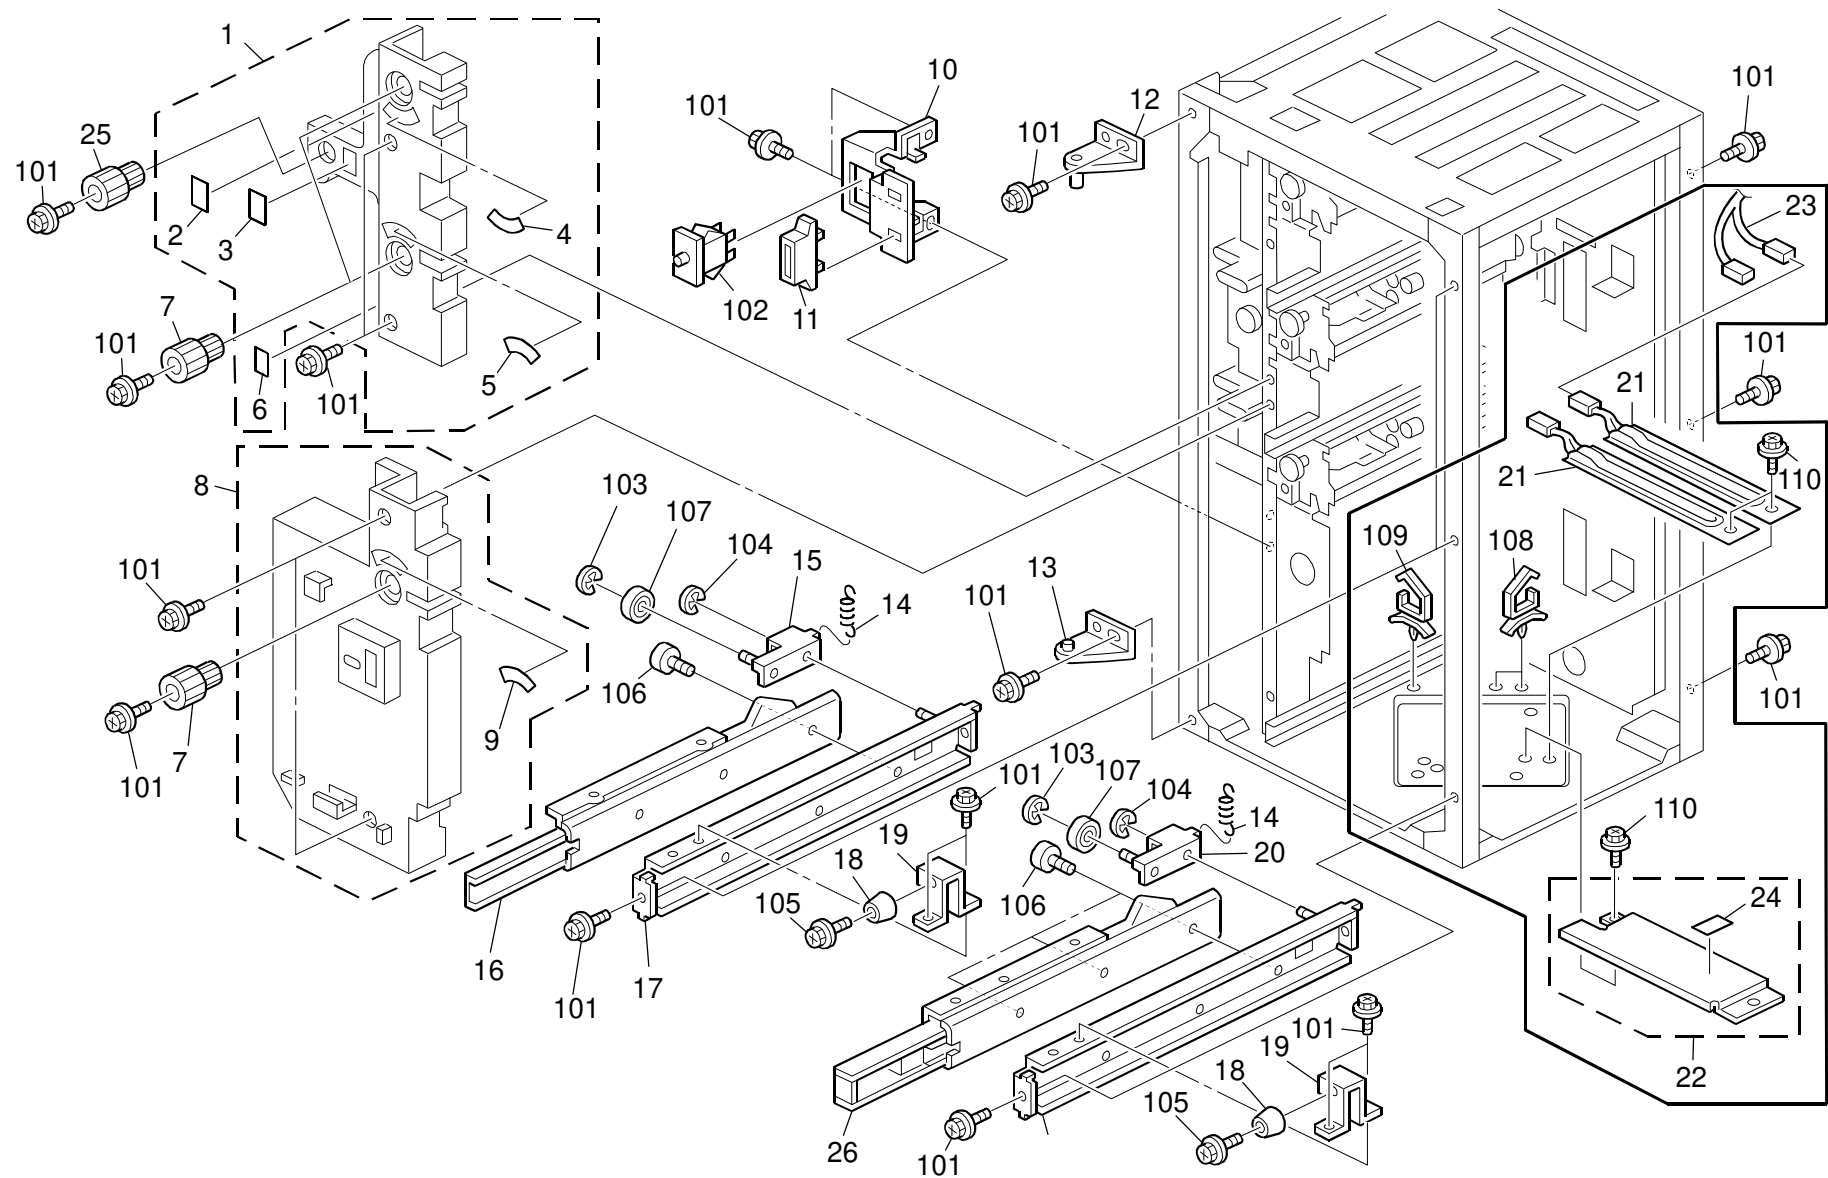 


14.FRAME 2 (B832)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B832 1461	Inner Cover - Upper	1
2	B832 1331	Decal - Misfeed Removal (U1)	2
3	B832 1333	Decal - Misfeed Removal (U7)	2
4	B832 1316	Decal - Knob (U2)	1
5	B832 1318	Decal - Knob (U4)	1
6	B832 1332	Decal - Misfeed Removal (U3)	4
7	B832 0067	Knob - Misfeed Removal	1
8	B832 1462	Inner Cover - Lower	1
9	B832 1319	Decal - Knob (U5)	1
10	B832 1171	Safety Switch Bracket	1
11	AG07 1012	Magnet Catch:Ass'y	2
12	B511 1034	Hinge:Cover:Upper:Peen	1
13	B511 1355	Lower Hinge	1
14	AA06 0814	Lock Spring	1
15	B511 1132	Arm Lock Bracket	3
16	B303 1125	Right Slide Rail	3
17	B511 1137	Support Stay	4
18	5446 2560	Cushion - Paper Tray	16
19	B511 1136	Rail Bracket	1
20	B511 1134	Arm Lock Bracket	1
21	AX40 0012	Heater - 230V/18W	1
22	B834 3870	Cover:Dehumidifier:Heater:Adhesion	1
23	B832 5316	Harness - Heater	1
24	GA00 0036	Decal - (High Temperature) Left	1
25	AG05 0067	Knob - Transport Roller	1
26	B303 1155	Right Slide Rail	1
			

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	1204 2382	Interlock Switch - Fail-CA22	
103	0720 0060E	Retaining Ring - M6	
104	0720 0040E	Retaining Ring - M4	
105	0451 4010N	Tapping Screw:4x10	
106	0453 4008N	Binding Self Tapping Screw:4x8	
107	0740 3808	Ball Bearing - 8x16x5mm	
108	1105 0310	Harness Clamp - LWS-1S	
109	1105 0292	Wire Saddle	
110	0314 0060N	Screw - M4x6	

15.FRAME 3 (B832)

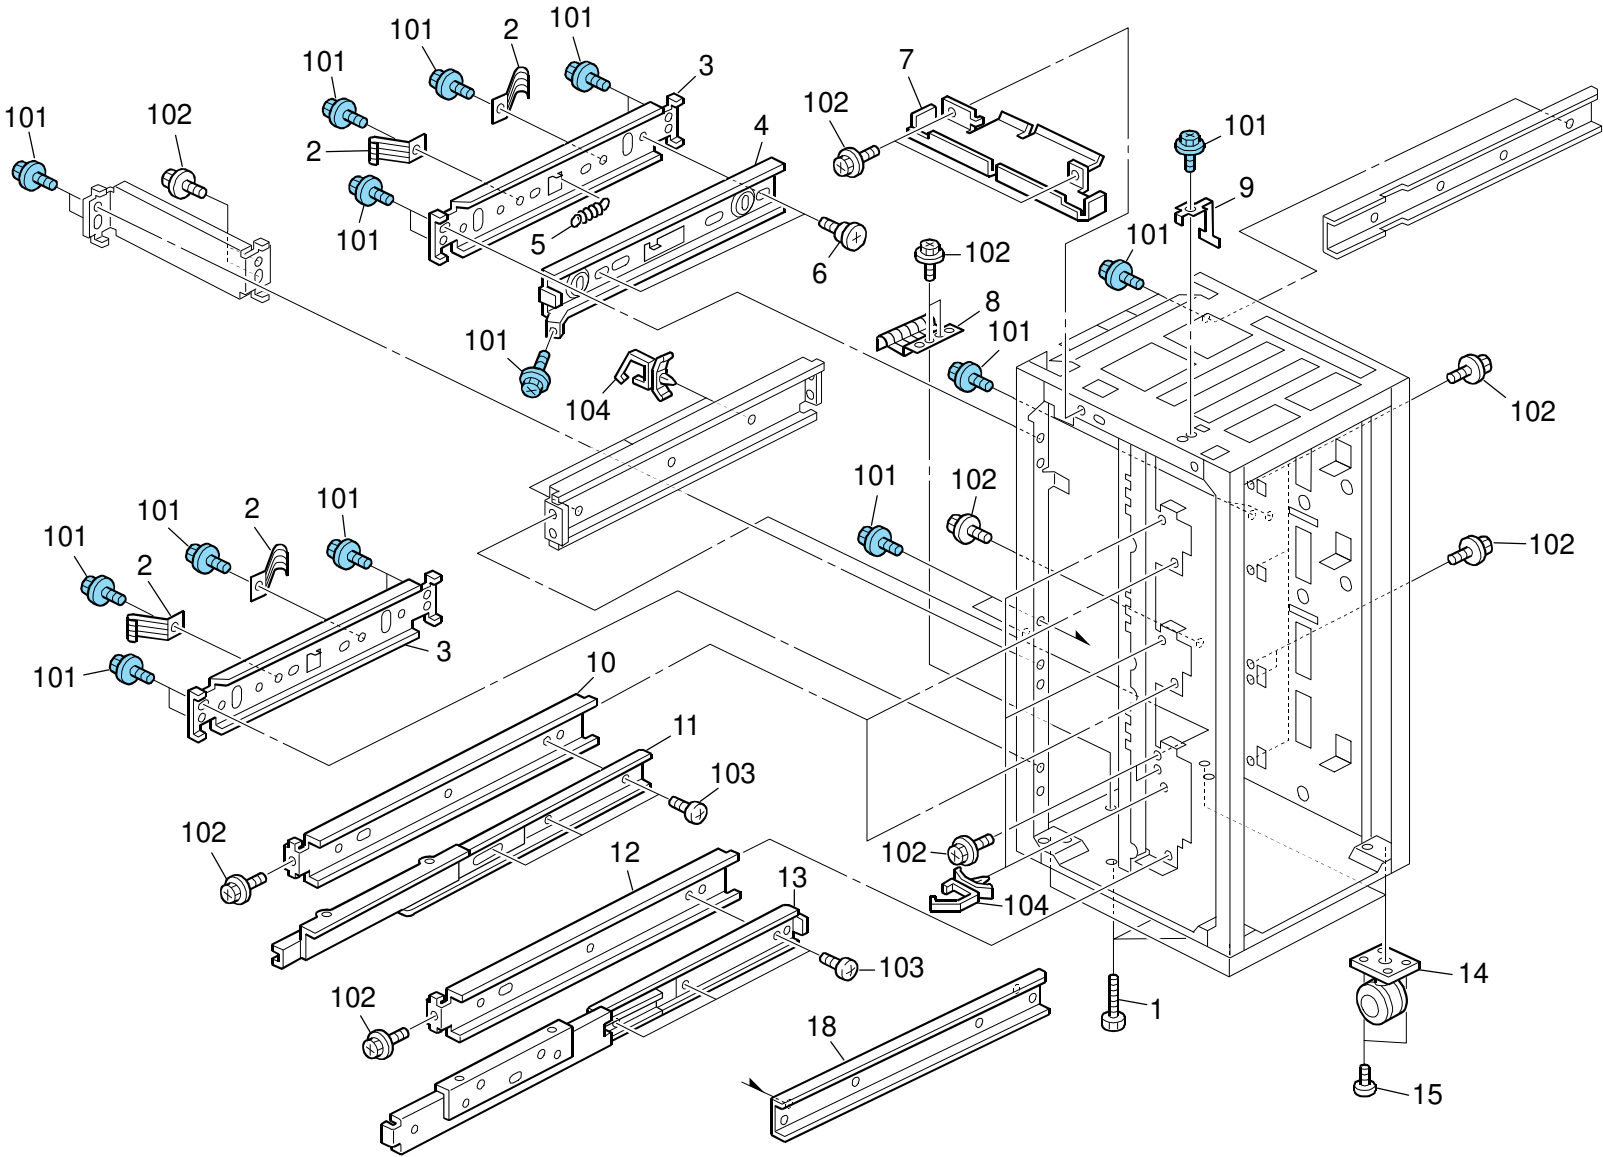 


15.FRAME 3 (B832)

 
 
 
 
 
Index No.	Part No.	Description	Q'ty Per Assembly
1	AA14 3798	Hexagonal Bolt:M12x35	3
2	B303 1116	Grounding Plate	1
3	B511 1112	Support Stay	1
4	B511 1114	Support Stay	1
5	AA06 6671	Lock Spring	1
6	AA14 0912	Screw - 8x14x2.8	1
7	B832 1373	Cover - Upper Front	1
8	B832 1183	Ground Plate - Lower	1
9	B511 2895	Stopper:End Fence:No.4	1
10	B511 1147	Support Stay	1
11	B303 1145	Left Slide Rail	1
12	B303 1147	Support Stay	1
13	B303 1165	Left Slide Rail	1
14	AH01 2014	Caster - 60KGF	4
15	A507 1096	Philips Screw - M5x6	8

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 4008Q	Tapping Screw - M4x8	
102	0451 4008N	Tapping Screw:4x8	
103	0453 4008N	Binding Self Tapping Screw:4x8	
104	1105 0488	Harness Clamp	

16.DECALS AND DOCUMENTS (B832)

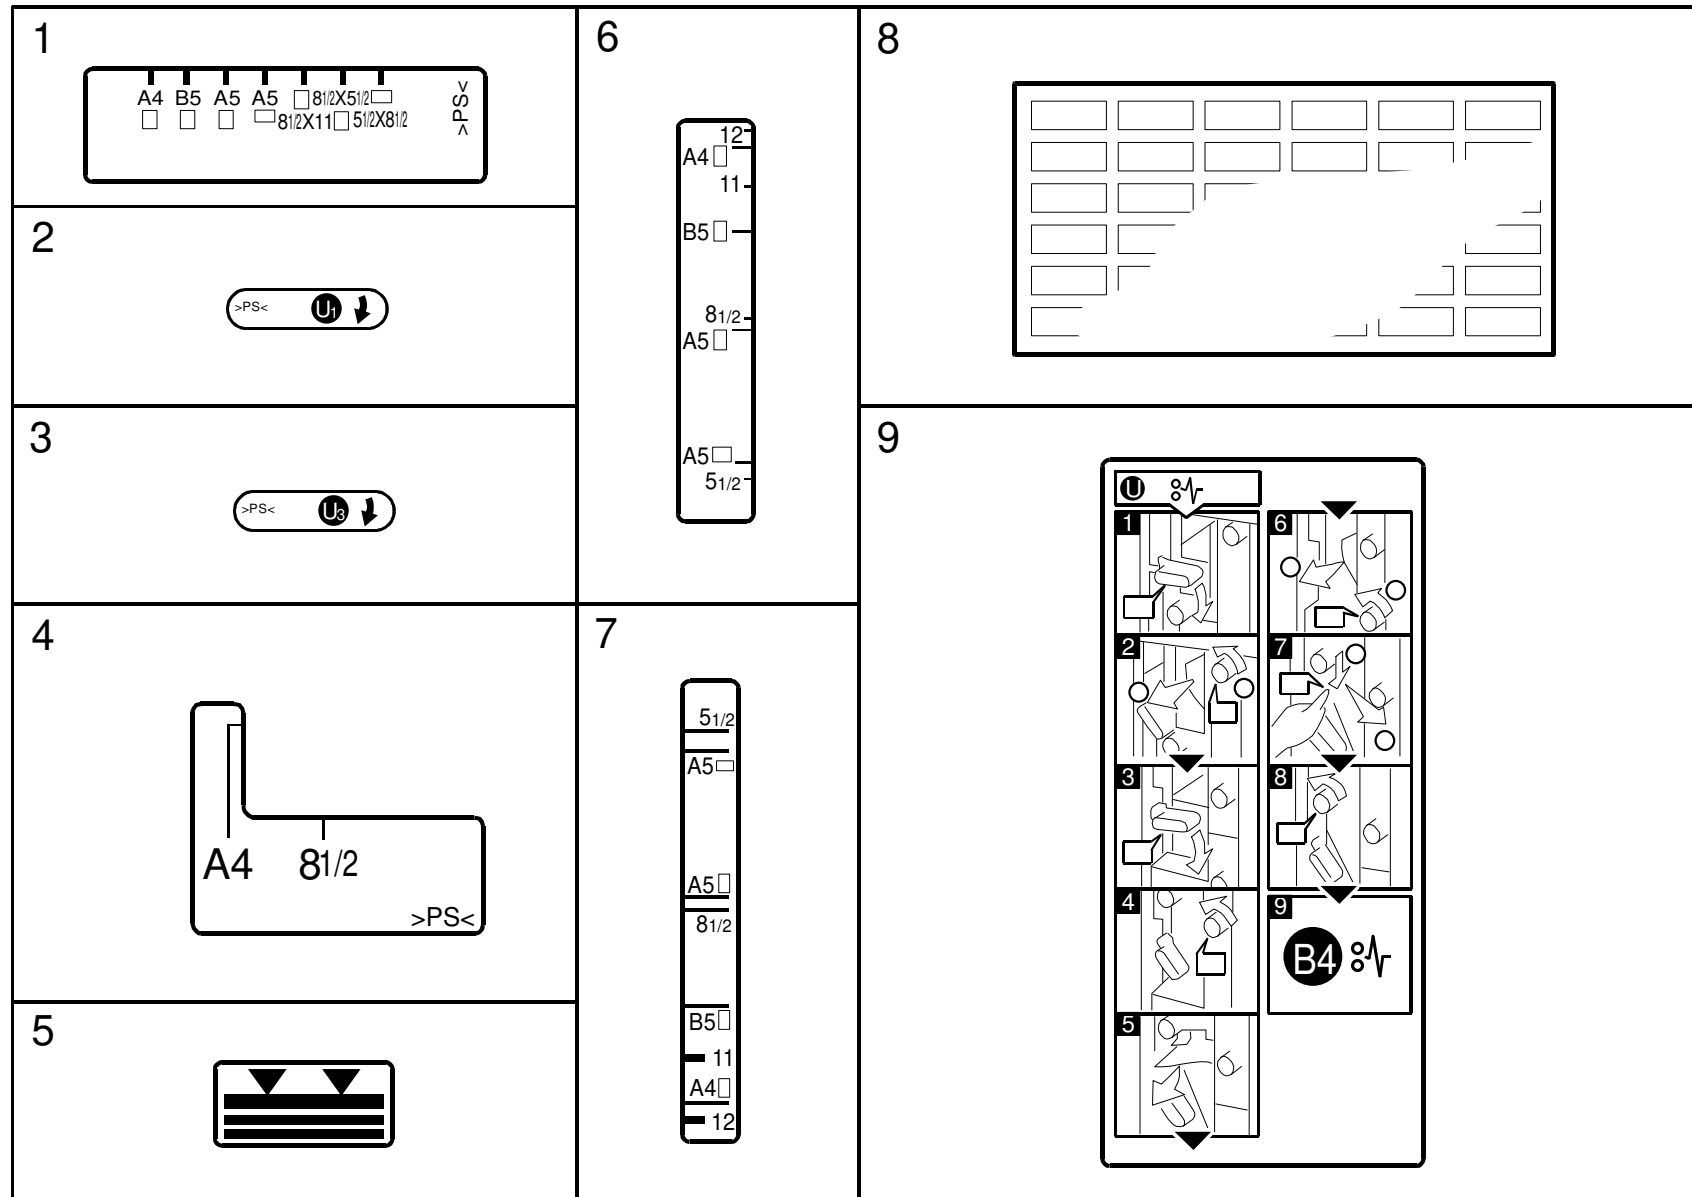

16.DECALS AND DOCUMENTS (B832)

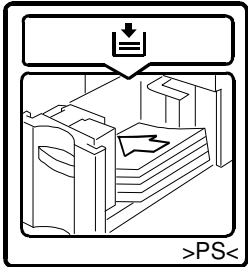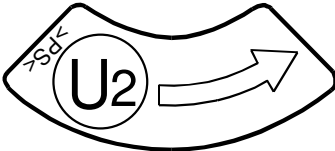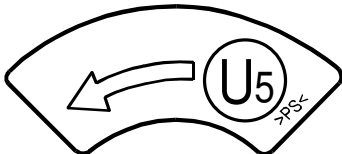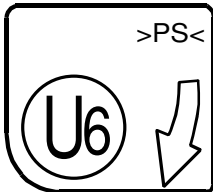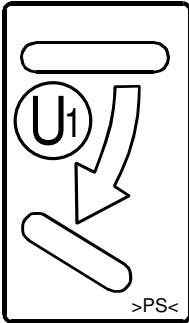10		12		13	
11	  	14		15	
		16			

16.DECALS AND DOCUMENTS (B832)

17	20
18	19 21

16.DECALS AND DOCUMENTS (B832)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B303 1303	Decal - Paper Size	
2	B303 1306	Decal - Instruction	
3	B303 1307	Decal - Instruction	
4	B511 1342	Decal - End Fence Size Indication 6	
5	B511 2674	Decal:Display:Paper Volume	
6	B832 1304	Decal - Side Fence Front	
7	B832 1305	Decal - Side Fence Rear	
8	B832 1308	Decal - Paper Size	
9	B832 1309	Decal - Misfeed Removal	
10	B832 1311	Decal - Paper Supply (6)	
11	B832 1312	Decal - Display (4)	
11	B832 1313	Decal - Display (5)	
11	B832 1314	Decal - Display (6)	
12	B832 1316	Decal - Knob (U2)	
13	B832 1318	Decal - Knob (U4)	
14	B832 1319	Decal - Knob (U5)	
15	B832 1320	Decal - Knob (U6)	
16	B832 1331	Decal - Misfeed Removal (U1)	
17	B832 1332	Decal - Misfeed Removal (U3)	
18	B832 1333	Decal - Misfeed Removal (U7)	
19	B832 1341	Decal - End Fence Size Indication 4-5	
20	B832 1343	Decal - Paper Supply 4-5	
21	B832 1344	Decal - End Fence Tab	

Index No.	Part No.	Description	Q'ty Per Assembly

Parts Index

PM Parts Index

Section Name	Part No.	Description in Service Manual	Description in Parts Catalog	Q'ty Per Assembly	Page and Index No.
PAPER REGISTRATION 1 (B832)	AF03 1081	Paper Feed Roller:Feed:Manual Feed	Paper Feed Roller:Feed:Manual Feed	1	13 - 13
	AF03 0080	Paper Feed Roller:Pickup	Paper Feed Roller:Pickup	1	13 - 17
PAPER REGISTRATION 2 (B832)	AF03 2080	Paper Feed Roller:Separate	Paper Feed Roller:Separate	1	15 - 16

Parts Index

Part No.	Description	Page and Index No.
B832 0067	Knob - Misfeed Removal	29 - 7
B832 1021	DC Motor 24V 19.6W	27 - 10
B832 1065	Connector Bracket	27 - 11
B832 1088	PWB Bracket	25 - 16
B832 1100	Positioning Pin - Upper	3 - 4
B832 1101	Positioning Pin - Lower	3 - 3
B832 1171	Safety Switch Bracket	29 - 10
B832 1183	Ground Plate - Lower	31 - 8
B832 1304	Decal - Side Fence Front	5 - 6
B832 1304	Decal - Side Fence Front	9 - 4
B832 1304	Decal - Side Fence Front	35 - 6
B832 1305	Decal - Side Fence Rear	9 - 10
B832 1305	Decal - Side Fence Rear	35 - 7
B832 1305	Decal - Side Fence Rear	5 - 21
B832 1308	Decal - Paper Size	35 - 8
B832 1308	Decal - Paper Size	3 - 2
B832 1309	Decal - Misfeed Removal	35 - 9
B832 1309	Decal - Misfeed Removal	3 - 19
B832 1311	Decal - Paper Supply (6)	35 - 10
B832 1311	Decal - Paper Supply (6)	9 - 8
B832 1312	Decal - Display (4)	35 - 11
B832 1312	Decal - Display (4)	5 - 3
B832 1313	Decal - Display (5)	5 - 3
B832 1313	Decal - Display (5)	35 - 11
B832 1314	Decal - Display (6)	35 - 11
B832 1314	Decal - Display (6)	9 - 2
B832 1316	Decal - Knob (U2)	29 - 4
B832 1316	Decal - Knob (U2)	35 - 12
B832 1318	Decal - Knob (U4)	29 - 5
B832 1318	Decal - Knob (U4)	35 - 13
B832 1319	Decal - Knob (U5)	35 - 14
B832 1319	Decal - Knob (U5)	29 - 9
B832 1320	Decal - Knob (U6)	21 - 10
B832 1320	Decal - Knob (U6)	35 - 15
B832 1331	Decal - Misfeed Removal (U1)	35 - 16

Part No.	Description	Page and Index No.
B832 1331	Decal - Misfeed Removal (U1)	29 - 2
B832 1332	Decal - Misfeed Removal (U3)	35 - 17
B832 1332	Decal - Misfeed Removal (U3)	29 - 6
B832 1333	Decal - Misfeed Removal (U7)	29 - 3
B832 1333	Decal - Misfeed Removal (U7)	35 - 18
B832 1341	Decal - End Fence Size Indication 4-5	35 - 19
B832 1341	Decal - End Fence Size Indication 4-5	5 - 9
B832 1343	Decal - Paper Supply 4-5	5 - 27
B832 1343	Decal - Paper Supply 4-5	35 - 20
B832 1344	Decal - End Fence Tab	35 - 21
B832 1344	Decal - End Fence Tab	3 - 8
B832 1368	Cover Magnet Catch - Left	3 - 20
B832 1371	Spacer Cushion	3 - 5
B832 1372	Cover Cushion - Right	3 - 9
B832 1373	Cover - Upper Front	31 - 7
B832 1374	Cover Cushion - Front Left	3 - 6
B832 1376	Cover Cushion - Front Middle	3 - 7
B832 1380	Tray Cover (S)	5 - 1
B832 1381	Tray Cover (L)	9 - 1
B832 1461	Inner Cover - Upper	29 - 1
B832 1462	Inner Cover - Lower	29 - 8
B832 1595	Door Cover - Small	3 - 21
B832 1718	Drive Bracket	25 - 9
B832 1725	Drive Bracket - Paper Feed Unit	25 - 3
B832 1730	Drive Shaft - Grip	25 - 7
B832 1740	Drive Shaft - Paper Feed	25 - 8
B832 1750	Tension Bracket	25 - 5
B832 2500	Paper Feed Unit	13 - *
B832 2520	Guide Plate - Feed	13 - 1
B832 2535	Reverse Guide Plate	15 - 1
B832 2541	Stay	15 - 14
B832 2558	DC Solenoid 24V	15 - 12
B832 2571	Stay:Feed:Peen	13 - 10
B832 2574	Pickup Arm	13 - 20
B832 2577	Paper Feed Sensor Bracket	13 - 7

Part No.	Description	Page and Index No.
B832 2578	DC Solenoid 24V	13 - 9
B832 2585	Feed Roller Shaft	13 - 15
B832 2631	Stay	13 - 4
B832 2660	End Fence Slider	9 - 17
B832 2670	Belt Fix Bracket	11 - 7
B832 2670	Belt Fix Bracket	7 - 6
B832 2721	Guide Plate - Front	9 - 9
B832 2723	Tray Cover - Upper	9 - 6
B832 2729	Tray Cushion	7 - 13
B832 2729	Tray Cushion	3 - 16
B832 2729	Tray Cushion	11 - 20
B832 2757	Spring Plate	7 - 16
B832 2757	Spring Plate	11 - 23
B832 2787	Knob Screw:End Fence:Press Fit	9 - 14
B832 2787	Knob Screw:End Fence:Press Fit	5 - 14
B832 2821	Guide Plate - Front	5 - 23
B832 2823	Upper Cover - Duplex Tray	5 - 8
B832 2871	No.1,2 Side Fence - Front (NA)	5 - 5
B832 2877	Knob Screw:Tray:Guide:Green	9 - 23
B832 2877	Knob Screw:Tray:Guide:Green	5 - 4
B832 2898	No.1,2 Side Fence - Rear (NA)	5 - 20
B832 3510	Heat Sink	23 - 2
B832 3565	Drive Bracket - Lower	23 - 8
B832 3575	Drive Bracket - Entrance	23 - 6
B832 3585	Bracket:Drive:Upper:Peen	23 - 5
B832 3595	Drive Bracket - Exit	23 - 7
B832 3615	Guide Plate - Upper	17 - 3
B832 3654	Transport Sensor Stay - Entrance	19 - 25
B832 3655	Transport Sensor Bracket No.6	21 - 13
B832 3656	Transport Sensor Bracket No.4	17 - 15
B832 3685	Sensor Bracket	19 - 31
B832 3687	Guide Plate - Upper Right	17 - 10
B832 3688	Entrance Guide Plate - Middle Upper	19 - 21
B832 3689	Guide Plate - Lower Right	21 - 11
B832 3694	Guide Plate - Lower Left	21 - 8

Part No.	Description	Page and Index No.
B832 3745	Registration Sensor Bracket Holder	19 - 32
B832 3775	Tension Bracket	23 - 11
B832 3785	Tension Bracket - Lower	23 - 14
B832 3883	Sensor Bracket	17 - 18
B832 3909	Bracket Cushion	17 - 14
B832 3909	Bracket Cushion	19 - 34
B832 3911	PCB Cover	19 - 20
B832 3915	Cover - Paper Feed Sensor	19 - 18
B832 3920	Guide Plate - Lower	19 - 4
B832 3925	Sheet - Registration Sensor	19 - 28
B832 3930	Exit Guide Plate - Middle Upper	19 - 14
B832 3940	Contact Point Bracket	19 - 27
B832 3950	Contact Point Bracket - Rear	19 - 2
B832 5110	PCB A4 Large Capacity Tray	25 - 15
B832 5190	Harness - Interface	25 - 17
B832 5300	Harness - Stepper Motor	25 - 11
B832 5301	Harness - Sensor Floor Way	17 - 21
B832 5302	Harness - Sensor Middle	19 - 26
B832 5303	Harness - Safety Switch	25 - 13
B832 5305	Harness - Sensor Middle	23 - 18
B832 5306	Harness - Sensor Transport	23 - 17
B832 5307	Harness - Interface	25 - 12
B832 5308	Harness - Paper Volume Sensor 4T	27 - 1
B832 5309	Harness - Paper Volume Sensor 5T	27 - 2
B832 5310	Harness - Paper Volume Sensor 6T	27 - 8
B832 5311	Harness - Paper Feed Unit	13 - 2
B832 5312	Harness - Paper Feed Unit	25 - 10
B832 5313	Harness - Transport Sensor	25 - 14
B832 5315	Harness - Earth	27 - 7
B832 5316	Harness - Heater	29 - 23
B832 5317	Harness - Interface CRB	19 - 35
B832 5318	Harness - Sensor Exit	19 - 17
B832 5330	Harness - Sensor 6	17 - 19
B832 5340	Harness - Registration Sensor	19 - 29

Part No.	Description	Page and Index No.
A229 2692	Damping Insulation	15 - 2
A232 4666	Cushion - Stepper Motor	23 - 3
A267 2787	Tension Spring - Lock Lever	11 - 18
A335 4351	Guide Roller	7 - 10
A335 4351	Guide Roller	11 - 11
A353 2243	Lever Knob	19 - 9
A507 1096	Philips Screw - M5x6	31 - 15
A667 2656	Friction Pad	11 - 1
A667 2656	Friction Pad	7 - 1
B024 1365	Cap - 38x77	3 - 11
B132 1226	Holder:Stand	3 - 22
B132 4119	Spacer:Gear:Idler	13 - 18
B132 6760	DC Motor 24V 19.6W	27 - 6
B234 2750	Contact Image Sensor	19 - 30
B234 5280	PCB CRB	19 - 33
B234 6222	Reverse Drive Shaft	15 - 8
B234 6223	Driven Reverse Shaft	15 - 18
B234 6300	Torque Limiter	15 - 17
B234 6508	Tension Spring	25 - 6
B234 6508	Tension Spring	23 - 13
B247 6634	Grip - Paper Tray Cover	9 - 20
B247 6634	Grip - Paper Tray Cover	5 - 26
B303 1116	Grounding Plate	31 - 2
B303 1125	Right Slide Rail	29 - 16
B303 1145	Left Slide Rail	31 - 11
B303 1147	Support Stay	31 - 12
B303 1155	Right Slide Rail	29 - 26
B303 1165	Left Slide Rail	31 - 13
B303 1181	Sensor Bracket	27 - 3
B303 1182	Sensor Bracket	27 - 5
B303 1303	Decal - Paper Size	7 - 2
B303 1303	Decal - Paper Size	35 - 1
B303 1306	Decal - Instruction	35 - 2
B303 1306	Decal - Instruction	17 - 11
B303 1307	Decal - Instruction	35 - 3

Part No.	Description	Page and Index No.
B303 1307	Decal - Instruction	19 - 23
B303 2556	Reverse Pressure Lever	15 - 9
B303 2645	Noise Absorber Seal - 16.5x4.2x3	9 - 7
B303 2645	Noise Absorber Seal - 16.5x4.2x3	5 - 24
B303 2723	Grounding Plate	9 - 19
B303 2723	Grounding Plate	7 - 20
B303 2734	Paper Stopper	11 - 6
B303 2748	Actuator Cover	7 - 19
B303 2748	Actuator Cover	11 - 2
B303 2751	Paper Lift Shaft - 2.5K	11 - 22
B303 2777	Paper Guide Mylar	5 - 7
B303 2777	Paper Guide Mylar	9 - 5
B303 2791	Oil Dumper	11 - 15
B303 2851	Paper Lift Shaft - 1K	7 - 15
B303 2871	Side Fence:Front:No.1,2:Ass'y (EU)	5 - 5
B303 2888	Paper Size Lever	5 - 18
B303 2898	Spring Plate	5 - 17
B303 3682	Misfeed Removal Knob	19 - 24
B303 3682	Misfeed Removal Knob	17 - 17
B303 3685	Link Spacer	21 - 3
B303 3830	Upper Support Stay	21 - 7
B511 1034	Hinge:Cover:Upper:Peen	29 - 12
B511 1112	Support Stay	31 - 3
B511 1114	Support Stay	31 - 4
B511 1132	Arm Lock Bracket	29 - 15
B511 1134	Arm Lock Bracket	29 - 20
B511 1136	Rail Bracket	29 - 19
B511 1137	Support Stay	29 - 17
B511 1147	Support Stay	31 - 10
B511 1342	Decal - End Fence Size Indication 6	35 - 4
B511 1342	Decal - End Fence Size Indication 6	9 - 22
B511 1355	Lower Hinge	29 - 13
B511 1360	Cover:Left	3 - 18
B511 1370	Cover:Upper	3 - 10
B511 1378	Cover:Cover:Upper	3 - 12

Part No.	Description	Page and Index No.
B511 1379	Cover - Rear	3 - 13
B511 1385	Cover:Right	3 - 15
B511 1386	Cover:Right:Key Counter	3 - 14
B511 1595	Stay:Cover:Rear	25 - 18
B511 2438	Bracket:Paper Tray:Rear	11 - 4
B511 2438	Bracket:Paper Tray:Rear	7 - 4
B511 2439	Bracket:Paper Tray:Front	11 - 3
B511 2439	Bracket:Paper Tray:Front	7 - 3
B511 2660	Slider:End Fence	5 - 11
B511 2674	Decal:Display:Paper Volume	35 - 5
B511 2674	Decal:Display:Paper Volume	9 - 12
B511 2674	Decal:Display:Paper Volume	5 - 22
B511 2677	Sensor Bracket	13 - 5
B511 2727	Sensor Bracket	9 - 13
B511 2728	Side Fence Stay - Front	11 - 19
B511 2728	Side Fence Stay - Front	7 - 12
B511 2729	Side Fence Stay - Rear	7 - 14
B511 2729	Side Fence Stay - Rear	11 - 21
B511 2736	Side Plate Bracket	11 - 16
B511 2737	Weight Plate	7 - 5
B511 2737	Weight Plate	11 - 5
B511 2742	Bracket	11 - 8
B511 2742	Bracket	7 - 7
B511 2747	Paper Actuator	11 - 24
B511 2747	Paper Actuator	7 - 18
B511 2752	Bracket	7 - 17
B511 2752	Bracket	11 - 25
B511 2761	Tightener Bracket	11 - 17
B511 2769	Side Fence:Front:No.3:Ass'y	9 - 3
B511 2774	Side Fence:Rear:No.3:Ass'y	9 - 11
B511 2783	Guide Fence Bracket	9 - 18
B511 2783	Guide Fence Bracket	5 - 10
B511 2785	End Fence:Tab	3 - 1
B511 2788	Silicone Tube:End Fence	5 - 13
B511 2788	Silicone Tube:End Fence	9 - 15

Part No.	Description	Page and Index No.
B511 2793	Oil Damper Bracket	11 - 14
B511 2852	End Fence:Front:1K	5 - 25
B511 2857	End Fence:Front:2.5K	9 - 21
B511 2875	Side Fence:Rear:No.1,2:Ass'y (EU)	5 - 20
B511 2886	Sensor Bracket	5 - 16
B511 2895	Stopper:End Fence:No.4	5 - 2
B511 2895	Stopper:End Fence:No.4	31 - 9
B511 2896	Stopper:End Fence:No.5	5 - 2
B511 2897	Paper Size Actuator	5 - 19
B511 3302	Guide Plate - Lower	17 - 13
B511 3306	Guide Plate - 7	17 - 16
B511 3621	Guide Plate - Link	21 - 12
B511 3637	Lever	19 - 8
B511 3680	Linkage Bracket	21 - 1
B511 3751	Guide Plate Release Stay - Upper	17 - 7
B511 3761	Guide Plate Release Stay - Lower	19 - 10
B511 3817	Stay:Misfeed Removal:Stopper	19 - 13
B833 2565	Compression Spring	15 - 4
B833 2567	Tension Spring	15 - 6
B834 2568	Transport Roller - Driven	17 - 6
B834 2568	Transport Roller - Driven	15 - 5
B834 2568	Transport Roller - Driven	21 - 6
B834 2568	Transport Roller - Driven	19 - 7
B834 3870	Cover:Dehumidifier:Heater:Adhesion	29 - 22
H515 5054	Paper Size Sensor	27 - 9

Part No.	Description	Page and Index No.
AA04 2550	Timing Belt - S2M138	25 - 4
AA04 2551	Timing Belt - S2M128	23 - 9
AA04 2552	Timing Belt - B60S2M176	23 - 16
AA04 3909	Timing Belt - B100S5M780	11 - 9
AA04 3910	Timing Belt - B100S5M435	7 - 8
AA06 0575	Release Spring	15 - 13
AA06 0814	Lock Spring	29 - 14
AA06 3204	Compression Spring	13 - 21
AA06 6670	Tension Spring	23 - 15
AA06 6670	Tension Spring	21 - 16
AA06 6671	Lock Spring	31 - 5
AA06 6675	Compression Spring	19 - 6
AA06 6675	Compression Spring	21 - 5
AA06 6675	Compression Spring	17 - 4
AA06 6677	Tension Spring	13 - 19
AA06 6680	Spring	19 - 3
AA08 2070	Bushing - 8x16x7	17 - 9
AA08 2070	Bushing - 8x16x7	19 - 12
AA08 2096	Bushing - 8x12x7	7 - 11
AA08 2096	Bushing - 8x12x7	11 - 13
AA08 3015	Roller Clutch	13 - 14
AA08 4059	Ball Bearing Holder	19 - 5
AA08 4059	Ball Bearing Holder	17 - 5
AA08 4059	Ball Bearing Holder	21 - 4
AA08 4059	Ball Bearing Holder	15 - 3
AA10 0014	Retaining Ring C - Separate	15 - 15
AA10 0014	Retaining Ring C - Separate	13 - 12
AA14 0912	Screw - 8x14x2.8	31 - 6
AA14 3562	Screw:M4:DIA6x1.2	5 - 15
AA14 3562	Screw:M4:DIA6x1.2	25 - 19
AA14 3798	Hexagonal Bolt:M12x35	31 - 1
AA14 3810	Development Cover Screw	23 - 4
AA14 3810	Development Cover Screw	17 - 2
AA14 3810	Development Cover Screw	21 - 15
AA14 3812	Screw - Scale	13 - 23

Part No.	Description	Page and Index No.
AA14 3857	Screw - M4x5	9 - 16
AA14 3857	Screw - M4x5	5 - 12
AA16 1122	Motor Cushion	25 - 2
AB01 1392	Drive Reverse Gear - 24Z	15 - 7
AB01 1478	Gear - 18Z	13 - 3
AB01 1591	Gear:Reverse	15 - 10
AB01 3654	Gear - 30Z	21 - 18
AB01 3654	Gear - 30Z	19 - 1
AB01 3654	Gear - 30Z	17 - 1
AB01 4140	Gear - 24Z	11 - 12
AB01 4152	Gear - 32Z	19 - 22
AB01 7724	Gear - 23Z/28Z	13 - 22
AB03 0548	Pulley - 16T	7 - 9
AB03 0548	Pulley - 16T	11 - 10
AB03 0665	Idler Pulley - 18Z	23 - 12
AB03 2725	Timing Pulley - 25T/30Z	23 - 10
AB03 2726	Gear - 30Z	23 - 19
AF02 1410	Transport Roller	13 - 11
AF02 1411	Drive Transport Roller - CCW	17 - 12
AF02 1412	Drive Transport Roller - CW	21 - 9
AF02 1412	Drive Transport Roller - CW	19 - 19
AF02 1413	Drive Transport Roller - Connecting	19 - 15
AF03 0080	Paper Feed Roller:Pickup	13 - 17
AF03 1081	Paper Feed Roller:Feed:Manual Feed	13 - 13
AF03 2080	Paper Feed Roller:Separate	15 - 16
AG05 0067	Knob - Transport Roller	29 - 25
AG07 1012	Magnet Catch:Ass'y	29 - 11
AH01 2014	Caster - 60KGF	31 - 14
AW01 0118	Paper Feed Sensor	21 - 14
AW01 0118	Paper Feed Sensor	17 - 22
AW01 0122	Paper Feed Sensor	13 - 8
AW01 0122	Paper Feed Sensor	17 - 20
AW01 0122	Paper Feed Sensor	19 - 16
AW02 0145	Photointerruptor:Flat	27 - 4
AW02 0145	Photointerruptor:Flat	13 - 6

Part No.	Description	Page and Index No.
AX04 0157	Stepper Motor DC1.68V 6.7W	25 - 1
AX04 0158	Stepper Motor DC2.64V 6.3W	23 - 1
AX40 0012	Heater - 230V/18W	29 - 21
BB01 3008	Gear - 31Z	15 - 11
GA00 0036	Decal - (High Temperature) Left	29 - 24

Part No.	Description	Page and Index No.
0313 0040N	Screw:M3x4	19 -103
0314 0040N	Pan Head Screw - M4x4	7 - 108
0314 0040N	Pan Head Screw - M4x4	11 -109
0314 0060N	Screw - M4x6	29 -110
0314 0080N	Philips Pan Head Screw - M4x8	25 -102
0354 0060N	Screw-m4x6	7 - 102
0354 0060N	Screw-M4x6	11 -104
0450 4008N	Tapping Screw - M4x8	3 - 102
0450 4010N	Tapping Screw:M4x10	5 - 103
0450 4010N	Tapping Screw:M4x10	9 - 103
0450 4010N	Tapping Screw:M4x10	11 -102
0450 4014P	Tapping Screw - 4x14	7 - 101
0450 4014P	Tapping Screw - 4x14	11 -101
0451 3006N	Tapping Screw - 3x6	23 -103
0451 3008N	Tapping Screw - M3x8	7 - 103
0451 3008N	Tapping Screw - M3x8	19 -107
0451 3008N	Tapping Screw - M3x8	25 -103
0451 3008N	Tapping Screw - M3x8	11 -105
0451 4008N	Tapping Screw:4x8	13 -101
0451 4008N	Tapping Screw:4x8	27 -101
0451 4008N	Tapping Screw:4x8	29 -101
0451 4008N	Tapping Screw:4x8	23 -102
0451 4008N	Tapping Screw:4x8	15 -101
0451 4008N	Tapping Screw:4x8	31 -102
0451 4008N	Tapping Screw:4x8	17 -101
0451 4008N	Tapping Screw:4x8	19 -101
0451 4008N	Tapping Screw:4x8	21 -101
0451 4008N	Tapping Screw:4x8	25 -101
0451 4008N	Tapping Screw:4x8	3 - 103
0451 4008N	Tapping Screw:4x8	11 -103
0451 4008N	Tapping Screw:4x8	5 - 101
0451 4008N	Tapping Screw:4x8	7 - 104
0451 4008N	Tapping Screw:4x8	9 - 101
0451 4010N	Tapping Screw:4x10	29 -105
0451 4010N	Tapping Screw:4x10	27 -102

Part No.	Description	Page and Index No.
0451 4012N	Tapping Screw:4x12	3 - 104
0453 4008N	Binding Self Tapping Screw:4x8	31 - 103
0453 4008N	Binding Self Tapping Screw:4x8	29 - 106
0454 4006Q	Tapping Screw:4x6	23 - 105
0454 4006Q	Tapping Screw:4x6	11 - 108
0454 4006Q	Tapping Screw:4x6	5 - 102
0454 4006Q	Tapping Screw:4x6	7 - 105
0454 4006Q	Tapping Screw:4x6	9 - 102
0454 4008Q	Tapping Screw - M4x8	19 - 102
0454 4008Q	Tapping Screw - M4x8	31 - 101
0454 4008Q	Tapping Screw - M4x8	11 - 107
0454 4008Q	Tapping Screw - M4x8	9 - 104
0573 0030E	Hexagon Headless Set Screw - M3x3	15 - 105
0633 0140G	Parallel Pin - 3x14	7 - 106
0633 0140G	Parallel Pin - 3x14	11 - 110
0720 0040E	Retaining Ring - M4	15 - 102
0720 0040E	Retaining Ring - M4	29 - 104
0720 0040E	Retaining Ring - M4	13 - 106
0720 0060E	Retaining Ring - M6	13 - 102
0720 0060E	Retaining Ring - M6	23 - 101
0720 0060E	Retaining Ring - M6	11 - 106
0720 0060E	Retaining Ring - M6	29 - 103
0720 0060E	Retaining Ring - M6	21 - 102
0720 0060E	Retaining Ring - M6	19 - 104
0720 0060E	Retaining Ring - M6	7 - 107
0720 0060E	Retaining Ring - M6	17 - 102
0740 3808	Ball Bearing - 8x16x5mm	29 - 107
0741 3506	Ball Bearing - 6x12x4 mm	15 - 106
0741 3706	Ball Bearing - 6x10x3	15 - 103
0741 3708	Ball Bearing - 8x12x3.5mm	13 - 107
0742 3808	Ball Bearing - 8x16x5	21 - 103
0742 3808	Ball Bearing - 8x16x5	19 - 105
0742 3808	Ball Bearing - 8x16x5	17 - 103
0742 3808	Ball Bearing - 8x16x5	13 - 105
0805 0088	Retaining Ring - M6	13 - 103

Part No.	Description	Page and Index No.
0950 4008Z	Philips Truss Screw - M4x8	27 - 105
0950 4008Z	Philips Truss Screw - M4x8	3 - 101
0950 4008Z	Philips Truss Screw - M4x8	25 - 104
1105 0194	PCB Stud	25 - 105
1105 0292	Wire Saddle	29 - 109
1105 0310	Harness Clamp - LWS-1S	29 - 108
1105 0358	Edge Saddle - EDS-0607M	21 - 105
1105 0358	Edge Saddle - EDS-0607M	19 - 108
1105 0488	Harness Clamp	27 - 104
1105 0488	Harness Clamp	31 - 104
1105 0508	Harness Clamp - LWS-0711	27 - 103
1105 0511	Harness Clamp - LWS-0306ZC	23 - 104
1105 0511	Harness Clamp - LWS-0306ZC	21 - 104
1105 0511	Harness Clamp - LWS-0306ZC	19 - 106
1105 0511	Harness Clamp - LWS-0306ZC	17 - 104
1105 0511	Harness Clamp - LWS-0306ZC	15 - 104
1105 0511	Harness Clamp - LWS-0306ZC	13 - 104
1204 2382	Interlock Switch - Fail-CA22	29 - 102

Part No.	Description	Page and Index No.
5215 2621	Snap Ring - M6	21 - 17
5408 2035	Stepped Screw - M4	21 - 2
5446 2560	Cushion - Paper Tray	29 - 18
5447 2681	Snap Ring	3 - 17
5447 2681	Snap Ring	17 - 8
5447 2681	Snap Ring	19 - 11
5447 2706	Gear - 15T	13 - 16

Part No.	Description	Page and Index No.