

LCIT RT5010 (B834)

LCIT RT5010 (B834)


PARTS CATALOG

This catalog gives the numbers and names of parts on this machine.

1.EXTERIOR (B834)	2	19.PAPER TRANSFER SECTION 1 (B834)	38
2.4TH/6TH PAPER TRAY 1 (B834)	4	20.PAPER TRANSFER SECTION 2 (B834)	40
3.4TH/6TH PAPER TRAY 2 (B834)	6	21.PAPER TRANSFER SECTION 3 (B834)	42
4.4TH/6TH PAPER TRAY 3 (B834)	8	22.PAPER TRANSFER SECTION 4 (B834)	44
5.4TH/6TH PAPER TRAY 4 (B834)	10	23.PAPER TRANSFER SECTION 5 (B834)	46
6.4TH/6TH PAPER TRAY 5 (B834)	12	24.PAPER TRANSFER SECTION 6 (B834)	48
7.4TH/6TH PAPER TRAY 6 (B834)	14	25.DRIVE SECTION (B834).....	50
8.4TH/6TH PAPER TRAY 7 (B834)	16	26.ELECTRICAL SECTION (B834)	52
9.5TH PAPER TRAY 1 (B834)	18	27.FRAME (B834)	54
10.5TH PAPER TRAY 2 (B834)	20	28.DECALS AND DOCUMENTS (B834)	56
11.5TH PAPER TRAY 3 (B834)	22	PARTS INDEX	61
12.5TH PAPER TRAY 4 (B834)	24		
13.5TH PAPER TRAY 5 (B834)	26		
14.5TH PAPER TRAY 6 (B834)	28		
15.5TH PAPER TRAY 7 (B834)	30		
16.5TH PAPER TRAY 8 (B834)	32		
17.PAPER FEED SECTION 1 (B834)	34		
18.PAPER FEED SECTION 2 (B834)	36		


March ,15 ' 2006

1.EXTERIOR (B834)

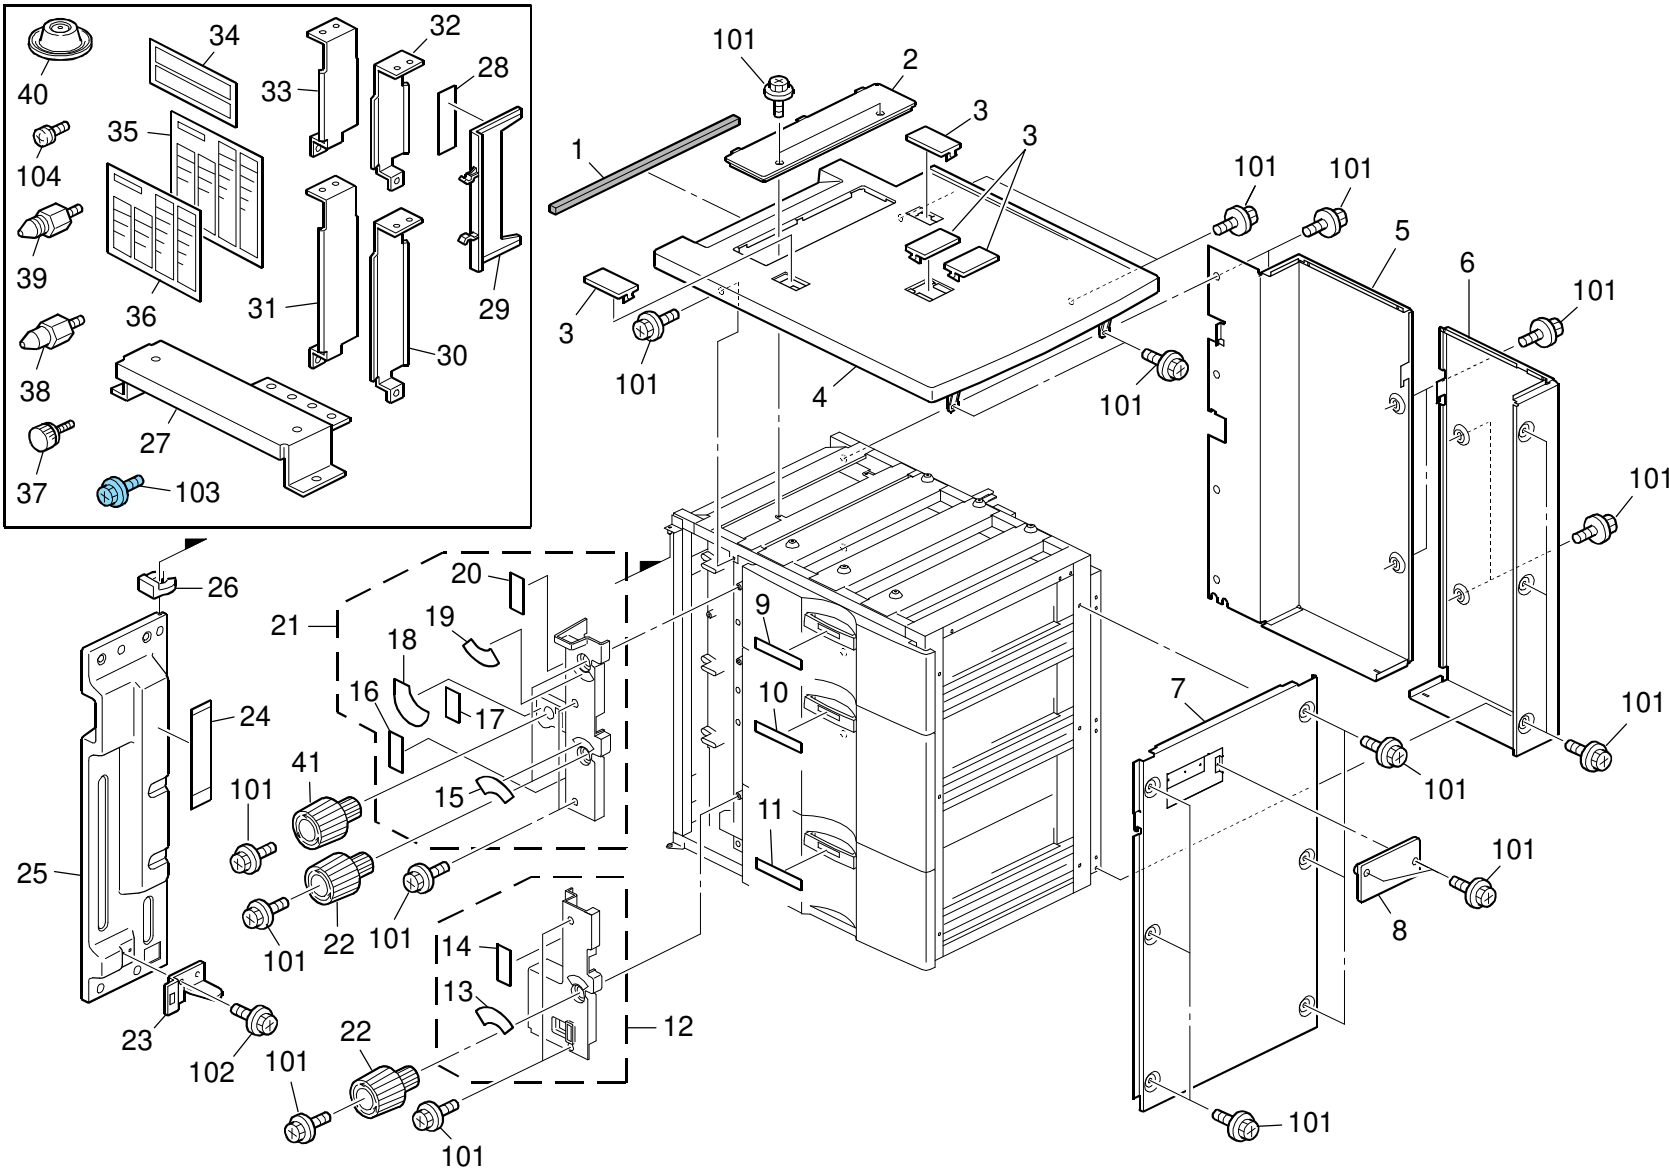



2.4TH/6TH PAPER TRAY 1 (B834)

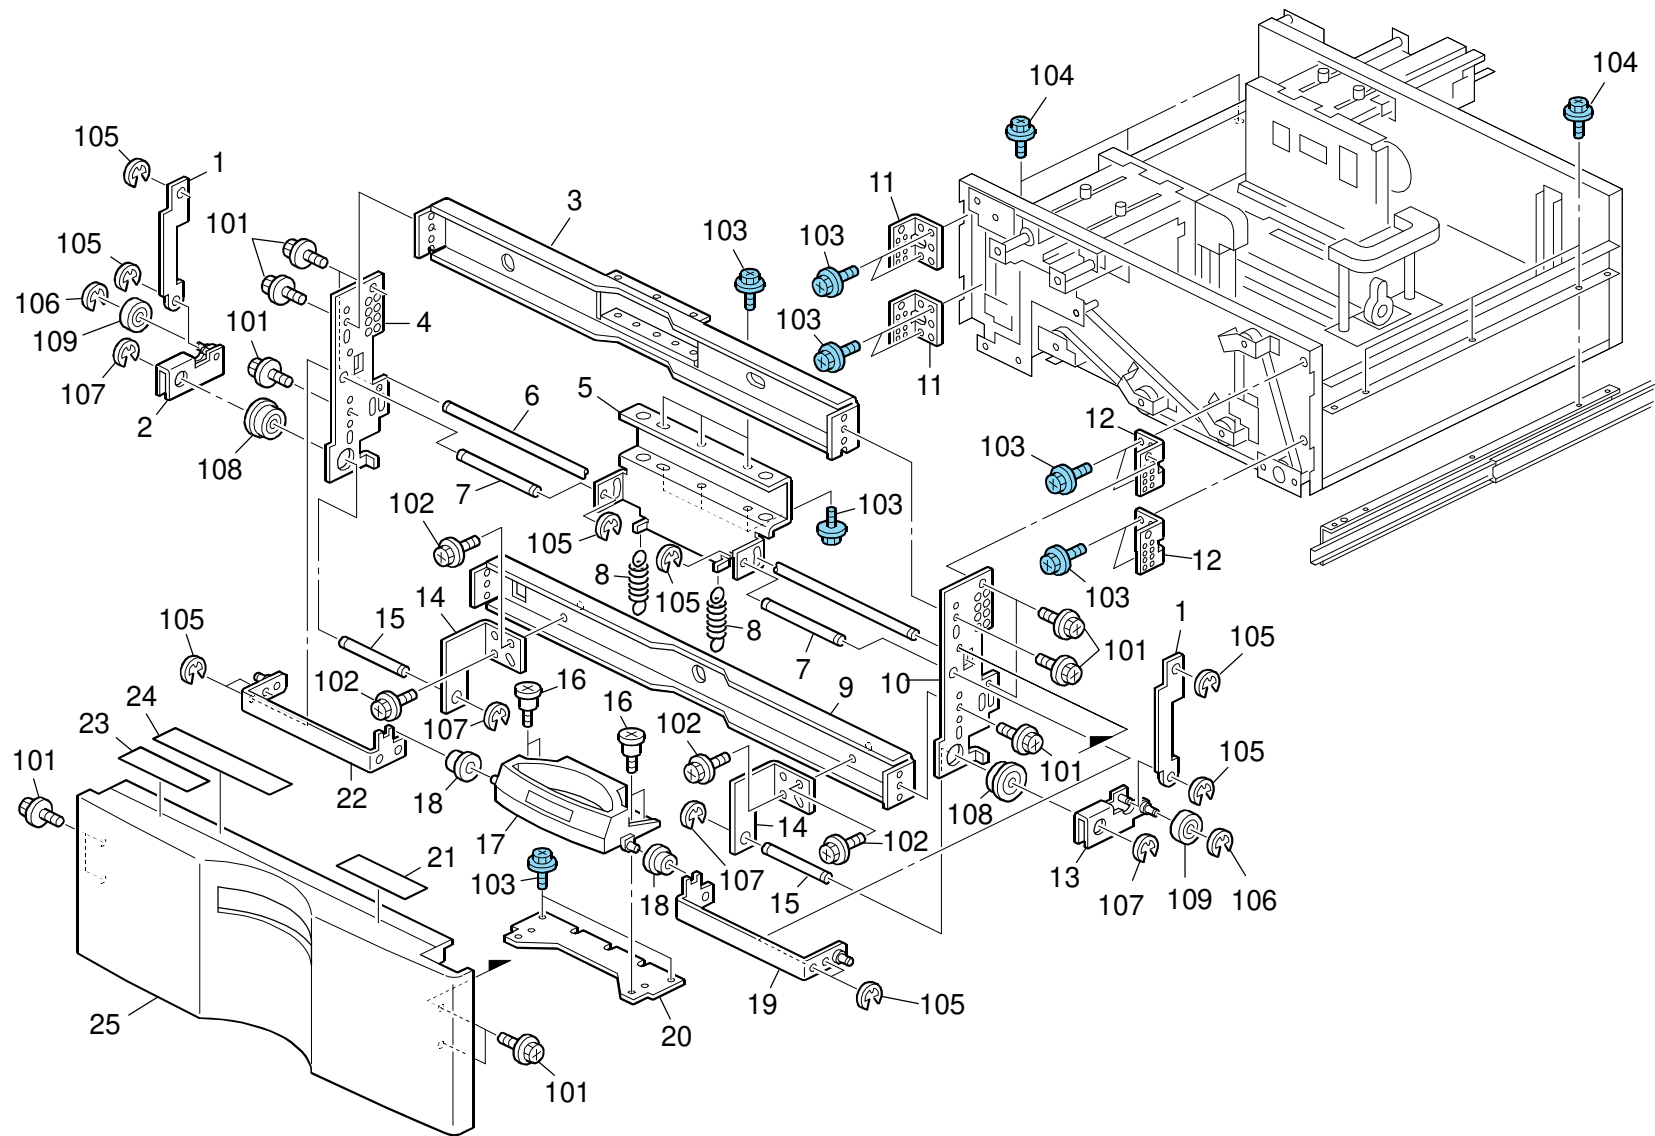


2.4TH/6TH PAPER TRAY 1 (B834)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B834 3478	Link Handle	2
2	B834 3400	Stopper Guide - Left	1
3	B834 3283	Stay:Main	1
4	B834 3480	Plate - Left	1
5	B834 3475	Bracket	1
6	B834 3438	Link Shaft	1
7	B834 3384	Contact Point Shaft	2
8	H516 3666	Spring - 19.6mm	2
9	B834 3378	Stay	1
10	B834 3481	Plate - Right	1
11	B834 4892	Registration Side Plate - Left	2
12	B834 4891	Registration Side Plate - Right	2
13	B834 3425	Stopper Guide - Right	1
14	B834 3479	Stay	2
15	B834 3389	Stopper Shaft	2
16	AA14 3718	Stepped Screw - M4	2
17	B834 1380	Paper Tray Grip	1
18	B834 3312	Collar	2
19	B834 3385	Arm - Right	1
20	B834 3377	Plate Handle	1
21	B834 1313	Decal - Paper Supply 2	1
22	B834 3379	Arm:Swivel:Left:Peen	1
23	B834 1312	Decal - Paper Supply 1	1
24	B834 1323	Decal - Side Fence Postcard	1
25	B834 1381	Paper Tray Cover - Upper	1
25	B834 1383	Paper Tray Cover - Lower	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	0451 4006N	Tapping Screw - 4x6	
103	0454 4006Q	Tapping Screw:4x6	
104	0454 4008Q	Tapping Screw - M4x8	
105	0720 0040E	Retaining Ring - M4	
106	0720 0050E	Retaining Ring - M5	
107	0720 0060E	Retaining Ring - M6	
108	0741 3808	Ball Bearing - 8x16x5mm	
109	0740 3506	Ball Bearing - 6x12x4 mm	

3.4TH/6TH PAPER TRAY 2 (B834)

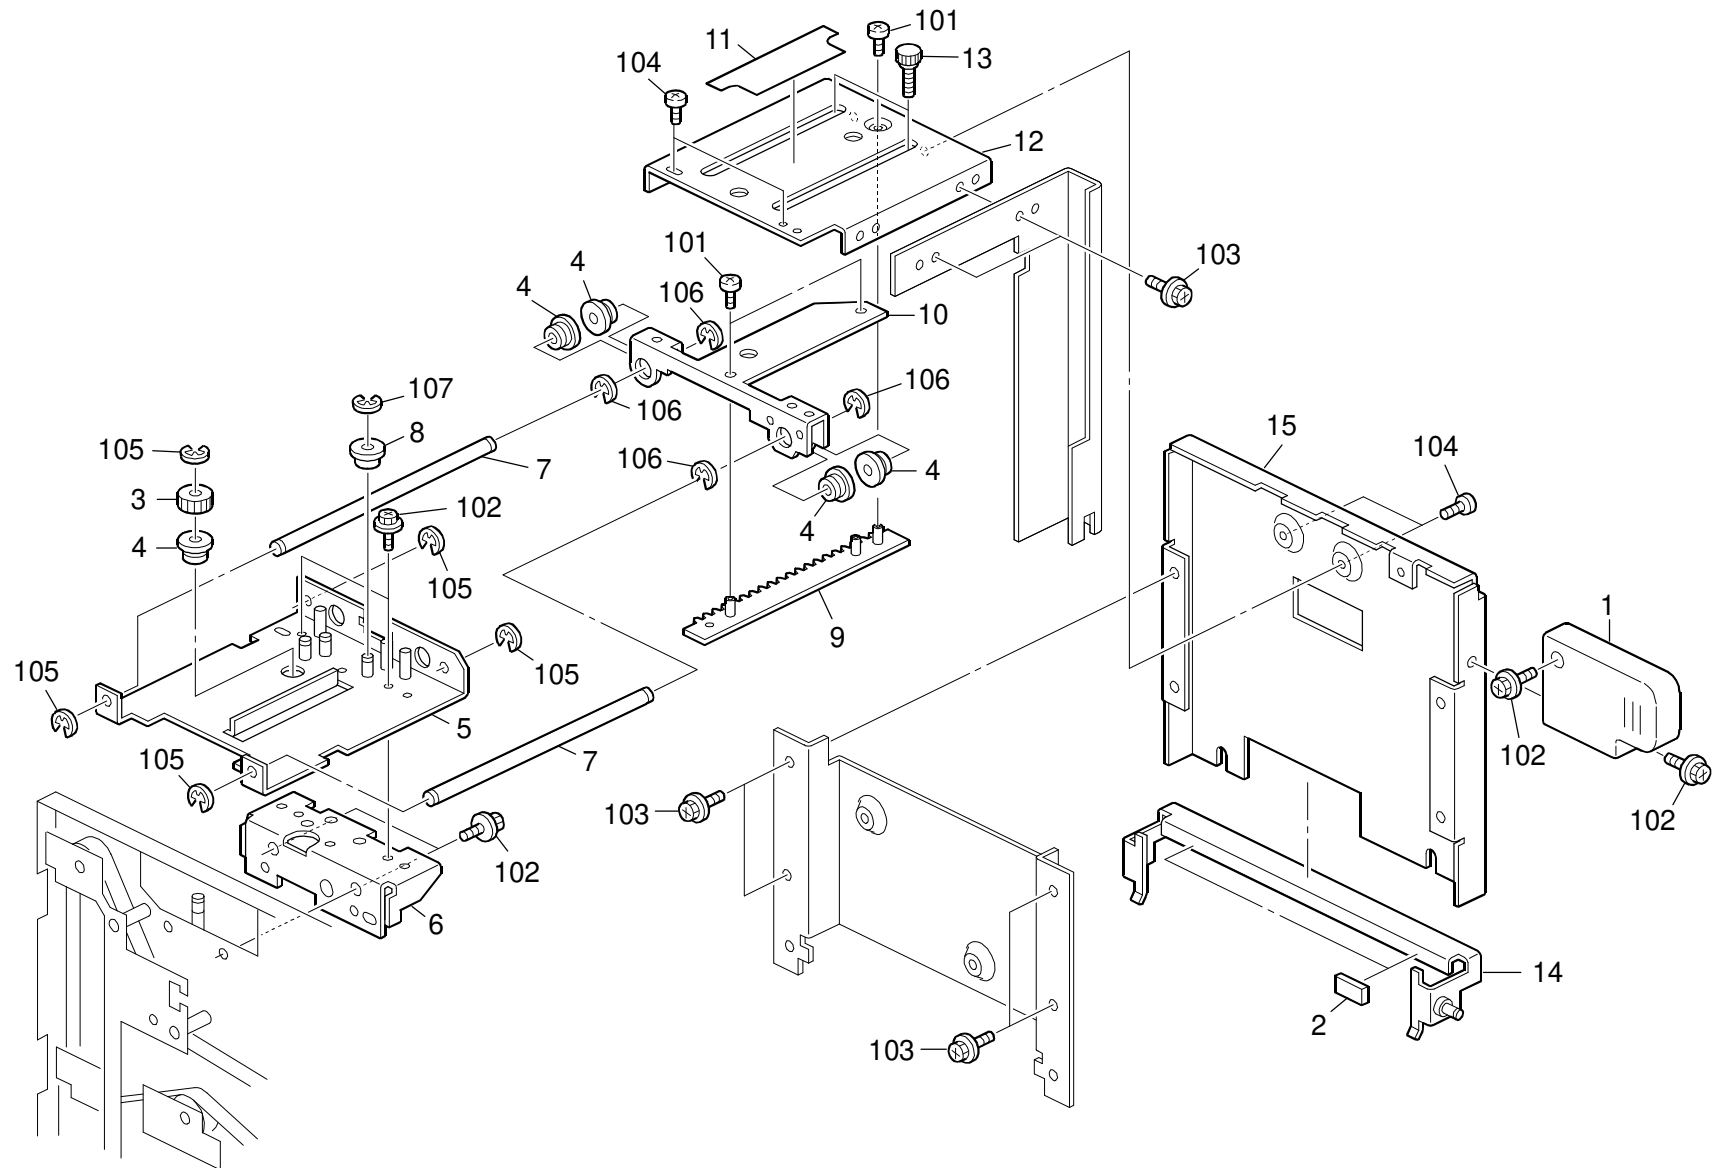


3.4TH/6TH PAPER TRAY 2 (B834)



Index No.	Part No.	Description	Q'ty Per Assembly
1	B834 4153	Side Fence Grip	1
2	B834 3490	Spacer - Side Fence	2
3	B834 3316	Gear - 13Z	1
4	B834 3350	Bushing - 6x10x6.5	5
5	B834 3323	Holder - :Upper Front	1
6	B834 3321	Side Fence Bracket - Upper Front	1
7	B834 3368	Slide Shaft - Upper	2
8	B834 3312	Collar	1
9	B834 3339	Rack - Upper Front	1
10	B834 3332	Guide - Upper Front	1
11	B834 1304	Decal - Side Fence Scale Front	1
12	B834 3337	Cover - Upper Front	1
13	B832 2877	Knob Screw:Tray:Guide:Green	1
14	B834 3190	Tray Bottom Plate	1
15	B834 4151	Side Fence:Front:No.1	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0453 3005N	Binding Self Tapping Screw:3x5	
102	0451 4008N	Tapping Screw:4x8	
103	0451 4006N	Tapping Screw - 4x6	
104	0453 4006N	Binding Self Tapping Screw:4x6	
105	0720 0040E	Retaining Ring - M4	
106	0720 0080E	Retaining Ring - M8	
107	0720 0030E	Retaining Ring - M3	

4.4TH/6TH PAPER TRAY 3 (B834)

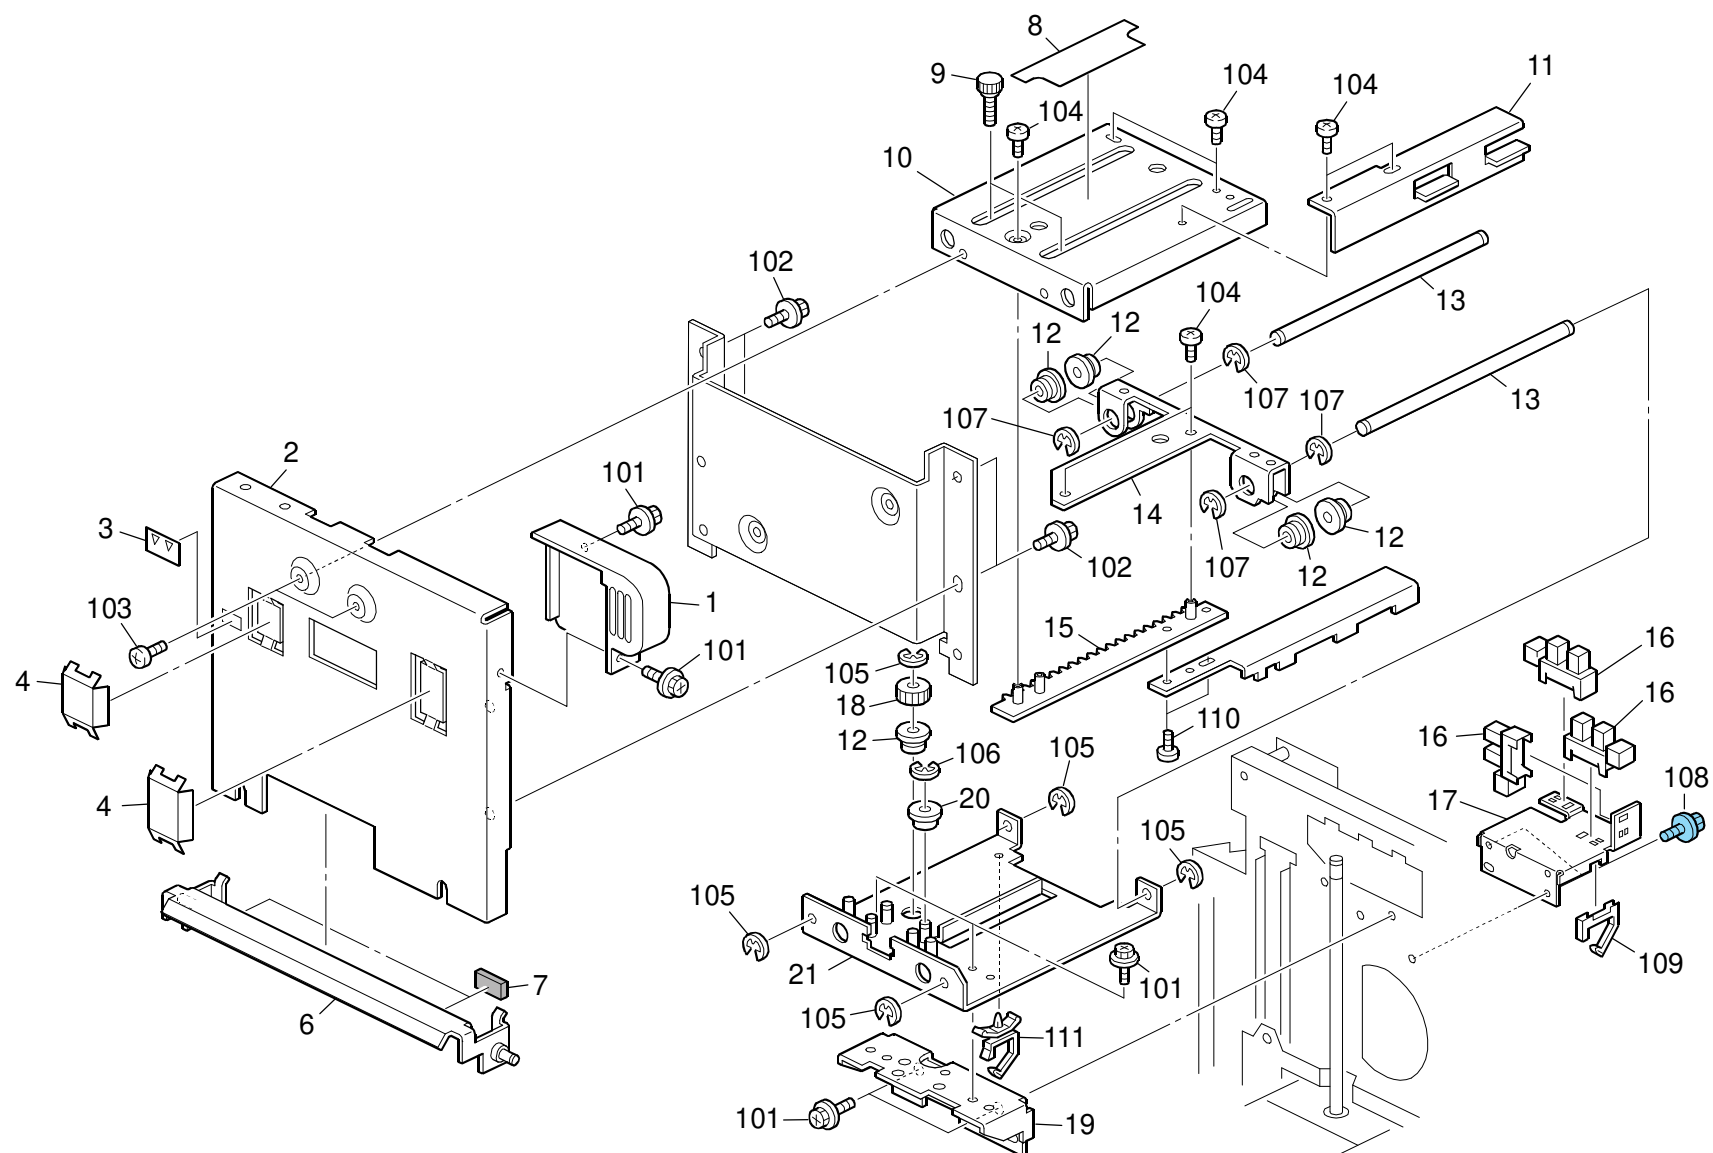


4.4TH/6TH PAPER TRAY 3 (B834)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B834 4163	Side Fence Grip - Rear	1
2	B834 4161	Side Fence:Rear:No.1	1
3	B511 2674	Decal:Display:Paper Volume	1
4	B834 2777	Plate:Auxiliary:Small:Adhesion	1
6	B834 3190	Tray Bottom Plate	1
7	B834 3490	Spacer - Side Fence	1
8	B834 1305	Decal - Side Fence Scale Rear	1
9	B832 2877	Knob Screw:Tray:Guide:Green	1
10	B834 3338	Cover - Upper Rear	1
11	B834 4743	Feeler - Paper Size Sensor No.2	1
12	B834 3350	Bushing - 6x10x6.5	5
13	B834 3368	Slide Shaft - Upper	2
14	B834 3334	Guide - Upper Rear	1
15	B834 3349	Rack - Upper Rear	1
16	AW02 0160	Paper Feed Sensor	3
17	B834 4741	Paper Size Sensor Bracket	1
18	B834 3316	Gear - 13Z	1
19	B834 3322	Side Fence Bracket - Upper Rear	1
20	B834 3312	Collar	1
21	B834 3329	Holder - Upper Rear	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	0451 4006N	Tapping Screw - 4x6	
103	0453 4006N	Binding Self Tapping Screw:4x6	
104	0453 3005N	Binding Self Tapping Screw:3x5	
105	0720 0040E	Retaining Ring - M4	
106	0720 0030E	Retaining Ring - M3	
107	0720 0080E	Retaining Ring - M8	
108	0454 4006Q	Tapping Screw:4x6	
109	1105 0522	Edge Saddle - Les0510	
110	0453 3006N	Tapping Screw - M3x6	
111	1105 0511	Harness Clamp - LWS-0306ZC	

5.4TH/6TH PAPER TRAY 4 (B834)

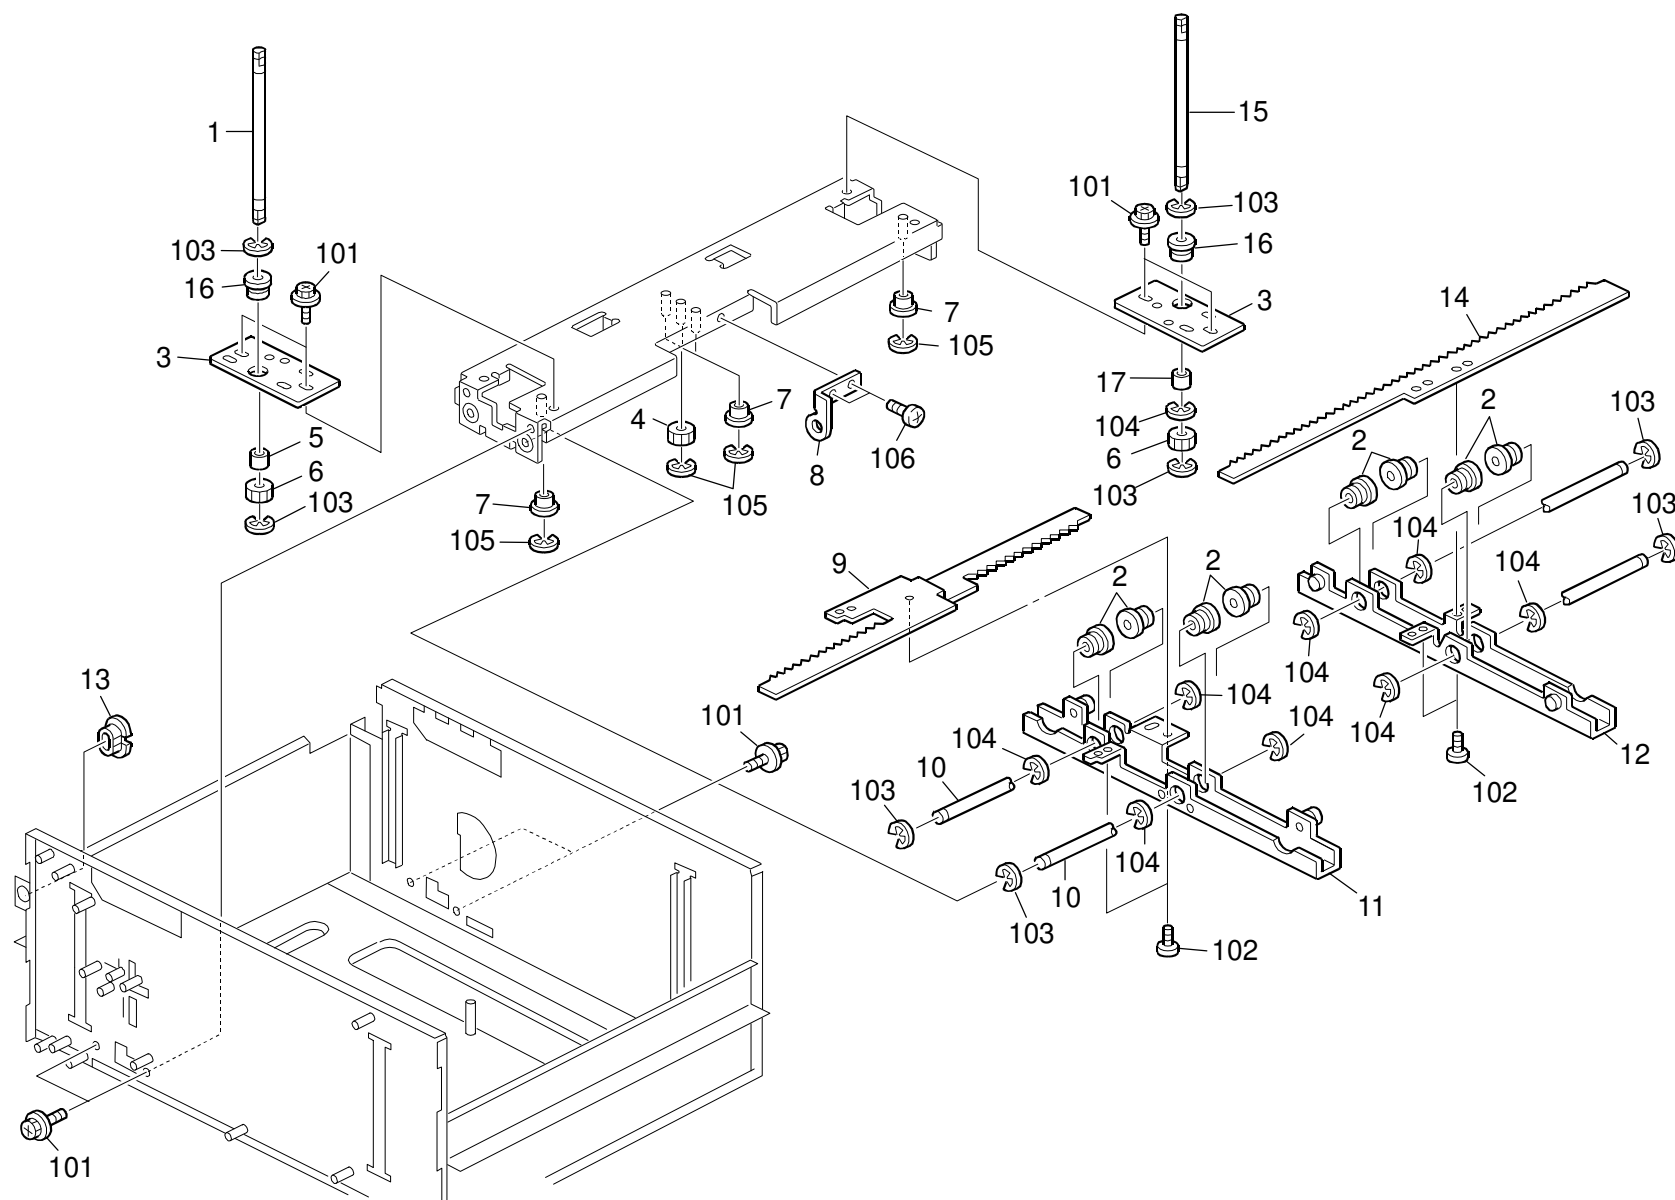


5.4TH/6TH PAPER TRAY 4 (B834)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B834 3470	Coupling Shaft - Front	1
2	B834 3350	Bushing - 6x10x6.5	10
3	B834 3318	Plate:Lower	1
4	B834 3315	Gear - 13Z	2
5	H072 2220	Spacer - M6x10	1
6	B834 3316	Gear - 13Z	2
7	B834 3312	Collar	3
8	B834 3314	Shaft Holder - Lower	1
9	B834 3313	Rack - Front:Lower	1
10	B834 3111	Side Fence Shaft - Lower	2
11	B834 3306	Side Fence Bracket - Lower Front	1
12	B834 3309	Side Fence Bracket - Lower Rear	1
13	B234 6141	Positioning Sleeve - Inner Back	1
14	B834 4696	Rack - Rear Lower	1
15	B834 3471	Coupling Shaft - Rear	1
16	AA08 2101	Bushing - 6x10x6	2
17	A376 1295	Spacer - M6x10x5	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4006N	Tapping Screw - 4x6	
102	0453 4006N	Binding Self Tapping Screw:4x6	
103	0720 0040E	Retaining Ring - M4	
104	0720 0080E	Retaining Ring - M8	
105	0720 0030E	Retaining Ring - M3	
106	0453 3006N	Tapping Screw - M3x6	

6.4TH/6TH PAPER TRAY 5 (B834)

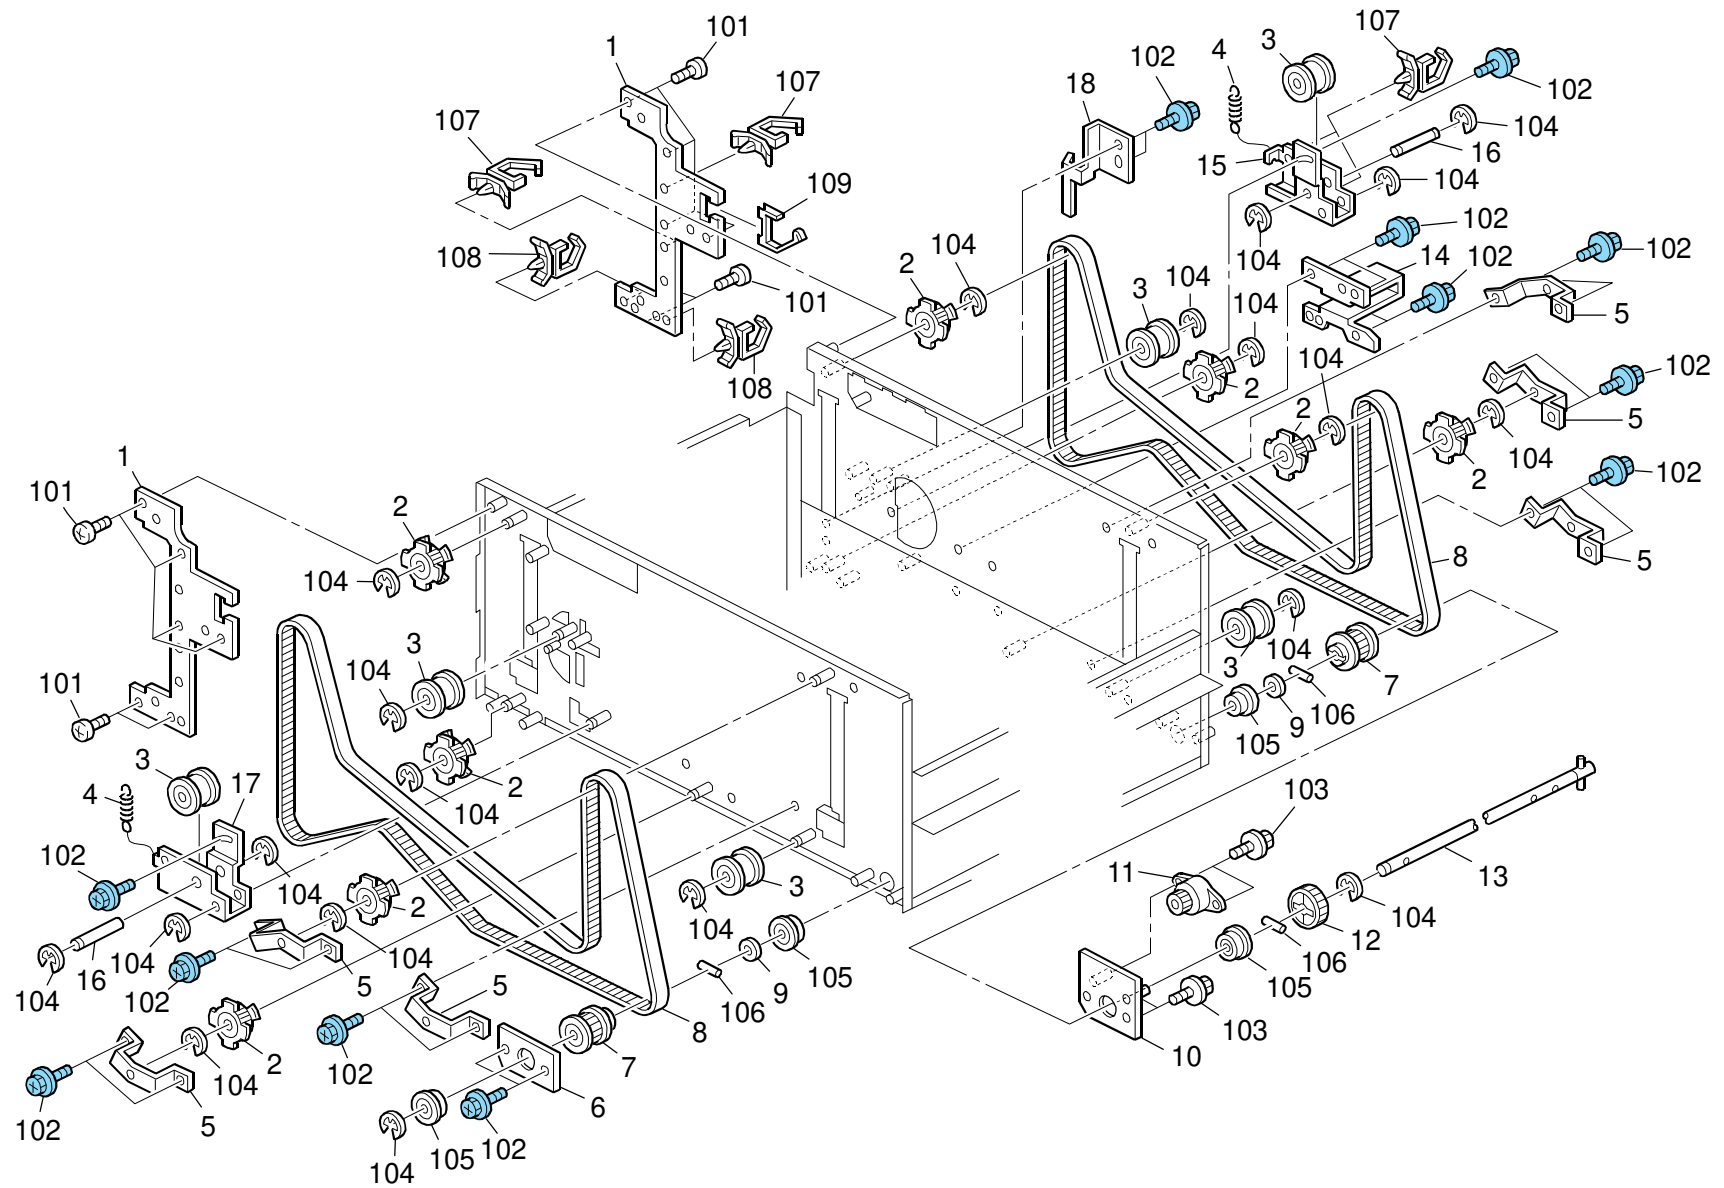


6.4TH/6TH PAPER TRAY 5 (B834)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B834 4053	Plate	2
2	B834 4049	Idler Pulley	8
3	B834 4054	Tensioner	6
4	G417 3374	Tension Spring:Pulley:Idler	2
5	B834 3422	Idler Bracket - Lower Front	6
6	B834 4043	Bearing Plate - Front	1
7	AB03 0548	Pulley - 16T	2
8	B834 3402	Timing Belt - B100S5M1605	2
9	AA13 2142	Spacer - M8	2
10	B834 4046	Bearing Plate - Rear	1
11	B834 3421	Oil Damper - 0.5kgf Cm:No.1	1
12	AB01 4140	Gear - 24Z	1
13	B834 4041	Drive Shaft	1
14	B834 4872	Pressure Roller Bracket	1
15	B834 4055	Tension Bracket - Rear	1
16	B834 4056	Tension Stud	2
17	B834 3423	Tension Bracket - Front	1
18	B834 4076	Feeler - Paper Volume Sensor	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0453 4008N	Binding Self Tapping Screw:4x8	
102	0454 4006Q	Tapping Screw:4x6	
103	0451 4008N	Tapping Screw:4x8	
104	0720 0060E	Retaining Ring - M6	
105	0741 3808	Ball Bearing - 8x16x5mm	
106	0633 0140G	Parallel Pin - 3x14	
107	1105 0487	Harness Clamp	
108	1105 0511	Harness Clamp - LWS-0306ZC	
109	1105 0518	Edge Saddle - Les-1010	

7.4TH/6TH PAPER TRAY 6 (B834)

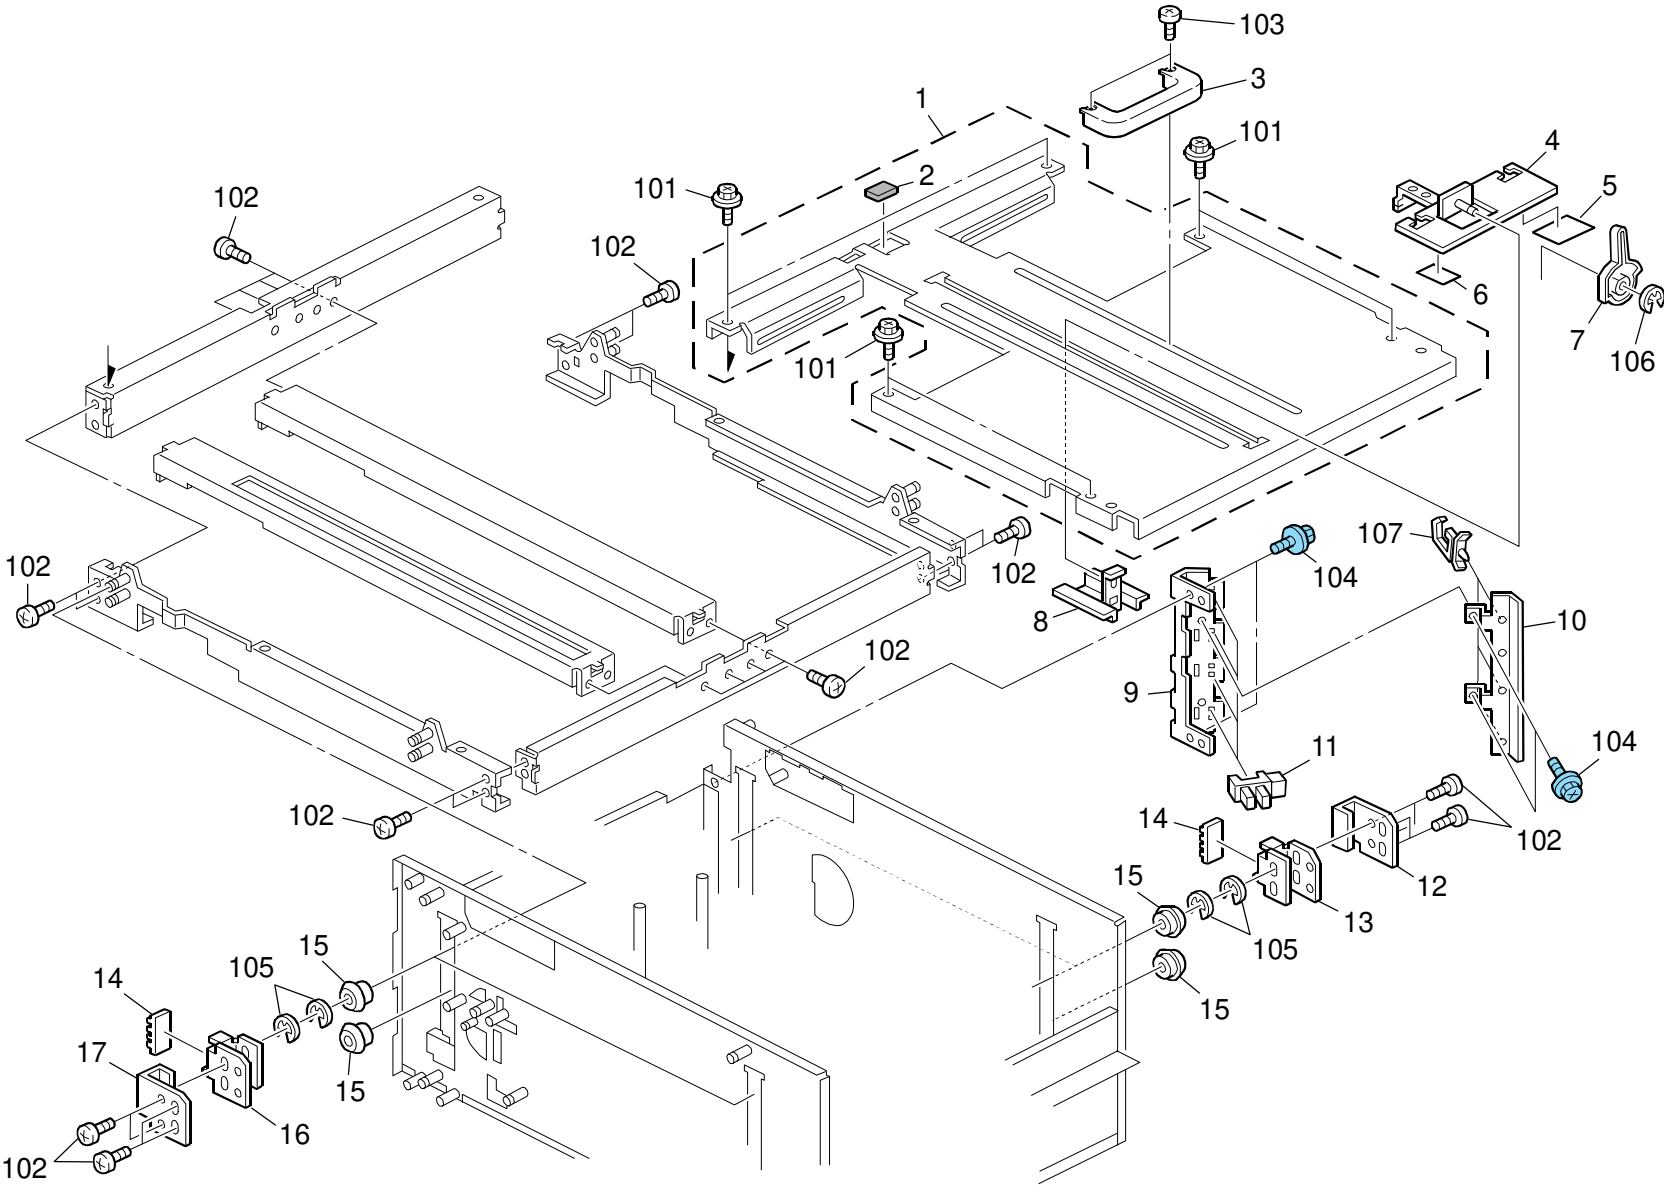


7.4TH/6TH PAPER TRAY 6 (B834)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B834 4610	Paper Tray	1
2	A667 2656	Friction Pad	1
3	B834 4598	End Fence Grip	1
4	B834 4587	End Fence Guide	1
5	B834 3143	End Fence Spacer - Large	1
6	B834 3142	End Fence Spacer- Small	1
7	B834 4083	End Fence Lock Lever	1
8	B834 4592	Cam	1
9	B834 4075	Bracket - Paper Volume Sensor	1
10	B834 3452	Cover - Paper Volume Sensor	1
11	AW02 0160	Paper Feed Sensor	4
12	B834 3230	Timing Belt Bracket - REAR	1
13	B834 3231	Timing Belt Holder - REAR	1
14	C563 3116	Belt Joint	2
15	A335 4351	Guide Roller	4
16	B834 3243	Timing Belt Holder - FRONT	1
17	B834 3242	Timing Belt Bracket - FRONT	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	0453 4008N	Binding Self Tapping Screw:4x8	
103	0354 0040N	Screw-m4x4	
104	0454 4006Q	Tapping Screw:4x6	
105	0720 0060E	Retaining Ring - M6	
106	0720 0030E	Retaining Ring - M3	
107	1105 0511	Harness Clamp - LWS-0306ZC	

8.4TH/6TH PAPER TRAY 7 (B834)

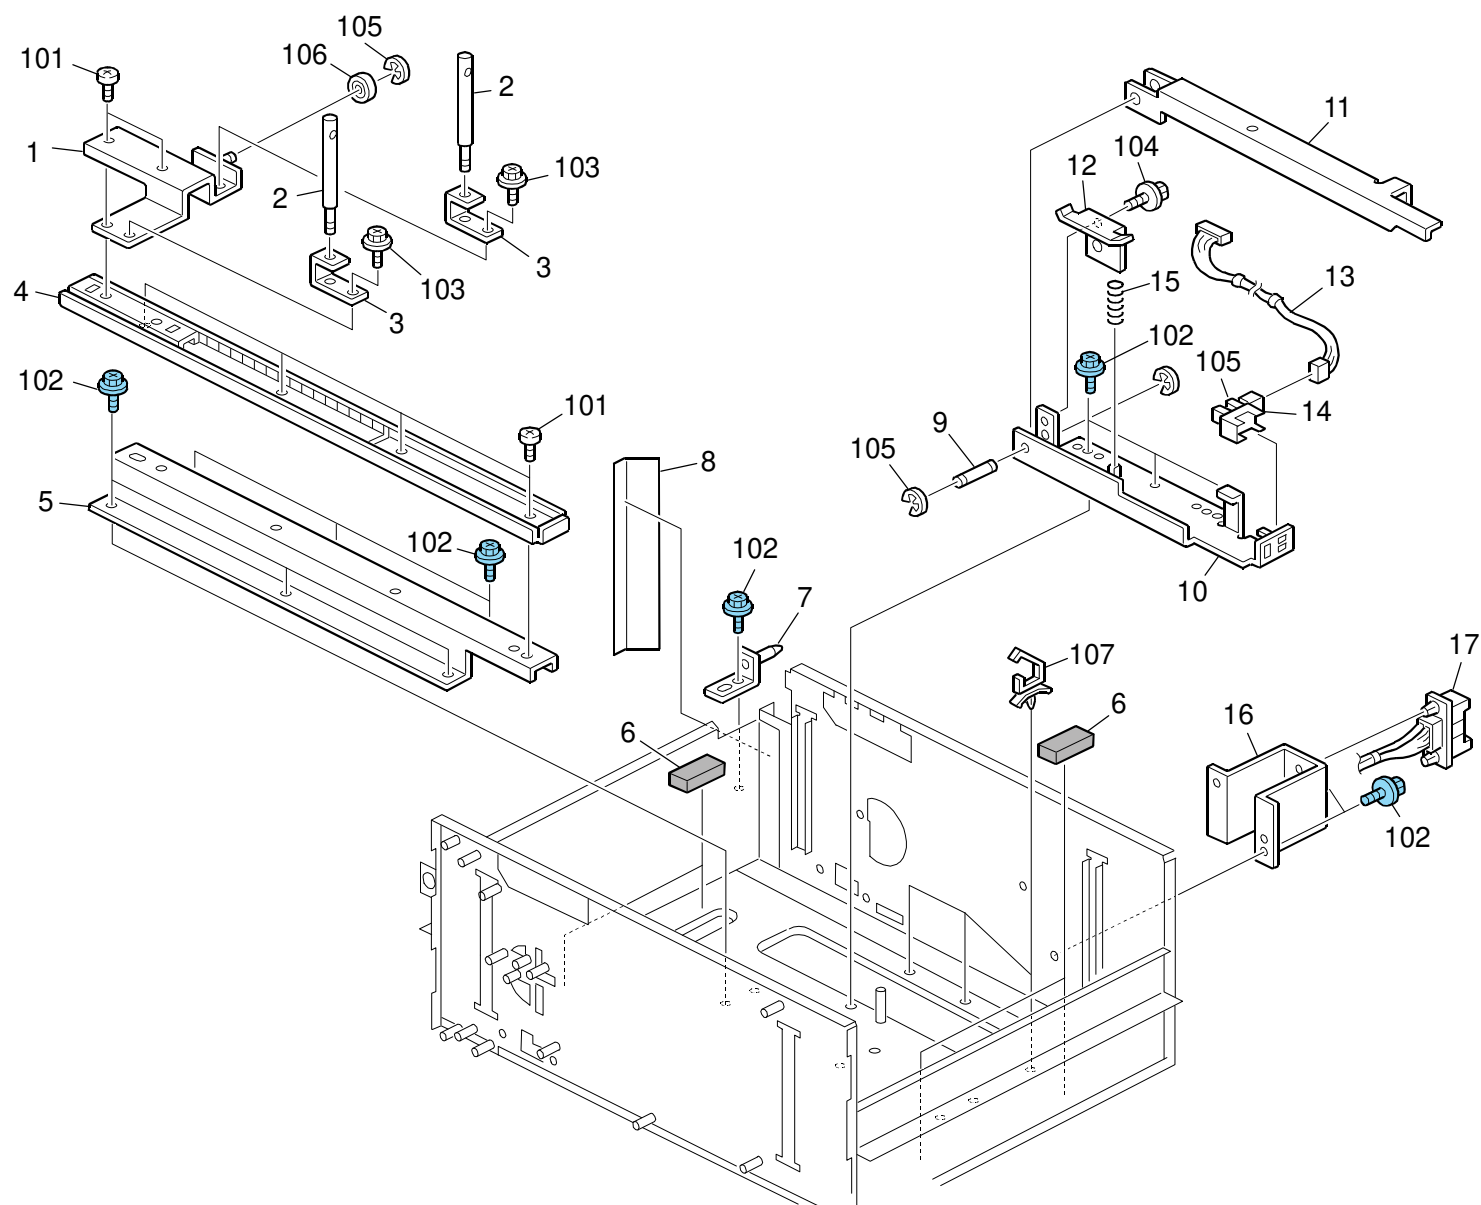


8.4TH/6TH PAPER TRAY 7 (B834)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B834 4596	End Fence Slide Bracket	1
2	B834 4082	End Fence Shaft	2
3	B834 4584	End Fence Shaft Holder	2
4	B834 3065	Slide Rail - End Fence	1
5	B834 4081	End Fence Base	1
6	B834 4032	Cushion:Tray:No.1	4
7	B834 4027	Positioning Pin Bracket	1
8	B834 4035	Guide:Paper Volume Sensor:No.1	1
9	B834 4595	Contact Point Shaft - Long	1
10	B834 4593	Paper Size Sensor Bracket - Long	1
11	B834 4594	Shielding Plate - Long	1
12	B834 3169	Paper Size Sensor Plate	1
13	B834 5334	Harness - Tray Inner	1
14	AW02 0160	Paper Feed Sensor	1
15	G052 1518	Spring - Lock Lever	1
16	B834 4881	Drawer Connector Bracket	1
17	B834 5330	Harness - 4/6tray Connecting	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0453 3006N	Tapping Screw - M3x6	
102	0454 4006Q	Tapping Screw:4x6	
103	0451 4006N	Tapping Screw - 4x6	
104	0451 4008N	Tapping Screw:4x8	
105	0720 0040E	Retaining Ring - M4	
106	0740 3506	Ball Bearing - 6x12x4 mm	
107	1105 0511	Harness Clamp - LWS-0306ZC	

9.5TH PAPER TRAY 1 (B834)

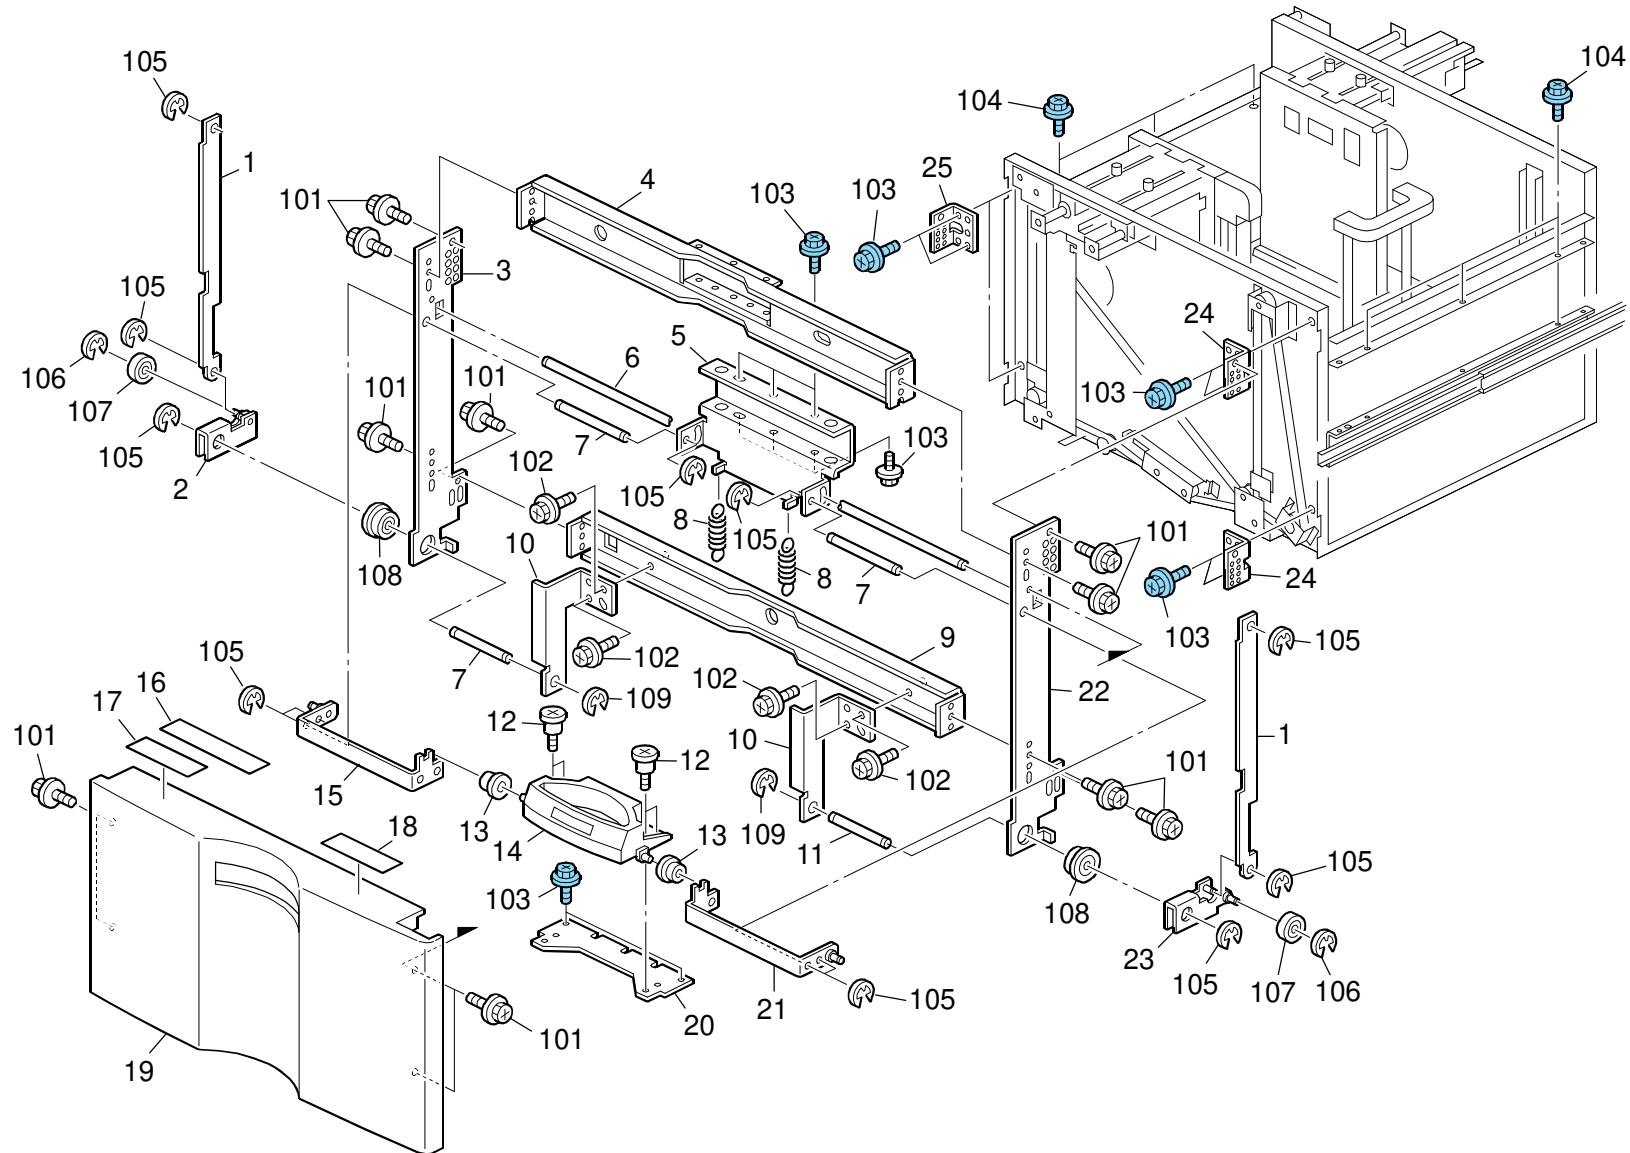


9.5TH PAPER TRAY 1 (B834)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B834 3386	Link Handle	2
2	B834 3400	Stopper Guide - Left	1
3	B834 3395	Plate - Left	1
4	B834 3283	Stay:Main	1
5	B834 3475	Bracket	1
6	B834 3438	Link Shaft	1
7	B834 3384	Contact Point Shaft	2
8	H516 3666	Spring - 19.6mm	2
9	B834 3378	Stay	1
10	B834 3390	Contact Point Stay	2
11	B834 3389	Stopper Shaft	2
12	AA14 3718	Stepped Screw - M4	2
13	B834 3312	Collar	2
14	B834 1380	Paper Tray Grip	1
15	B834 3379	Arm:Swivel:Left:Peen	1
16	B834 1323	Decal - Side Fence Postcard	1
17	B834 1312	Decal - Paper Supply 1	1
18	B834 1313	Decal - Paper Supply 2	1
19	B834 1382	Paper Tray Cover - Middle	1
20	B834 3377	Plate Handle	1
21	B834 3385	Arm - Right	1
22	B834 3396	Plate - Right	1
23	B834 3425	Stopper Guide - Right	1
24	B834 4891	Registration Side Plate - Right	1
25	B834 4892	Registration Side Plate - Left	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	0451 4006N	Tapping Screw - 4x6	
103	0454 4006Q	Tapping Screw:4x6	
104	0454 4008Q	Tapping Screw - M4x8	
105	0720 0040E	Retaining Ring - M4	
106	0720 0050E	Retaining Ring - M5	
107	0740 3506	Ball Bearing - 6x12x4 mm	
108	0741 3808	Ball Bearing - 8x16x5mm	
109	0720 0060E	Retaining Ring - M6	

10.5TH PAPER TRAY 2 (B834)

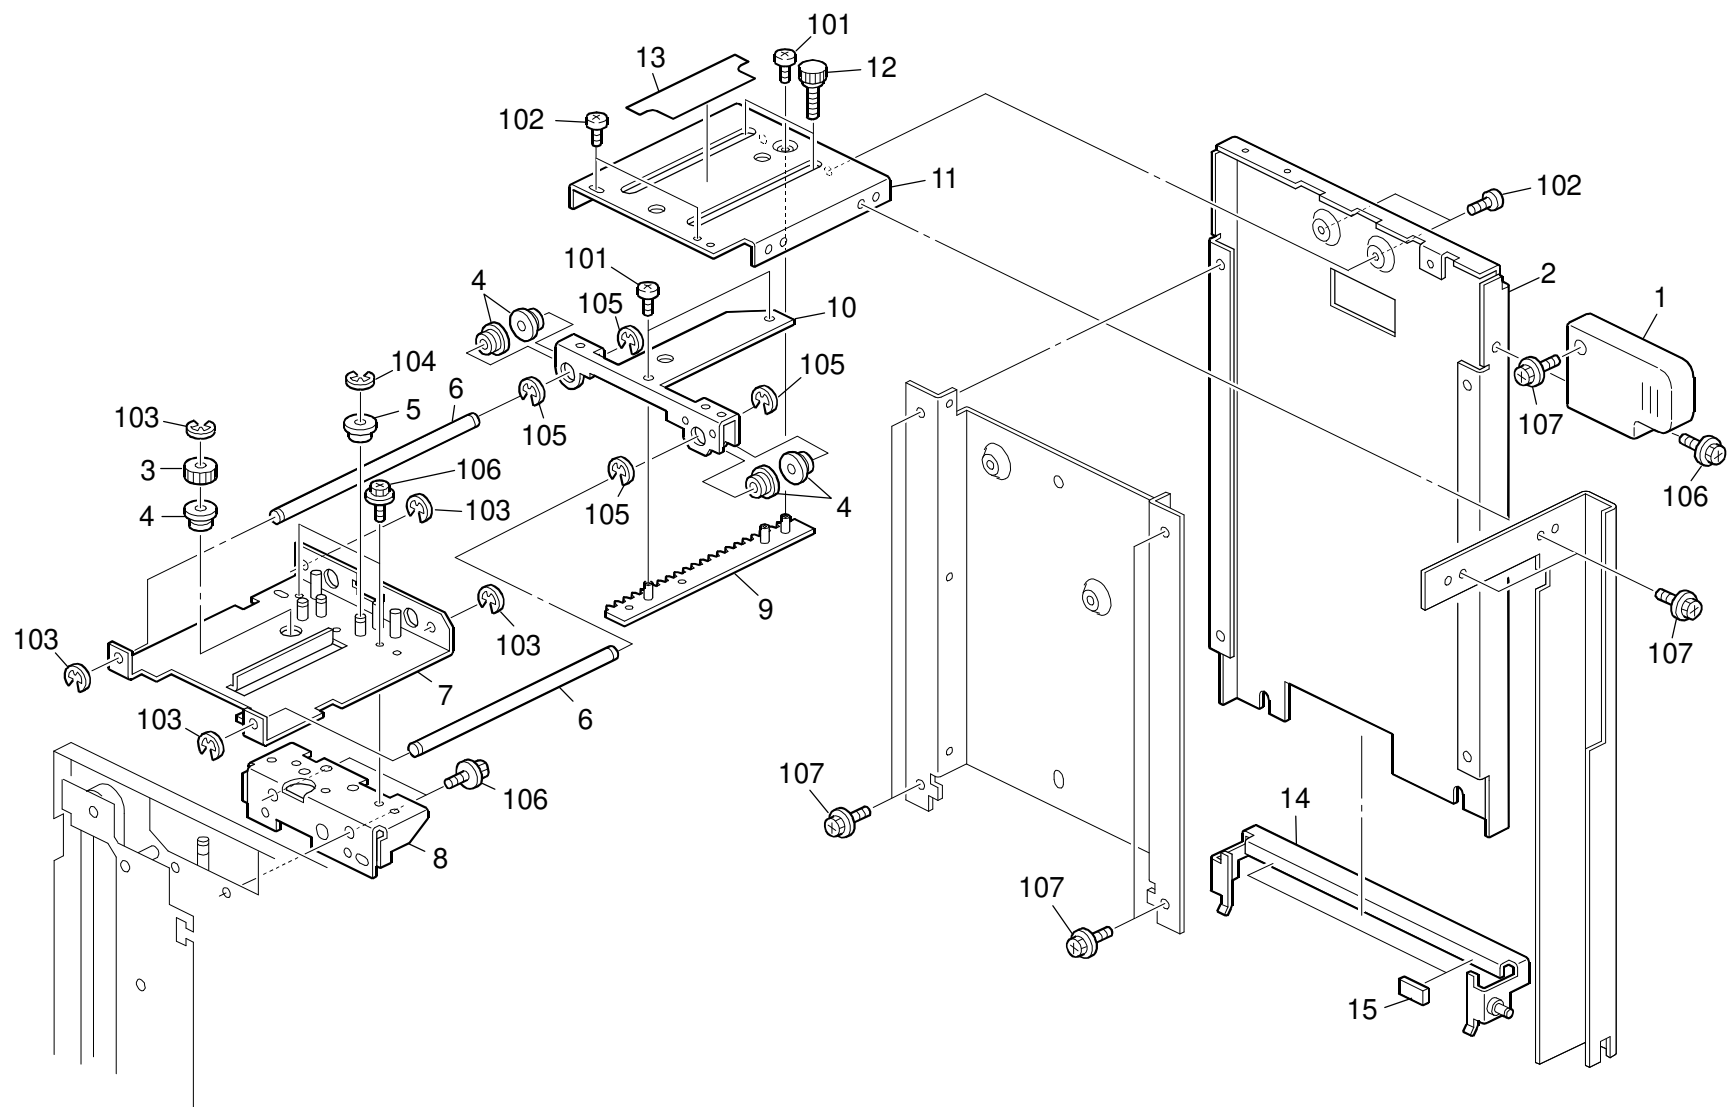


10.5TH PAPER TRAY 2 (B834)



Index No.	Part No.	Description	Q'ty Per Assembly
1	B834 4153	Side Fence Grip	1
2	B834 4651	Side Fence:Front:No.2	1
3	B834 3316	Gear - 13Z	5
4	B834 3350	Bushing - 6x10x6.5	1
5	B834 3312	Collar	1
6	B834 3368	Slide Shaft - Upper	2
7	B834 3323	Holder - :Upper Front	1
8	B834 3321	Side Fence Bracket - Upper Front	1
9	B834 3339	Rack - Upper Front	1
10	B834 3332	Guide - Upper Front	1
11	B834 3337	Cover - Upper Front	1
12	B832 2877	Knob Screw:Tray:Guide:Green	1
13	B834 1304	Decal - Side Fence Scale Front	1
14	B834 3190	Tray Bottom Plate	1
15	B834 3490	Spacer - Side Fence	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0453 3005N	Binding Self Tapping Screw:3x5	
102	0453 4006N	Binding Self Tapping Screw:4x6	
103	0720 0040E	Retaining Ring - M4	
104	0720 0030E	Retaining Ring - M3	
105	0720 0080E	Retaining Ring - M8	
106	0451 4008N	Tapping Screw:4x8	
107	0451 4006N	Tapping Screw - 4x6	

11.5TH PAPER TRAY 3 (B834)

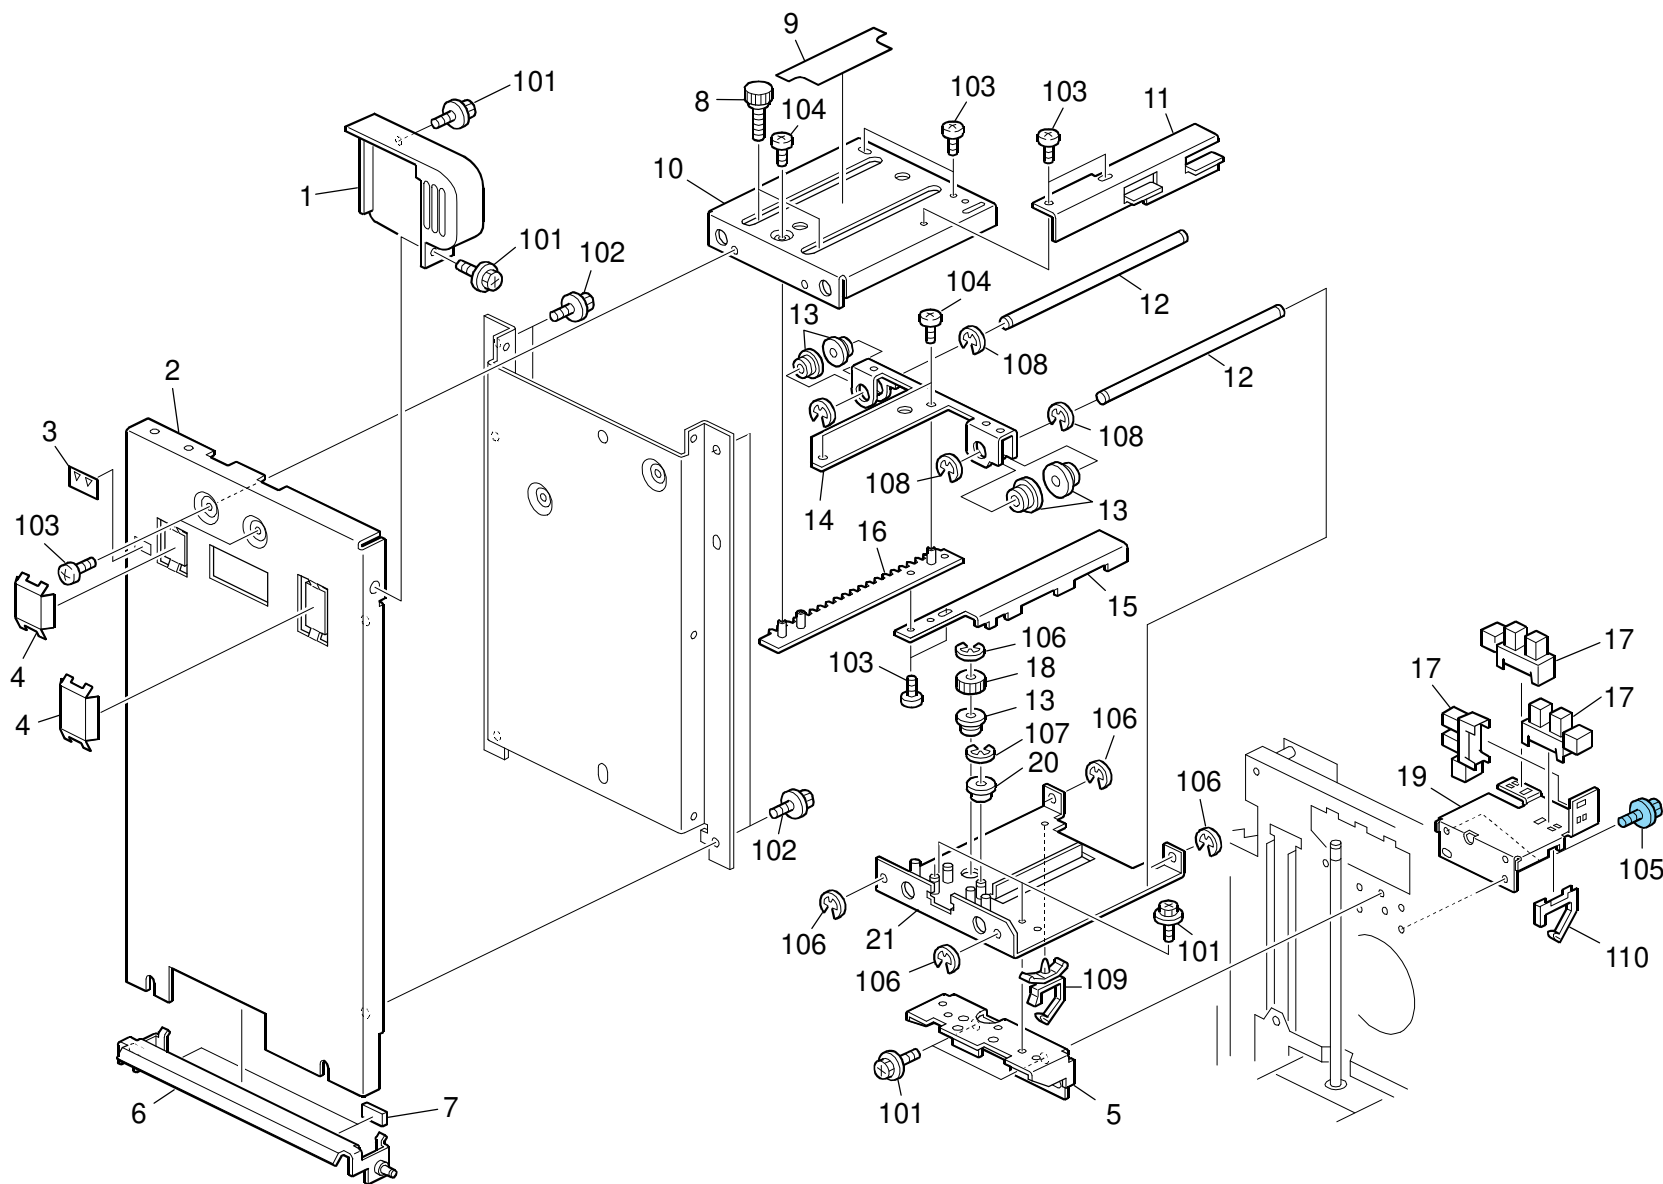


11.5TH PAPER TRAY 3 (B834)



Index No.	Part No.	Description	Q'ty Per Assembly
1	B834 4163	Side Fence Grip - Rear	1
2	B834 4661	Side Fence:Rear:No.2	1
3	B511 2674	Decal:Display:Paper Volume	1
4	B834 2777	Plate:Auxiliary:Small:Adhesion	1
5	B834 3322	Side Fence Bracket - Upper Rear	1
6	B834 3190	Tray Bottom Plate	1
7	B834 3490	Spacer - Side Fence	1
8	B832 2877	Knob Screw:Tray:Guide:Green	1
9	B834 1305	Decal - Side Fence Scale Rear	1
10	B834 3334	Guide - Upper Rear	1
11	B834 4743	Feeler - Paper Size Sensor No.2	1
12	B834 3368	Slide Shaft - Upper	2
13	B834 3350	Bushing - 6x10x6.5	5
14	B834 3334	Guide - Upper Rear	1
15	B834 4742	Feeler - Paper Size Sensor No.1	1
16	B834 3349	Rack - Upper Rear	1
17	AW02 0160	Paper Feed Sensor	3
18	B834 3316	Gear - 13Z	1
19	B834 4741	Paper Size Sensor Bracket	1
20	B834 3312	Collar	1
21	B834 3329	Holder - Upper Rear	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	0451 4006N	Tapping Screw - 4x6	
103	0453 4006N	Binding Self Tapping Screw:4x6	
104	0453 3005N	Binding Self Tapping Screw:3x5	
105	0454 4008Q	Tapping Screw - M4x8	
106	0720 0040E	Retaining Ring - M4	
107	0720 0030E	Retaining Ring - M3	
108	0720 0080E	Retaining Ring - M8	
109	1105 0511	Harness Clamp - LWS-0306ZC	
110	1105 0522	Edge Saddle - Les0510	

12.5TH PAPER TRAY 4 (B834)

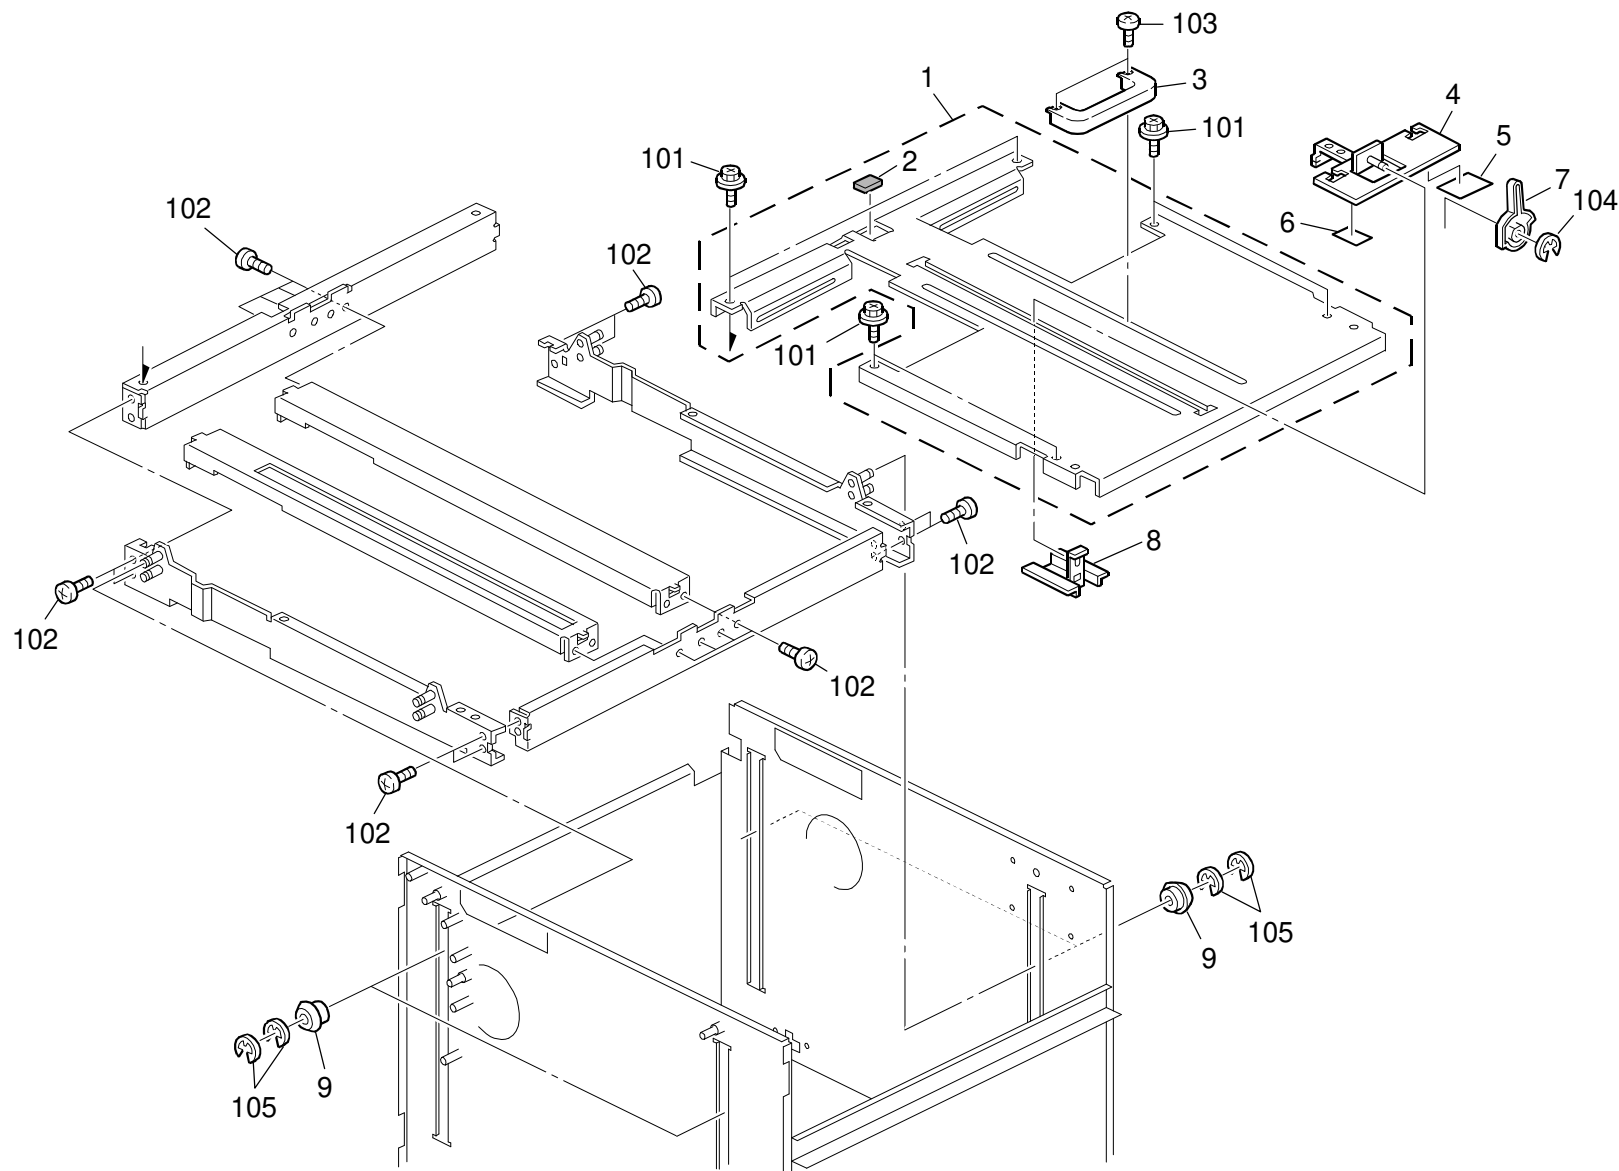


12.5TH PAPER TRAY 4 (B834)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B834 4610	Paper Tray	1
2	A667 2656	Friction Pad	1
3	B834 4598	End Fence Grip	1
4	B834 4587	End Fence Guide	1
5	B834 3143	End Fence Spacer - Large	1
6	B834 3142	End Fence Spacer- Small	1
7	B834 4083	End Fence Lock Lever	1
8	B834 4592	Cam	1
9	A335 4351	Guide Roller	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	0453 4008N	Binding Self Tapping Screw:4x8	
103	0354 0040N	Screw-m4x4	
104	0720 0080E	Retaining Ring - M8	
105	0720 0060E	Retaining Ring - M6	

13.5TH PAPER TRAY 5 (B834)

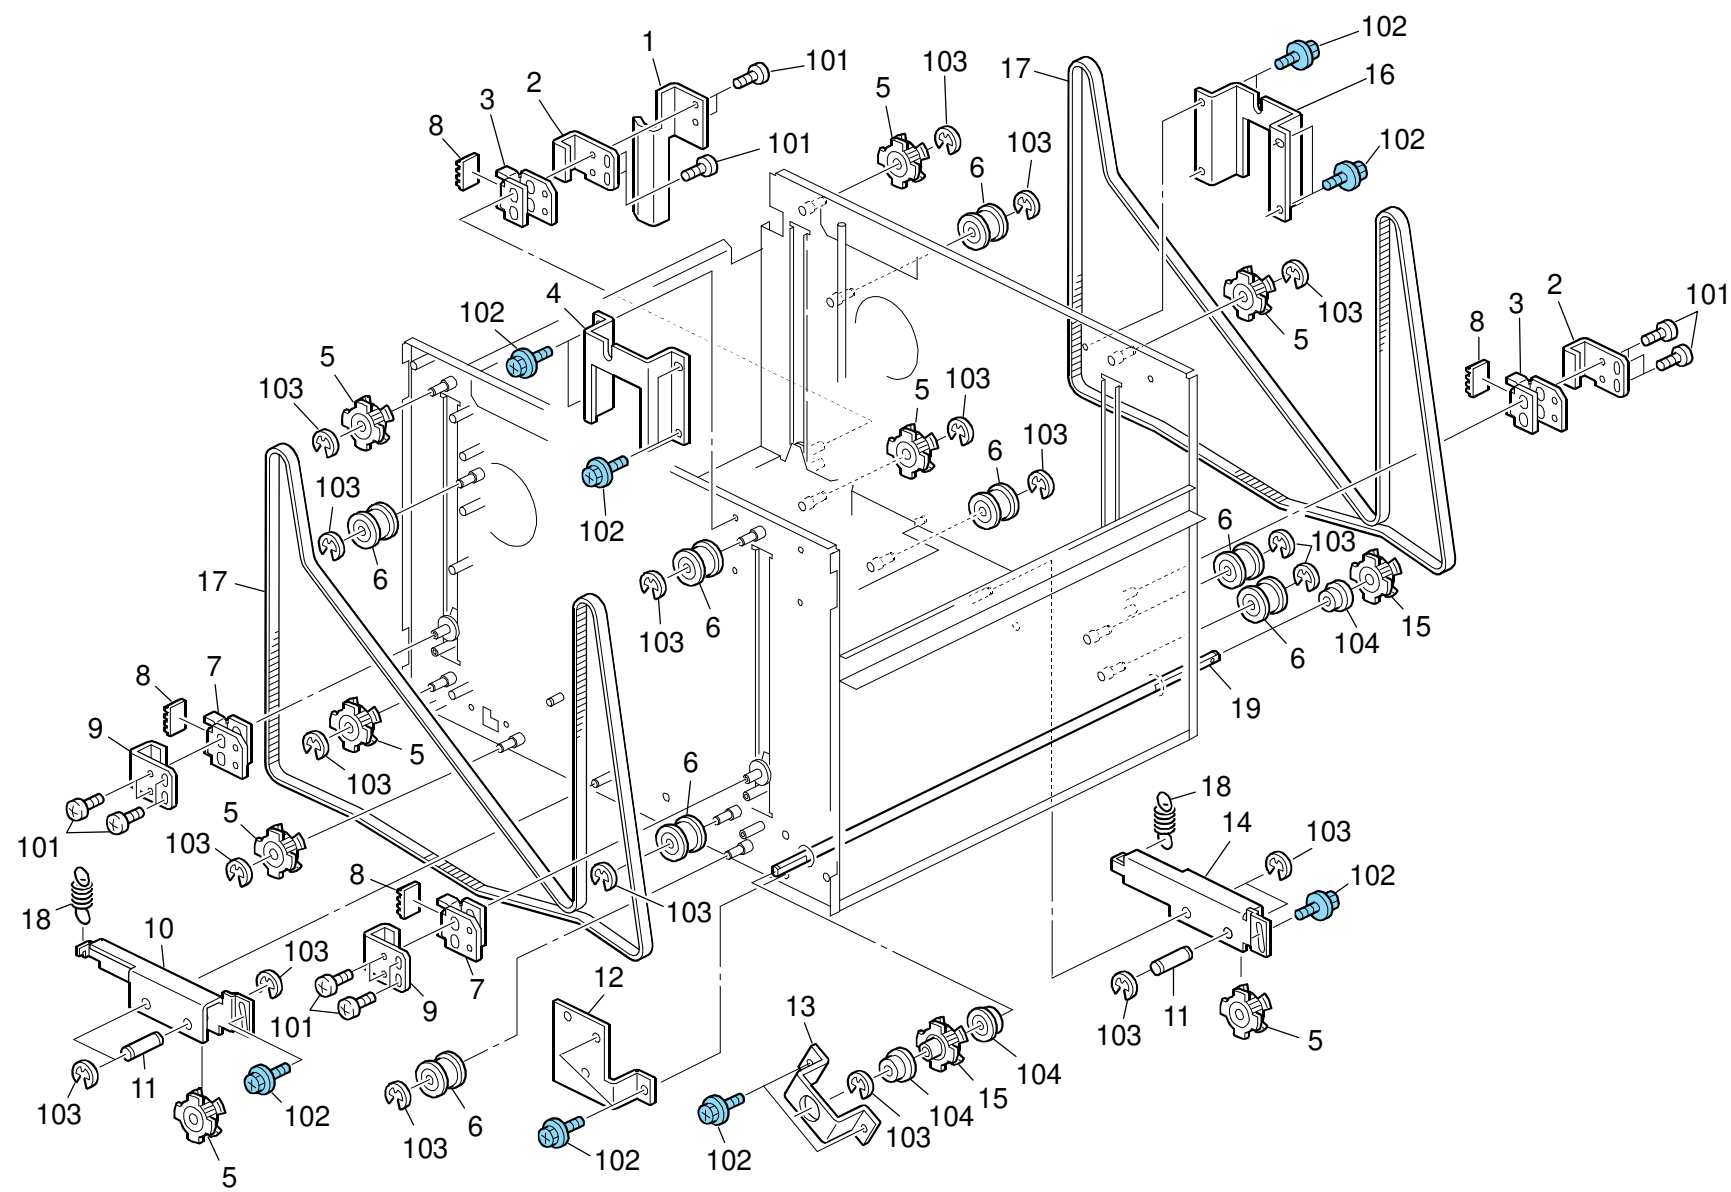


13.5TH PAPER TRAY 5 (B834)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B834 4576	Feeler - Paper Volume Sensor	1
2	B834 3230	Timing Belt Bracket - Rear	2
3	B834 3231	Timing Belt Holder - Rear	2
4	B834 3237	Bracket - Front	1
5	B834 4557	Timing Pulley:Drive:No.2:Ass'y	8
6	B834 4559	Tensioner	8
7	B834 3243	Timing Belt Holder - Front	2
8	C563 3116	Belt Joint	4
9	B834 3242	Timing Belt Bracket - Front	2
10	B834 3245	Tension Bracket No.2 - Front	1
11	B834 4568	Stud	2
12	B834 4564	Holder - Front	1
13	B834 4562	Bracket - Lower Front	1
14	B834 4566	Tension Bracket No.2 - Rear	1
15	B834 4565	Timing Pulley - 20T	2
16	B834 3248	Bracket - Rear	1
17	B834 4572	Timing Belt - B100S5M2000	2
18	AA06 0906	Tension Spring - 25n	2
19	B834 4548	Main Drive Shaft	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0453 4008N	Binding Self Tapping Screw:4x8	
102	0454 4006Q	Tapping Screw:4x6	
103	0720 0060E	Retaining Ring - M6	
104	0741 3808	Ball Bearing - 8x16x5mm	

14.5TH PAPER TRAY 6 (B834)

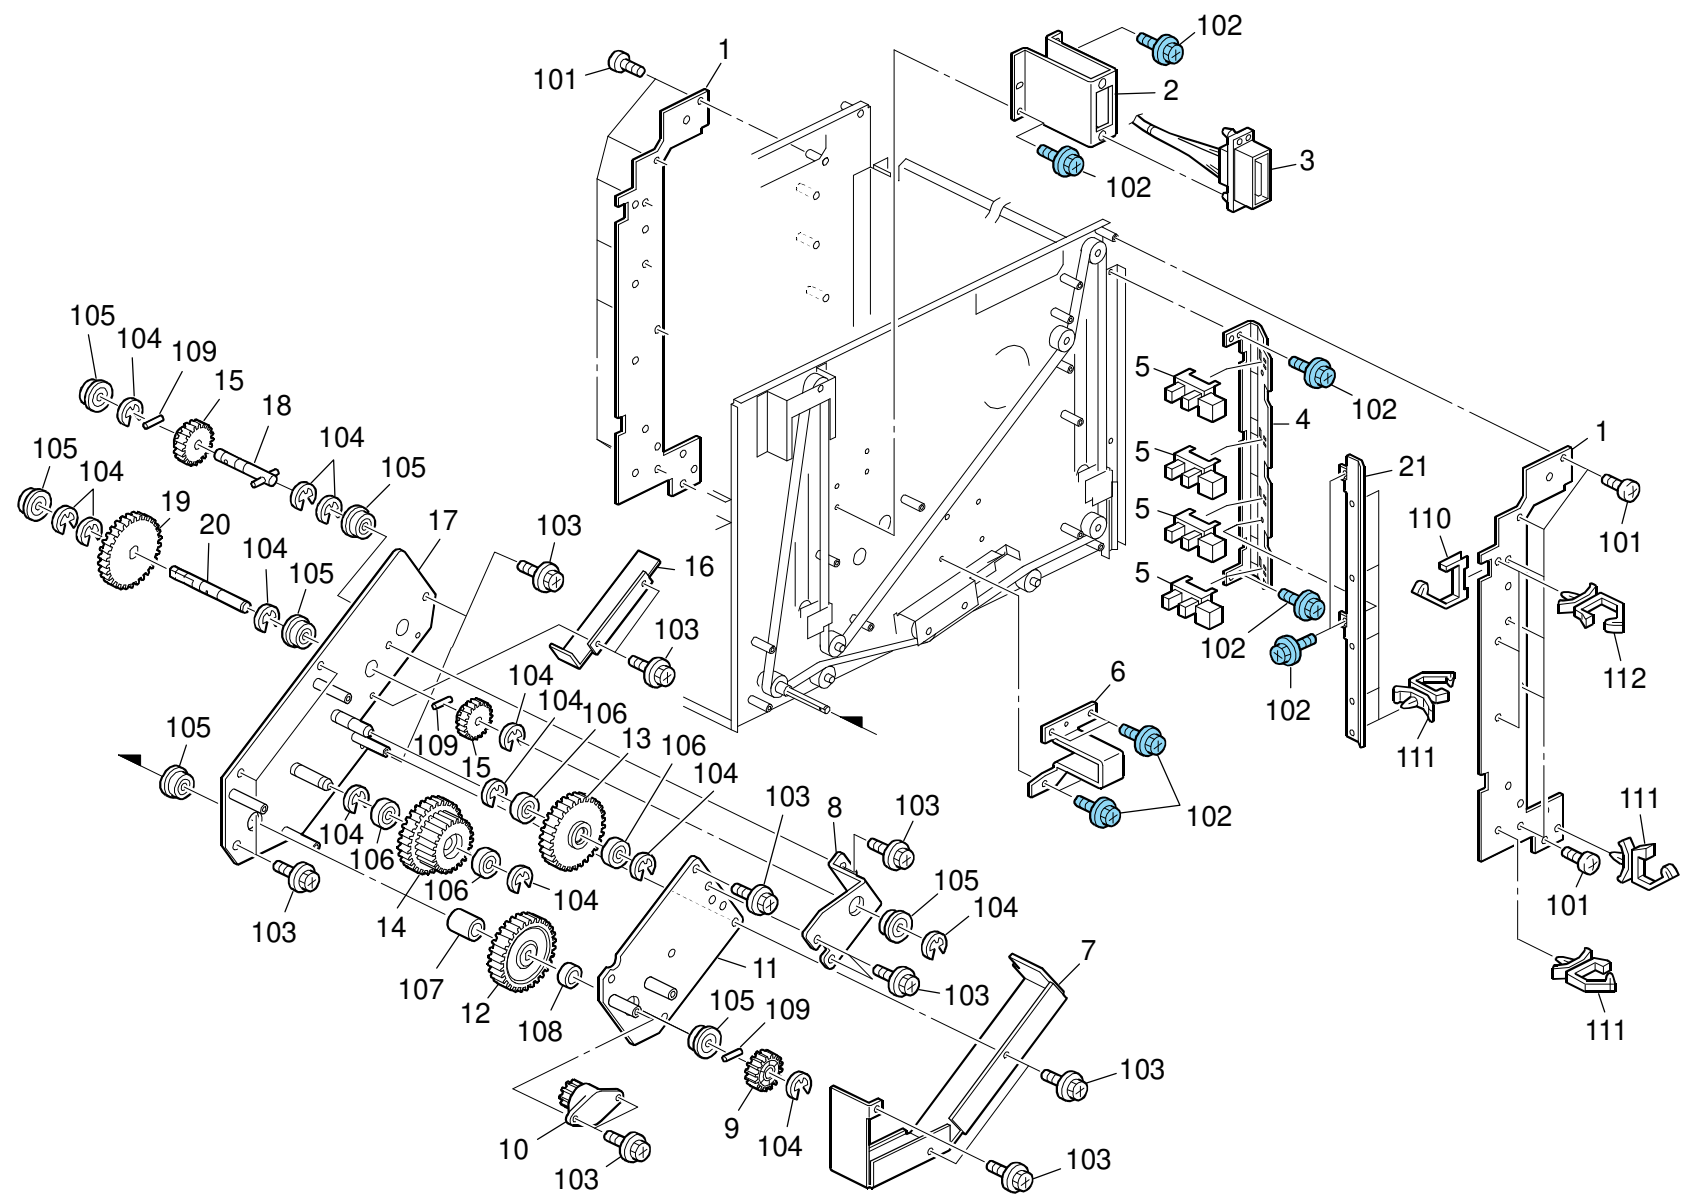


14.5TH PAPER TRAY 6 (B834)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B834 4563	Plate	2
2	B834 4881	Drawer Connector Bracket	1
3	B834 5332	Harness - 5tray	1
4	B834 4575	Bracket - Paper Volume Sensor	1
5	AW02 0160	Paper Feed Sensor	4
6	B834 4892	Registration Side Plate - Left	1
7	B834 3485	Cover	1
8	B834 4551	Plate - Auxiliary	1
9	AB01 4140	Gear - 24Z	1
10	B834 3493	Oil Damper:0.2n·m	1
11	B834 3197	Plate - Upper	1
12	B834 3203	Gear - 48Z	1
13	B834 4546	Gear - 60Z	1
14	B834 4547	Gear - 36Z/60Z	1
15	B834 3214	Gear - 30Z	1
16	B834 3473	Cover - Small	1
17	B834 4552	Plate - Lower	1
18	B834 4541	Shaft	1
19	B834 3217	Gear - 60Z	1
20	B834 4549	Drive Gear Shaft	1
21	B834 3456	Cover - Paper Volume Sensor	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0453 4008N	Binding Self Tapping Screw:4x8	
102	0454 4006Q	Tapping Screw:4x6	
103	0451 4008N	Tapping Screw:4x8	
104	0720 0060E	Retaining Ring - M6	
105	0741 3808	Ball Bearing - 8x16x5mm	
106	0740 3008	Ball Bearing - 8x22x7	
107	0707 8120N	Bushing - 8x12	
108	0707 8050N	Bushing - 8x5	
109	0633 0140G	Parallel Pin - 3x14	
110	1105 0518	Edge Saddle - Les-1010	
111	1105 0511	Harness Clamp - LWS-0306ZC	
112	1105 0487	Harness Clamp	

15.5TH PAPER TRAY 7 (B834)

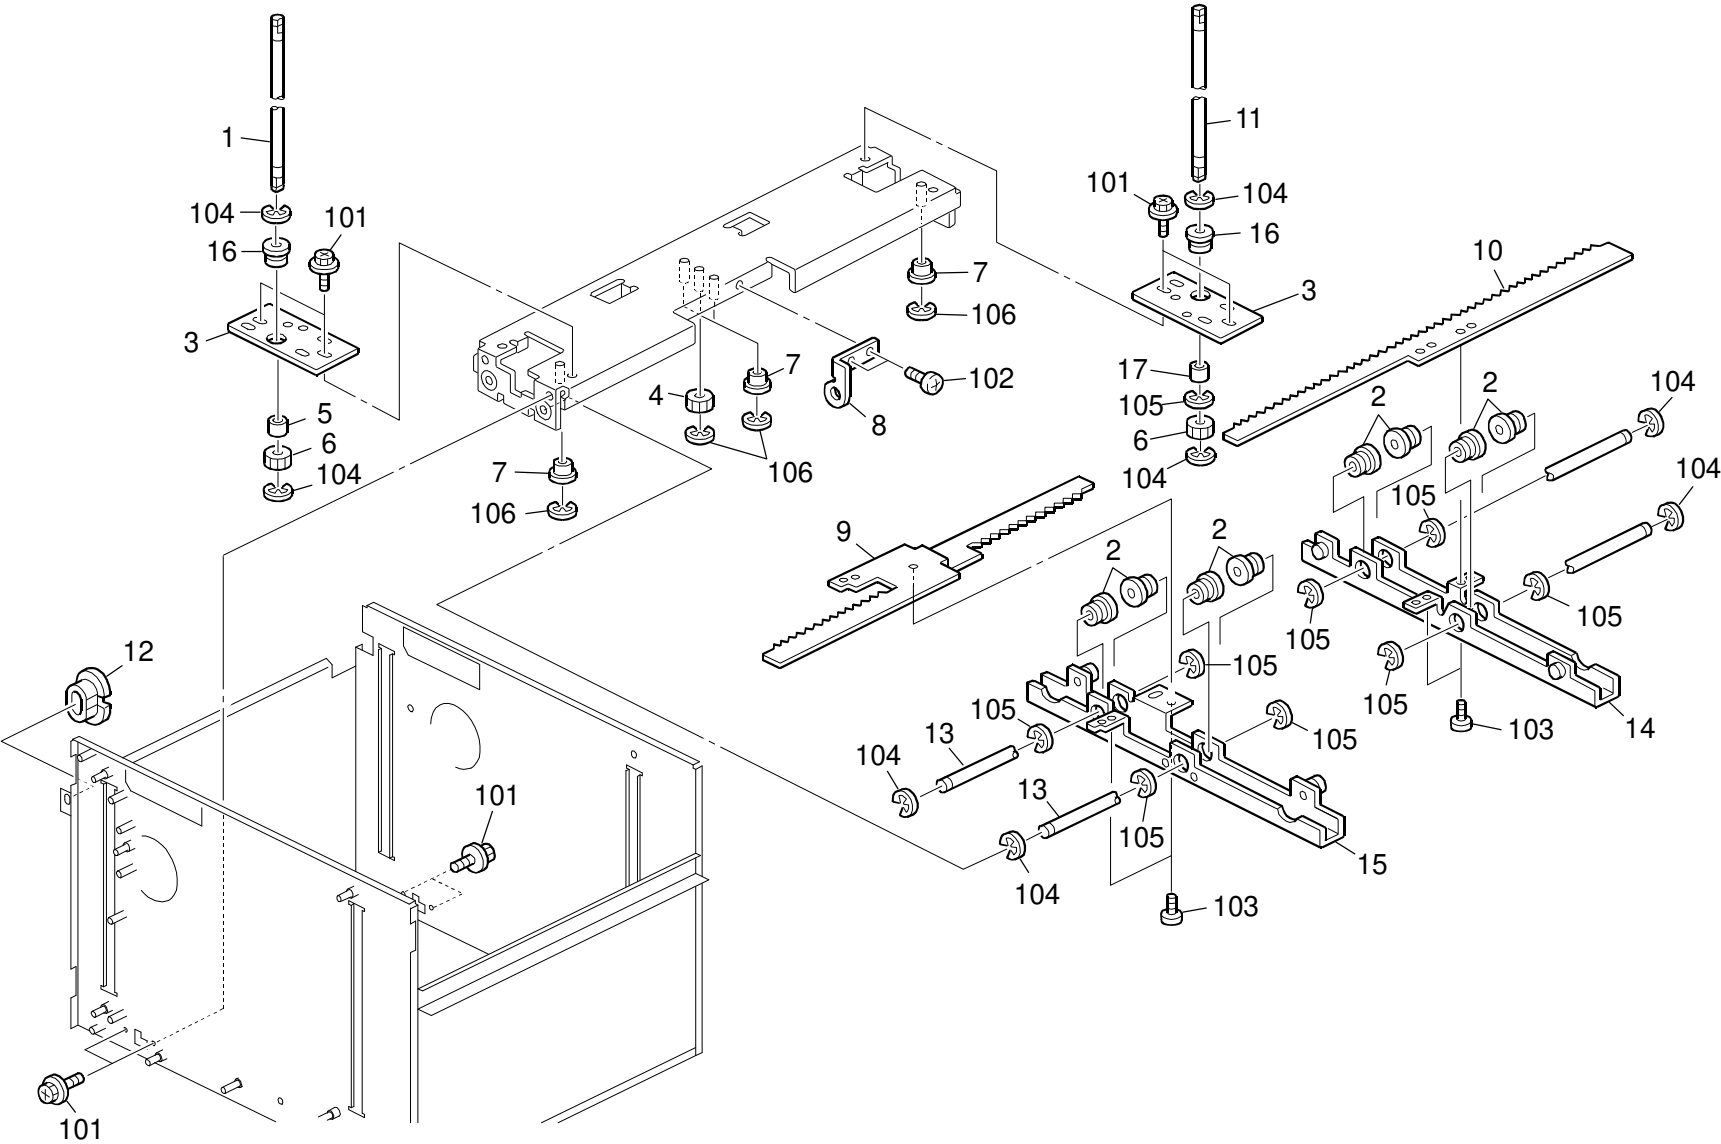


15.5TH PAPER TRAY 7 (B834)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B834 3320	Coupling Shaft - Front	1
2	B834 3350	Bushing - 6x10x6.5	10
3	B834 3318	Plate:Lower	2
4	B834 3315	Gear - 13Z	2
5	H072 2220	Spacer - M6x10	1
6	B834 3316	Gear - 13Z	2
7	B834 3312	Collar	3
8	B834 3314	Shaft Holder - Lower	1
9	B834 3313	Rack - Front:Lower	1
10	B834 4696	Rack - Rear Lower	1
11	B834 3346	Coupling Shaft - Rear	1
12	B234 6141	Positioning Sleeve - Inner Back	1
13	B834 3111	Side Fence Shaft - Lower	1
14	B834 3309	Side Fence Bracket - Lower Rear	1
15	B834 3306	Side Fence Bracket - Lower Front	1
16	AA08 2101	Bushing - 6x10x6	2
17	A376 1295	Spacer - M6x10x5	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4006N	Tapping Screw - 4x6	
102	0353 0060N	Bind Screw - M3x6	
103	0453 4006N	Binding Self Tapping Screw:4x6	
104	0720 0040E	Retaining Ring - M4	
105	0720 0080E	Retaining Ring - M8	
106	0720 0030E	Retaining Ring - M3	

16.5TH PAPER TRAY 8 (B834)

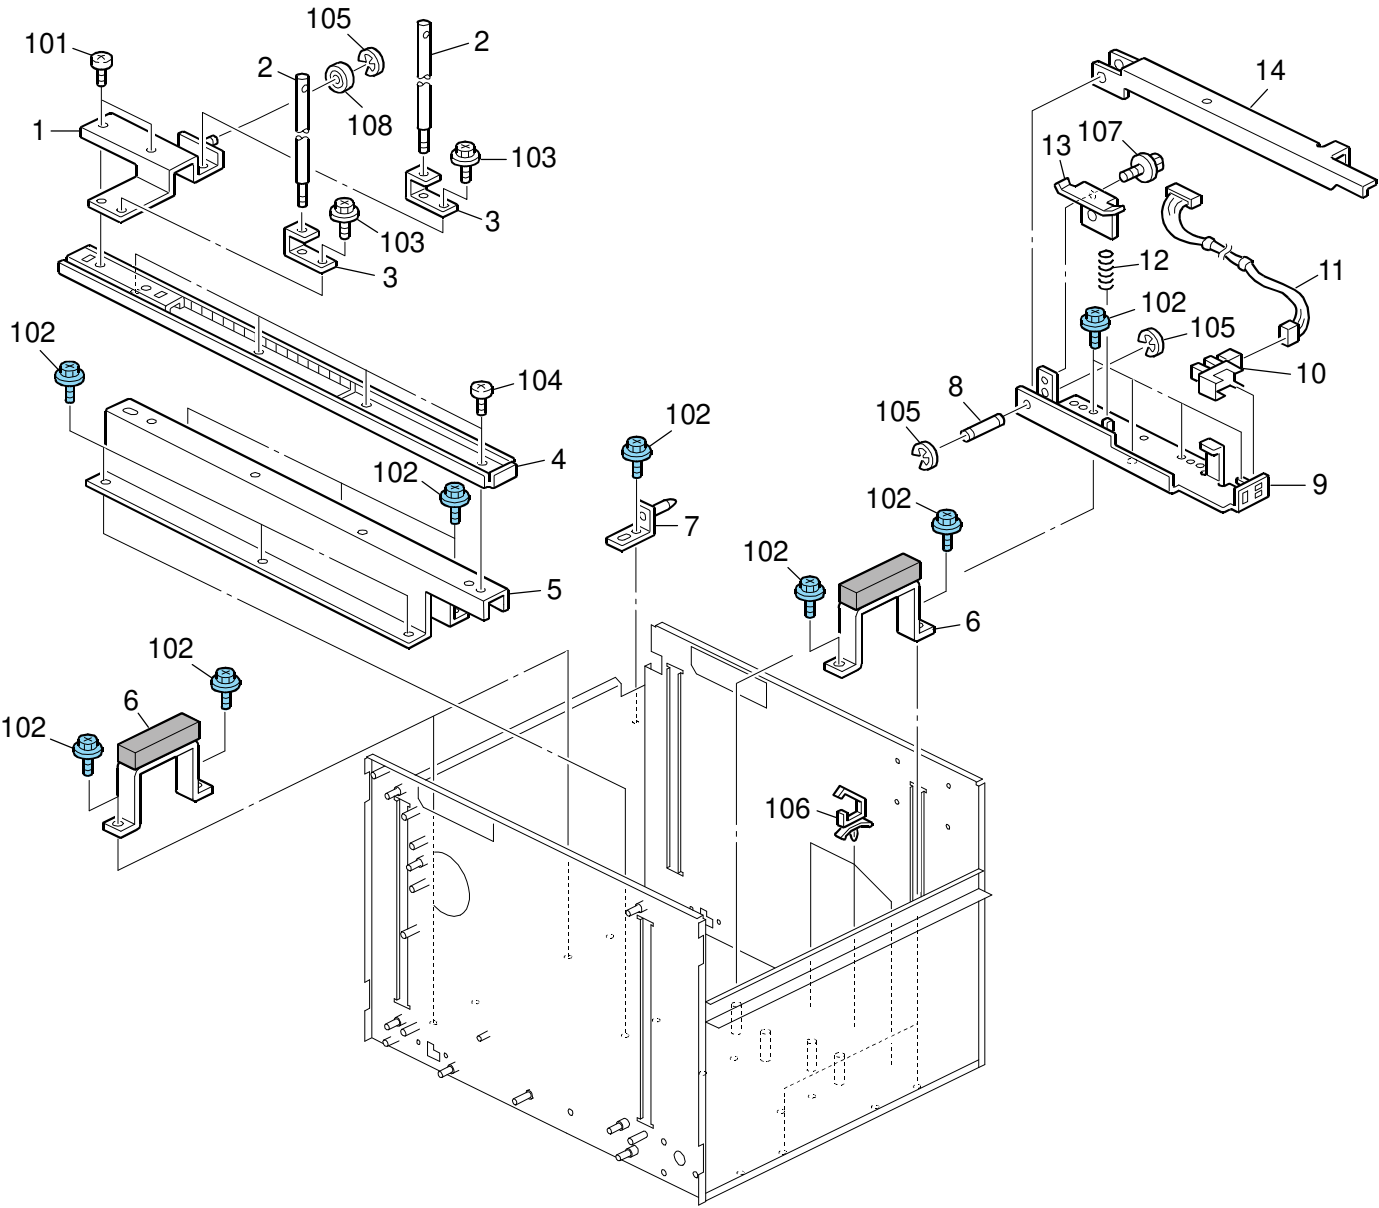


16.5TH PAPER TRAY 8 (B834)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B834 4596	End Fence Slide Bracket	1
2	B834 4585	End Fence Shaft	2
3	B834 4584	End Fence Shaft Holder	2
4	B834 3065	Slide Rail - End Fence	1
5	B834 4582	End Fence Base	1
6	B834 2715	Tray Cushion Holder	2
7	B834 4027	Positioning Pin Bracket	1
8	B834 4595	Contact Point Shaft - Long	1
9	B834 4593	Paper Size Sensor Bracket - Long	1
10	AW02 0160	Paper Feed Sensor	1
11	B834 5334	Harness - Tray Inner	1
12	G052 1518	Spring - Lock Lever	1
13	B834 3169	Paper Size Sensor Plate	1
14	B834 4594	Shielding Plate - Long	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0453 3006N	Tapping Screw - M3x6	
102	0454 4006Q	Tapping Screw:4x6	
103	0451 4006N	Tapping Screw - 4x6	
104	0453 4006N	Binding Self Tapping Screw:4x6	
105	0720 0040E	Retaining Ring - M4	
106	1105 0511	Harness Clamp - LWS-0306ZC	
107	0451 4008N	Tapping Screw:4x8	
108	0740 3506	Ball Bearing - 6x12x4 mm	

17.PAPER FEED SECTION 1 (B834)

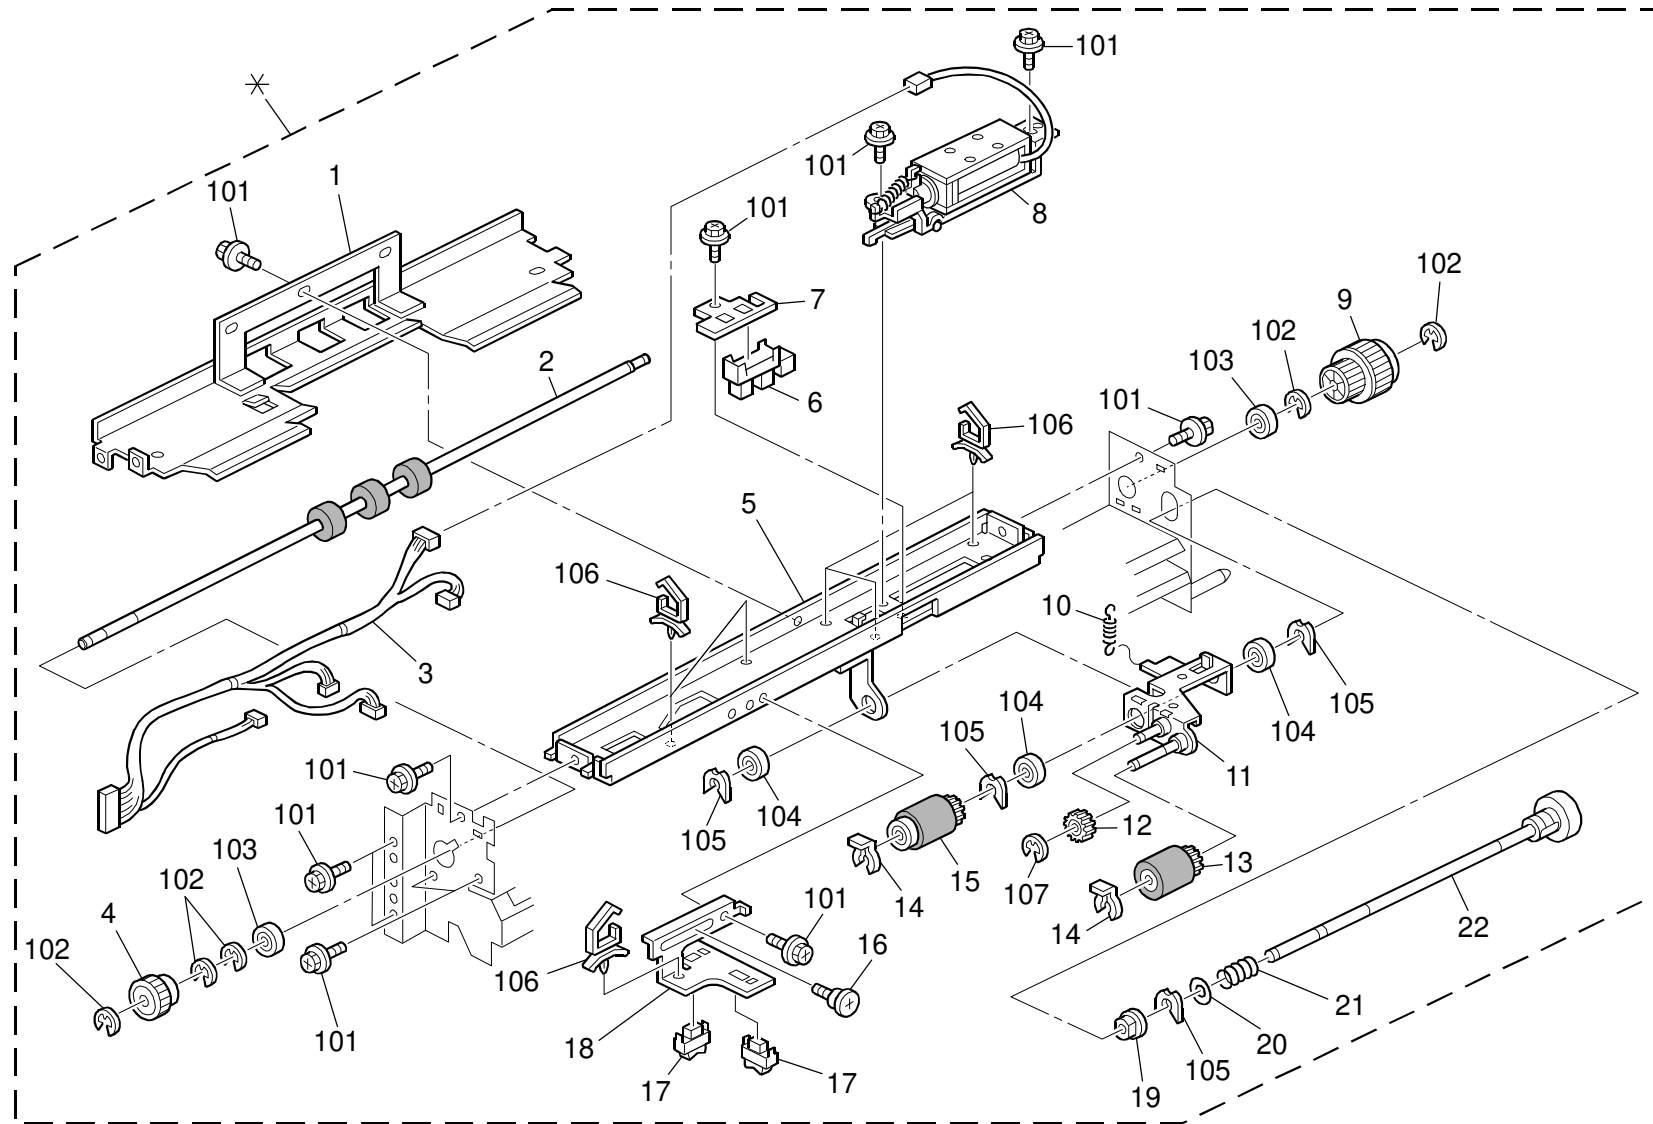


17.PAPER FEED SECTION 1 (B834)

Index No.	Part No.	Description	Q'ty Per Assembly
*	B834 2500	Paper Feed Unit	1
1	B834 2520	Feed Guide Plate	1
2	AF02 1410	Transport Roller	1
3	B832 5311	Harness - Paper Feed Unit	1
4	AB01 1478	Gear - 18Z	1
5	B832 2571	Stay:Feed:Peen	1
6	AW02 0145	Photointerruptor:Flat	1
7	B511 2677	Sensor Bracket	1
8	B832 2578	DC Solenoid 24V	1
9	AB01 7724	Gear - 23Z/28Z	1
10	AA06 6677	Tension Spring	1
11	B832 2574	Pickup Arm	1
12	5447 2706	Gear - 15T	1
13	AF03 0080	Paper Feed Roller:Pickup	1
14	AA10 0014	Retaining Ring C - Separate	2
15	AF03 1081	Paper Feed Roller:Feed:Manual Feed	1
16	AA14 3812	Screw - Scale	1
17	AW01 0122	Paper Feed Sensor	2
18	B832 2577	Paper Feed Sensor Bracket	1
19	AA08 3015	Roller Clutch	1
20	B132 4119	Spacer:Gear:Idler	1
21	AA06 3204	Compression Spring	1
22	B832 2585	Feed Roller Shaft	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	0720 0060E	Retaining Ring - M6	
103	0742 3808	Ball Bearing - 8x16x5	
104	0741 3708	Ball Bearing - 8x12x3.5mm	
105	0805 0088	Retaining Ring - M6	
106	1105 0511	Harness Clamp - LWS-0306ZC	
107	0720 0080E	Retaining Ring - M8	

18.PAPER FEED SECTION 2 (B834)

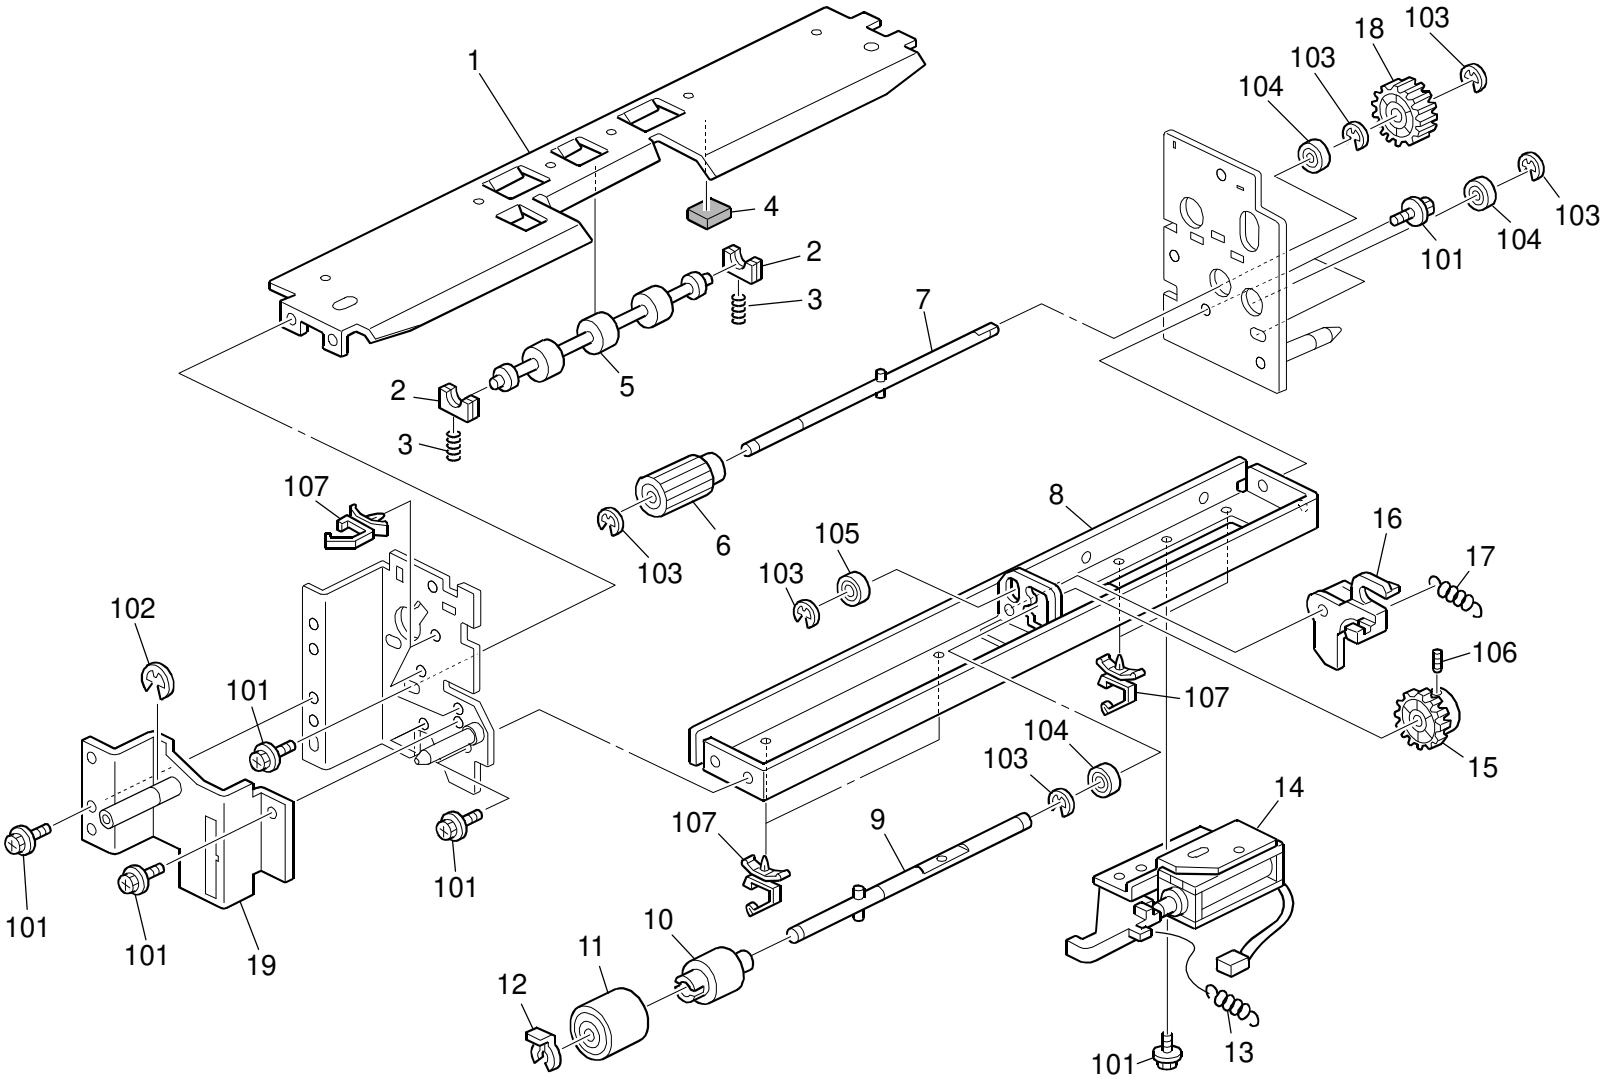


18.PAPER FEED SECTION 2 (B834)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B832 2535	Reverse Guide Plate	1
2	AA08 4059	Ball Bearing Holder	2
3	B833 2565	Compression Spring	2
4	A229 2692	Damping Insulation	1
5	B834 2568	Transport Roller - Driven	1
6	AB01 1392	Drive Reverse Gear - 24z	1
7	B234 6222	Reverse Drive Shaft	1
8	B832 2541	Stay	1
9	B234 6223	Driven Reverse Shaft	1
10	B234 6300	Torque Limiter	1
11	AF03 2080	Paper Feed Roller:Separate	1
12	AA10 0014	Retaining Ring C - Separate	1
13	AA06 0575	Release Spring	1
14	B832 2558	DC Solenoid 24v	1
15	AB01 1591	Gear:Reverse	1
16	B303 2556	Reverse Pressure Lever	1
17	B833 2567	Tension Spring	1
18	BB01 3008	Gear - 31Z	1
19	B834 2631	Stay	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	0720 0060E	Retaining Ring - M6	
103	0720 0040E	Retaining Ring - M4	
104	0741 3706	Ball Bearing - 6x10x3	
105	0741 3506	Ball Bearing - 6x12x4 mm	
106	0573 0030E	Hexagon Headless Set Screw - M3x3	
107	1105 0511	Harness Clamp - LWS-0306ZC	

19.PAPER TRANSFER SECTION 1 (B834)

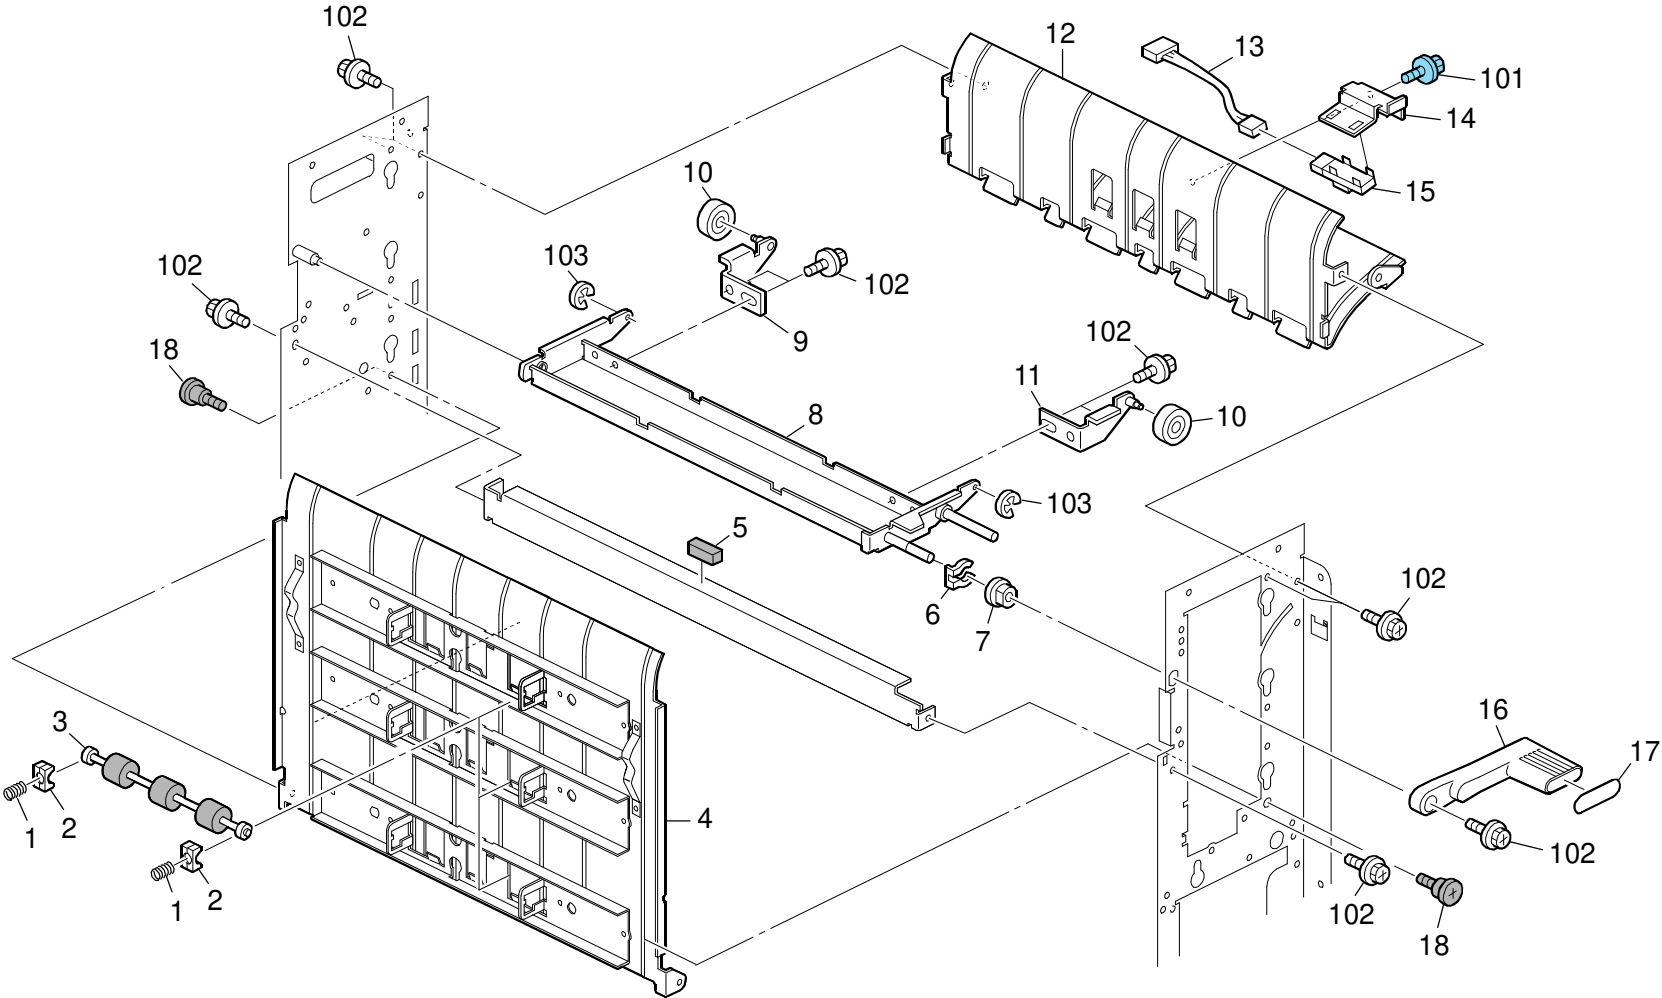


19.PAPER TRANSFER SECTION 1 (B834)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AA06 6675	Compression Spring	2
2	AA08 4059	Ball Bearing Holder	2
3	B834 2568	Transport Roller - Driven	1
4	B834 3620	Guide Plate: - Upper	1
5	B832 3909	Bracket Cushion	1
6	5215 2621	Snap Ring - M6	1
7	AA08 2070	Bushing - 8x16x7	1
8	B834 3837	Release Handle Stay	1
9	B834 3817	Roller Stay Bracket - Right	1
10	6754 2866	Roller - Positioning Guide	2
11	B834 3818	Roller Stay Bracket - Left	1
12	B834 3830	Manual Feed Guide Plate - Right	1
13	B834 5320	Harness - Sensor 4T6T	1
14	B834 3831	Paper Feed Sensor Bracket	1
15	AW01 0118	Paper Feed Sensor	1
16	B834 3899	Lever - Misfeed Removal	1
17	B303 1306	Decal - Instruction	1
18	AA14 3810	Development Cover Screw	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 4006Q	Tapping Screw:4x6	
102	0451 4008N	Tapping Screw:4x8	
103	0720 0030E	Retaining Ring - M3	

20.PAPER TRANSFER SECTION 2 (B834)

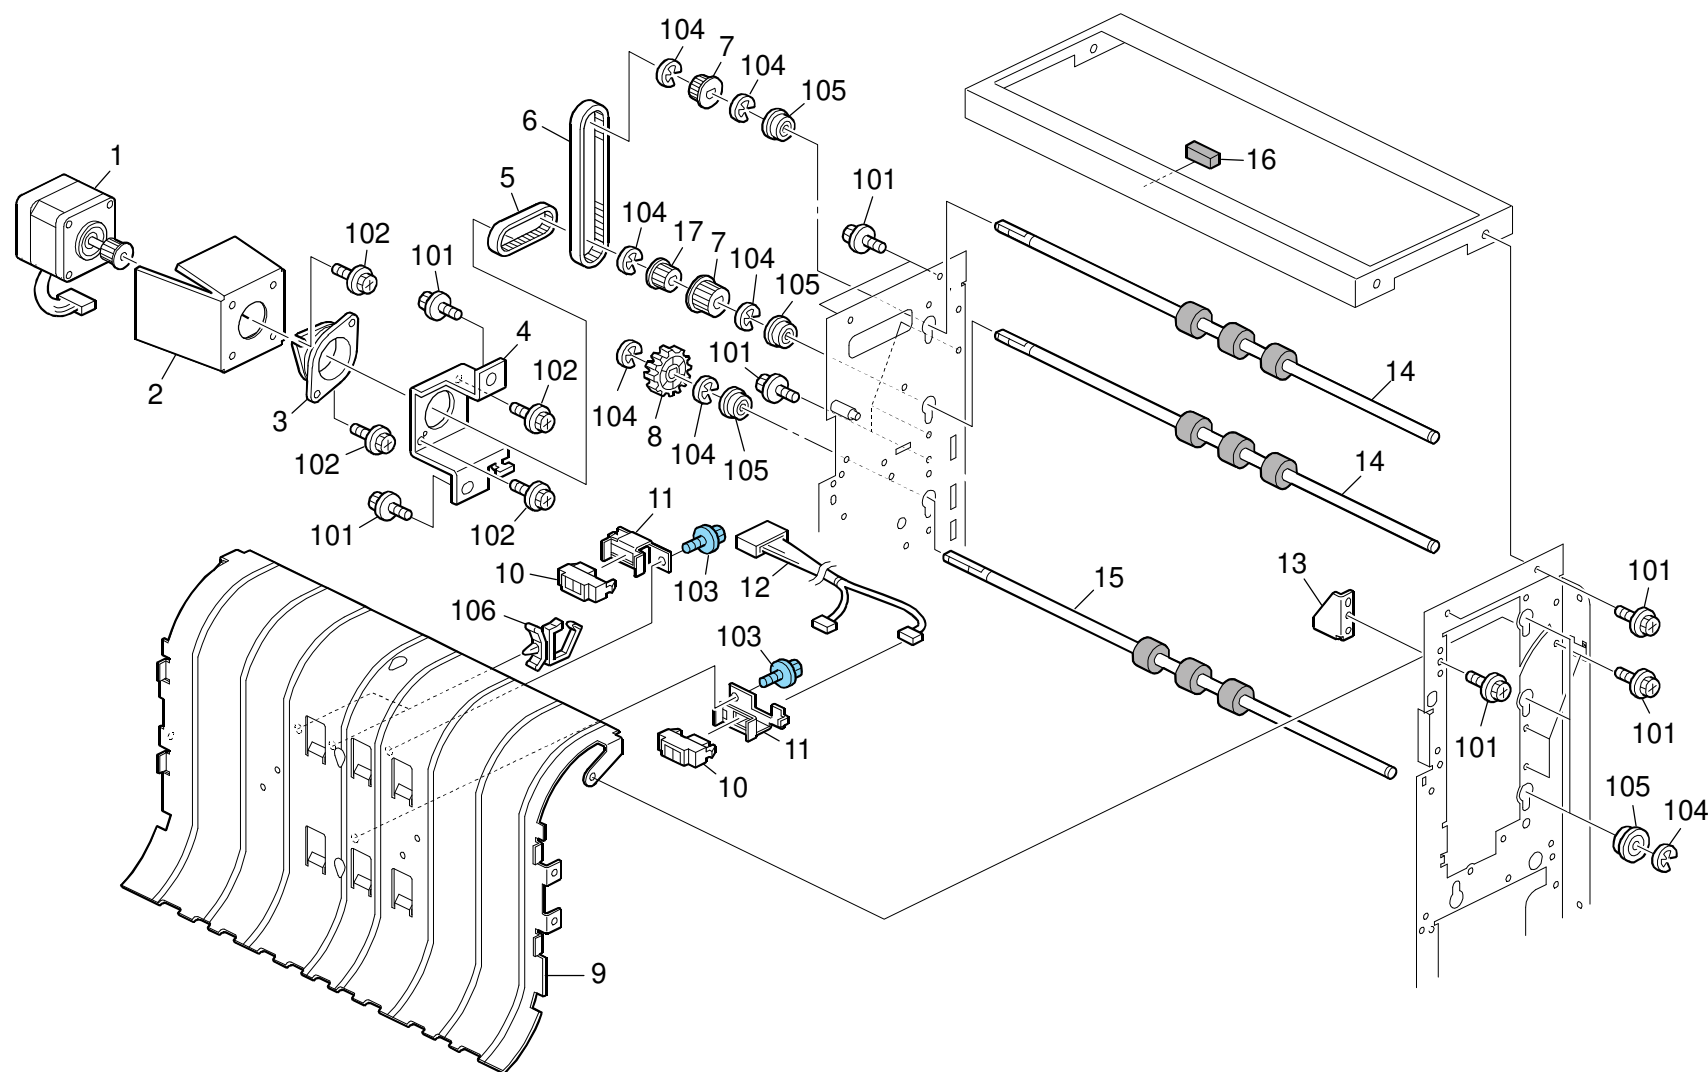


20.PAPER TRANSFER SECTION 2 (B834)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AX04 0158	Stepper Motor DC2.64V 6.3W	1
2	B832 3510	Heat Sink	1
3	A232 4666	Cushion - Stepper Motor	1
4	B835 3972	Stepper Motor Bracket	1
5	B834 1648	Timing Belt - B60S2M120	1
6	B834 1646	Timing Belt - B60S2M206	1
7	B234 6506	Timing Pulley - 30T	2
8	AB01 3654	Gear - 30Z	1
9	B834 3841	Guide Plate - Upper Right	1
10	AW01 0122	Paper Feed Sensor	2
11	B834 3883	Paper Feed Sensor Bracket	2
12	B834 5321	Harness - Sensor 4T Upper Lower	1
13	B834 3836	Stopper Stay	1
14	B834 3803	Transport Drive Roller - CCW	1
15	B834 3806	Transport Drive Roller - No.4 CCW	2
16	B832 3909	Bracket Cushion	1
17	B234 6507	Timing Pulley - 25T	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	0451 4006N	Tapping Screw - 4x6	
103	0454 4006Q	Tapping Screw:4x6	
104	0720 0060E	Retaining Ring - M6	
105	0742 3808	Ball Bearing - 8x16x5	
106	1105 0511	Harness Clamp - LWS-0306ZC	

21.PAPER TRANSFER SECTION 3 (B834)

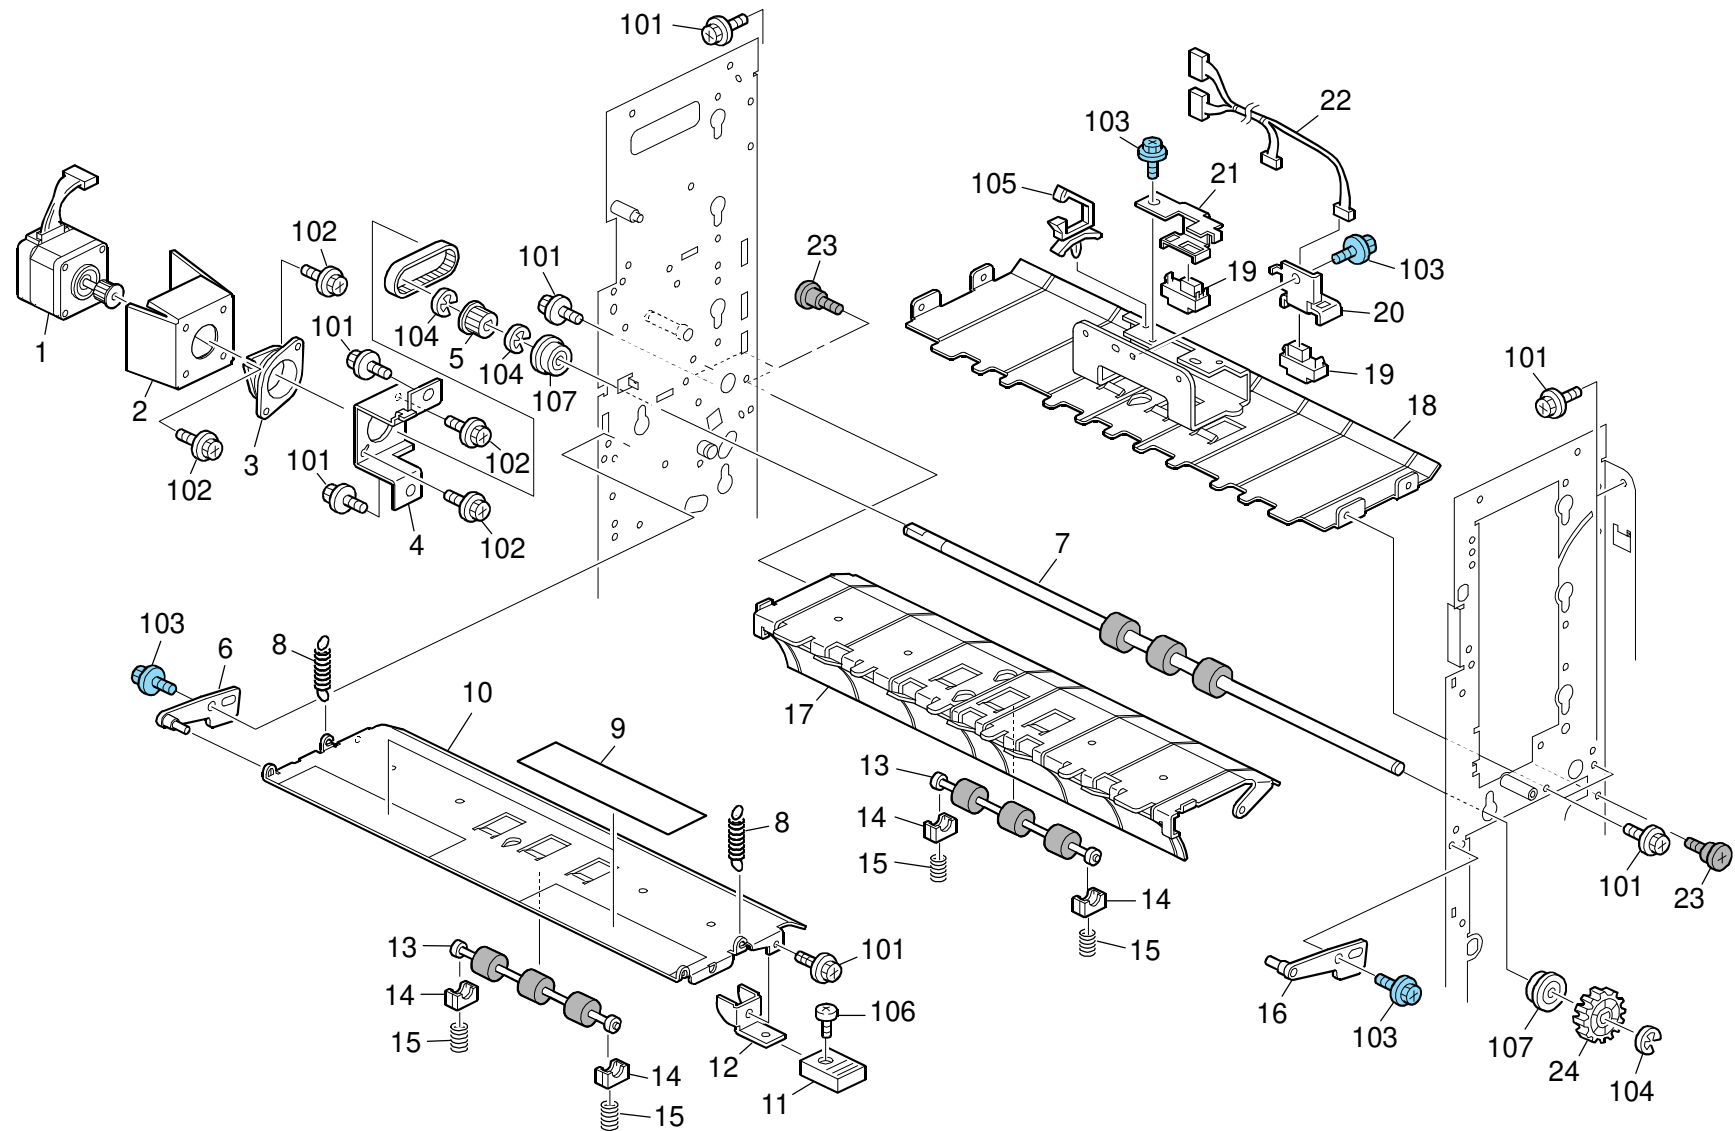


21.PAPER TRANSFER SECTION 3 (B834)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AX04 0158	Stepper Motor DC2.64V 6.3W	1
2	B832 3510	Heat Sink	1
3	A232 4666	Cushion - Stepper Motor	1
4	B835 3972	Stepper Motor Bracket	1
5	B234 6507	Timing Pulley - 25T	1
6	B834 3669	Contact Point Bracket - Rear	1
7	B834 3805	Transport Drive Roller - Exit	1
8	AA06 6680	Spring	2
9	B834 3867	Positioning Sensor Sheet	1
10	B834 3920	Guide Plate - Middle Lower	1
11	A353 2243	Lever Knob	1
12	B511 3637	Lever	1
13	B834 2568	Transport Roller - Driven	2
14	AA08 4059	Ball Bearing Holder	4
15	AA06 6675	Compression Spring	4
16	B834 3670	Contact Point Bracket	1
17	B834 3630	Guide Plate - Middle Lower	1
18	B834 3880	Entrance Guide Plate - Middle Upper	1
19	AW01 0122	Paper Feed Sensor	2
20	B834 3828	Paper Feed Sensor Bracket	1
21	B834 3883	Paper Feed Sensor Bracket	1
22	B834 5322	Harness - 5t Transport Middle	1
23	AA14 3810	Development Cover Screw	2
24	AB01 4152	Gear - 32Z	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	0451 4006N	Tapping Screw - 4x6	
103	0454 4006Q	Tapping Screw:4x6	
104	0720 0060E	Retaining Ring - M6	
105	1105 0511	Harness Clamp - LWS-0306ZC	
106	0313 0040N	Screw:M3x4	
107	0742 3808	Ball Bearing - 8x16x5	

22.PAPER TRANSFER SECTION 4 (B834)

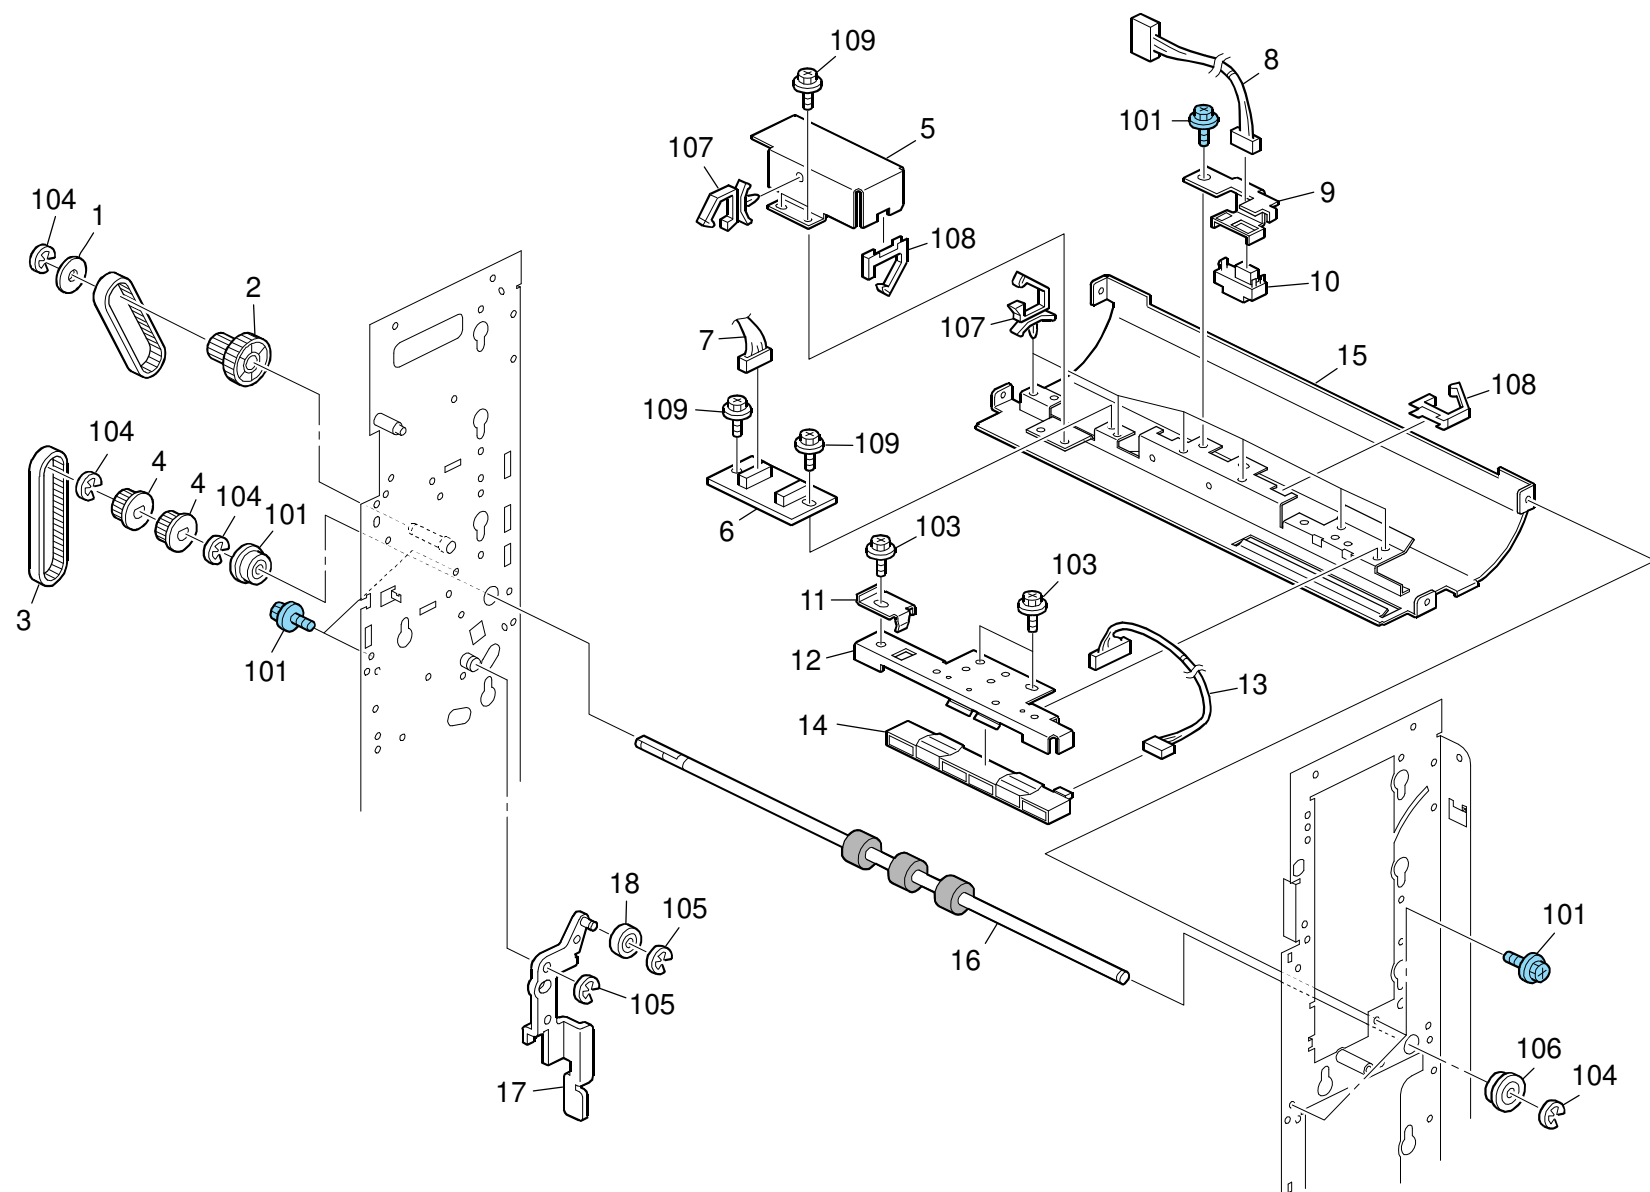


22.PAPER TRANSFER SECTION 4 (B834)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AA13 2205	Spacer - Timing Belt	1
2	B834 3885	Gear/pulley - 31Z/31T	1
3	B834 1645	Timing Belt - B60S2M220	1
4	B234 6506	Timing Pulley - 30T	2
5	B834 3835	Cover - Positioning Sensor	1
6	B234 5280	PCB CRB	1
7	B834 5341	Harness - Interface CRB	1
8	B834 5323	Harness - Sensor Exit	1
9	B834 3883	Paper Feed Sensor Bracket	1
10	AW01 0122	Paper Feed Sensor	1
11	B834 3675	Registration Sensor Holder Bracket	1
12	B832 3685	Sensor Bracket	1
13	B834 5350	Harness - Sensor	1
14	B234 2750	Contact Image Sensor	1
15	B834 3930	Guide Plate - Middle Upper	1
16	B834 3806	Transport Drive Roller - No.4 CCW	1
17	B834 3819	Link	1
18	6754 2866	Roller - Positioning Guide	1
19	B834 1646	Timing Belt - B60S2M206	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 4006Q	Tapping Screw:4x6	
102	0451 3008N	Tapping Screw - M3x8	
103	0451 4008N	Tapping Screw:4x8	
104	0720 0060E	Retaining Ring - M6	
105	0720 0040E	Retaining Ring - M4	
106	0742 3808	Ball Bearing - 8x16x5	
107	1105 0511	Harness Clamp - LWS-0306ZC	
108	1105 0522	Edge Saddle - Les0510	
109	0451 3006N	Tapping Screw - 3x6	

23.PAPER TRANSFER SECTION 5 (B834)

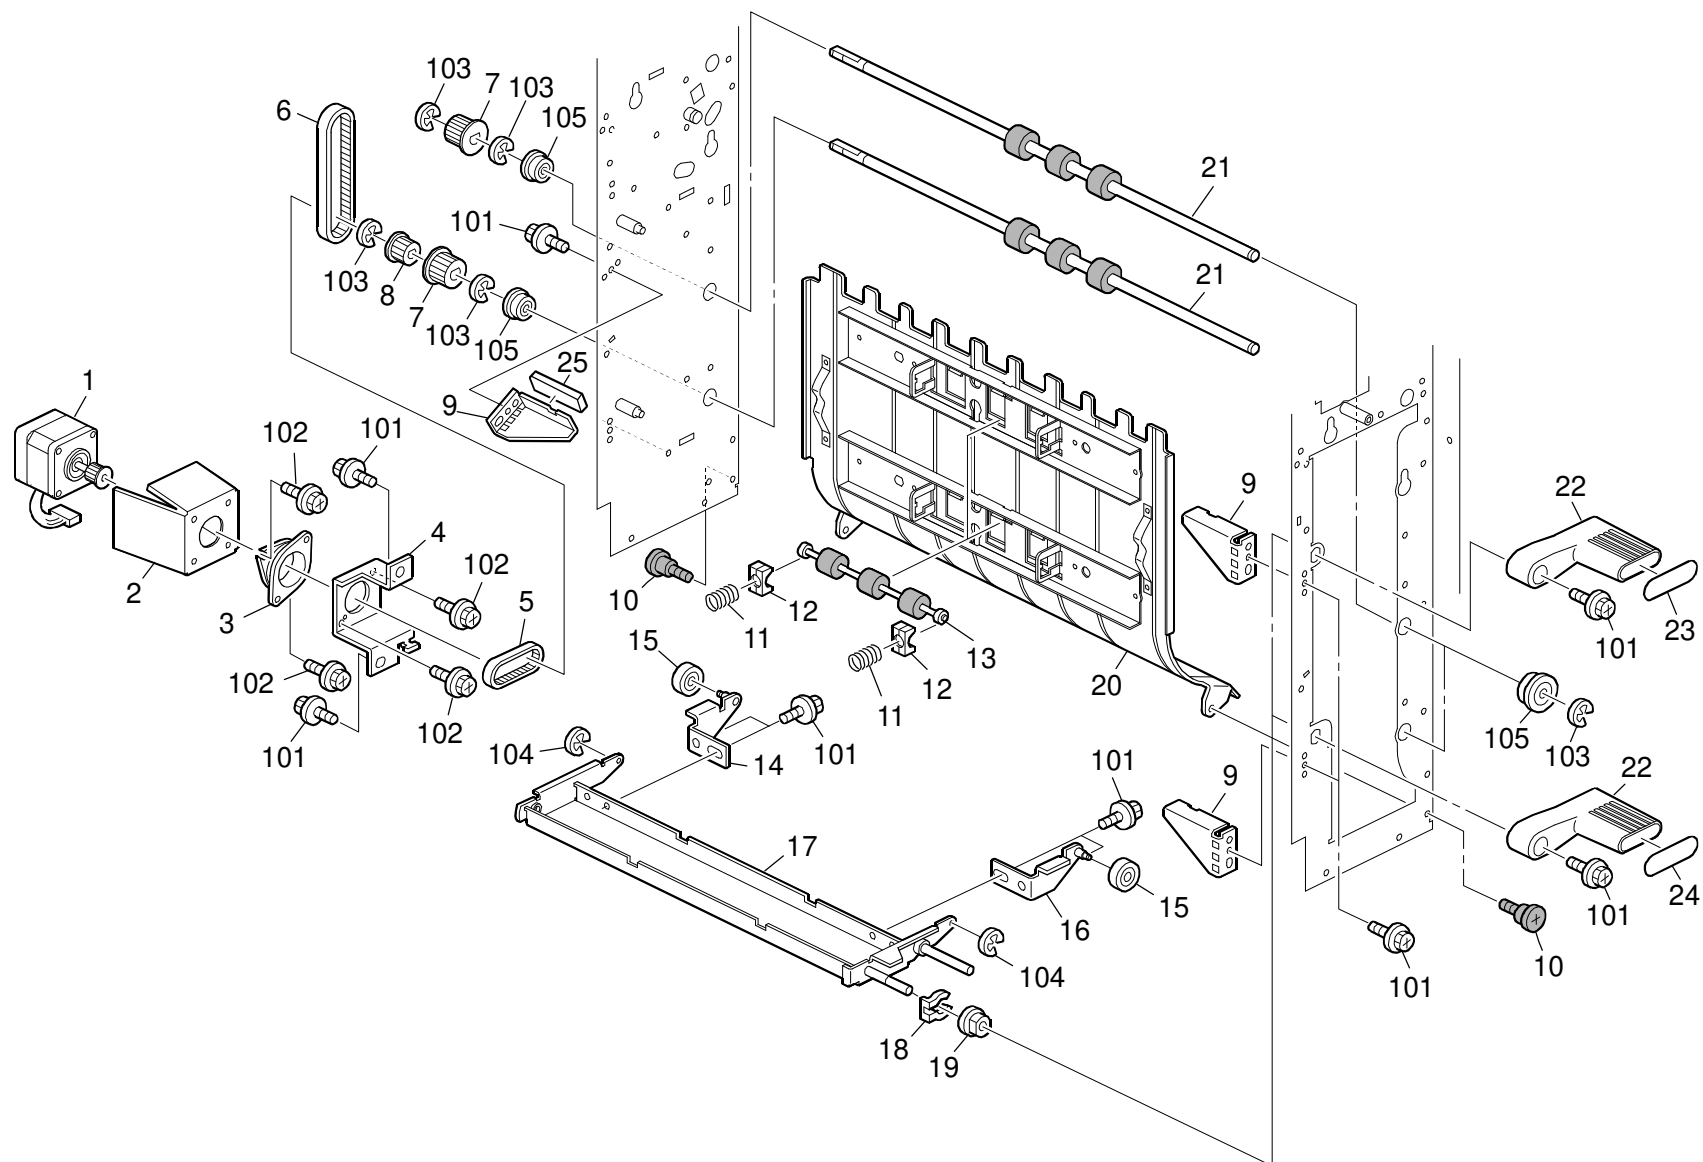


23.PAPER TRANSFER SECTION 5 (B834)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AX04 0158	Stepper Motor DC2.64V 6.3W	1
2	B832 3510	Heat Sink	1
3	A232 4666	Cushion - Stepper Motor	1
4	B835 3972	Stepper Motor Bracket	1
5	B834 1648	Timing Belt - B60S2M120	1
6	B834 1647	Timing Belt - B60S2M260	1
7	B234 6506	Timing Pulley - 30T	2
8	B234 6507	Timing Pulley - 25T	1
9	B834 3836	Stopper Stay	3
10	AA14 3810	Development Cover Screw	2
11	AA06 6675	Compression Spring	4
12	AA08 4059	Ball Bearing Holder	4
13	B834 2568	Transport Roller - Driven	2
14	B834 3817	Roller Stay Bracket - Right	1
15	6754 2866	Roller - Positioning Guide	2
16	B834 3818	Roller Stay Bracket - Left	1
17	B834 3837	Release Handle Stay	1
18	5215 2621	Snap Ring - M6	1
19	AA08 2070	Bushing - 8x16x7	1
20	B834 3650	Guide Plate - Lower Left Lower	1
21	B834 3807	Transport Drive Roller - CW	2
22	B303 3682	Misfeed Removal Knob	2
23	B303 1307	Decal - Instruction	1
24	B834 1318	Decal - Display (U5)	1
25	B832 3909	Bracket Cushion	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	0451 4006N	Tapping Screw - 4x6	
103	0720 0060E	Retaining Ring - M6	
104	0720 0030E	Retaining Ring - M3	
105	0742 3808	Ball Bearing - 8x16x5	

24.PAPER TRANSFER SECTION 6 (B834)

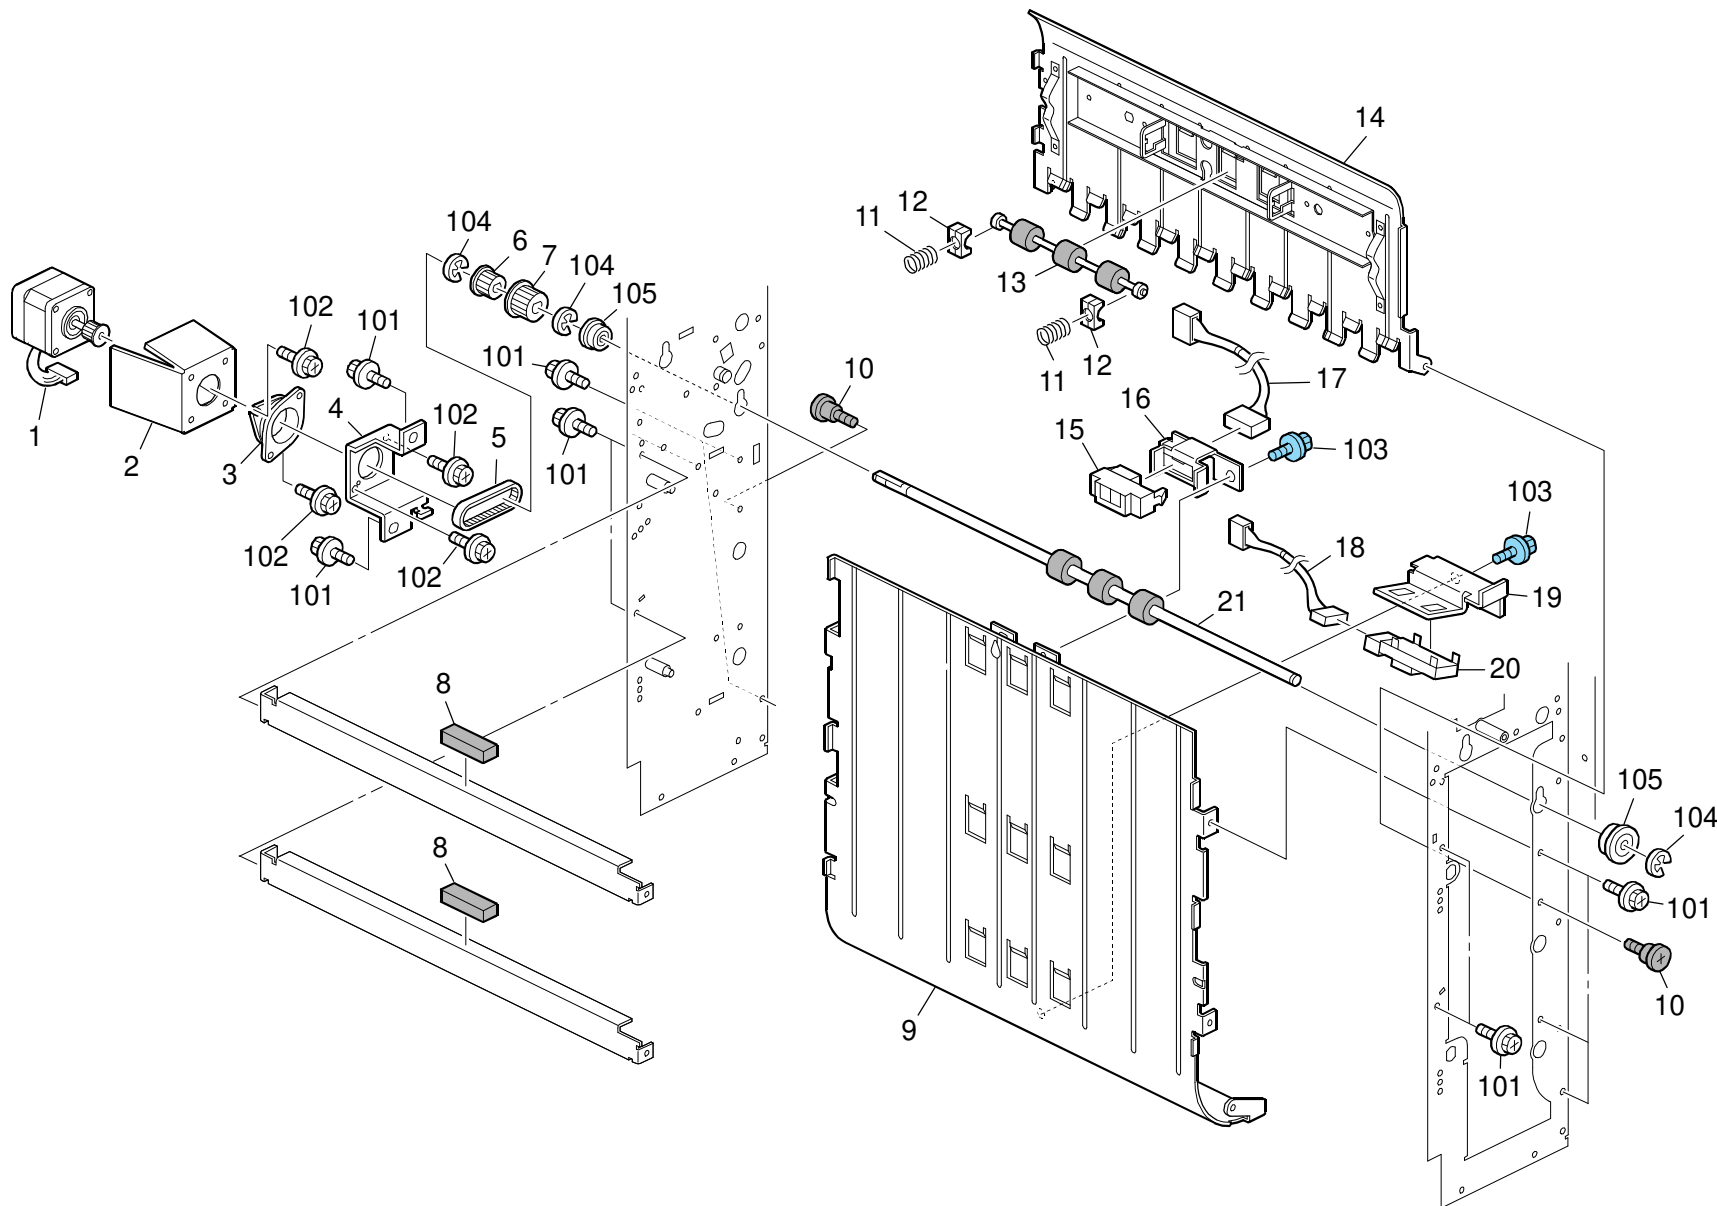


24.PAPER TRANSFER SECTION 6 (B834)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AX04 0158	Stepper Motor DC2.64V 6.3W	1
2	B832 3510	Heat Sink	1
3	A232 4666	Cushion - Stepper Motor	1
4	B835 3972	Stepper Motor Bracket	1
5	B834 1648	Timing Belt - B60S2M120	1
6	B234 6507	Timing Pulley - 25T	1
7	B234 6506	Timing Pulley - 30T	1
8	B832 3909	Bracket Cushion	2
9	B834 3842	Guide Plate - Lower Right	1
10	AA14 3810	Development Cover Screw	2
11	AA06 6675	Compression Spring	2
12	AA08 4059	Ball Bearing Holder	2
13	B834 2568	Transport Roller - Driven	1
14	B834 3640	Guide Plate - Lower Left Upper	1
15	AW01 0122	Paper Feed Sensor	1
16	B834 3883	Paper Feed Sensor Bracket	1
17	B834 5320	Harness - Sensor 4T6T	1
18	B834 5325	Harness - 6t Middle	1
19	B834 3825	Paper Feed Sensor Bracket	1
20	AW01 0118	Paper Feed Sensor	1
21	B834 3807	Transport Drive Roller - CW	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	0451 4006N	Tapping Screw - 4x6	
103	0454 4006Q	Tapping Screw:4x6	
104	0720 0060E	Retaining Ring - M6	
105	0742 3808	Ball Bearing - 8x16x5	

25.DRIVE SECTION (B834)

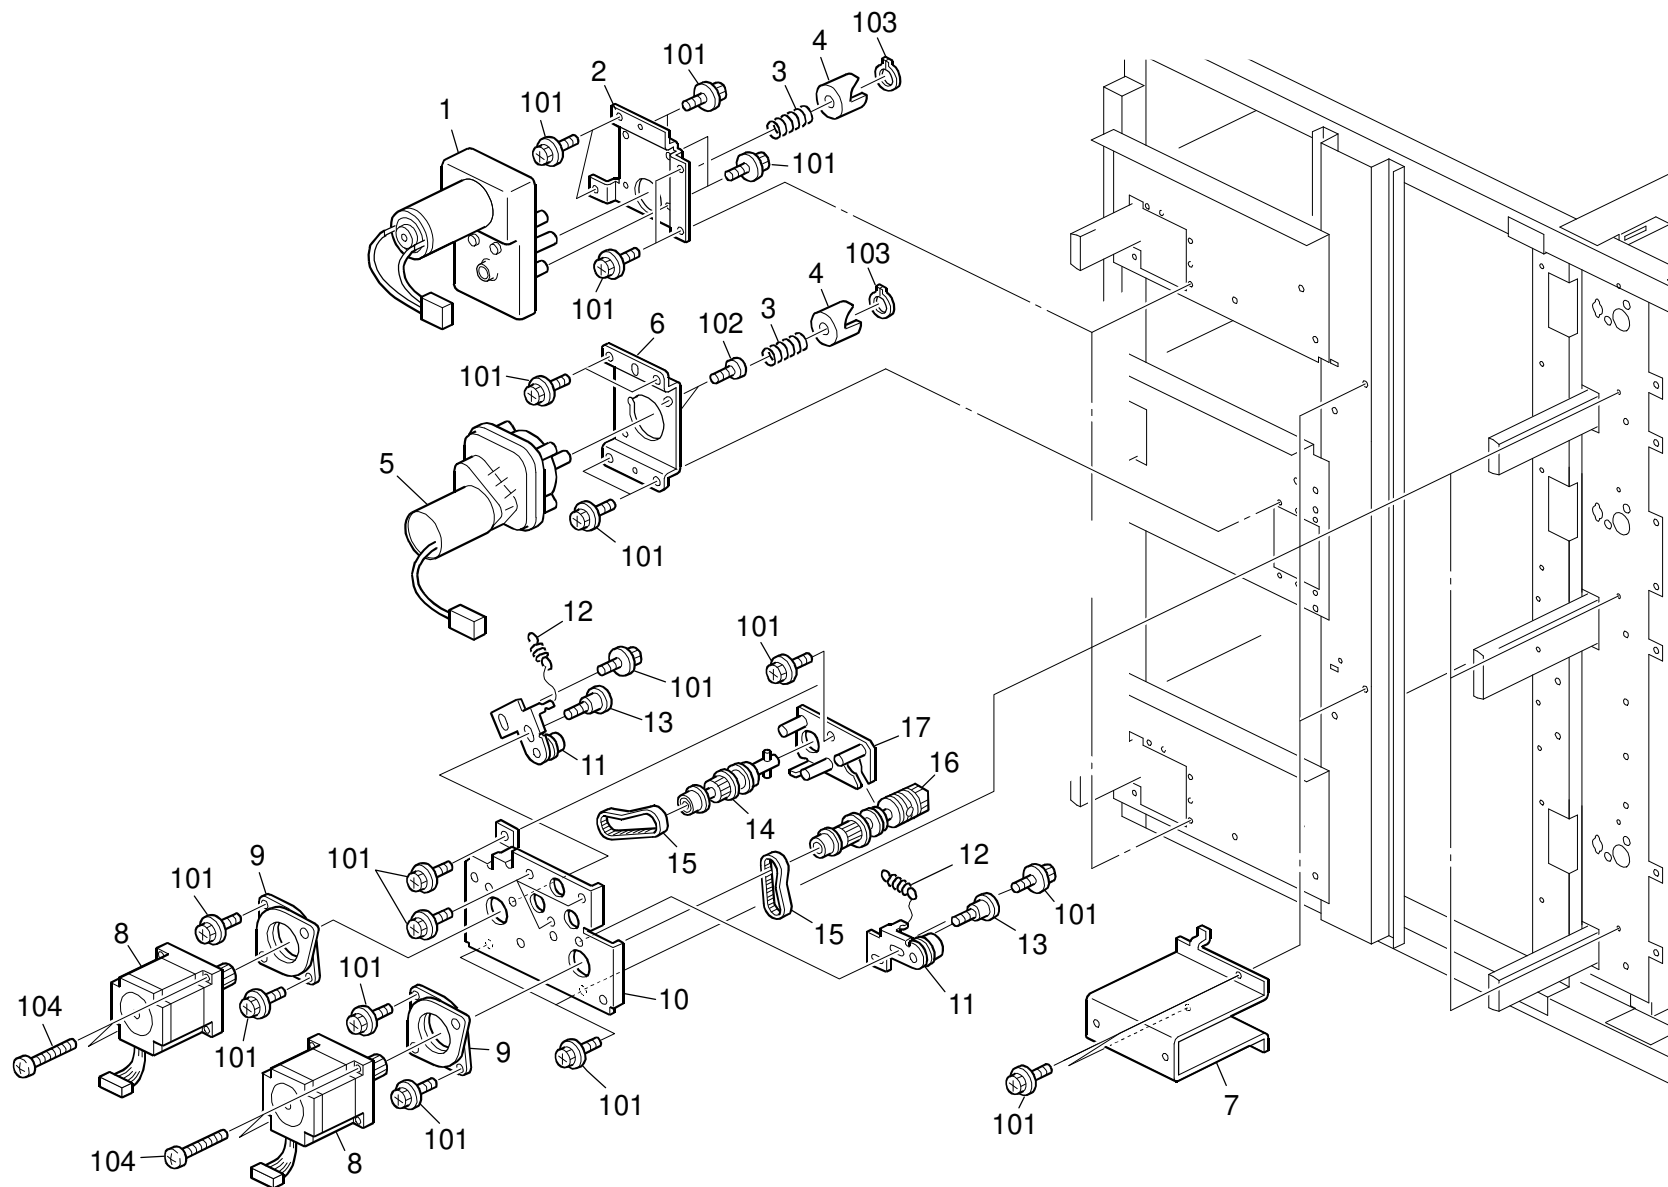


25.DRIVE SECTION (B834)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AX04 0231	DC Motor 24V 19.6W	2
2	B834 4387	Motor Bracket No.1	1
3	B834 4388	Compression Spring	2
4	B303 1185	Metal Joint	2
5	AX04 0229	DC Motor 24V 21.6W	1
6	B834 4887	Motor Bracket No.2	1
7	B834 1365	Rear Cover Bracket	1
8	AX04 0157	Stepper Motor DC1.68V 6.7W	1
9	AA16 1122	Motor Cushion	1
10	B834 1725	Paper Feed Unit Drive Bracket	1
11	B832 1750	Tension Bracket	2
12	B234 6508	Tension Spring	2
13	AA14 3562	Screw:M4:DIA6x1.2	2
14	B834 1740	Shaft	1
15	AA04 2550	Timing Belt - S2M138	2
16	B834 1730	Grip Drive Shaft	1
17	B834 1718	Bracket	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	0353 0060N	Bind Screw - M3x6	
103	0727 0080E	Retaining Ring - M8	
104	0314 0100N	Pan Head Screw:M4x10	

26.ELECTRICAL SECTION (B834)

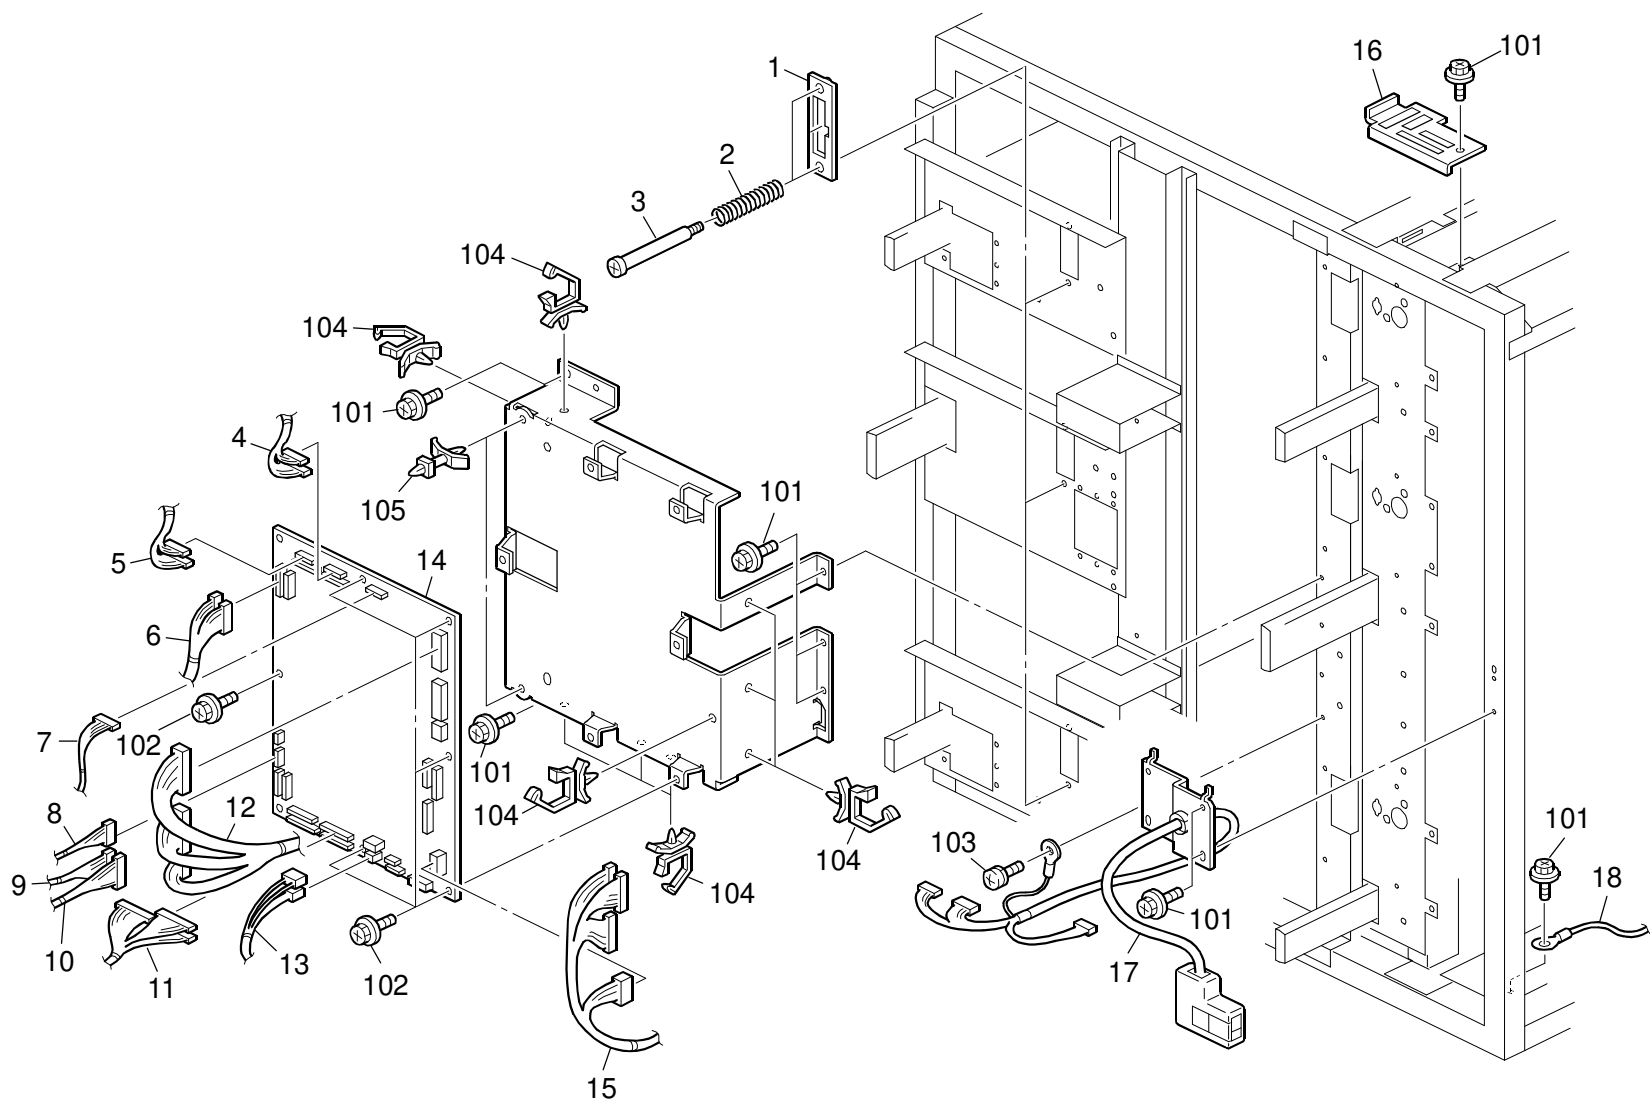

26.ELECTRICAL SECTION (B834)




Index No.	Part No.	Description	Q'ty Per Assembly
1	B834 4883	Drawer:Connector Bracket - Rear	1
2	B834 4875	Compression Spring:Drawer	2
3	B834 4874	Screw:Drawer:Connector	2
4	B834 5302	Harness - Interface 4T	1
5	B834 5303	Harness - Interface 5T	1
6	B834 5304	Harness - Interface 6T	1
7	B834 5301	Harness - DC Motor	1
8	B834 5307	Harness - Sensor Exit	1
9	B834 5305	Harness - Sensor Transport	1
10	B834 5306	Harness - Sensor 4T6T Middle	1
11	B834 5308	Harness - Interface 4T5T6T	1
12	B834 5300	Harness - Stepper Motor	1
13	B834 5311	Harness - Safety Switch	1
14	B834 5110	PCB Main	1
15	B834 5324	Harness - Interface Aleutian	1
16	B834 1165	Connector Bracket	1
17	B834 5190	Harness - Interface	1
18	B834 5342	Harness - Earth	1



Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008N	Tapping Screw:4x8	
102	0451 3008N	Tapping Screw - M3x8	
103	0950 4008Z	Philips Truss Screw - M4x8	
104	1105 0488	Harness Clamp	
105	1105 0194	PCB Stud	


27.FRAME (B834)

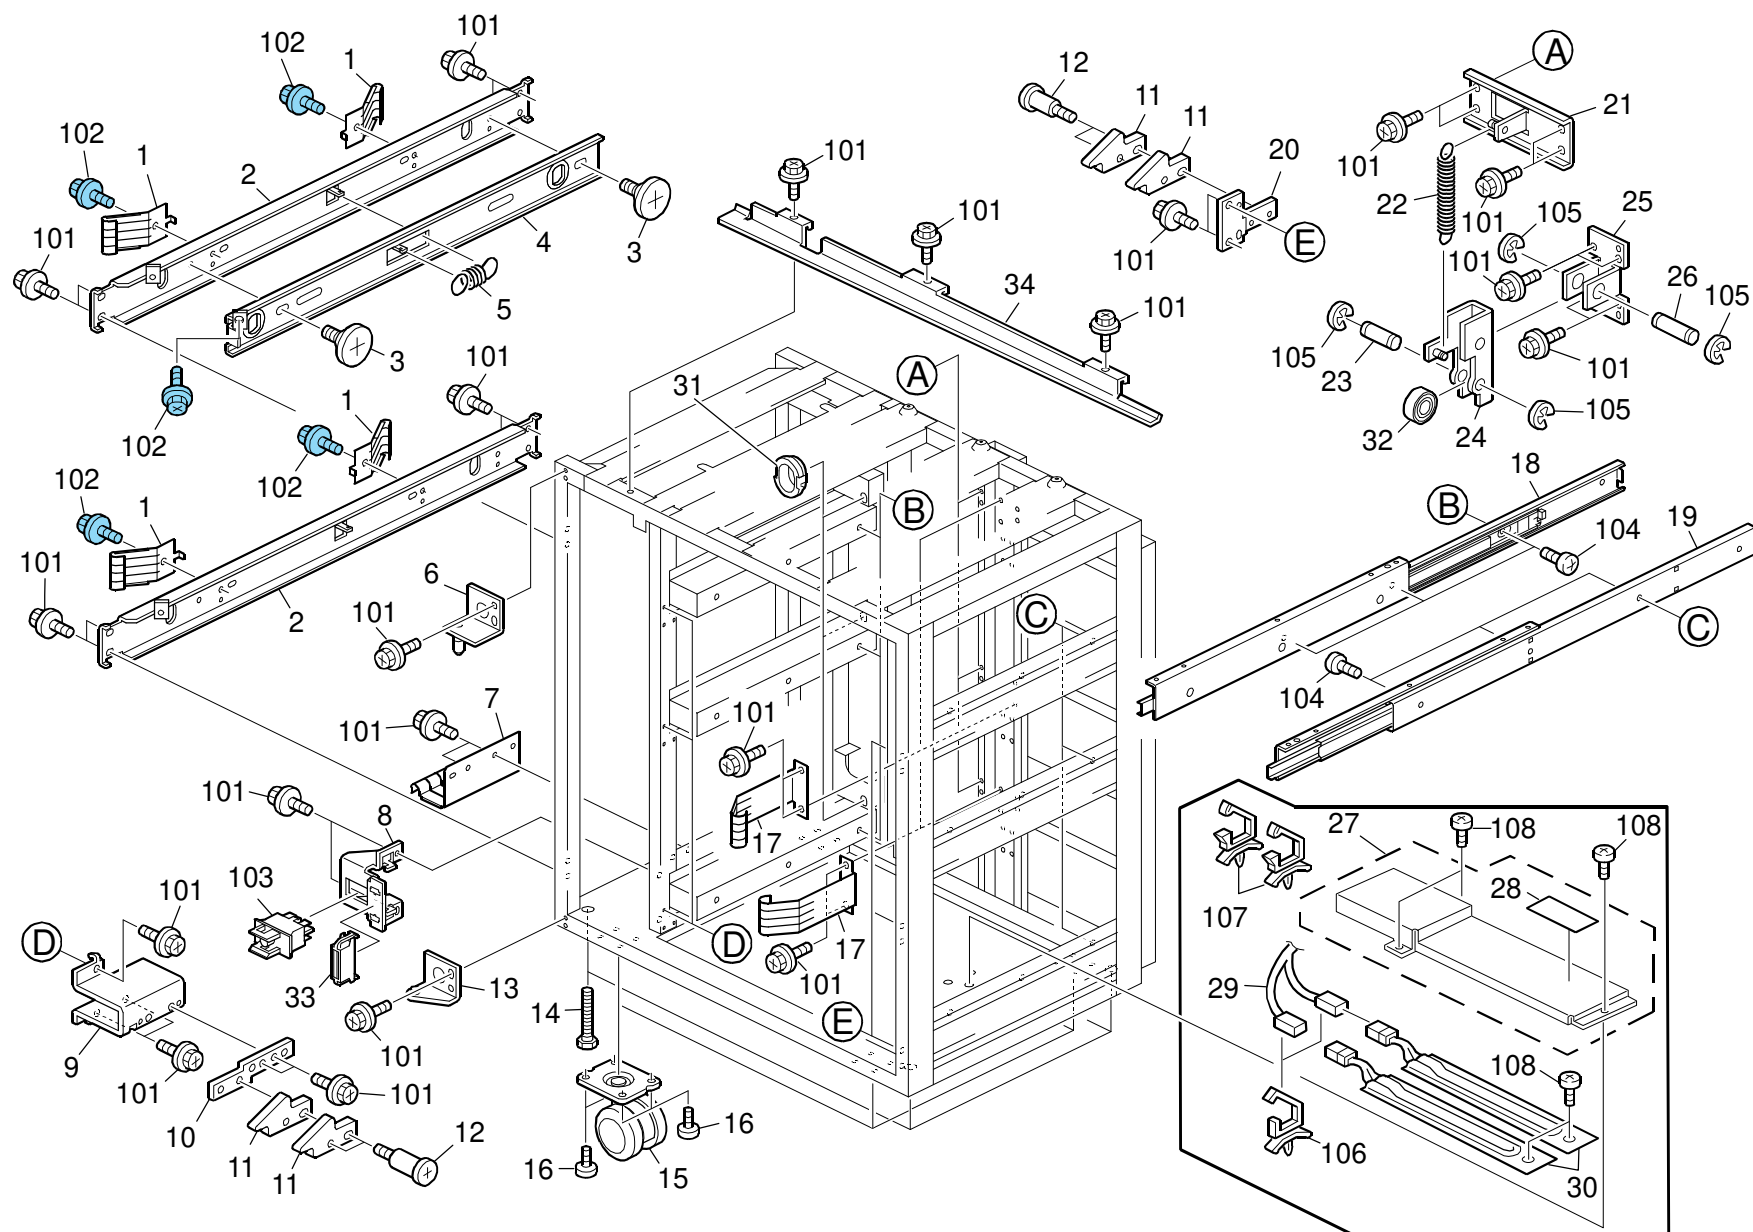







28.DECALS AND DOCUMENTS (B834)

1	3 4	6	7
2	5	8 9 10	

28.DECALS AND DOCUMENTS (B834)

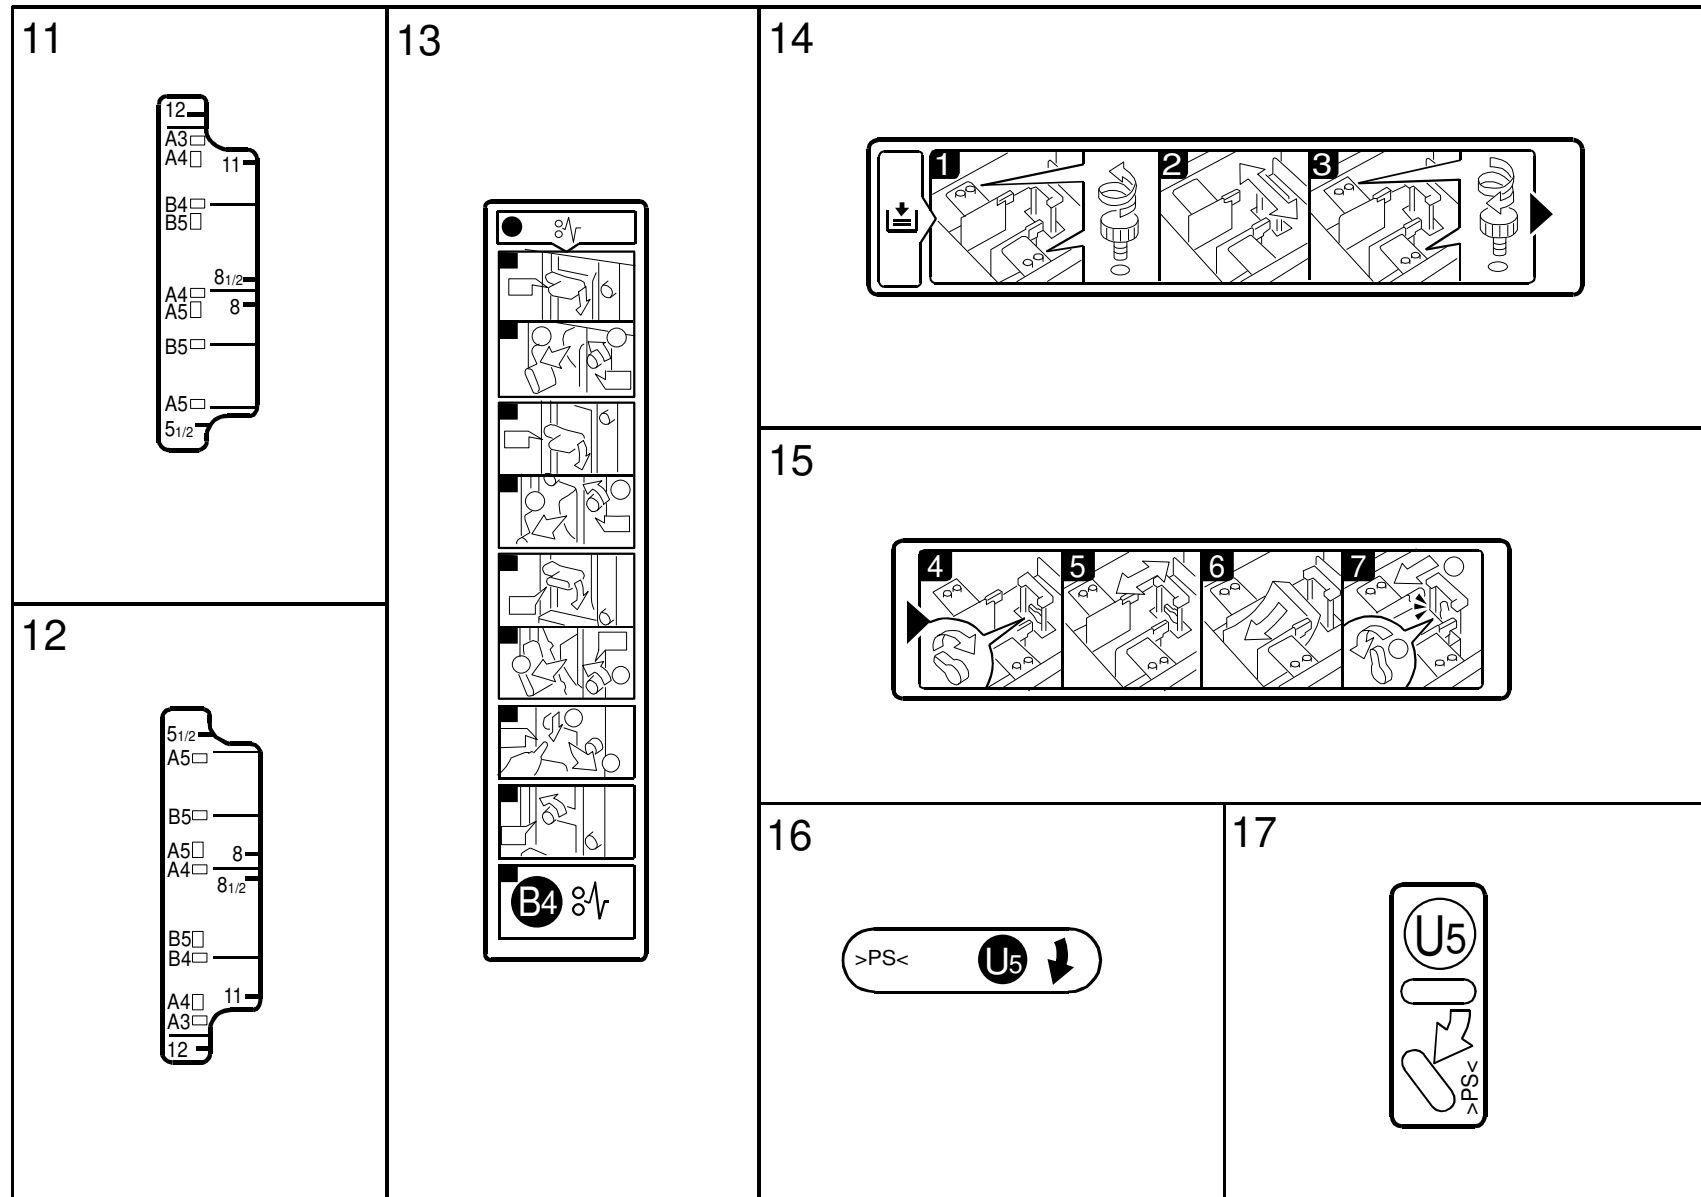

  28.DECALS AND DOCUMENTS (B834)

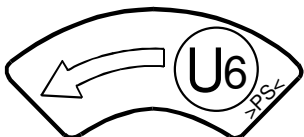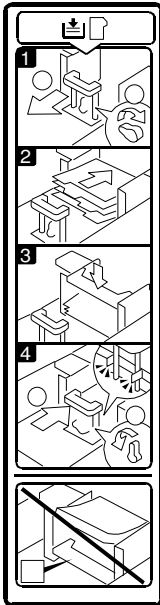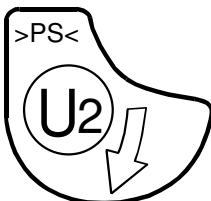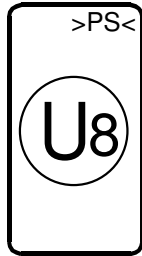18		20					
19		21		22		23	

28.DECALS AND DOCUMENTS (B834)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B070 1307	Decal:Paper Set Direction	1
2	B070 1308	Decal:Size Indication:Paper Tray	1
3	B303 1306	Decal - Instruction	1
4	B303 1307	Decal - Instruction	1
5	B511 1308	Decal:Paper:Size:Multi-language	1
6	B511 2674	Decal:Display:Paper Volume	1
7	B832 1312	Decal - Display (4)	1
7	B832 1313	Decal - Display (5)	1
7	B832 1314	Decal - Display (6)	1
8	B832 1316	Decal - Knob (U2)	1
9	B832 1318	Decal - Knob (U4)	1
10	B832 1332	Decal - Misfeed Removal (U3)	1
11	B834 1304	Decal - Side Fence Scale Front	1
12	B834 1305	Decal - Side Fence Scale Rear	1
13	B834 1309	Decal - Misfeed Removal	1
14	B834 1312	Decal - Paper Supply 1	1
15	B834 1313	Decal - Paper Supply 2	1
16	B834 1318	Decal - Display (U5)	1
17	B834 1319	Decal - Misfeed Removal (U5)	1
18	B834 1320	Decal - Knob (U6)	1
19	B834 1322	Decal - End Fence Tab	1
20	B834 1323	Decal - Side Fence Postcard	1
21	B834 1331	Decal - Misfeed Removal (U1)	1
22	B834 1333	Decal - Misfeed Removal (U7)	1
23	B834 1334	Decal - Misfeed Removal (U8)	1
24	GA00 0036	Decal - (High Temperature) Left	1

Index No.	Part No.	Description	Q'ty Per Assembly

Parts Index

PM Parts Index

Section Name	Part No.	Description in Service Manual	Description in Parts Catalog	Q'ty Per Assembly	Page and Index No.
PAPER FEED SECTION 1 (B834)	AF03 0080	Paper Feed Roller:Pickup	Paper Feed Roller:Pickup	1	35 - 13
	AF03 1081	Paper Feed Roller:Feed:Manual Feed	Paper Feed Roller:Feed:Manual Feed	1	35 - 15
PAPER FEED SECTION 2 (B834)	AF03 2080	Paper Feed Roller:Separate	Paper Feed Roller:Separate	1	37 - 11

Parts Index

Part No.	Description	Page and Index No.
B834 1034	Cover Hinge - Upper	55 - 6
B834 1089	Hexagonal Bolt - M12x50	55 - 14
B834 1112	Lock Stay - Upper	55 - 2
B834 1114	Lock Slider	55 - 4
B834 1125	Left Slide Rail - Upper Lower	55 - 18
B834 1135	Right Slide Rail - Upper Lower	55 - 19
B834 1145	Slide Rail - Left Middle	55 - 18
B834 1155	Slide Rail - Right Middle	55 - 19
B834 1165	Connector Bracket	53 - 16
B834 1183	Ground Plate - Lower	55 - 7
B834 1304	Decal - Side Fence Scale Front	59 - 11
B834 1304	Decal - Side Fence Scale Front	21 - 13
B834 1304	Decal - Side Fence Scale Front	7 - 11
B834 1305	Decal - Side Fence Scale Rear	23 - 9
B834 1305	Decal - Side Fence Scale Rear	9 - 8
B834 1305	Decal - Side Fence Scale Rear	59 - 12
B834 1309	Decal - Misfeed Removal	59 - 13
B834 1309	Decal - Misfeed Removal	3 - 24
B834 1312	Decal - Paper Supply 1	19 - 17
B834 1312	Decal - Paper Supply 1	5 - 23
B834 1312	Decal - Paper Supply 1	59 - 14
B834 1313	Decal - Paper Supply 2	5 - 21
B834 1313	Decal - Paper Supply 2	19 - 18
B834 1313	Decal - Paper Supply 2	59 - 15
B834 1318	Decal - Display (U5)	47 - 24
B834 1318	Decal - Display (U5)	59 - 16
B834 1319	Decal - Misfeed Removal (U5)	59 - 17
B834 1319	Decal - Misfeed Removal (U5)	3 - 14
B834 1320	Decal - Knob (U6)	59 - 18
B834 1320	Decal - Knob (U6)	3 - 13
B834 1322	Decal - End Fence Tab	3 - 28
B834 1322	Decal - End Fence Tab	59 - 19
B834 1323	Decal - Side Fence Postcard	19 - 16
B834 1323	Decal - Side Fence Postcard	5 - 24
B834 1323	Decal - Side Fence Postcard	59 - 20

Part No.	Description	Page and Index No.
B834 1330	Inner Cover - Upper	3 - 21
B834 1331	Decal - Misfeed Removal (U1)	3 - 20
B834 1331	Decal - Misfeed Removal (U1)	59 - 21
B834 1333	Decal - Misfeed Removal (U7)	59 - 22
B834 1333	Decal - Misfeed Removal (U7)	3 - 18
B834 1334	Decal - Misfeed Removal (U8)	59 - 23
B834 1334	Decal - Misfeed Removal (U8)	3 - 17
B834 1340	Inner Cover - Lower	3 - 12
B834 1355	Cover Hinge - Lower	55 - 13
B834 1360	Cover - Left	3 - 25
B834 1361	Magnet Catch	3 - 23
B834 1365	Rear Cover Bracket	51 - 7
B834 1365	Rear Cover Bracket	55 - 9
B834 1370	Cover - Upper	3 - 4
B834 1373	Cover - Upper Front	55 - 34
B834 1375	Rear Cover - Left	3 - 5
B834 1376	Rear Cover - Right	3 - 6
B834 1380	Paper Tray Grip	19 - 14
B834 1380	Paper Tray Grip	5 - 17
B834 1381	Paper Tray Cover - Upper	5 - 25
B834 1382	Paper Tray Cover - Middle	19 - 19
B834 1383	Paper Tray Cover - Lower	5 - 25
B834 1385	Cover - Right	3 - 7
B834 1645	Timing Belt - B60S2M220	45 - 3
B834 1646	Timing Belt - B60S2M206	41 - 6
B834 1646	Timing Belt - B60S2M206	45 - 19
B834 1647	Timing Belt - B60S2M260	47 - 6
B834 1648	Timing Belt - B60S2M120	47 - 5
B834 1648	Timing Belt - B60S2M120	49 - 5
B834 1648	Timing Belt - B60S2M120	41 - 5
B834 1718	Bracket	51 - 17
B834 1725	Paper Feed Unit Drive Bracket	51 - 10
B834 1730	Grip Drive Shaft	51 - 16
B834 1740	Shaft	51 - 14
B834 2500	Paper Feed Unit	35 - *

Part No.	Description	Page and Index No.
B834 2520	Feed Guide Plate	35 - 1
B834 2568	Transport Roller - Driven	39 - 3
B834 2568	Transport Roller - Driven	47 - 13
B834 2568	Transport Roller - Driven	37 - 5
B834 2568	Transport Roller - Driven	43 - 13
B834 2568	Transport Roller - Driven	49 - 13
B834 2631	Stay	37 - 19
B834 2711	Bracket:Postcard:No.2:Rear	3 - 31
B834 2712	Bracket:Postcard:No.1:Front	3 - 32
B834 2713	Bracket:Postcard:No.1:Rear	3 - 33
B834 2714	Bracket:Postcard:No.2:Front	3 - 30
B834 2715	Tray Cushion Holder	33 - 6
B834 2777	Plate:Auxiliary:Small:Adhesion	23 - 4
B834 2777	Plate:Auxiliary:Small:Adhesion	9 - 4
B834 2785	End Fence - Tab	3 - 29
B834 2805	Bracket:Postcard:Stay:Peen	3 - 27
B834 3065	Slide Rail - End Fence	17 - 4
B834 3065	Slide Rail - End Fence	33 - 4
B834 3111	Side Fence Shaft - Lower	31 - 13
B834 3111	Side Fence Shaft - Lower	11 - 10
B834 3142	End Fence Spacer- Small	15 - 6
B834 3142	End Fence Spacer- Small	25 - 6
B834 3143	End Fence Spacer - Large	25 - 5
B834 3143	End Fence Spacer - Large	15 - 5
B834 3169	Paper Size Sensor Plate	17 - 12
B834 3169	Paper Size Sensor Plate	33 - 13
B834 3190	Tray Bottom Plate	9 - 6
B834 3190	Tray Bottom Plate	7 - 14
B834 3190	Tray Bottom Plate	23 - 6
B834 3190	Tray Bottom Plate	21 - 14
B834 3197	Plate - Upper	29 - 11
B834 3203	Gear - 48Z	29 - 12
B834 3214	Gear - 30Z	29 - 15
B834 3217	Gear - 60Z	29 - 19
B834 3230	Timing Belt Bracket - Rear	27 - 2

Part No.	Description	Page and Index No.
B834 3230	Timing Belt Bracket - REAR	15 - 12
B834 3231	Timing Belt Holder - Rear	27 - 3
B834 3231	Timing Belt Holder - REAR	15 - 13
B834 3237	Bracket - Front	27 - 4
B834 3242	Timing Belt Bracket - Front	27 - 9
B834 3242	Timing Belt Bracket - FRONT	15 - 17
B834 3243	Timing Belt Holder - Front	27 - 7
B834 3243	Timing Belt Holder - FRONT	15 - 16
B834 3245	Tension Bracket No.2 - Front	27 - 10
B834 3248	Bracket - Rear	27 - 16
B834 3262	Contact Point Shaft	55 - 26
B834 3263	Pressure Roller Shaft	55 - 23
B834 3264	Spring	55 - 22
B834 3283	Stay:Main	5 - 3
B834 3283	Stay:Main	19 - 4
B834 3306	Side Fence Bracket - Lower Front	31 - 15
B834 3306	Side Fence Bracket - Lower Front	11 - 11
B834 3309	Side Fence Bracket - Lower Rear	31 - 14
B834 3309	Side Fence Bracket - Lower Rear	11 - 12
B834 3312	Collar	19 - 13
B834 3312	Collar	23 - 20
B834 3312	Collar	21 - 5
B834 3312	Collar	7 - 8
B834 3312	Collar	31 - 7
B834 3312	Collar	5 - 18
B834 3312	Collar	11 - 7
B834 3312	Collar	9 - 20
B834 3313	Rack - Front:Lower	31 - 9
B834 3313	Rack - Front:Lower	11 - 9
B834 3314	Shaft Holder - Lower	31 - 8
B834 3314	Shaft Holder - Lower	11 - 8
B834 3315	Gear - 13Z	11 - 4
B834 3315	Gear - 13Z	31 - 4
B834 3316	Gear - 13Z	7 - 3
B834 3316	Gear - 13Z	9 - 18

Part No.	Description	Page and Index No.
B834 3316	Gear - 13Z	21 - 3
B834 3316	Gear - 13Z	23 - 18
B834 3316	Gear - 13Z	11 - 6
B834 3316	Gear - 13Z	31 - 6
B834 3318	Plate:Lower	11 - 3
B834 3318	Plate:Lower	31 - 3
B834 3320	Coupling Shaft - Front	31 - 1
B834 3321	Side Fence Bracket - Upper Front	7 - 6
B834 3321	Side Fence Bracket - Upper Front	21 - 8
B834 3322	Side Fence Bracket - Upper Rear	23 - 5
B834 3322	Side Fence Bracket - Upper Rear	9 - 19
B834 3323	Holder - :Upper Front	21 - 7
B834 3323	Holder - :Upper Front	7 - 5
B834 3329	Holder - Upper Rear	9 - 21
B834 3329	Holder - Upper Rear	23 - 21
B834 3332	Guide - Upper Front	21 - 10
B834 3332	Guide - Upper Front	7 - 10
B834 3334	Guide - Upper Rear	23 - 14
B834 3334	Guide - Upper Rear	9 - 14
B834 3334	Guide - Upper Rear	23 - 10
B834 3337	Cover - Upper Front	7 - 12
B834 3337	Cover - Upper Front	21 - 11
B834 3338	Cover - Upper Rear	9 - 10
B834 3339	Rack - Upper Front	7 - 9
B834 3339	Rack - Upper Front	21 - 9
B834 3346	Coupling Shaft - Rear	31 - 11
B834 3349	Rack - Upper Rear	23 - 16
B834 3349	Rack - Upper Rear	9 - 15
B834 3350	Bushing - 6x10x6.5	11 - 2
B834 3350	Bushing - 6x10x6.5	7 - 4
B834 3350	Bushing - 6x10x6.5	31 - 2
B834 3350	Bushing - 6x10x6.5	23 - 13
B834 3350	Bushing - 6x10x6.5	9 - 12
B834 3350	Bushing - 6x10x6.5	21 - 4
B834 3368	Slide Shaft - Upper	7 - 7

Part No.	Description	Page and Index No.
B834 3368	Slide Shaft - Upper	9 - 13
B834 3368	Slide Shaft - Upper	23 - 12
B834 3368	Slide Shaft - Upper	21 - 6
B834 3377	Plate Handle	19 - 20
B834 3377	Plate Handle	5 - 20
B834 3378	Stay	5 - 9
B834 3378	Stay	19 - 9
B834 3379	Arm:Swivel:Left:Peen	19 - 15
B834 3379	Arm:Swivel:Left:Peen	5 - 22
B834 3384	Contact Point Shaft	5 - 7
B834 3384	Contact Point Shaft	19 - 7
B834 3385	Arm - Right	19 - 21
B834 3385	Arm - Right	5 - 19
B834 3386	Link Handle	19 - 1
B834 3389	Stopper Shaft	5 - 15
B834 3389	Stopper Shaft	19 - 11
B834 3390	Contact Point Stay	19 - 10
B834 3395	Plate - Left	19 - 3
B834 3396	Plate - Right	19 - 22
B834 3400	Stopper Guide - Left	19 - 2
B834 3400	Stopper Guide - Left	5 - 2
B834 3402	Timing Belt - B100S5M1605	13 - 8
B834 3421	Oil Damper - 0.5kgf Cm:No.1	13 - 11
B834 3422	Idler Bracket - Lower Front	13 - 5
B834 3423	Tension Bracket - Front	13 - 17
B834 3425	Stopper Guide - Right	19 - 23
B834 3425	Stopper Guide - Right	5 - 13
B834 3438	Link Shaft	19 - 6
B834 3438	Link Shaft	5 - 6
B834 3442	Stopper Holder - Left	55 - 10
B834 3443	Stopper Holder	55 - 11
B834 3452	Cover - Paper Volume Sensor	15 - 10
B834 3456	Cover - Paper Volume Sensor	29 - 21
B834 3460	Screw	55 - 12
B834 3470	Coupling Shaft - Front	11 - 1

Part No.	Description	Page and Index No.
B834 3471	Coupling Shaft - Rear	11 - 15
B834 3473	Cover - Small	29 - 16
B834 3475	Bracket	5 - 5
B834 3475	Bracket	19 - 5
B834 3478	Link Handle	5 - 1
B834 3479	Stay	5 - 14
B834 3480	Plate - Left	5 - 4
B834 3481	Plate - Right	5 - 10
B834 3485	Cover	29 - 7
B834 3490	Spacer - Side Fence	21 - 15
B834 3490	Spacer - Side Fence	7 - 2
B834 3490	Spacer - Side Fence	23 - 7
B834 3490	Spacer - Side Fence	9 - 7
B834 3493	Oil Damper:0.2n·m	29 - 10
B834 3620	Guide Plate: - Upper	39 - 4
B834 3630	Guide Plate - Middle Lower	43 - 17
B834 3640	Guide Plate - Lower Left Upper	49 - 14
B834 3650	Guide Plate - Lower Left Lower	47 - 20
B834 3669	Contact Point Bracket - Rear	43 - 6
B834 3670	Contact Point Bracket	43 - 16
B834 3675	Registration Sensor Holder Bracket	45 - 11
B834 3803	Transport Drive Roller - CCW	41 - 14
B834 3805	Transport Drive Roller - Exit	43 - 7
B834 3806	Transport Drive Roller - No.4 CCW	45 - 16
B834 3806	Transport Drive Roller - No.4 CCW	41 - 15
B834 3807	Transport Drive Roller - CW	49 - 21
B834 3807	Transport Drive Roller - CW	47 - 21
B834 3817	Roller Stay Bracket - Right	39 - 9
B834 3817	Roller Stay Bracket - Right	47 - 14
B834 3818	Roller Stay Bracket - Left	39 - 11
B834 3818	Roller Stay Bracket - Left	47 - 16
B834 3819	Link	45 - 17
B834 3825	Paper Feed Sensor Bracket	49 - 19
B834 3828	Paper Feed Sensor Bracket	43 - 20
B834 3830	Manual Feed Guide Plate - Right	39 - 12

Part No.	Description	Page and Index No.
B834 3831	Paper Feed Sensor Bracket	39 - 14
B834 3835	Cover - Positioning Sensor	45 - 5
B834 3836	Stopper Stay	47 - 9
B834 3836	Stopper Stay	41 - 13
B834 3837	Release Handle Stay	39 - 8
B834 3837	Release Handle Stay	47 - 17
B834 3841	Guide Plate - Upper Right	41 - 9
B834 3842	Guide Plate - Lower Right	49 - 9
B834 3867	Positioning Sensor Sheet	43 - 9
B834 3870	Cover:Dehumidifier:Heater:Adhesion	55 - 27
B834 3880	Entrance Guide Plate - Middle Upper	43 - 18
B834 3883	Paper Feed Sensor Bracket	45 - 9
B834 3883	Paper Feed Sensor Bracket	49 - 16
B834 3883	Paper Feed Sensor Bracket	41 - 11
B834 3883	Paper Feed Sensor Bracket	43 - 21
B834 3885	Gear/pulley - 31Z/31T	45 - 2
B834 3899	Lever - Misfeed Removal	39 - 16
B834 3920	Guide Plate - Middle Lower	43 - 10
B834 3930	Guide Plate - Middle Upper	45 - 15
B834 4027	Positioning Pin Bracket	17 - 7
B834 4027	Positioning Pin Bracket	33 - 7
B834 4032	Cushion:Tray:No.1	17 - 6
B834 4035	Guide:Paper Volume Sensor:No.1	17 - 8
B834 4041	Drive Shaft	13 - 13
B834 4043	Bearing Plate - Front	13 - 6
B834 4046	Bearing Plate - Rear	13 - 10
B834 4049	Idler Pulley	13 - 2
B834 4053	Plate	13 - 1
B834 4054	Tensioner	13 - 3
B834 4055	Tension Bracket - Rear	13 - 15
B834 4056	Tension Stud	13 - 16
B834 4075	Bracket - Paper Volume Sensor	15 - 9
B834 4076	Feeler - Paper Volume Sensor	13 - 18
B834 4081	End Fence Base	17 - 5
B834 4082	End Fence Shaft	17 - 2

Part No.	Description	Page and Index No.
B834 4083	End Fence Lock Lever	25 - 7
B834 4083	End Fence Lock Lever	15 - 7
B834 4151	Side Fence:Front:No.1	7 - 15
B834 4153	Side Fence Grip	7 - 1
B834 4153	Side Fence Grip	21 - 1
B834 4161	Side Fence:Rear:No.1	9 - 2
B834 4163	Side Fence Grip - Rear	23 - 1
B834 4163	Side Fence Grip - Rear	9 - 1
B834 4387	Motor Bracket No.1	51 - 2
B834 4388	Compression Spring	51 - 3
B834 4541	Shaft	29 - 18
B834 4546	Gear - 60Z	29 - 13
B834 4547	Gear - 36Z/60Z	29 - 14
B834 4548	Main Drive Shaft	27 - 19
B834 4549	Drive Gear Shaft	29 - 20
B834 4551	Plate - Auxiliary	29 - 8
B834 4552	Plate - Lower	29 - 17
B834 4557	Timing Pulley:Drive:No.2:Ass'y	27 - 5
B834 4559	Tensioner	27 - 6
B834 4562	Bracket - Lower Front	27 - 13
B834 4563	Plate	29 - 1
B834 4564	Holder - Front	27 - 12
B834 4565	Timing Pulley - 20T	27 - 15
B834 4566	Tension Bracket No.2 - Rear	27 - 14
B834 4568	Stud	27 - 11
B834 4572	Timing Belt - B100S5M2000	27 - 17
B834 4575	Bracket - Paper Volume Sensor	29 - 4
B834 4576	Feeler - Paper Volume Sensor	27 - 1
B834 4582	End Fence Base	33 - 5
B834 4584	End Fence Shaft Holder	17 - 3
B834 4584	End Fence Shaft Holder	33 - 3
B834 4585	End Fence Shaft	33 - 2
B834 4587	End Fence Guide	15 - 4
B834 4587	End Fence Guide	25 - 4
B834 4592	Cam	15 - 8

Part No.	Description	Page and Index No.
B834 4592	Cam	25 - 8
B834 4593	Paper Size Sensor Bracket - Long	33 - 9
B834 4593	Paper Size Sensor Bracket - Long	17 - 10
B834 4594	Shielding Plate - Long	17 - 11
B834 4594	Shielding Plate - Long	33 - 14
B834 4595	Contact Point Shaft - Long	33 - 8
B834 4595	Contact Point Shaft - Long	17 - 9
B834 4596	End Fence Slide Bracket	33 - 1
B834 4596	End Fence Slide Bracket	17 - 1
B834 4598	End Fence Grip	25 - 3
B834 4598	End Fence Grip	15 - 3
B834 4610	Paper Tray	25 - 1
B834 4610	Paper Tray	15 - 1
B834 4651	Side Fence:Front:No.2	21 - 2
B834 4661	Side Fence:Rear:No.2	23 - 2
B834 4696	Rack - Rear Lower	11 - 14
B834 4696	Rack - Rear Lower	31 - 10
B834 4741	Paper Size Sensor Bracket	9 - 17
B834 4741	Paper Size Sensor Bracket	23 - 19
B834 4742	Feeler - Paper Size Sensor No.1	23 - 15
B834 4743	Feeler - Paper Size Sensor No.2	23 - 11
B834 4743	Feeler - Paper Size Sensor No.2	9 - 11
B834 4793	Stopper Bracket	55 - 20
B834 4821	Cam	55 - 24
B834 4832	Pressure Roller Bracket - Rear	55 - 25
B834 4834	Tension Spring Bracket - Rear	55 - 21
B834 4872	Pressure Roller Bracket	13 - 14
B834 4874	Screw:Drawer:Connector	53 - 3
B834 4875	Compression Spring:Drawer	53 - 2
B834 4881	Drawer Connector Bracket	17 - 16
B834 4881	Drawer Connector Bracket	29 - 2
B834 4883	Drawer:Connector Bracket - Rear	53 - 1
B834 4887	Motor Bracket No.2	51 - 6
B834 4891	Registration Side Plate - Right	5 - 12
B834 4891	Registration Side Plate - Right	19 - 24

Part No.	Description	Page and Index No.
B834 4892	Registration Side Plate - Left	29 - 6
B834 4892	Registration Side Plate - Left	19 - 25
B834 4892	Registration Side Plate - Left	5 - 11
B834 4915	Earth Spring Plate	55 - 17
B834 5110	PCB Main	53 - 14
B834 5190	Harness - Interface	53 - 17
B834 5300	Harness - Stepper Motor	53 - 12
B834 5301	Harness - DC Motor	53 - 7
B834 5302	Harness - Interface 4T	53 - 4
B834 5303	Harness - Interface 5T	53 - 5
B834 5304	Harness - Interface 6T	53 - 6
B834 5305	Harness - Sensor Transport	53 - 9
B834 5306	Harness - Sensor 4T6T Middle	53 - 10
B834 5307	Harness - Sensor Exit	53 - 8
B834 5308	Harness - Interface 4T5T6T	53 - 11
B834 5311	Harness - Safety Switch	53 - 13
B834 5320	Harness - Sensor 4T6T	39 - 13
B834 5320	Harness - Sensor 4T6T	49 - 17
B834 5321	Harness - Sensor 4T Upper Lower	41 - 12
B834 5322	Harness - 5t Transport Middle	43 - 22
B834 5323	Harness - Sensor Exit	45 - 8
B834 5324	Harness - Interface Aleutian	53 - 15
B834 5325	Harness - 6t Middle	49 - 18
B834 5330	Harness - 4/6tray Connecting	17 - 17
B834 5332	Harness - 5tray	29 - 3
B834 5334	Harness - Tray Inner	33 - 11
B834 5334	Harness - Tray Inner	17 - 13
B834 5340	Harness - Heater	55 - 29
B834 5341	Harness - Interface CRB	45 - 7
B834 5342	Harness - Earth	53 - 18
B834 5350	Harness - Sensor	45 - 13

Part No.	Description	Page and Index No.
A229 2692	Damping Insulation	37 - 4
A232 4666	Cushion - Stepper Motor	41 - 3
A232 4666	Cushion - Stepper Motor	43 - 3
A232 4666	Cushion - Stepper Motor	47 - 3
A232 4666	Cushion - Stepper Motor	49 - 3
A335 4351	Guide Roller	15 - 15
A335 4351	Guide Roller	25 - 9
A353 2243	Lever Knob	43 - 11
A376 1295	Spacer - M6x10x5	31 - 17
A376 1295	Spacer - M6x10x5	11 - 17
A507 1096	Philips Screw - M5x6	55 - 16
A667 2656	Friction Pad	25 - 2
A667 2656	Friction Pad	15 - 2
B024 1365	Cap - 38x77	3 - 3
B070 1307	Decal:Paper Set Direction	59 - 1
B070 1307	Decal:Paper Set Direction	3 - 34
B070 1308	Decal:Size Indication:Paper Tray	3 - 35
B070 1308	Decal:Size Indication:Paper Tray	59 - 2
B132 1226	Holder:Stand	3 - 40
B132 4119	Spacer:Gear:Idler	35 - 20
B234 2750	Contact Image Sensor	45 - 14
B234 5280	PCB CRB	45 - 6
B234 6141	Positioning Sleeve - Inner Back	31 - 12
B234 6141	Positioning Sleeve - Inner Back	55 - 31
B234 6141	Positioning Sleeve - Inner Back	11 - 13
B234 6222	Reverse Drive Shaft	37 - 7
B234 6223	Driven Reverse Shaft	37 - 9
B234 6300	Torque Limiter	37 - 10
B234 6506	Timing Pulley - 30T	49 - 7
B234 6506	Timing Pulley - 30T	41 - 7
B234 6506	Timing Pulley - 30T	45 - 4
B234 6506	Timing Pulley - 30T	47 - 7
B234 6507	Timing Pulley - 25T	43 - 5
B234 6507	Timing Pulley - 25T	47 - 8
B234 6507	Timing Pulley - 25T	49 - 6

Part No.	Description	Page and Index No.
B234 6507	Timing Pulley - 25T	41 - 17
B234 6508	Tension Spring	51 - 12
B303 1116	Grounding Plate	55 - 1
B303 1185	Metal Joint	51 - 4
B303 1306	Decal - Instruction	39 - 17
B303 1306	Decal - Instruction	59 - 3
B303 1307	Decal - Instruction	59 - 4
B303 1307	Decal - Instruction	47 - 23
B303 2556	Reverse Pressure Lever	37 - 16
B303 3682	Misfeed Removal Knob	47 - 22
B511 1308	Decal:Paper:Size:Multi-language	3 - 36
B511 1308	Decal:Paper:Size:Multi-language	59 - 5
B511 1378	Cover:Cover:Upper	3 - 2
B511 1386	Cover:Right:Key Counter	3 - 8
B511 2674	Decal:Display:Paper Volume	59 - 6
B511 2674	Decal:Display:Paper Volume	9 - 3
B511 2674	Decal:Display:Paper Volume	23 - 3
B511 2677	Sensor Bracket	35 - 7
B511 3637	Lever	43 - 12
B832 0067	Knob - Misfeed Removal	3 - 22
B832 1100	Positioning Pin - Upper	3 - 39
B832 1101	Positioning Pin - Lower	3 - 38
B832 1312	Decal - Display (4)	59 - 7
B832 1312	Decal - Display (4)	3 - 9
B832 1313	Decal - Display (5)	59 - 7
B832 1313	Decal - Display (5)	3 - 10
B832 1314	Decal - Display (6)	59 - 7
B832 1314	Decal - Display (6)	3 - 11
B832 1316	Decal - Knob (U2)	3 - 19
B832 1316	Decal - Knob (U2)	59 - 8
B832 1318	Decal - Knob (U4)	59 - 9
B832 1318	Decal - Knob (U4)	3 - 15
B832 1332	Decal - Misfeed Removal (U3)	59 - 10
B832 1332	Decal - Misfeed Removal (U3)	3 - 16
B832 1371	Spacer Cushion	3 - 1

Part No.	Description	Page and Index No.
B832 1750	Tension Bracket	51 - 11
B832 2535	Reverse Guide Plate	37 - 1
B832 2541	Stay	37 - 8
B832 2558	DC Solenoid 24V	37 - 14
B832 2571	Stay:Feed:Peen	35 - 5
B832 2574	Pickup Arm	35 - 11
B832 2577	Paper Feed Sensor Bracket	35 - 18
B832 2578	DC Solenoid 24V	35 - 8
B832 2585	Feed Roller Shaft	35 - 22
B832 2877	Knob Screw:Tray:Guide:Green	3 - 37
B832 2877	Knob Screw:Tray:Guide:Green	7 - 13
B832 2877	Knob Screw:Tray:Guide:Green	9 - 9
B832 2877	Knob Screw:Tray:Guide:Green	21 - 12
B832 2877	Knob Screw:Tray:Guide:Green	23 - 8
B832 3510	Heat Sink	47 - 2
B832 3510	Heat Sink	41 - 2
B832 3510	Heat Sink	49 - 2
B832 3510	Heat Sink	43 - 2
B832 3685	Sensor Bracket	45 - 12
B832 3909	Bracket Cushion	47 - 25
B832 3909	Bracket Cushion	49 - 8
B832 3909	Bracket Cushion	39 - 5
B832 3909	Bracket Cushion	41 - 16
B832 5311	Harness - Paper Feed Unit	35 - 3
B833 2565	Compression Spring	37 - 3
B833 2567	Tension Spring	37 - 17
B835 3972	Stepper Motor Bracket	47 - 4
B835 3972	Stepper Motor Bracket	49 - 4
B835 3972	Stepper Motor Bracket	43 - 4
B835 3972	Stepper Motor Bracket	41 - 4
B835 3996	Safety Switch Bracket	55 - 8
C563 3116	Belt Joint	27 - 8
C563 3116	Belt Joint	15 - 14
G052 1518	Spring - Lock Lever	33 - 12
G052 1518	Spring - Lock Lever	17 - 15

Part No.	Description	Page and Index No.
G070 6201	Roller - Transfer Roller	55 - 32
G417 3374	Tension Spring:Pulley:Idler	13 - 4
H072 2220	Spacer - M6x10	31 - 5
H072 2220	Spacer - M6x10	11 - 5
H516 3666	Spring - 19.6mm	19 - 8
H516 3666	Spring - 19.6mm	5 - 8

Part No.	Description	Page and Index No.
AA04 2550	Timing Belt - S2M138	51 - 15
AA06 0575	Release Spring	37 - 13
AA06 0906	Tension Spring - 25n	27 - 18
AA06 3204	Compression Spring	35 - 21
AA06 6671	Lock Spring	55 - 5
AA06 6675	Compression Spring	39 - 1
AA06 6675	Compression Spring	43 - 15
AA06 6675	Compression Spring	47 - 11
AA06 6675	Compression Spring	49 - 11
AA06 6677	Tension Spring	35 - 10
AA06 6680	Spring	43 - 8
AA08 2070	Bushing - 8x16x7	47 - 19
AA08 2070	Bushing - 8x16x7	39 - 7
AA08 2101	Bushing - 6x10x6	31 - 16
AA08 2101	Bushing - 6x10x6	11 - 16
AA08 3015	Roller Clutch	35 - 19
AA08 4059	Ball Bearing Holder	49 - 12
AA08 4059	Ball Bearing Holder	43 - 14
AA08 4059	Ball Bearing Holder	47 - 12
AA08 4059	Ball Bearing Holder	39 - 2
AA08 4059	Ball Bearing Holder	37 - 2
AA10 0014	Retaining Ring C - Separate	35 - 14
AA10 0014	Retaining Ring C - Separate	37 - 12
AA13 2142	Spacer - M8	13 - 9
AA13 2205	Spacer - Timing Belt	45 - 1
AA14 0912	Screw - 8x14x2.8	55 - 3
AA14 3562	Screw:M4:DIA6x1.2	51 - 13
AA14 3718	Stepped Screw - M4	5 - 16
AA14 3718	Stepped Screw - M4	19 - 12
AA14 3810	Development Cover Screw	39 - 18
AA14 3810	Development Cover Screw	49 - 10
AA14 3810	Development Cover Screw	47 - 10
AA14 3810	Development Cover Screw	43 - 23
AA14 3812	Screw - Scale	35 - 16
AA16 1122	Motor Cushion	51 - 9

Part No.	Description	Page and Index No.
AB01 1392	Drive Reverse Gear - 24z	37 - 6
AB01 1478	Gear - 18Z	35 - 4
AB01 1591	Gear:Reverse	37 - 15
AB01 3654	Gear - 30Z	41 - 8
AB01 4140	Gear - 24Z	13 - 12
AB01 4140	Gear - 24Z	29 - 9
AB01 4152	Gear - 32Z	43 - 24
AB01 7724	Gear - 23Z/28Z	35 - 9
AB03 0548	Pulley - 16T	13 - 7
AF02 1410	Transport Roller	35 - 2
AF03 0080	Paper Feed Roller:Pickup	35 - 13
AF03 1081	Paper Feed Roller:Feed:Manual Feed	35 - 15
AF03 2080	Paper Feed Roller:Separate	37 - 11
AG05 0067	Knob - Transport Roller	3 - 41
AG07 1012	Magnet Catch:Ass'y	55 - 33
AH01 2014	Caster - 60KGF	55 - 15
AW01 0118	Paper Feed Sensor	39 - 15
AW01 0118	Paper Feed Sensor	49 - 20
AW01 0122	Paper Feed Sensor	49 - 15
AW01 0122	Paper Feed Sensor	35 - 17
AW01 0122	Paper Feed Sensor	43 - 19
AW01 0122	Paper Feed Sensor	41 - 10
AW01 0122	Paper Feed Sensor	45 - 10
AW02 0145	Photointerruptor:Flat	35 - 6
AW02 0160	Paper Feed Sensor	9 - 16
AW02 0160	Paper Feed Sensor	33 - 10
AW02 0160	Paper Feed Sensor	29 - 5
AW02 0160	Paper Feed Sensor	23 - 17
AW02 0160	Paper Feed Sensor	17 - 14
AW02 0160	Paper Feed Sensor	15 - 11
AX04 0157	Stepper Motor DC1.68V 6.7W	51 - 8
AX04 0158	Stepper Motor DC2.64V 6.3W	49 - 1
AX04 0158	Stepper Motor DC2.64V 6.3W	41 - 1
AX04 0158	Stepper Motor DC2.64V 6.3W	47 - 1
AX04 0158	Stepper Motor DC2.64V 6.3W	43 - 1

Part No.	Description	Page and Index No.
AX04 0229	DC Motor 24V 21.6W	51 - 5
AX04 0231	DC Motor 24V 19.6W	51 - 1
AX40 0012	Heater - 230V/18W	55 - 30
BB01 3008	Gear - 31Z	37 - 18
GA00 0036	Decal - (High Temperature) Left	55 - 28
GA00 0036	Decal - (High Temperature) Left	59 - 24

Part No.	Description	Page and Index No.
0313 0040N	Screw:M3x4	43 -106
0314 0060N	Screw - M4x6	55 -108
0314 0100N	Pan Head Screw:M4x10	51 -104
0353 0060N	Bind Screw - M3x6	51 -102
0353 0060N	Bind Screw - M3x6	31 -102
0354 0040N	Screw-m4x4	25 -103
0354 0040N	Screw-m4x4	15 -103
0450 4008N	Tapping Screw - M4x8	3 - 102
0451 3006N	Tapping Screw - 3x6	45 -109
0451 3008N	Tapping Screw - M3x8	53 -102
0451 3008N	Tapping Screw - M3x8	45 -102
0451 4006N	Tapping Screw - 4x6	11 -101
0451 4006N	Tapping Screw - 4x6	17 -103
0451 4006N	Tapping Screw - 4x6	19 -102
0451 4006N	Tapping Screw - 4x6	21 -107
0451 4006N	Tapping Screw - 4x6	23 -102
0451 4006N	Tapping Screw - 4x6	43 -102
0451 4006N	Tapping Screw - 4x6	31 -101
0451 4006N	Tapping Screw - 4x6	33 -103
0451 4006N	Tapping Screw - 4x6	41 -102
0451 4006N	Tapping Screw - 4x6	47 -102
0451 4006N	Tapping Screw - 4x6	49 -102
0451 4006N	Tapping Screw - 4x6	3 - 101
0451 4006N	Tapping Screw - 4x6	7 - 103
0451 4006N	Tapping Screw - 4x6	9 - 102
0451 4006N	Tapping Screw - 4x6	5 - 102
0451 4008N	Tapping Screw:4x8	7 - 102
0451 4008N	Tapping Screw:4x8	5 - 101
0451 4008N	Tapping Screw:4x8	51 -101
0451 4008N	Tapping Screw:4x8	15 -101
0451 4008N	Tapping Screw:4x8	45 -103
0451 4008N	Tapping Screw:4x8	9 - 101
0451 4008N	Tapping Screw:4x8	17 -104
0451 4008N	Tapping Screw:4x8	41 -101
0451 4008N	Tapping Screw:4x8	49 -101

Part No.	Description	Page and Index No.
0451 4008N	Tapping Screw:4x8	19 -101
0451 4008N	Tapping Screw:4x8	43 -101
0451 4008N	Tapping Screw:4x8	29 -103
0451 4008N	Tapping Screw:4x8	47 -101
0451 4008N	Tapping Screw:4x8	37 -101
0451 4008N	Tapping Screw:4x8	21 -106
0451 4008N	Tapping Screw:4x8	23 -101
0451 4008N	Tapping Screw:4x8	25 -101
0451 4008N	Tapping Screw:4x8	55 -101
0451 4008N	Tapping Screw:4x8	35 -101
0451 4008N	Tapping Screw:4x8	33 -107
0451 4008N	Tapping Screw:4x8	39 -102
0451 4008N	Tapping Screw:4x8	53 -101
0451 4008N	Tapping Screw:4x8	13 -103
0453 3005N	Binding Self Tapping Screw:3x5	9 - 104
0453 3005N	Binding Self Tapping Screw:3x5	23 -104
0453 3005N	Binding Self Tapping Screw:3x5	7 - 101
0453 3005N	Binding Self Tapping Screw:3x5	21 -101
0453 3006N	Tapping Screw - M3x6	33 -101
0453 3006N	Tapping Screw - M3x6	9 - 110
0453 3006N	Tapping Screw - M3x6	17 -101
0453 3006N	Tapping Screw - M3x6	11 -106
0453 4006N	Binding Self Tapping Screw:4x6	33 -104
0453 4006N	Binding Self Tapping Screw:4x6	11 -102
0453 4006N	Binding Self Tapping Screw:4x6	9 - 103
0453 4006N	Binding Self Tapping Screw:4x6	7 - 104
0453 4006N	Binding Self Tapping Screw:4x6	23 -103
0453 4006N	Binding Self Tapping Screw:4x6	31 -103
0453 4006N	Binding Self Tapping Screw:4x6	21 -102
0453 4008N	Binding Self Tapping Screw:4x8	13 -101
0453 4008N	Binding Self Tapping Screw:4x8	25 -102
0453 4008N	Binding Self Tapping Screw:4x8	27 -101
0453 4008N	Binding Self Tapping Screw:4x8	29 -101
0453 4008N	Binding Self Tapping Screw:4x8	15 -102
0453 4008N	Binding Self Tapping Screw:4x8	55 -104

Part No.	Description	Page and Index No.
0454 4006Q	Tapping Screw:4x6	5 - 103
0454 4006Q	Tapping Screw:4x6	29 - 102
0454 4006Q	Tapping Screw:4x6	9 - 108
0454 4006Q	Tapping Screw:4x6	43 - 103
0454 4006Q	Tapping Screw:4x6	39 - 101
0454 4006Q	Tapping Screw:4x6	27 - 102
0454 4006Q	Tapping Screw:4x6	49 - 103
0454 4006Q	Tapping Screw:4x6	17 - 102
0454 4006Q	Tapping Screw:4x6	19 - 103
0454 4006Q	Tapping Screw:4x6	15 - 104
0454 4006Q	Tapping Screw:4x6	45 - 101
0454 4006Q	Tapping Screw:4x6	33 - 102
0454 4006Q	Tapping Screw:4x6	41 - 103
0454 4006Q	Tapping Screw:4x6	13 - 102
0454 4008Q	Tapping Screw - M4x8	5 - 104
0454 4008Q	Tapping Screw - M4x8	3 - 103
0454 4008Q	Tapping Screw - M4x8	23 - 105
0454 4008Q	Tapping Screw - M4x8	55 - 102
0454 4008Q	Tapping Screw - M4x8	19 - 104
0573 0030E	Hexagon Headless Set Screw - M3x3	37 - 106
0633 0140G	Parallel Pin - 3x14	13 - 106
0633 0140G	Parallel Pin - 3x14	29 - 109
0707 8050N	Bushing - 8x5	29 - 108
0707 8120N	Bushing - 8x12	29 - 107
0720 0030E	Retaining Ring - M3	47 - 104
0720 0030E	Retaining Ring - M3	7 - 107
0720 0030E	Retaining Ring - M3	31 - 106
0720 0030E	Retaining Ring - M3	15 - 106
0720 0030E	Retaining Ring - M3	11 - 105
0720 0030E	Retaining Ring - M3	39 - 103
0720 0030E	Retaining Ring - M3	21 - 104
0720 0030E	Retaining Ring - M3	9 - 106
0720 0030E	Retaining Ring - M3	23 - 107
0720 0040E	Retaining Ring - M4	11 - 103
0720 0040E	Retaining Ring - M4	33 - 105

Part No.	Description	Page and Index No.
0720 0040E	Retaining Ring - M4	9 - 105
0720 0040E	Retaining Ring - M4	37 - 103
0720 0040E	Retaining Ring - M4	31 - 104
0720 0040E	Retaining Ring - M4	5 - 105
0720 0040E	Retaining Ring - M4	17 - 105
0720 0040E	Retaining Ring - M4	19 - 105
0720 0040E	Retaining Ring - M4	21 - 103
0720 0040E	Retaining Ring - M4	45 - 105
0720 0040E	Retaining Ring - M4	7 - 105
0720 0040E	Retaining Ring - M4	23 - 106
0720 0050E	Retaining Ring - M5	19 - 106
0720 0050E	Retaining Ring - M5	5 - 106
0720 0060E	Retaining Ring - M6	49 - 104
0720 0060E	Retaining Ring - M6	41 - 104
0720 0060E	Retaining Ring - M6	5 - 107
0720 0060E	Retaining Ring - M6	47 - 103
0720 0060E	Retaining Ring - M6	43 - 104
0720 0060E	Retaining Ring - M6	55 - 105
0720 0060E	Retaining Ring - M6	45 - 104
0720 0060E	Retaining Ring - M6	37 - 102
0720 0060E	Retaining Ring - M6	27 - 103
0720 0060E	Retaining Ring - M6	13 - 104
0720 0060E	Retaining Ring - M6	15 - 105
0720 0060E	Retaining Ring - M6	25 - 105
0720 0060E	Retaining Ring - M6	19 - 109
0720 0060E	Retaining Ring - M6	35 - 102
0720 0060E	Retaining Ring - M6	29 - 104
0720 0080E	Retaining Ring - M8	31 - 105
0720 0080E	Retaining Ring - M8	25 - 104
0720 0080E	Retaining Ring - M8	21 - 105
0720 0080E	Retaining Ring - M8	11 - 104
0720 0080E	Retaining Ring - M8	7 - 106
0720 0080E	Retaining Ring - M8	23 - 108
0720 0080E	Retaining Ring - M8	35 - 107
0720 0080E	Retaining Ring - M8	9 - 107

Part No.	Description	Page and Index No.
0727 0080E	Retaining Ring - M8	51 -103
0740 3008	Ball Bearing - 8x22x7	29 -106
0740 3506	Ball Bearing - 6x12x4 mm	17 -106
0740 3506	Ball Bearing - 6x12x4 mm	5 - 109
0740 3506	Ball Bearing - 6x12x4 mm	33 -108
0740 3506	Ball Bearing - 6x12x4 mm	19 -107
0741 3506	Ball Bearing - 6x12x4 mm	37 -105
0741 3706	Ball Bearing - 6x10x3	37 -104
0741 3708	Ball Bearing - 8x12x3.5mm	35 -104
0741 3808	Ball Bearing - 8x16x5mm	29 -105
0741 3808	Ball Bearing - 8x16x5mm	19 -108
0741 3808	Ball Bearing - 8x16x5mm	27 -104
0741 3808	Ball Bearing - 8x16x5mm	13 -105
0741 3808	Ball Bearing - 8x16x5mm	5 - 108
0742 3808	Ball Bearing - 8x16x5	45 -106
0742 3808	Ball Bearing - 8x16x5	47 -105
0742 3808	Ball Bearing - 8x16x5	49 -105
0742 3808	Ball Bearing - 8x16x5	43 -107
0742 3808	Ball Bearing - 8x16x5	41 -105
0742 3808	Ball Bearing - 8x16x5	35 -103
0805 0088	Retaining Ring - M6	35 -105
0950 4008Z	Philips Truss Screw - M4x8	53 -103
0950 4008Z	Philips Truss Screw - M4x8	3 - 104
1105 0194	PCB Stud	53 -105
1105 0487	Harness Clamp	29 -112
1105 0487	Harness Clamp	13 -107
1105 0488	Harness Clamp	53 -104
1105 0488	Harness Clamp	55 -107
1105 0511	Harness Clamp - LWS-0306ZC	9 - 111
1105 0511	Harness Clamp - LWS-0306ZC	13 -108
1105 0511	Harness Clamp - LWS-0306ZC	35 -106
1105 0511	Harness Clamp - LWS-0306ZC	15 -107
1105 0511	Harness Clamp - LWS-0306ZC	17 -107
1105 0511	Harness Clamp - LWS-0306ZC	45 -107
1105 0511	Harness Clamp - LWS-0306ZC	23 -109

Part No.	Description	Page and Index No.
1105 0511	Harness Clamp - LWS-0306ZC	43 -105
1105 0511	Harness Clamp - LWS-0306ZC	41 -106
1105 0511	Harness Clamp - LWS-0306ZC	29 -111
1105 0511	Harness Clamp - LWS-0306ZC	33 -106
1105 0511	Harness Clamp - LWS-0306ZC	37 -107
1105 0515	Harness Clamp - RLWS-3T(VO)	55 -106
1105 0518	Edge Saddle - Les-1010	13 -109
1105 0518	Edge Saddle - Les-1010	29 -110
1105 0522	Edge Saddle - Les0510	45 -108
1105 0522	Edge Saddle - Les0510	23 -110
1105 0522	Edge Saddle - Les0510	9 - 109
1204 2382	Interlock Switch - Fail-CA22	55 -103

Part No.	Description	Page and Index No.
5215 2621	Snap Ring - M6	39 - 6
5215 2621	Snap Ring - M6	47 - 18
5447 2681	Snap Ring	3 - 26
5447 2706	Gear - 15T	35 - 12
6754 2866	Roller - Positioning Guide	39 - 10
6754 2866	Roller - Positioning Guide	45 - 18
6754 2866	Roller - Positioning Guide	47 - 15

Part No.	Description	Page and Index No.