


Notes for Users

WARNING

- The following explains the warning messages on the plastic bag used in this product's packaging.
- Keep the polythene materials (bags, etc.) supplied with this machine away from babies and small children at all times. Suffocation can result if polythene materials are brought into contact with the mouth or nose.


If Paper Weight 7 or heavier (256.1-400.0 g/m²) paper (plain paper or coated paper) is not fed, attach the supplied magnet sheet to the end fence.

1. Check that paper in the paper tray is not being used, and then pull the tray out carefully until it stops. Remove any paper that is loaded in the tray.
2. Take out the magnet sheet from the pocket on the right-hand side of the wide Large Capacity Tray.

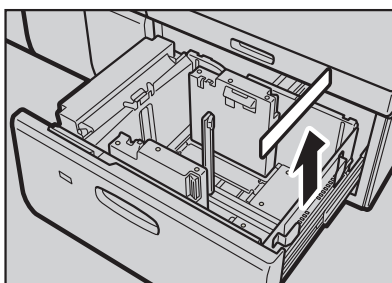

DPQ001

3. Attach the magnet sheet to the side of the end fence that touches the paper.
 - Push both corners at the bottom of the magnet plate against the metal plates strongly.
 - Make sure that the top of the magnet sheet does not obstruct the opening in the end fence.

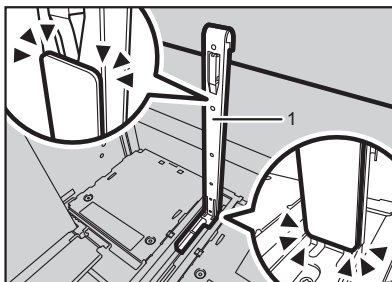

DPQ002

1. The side of the end fence that touches the paper


4. Load paper and slide the paper tray in fully and carefully.

Note

- Put the magnet sheet back in the pocket when you finish using it.

© 2015

Printed in Japan

EN  EN  EN 

D777-8838



D7778838