

Scanner Accessibility Option Type C5000
(D423)

Scanner Accesibility Option Type C5000 (D423)


PARTS CATALOG

This catalog gives the numbers and names of parts on this machine.

1.Scanner Accesibility (D423).....	2
Parts Index.....	6

June ,13 ' 2008

1.Scanner Accesibility (D423)

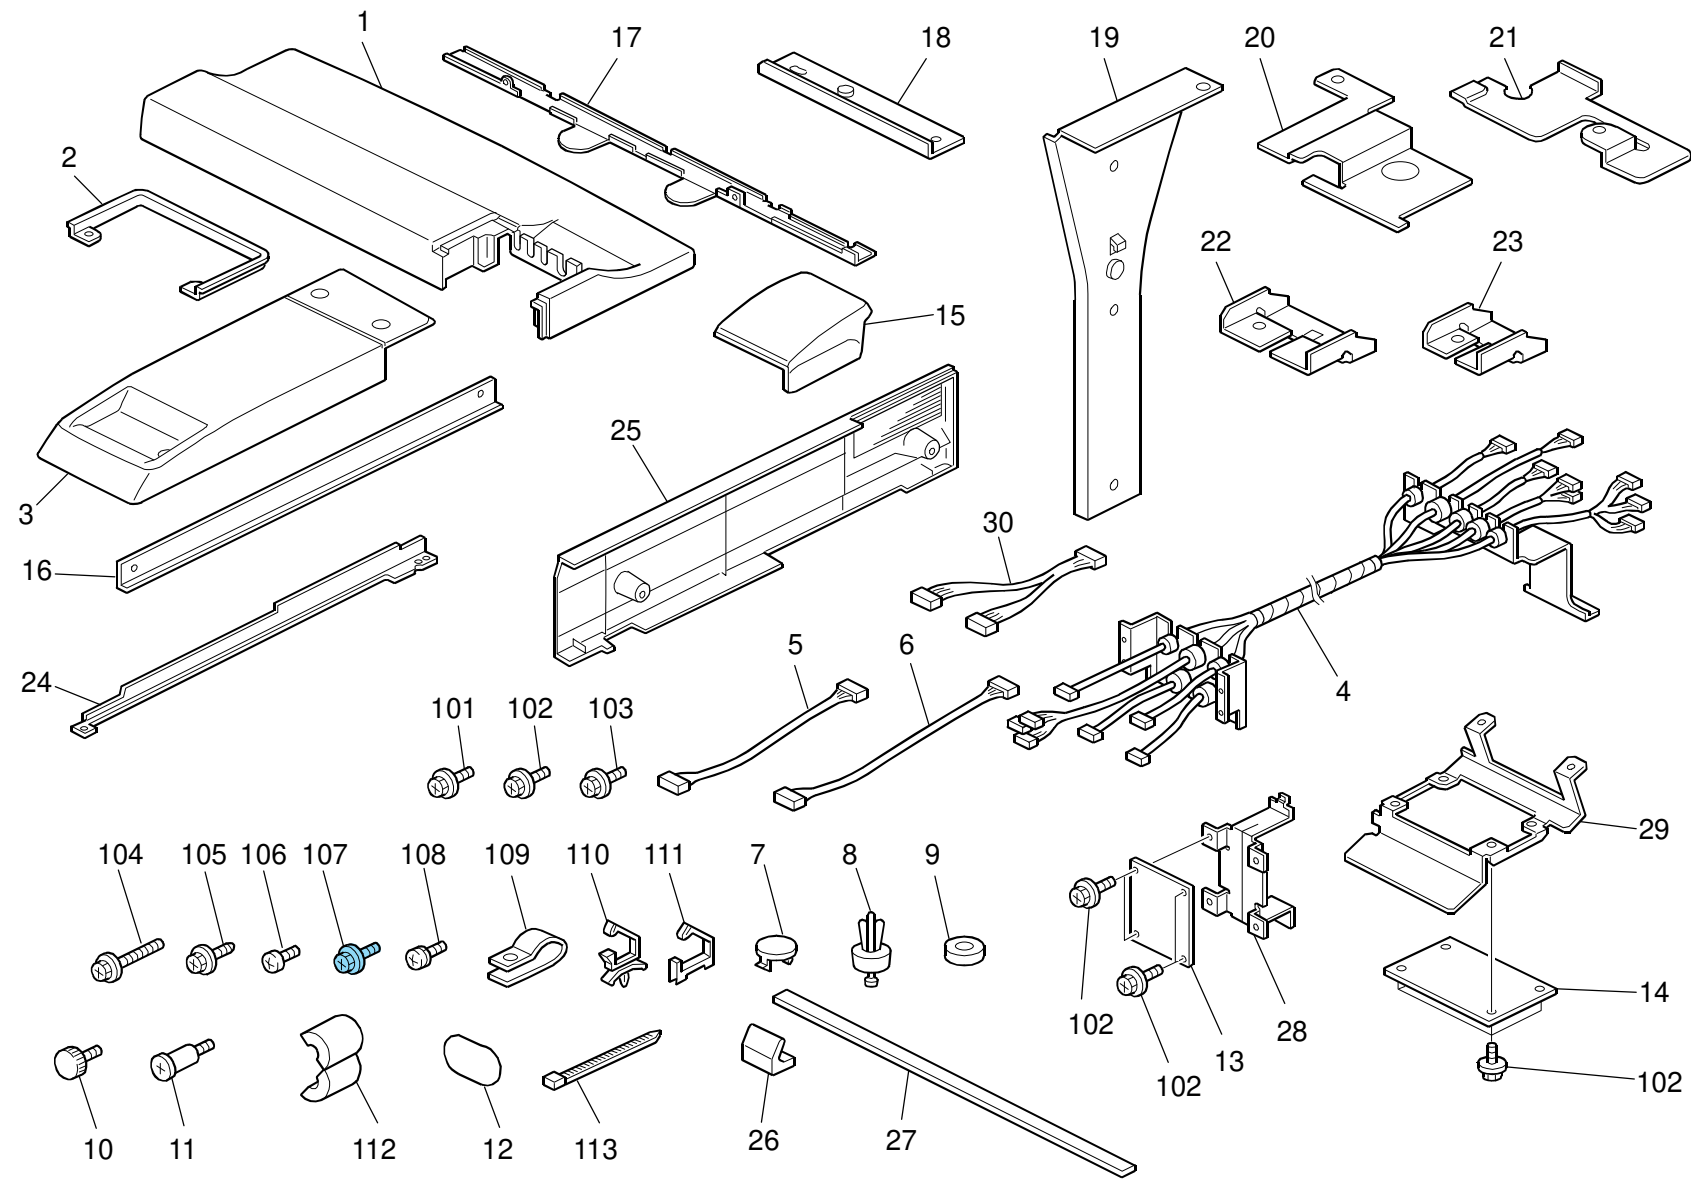

1.Scanner Accesibility (D423)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B838 1267	Cover:Upper:Rear	1
2	B838 1826	Cover:Scanner:Rear	1
3	B838 1268	Cover:Upper:Right	1
4	D423 5235	Harness:Scanner:Separation:NA:Ass'y	1
4	D423 5236	Harness:Scanner:Separation:EU:Ass'y	1
5	B838 5222	Harness:LVDS:OPU:Separation	1
6	B838 5223	Harness:LVDS:MB:Separation	1
7	G133 1269	Cap:DIA17	3
8	G570 1540	Rubber Foot H=10	3
9	G570 1543	Spacer - Adjusting Screw	2
10	AA14 3829	Adjusting Screw:Scanner	2
11	AA14 3842	Screw:DIA6:14.5:M4	1
12	B223 1824	Seal:Scanner:Frame:Base	1
13	B838 1410	PCB:LVDS:MB	1
14	B838 1460	PCB:LVDS:OPU	1
15	B838 8441	Cover:Ferrite Core:Option:Ass'y	1
16	D009 1822	Bracket:Option:Right	1
17	B838 1823	Bracket:Cover:Rear Lower	1
18	B838 1261	Bracket:Key Counter:Rear	2
19	B838 1269	Bracket:Left Rear:Option	1
20	B838 1832	Shielding Plate:Base:1	1
21	B838 1833	Shielding Plate:Base:2	1
22	B862 1241	Stopper:Hinge:Left	1
23	B862 1242	Stopper:Hinge:Right	1
24	B838 1822	Bracket:Cover:Left Lower	1
25	B223 1818	Cover:Scanner:Left	1
25	B222 1818	Cover:Scanner:Left:EU	1
26	B838 1835	Gasket:UC-300284T:20	1
27	B838 1836	Gasket:RFSG-010100:20	1
28	B838 5891	Bracket:Base:Operation Panel	1
29	D009 1512	Bracket:LVDS:OPU:AL-C1	1
30	D423 5337	Harness:Scanner:Separation:BICU:Connecting	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3008N	Tapping Screw - M3x8	
102	0451 3006N	Tapping Screw - 3x6	
103	0451 4008N	Tapping Screw:4x8	
104	0451 4016N	Tapping Screw:4x16	
105	0450 3008N	Tapping Screw - M3x8	
106	0453 3006N	Tapping Screw - M3x6	
107	0454 3006Q	Tapping Screw - M3x6	
108	0954 4008N	Screw - M4x8	
109	1105 0428	Clamp	
110	1105 0488	Harness Clamp	
111	1105 0521	Clamp - LES-1017	
112	1607 0622	Ferrite Core TFC16816	
112	1607 1139	Ferrite Core:RFC-8	
112	1607 1460	Ferrite Core:RFC-9	
112	1607 1461	Ferrite Core	
112	1607 1715	Ferrite Core - RFC-5	
112	1607 1929	Ferrite Core:TFCM-41-27-16	
113	1005 0503	Clamp Wire	

Parts Index

Parts Index

Part No.	Description	Page and Index No.
D423 5235	Harness:Scanner:Separation:NA:Ass'y	3 - 4
D423 5236	Harness:Scanner:Separation:EU:Ass'y	3 - 4
D423 5337	Harness:Scanner:Separation:BICU:Connecting	3 - 30

Part No.	Description	Page and Index No.
B222 1818	Cover:Scanner:Left:EU	3 - 25
B223 1818	Cover:Scanner:Left	3 - 25
B223 1824	Seal:Scanner:Frame:Base	3 - 12
B838 1261	Bracket:Key Counter:Rear	3 - 18
B838 1267	Cover:Upper:Rear	3 - 1
B838 1268	Cover:Upper:Right	3 - 3
B838 1269	Bracket:Left Rear:Option	3 - 19
B838 1410	PCB:LVDS:MB	3 - 13
B838 1460	PCB:LVDS:OPU	3 - 14
B838 1822	Bracket:Cover:Left Lower	3 - 24
B838 1823	Bracket:Cover:Rear Lower	3 - 17
B838 1826	Cover:Scanner:Rear	3 - 2
B838 1832	Shielding Plate:Base:1	3 - 20
B838 1833	Shielding Plate:Base:2	3 - 21
B838 1835	Gasket:UC-300284T:20	3 - 26
B838 1836	Gasket:RFSG-010100:20	3 - 27
B838 5222	Harness:LVDS:OPU:Separation	3 - 5
B838 5223	Harness:LVDS:MB:Separation	3 - 6
B838 5891	Bracket:Base:Operation Panel	3 - 28
B838 8441	Cover:Ferrite Core:Option:Ass'y	3 - 15
B862 1241	Stopper:Hinge:Left	3 - 22
B862 1242	Stopper:Hinge:Right	3 - 23
D009 1512	Bracket:LVDS:OPU:AL-C1	3 - 29
D009 1822	Bracket:Option:Right	3 - 16
G133 1269	Cap:DIA17	3 - 7
G570 1540	Rubber Foot H=10	3 - 8
G570 1543	Spacer - Adjusting Screw	3 - 9

Part No.	Description	Page and Index No.
AA14 3829	Adjusting Screw:Scanner	3 - 10
AA14 3842	Screw:DIA6:14.5:M4	3 - 11

Part No.	Description	Page and Index No.
0450 3008N	Tapping Screw - M3x8	3 - 105
0451 3006N	Tapping Screw - 3x6	3 - 102
0451 3008N	Tapping Screw - M3x8	3 - 101
0451 4008N	Tapping Screw:4x8	3 - 103
0451 4016N	Tapping Screw:4x16	3 - 104
0453 3006N	Tapping Screw - M3x6	3 - 106
0454 3006Q	Tapping Screw - M3x6	3 - 107
0954 4008N	Screw - M4x8	3 - 108
1005 0503	Clamp Wire	3 - 113
1105 0428	Clamp	3 - 109
1105 0488	Harness Clamp	3 - 110
1105 0521	Clamp - LES-1017	3 - 111
1607 0622	Ferrite Core TFC16816	3 - 112
1607 1139	Ferrite Core:RFC-8	3 - 112
1607 1460	Ferrite Core:RFC-9	3 - 112
1607 1461	Ferrite Core	3 - 112
1607 1715	Ferrite Core - RFC-5	3 - 112
1607 1929	Ferrite Core:TFCM-41-27-16	3 - 112