

**Side Tray C2550
Machine Code: D427
Field Service Manual**

August 2008
Subject to change

TABLE OF CONTENTS

1. Replacement and Adjustment

Electrical Components.....	3
Side Tray Exit Sensor.....	3
Side Tray Motor.....	3
Side Tray Gate Solenoid.....	4
Side Tray Board.....	5




1. Replacement and Adjustment

Electrical Components


1

Side Tray Exit Sensor

1. Side tray paper exit unit

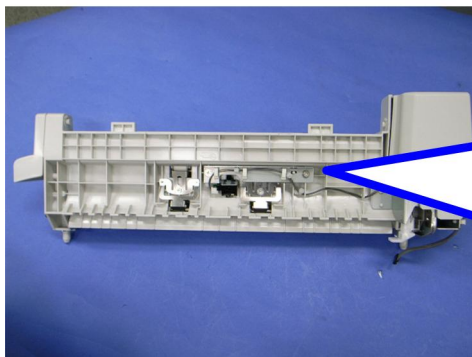


d427r501

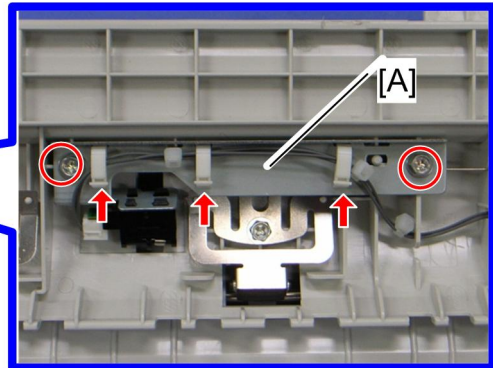

d427r502

2. Sensor assembly [A] (⚙ x 2, ⚙ x 3, ⚙ x 1)

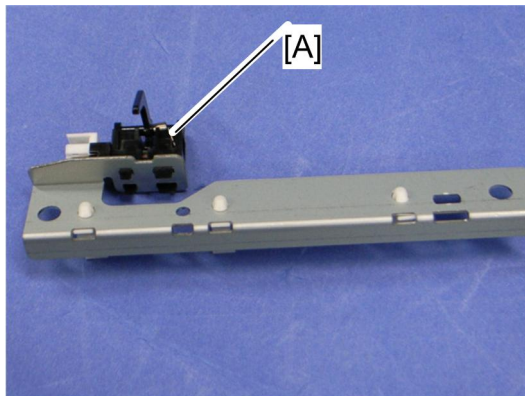


d427r503

3. Side tray exit sensor [A] (hooks)


Side Tray Motor

1. Side tray paper exit unit

1

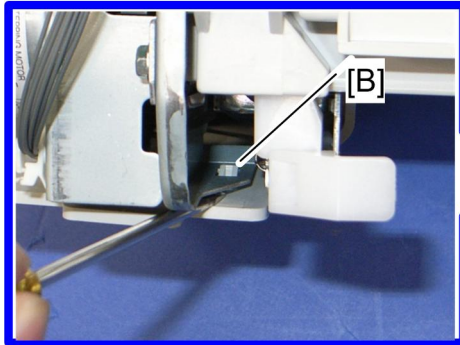

d427r505

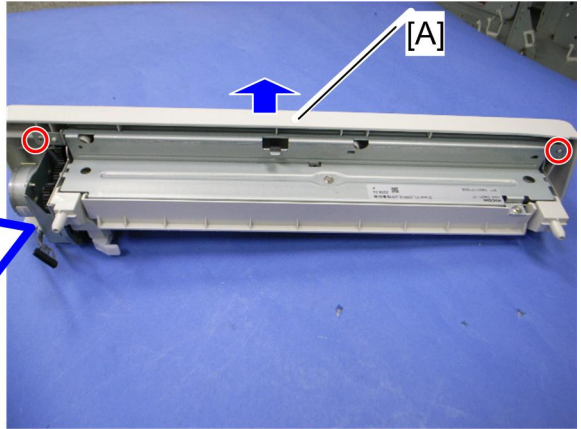


d427r504

2. Side tray upper cover [A] (🔩 x 2, tab [B])

↓ Note

- Release the tab [B] with a flat-head screwdriver.

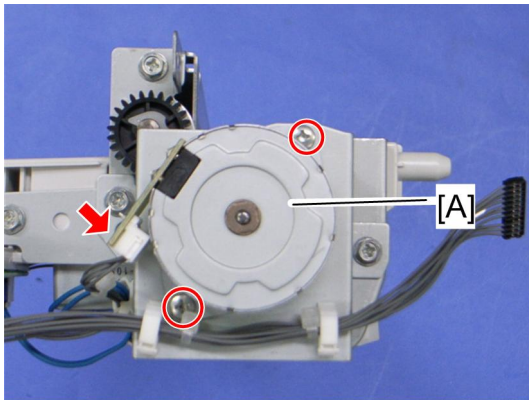


d427r506

3. Side tray motor [A] (🔩 x 2, 📡 x 1)


Side Tray Gate Solenoid

1. Side tray paper exit unit
2. Side tray upper cover (🔩 Side Tray Motor)

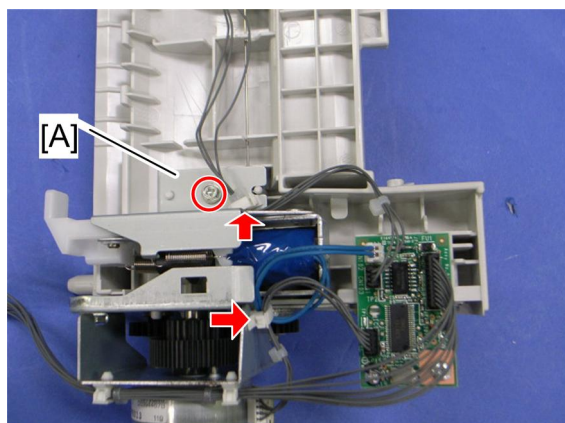

d427r507

3. Side tray gate solenoid assembly [A] (🔧 x 2, ⚙️ x 1, 🛠️ x 1)

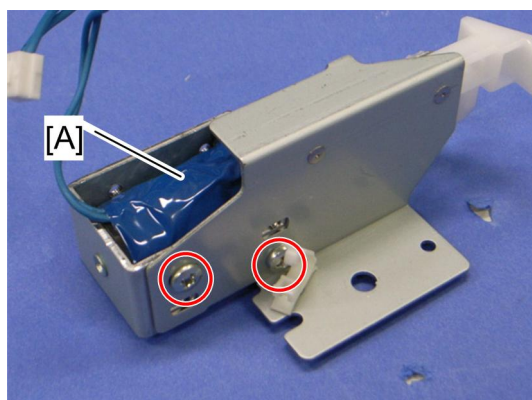


d427r508

4. Side tray gate solenoid [A] (🔧 x 2, spring x 1)

Side Tray Board

1. Side tray paper exit unit
2. Side tray upper cover (🔧 Side Tray Motor)

1

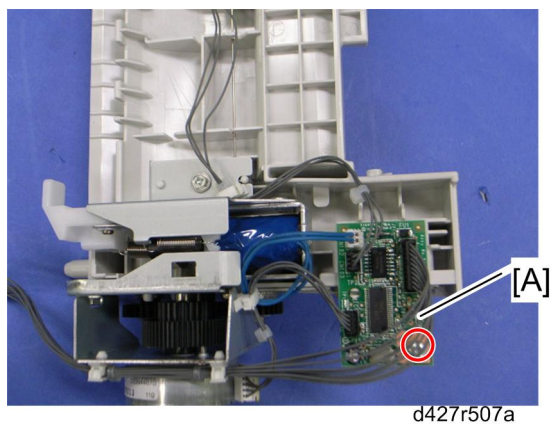

3. Side tray board [A] (🔧 x 1, 🛠️ x all)

MEMO

MEMO