

**Side Tray Type C5501/C5502
Machine Code: D542/D635
Field Service Manual**

September, 2011
Subject to change

TABLE OF CONTENTS

1. Replacement and Adjustment

Trays and Covers.....	3
Sub and Main Output Trays.....	3
Tray Left Front and Rear Covers.....	3
Electrical Components.....	5
Side Tray Control Board.....	5
Side Tray Drive Motor.....	5
Side Tray Relay Sensor.....	6
Side Tray Exit Sensor.....	7
INDEX.....	9




1. Replacement and Adjustment

Trays and Covers

1


Sub and Main Output Trays

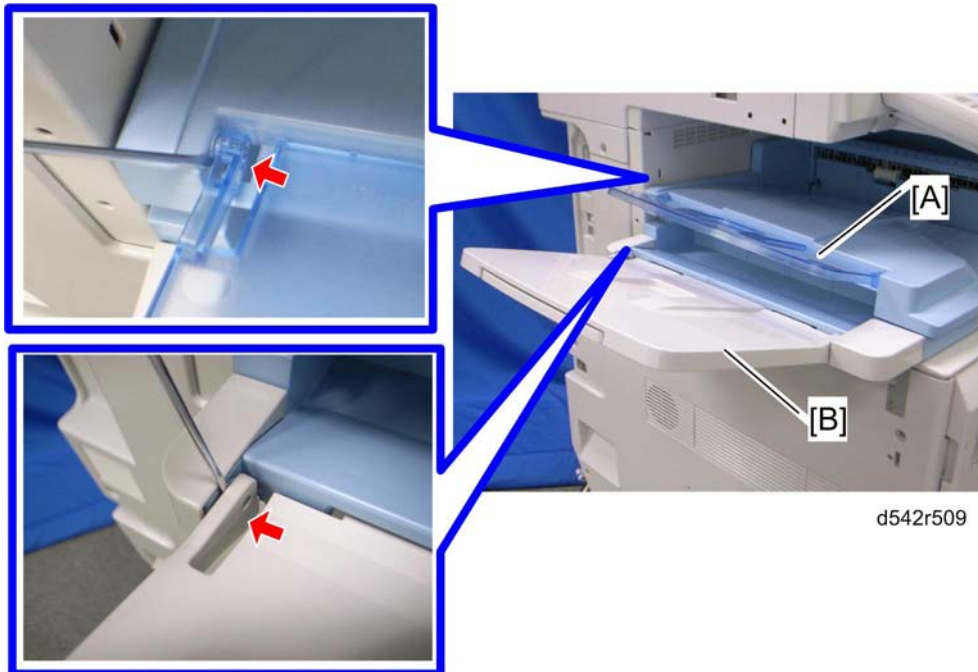

1. Sub output tray [A]
 - Release the rear tab of the sub output tray.
2. Main output tray [B]
 - Release the rear tab of the sub output tray.

Tray Left Front and Rear Covers

1. Sub and main output trays (🖨️ Sub and Main Output Trays)

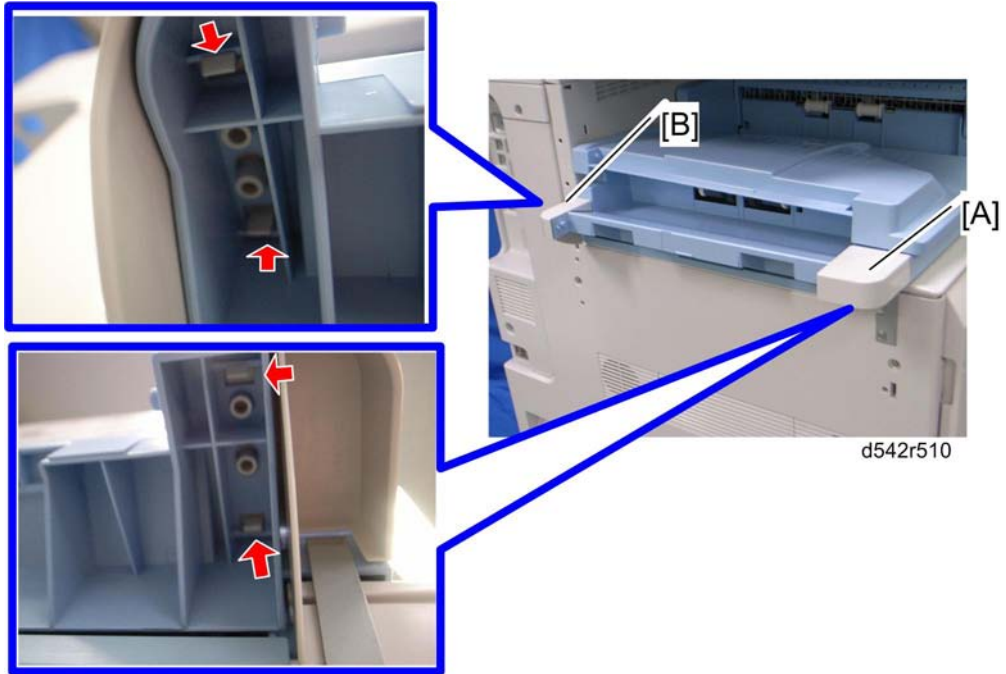



2. Tray left front cover [A]
 - Release the hooks of the tray left front cover.
3. Tray left rear cover [B]
 - Release the hooks of the tray left rear cover.

Electrical Components

Side Tray Control Board


1

1. Sub and main output trays (📄 Sub and Main Output Trays)
2. Tray left front and rear covers (📄 Tray Left Front and Rear Covers)
3. Side tray (📄 Installation Procedure in the base copier manual)

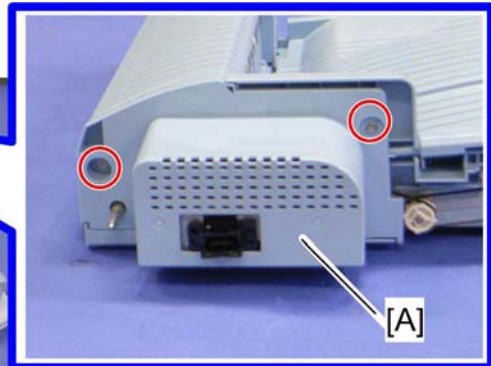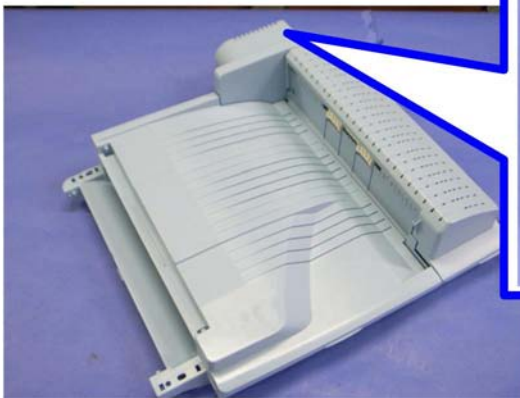

d542r501

4. Rear cover [A] (🔩 x 2)

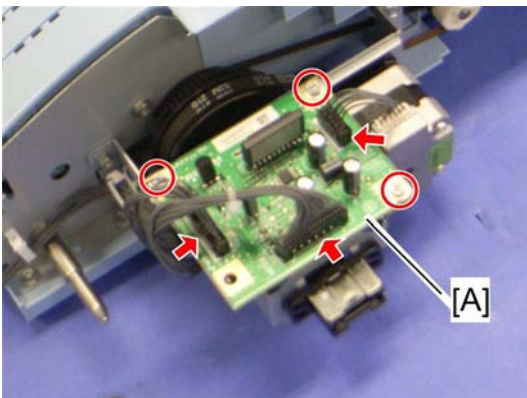

d542r502



5. Side tray control board [A] (🔩 x 3, 📄 x 3)

Side Tray Drive Motor


1. Sub and main output trays (📄 Sub and Main Output Trays)

2. Tray left front and rear covers (☞ Tray Left Front and Rear Covers)
3. Side tray (☞ Installation Procedure in the base copier manual)
4. Rear cover (☞ Side Tray Control Board)

1

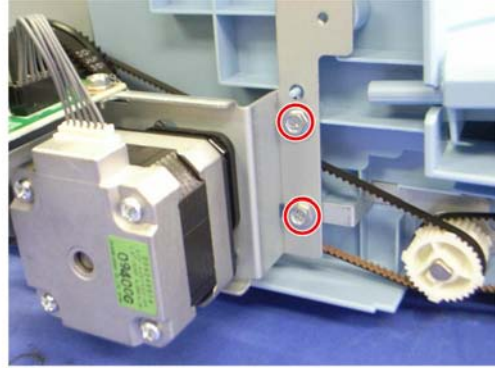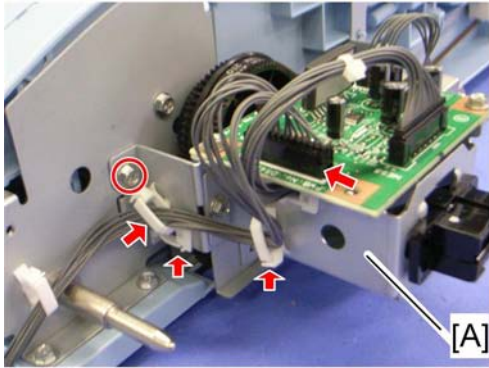


5. Bracket [A] (⚙ x 3, ⚙ x 3, ⚙ x 1, timing belt x 1)

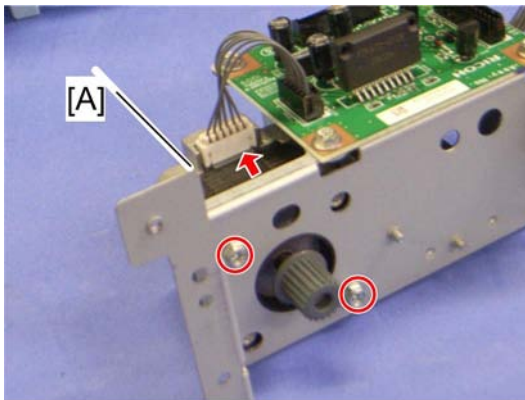

6. Side tray drive motor [A] (⚙ x 4, ⚙ x 1)


Side Tray Relay Sensor

1. Sub and main output trays (☞ Sub and Main Output Trays)
2. Tray left front and rear covers (☞ Tray Left Front and Rear Covers)
3. Side tray (☞ Installation Procedure in the base copier manual)

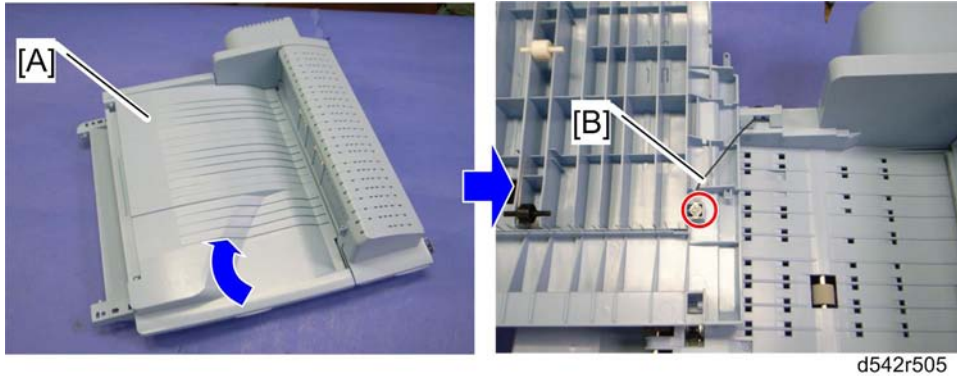

d542r505

4. Open the paper tray [A].
5. Remove the ground cable [B] ( x 1).
6. Remove the paper tray [A].
7. Turn over the side tray.

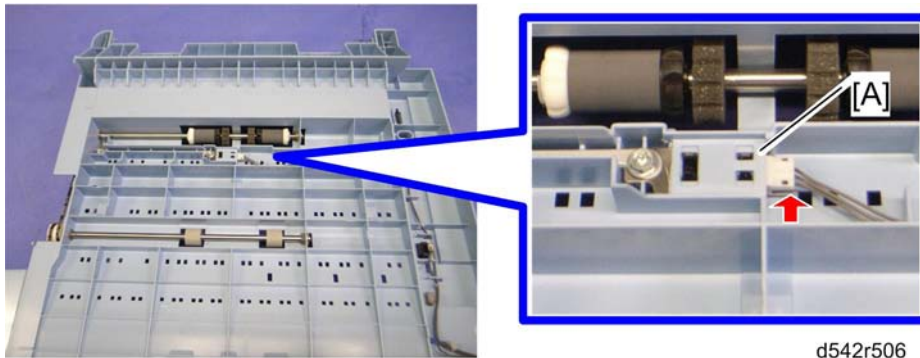


d542r506

8. Side tray relay sensor [A] ( x 1, hooks)
9. Turn over the side tray, and then remove the side tray relay sensor.



Side Tray Exit Sensor

1. Sub and main output trays ( Sub and Main Output Trays)
2. Tray left front and rear covers ( Tray Left Front and Rear Covers)
3. Side tray ( Installation Procedure in the base copier manual)
4. Paper tray ( Side Tray Relay Sensor)

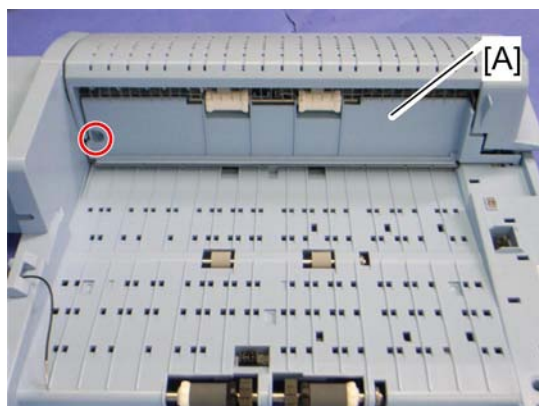

d542r507

5. Exit guide [A] ( x 1)

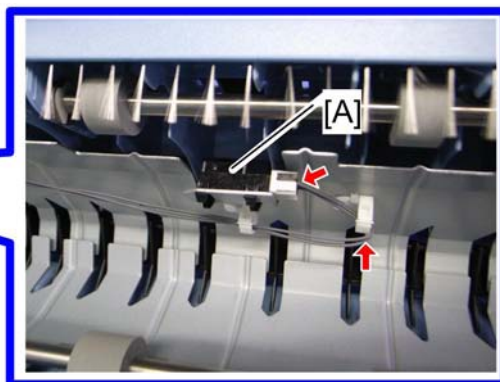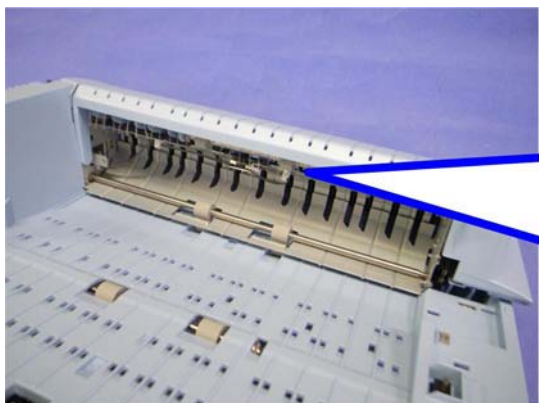

d542r508

6. Side tray exit sensor [A] ( x 1,  x 1, hooks)