

Side Tray Type M37
Machine Code: D3FX
Field Service Manual
Ver. 1.0


Latest Release: December, 2018
Initial Release: December, 2018
Copyright (c) 2018 Ricoh Co.,Ltd.

Symbols, Abbreviations and Trademarks

Symbols, Abbreviations

This manual uses several symbols and abbreviations. The meaning of those symbols and abbreviations are as follows:

Symbol	What it means
	Clip ring
	Screw
	Connector
	Clamp
	E-ring
	Flat Flexible Cable
	Timing Belt
SEF	Short Edge Feed
LEF	Long Edge Feed
K	Black
C	Cyan
M	Magenta
Y	Yellow
B/W, BW	Black and White
FC	Full color

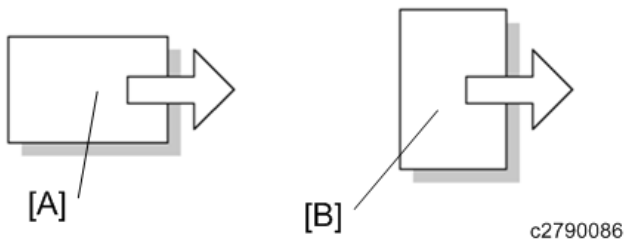

[A] Short Edge Feed (SEF)

[B] Long Edge Feed (LEF)

Trademarks

Adobe, Acrobat, PageMaker, PostScript, and PostScript 3 are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Ricoh Company, Ltd. is under license.

Firefox and Thunderbird are registered trademarks of the Mozilla Foundation.

Dropbox is a registered trademark or trademark of Dropbox, Inc.

Google, Android, and Chrome are trademarks of Google Inc.

Java is a registered trademark of Oracle and/or its affiliates.

Macintosh, OS X, Bonjour, Safari, and TrueType are trademarks of Apple Inc., registered in the U.S. and other countries.

Microsoft, Windows, Windows Server, Windows Vista, Internet Explorer, and Outlook are either registered trademarks or trademarks of Microsoft Corp. in the United States and/or other countries.

PictBridge is a trademark.

QR Code is a registered trademark of DENSO WAVE INCORPORATED in Japan and in other countries.

The SD and SD logo are trademarks of SD-3C, LLC.

UNIX is a registered trademark of The Open Group.

UPnP is a trademark of UPnP Implementers Corporation.



This product includes RSA BSAFE® Cryptographic software of EMC Corporation. RSA and BSAFE are registered trademarks or trademarks of EMC Corporation in the United States and other countries.

The proper names of Internet Explorer 11 is as follows:

- Windows® Internet Explorer® 11

The proper names of the Windows operating systems are as follows:

- The product names of Windows Vista are as follows:

Microsoft® Windows Vista® Ultimate

Microsoft® Windows Vista® Business

Microsoft® Windows Vista® Home Premium

Microsoft® Windows Vista® Home Basic

Microsoft® Windows Vista® Enterprise

- The product names of Windows 7 are as follows:

Microsoft® Windows® 7 Home Premium

Microsoft® Windows® 7 Professional

Microsoft® Windows® 7 Ultimate

Microsoft® Windows® 7 Enterprise

- The product names of Windows 8 are as follows:

Microsoft® Windows® 8

Microsoft® Windows® 8 Pro

Microsoft® Windows® 8 Enterprise

- The product names of Windows 10 are as follows:

Microsoft® Windows® 10 Home Premium

Microsoft® Windows® 10 Pro

Microsoft® Windows® 10 Enterprise

Microsoft® Windows® 10 Education

- The product names of Windows Server 2003 are as follows:

Microsoft® Windows Server® 2003 Standard Edition

Microsoft® Windows Server® 2003 Enterprise Edition

- The product names of Windows Server 2003 R2 are as follows:

Microsoft® Windows Server® 2003 R2 Standard Edition

Microsoft® Windows Server® 2003 R2 Enterprise Edition

- The product names of Windows Server 2008 are as follows:

Microsoft® Windows Server® 2008 Standard

Microsoft® Windows Server® 2008 Enterprise

- The product names of Windows Server 2008 R2 are as follows:

Microsoft® Windows Server® 2008 R2 Standard

Microsoft® Windows Server® 2008 R2 Enterprise

- The product names of Windows Server 2012 are as follows:

Microsoft® Windows Server® 2012 Foundation

Microsoft® Windows Server® 2012 Essentials

Microsoft® Windows Server® 2012 Standard

- The product names of Windows Server 2012 R2 are as follows:

Microsoft® Windows Server® 2012 R2 Foundation

Microsoft® Windows Server® 2012 R2 Essentials

Microsoft® Windows Server® 2012 R2 Standard

- The product names of Windows Server 2016 R2 are as follows:

Microsoft® Windows Server® 2016 R2 Essentials

Microsoft® Windows Server® 2016 R2 Standard

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights to those marks.

Microsoft product screen shots reprinted with permission from Microsoft Corporation.

Table of Contents

1. Detailed Descriptions	2
Changes from the Previous Machine	2
Specifications.....	3
Parts Layout.....	4
Mechanism	5
Drive Mechanism	5
Paper Transport Mechanism	5
2. Replacement and Adjustment	6
Side Tray Motor (M1) Unit	6
Paper Exit Sensor (S1).....	10
Side Tray Paper Exit Sensor (S2)	13
Paper Exit Tray Set Switch (SW2)	14
Paper Exit Switching Unit Set Switch (SW1)	15

1. Detailed Descriptions


Changes from the Previous Machine

No difference mechanically.

Specifications


Item	Specifications
Paper size:	A3 SEF, A4 SEF/LEF, A5 SEF/LEF, A6 SEF, B4 JIS SEF, B5 JIS SEF/LEF, B6 JIS SEF, 11 x 17 SEF, 8 1/2 x 14 SEF, 8 1/2 x 13 LEF, 8 1/2 x 11 SEF/LEF, 8 1/4 x 14 SEF, 8 1/4 x 13 SEF, 8 x 13 SEF, 8 x 10 SEF, 7 1/4 x 10 1/2 SEF/LEF, 5 1/2 x 8 1/2 SEF, 4 1/8 x 9 1/2 SEF/LEF, 3 7/8 x 7 1/2 SEF/LEF, C5 Env SEF/LEF, C6 Env SEF/LEF, DL Env SEF/LEF, 8K SEF, 16K SEF/LEF, 12 x 18 SEF, 11 x 15 SEF, 10 x 14 SEF, SRA3 SEF, SRA4 SEF/LEF, custom size
Paper weight:	52–300 g/m ² (14 lb. Bond–110 lb. Cover)
Paper capacity (80 g/m ² , 20 lb. Bond):	<ul style="list-style-type: none"> Internal tray 1: 250 sheets: A4, 8 1/2 x 11 or smaller 125 sheets: B4 JIS, 8 1/2 x 14 or larger External tray: 125 sheets
Power consumption:	12 W (Power is supplied from the main unit.)
Dimensions (W x D x H):	800 x 549 x 156 mm (31.5 x 21.7 x 6.2 inches)
Weight:	Approx. 4 kg (8.9 lb.)

Parts Layout

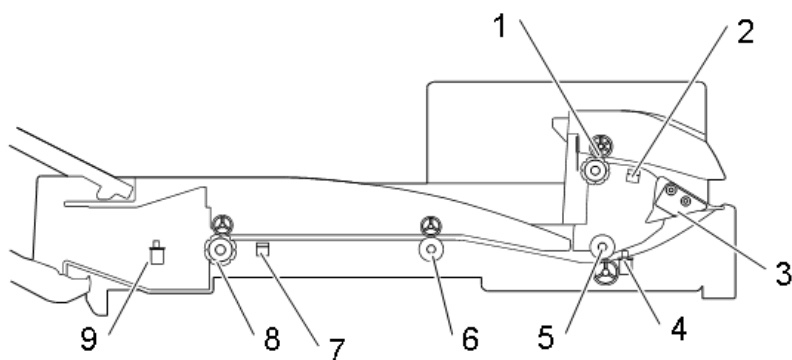

d7250001a

No.	Description	No.	Description
1	Paper exit roller	6	Transport roller 2
2	Paper exit sensor (S1)	7	Side tray paper exit sensor (S2)
3	Paper junction gate	8	Transport roller 3
4	Paper exit switching unit set switch (SW1)	9	Paper exit tray set switch (SW2)
5	Transport roller 1	-	-

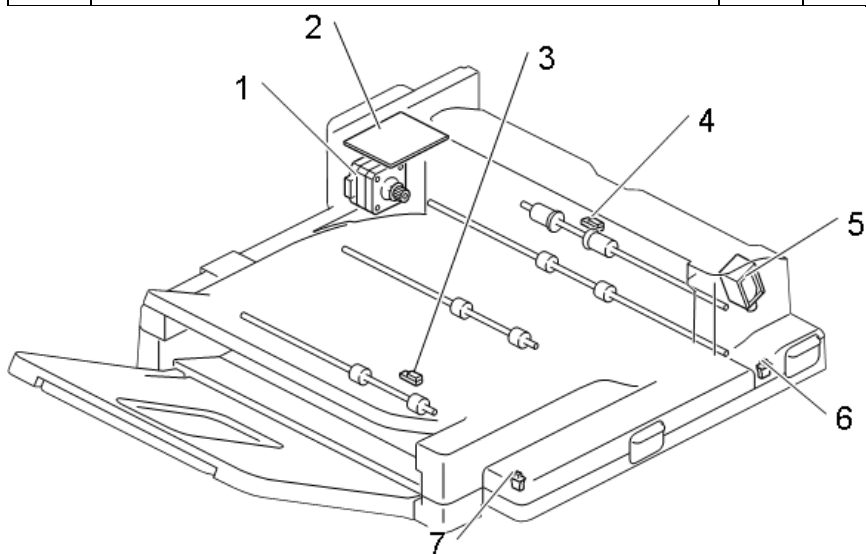


d7250101a

No.	Description	No.	Description
1	Side tray motor (M1)	5	Paper junction gate solenoid (SOL1)
2	Controller board (PCB1)	6	Paper exit switching unit set switch (SW1)
3	Side tray paper exit sensor (S2)	7	Paper exit tray set switch (SW2)
4	Paper exit sensor (S1)	-	-

Mechanism

Drive Mechanism


The paper exit roller and transport rollers 1-3 are driven by the side tray motor through gears and a timing belt.

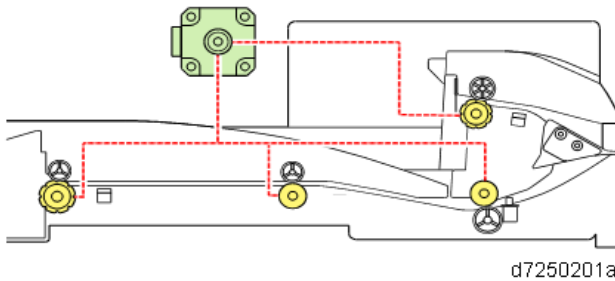

Paper Transport Mechanism

The paper junction gate solenoid drives the paper junction gate. The paper junction gate changes the path of the paper transported from the main machine's paper exit section to the upper or side paper exit tray.

Paper delivered to the upper paper exit tray is ejected by the paper exit roller, which is provided in the paper exit transport path. On the other hand, paper delivered to the side paper exit tray is transported by the transport roller, which is provided in the transport path. Two sensors detect paper jams.

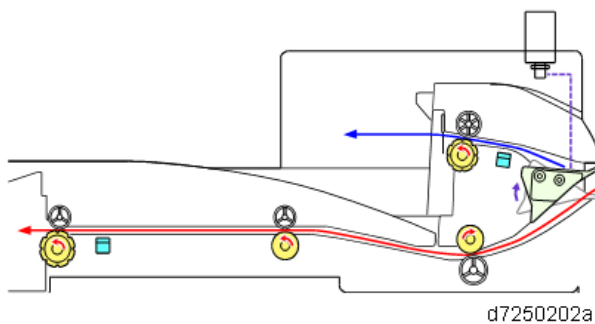

2. Replacement and Adjustment

Side Tray Motor (M1) Unit

1. Remove the upper extension tray [A], left extension tray [B].




d1462840

2. Remove the fixing plate [A] (⌀×1).




d1462493

- 3.** Remove the side tray [A] (⌚×1).

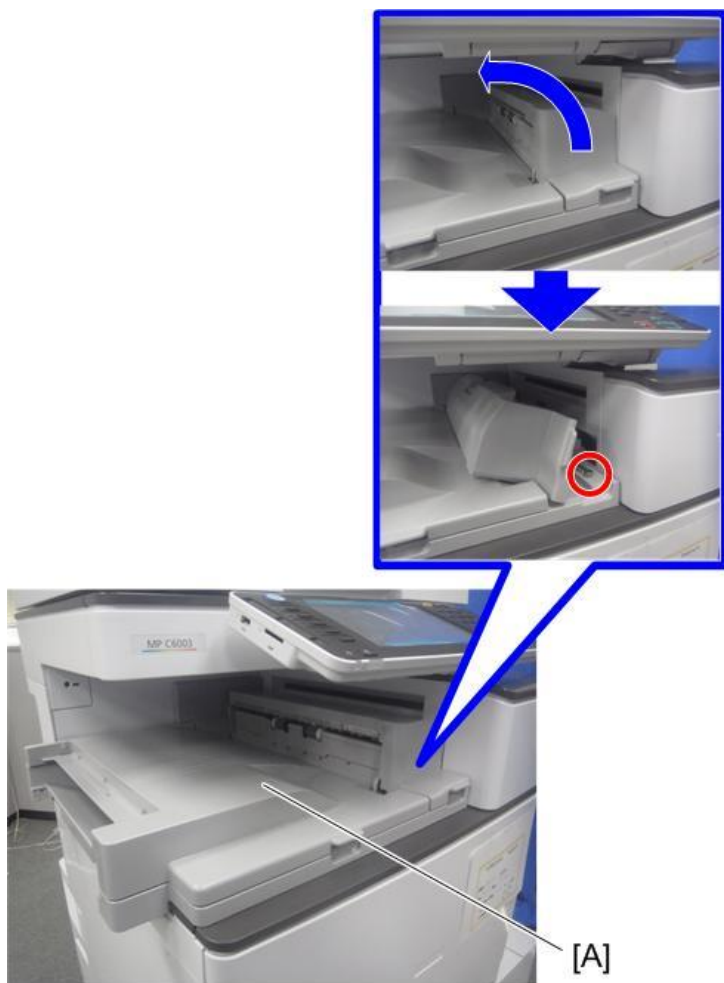

d1462842


- 4.** Remove the side tray motor unit cover [A] (⌚×2).

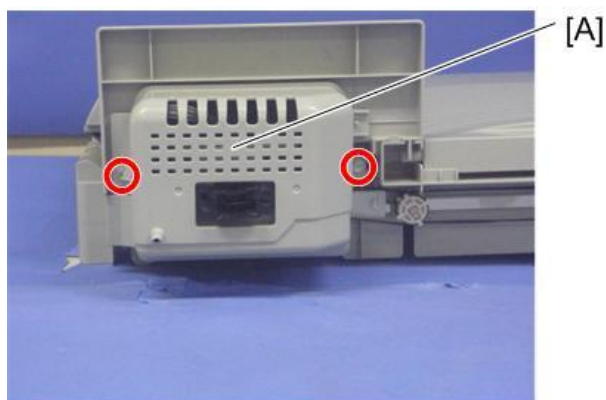

d1462843



2.Replacement and Adjustment

- 5.** Remove the side tray rear cover [A] (🔩×1).

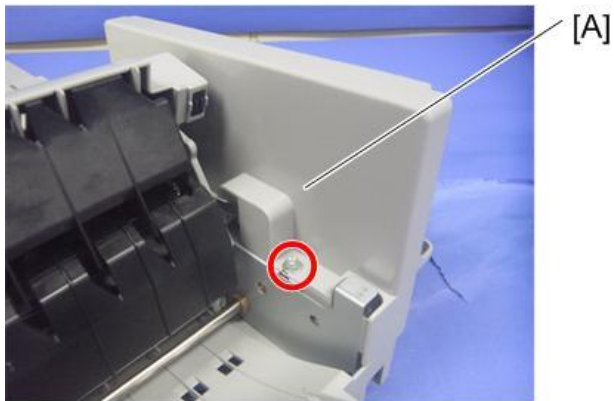


d1462844


- 6.** Remove the drawer connector [A] together with the bracket.

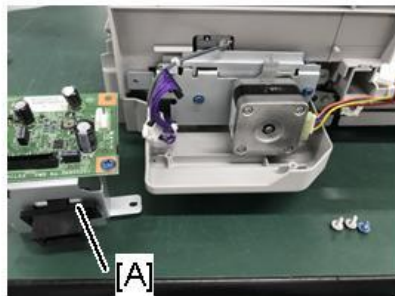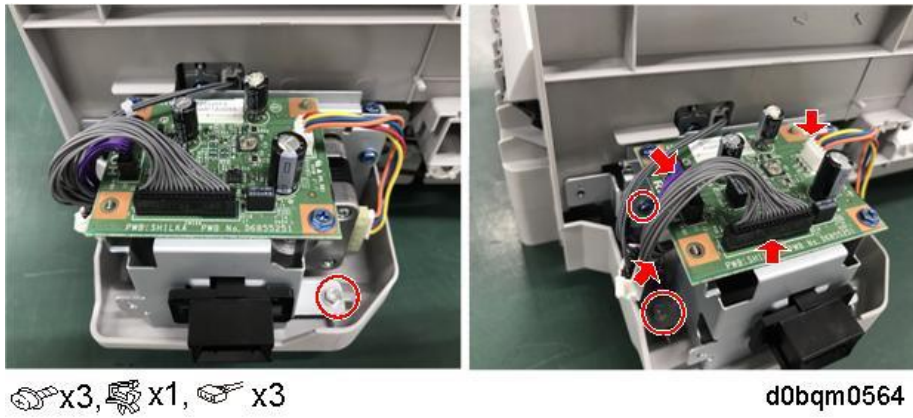


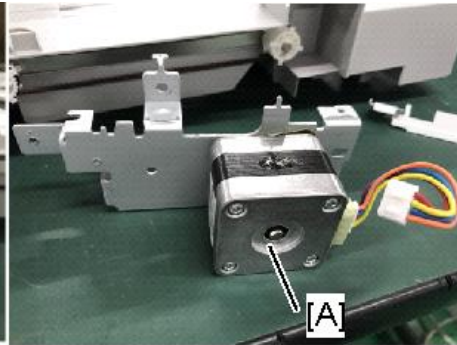
- 7.** Remove the bracket [A].

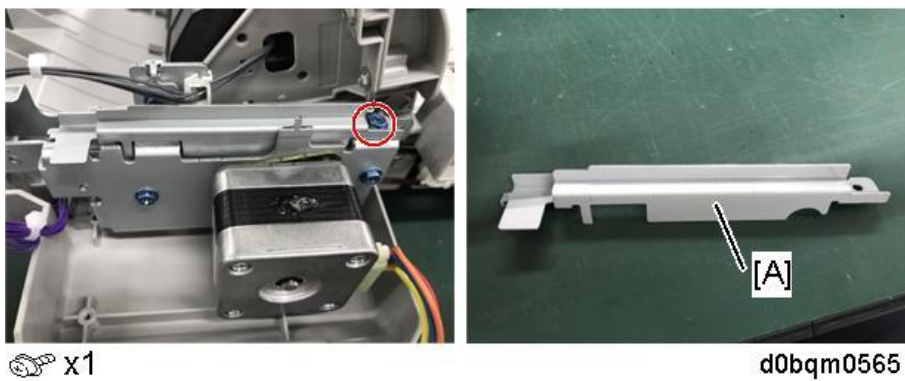

8. Remove the side tray motor (M1) unit [A].

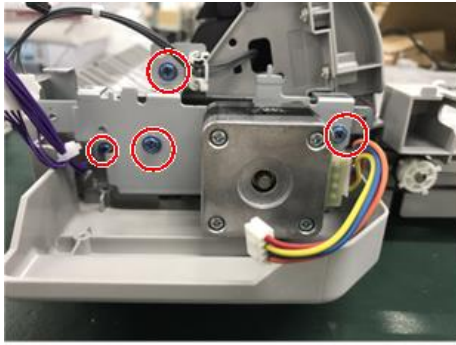

 x4




d0bqm0566

2.Replacement and Adjustment

Paper Exit Sensor (S1)

1. Remove the side tray. (Side Tray Motor (M1) Unit)
2. Remove the paper exit tray [A].

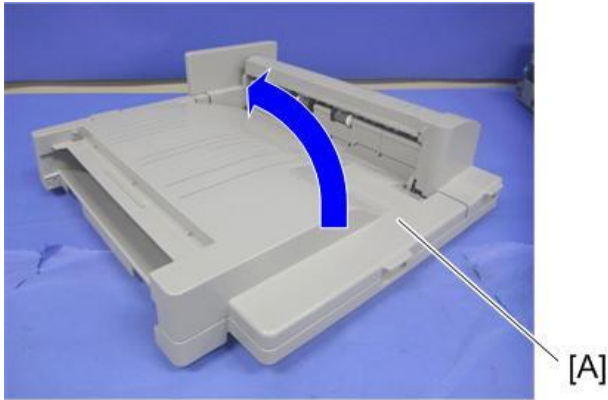


d1462846

3. Remove the side tray motor unit cover. (Side Tray Motor (M1) Unit)
4. Remove the side tray rear cover. (Side Tray Motor (M1) Unit)
5. Remove the side tray paper exit cover [A] (⌀×1).




d1462847

- 6.** Remove the paper exit switching unit [A] (🔧×1, 🛠️×1, 🛠️×1).

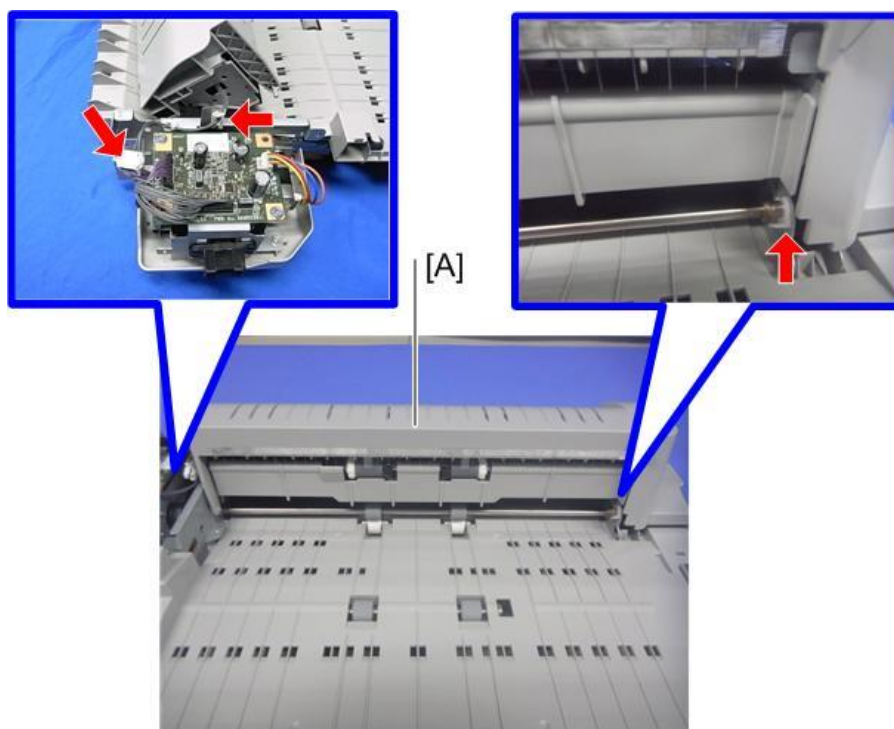


d146z0051

- 7.** Remove the paper exit switching unit cover [A] (🔧×4).

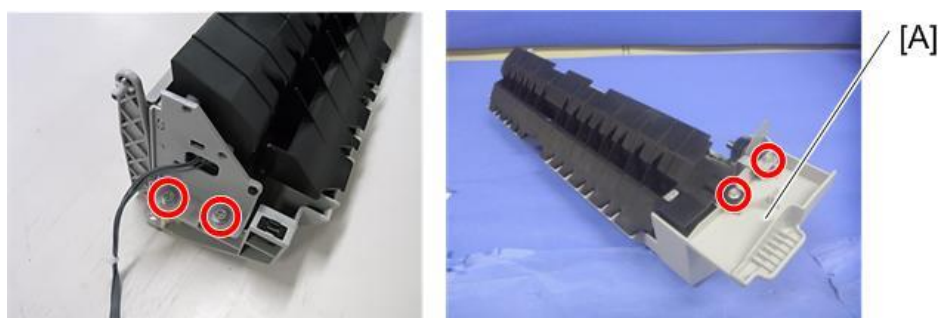

d146z0049


- 8.** Remove the guide plate [A].

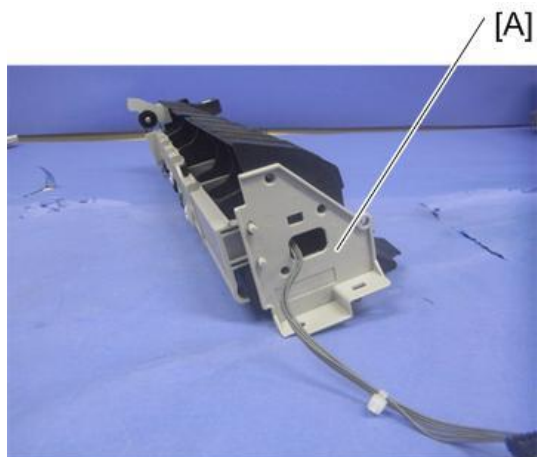

d1462850


2.Replacement and Adjustment

- 9.** Remove the guide plate [A] (🔩×1).

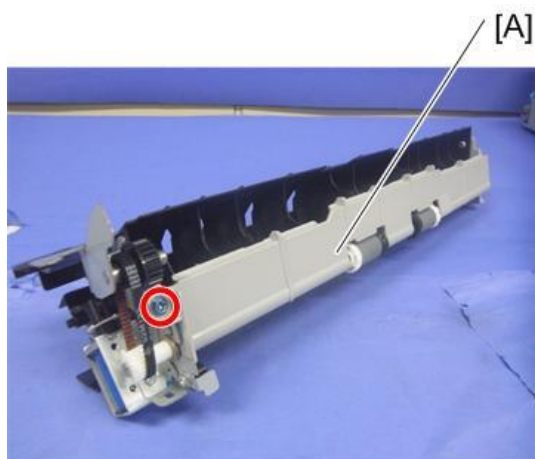

d1462851

- 10.** Remove the paper exit sensor (S1) [A] (🔧×1).

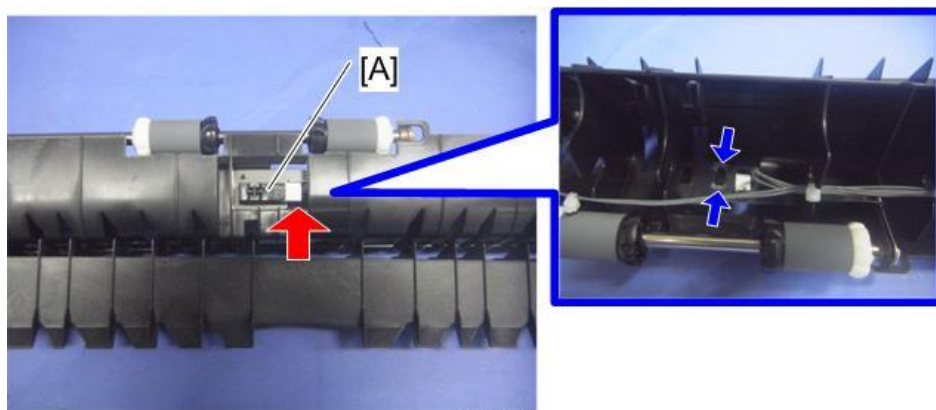

d1462852


Side Tray Paper Exit Sensor (S2)

1. Remove the paper exit tray. ([Paper Exit Sensor \(S1\)](#))
2. Place the unit upside down.



d1462853

3. Remove the side tray paper exit sensor (S2) [A] (🔧 ×1).

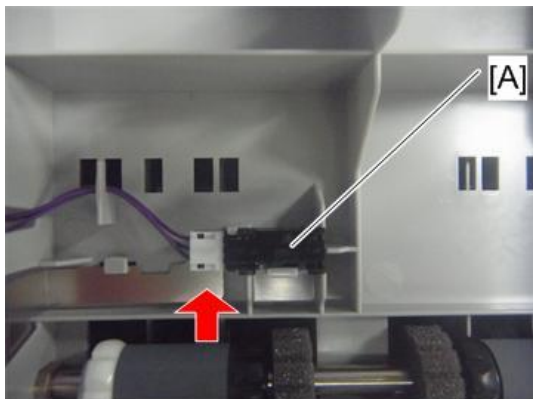

d1462854

2.Replacement and Adjustment


Paper Exit Tray Set Switch (SW2)

1. Remove the paper exit tray. ([Paper Exit Sensor \(S1\)](#))
2. Remove the paper exit set switch cover [A].



d1462855


3. Remove the paper exit tray set switch (SW2) [A] (🔧 ×1).

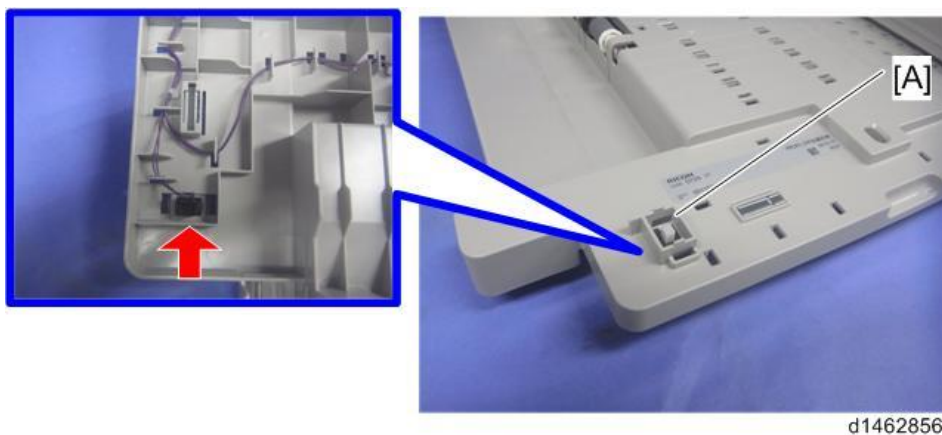

d1462856


Paper Exit Switching Unit Set Switch (SW1)

1. Open the paper exit switching unit [A].

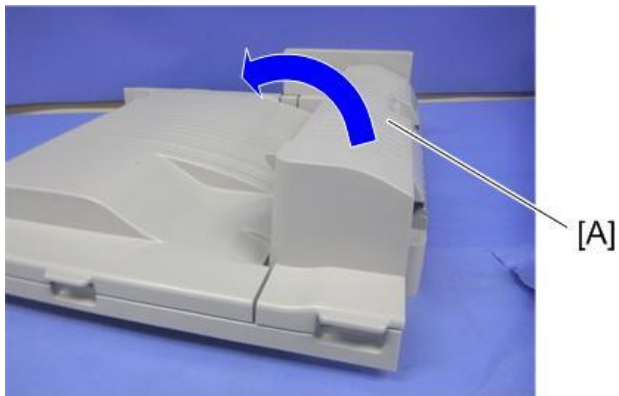


d1462857

2. Remove the paper exit switching unit switch cover [A].

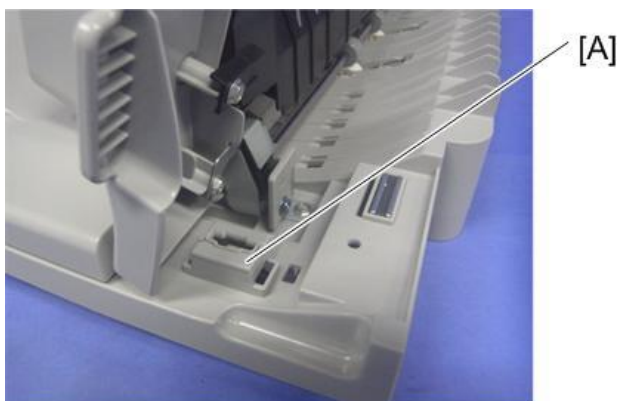

d1462858

3. Remove the paper exit switching unit set switch (SW1) [A] (🔧 ×1).

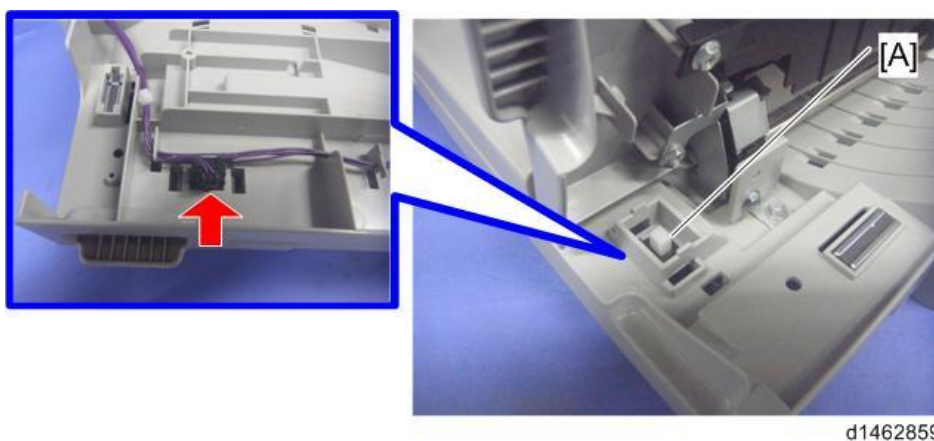

d1462859