

Booklet Finisher SR3000 (B793)

Booklet Finisher SR3000 (B793)

 
PARTS CATALOG

This catalog gives the numbers and names of parts on this machine.

1.Exterior (B793)	2	19.Decals And Documents (B793)	38
2.Paper Transfer (B793)	4	Parts Index	42
3.Paper Exit (B793)	6		
4.Shift Transfer Section (B793).....	8		
5.Staple Transfer Section 1 (B793).....	10		
6.Staple Transfer Section 2 (B793).....	12		
7.Staple Transfer Section 3 (B793).....	14		
8.Jogger Unit (B793)	16		
9.Staple Transfer Section 1 (B793).....	18		
10.Staple Transfer Section 2 (B793).....	20		
11.Staple Transfer Section 3 (B793).....	22		
12.Paper Crimp Section 1 (B793)	24		
13.Paper Crimp Section 2 (B793)	26		
14.Paper Crimp Section 3 (B793)	28		
15.Tray Drive Section (B793).....	30		
16.Shift Tray Paper Exit (B793)	32		
17.Drive Section (B793)	34		
18.Electrical Section (B793).....	36		

September 16, 2008

1.Exterior (B793)

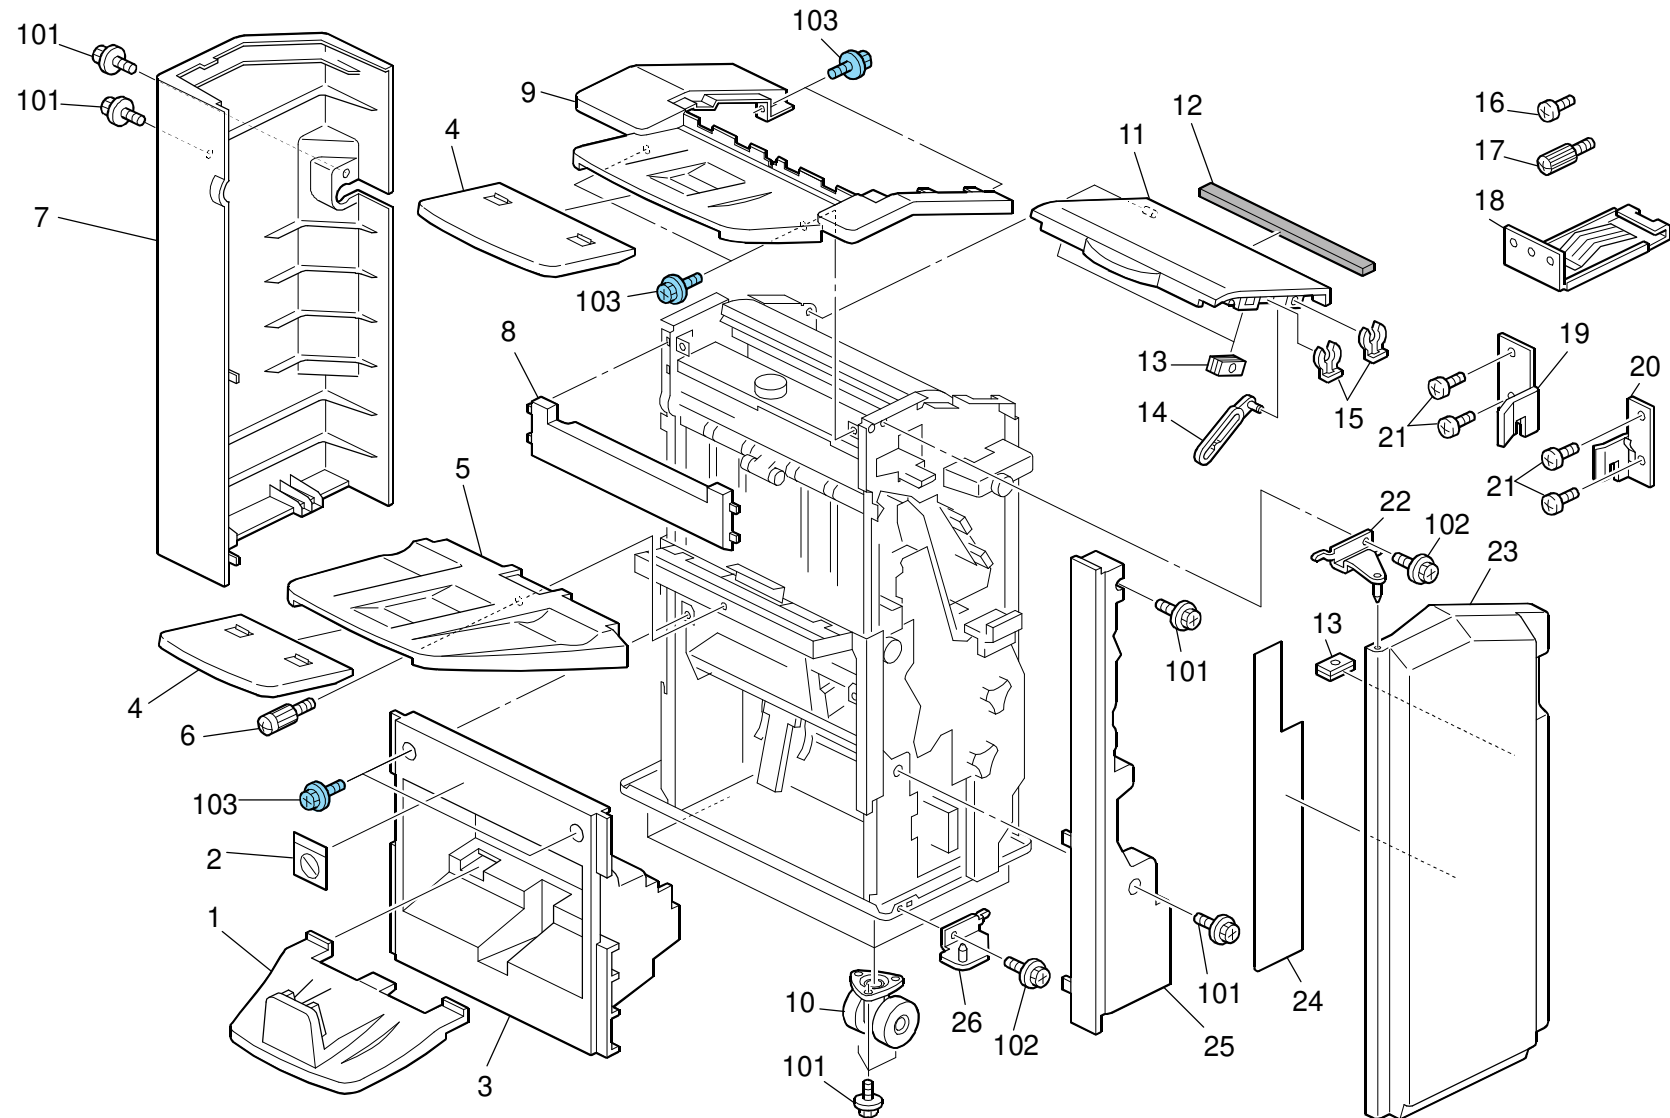


1.Exterior (B793)



Index No.	Part No.	Description	Q'ty Per Assembly
1	B804 3853	Tray:Paper Crimp Sub-unit	1
2	B793 7898	Decal:Paper Exit Sub-unit	1
3	B793 6151	Cover - Left Lower	1
4	B700 3420	Tray:Auxiliary	2
5	B793 3311	Tray	1
6	B714 3115	Knob Screw:Document Feeder:Fix	1
7	B793 6121	Cover - Rear	1
8	B793 6141	Cover - Left Upper	1
9	B793 6111	Cover - Upper	1
10	B793 1313	Caster:H43	4
11	B793 6171	Cover - Upper Open And Close	1
12	B793 6201	Spacer Cushion	2
13	AG07 0514	Magnet Catch	3
14	B408 2731	Arm - Top Cover	1
15	5447 2681	Snap Ring	2
16	B408 1390	Flat Screw:Groove Type	2
17	B408 1412	Flat Screw	1
18	B408 1429	Ground Plate Bracket	1
19	B793 1421	Bracket:Coupling:Ground Plate:Rear:Ass'y	1
20	B793 1425	Bracket:Coupling:Ground Plate:Front:Ass'y	1
21	B408 1431	Flat Screw:Coupling	4
22	B793 6132	Upper Door Hinge	1
23	B793 6131	Cover - Front	1
24	B793 7861	Decal - Misfeed Removal	1
25	B793 6161	Cover - Left Sideways	1
26	B793 6134	Lower Door Hinge	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3008N	Tapping Screw - M3x8	
102	0451 3006N	Tapping Screw - 3x6	
103	0454 3008Q	Tapping Screw:3x8	

 2.Paper Transfer (B793)

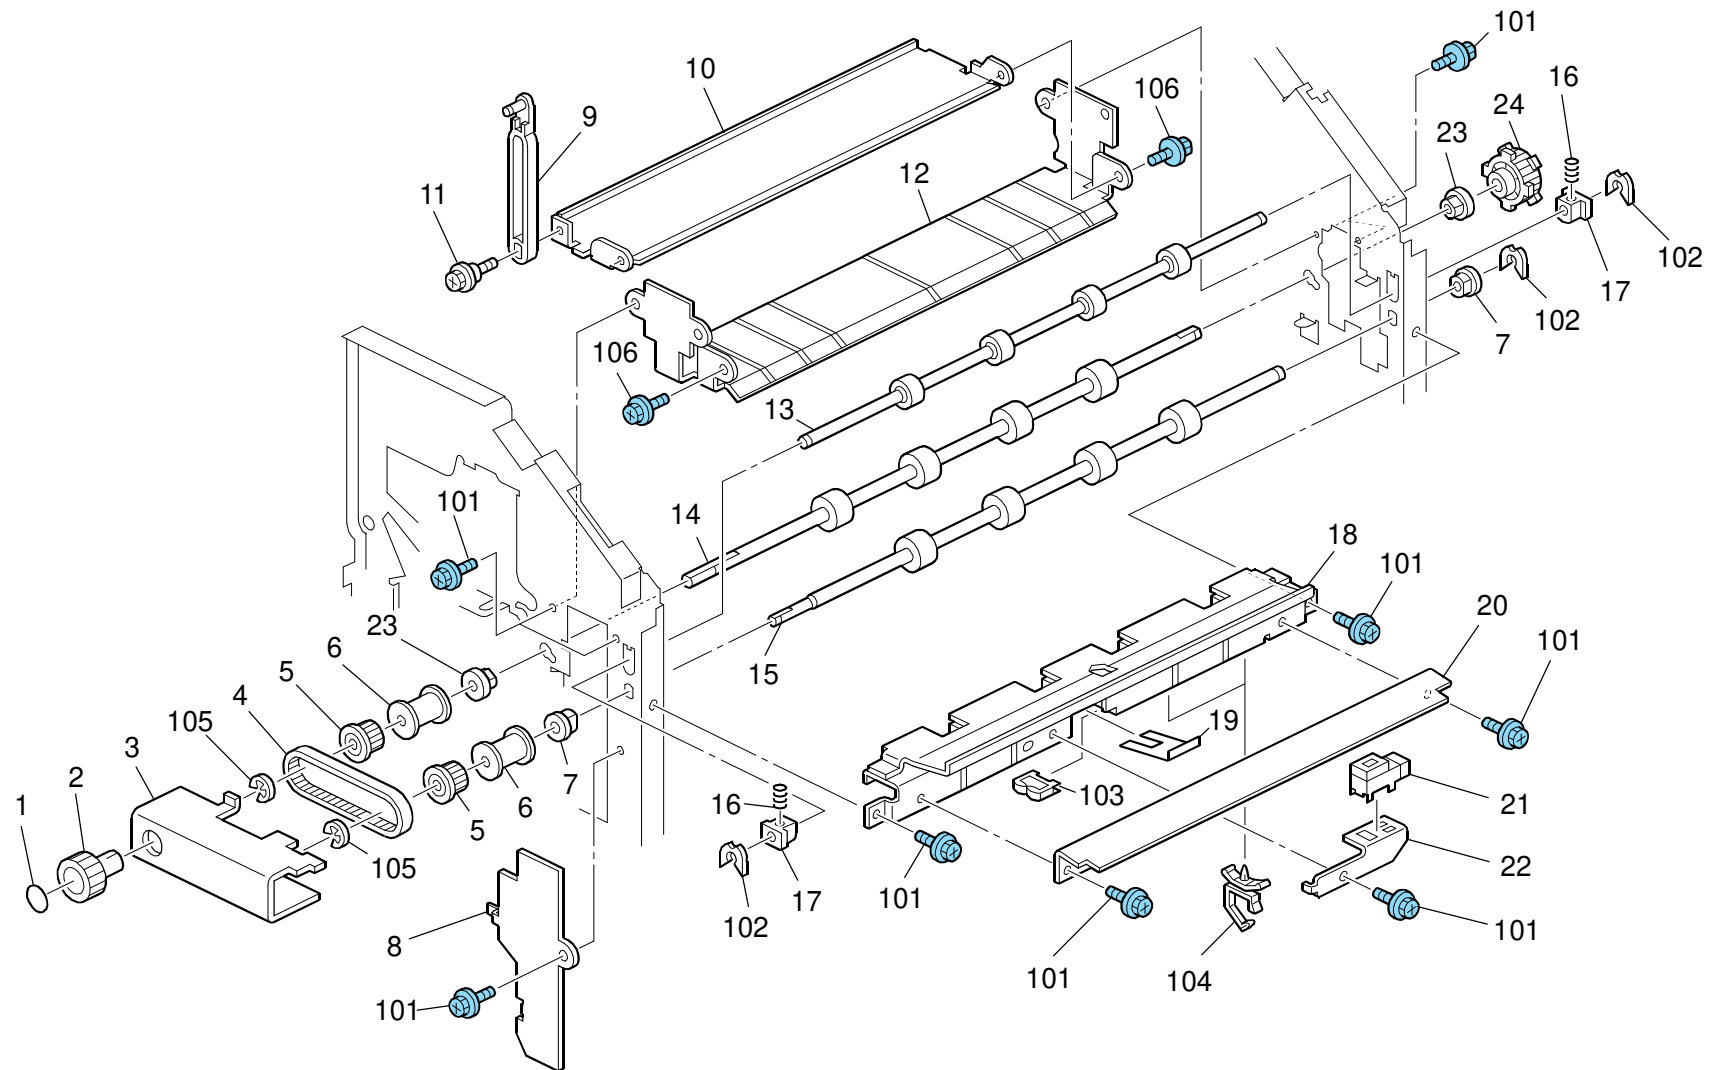


2.Paper Transfer (B793)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B793 7866	Decal - Knob	1
2	B408 2281	Knob - Transfer Roller	1
3	B793 1221	Inner Cover - Front	1
4	AA04 3616	Timing Belt - 40S3M210	1
5	A697 2260	Pulley - 17T	2
6	B793 2212	Transport Roller Spacer	2
7	5053 0223	Bushing - 8mm	2
8	B793 1512	Toner Hopper Cover - Front	1
9	B793 2613	Link - Guide Plate Cover	1
10	B793 2612	Guide Plate - Upper	1
11	AA14 3823	Tapping Screw	1
12	B793 2611	Guide Plate - Lower	1
13	B793 2161	Entrance Driven Roller	1
14	B793 2221	Transport Roller - Long	1
15	B793 2211	Entrance Transport Roller	1
16	B793 2162	Compression Spring - Transport Roller	2
17	B793 2163	Bushing - Roller Driven	2
18	B793 2176	Guide Plate:Entrance:Ass'y	1
19	B793 2178	Guide:Guide Plate:Connecting	1
20	B793 2179	Guide Plate:Connecting:Lower	1
21	GW01 0007	Photo Refiection Sensor:Exit	1
22	B793 2164	Entrance Sensor Bracket	1
23	5053 0447	Bushing - 6mm	2
24	B793 2217	Timing Pulley - 24T	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 3006Q	Tapping Screw - M3x6	
102	0805 0088	Retaining Ring - M6	
103	1105 0328	Harness Clamp - ES-0505	
104	1105 0623	Clamp - LBWS-0206S-V0	
105	0720 0040E	Retaining Ring - M4	
106	0454 3008Q	Tapping Screw:3x8	

 3.Paper Exit (B793)

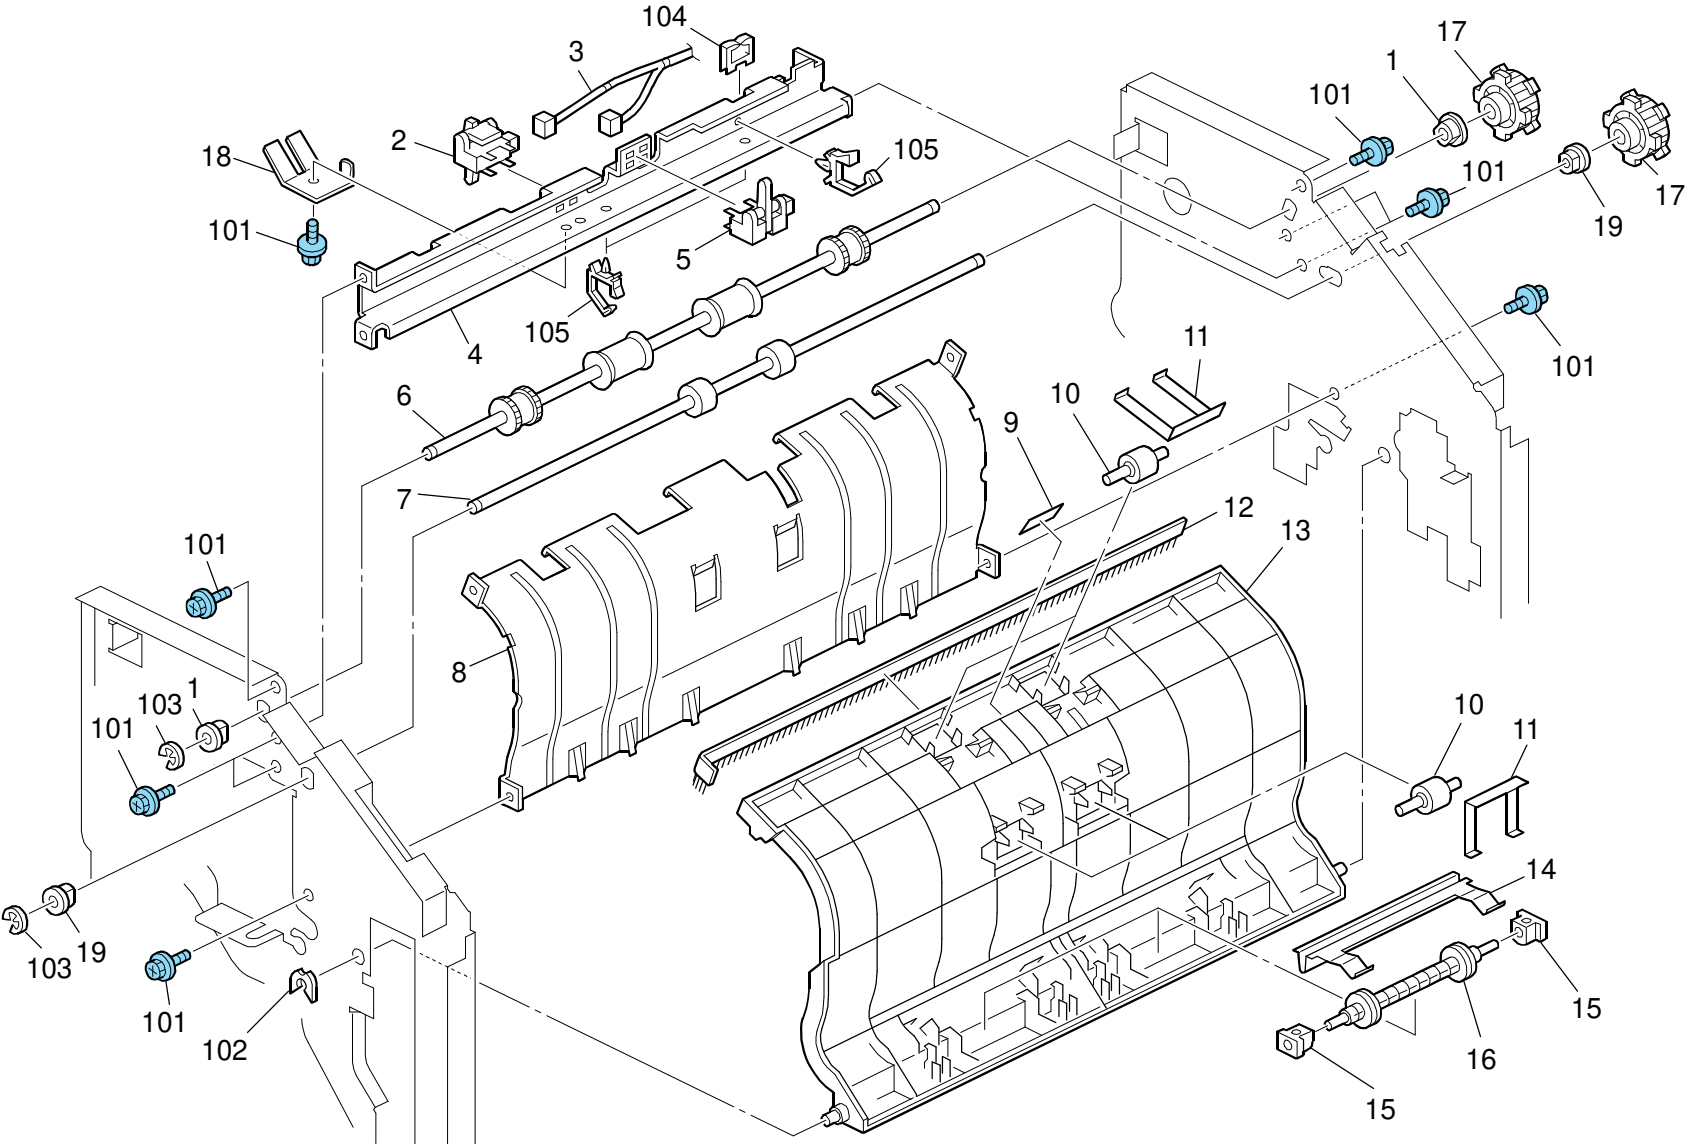


3.Paper Exit (B793)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AA08 2101	Bushing - 6x10x6	2
2	AW02 0178	Paper Feed Sensor	1
3	B793 5225	Harness - Exit Proof Tray	1
4	B793 2452	Bracket:Sensor:Proof Tray	1
5	AW02 0184	Paper Feed Sensor	1
6	B408 2232	Exit Roller:Proof Tray	1
7	B408 2211	Transfer Roller	1
8	B793 2121	Guide Plate - Proof Tray	1
9	B793 7871	Decal - Proof Tray	1
10	B793 2148	Roller:Driven:DIA14	4
11	B793 2144	Spring Plate - Roller Driven	4
12	B793 2145	Discharge Brush - Proof Tray	1
13	B793 2146	Guide Plate - Proof Tray	1
14	B793 2142	Spring Plate - Proof Tray	2
15	AA08 0237	Bushing - 4x5x7	4
16	AF02 2097	Driven Roller	2
17	B793 2217	Timing Pulley - 24T	2
18	B793 2453	Guide:Sensor:Proof Tray	1
19	5053 0447	Bushing - 6mm	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 3006Q	Tapping Screw - M3x6	
102	0805 0089	Retaining Ring - M4	
103	0720 0040E	Retaining Ring - M4	
104	1105 0328	Harness Clamp - ES-0505	
105	1105 0623	Clamp - LBWS-0206S-V0	

 4.Shift Transfer Section (B793)

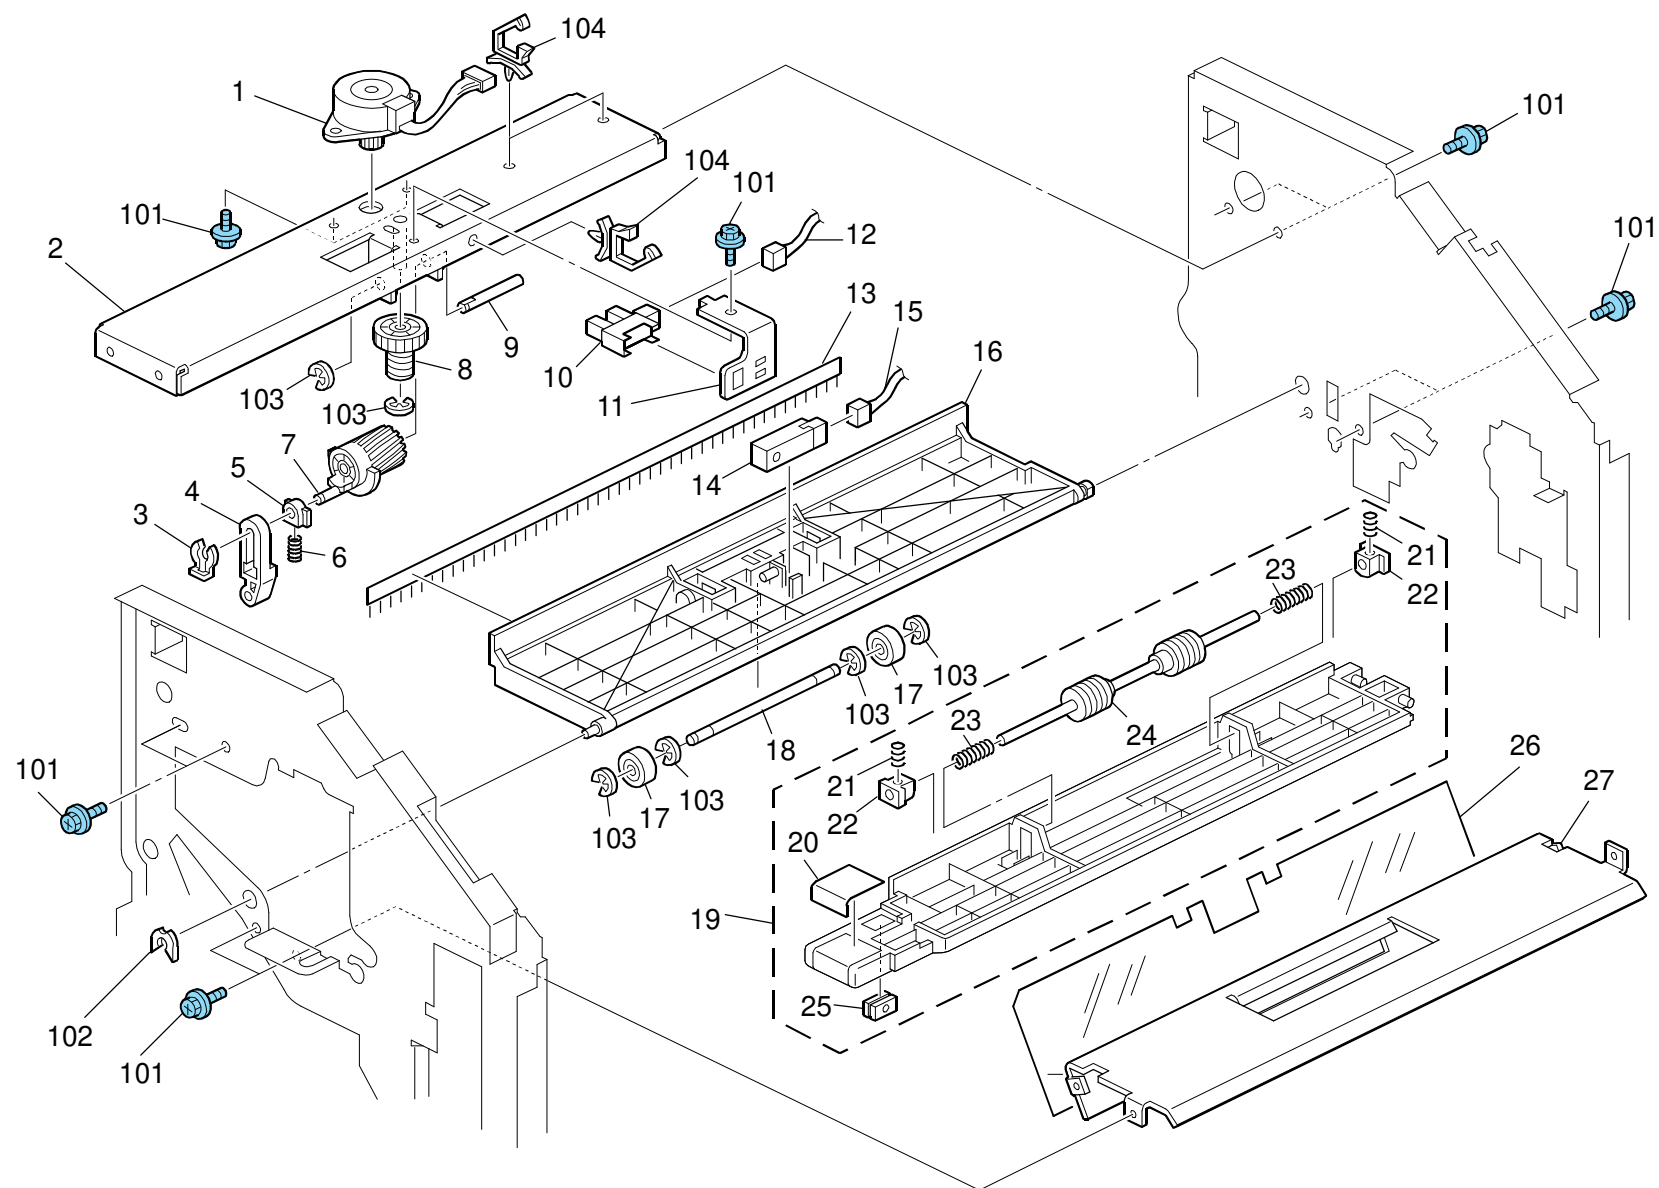


4.Shift Transfer Section (B793)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B793 5830	Stepper Motor DC24V	1
2	B793 2830	Guide Plate Stay	1
3	5447 2681	Snap Ring	1
4	B793 2842	Guide Plate Link	1
5	B468 2882	Link Bushing	1
6	B793 2843	Compression Spring - Guide Plate	1
7	B793 2841	Worm Wheel - 20Z	1
8	B408 2831	Gear - Z53	1
9	B408 2833	Shaft - Worm Wheel	1
10	AW02 0141	Photointerruptor	1
11	B793 2845	Bracket:Sensor	1
12	B793 5227	Harness - Sensor	1
13	B408 2813	Discharge Brush:Exit:Open and Close	1
14	AW01 0109	Photo Refiection Sensor:PS117ED1	1
15	B793 5226	Harness - Paper Feed Sensor	1
16	B793 2811	Exit Guide Plate	1
17	A681 2742	Driven Exit Roller	2
18	A666 4210	Shaft - Exit Roller	1
19	B793 2185	Guide Plate Ass'y	1
20	B793 7865	Decal - Shift Open and Close	1
21	AA06 3529	Pressure Spring - 14.5mm	2
22	B408 2175	Bushing - Roller Slide	2
23	B408 2174	Spring	2
24	B408 2173	Slide Roller	1
25	AG07 0514	Magnet Catch	1
26	B793 2173	Exit Guide	1
27	B793 2172	Guide Plate - Shift Lower	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 3006Q	Tapping Screw - M3x6	
102	0805 0089	Retaining Ring - M4	
103	0720 0040E	Retaining Ring - M4	
104	1105 0623	Clamp - LBWS-0206S-V0	

 5.Staple Transfer Section 1 (B793)

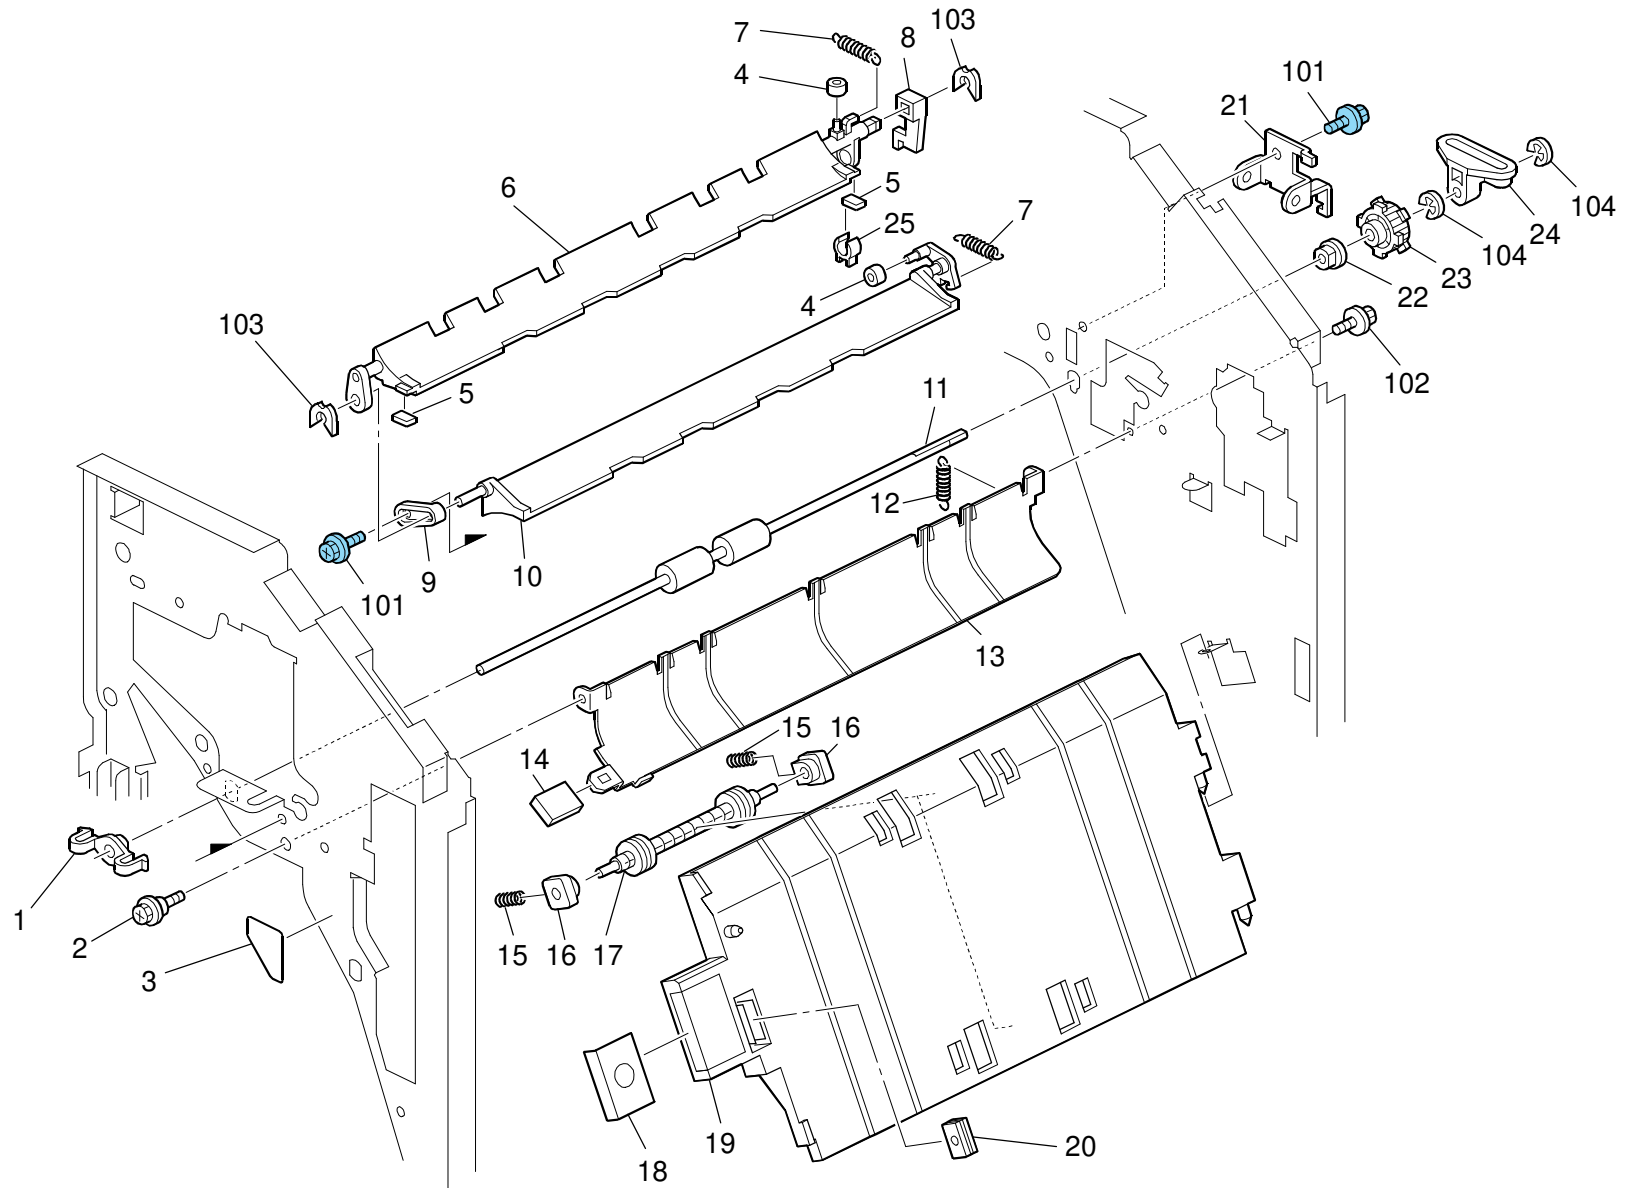


5.Staple Transfer Section 1 (B793)



Index No.	Part No.	Description	Q'ty Per Assembly
1	B408 2312	Bushing - Roller Slide	1
2	AA14 3790	Screw:Contact Point	1
3	B793 7873	Decal - Open and Close	1
4	A548 1317	Lever Cushion	2
5	B352 2207	Pad - Stapler Tray	2
6	B793 2531	Gate Pawl - Proof Tray	1
7	B793 2505	Tension Spring - Gate Pawl	2
8	B793 2532	Gate Pawl Arm	1
9	B793 2551	Bushing - Gate Pawl	1
10	B793 2541	Gate Pawl - Staple	1
11	B408 2311	Slide Roller	1
12	B793 2153	Tension Spring - Open and Close	1
13	B793 2152	Guide Plate - Open and Close	1
14	B793 2154	Release Knob	1
15	AA06 3529	Pressure Spring - 14.5mm	4
16	AA08 0237	Bushing - 4x5x7	4
17	AF02 2097	Driven Roller	2
18	B793 7864	Decal - Lengthwise	1
19	B793 2156	Guide Plate - Lengthwise	1
20	AG07 0514	Magnet Catch	1
21	B793 2182	Guide Plate Bracket	1
22	AA08 2101	Bushing - 6x10x6	1
23	B408 2313	Pulley - T24	1
24	B793 2321	Slide Roller Link	1
25	B793 2542	Bushing - Inner Back	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 3006Q	Tapping Screw - M3x6	
102	0451 3010N	Tapping Screw:3x10	
103	0805 0089	Retaining Ring - M4	
104	0720 0040E	Retaining Ring - M4	

 6. Staple Transfer Section 2 (B793)

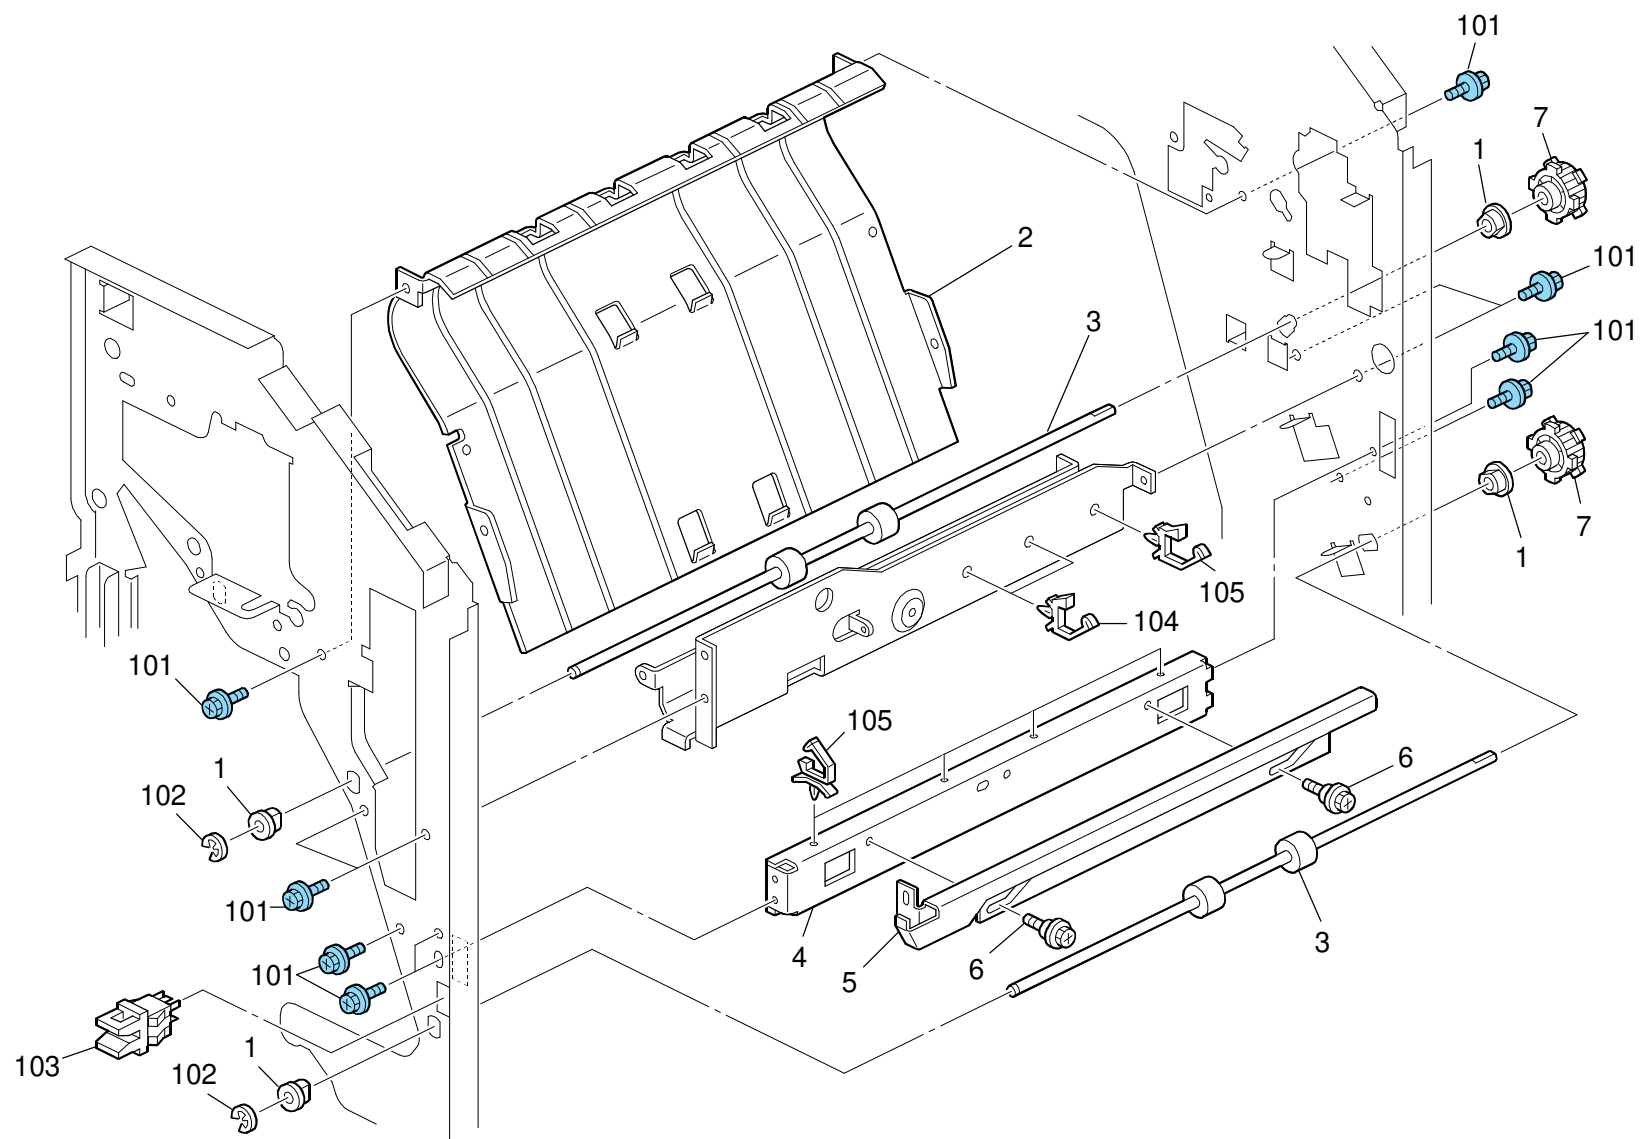


6.Staple Transfer Section 2 (B793)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AA08 2101	Bushing - 6x10x6	4
2	B793 2131	Guide Plate - Lengthwise Upper	1
3	B408 2211	Transfer Roller	2
4	B408 1413	Coupling Stay	1
5	B408 1411	Coupling Lever	1
6	AA14 3790	Screw:Contact Point	2
7	B793 2217	Timing Pulley - 24T	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 3006Q	Tapping Screw - M3x6	
102	0720 0040E	Retaining Ring - M4	
103	1204 2702	Switch - FB1L-BA11	
104	1105 0623	Clamp - LBWS-0206S-V0	
105	1105 0619	Clamp:LBWS-0605S-V0	

 7.Staple Transfer Section 3 (B793)

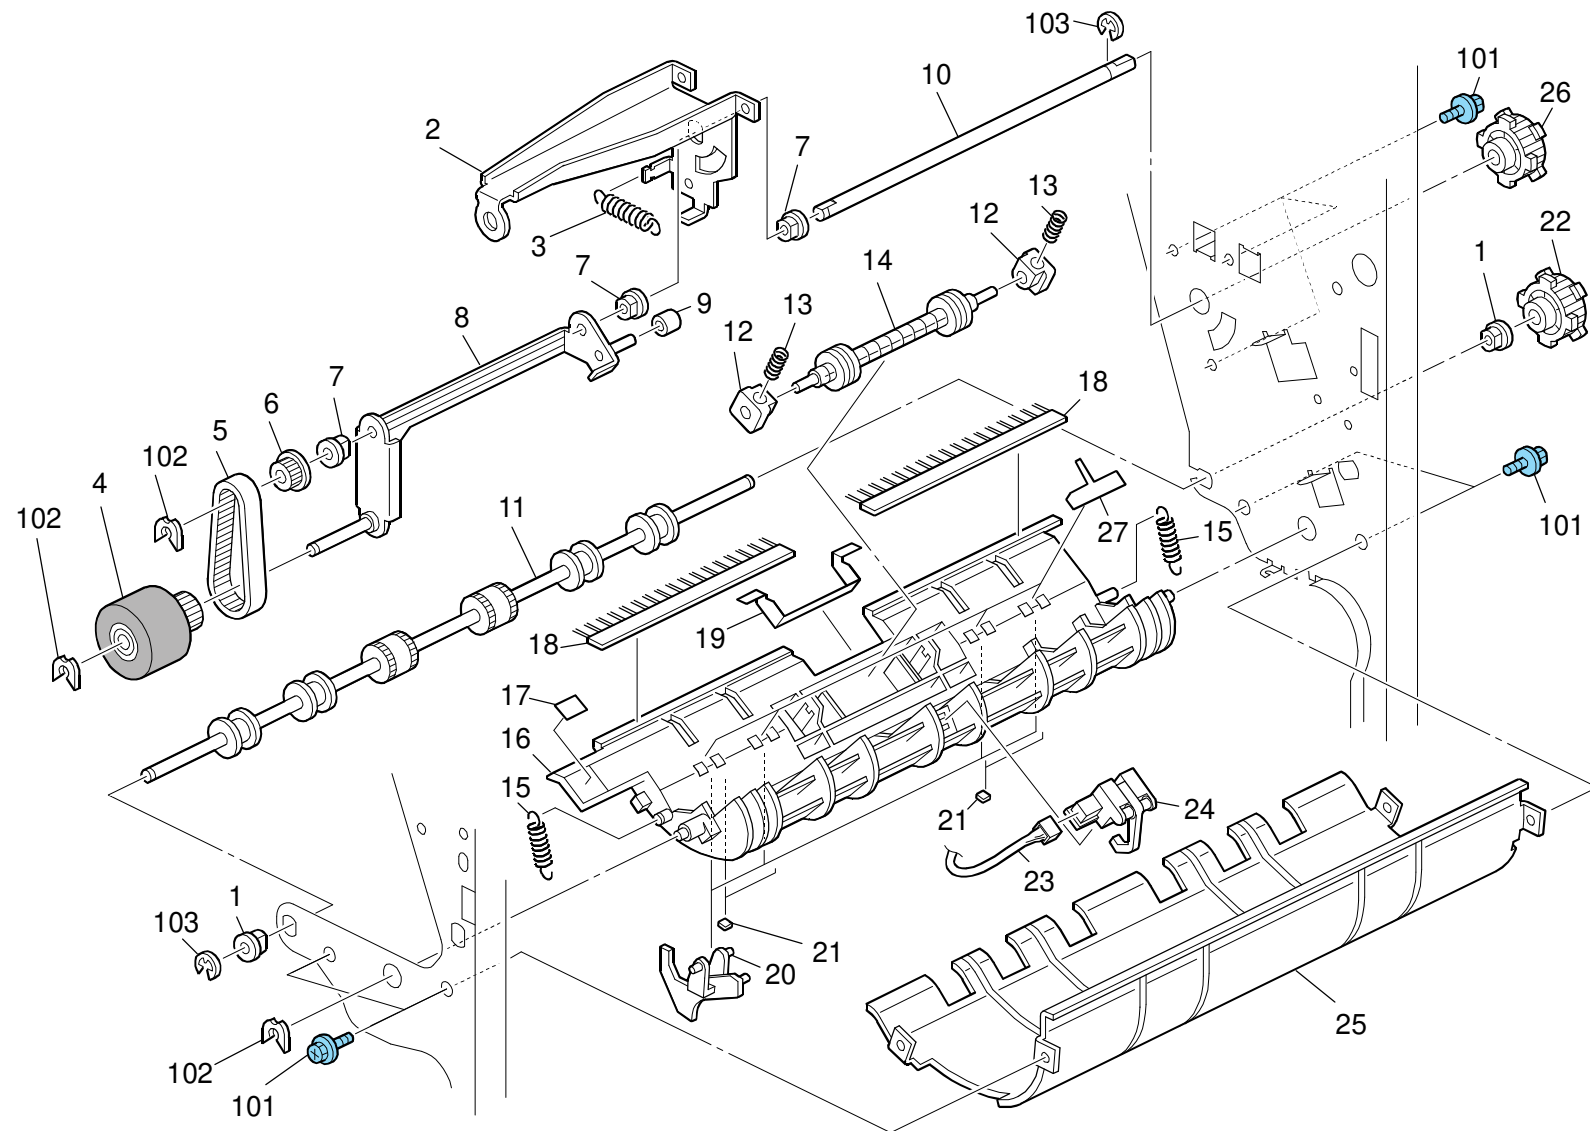


7.Staple Transfer Section 3 (B793)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AA08 2101	Bushing - 6x10x6	2
2	B793 2416	Gathering Roller Bracket	1
3	B468 2515	Spring - Gather Roller	1
4	B408 2431	Positioning Roller	1
5	B700 2649	Timing Belt:40S2M144	1
6	B408 2422	Pulley - T16	1
7	5053 0447	Bushing - 6mm	3
8	B793 2411	Gathering Roller Arm	1
9	AA16 1099	Lever Cushion	1
10	B408 2441	Shaft - Positioning Roller	1
11	B408 2251	Stapler Exit Roller	1
12	AA08 0237	Bushing - 4x5x7	2
13	AA06 3529	Pressure Spring - 14.5mm	2
14	AF02 2097	Driven Roller	1
15	B793 2113	Tension Spring	2
16	B793 2112	Guide Plate - Lower Open and Close	1
17	B793 7863	Decal - Lower Open and Close	1
18	B793 2115	Discharge Brush	2
19	B793 2114	Ground Plate - Exit	1
20	B793 2122	Guide:Trailing Edge	4
21	B352 2207	Pad - Stapler Tray	4
22	B793 2217	Timing Pulley - 24T	1
23	B793 5222	Harness - Paper Feed Sensor	1
24	AW02 0154	Photointerruptor:Entrance	1
25	B793 2116	Guide Plate - Lengthwise Lower	1
26	B408 2271	Pulley - T24	1
27	B793 2118	Stopper:Guide:Trailing Edge	4

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 3006Q	Tapping Screw - M3x6	
102	0805 0089	Retaining Ring - M4	
103	0720 0040E	Retaining Ring - M4	

 8.Jogger Unit (B793)

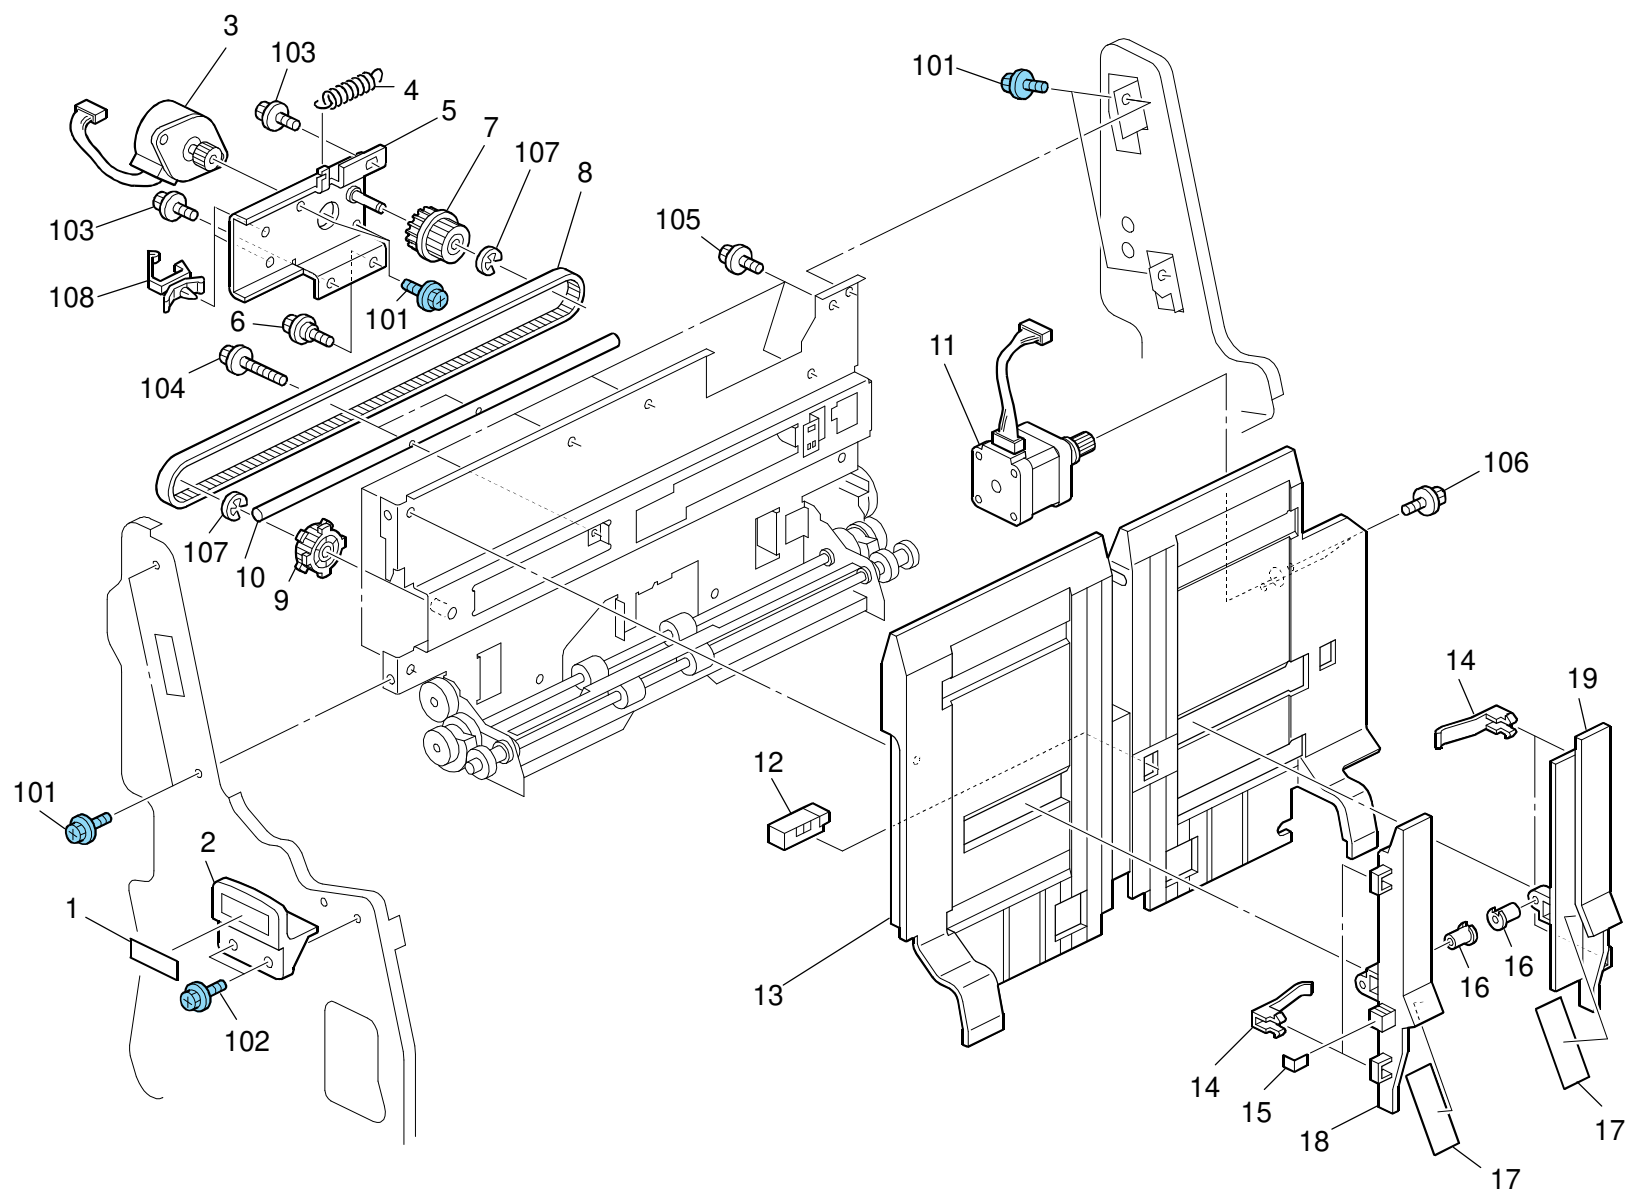


8.Jogger Unit (B793)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B793 7867	Decal - Grip Stapler Unit	1
2	B793 4351	Stay Grip	1
3	B793 5815	Stepper Motor DC24V	1
4	B408 4337	Spring	1
5	B793 4561	Jogger Motor Bracket	1
6	AA14 3790	Screw:Contact Point	1
7	B408 4335	Timing Pulley - Jogger	1
8	AA04 3614	Timing Belt - 40S2M796	1
9	A697 4170	Pulley - 32T	1
10	B793 4564	Jogger Fence Shaft	1
11	B793 5813	Stepper Motor DC2.52V	1
12	AW01 0109	Photo Refiection Sensor:PS117ED1	1
13	B793 4402	Stapler Tray	1
14	B408 4363	Slider - Jogger Fence	4
15	B793 7874	Decal - Jogger Fence	1
16	A681 4515	Bushing - 6mm	2
17	B408 4364	Film - Jogger Fence	2
18	B408 4362	Jogger Fence - Front	1
19	B408 4366	Jogger Fence - Inner	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 3006Q	Tapping Screw - M3x6	
102	0454 3008Q	Tapping Screw:3x8	
103	0451 3006N	Tapping Screw - 3x6	
104	0451 3010N	Tapping Screw:3x10	
105	0450 3008N	Tapping Screw - M3x8	
106	0451 3008N	Tapping Screw - M3x8	
107	0720 0040E	Retaining Ring - M4	
108	1105 0487	Harness Clamp	

 9.Staple Transfer Section 1 (B793)

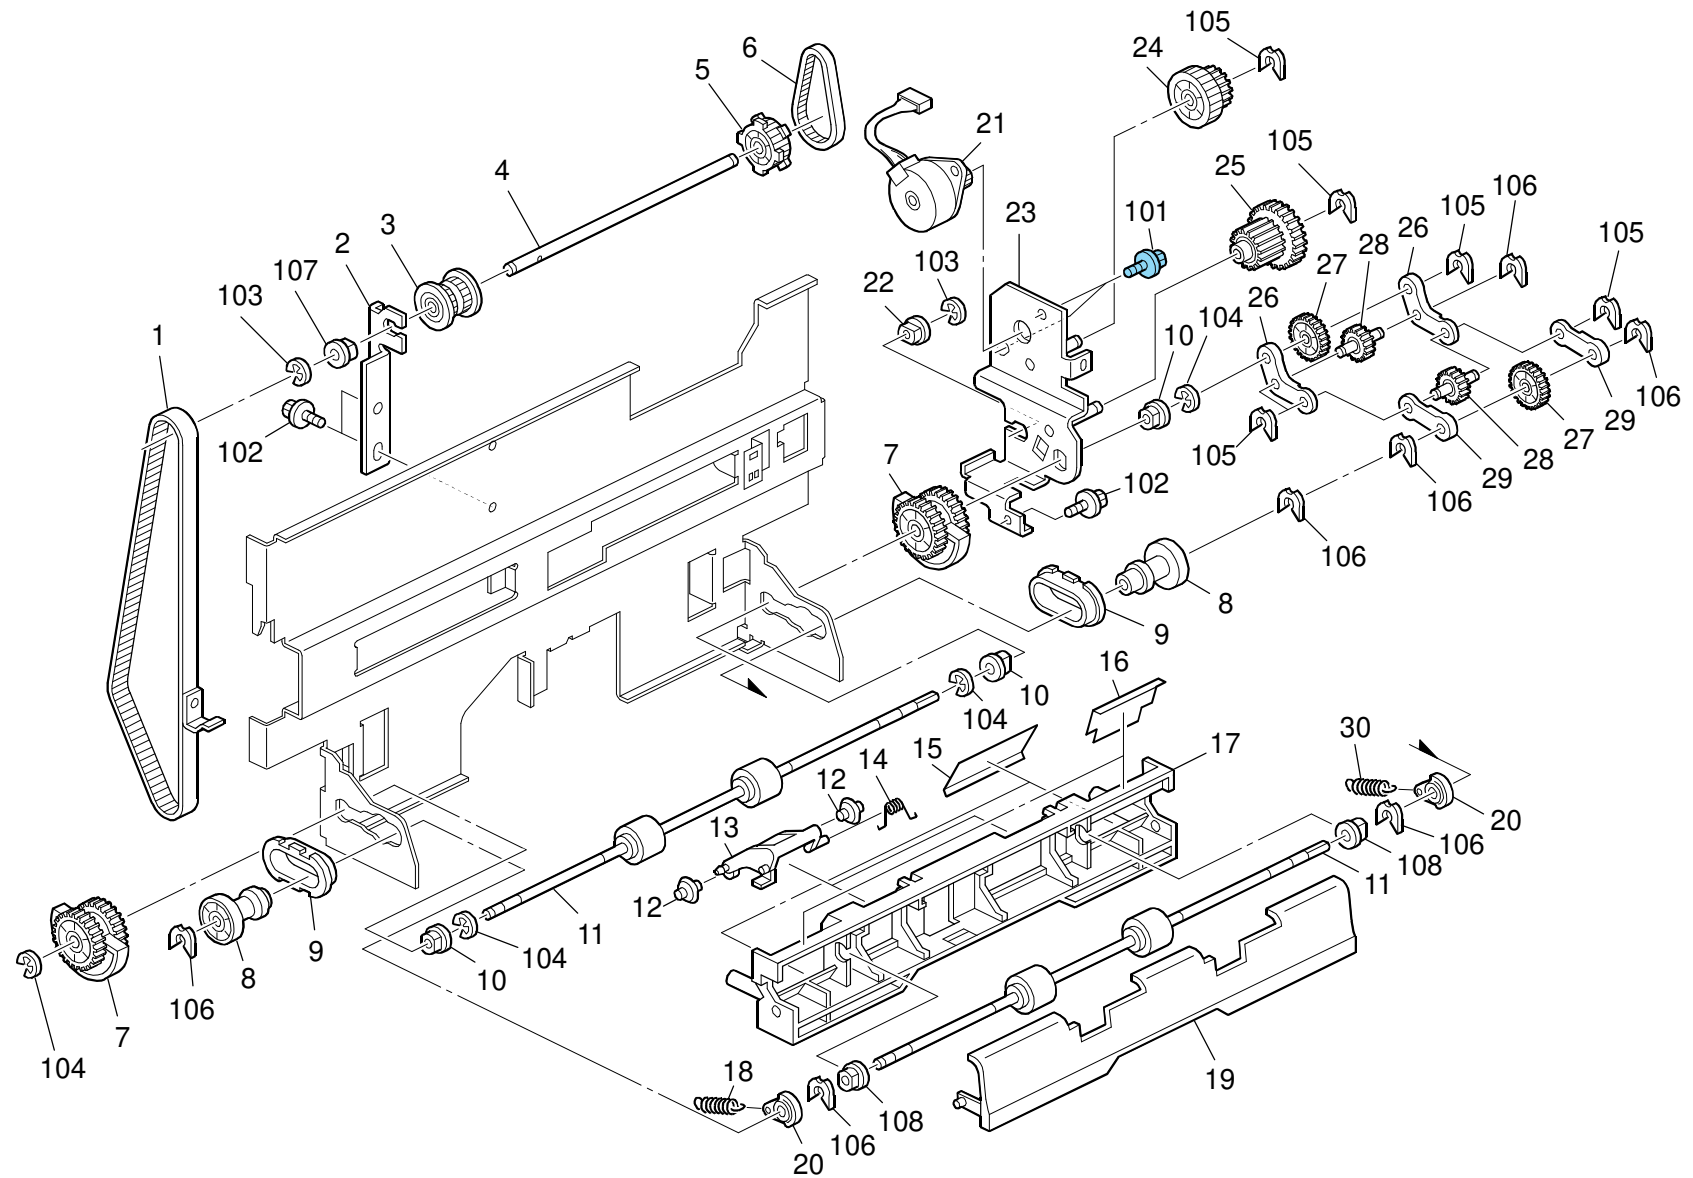


9.Staple Transfer Section 1 (B793)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B793 4510	Exit Belt Ass'y	1
2	B793 4513	Exit Belt Bracket	1
3	A666 3180	Timing Pulley - Z32	1
4	B793 4540	Shaft - Drive Exit Belt	1
5	B408 4382	Pulley - T26	1
6	AA04 3613	Timing Belt - 40S3M177	1
7	B793 4612	Release Cam - Transport Roller	2
8	B793 4626	Release Staple Slider	2
9	B793 4625	Bushing - Staple Transport	2
10	AA08 2104	Bushing - 8x12x7	3
11	B793 4611	Staple Transport Roller	2
12	B793 4628	Plate Roller	4
13	B793 4623	Guide - Trailing Edge Plate	2
14	B793 4627	Torsion Spring - Guide Trailing Edg	2
15	B793 4624	Guide - Staple Transport	2
16	B793 4629	Staple:Transport Guide - Upper	2
17	B793 4622	Transport Guide Plate	1
18	B793 4614	Tension Spring - Stapler	1
19	B793 4615	Cover - Transport Guide Plate	1
20	B793 4613	Holder Spring	2
21	B793 5830	Stepper Motor DC24V	1
22	AA08 2101	Bushing - 6x10x6	1
23	B793 4641	Stepper Motor Bracket	1
24	B793 4645	Gear - 25Z/68Z	1
25	B793 4646	Gear - 25Z/52Z	1
26	B793 4651	Drive Gear Arm	2
27	B793 4647	Gear - 25Z	2
28	B793 4656	Gear - 20Z	2
29	B793 4652	Driven Gear Arm	2
30	B793 4616	Tension Spring - Rear	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 3006Q	Tapping Screw - M3x6	
102	0451 3006N	Tapping Screw - 3x6	
103	0720 0040E	Retaining Ring - M4	
104	0720 0060E	Retaining Ring - M6	
105	0805 0089	Retaining Ring - M4	
106	0805 0088	Retaining Ring - M6	
107	0805 3385	Bushing - 6mm	
108	0805 3386	Bushing - 8mm	

 10.Staple Transfer Section 2 (B793)

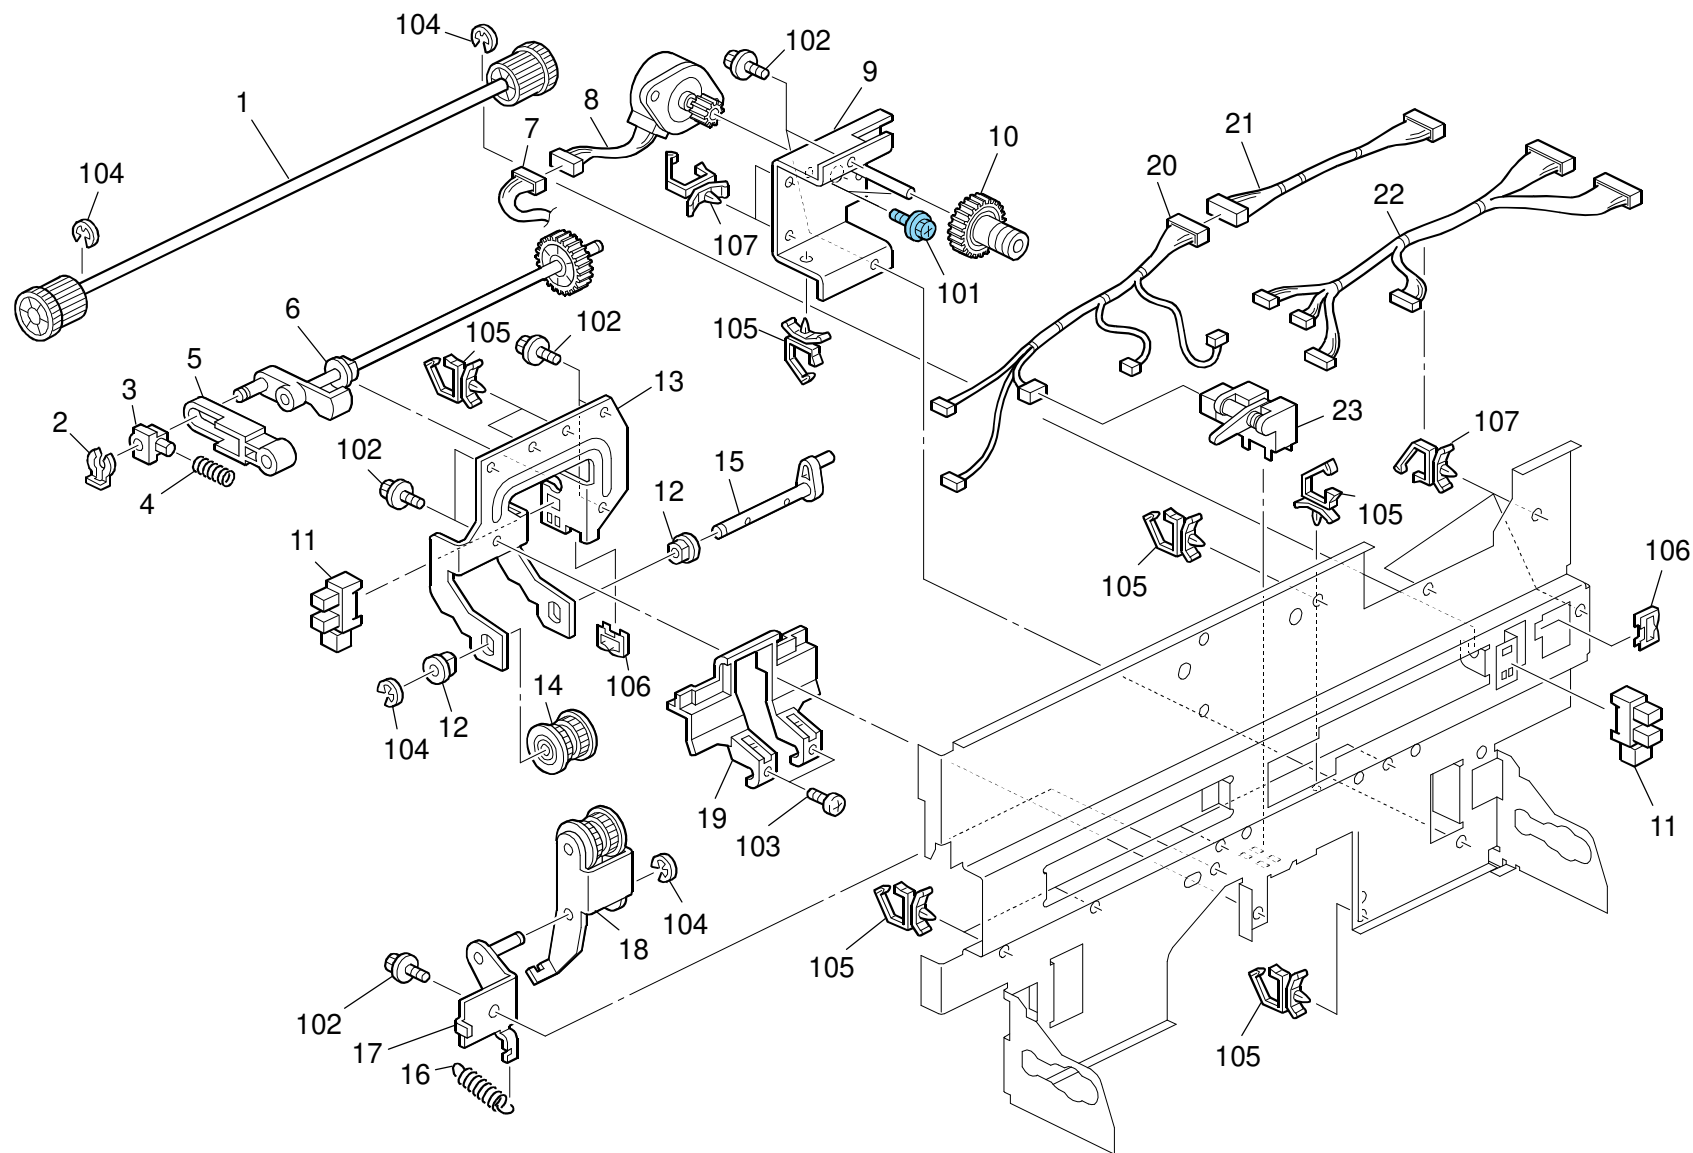


10.Staple Transfer Section 2 (B793)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B793 4635	Worm Wheel Shaft	1
2	5447 2681	Snap Ring	1
3	B793 4732	Link Bushing	1
4	B793 4733	Compression Spring - Link	1
5	B793 4731	Standard Fence Link	1
6	B793 4723	Shaft:Drive:Standard Fence	1
7	B793 5233	Harness - Motor	1
8	B793 5815	Stepper Motor DC24V	1
9	B793 4632	Motor:Transport Bracket	1
10	B408 2831	Gear - Z53	1
11	AW02 0141	Photointerruptor	2
12	AA08 2101	Bushing - 6x10x6	2
13	B793 4715	Standard Fence Bracket	1
14	A666 3180	Timing Pulley - Z32	1
15	B793 4713	Standard Fence Shaft	1
16	B793 4514	Tension Spring:Exit Belt	1
17	B793 4531	Tightener Bracket	1
18	B408 4395	Pulley - Exit Belt	1
19	B793 4714	Standard Fence:Upper	1
20	B793 5241	Harness - Stapler Unit Sensor	1
21	B793 5242	Harness - Stapler Unit Sensor	1
22	B793 5231	Harness - Stapler Unit Motor	1
23	AW02 0166	Photointerruptor:Paper Feed Sensor	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 3006Q	Tapping Screw - M3x6	
102	0451 3006N	Tapping Screw - 3x6	
103	0453 3008N	Binding Self Tapping Screw:3x8	
104	0720 0040E	Retaining Ring - M4	
105	1105 0623	Clamp - LBWS-0206S-V0	
106	1105 0328	Harness Clamp - ES-0505	
107	1105 0487	Harness Clamp	

 11.Staple Transfer Section 3 (B793)

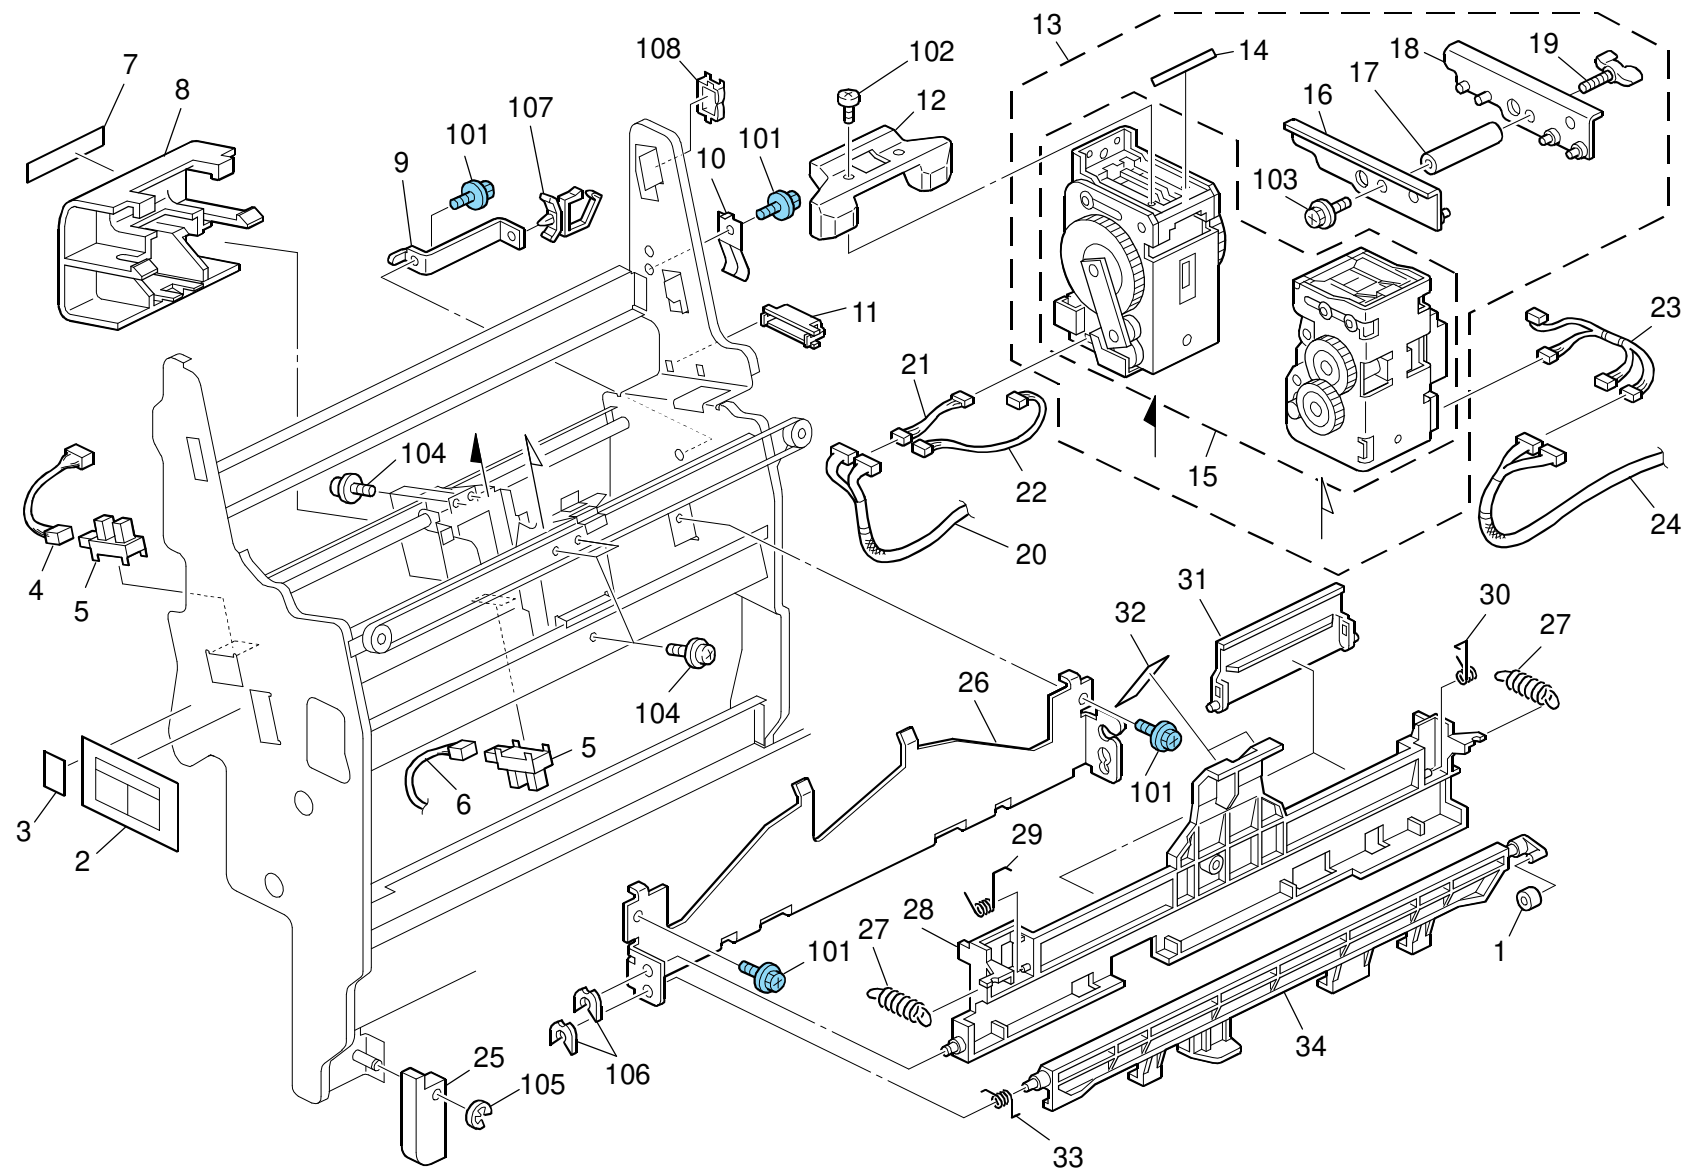


11.Staple Transfer Section 3 (B793)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A548 1317	Lever Cushion	1
2	B793 7897	Decal:Caution:Paper Crimp Sub-unit	1
3	B793 7875	Decal - Cartridge S1	1
4	B793 5255	Harness - Move Sensor	1
5	AW02 0141	Photointerruptor	2
6	B793 5247	Harness - Positioning Sensor	1
7	B793 7876	Decal - Caution Cartridge	1
8	B793 4215	Stapler Cover	1
9	B468 5991	Harness Bracket	1
10	B793 4125	Ground Plate - Stapler Unit	1
11	AG07 1012	Magnet Catch:Ass'y	1
12	B793 4251	Standard Fence Guide	1
13	B793 6400	Stapler:Service Parts:Ass'y	1
14	B793 4252	Stapler Guide	1
15	AJ01 1021	Stapler:EH-581R	1
16	B793 6410	Holder:Front:Ass'y	1
17	B793 6431	Rod:Clamp	1
18	B793 6420	Holder:Rear:Ass'y	1
19	B793 6432	Adjusting Screw:M4	1
20	B793 5260	Harness - Stapler Driver	1
21	B793 5262	Harness - Sensor	1
22	B793 5261	Harness - Motor	1
23	B793 5251	Harness - Stapler	1
24	B793 5250	Harness - Stapler	1
25	B793 4155	Stapler Unit Stand	1
26	B793 4311	Stapler Guide - Left	1
27	B793 4333	Tension Spring - Guide Plate Right	2
28	B793 4331	Stapler Guide Plate - Right	1
29	B793 4334	Torsion Spring - Guide Front	1
30	B793 4335	Torsion Spring - Guide Rear	1
31	B793 4332	Stapler Guide - Right	2
32	B793 4341	Standard Fence Guide	2
33	B793 4353	Torsion Spring:Standard Fence:Lower	1
34	B793 4352	Standard Fence - Lower	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 3006Q	Tapping Screw - M3x6	
102	0452 3006N	Binding Self-tapping Screw:3x6	
103	0451 3008N	Tapping Screw - M3x8	
104	0951 3006N	Screw - M3x6	
105	0720 0040E	Retaining Ring - M4	
106	0805 0089	Retaining Ring - M4	
107	1105 0488	Harness Clamp	
108	1105 0334	Edge - 17	

 12.Paper Crimp Section 1 (B793)

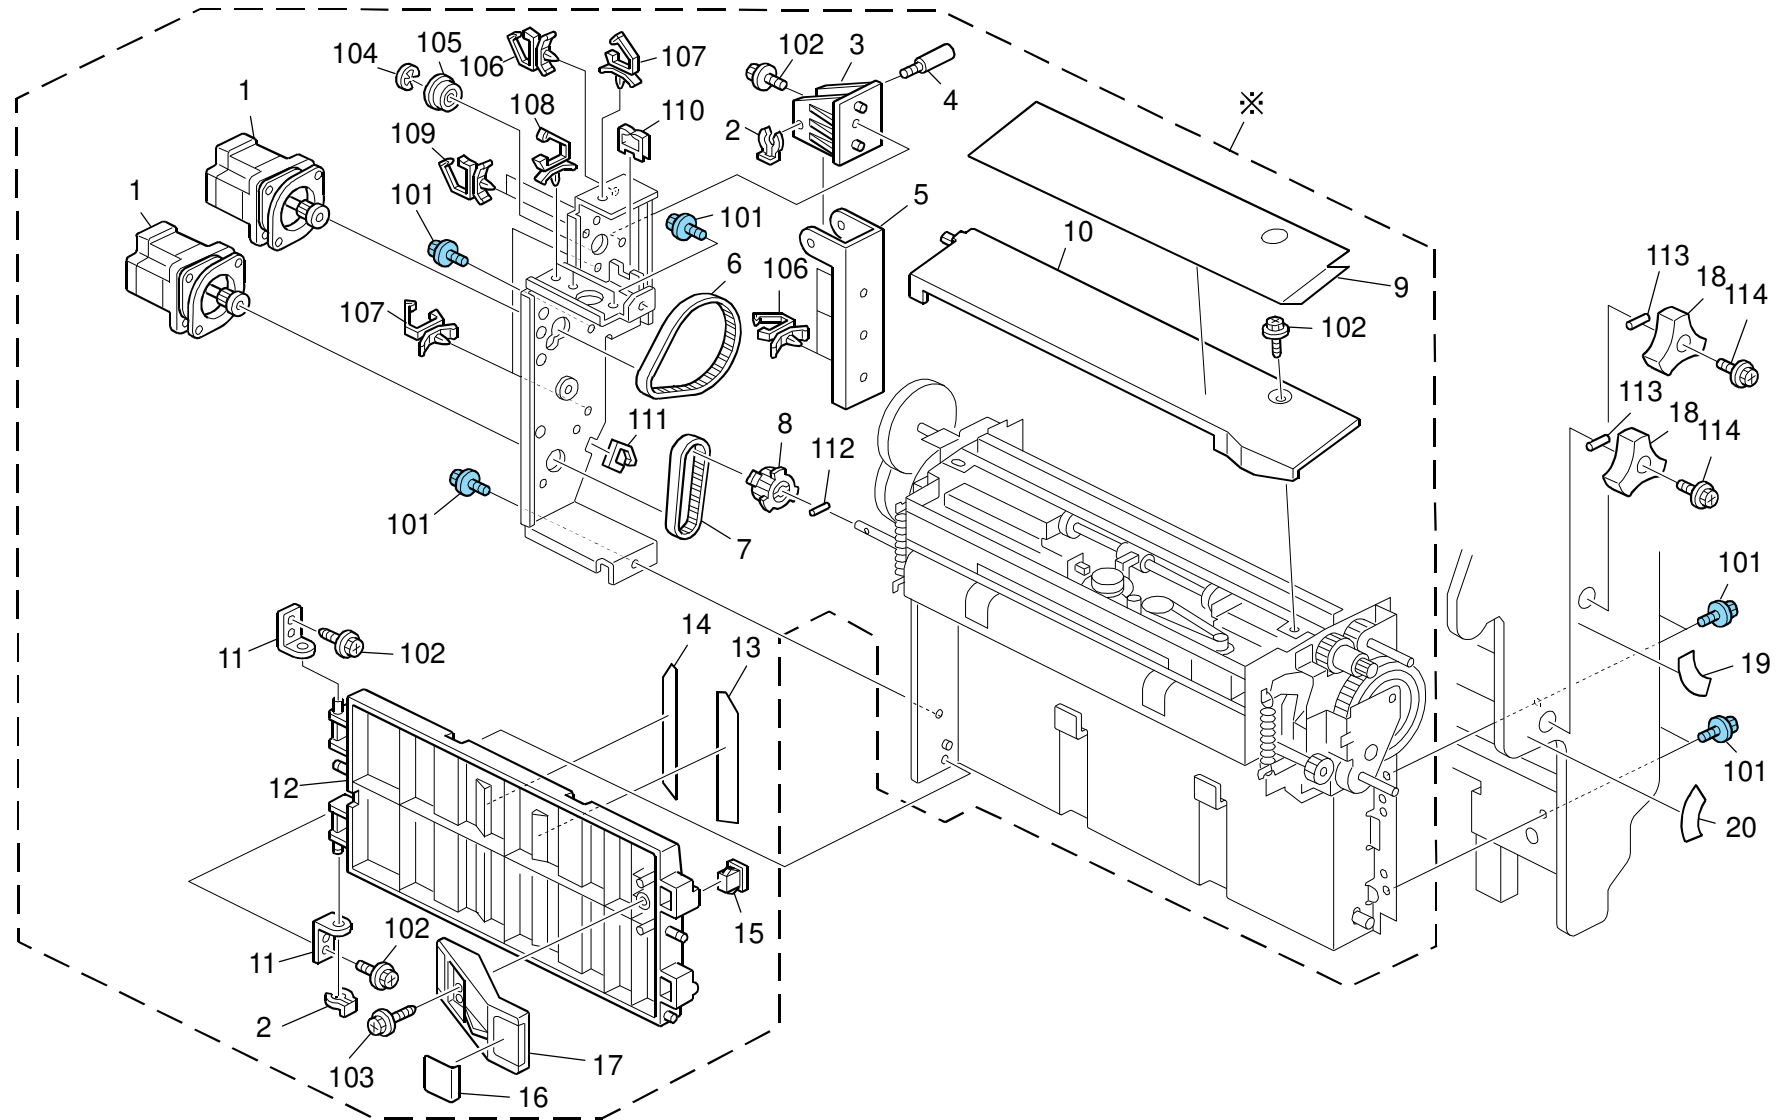


12.Paper Crimp Section 1 (B793)

Index No.	Part No.	Description	Q'ty Per Assembly
*	B793 4061	Paper Crimp Unit	1
1	B793 4082	Stepper Motor DC1.76V	2
2	5206 2686	Snap Ring	2
3	B700 4521	Holder:Arm:Harness	1
4	B700 4523	Pin:Fix:Arm	1
5	B700 4522	Arm:Harness:Stapler Unit	1
6	B700 4787	Timing Belt:B80S3M237	1
7	B700 4785	Timing Belt:B80S3M156	1
8	B700 4784	Pulley:22t	1
9	B793 4809	Sheet:Cover:Upper:Paper Crimp Sub-unit	1
10	B793 4807	Cover:Upper:Paper Crimp Sub-unit	1
11	B700 4879	Bracket:Contact Point	2
12	B700 4875	Guide Plate:Open and Close:Lower	1
13	B700 4873	Guide:Open and Close:Front	1
14	B700 4874	Guide:Open and Close:Rear	1
15	B352 2650	Magnet Catch - 5N	1
16	B793 7872	Decal - Guide Plate	1
17	B700 4877	Grip:Guide Plate	1
18	B700 4885	Knob:Paper Crimp	2
19	B793 7869	Decal - Knob Roller	1
20	B793 7868	Decal - Knob Blade	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 3006Q	Tapping Screw - M3x6	
102	0451 3006N	Tapping Screw - 3x6	
103	0450 3008N	Tapping Screw - M3x8	
104	0720 0060E	Retaining Ring - M6	
105	0742 3808	Ball Bearing - 8x16x5	
106	1105 0489	Harness Clamp - LWS 1316	
107	1105 0487	Harness Clamp	
108	1105 0516	Clamp	
109	1105 0488	Harness Clamp	
110	1105 0328	Harness Clamp - ES-0505	
111	1105 0522	Edge Saddle - LES0510	
112	0633 0140G	Parallel Pin - 3x14	
113	0633 0180G	Parallel Pin - 3x18mm	
114	0451 3008N	Tapping Screw - M3x8	

 13.Paper Crimp Section 2 (B793)

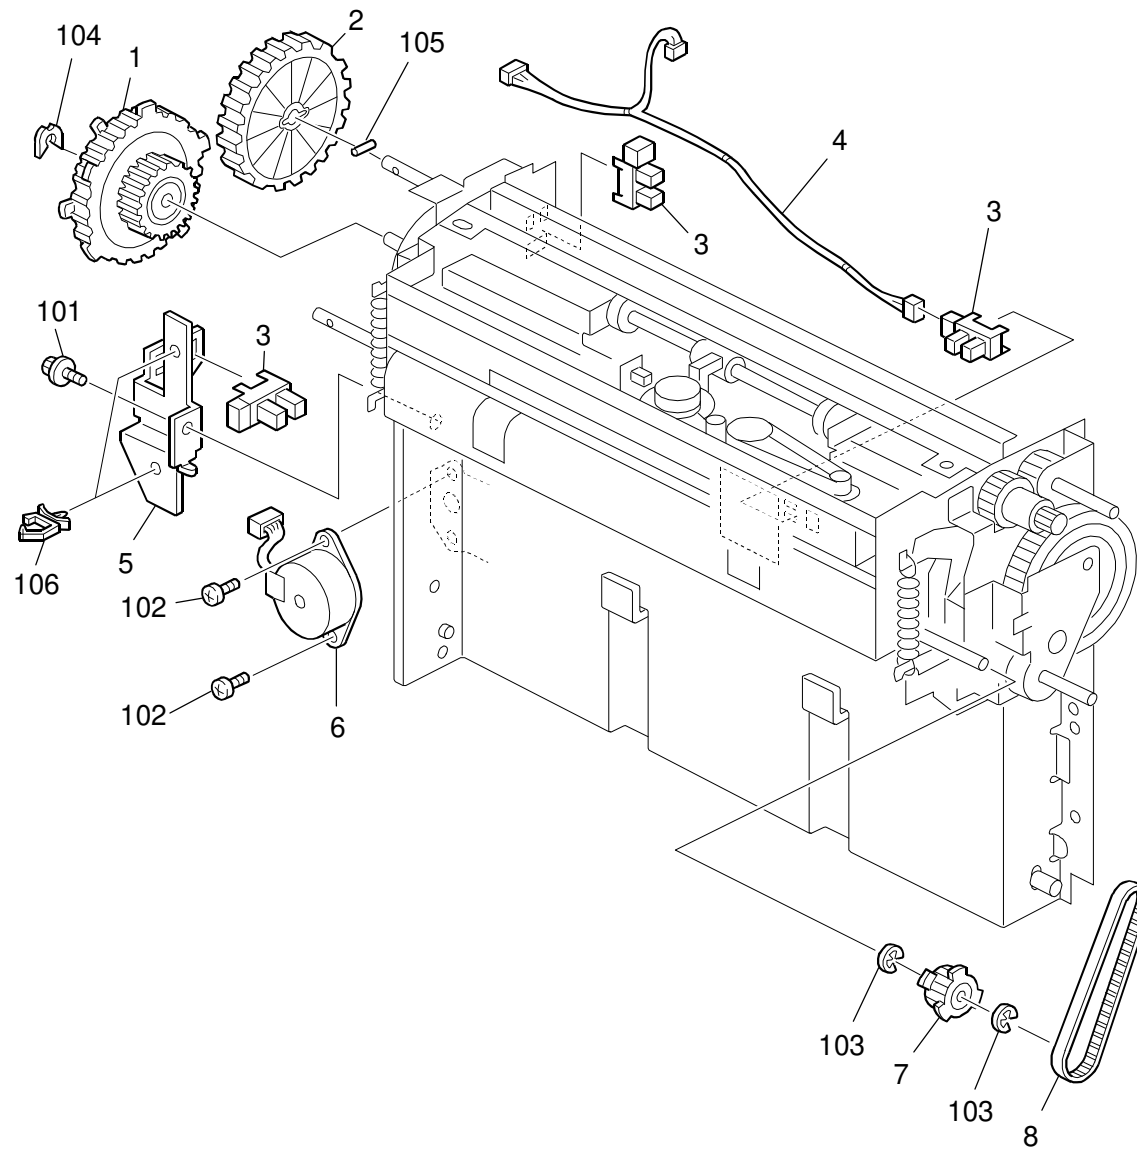


13.Paper Crimp Section 2 (B793)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B700 4782	Pulley:31T	1
2	B700 4781	Gear:62T	1
3	AW02 0141	Photointerruptor	3
4	B793 5243	Harness:Connecting:Stopper:Sensor	1
5	B700 4770	Bracket:Home Position Sensor:Blade	1
6	B700 5804	Stepper Motor:DIA42:Z17:Ass'y	1
7	B700 4718	Pulley:27T	1
8	B700 4720	Timing Belt:B40S2M214	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0453 3006N	Tapping Screw - M3x6	
103	0720 0040E	Retaining Ring - M4	
104	0805 0088	Retaining Ring - M6	
105	0633 0140G	Parallel Pin - 3x14	
106	1105 0623	Clamp - LBWS-0206S-V0	

 14.Paper Crimp Section 3 (B793)

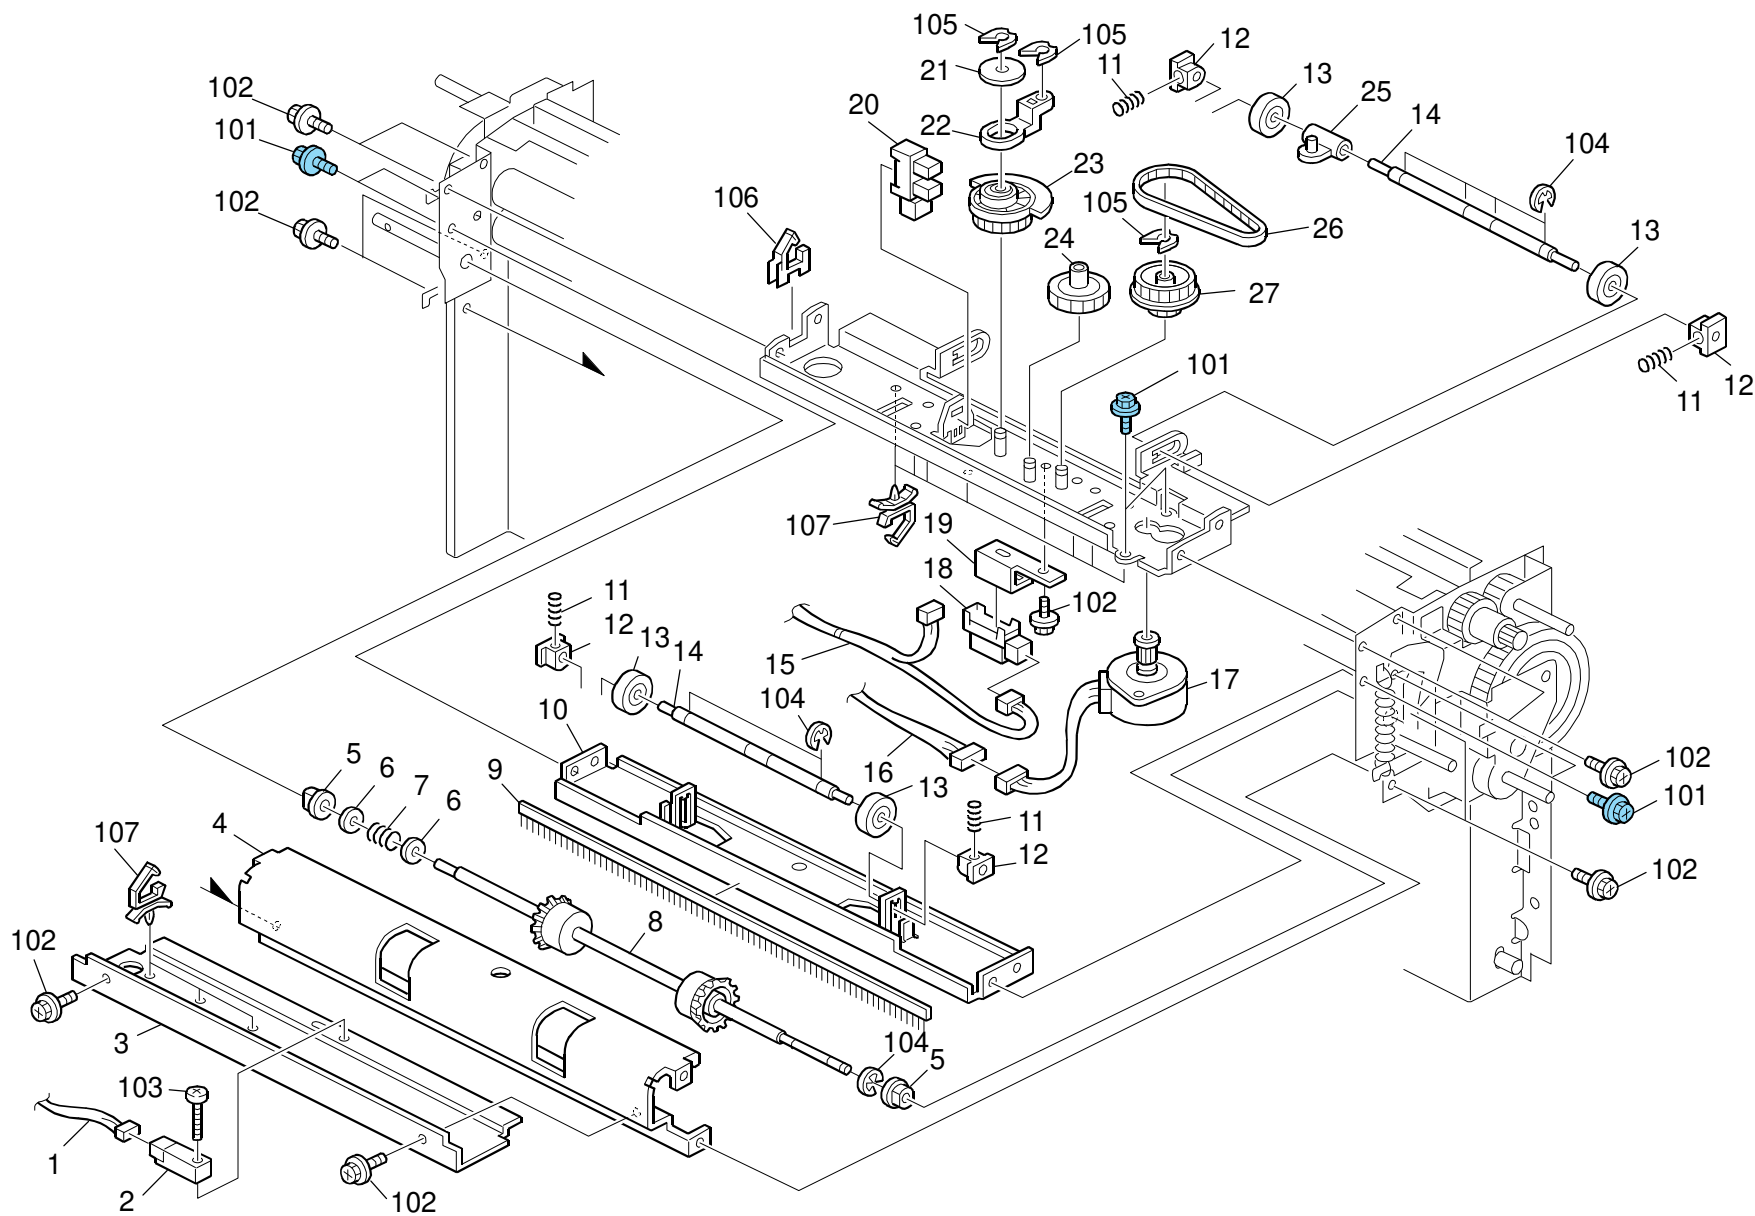


14.Paper Crimp Section 3 (B793)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B793 5245	Harness:Connecting:Transport Sensor	1
2	AW01 0109	Photo Refiection Sensor:PS117ED1	1
3	B700 4763	Guide Plate:Roller:Lower	1
4	B700 4745	Guide Plate:Exit:Lower	1
5	AA08 2101	Bushing - 6x10x6	2
6	AA13 2208	Spacer - M6	2
7	B700 4713	Compression Spring	1
8	B700 4715	Exit Roller:Paper Crimp Sub-unit	1
9	B793 4808	Discharge Brush:Exit	1
10	B700 4753	Guide Plate:Exit:Upper	1
11	B700 4757	Compression Spring:Transport Roller	4
12	AA08 0237	Bushing - 4x5x7	4
13	B478 2328	Exit Roller:Driven	4
14	B700 4755	Shaft:Driven	2
15	B793 5246	Harness:Connecting:Sensor	1
16	B793 5232	Harness:Connecting:Swivel:Motor	1
17	B793 5831	Stepper Motor:DIA42:T15:Ass'y	1
18	GW01 0007	Photo Refiection Sensor:Exit	1
19	B700 4835	Bracket:Paper Feed Sensor	1
20	AW02 0141	Photointerruptor	1
21	B700 4829	Spacer:Release:Transport	1
22	B700 4827	Joint:Release:Transport	1
23	B700 4821	Cam:Release:Transport	1
24	B700 4823	Gear:56Z	1
25	B700 4810	Shaft:Driven:Release	1
26	AA04 3615	Timing Belt:40S2M208	1
27	B700 4825	Gear:28Z	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 3006Q	Tapping Screw - M3x6	
102	0451 3006N	Tapping Screw - 3x6	
103	0453 3014N	Binding Self Tapping Screw 3x14	
104	0720 0040E	Retaining Ring - M4	
105	0805 0089	Retaining Ring - M4	
106	1105 0522	Edge Saddle - LES0510	
107	1105 0623	Clamp - LBWS-0206S-V0	

 15. Tray Drive Section (B793)

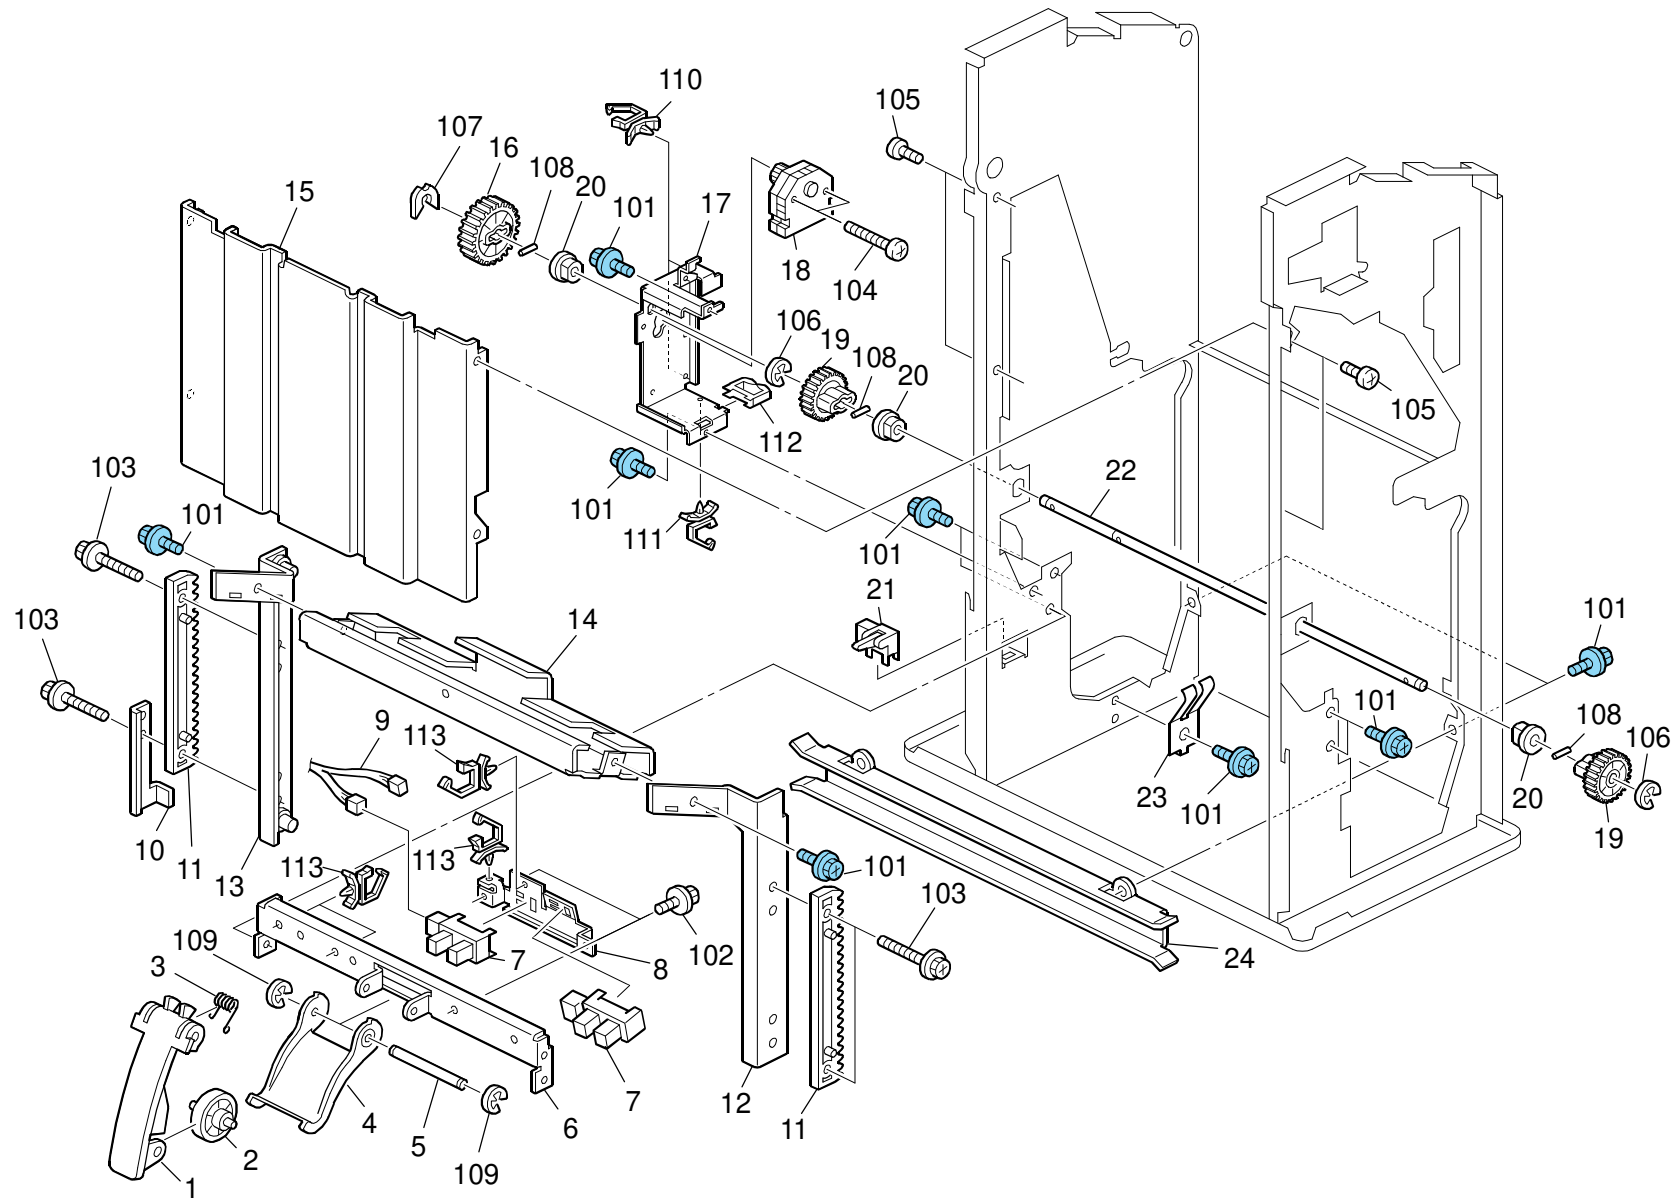


15.Tray Drive Section (B793)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B804 3720	Arm:Paper Senser:Paper Exit Sub-unit: Paper Crimp	1
2	B700 3730	Roller:Plate:Paper Exit Sub-unit	1
3	B700 3740	Spring:Arm:16mN.m	1
4	B700 3725	Arm:Plate:Paper Exit Sub-unit	1
5	B700 3715	Shaft:Arm:Paper Exit Sub-unit	1
6	B793 1811	Guide Plate - Paper Crimp	1
7	AW02 0141	Photointerruptor	2
8	B700 3710	Bracket:Surface of Paper Sensor	1
9	B793 5224	Harness - Sensor	1
10	B408 3233	Tray H.p Sensor Feeler	1
11	A666 2331	Rack	2
12	B408 3221	Front Guide Plate	1
13	B408 3231	Rear Guide Plate	1
14	B408 3211	Tray Base	1
15	B408 3112	End Fence	1
16	G838 2347	Gear:Z45	1
17	B793 3111	DC Motor Bracket	1
18	AX04 0214	DC Motor:Shift:Upper Lower:Drive	1
19	B793 3121	Gear - 20Z	2
20	AA08 2104	Bushing - 8x12x7	3
21	AW02 0166	Photointerruptor:Paper Feed Sensor	1
22	B793 3122	Shaft - Drive Shift Tray	1
23	B793 4125	Ground Plate - Stapler Unit	1
24	B793 1851	Lower Slide Stay	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 3006Q	Tapping Screw - M3x6	
102	0451 3006N	Tapping Screw - 3x6	
103	0451 3010N	Tapping Screw:3x10	
104	0353 0400N	Screw - M3x40	
105	0453 3006N	Tapping Screw - M3x6	
106	0720 0060E	Retaining Ring - M6	
107	0805 0088	Retaining Ring - M6	
108	0633 0140G	Parallel Pin - 3x14	
109	0720 0040E	Retaining Ring - M4	
110	1105 0489	Harness Clamp - LWS 1316	
111	1105 0487	Harness Clamp	
112	1105 0328	Harness Clamp - ES-0505	
113	1105 0623	Clamp - LBWS-0206S-V0	

 16.Shift Tray Paper Exit (B793)

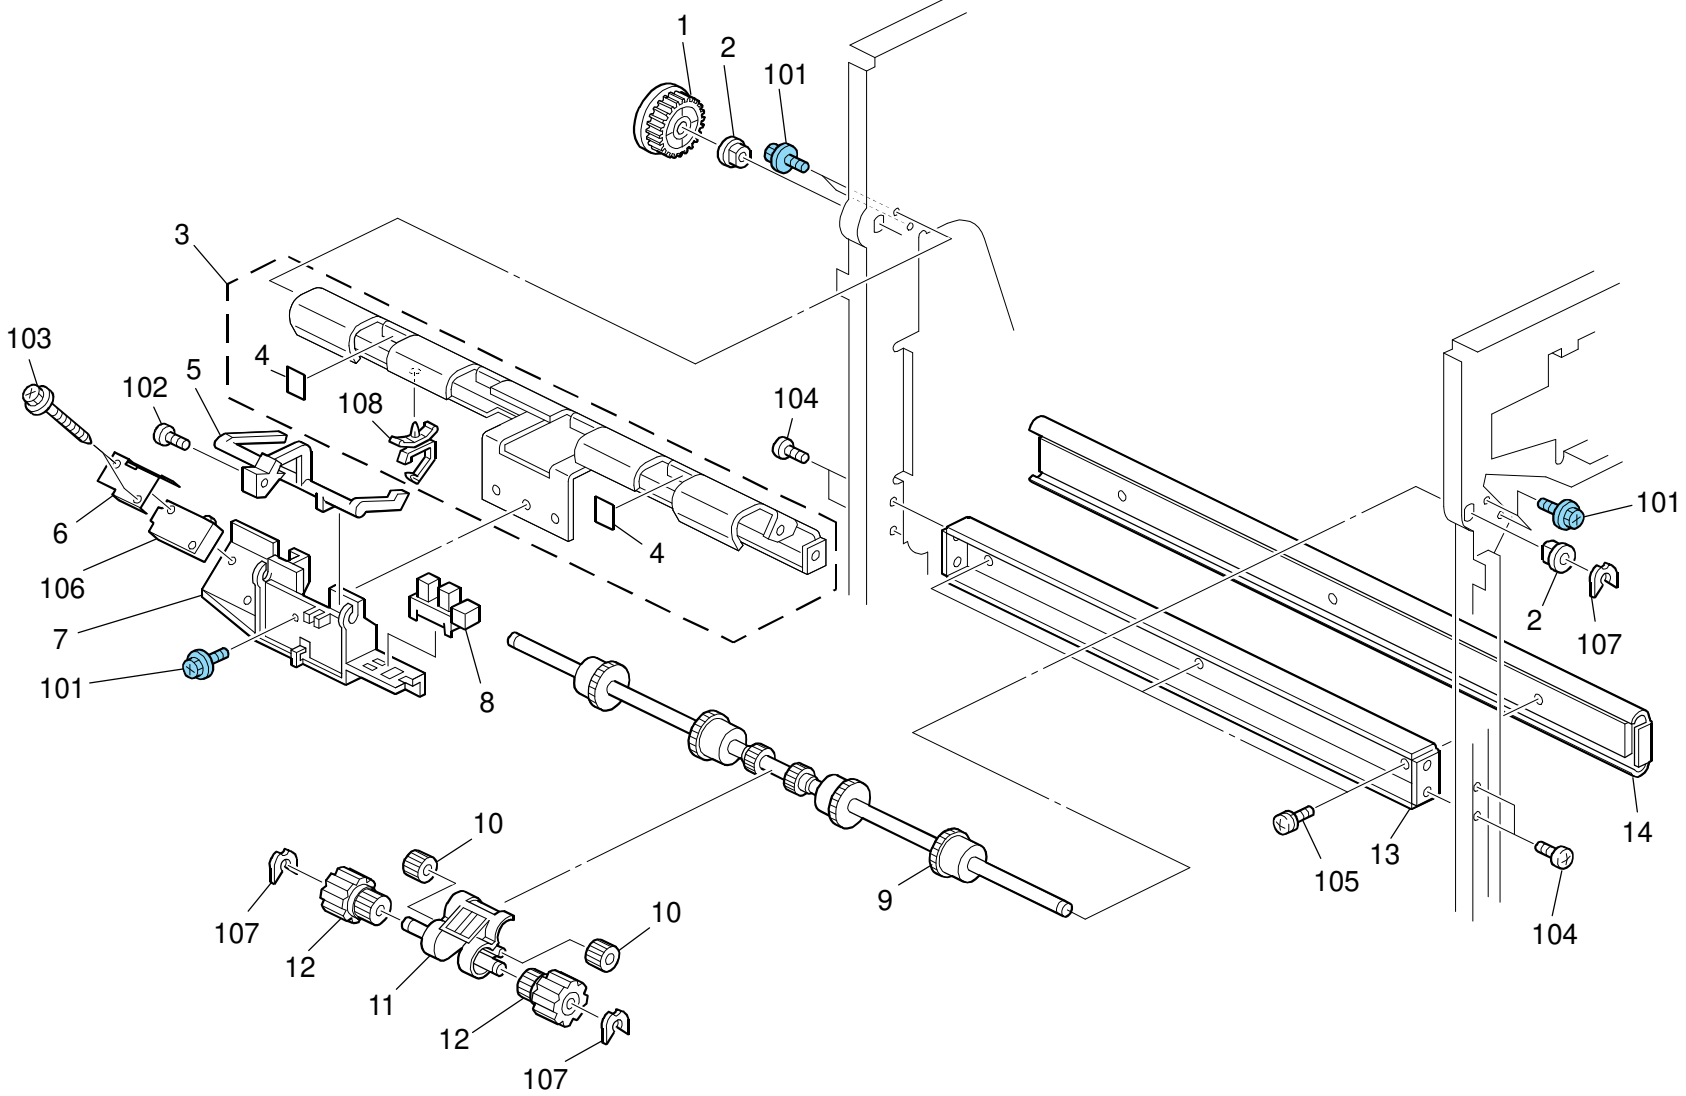


16.Shift Tray Paper Exit (B793)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B793 2242	Timing Pulley - 30T	1
2	AA08 2101	Bushing - 6x10x6	2
3	B793 2193	Exit Guide Plate Ass'y	1
4	B793 2192	Exit Sheet	2
5	B793 3212	Feeler - Surface of Paper Sensor	1
6	B408 3613	Lever - Micro Switch	1
7	B793 3211	Stay - Surface of Paper Sensor	1
8	AW02 0141	Photointerruptor	1
9	B408 2241	Exit Roller	1
10	B352 2409	Idler Gear - 17Z	2
11	B408 2246	Reverse Roller Arm	1
12	B352 2407	Reverse Roller - 20Z	2
13	B793 1412	Slide Rail Stay	1
14	B793 1161	Slide Rail - 508mm	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 3006Q	Tapping Screw - M3x6	
102	0452 3008N	Tapping Screw - M3x8	
103	0450 3020N	Tapping Screw:M3x20	
104	0453 3006N	Tapping Screw - M3x6	
105	0950 3005N	Screw:Spring Washer:M3x5	
106	1204 2540	Micro Switch - AM50650C3	
107	0805 0089	Retaining Ring - M4	
108	1105 0623	Clamp - LBWS-0206S-V0	

 17.Drive Section (B793)

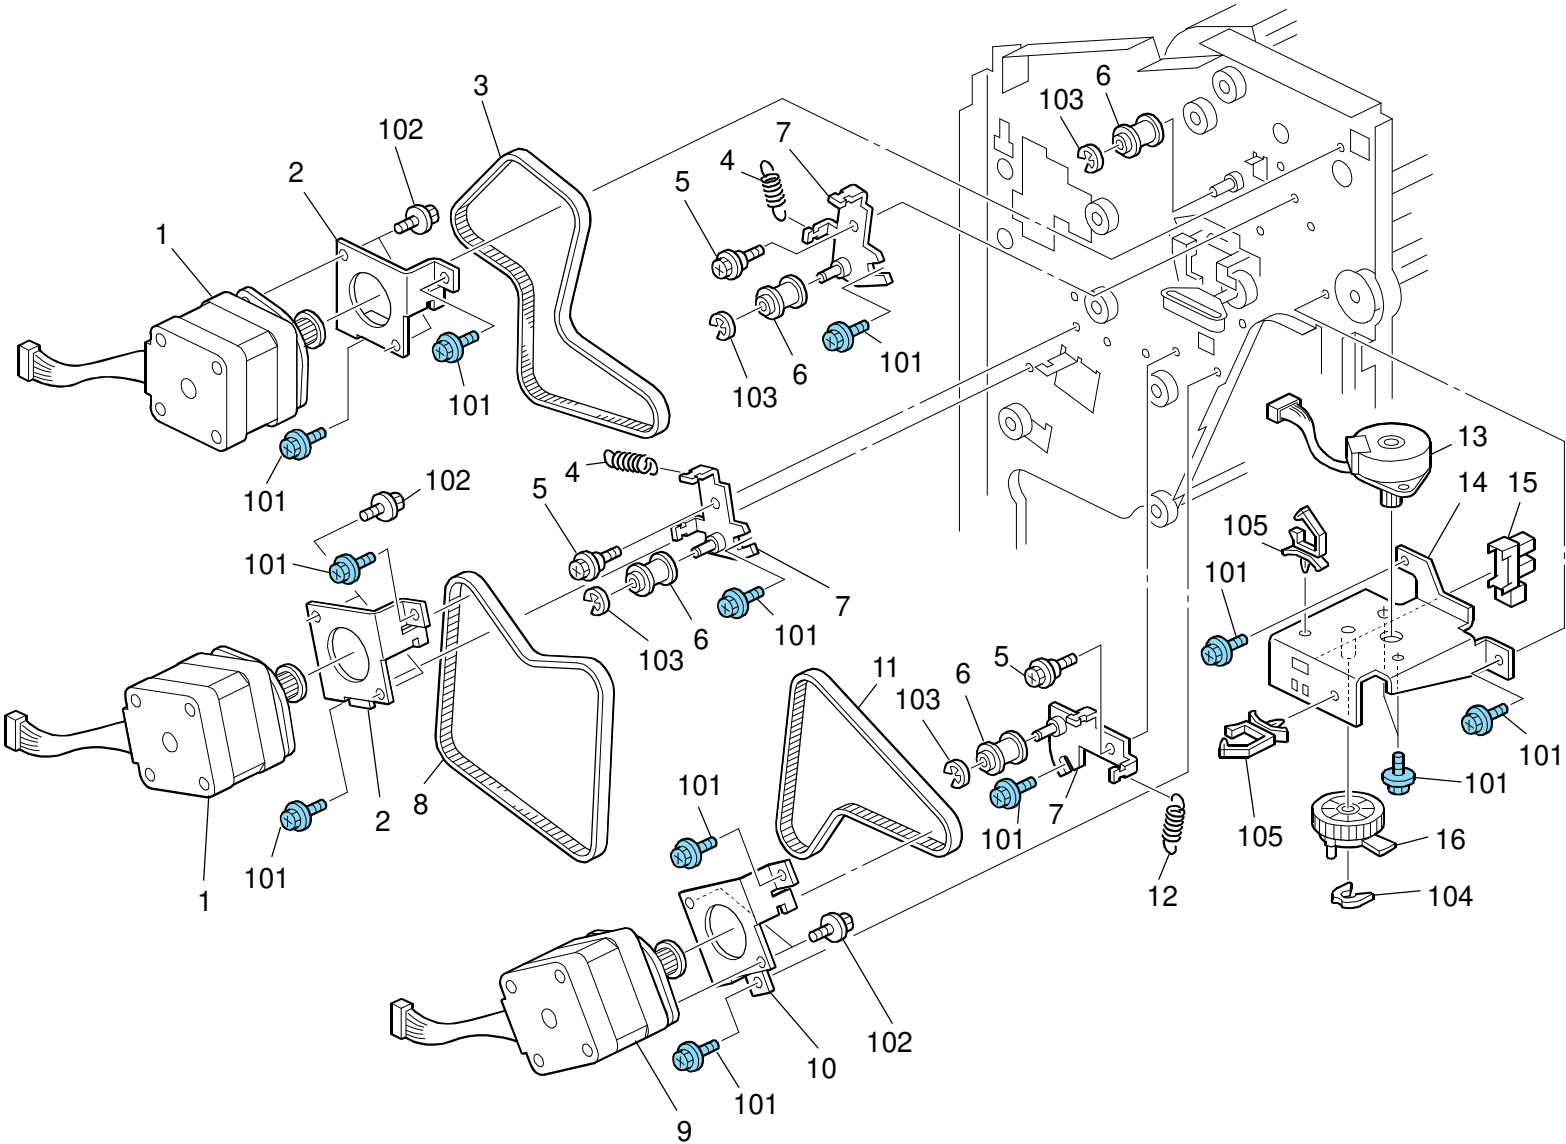


17. Drive Section (B793)



Index No.	Part No.	Description	Q'ty Per Assembly
1	B793 5811	Stepper Motor DC2.52V	2
2	B793 2911	Stepper Motor Bracket	2
3	AA04 3629	Timing Belt - 60S3M564	1
4	B700 1501	Tension Spring - Pressure	2
5	AA14 3790	Screw:Contact Point	3
6	A548 2139	Pulley	4
7	B408 2955	Bracket:Tightener:Ass'y	3
8	AA04 3618	Timing Belt - 40S3M453	1
9	B793 5812	Stepper Motor DC3.08V	1
10	B793 2941	Stepper Motor Bracket	1
11	AA04 3617	Timing Belt - 40S3M297	1
12	B793 2901	Tension Spring - Belt Tensioner	1
13	B793 5817	Stepper Motor DC24V	1
14	B793 2311	Drive Shift Bracket	1
15	AW02 0141	Photointerruptor	1
16	B408 2331	Link Drive Gear	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 3006Q	Tapping Screw - M3x6	
102	0451 3006N	Tapping Screw - 3x6	
103	0720 0040E	Retaining Ring - M4	
104	0805 0089	Retaining Ring - M4	
105	1105 0487	Harness Clamp	

 18.Electrical Section (B793)

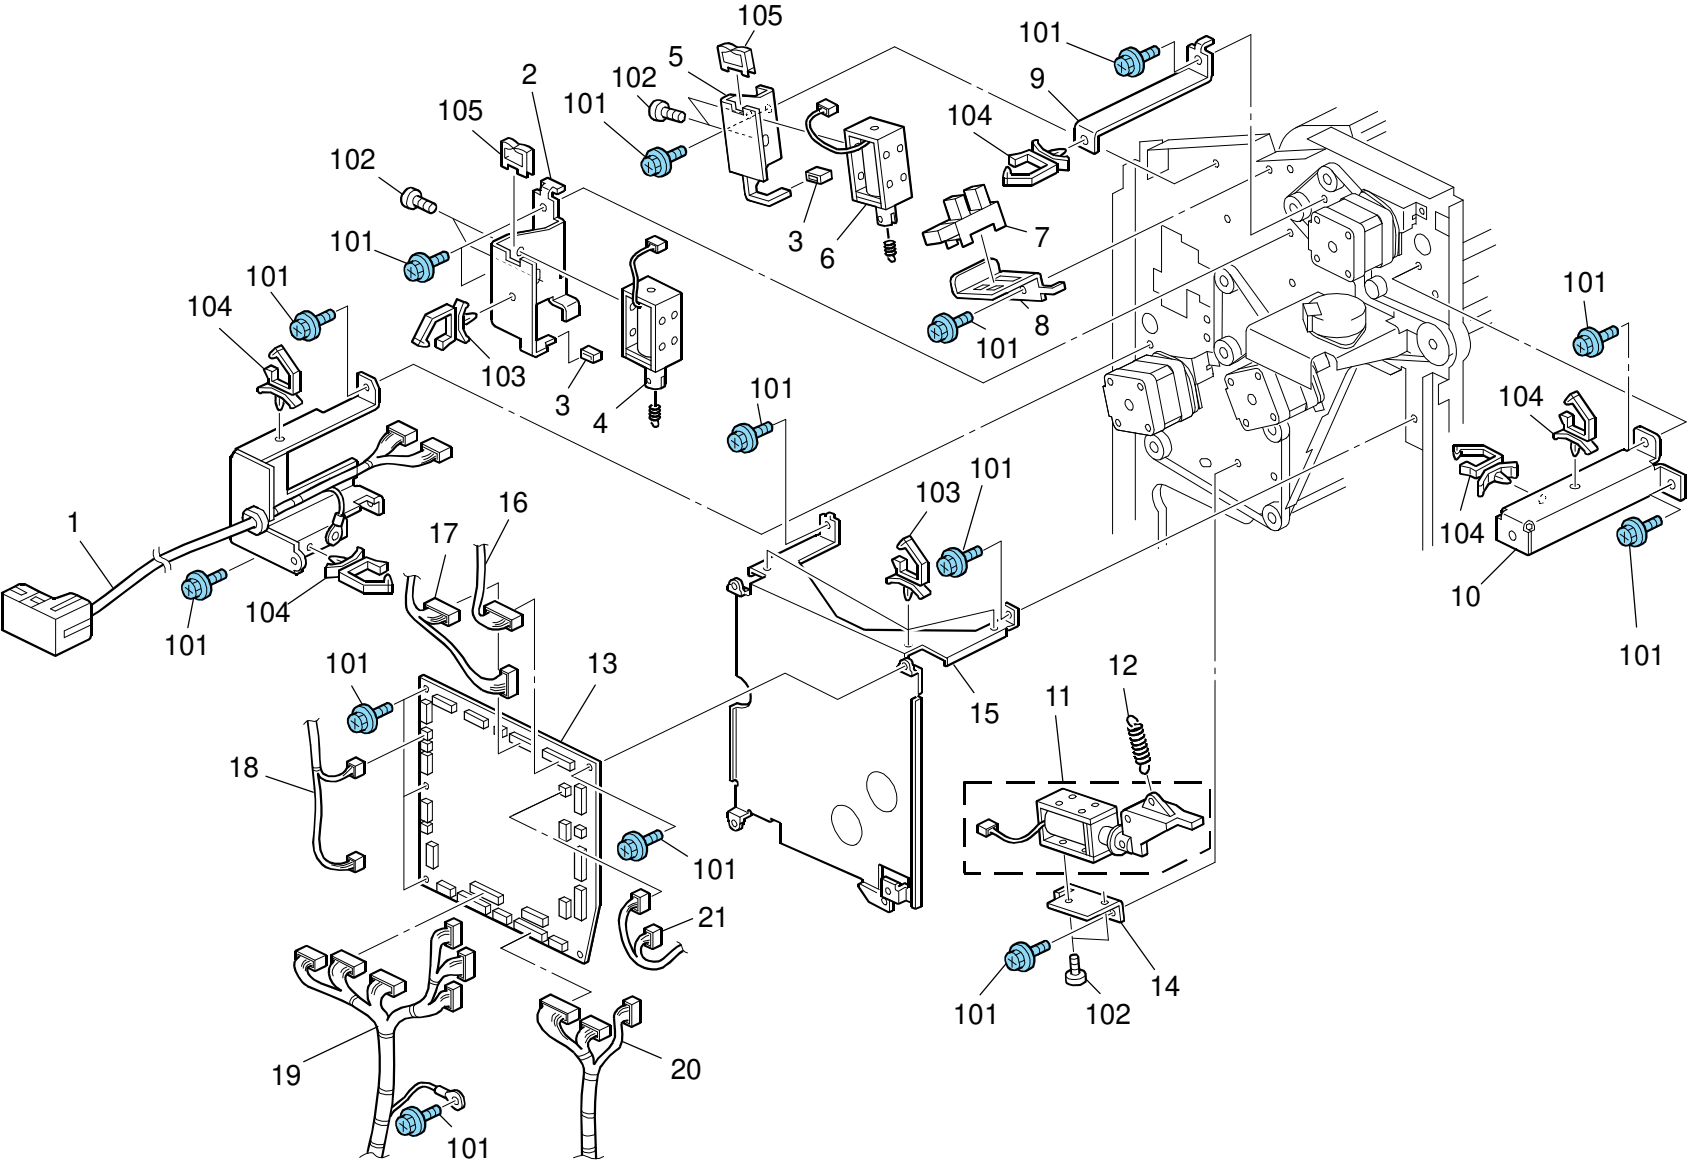


18.Electrical Section (B793)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B793 5201	Harness - Interface	1
2	B793 2521	Gate Pawl Dcsol Bracket	1
3	A697 2102	Damper - Junction Gate Solenoid	2
4	B793 2524	DC Solenoid DC24V	1
5	B700 2510	Bracket:Dcsol:Gate Pawl:Proof Tray	1
6	B793 2515	DC Solenoid DC24V	1
7	AW02 0141	Photointerruptor	1
8	B793 1122	Sensor Bracket	1
9	B468 5991	Harness Bracket	1
10	B793 1121	Rear Cover Bracket	1
11	B793 2415	DC Solenoid:Gathering Roller:Ass'y	1
12	B793 2419	Tension Spring - Release	1
13	B793 5511	PCB:Main Control:Ass'y	1
14	B408 2512	Bracket - DC Solenoid	1
15	B793 5521	PCB Bracket	1
16	B793 5220	Harness - PCB Sensor	1
17	B793 5210	Harness - PCB Motor	1
18	B793 5223	Harness - Safety Switch	1
19	B793 5280	Harness:Main:Motor	1
20	B793 5240	Harness - Main Sensor	1
21	B793 5221	Harness - Paper Senser	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 3006Q	Tapping Screw - M3x6	
102	0353 0040N	Screw - M3x4	
103	1105 0623	Clamp - LBWS-0206S-V0	
104	1105 0487	Harness Clamp	
105	1105 0328	Harness Clamp - ES-0505	

 19. Decals And Documents (B793)

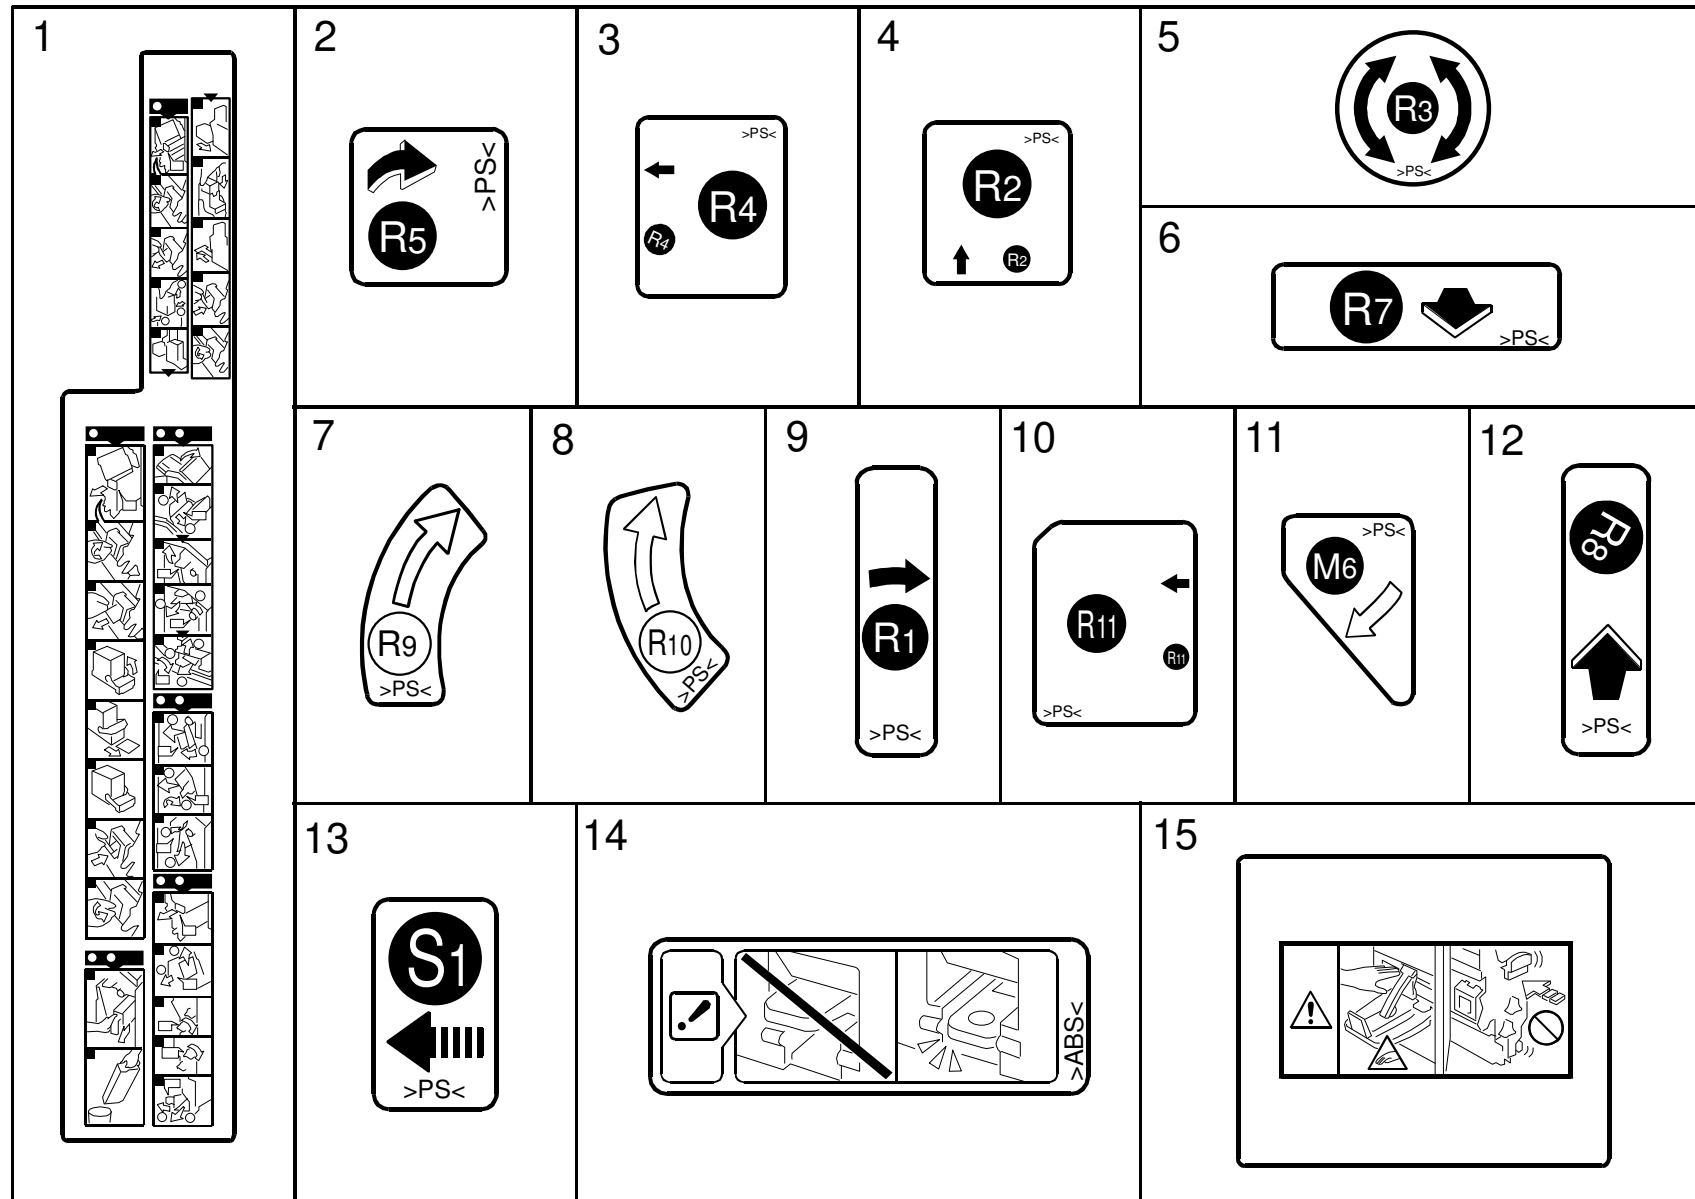

19.Decals And Documents (B793)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B793 7861	Decal - Misfeed Removal	1
2	B793 7863	Decal - Lower Open and Close	1
3	B793 7864	Decal - Lengthwise	1
4	B793 7865	Decal - Shift Open and Close	1
5	B793 7866	Decal - Knob	1
6	B793 7867	Decal - Grip Stapler Unit	1
7	B793 7868	Decal - Knob Blade	1
8	B793 7869	Decal - Knob Roller	1
9	B793 7871	Decal - Proof Tray	1
10	B793 7872	Decal - Guide Plate	1
11	B793 7873	Decal - Open and Close	1
12	B793 7874	Decal - Jogger Fence	1
13	B793 7875	Decal - Cartridge S1	1
14	B793 7876	Decal - Caution Cartridge	1
15	B793 7897	Decal:Caution:Paper Crimp Sub-unit	1

Index No.	Part No.	Description	Q'ty Per Assembly

Parts Index

Parts Index

Part No.	Description	Page and Index No.
B793 1121	Rear Cover Bracket	37 - 10
B793 1122	Sensor Bracket	37 - 8
B793 1161	Slide Rail - 508mm	33 - 14
B793 1221	Inner Cover - Front	5 - 3
B793 1313	Caster:H43	3 - 10
B793 1412	Slide Rail Stay	33 - 13
B793 1421	Bracket:Coupling:Ground Plate:Rear:Ass'y	3 - 19
B793 1425	Bracket:Coupling:Ground Plate:Front:Ass'y	3 - 20
B793 1512	Toner Hopper Cover - Front	5 - 8
B793 1811	Guide Plate - Paper Crimp	31 - 6
B793 1851	Lower Slide Stay	31 - 24
B793 2112	Guide Plate - Lower Open and Close	15 - 16
B793 2113	Tension Spring	15 - 15
B793 2114	Ground Plate - Exit	15 - 19
B793 2115	Discharge Brush	15 - 18
B793 2116	Guide Plate - Lengthwise Lower	15 - 25
B793 2118	Stopper:Guide:Trailing Edge	15 - 27
B793 2121	Guide Plate - Proof Tray	7 - 8
B793 2122	Guide:Trailing Edge	15 - 20
B793 2131	Guide Plate - Lengthwise Upper	13 - 2
B793 2142	Spring Plate - Proof Tray	7 - 14
B793 2144	Spring Plate - Roller Driven	7 - 11
B793 2145	Discharge Brush - Proof Tray	7 - 12
B793 2146	Guide Plate - Proof Tray	7 - 13
B793 2148	Roller:Driven:DIA14	7 - 10
B793 2152	Guide Plate - Open and Close	11 - 13
B793 2153	Tension Spring - Open and Close	11 - 12
B793 2154	Release Knob	11 - 14
B793 2156	Guide Plate - Lengthwise	11 - 19
B793 2161	Entrance Driven Roller	5 - 13
B793 2162	Compression Spring - Transport Roller	5 - 16
B793 2163	Bushing - Roller Driven	5 - 17
B793 2164	Entrance Sensor Bracket	5 - 22
B793 2172	Guide Plate - Shift Lower	9 - 27
B793 2173	Exit Guide	9 - 26

Part No.	Description	Page and Index No.
B793 2176	Guide Plate:Entrance:Ass'y	5 - 18
B793 2178	Guide:Guide Plate:Connecting	5 - 19
B793 2179	Guide Plate:Connecting:Lower	5 - 20
B793 2182	Guide Plate Bracket	11 - 21
B793 2185	Guide Plate Ass'y	9 - 19
B793 2192	Exit Sheet	33 - 4
B793 2193	Exit Guide Plate Ass'y	33 - 3
B793 2211	Entrance Transport Roller	5 - 15
B793 2212	Transport Roller Spacer	5 - 6
B793 2217	Timing Pulley - 24T	13 - 7
B793 2217	Timing Pulley - 24T	15 - 22
B793 2217	Timing Pulley - 24T	5 - 24
B793 2217	Timing Pulley - 24T	7 - 17
B793 2221	Transport Roller - Long	5 - 14
B793 2242	Timing Pulley - 30T	33 - 1
B793 2311	Drive Shift Bracket	35 - 14
B793 2321	Slide Roller Link	11 - 24
B793 2411	Gathering Roller Arm	15 - 8
B793 2415	DC Solenoid:Gathering Roller:Ass'y	37 - 11
B793 2416	Gathering Roller Bracket	15 - 2
B793 2419	Tension Spring - Release	37 - 12
B793 2452	Bracket:Sensor:Proof Tray	7 - 4
B793 2453	Guide:Sensor:Proof Tray	7 - 18
B793 2505	Tension Spring - Gate Pawl	11 - 7
B793 2515	DC Solenoid DC24V	37 - 6
B793 2521	Gate Pawl Dcsol Bracket	37 - 2
B793 2524	DC Solenoid DC24V	37 - 4
B793 2531	Gate Pawl - Proof Tray	11 - 6
B793 2532	Gate Pawl Arm	11 - 8
B793 2541	Gate Pawl - Staple	11 - 10
B793 2542	Bushing - Inner Back	11 - 25
B793 2551	Bushing - Gate Pawl	11 - 9
B793 2611	Guide Plate - Lower	5 - 12
B793 2612	Guide Plate - Upper	5 - 10
B793 2613	Link - Guide Plate Cover	5 - 9

Part No.	Description	Page and Index No.
B793 2811	Exit Guide Plate	9 - 16
B793 2830	Guide Plate Stay	9 - 2
B793 2841	Worm Wheel - 20Z	9 - 7
B793 2842	Guide Plate Link	9 - 4
B793 2843	Compression Spring - Guide Plate	9 - 6
B793 2845	Bracket:Sensor	9 - 11
B793 2901	Tension Spring - Belt Tensioner	35 - 12
B793 2911	Stepper Motor Bracket	35 - 2
B793 2941	Stepper Motor Bracket	35 - 10
B793 3111	DC Motor Bracket	31 - 17
B793 3121	Gear - 20Z	31 - 19
B793 3122	Shaft - Drive Shift Tray	31 - 22
B793 3211	Stay - Surface of Paper Sensor	33 - 7
B793 3212	Feeler - Surface of Paper Sensor	33 - 5
B793 3311	Tray	3 - 5
B793 4061	Paper Crimp Unit	25 - *
B793 4082	Stepper Motor DC1.76V	25 - 1
B793 4125	Ground Plate - Stapler Unit	31 - 23
B793 4125	Ground Plate - Stapler Unit	23 - 10
B793 4155	Stapler Unit Stand	23 - 25
B793 4215	Stapler Cover	23 - 8
B793 4251	Standard Fence Guide	23 - 12
B793 4252	Stapler Guide	23 - 14
B793 4311	Stapler Guide - Left	23 - 26
B793 4331	Stapler Guide Plate - Right	23 - 28
B793 4332	Stapler Guide - Right	23 - 31
B793 4333	Tension Spring - Guide Plate Right	23 - 27
B793 4334	Torsion Spring - Guide Front	23 - 29
B793 4335	Torsion Spring - Guide Rear	23 - 30
B793 4341	Standard Fence Guide	23 - 32
B793 4351	Stay Grip	17 - 2
B793 4352	Standard Fence - Lower	23 - 34
B793 4353	Torsion Spring:Standard Fence:Lower	23 - 33
B793 4402	Stapler Tray	17 - 13
B793 4510	Exit Belt Ass'y	19 - 1

Part No.	Description	Page and Index No.
B793 4513	Exit Belt Bracket	19 - 2
B793 4514	Tension Spring:Exit Belt	21 - 16
B793 4531	Tightener Bracket	21 - 17
B793 4540	Shaft - Drive Exit Belt	19 - 4
B793 4561	Jogger Motor Bracket	17 - 5
B793 4564	Jogger Fence Shaft	17 - 10
B793 4611	Staple Transport Roller	19 - 11
B793 4612	Release Cam - Transport Roller	19 - 7
B793 4613	Holder Spring	19 - 20
B793 4614	Tension Spring - Stapler	19 - 18
B793 4615	Cover - Transport Guide Plate	19 - 19
B793 4616	Tension Spring - Rear	19 - 30
B793 4622	Transport Guide Plate	19 - 17
B793 4623	Guide - Trailing Edge Plate	19 - 13
B793 4624	Guide - Staple Transport	19 - 15
B793 4625	Bushing - Staple Transport	19 - 9
B793 4626	Release Staple Slider	19 - 8
B793 4627	Torsion Spring - Guide Trailing Edg	19 - 14
B793 4628	Plate Roller	19 - 12
B793 4629	Staple:Transport Guide - Upper	19 - 16
B793 4632	Motor:Transport Bracket	21 - 9
B793 4635	Worm Wheel Shaft	21 - 1
B793 4641	Stepper Motor Bracket	19 - 23
B793 4645	Gear - 25Z/68Z	19 - 24
B793 4646	Gear - 25Z/52Z	19 - 25
B793 4647	Gear - 25Z	19 - 27
B793 4651	Drive Gear Arm	19 - 26
B793 4652	Driven Gear Arm	19 - 29
B793 4656	Gear - 20Z	19 - 28
B793 4713	Standard Fence Shaft	21 - 15
B793 4714	Standard Fence:Upper	21 - 19
B793 4715	Standard Fence Bracket	21 - 13
B793 4723	Shaft:Drive:Standard Fence	21 - 6
B793 4731	Standard Fence Link	21 - 5
B793 4732	Link Bushing	21 - 3

Part No.	Description	Page and Index No.
B793 4733	Compression Spring - Link	21 - 4
B793 4807	Cover:Upper:Paper Crimp Sub-unit	25 - 10
B793 4808	Discharge Brush:Exit	29 - 9
B793 4809	Sheet:Cover:Upper:Paper Crimp Sub-unit	25 - 9
B793 5201	Harness - Interface	37 - 1
B793 5210	Harness - PCB Motor	37 - 17
B793 5220	Harness - PCB Sensor	37 - 16
B793 5221	Harness - Paper Sensor	37 - 21
B793 5222	Harness - Paper Feed Sensor	15 - 23
B793 5223	Harness - Safety Switch	37 - 18
B793 5224	Harness - Sensor	31 - 9
B793 5225	Harness - Exit Proof Tray	7 - 3
B793 5226	Harness - Paper Feed Sensor	9 - 15
B793 5227	Harness - Sensor	9 - 12
B793 5231	Harness - Stapler Unit Motor	21 - 22
B793 5232	Harness:Connecting:Swivel:Motor	29 - 16
B793 5233	Harness - Motor	21 - 7
B793 5240	Harness - Main Sensor	37 - 20
B793 5241	Harness - Stapler Unit Sensor	21 - 20
B793 5242	Harness - Stapler Unit Sensor	21 - 21
B793 5243	Harness:Connecting:Stopper:Sensor	27 - 4
B793 5245	Harness:Connecting:Transport Sensor	29 - 1
B793 5246	Harness:Connecting:Sensor	29 - 15
B793 5247	Harness - Positioning Sensor	23 - 6
B793 5250	Harness - Stapler	23 - 24
B793 5251	Harness - Stapler	23 - 23
B793 5255	Harness - Move Sensor	23 - 4
B793 5260	Harness - Stapler Driver	23 - 20
B793 5261	Harness - Motor	23 - 22
B793 5262	Harness - Sensor	23 - 21
B793 5280	Harness:Main:Motor	37 - 19
B793 5511	PCB:Main Control:Ass'y	37 - 13
B793 5521	PCB Bracket	37 - 15
B793 5811	Stepper Motor DC2.52V	35 - 1
B793 5812	Stepper Motor DC3.08V	35 - 9

Part No.	Description	Page and Index No.
B793 5813	Stepper Motor DC2.52V	17 - 11
B793 5815	Stepper Motor DC24V	17 - 3
B793 5815	Stepper Motor DC24V	21 - 8
B793 5817	Stepper Motor DC24V	35 - 13
B793 5830	Stepper Motor DC24V	9 - 1
B793 5830	Stepper Motor DC24V	19 - 21
B793 5831	Stepper Motor:DIA42:T15:Ass'y	29 - 17
B793 6111	Cover - Upper	3 - 9
B793 6121	Cover - Rear	3 - 7
B793 6131	Cover - Front	3 - 23
B793 6132	Upper Door Hinge	3 - 22
B793 6134	Lower Door Hinge	3 - 26
B793 6141	Cover - Left Upper	3 - 8
B793 6151	Cover - Left Lower	3 - 3
B793 6161	Cover - Left Sideways	3 - 25
B793 6171	Cover - Upper Open And Close	3 - 11
B793 6201	Spacer Cushion	3 - 12
B793 6400	Stapler:Service Parts:Ass'y	23 - 13
B793 6410	Holder:Front:Ass'y	23 - 16
B793 6420	Holder:Rear:Ass'y	23 - 18
B793 6431	Rod:Clamp	23 - 17
B793 6432	Adjusting Screw:M4	23 - 19
B793 7861	Decal - Misfeed Removal	3 - 24
B793 7861	Decal - Misfeed Removal	39 - 1
B793 7863	Decal - Lower Open and Close	15 - 17
B793 7863	Decal - Lower Open and Close	39 - 2
B793 7864	Decal - Lengthwise	11 - 18
B793 7864	Decal - Lengthwise	39 - 3
B793 7865	Decal - Shift Open and Close	9 - 20
B793 7865	Decal - Shift Open and Close	39 - 4
B793 7866	Decal - Knob	39 - 5
B793 7866	Decal - Knob	5 - 1
B793 7867	Decal - Grip Stapler Unit	39 - 6
B793 7867	Decal - Grip Stapler Unit	17 - 1
B793 7868	Decal - Knob Blade	25 - 20

Part No.	Description	Page and Index No.
B793 7868	Decal - Knob Blade	39 - 7
B793 7869	Decal - Knob Roller	25 - 19
B793 7869	Decal - Knob Roller	39 - 8
B793 7871	Decal - Proof Tray	39 - 9
B793 7871	Decal - Proof Tray	7 - 9
B793 7872	Decal - Guide Plate	25 - 16
B793 7872	Decal - Guide Plate	39 - 10
B793 7873	Decal - Open and Close	39 - 11
B793 7873	Decal - Open and Close	11 - 3
B793 7874	Decal - Jogger Fence	39 - 12
B793 7874	Decal - Jogger Fence	17 - 15
B793 7875	Decal - Cartridge S1	23 - 3
B793 7875	Decal - Cartridge S1	39 - 13
B793 7876	Decal - Caution Cartridge	23 - 7
B793 7876	Decal - Caution Cartridge	39 - 14
B793 7897	Decal:Caution:Paper Crimp Sub-unit	39 - 15
B793 7897	Decal:Caution:Paper Crimp Sub-unit	23 - 2
B793 7898	Decal:Paper Exit Sub-unit	3 - 2

Part No.	Description	Page and Index No.
A548 1317	Lever Cushion	23 - 1
A548 1317	Lever Cushion	11 - 4
A548 2139	Pulley	35 - 6
A666 2331	Rack	31 - 11
A666 3180	Timing Pulley - Z32	21 - 14
A666 3180	Timing Pulley - Z32	19 - 3
A666 4210	Shaft - Exit Roller	9 - 18
A681 2742	Driven Exit Roller	9 - 17
A681 4515	Bushing - 6mm	17 - 16
A697 2102	Damper - Junction Gate Solenoid	37 - 3
A697 2260	Pulley - 17T	5 - 5
A697 4170	Pulley - 32T	17 - 9
B352 2207	Pad - Stapler Tray	11 - 5
B352 2207	Pad - Stapler Tray	15 - 21
B352 2407	Reverse Roller - 20Z	33 - 12
B352 2409	Idler Gear - 17Z	33 - 10
B352 2650	Magnet Catch - 5N	25 - 15
B408 1390	Flat Screw:Groove Type	3 - 16
B408 1411	Coupling Lever	13 - 5
B408 1412	Flat Screw	3 - 17
B408 1413	Coupling Stay	13 - 4
B408 1429	Ground Plate Bracket	3 - 18
B408 1431	Flat Screw:Coupling	3 - 21
B408 2173	Slide Roller	9 - 24
B408 2174	Spring	9 - 23
B408 2175	Bushing - Roller Slide	9 - 22
B408 2211	Transfer Roller	7 - 7
B408 2211	Transfer Roller	13 - 3
B408 2232	Exit Roller:Proof Tray	7 - 6
B408 2241	Exit Roller	33 - 9
B408 2246	Reverse Roller Arm	33 - 11
B408 2251	Stapler Exit Roller	15 - 11
B408 2271	Pulley - T24	15 - 26
B408 2281	Knob - Transfer Roller	5 - 2
B408 2311	Slide Roller	11 - 11

Part No.	Description	Page and Index No.
B408 2312	Bushing - Roller Slide	11 - 1
B408 2313	Pulley - T24	11 - 23
B408 2331	Link Drive Gear	35 - 16
B408 2422	Pulley - T16	15 - 6
B408 2431	Positioning Roller	15 - 4
B408 2441	Shaft - Positioning Roller	15 - 10
B408 2512	Bracket - DC Solenoid	37 - 14
B408 2731	Arm - Top Cover	3 - 14
B408 2813	Discharge Brush:Exit:Open and Close	9 - 13
B408 2831	Gear - Z53	9 - 8
B408 2831	Gear - Z53	21 - 10
B408 2833	Shaft - Worm Wheel	9 - 9
B408 2955	Bracket:Tightener:Ass'y	35 - 7
B408 3112	End Fence	31 - 15
B408 3211	Tray Base	31 - 14
B408 3221	Front Guide Plate	31 - 12
B408 3231	Rear Guide Plate	31 - 13
B408 3233	Tray H.p Sensor Feeler	31 - 10
B408 3613	Lever - Micro Switch	33 - 6
B408 4335	Timing Pulley - Jogger	17 - 7
B408 4337	Spring	17 - 4
B408 4362	Jogger Fence - Front	17 - 18
B408 4363	Slider - Jogger Fence	17 - 14
B408 4364	Film - Jogger Fence	17 - 17
B408 4366	Jogger Fence - Inner	17 - 19
B408 4382	Pulley - T26	19 - 5
B408 4395	Pulley - Exit Belt	21 - 18
B468 2515	Spring - Gather Roller	15 - 3
B468 2882	Link Bushing	9 - 5
B468 5991	Harness Bracket	23 - 9
B468 5991	Harness Bracket	37 - 9
B478 2328	Exit Roller:Driven	29 - 13
B700 1501	Tension Spring - Pressure	35 - 4
B700 2510	Bracket:Dcsol:Gate Pawl:Proof Tray	37 - 5
B700 2649	Timing Belt:40S2M144	15 - 5

Part No.	Description	Page and Index No.
B700 3420	Tray:Auxiliary	3 - 4
B700 3710	Bracket:Surface of Paper Sensor	31 - 8
B700 3715	Shaft:Arm:Paper Exit Sub-unit	31 - 5
B700 3725	Arm:Plate:Paper Exit Sub-unit	31 - 4
B700 3730	Roller:Plate:Paper Exit Sub-unit	31 - 2
B700 3740	Spring:Arm:16mN.m	31 - 3
B700 4521	Holder:Arm:Harness	25 - 3
B700 4522	Arm:Harness:Stapler Unit	25 - 5
B700 4523	Pin:Fix:Arm	25 - 4
B700 4713	Compression Spring	29 - 7
B700 4715	Exit Roller:Paper Crimp Sub-unit	29 - 8
B700 4718	Pulley:27T	27 - 7
B700 4720	Timing Belt:B40S2M214	27 - 8
B700 4745	Guide Plate:Exit:Lower	29 - 4
B700 4753	Guide Plate:Exit:Upper	29 - 10
B700 4755	Shaft:Driven	29 - 14
B700 4757	Compression Spring:Transport Roller	29 - 11
B700 4763	Guide Plate:Roller:Lower	29 - 3
B700 4770	Bracket:Home Position Sensor:Blade	27 - 5
B700 4781	Gear:62T	27 - 2
B700 4782	Pulley:31T	27 - 1
B700 4784	Pulley:22t	25 - 8
B700 4785	Timing Belt:B80S3M156	25 - 7
B700 4787	Timing Belt:B80S3M237	25 - 6
B700 4810	Shaft:Driven:Release	29 - 25
B700 4821	Cam:Release:Transport	29 - 23
B700 4823	Gear:56Z	29 - 24
B700 4825	Gear:28Z	29 - 27
B700 4827	Joint:Release:Transport	29 - 22
B700 4829	Spacer:Release:Transport	29 - 21
B700 4835	Bracket:Paper Feed Sensor	29 - 19
B700 4873	Guide:Open and Close:Front	25 - 13
B700 4874	Guide:Open and Close:Rear	25 - 14
B700 4875	Guide Plate:Open and Close:Lower	25 - 12
B700 4877	Grip:Guide Plate	25 - 17

Part No.	Description	Page and Index No.
B700 4879	Bracket:Contact Point	25 - 11
B700 4885	Knob:Paper Crimp	25 - 18
B700 5804	Stepper Motor:DIA42:Z17:Ass'y	27 - 6
B714 3115	Knob Screw:Document Feeder:Fix	3 - 6
B804 3720	Arm:Paper Senser:Paper Exit Sub-unit:Paper Crimp	31 - 1
B804 3853	Tray:Paper Crimp Sub-unit	3 - 1
G838 2347	Gear:Z45	31 - 16

Part No.	Description	Page and Index No.
AA04 3613	Timing Belt - 40S3M177	19 - 6
AA04 3614	Timing Belt - 40S2M796	17 - 8
AA04 3615	Timing Belt:40S2M208	29 - 26
AA04 3616	Timing Belt - 40S3M210	5 - 4
AA04 3617	Timing Belt - 40S3M297	35 - 11
AA04 3618	Timing Belt - 40S3M453	35 - 8
AA04 3629	Timing Belt - 60S3M564	35 - 3
AA06 3529	Pressure Spring - 14.5mm	9 - 21
AA06 3529	Pressure Spring - 14.5mm	15 - 13
AA06 3529	Pressure Spring - 14.5mm	11 - 15
AA08 0237	Bushing - 4x5x7	11 - 16
AA08 0237	Bushing - 4x5x7	29 - 12
AA08 0237	Bushing - 4x5x7	7 - 15
AA08 0237	Bushing - 4x5x7	15 - 12
AA08 2101	Bushing - 6x10x6	15 - 1
AA08 2101	Bushing - 6x10x6	13 - 1
AA08 2101	Bushing - 6x10x6	19 - 22
AA08 2101	Bushing - 6x10x6	21 - 12
AA08 2101	Bushing - 6x10x6	29 - 5
AA08 2101	Bushing - 6x10x6	7 - 1
AA08 2101	Bushing - 6x10x6	11 - 22
AA08 2101	Bushing - 6x10x6	33 - 2
AA08 2104	Bushing - 8x12x7	31 - 20
AA08 2104	Bushing - 8x12x7	19 - 10
AA13 2208	Spacer - M6	29 - 6
AA14 3790	Screw:Contact Point	13 - 6
AA14 3790	Screw:Contact Point	11 - 2
AA14 3790	Screw:Contact Point	17 - 6
AA14 3790	Screw:Contact Point	35 - 5
AA14 3823	Tapping Screw	5 - 11
AA16 1099	Lever Cushion	15 - 9
AF02 2097	Driven Roller	11 - 17
AF02 2097	Driven Roller	15 - 14
AF02 2097	Driven Roller	7 - 16
AG07 0514	Magnet Catch	3 - 13

Part No.	Description	Page and Index No.
AG07 0514	Magnet Catch	9 - 25
AG07 0514	Magnet Catch	11 - 20
AG07 1012	Magnet Catch:Ass'y	23 - 11
AJ01 1021	Stapler:EH-581R	23 - 15
AW01 0109	Photo Refiection Sensor:PS117ED1	29 - 2
AW01 0109	Photo Refiection Sensor:PS117ED1	17 - 12
AW01 0109	Photo Refiection Sensor:PS117ED1	9 - 14
AW02 0141	Photointerruptor	31 - 7
AW02 0141	Photointerruptor	35 - 15
AW02 0141	Photointerruptor	9 - 10
AW02 0141	Photointerruptor	33 - 8
AW02 0141	Photointerruptor	27 - 3
AW02 0141	Photointerruptor	37 - 7
AW02 0141	Photointerruptor	21 - 11
AW02 0141	Photointerruptor	29 - 20
AW02 0141	Photointerruptor	23 - 5
AW02 0154	Photointerruptor:Entrance	15 - 24
AW02 0166	Photointerruptor:Paper Feed Sensor	31 - 21
AW02 0166	Photointerruptor:Paper Feed Sensor	21 - 23
AW02 0178	Paper Feed Sensor	7 - 2
AW02 0184	Paper Feed Sensor	7 - 5
AX04 0214	DC Motor:Shift:Upper Lower:Drive	31 - 18
GW01 0007	Photo Refiection Sensor:Exit	29 - 18
GW01 0007	Photo Refiection Sensor:Exit	5 - 21

Part No.	Description	Page and Index No.
0353 0040N	Screw - M3x4	37 - 102
0353 0400N	Screw - M3x40	31 - 104
0450 3008N	Tapping Screw - M3x8	17 - 105
0450 3008N	Tapping Screw - M3x8	25 - 103
0450 3020N	Tapping Screw:M3x20	33 - 103
0451 3006N	Tapping Screw - 3x6	3 - 102
0451 3006N	Tapping Screw - 3x6	17 - 103
0451 3006N	Tapping Screw - 3x6	29 - 102
0451 3006N	Tapping Screw - 3x6	19 - 102
0451 3006N	Tapping Screw - 3x6	31 - 102
0451 3006N	Tapping Screw - 3x6	27 - 101
0451 3006N	Tapping Screw - 3x6	21 - 102
0451 3006N	Tapping Screw - 3x6	25 - 102
0451 3006N	Tapping Screw - 3x6	35 - 102
0451 3008N	Tapping Screw - M3x8	17 - 106
0451 3008N	Tapping Screw - M3x8	23 - 103
0451 3008N	Tapping Screw - M3x8	3 - 101
0451 3008N	Tapping Screw - M3x8	25 - 114
0451 3010N	Tapping Screw:3x10	31 - 103
0451 3010N	Tapping Screw:3x10	17 - 104
0451 3010N	Tapping Screw:3x10	11 - 102
0452 3006N	Binding Self-tapping Screw:3x6	23 - 102
0452 3008N	Tapping Screw - M3x8	33 - 102
0453 3006N	Tapping Screw - M3x6	31 - 105
0453 3006N	Tapping Screw - M3x6	27 - 102
0453 3006N	Tapping Screw - M3x6	33 - 104
0453 3008N	Binding Self Tapping Screw:3x8	21 - 103
0453 3014N	Binding Self Tapping Screw 3x14	29 - 103
0454 3006Q	Tapping Screw - M3x6	23 - 101
0454 3006Q	Tapping Screw - M3x6	33 - 101
0454 3006Q	Tapping Screw - M3x6	21 - 101
0454 3006Q	Tapping Screw - M3x6	25 - 101
0454 3006Q	Tapping Screw - M3x6	19 - 101
0454 3006Q	Tapping Screw - M3x6	29 - 101
0454 3006Q	Tapping Screw - M3x6	31 - 101

Part No.	Description	Page and Index No.
0454 3006Q	Tapping Screw - M3x6	7 - 101
0454 3006Q	Tapping Screw - M3x6	9 - 101
0454 3006Q	Tapping Screw - M3x6	35 - 101
0454 3006Q	Tapping Screw - M3x6	37 - 101
0454 3006Q	Tapping Screw - M3x6	5 - 101
0454 3006Q	Tapping Screw - M3x6	15 - 101
0454 3006Q	Tapping Screw - M3x6	13 - 101
0454 3006Q	Tapping Screw - M3x6	11 - 101
0454 3006Q	Tapping Screw - M3x6	17 - 101
0454 3008Q	Tapping Screw:3x8	3 - 103
0454 3008Q	Tapping Screw:3x8	5 - 106
0454 3008Q	Tapping Screw:3x8	17 - 102
0633 0140G	Parallel Pin - 3x14	31 - 108
0633 0140G	Parallel Pin - 3x14	27 - 105
0633 0140G	Parallel Pin - 3x14	25 - 112
0633 0180G	Parallel Pin - 3x18mm	25 - 113
0720 0040E	Retaining Ring - M4	5 - 105
0720 0040E	Retaining Ring - M4	23 - 105
0720 0040E	Retaining Ring - M4	35 - 103
0720 0040E	Retaining Ring - M4	31 - 109
0720 0040E	Retaining Ring - M4	7 - 103
0720 0040E	Retaining Ring - M4	11 - 104
0720 0040E	Retaining Ring - M4	27 - 103
0720 0040E	Retaining Ring - M4	9 - 103
0720 0040E	Retaining Ring - M4	13 - 102
0720 0040E	Retaining Ring - M4	21 - 104
0720 0040E	Retaining Ring - M4	19 - 103
0720 0040E	Retaining Ring - M4	29 - 104
0720 0040E	Retaining Ring - M4	15 - 103
0720 0040E	Retaining Ring - M4	17 - 107
0720 0060E	Retaining Ring - M6	19 - 104
0720 0060E	Retaining Ring - M6	25 - 104
0720 0060E	Retaining Ring - M6	31 - 106
0742 3808	Ball Bearing - 8x16x5	25 - 105
0805 0088	Retaining Ring - M6	27 - 104

Part No.	Description	Page and Index No.
0805 0088	Retaining Ring - M6	5 - 102
0805 0088	Retaining Ring - M6	19 - 106
0805 0088	Retaining Ring - M6	31 - 107
0805 0089	Retaining Ring - M4	7 - 102
0805 0089	Retaining Ring - M4	35 - 104
0805 0089	Retaining Ring - M4	9 - 102
0805 0089	Retaining Ring - M4	23 - 106
0805 0089	Retaining Ring - M4	11 - 103
0805 0089	Retaining Ring - M4	33 - 107
0805 0089	Retaining Ring - M4	19 - 105
0805 0089	Retaining Ring - M4	15 - 102
0805 0089	Retaining Ring - M4	29 - 105
0805 3385	Bushing - 6mm	19 - 107
0805 3386	Bushing - 8mm	19 - 108
0950 3005N	Screw:Spring Washer:M3x5	33 - 105
0951 3006N	Screw - M3x6	23 - 104
1105 0328	Harness Clamp - ES-0505	31 - 112
1105 0328	Harness Clamp - ES-0505	37 - 105
1105 0328	Harness Clamp - ES-0505	25 - 110
1105 0328	Harness Clamp - ES-0505	5 - 103
1105 0328	Harness Clamp - ES-0505	21 - 106
1105 0328	Harness Clamp - ES-0505	7 - 104
1105 0334	Edge - 17	23 - 108
1105 0487	Harness Clamp	37 - 104
1105 0487	Harness Clamp	35 - 105
1105 0487	Harness Clamp	25 - 107
1105 0487	Harness Clamp	17 - 108
1105 0487	Harness Clamp	31 - 111
1105 0487	Harness Clamp	21 - 107
1105 0488	Harness Clamp	23 - 107
1105 0488	Harness Clamp	25 - 109
1105 0489	Harness Clamp - LWS 1316	31 - 110
1105 0489	Harness Clamp - LWS 1316	25 - 106
1105 0516	Clamp	25 - 108
1105 0522	Edge Saddle - LES0510	25 - 111

Part No.	Description	Page and Index No.
1105 0522	Edge Saddle - LES0510	29 - 106
1105 0619	Clamp:LBWS-0605S-V0	13 - 105
1105 0623	Clamp - LBWS-0206S-V0	29 - 107
1105 0623	Clamp - LBWS-0206S-V0	37 - 103
1105 0623	Clamp - LBWS-0206S-V0	5 - 104
1105 0623	Clamp - LBWS-0206S-V0	7 - 105
1105 0623	Clamp - LBWS-0206S-V0	21 - 105
1105 0623	Clamp - LBWS-0206S-V0	9 - 104
1105 0623	Clamp - LBWS-0206S-V0	33 - 108
1105 0623	Clamp - LBWS-0206S-V0	13 - 104
1105 0623	Clamp - LBWS-0206S-V0	31 - 113
1105 0623	Clamp - LBWS-0206S-V0	27 - 106
1204 2540	Micro Switch - AM50650C3	33 - 106
1204 2702	Switch - FB1L-BA11	13 - 103

Part No.	Description	Page and Index No.
5053 0223	Bushing - 8mm	5 - 7
5053 0447	Bushing - 6mm	5 - 23
5053 0447	Bushing - 6mm	7 - 19
5053 0447	Bushing - 6mm	15 - 7
5206 2686	Snap Ring	25 - 2
5447 2681	Snap Ring	3 - 15
5447 2681	Snap Ring	9 - 3
5447 2681	Snap Ring	21 - 2