

Finisher SR3040 (G838)

Finisher SR3040 (G838)

PARTS CATALOG

 
This catalog gives the numbers and names of parts on this machine.

LOCATION OF UNIT.....	2	18.DECAL AND DOCUMENT (G838)	40
1.EXTERIOR 1 (G838)	6	Parts Index.....	43
2.EXTERIOR 2 (G838)	8		
3.PUNCH FRAME (G838)	10		
4.PAPER TRANSFER 1 (G838)	12		
5.PAPER TRANSFER 2 (G838)	14		
6.PAPER TRANSFER 3 (G838)	16		
7.STAPLE TRAY 1 (G838)	18		
8.STAPLE TRAY 2 (G838)	20		
9.STAPLE UNIT (G838)	22		
10.UPPER PAPER EXIT 1 (G838)	24		
11.UPPER PAPER EXIT 2 (G838)	26		
12.UPPER PAPER EXIT 3 (G838)	28		
13.LOWER PAPER EXIT (G838)	30		
14.SHIFT DRIVE 1 (G838)	32		
15.SHIFT DRIVE 2 (G838)	34		
16.DRIVE SECTION (G838)	36		
17.ELECTRICAL SECTION (G838)	38		

June ,20 ' 2006


LOCATIONS OF UNITS

1. EXTERIOR 1 (G838)

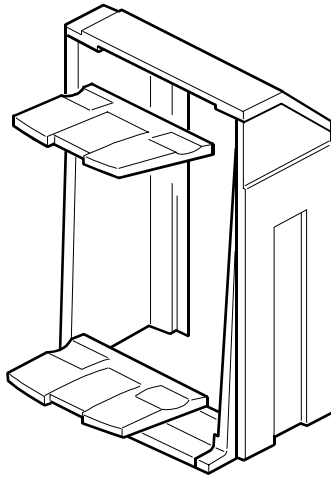


See Page 7

 2. EXTERIOR 2 (G838)

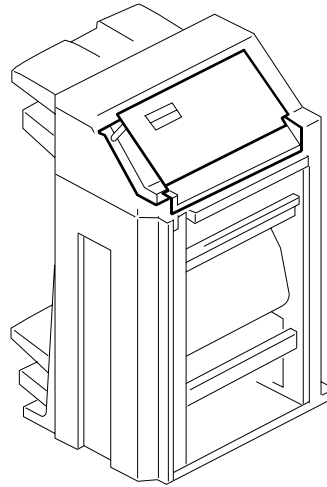


See Page 9

 3. PUNCH FRAME (G838)

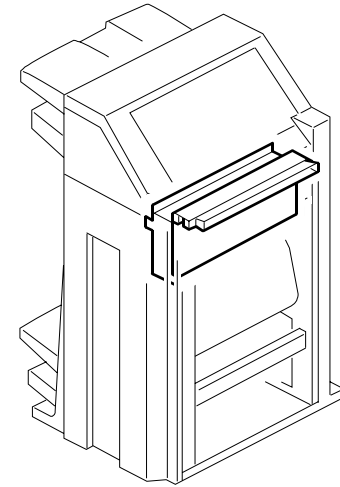


See Page 11

 4. PAPER TRANSFER 1 (G838)

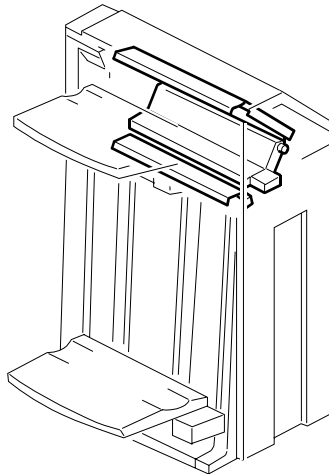


See Page 13

 5. PAPER TRANSFER 2 (G838)

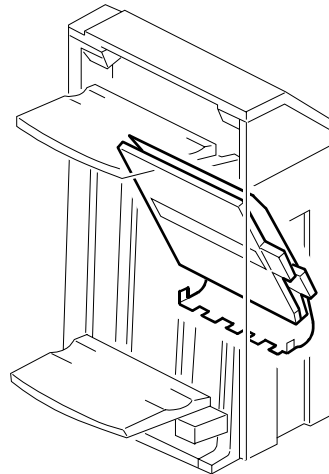

See Page 15

 
6. PAPER TRANSFER 3 (G838)

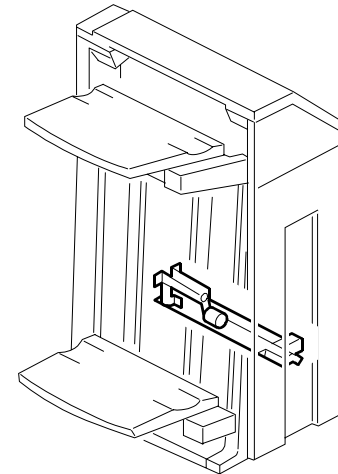

See Page 17


LOCATIONS OF UNITS

 7. STAPLE TRAY 1 (G838)

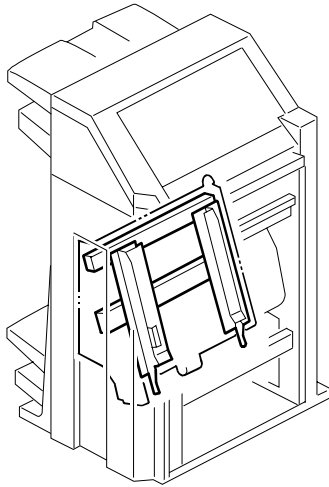


See Page 19

 8. STAPLE TRAY 2 (G838)

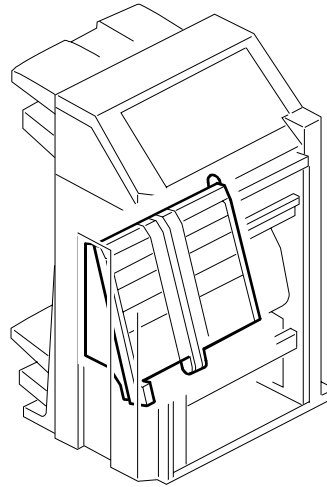


See Page 21

 9. STAPLE UNIT (G838)

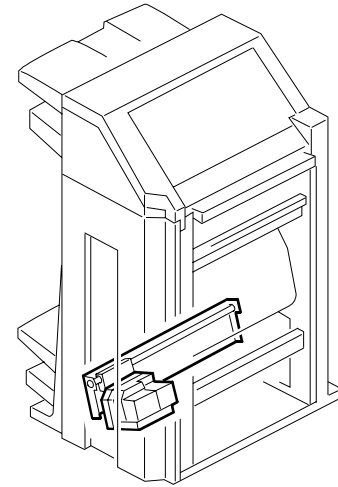


See Page 23

 10. UPPER PAPER EXIT 1 (G838)

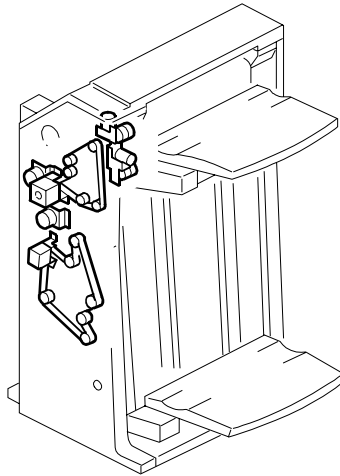


See Page 25

 11. UPPER PAPER EXIT 2 (G838)

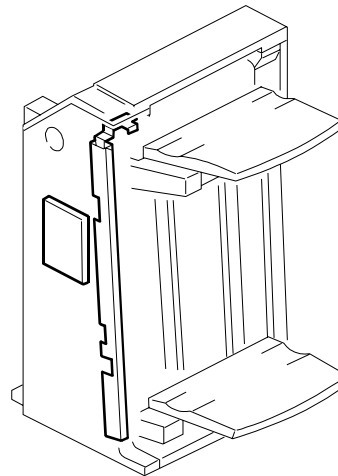

See Page 27

 
12. UPPER PAPER EXIT 3 (G838)

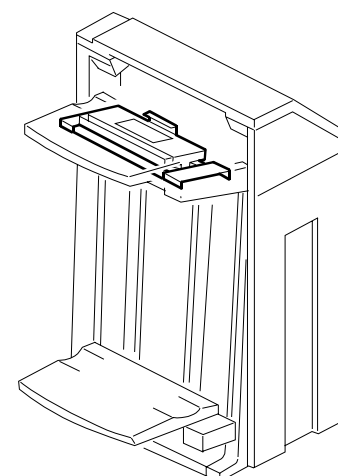

See Page 29


LOCATIONS OF UNITS

 13. LOWER PAPER EXIT (G838)

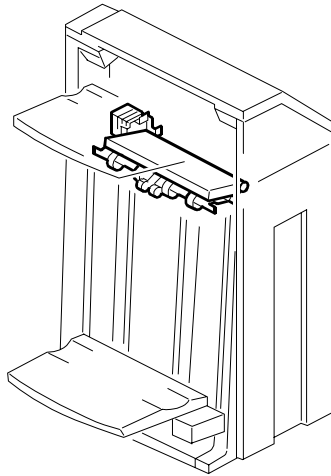


See Page 31

 14. SHIFT DRIVE 1 (G838)

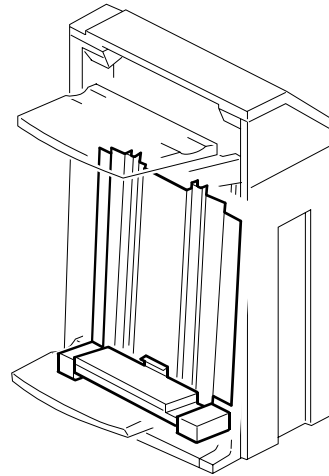


See Page 33

 15. SHIFT DRIVE 2 (G838)

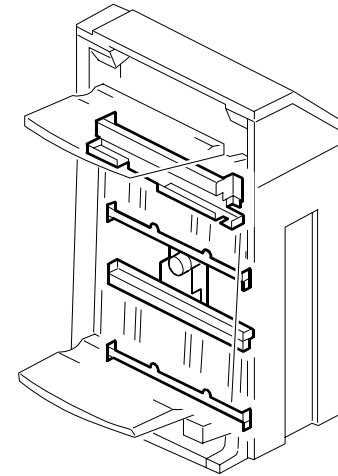


See Page 35

 16. DRIVE SECTION (G838)

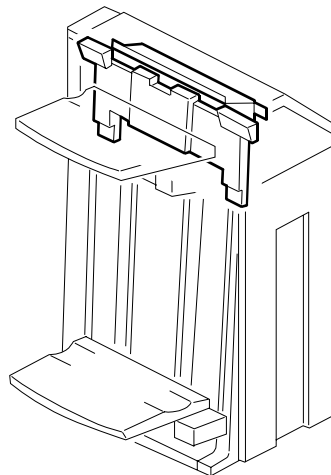


See Page 37

 17. ELECTRICAL SECTION (G838)

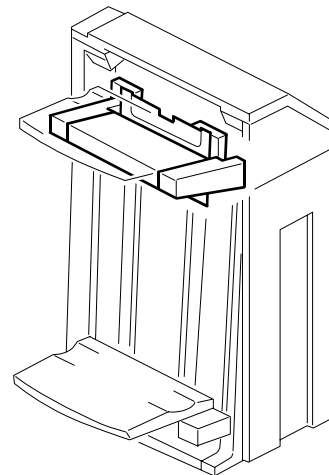

See Page 39

 1.EXTERIOR 1 (G838)

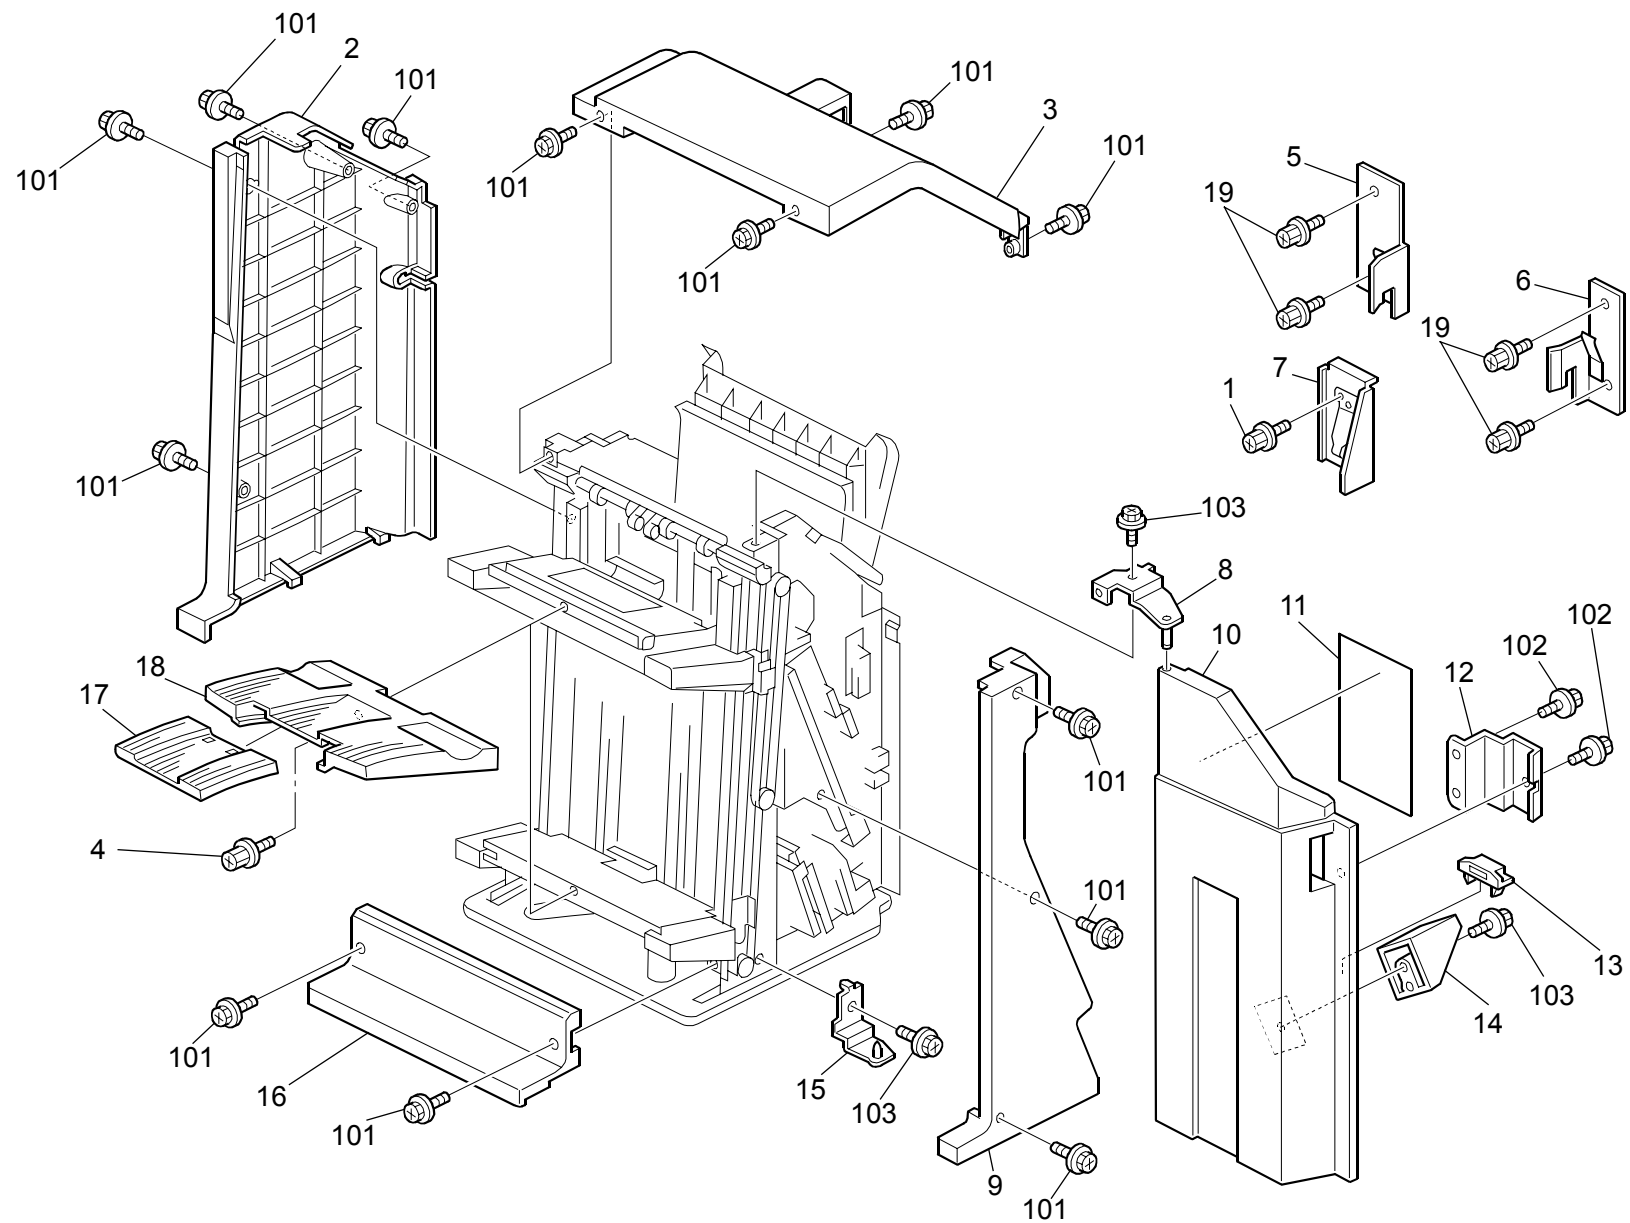


1.EXTERIOR 1 (G838)

Index No.	Part No.	Description	Q'ty Per Assembly
1	G034 2986	Flanged Hexagonal Head Bolt - M4x8	2
2	G565 6301	Rear Cover	1
3	B545 6101	Cover:Upper	1
4	G034 2993	Flanged Hexagonal Head Bolt - M3x6	2
5	A697 1144	Rear Joint Bracket	1
6	A697 1153	Front Joint Bracket	1
7	B545 1170	Bracket:Ground Plate:Upper:Ass'y	1
8	B545 6203	Upper Hinge - Frontdoor	1
9	G565 6501	Inner Cover	1
10	G565 6201	Front Cover	1
11	G565 7351	Decal - Misfeed Removal	1
12	G565 6202	Auxiliary Grip Cover	1
13	AG07 0512	Magnet Catch:Ass'y	1
14	A606 1595	Small Door Cover	1
15	B545 6206	Lower Hinge - Front Door	1
16	G565 6451	Lower Left Cover	1
17	G565 3921	Slide Tray	1
18	G565 3912	Shift Tray	1
19	G522 1152	Flanged Hexagonal Head Bolt	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 3008Q	Tapping Screw:3x8	
102	0450 3008N	Tapping Screw - M3x8	
103	0454 3006Q	Tapping Screw - M3x6	

 2.EXTERIOR 2 (G838)

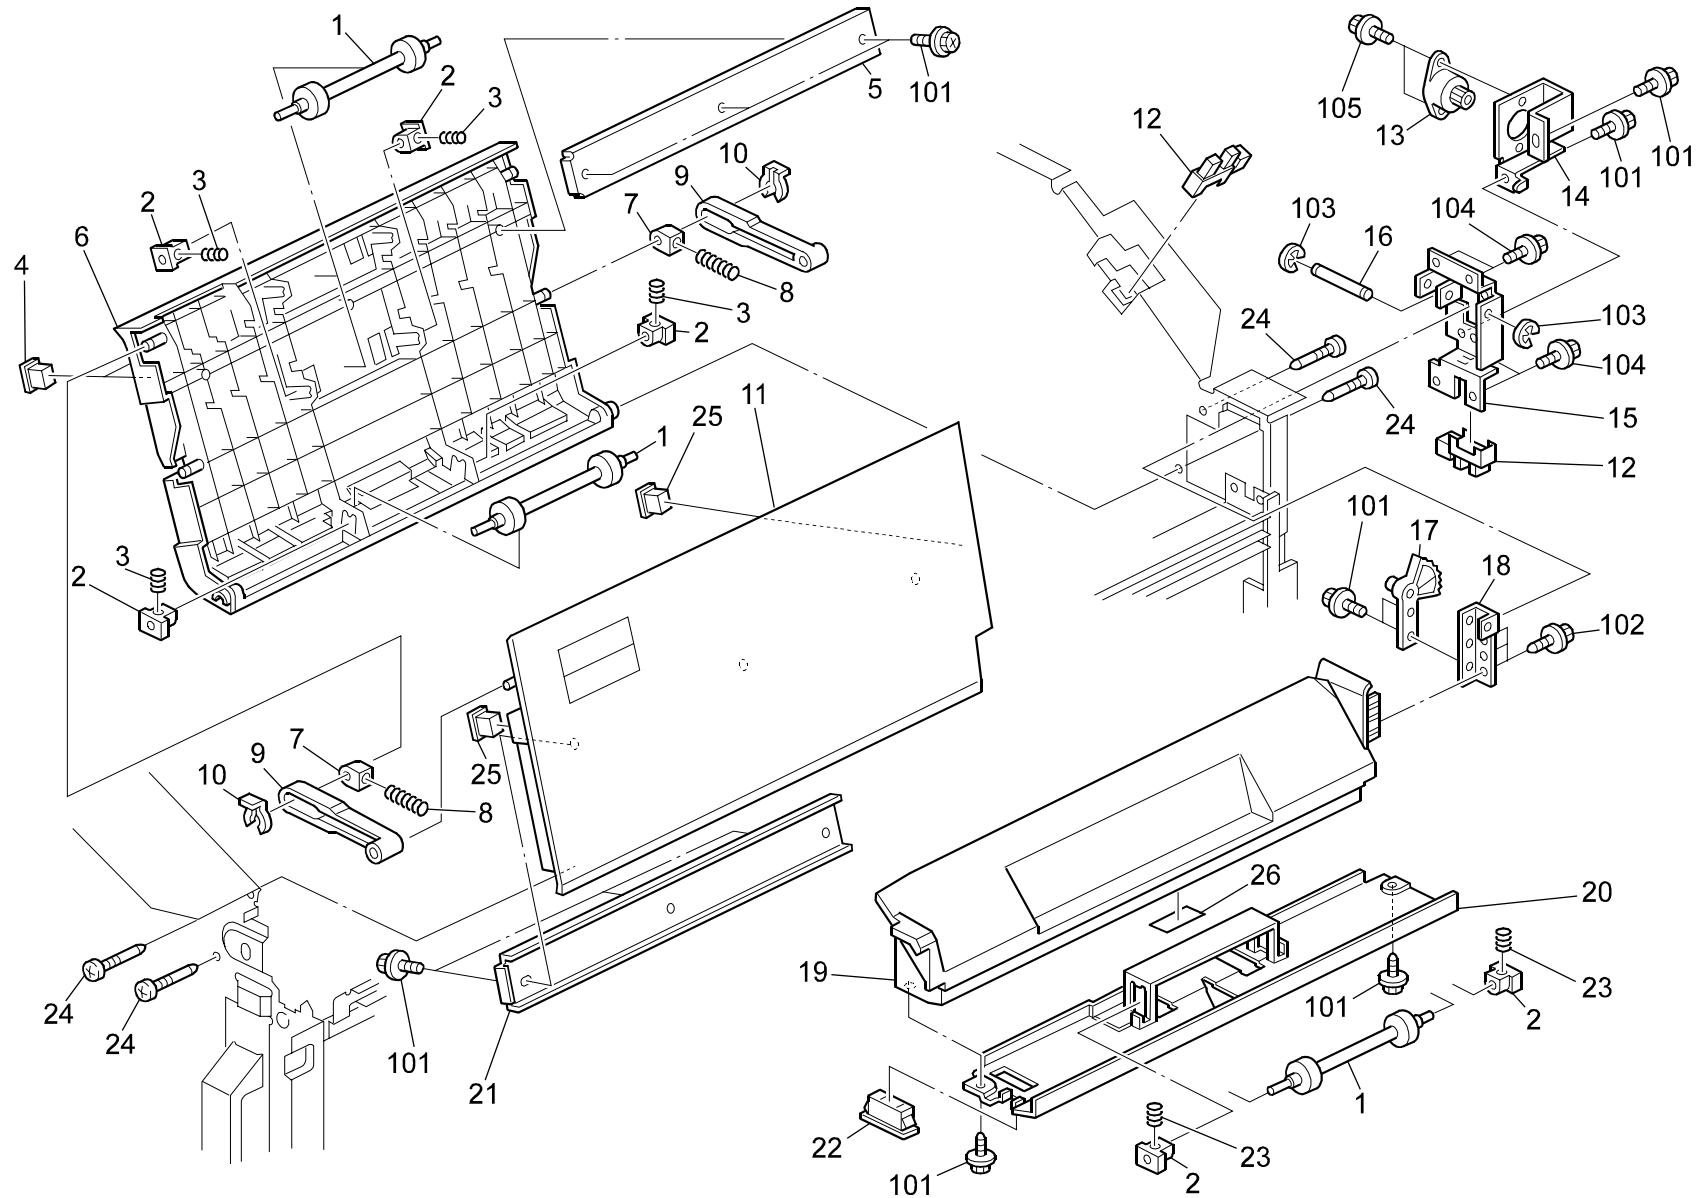


2.EXTERIOR 2 (G838)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B352 2204	Driven Roller	4
2	B352 2205	Bushing - Driven Roller	8
3	AA06 3529	Pressure Spring - 14.5mm	8
4	AA02 1030	Magnet Catch	2
5	A612 2435	Support Plate	1
6	B352 2111	Guide Plate - Transport Cover	1
7	B352 2113	Link Spacer	2
8	B352 2114	Pressure Spring	2
9	B352 2112	Link - Transport Cover	2
10	5447 2681	Snap Ring	2
11	B545 2115	Transport Cover	1
12	AW02 0156	Photointerruptor:Ee-sx4235a-p2	2
13	B352 2140	Oil Damper	1
14	B545 2137	Bracket - Oil Damper	1
15	B545 2139	Bracket - Transport Cover	1
16	B352 2136	Oil Damper Shaft	1
17	B352 2135	Sector Gear - Transport Cover	1
18	B545 2138	Bracket - Entrance Cover	1
19	G565 2151	Entrance Cover	1
20	B545 2101	Guide Plate - Entrance Cover	1
21	B545 2145	Support Plate - Transport Cover	1
22	AG07 0515	Magnet Catch:13n	1
23	B352 3656	Compression Spring	2
24	AA14 3788	Pin:Guide Plate:Paper Feed	4
25	B352 2650	Magnet Catch - 5N	2
26	B545 2105	Film:Shielding Plate	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0450 3008N	Tapping Screw - M3x8	
102	0454 3006Q	Tapping Screw - M3x6	
103	0720 0040E	Retaining Ring - M4	
104	0450 3008N	Tapping Screw - M3x8	
105	0454 4006Q	Tapping Screw:4x6	

 3.PUNCH FRAME (G838)

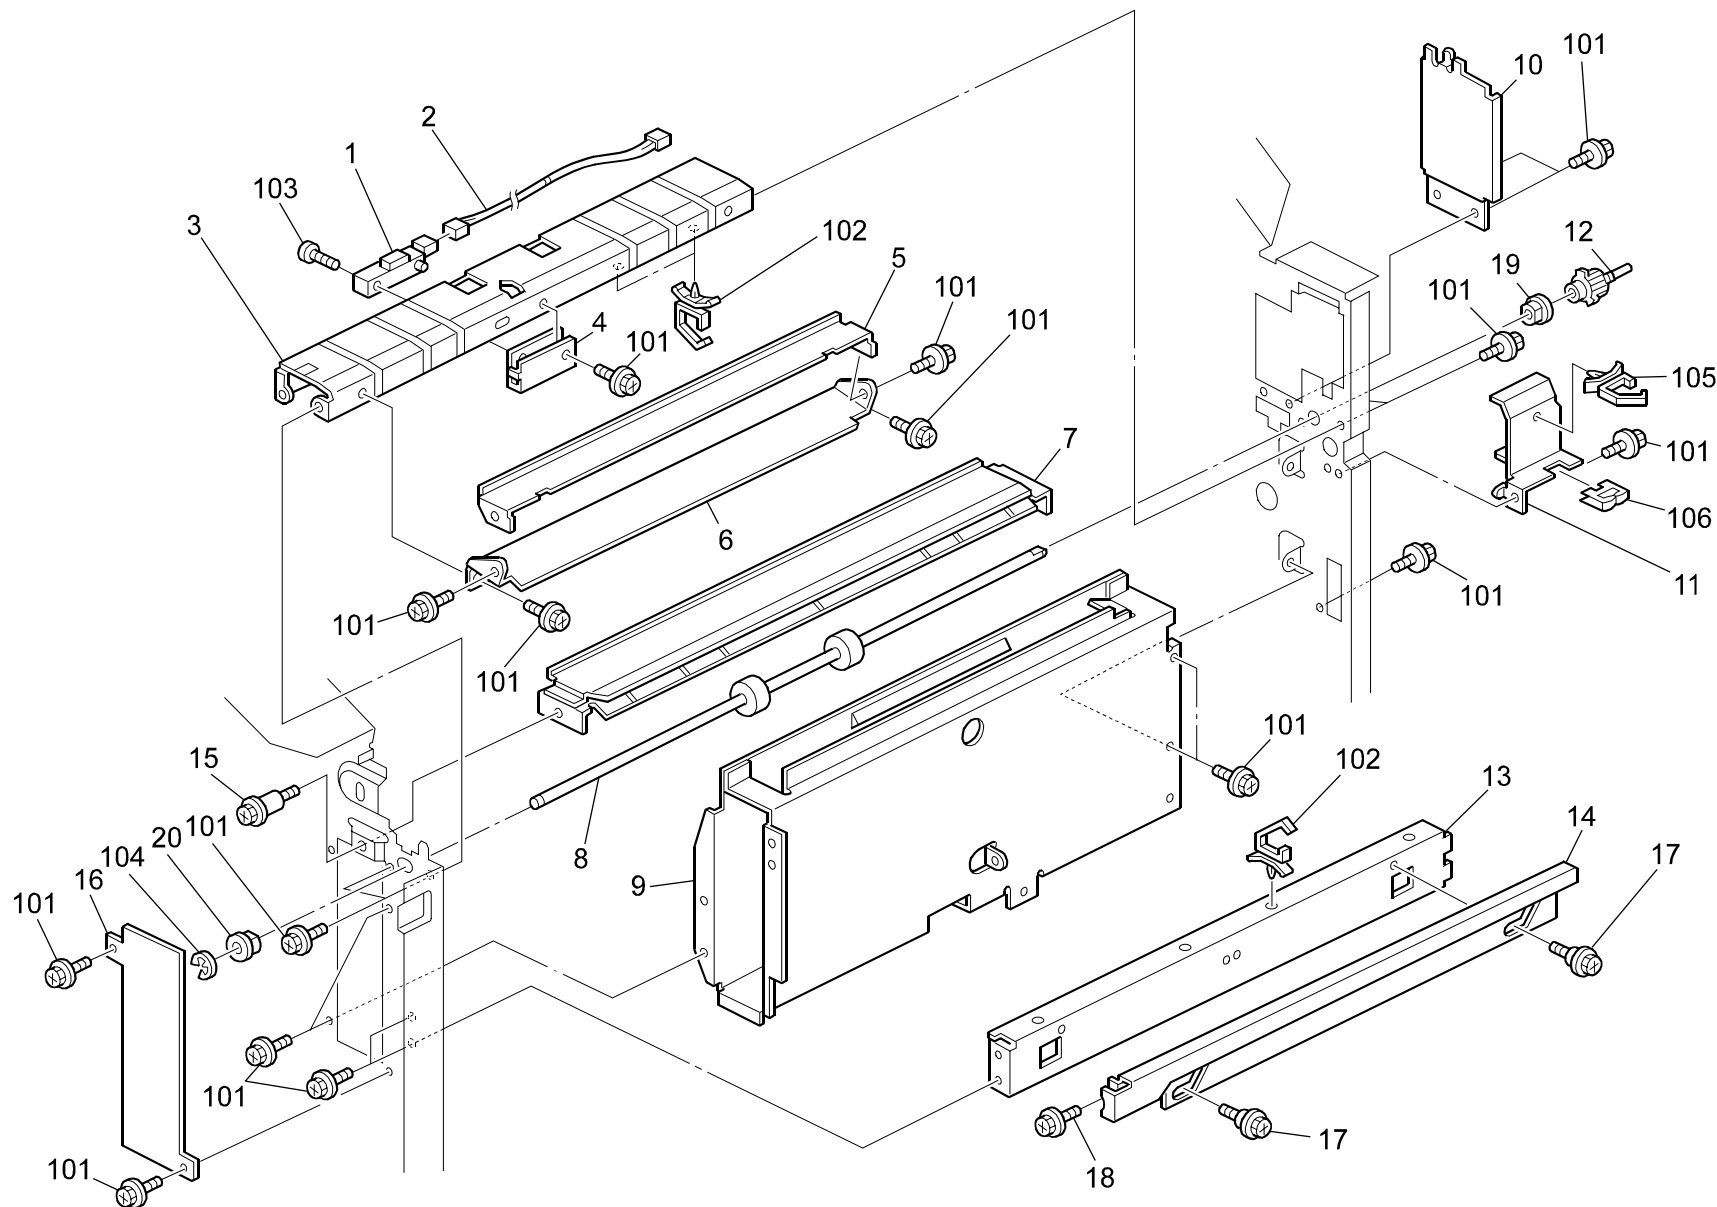


3.PUNCH FRAME (G838)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AW01 0089	Photosensor - GP2A28C	1
2	B545 5300	Harness:Connecting:240mm	1
3	A697 2150	Lower Entrance Guide	1
4	A697 2145	Entrance Sensor Bracket	1
5	B545 2251	Upper Relay Guide	1
6	A697 2250	Lower Relay Guide	1
7	B545 2500	Guide Plate:Auxiliary:Punch:Ass'y	1
8	B704 4121	Transport Roller:Lower	1
9	G838 1151	Bracket:Hopper	1
10	B545 2506	Rear Cover - Punch Unit	1
11	B545 1135	Angle:Harness Clamp	1
12	B352 1602	Timing Pulley - T20-S2M	1
13	B408 1413	Coupling Stay	1
14	A697 1128	Joint Lever	1
15	B545 7507	Screw:Punch	1
16	B545 2505	Front Cover - Hopper	1
17	AA14 3790	Screw:Contact Point	2
18	G034 2993	Flanged Hexagonal Head Bolt - M3x6	1
19	AA08 0238	Bushing - M6	1
20	G800 3089	Bushing - 6mm	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 3006Q	Tapping Screw - M3x6	
102	1105 0623	Clamp - LBWS-0206S-V0	
103	0313 0120N	Pan Head Screw:M3x12	
104	0720 0040E	Retaining Ring - M4	
105	1105 0310	Harness Clamp - LWS-1S	
106	1105 0329	Clamp - ES-0510	

 4.PAPER TRANSFER 1 (G838)

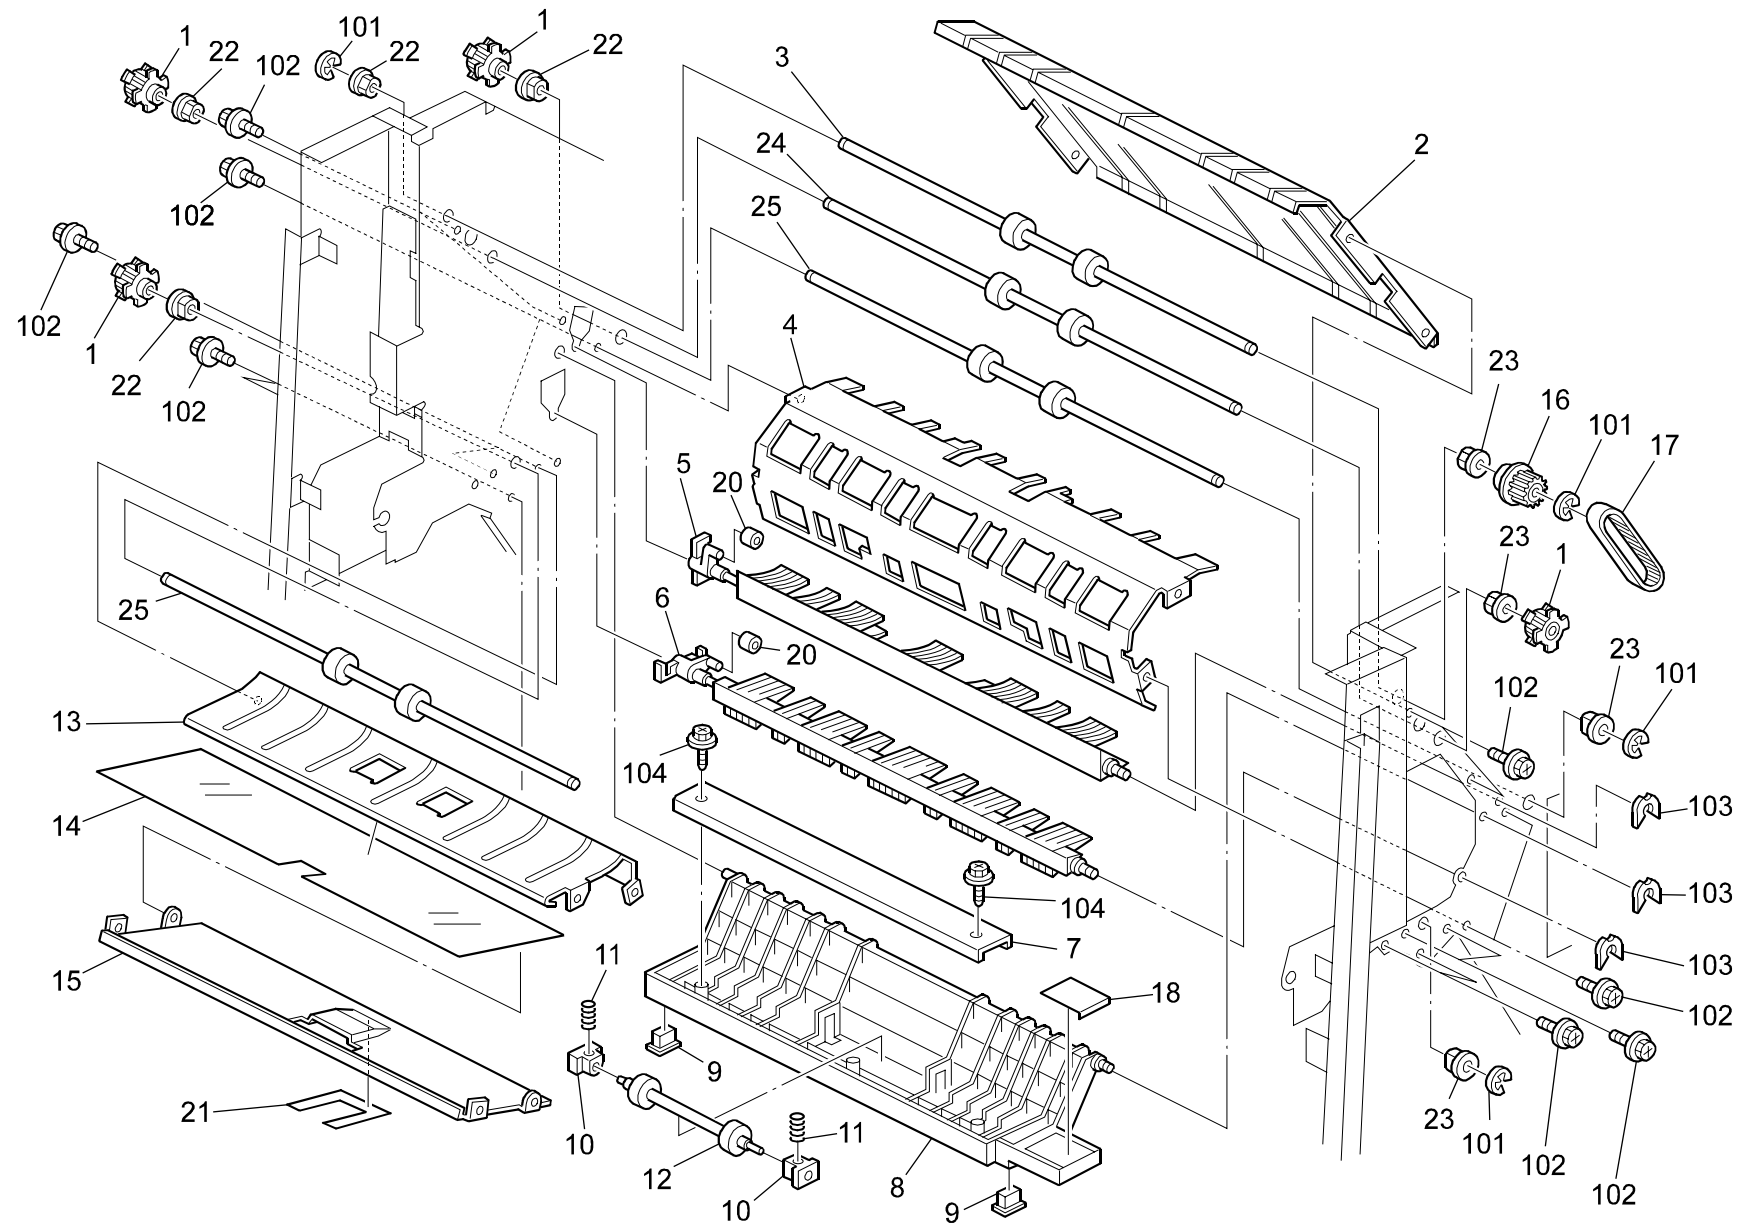


4.PAPER TRANSFER 1 (G838)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B352 1607	Timing Pulley - T20-S3M	4
2	B545 2110	Upper Guide Plate	1
3	B312 2176	Transport Roller	1
4	B545 2425	Lower4 Turn Guide Plate	1
5	A697 2245	Junction Gate - Proof Tray	1
6	B352 2440	Junction Gate - Stapler Tray	1
7	B545 2450	Support Plate - Guide Plate	1
8	B352 2420	Guide Plate - Shift Tray	1
9	B352 2650	Magnet Catch - 5N	1
10	B352 2205	Bushing - Driven Roller	2
11	AA06 3529	Pressure Spring - 14.5mm	1
12	B352 2204	Driven Roller	1
13	B545 2430	Guide Plate - Turn Gate	1
14	B352 2431	Sheet - Guide Plate	1
15	B545 2217	Exit Guide Plate	1
16	B352 1606	Timing Pulley - T20-S3M	1
17	B352 1605	Timing Belt - B40S3M216	1
18	B352 7101	Decal - R1	1
20	A458 2251	Cushion - Bin Solenoid Lever	2
21	B352 2235	Mylar - Exit Guide	1
22	AA08 0238	Bushing - M6	4
23	5053 0447	Bushing - 6mm	4
24	B352 2600	Upper Transport Roller	1
25	B352 2610	Shift Transport Roller	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0720 0040E	Retaining Ring - M4	
102	0454 3006Q	Tapping Screw - M3x6	
103	0805 0089	Retaining Ring - M4	
104	0450 3008N	Tapping Screw - M3x8	

 5.PAPER TRANSFER 2 (G838)

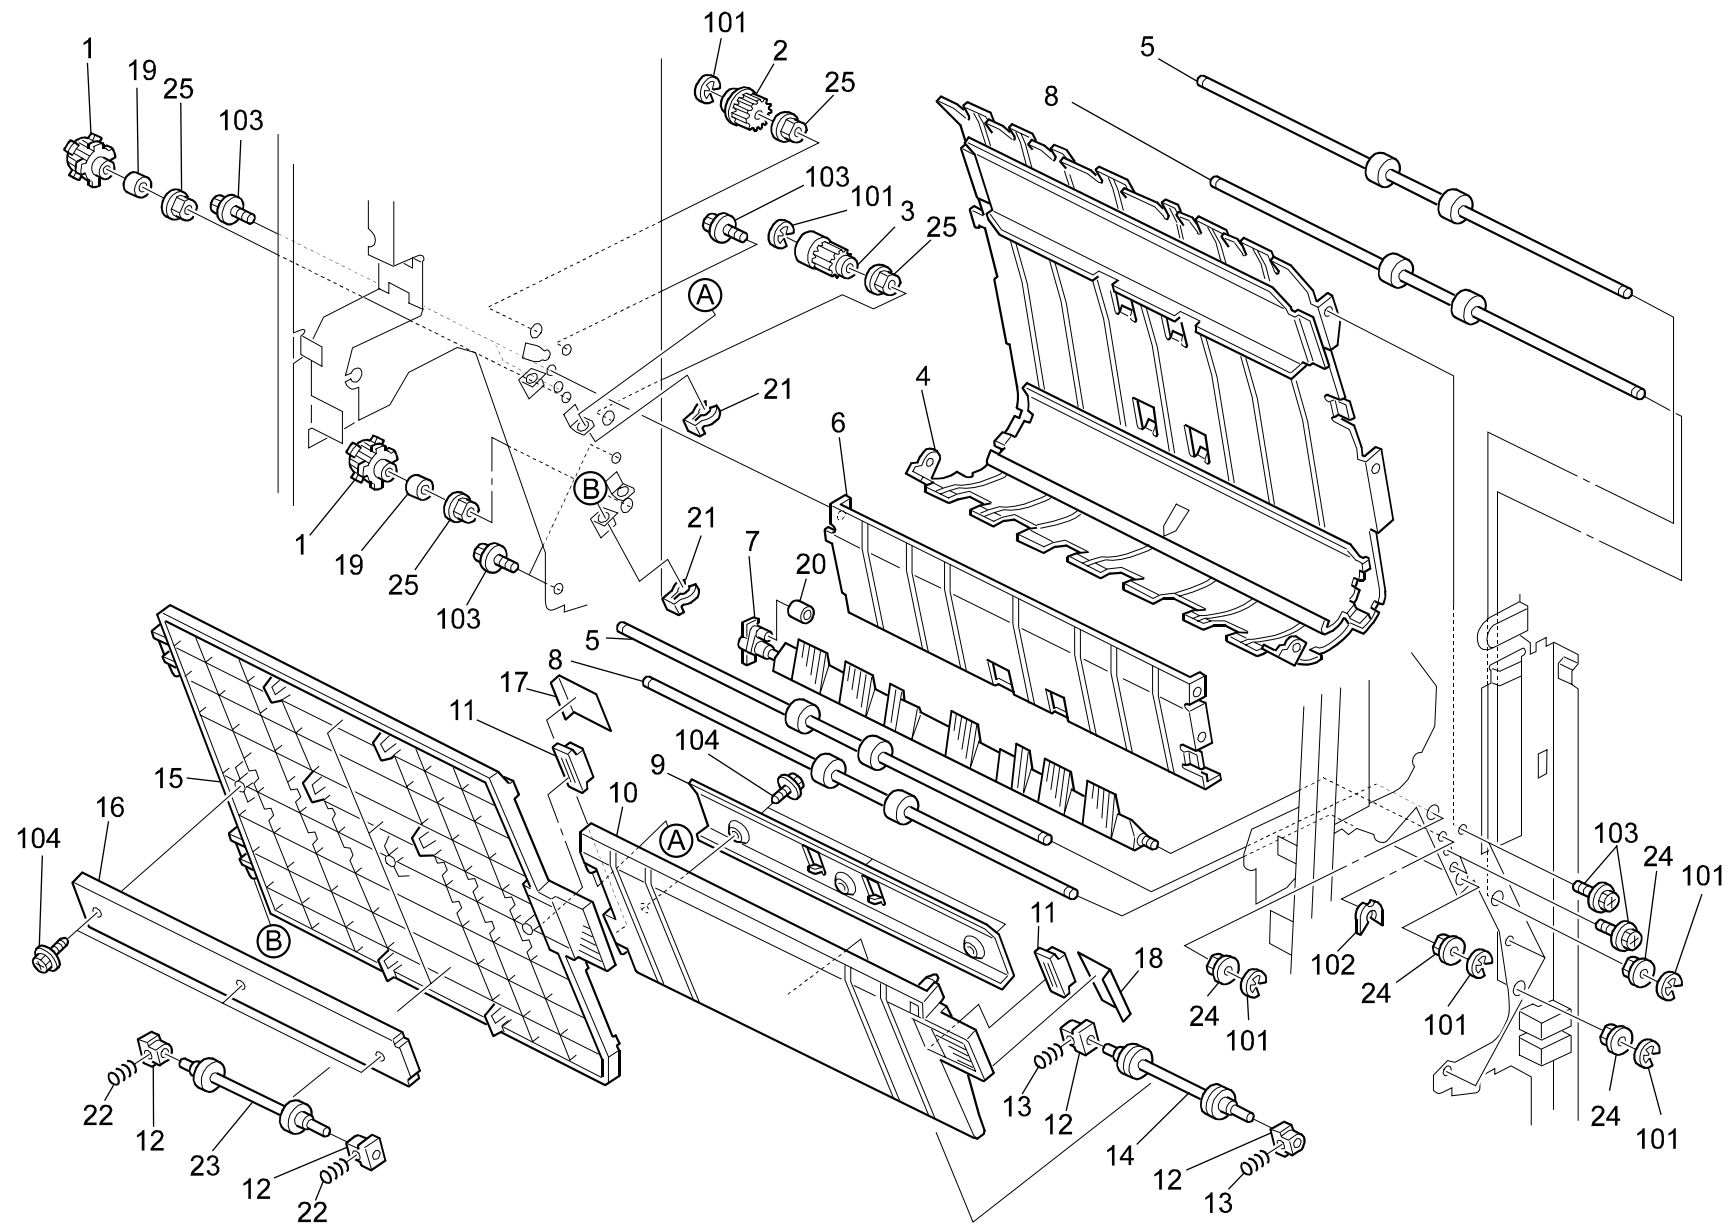


5.PAPER TRANSFER 2 (G838)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B352 1607	Timing Pulley - T20-S3M	3
2	B352 1606	Timing Pulley - T20-S3M	1
3	B312 1521	Timing Pulley - 20T	1
4	B545 2210	Vertical Transport Guide	1
5	B312 2176	Transport Roller	2
6	B312 2166	Vertical Guide	1
7	B312 2100	Pre-stack Gate	1
8	B704 4121	Transport Roller:Lower	2
9	B312 2173	Support Plate	1
10	B312 2171	Middle Guide - Vertical Transport	1
11	AG07 1012	Magnet Catch:Ass'y	2
12	B352 2205	Bushing - Driven Roller	8
13	G838 2174	Compression Spring	2
14	B312 2172	Driven Roller	1
15	B312 2151	Left Guide - Vertical Transport	1
16	A612 2435	Support Plate	1
17	B352 7151	Decal - R2	1
18	B352 7201	Decal - R3	1
19	A376 1295	Spacer - M6x10x5	1
20	A458 2251	Cushion - Bin Solenoid Lever	1
21	5447 2681	Snap Ring	2
22	AA06 3529	Pressure Spring - 14.5mm	6
23	B352 2204	Driven Roller	3
24	5053 0447	Bushing - 6mm	4
25	AA08 0238	Bushing - M6	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0720 0040E	Retaining Ring - M4	
102	0805 0089	Retaining Ring - M4	
103	0454 4006Q	Tapping Screw:4x6	
104	0452 3008N	Tapping Screw - M3x8	

 6.PAPER TRANSFER 3 (G838)

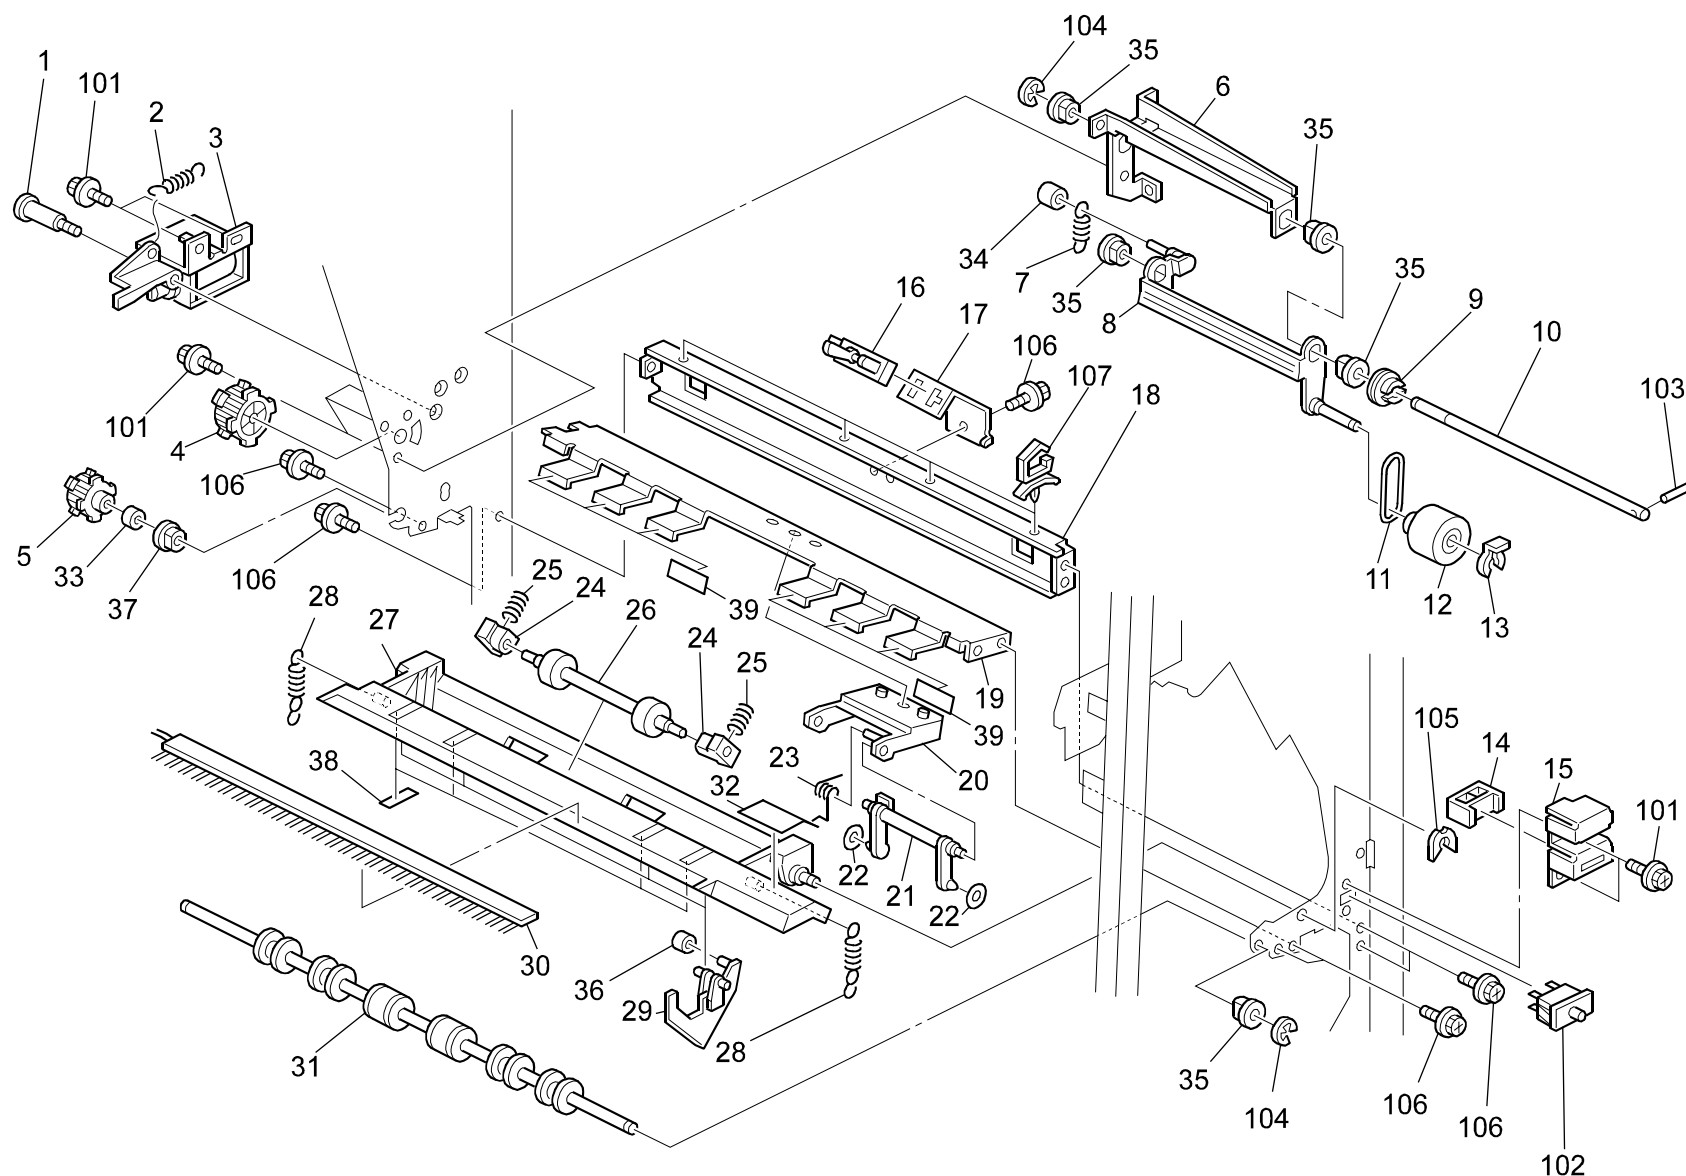


6.PAPER TRANSFER 3 (G838)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A300 3858	Stepped Screw - M4	1
2	A300 3865	Release Spring	1
3	B545 2084	Positioning Roller Solenoid	1
4	B352 2445	Pulley - T31	1
5	B352 1607	Timing Pulley - T20-S3M	1
6	A300 3851	Positioning Roller Bracket	1
7	AA06 0557	Positioning Roller Spring	1
8	B545 2811	Positioning Roller Arm	1
9	5919 2127	Positioning Roller Pulley	1
10	B352 2446	Positioning Roller Shaft	1
11	5919 2132	Positioning Roller Belt	1
12	B312 2187	Positioning Roller	1
13	5447 2681	Snap Ring	1
14	A821 1662	Interlock Switch Lever	1
15	B545 1661	Cover:Safety Switch	1
16	AW02 0169	Photointerruptor - Os - 580213-703	1
17	B545 2215	Exit Sensor Bracket	1
18	B408 1413	Coupling Stay	1
19	B545 2221	Stay:Guide:Trailing Edge	1
20	B352 2221	Holder - Paper Guide	1
21	B352 2222	Paper Guide - Trailing Edge	1
22	B352 2229	Roller - Paper Guide	2
23	B352 2232	Torsion Spring	1
24	B352 2205	Bushing - Driven Roller	2
25	A697 2187	Pressure Spring - 14.1mm	1
26	B352 2204	Driven Roller	1
27	B352 2200	Lower Guide Plate	1
28	B352 2206	Tension Spring - Lower Guide	2
29	B352 2201	Guide - Trailing Edge	4
30	B352 2203	Discharge Brush - Stapler Tray	1
31	B352 2630	Exit Roller - Stapler	1
32	B352 7251	Decal - R4	1
33	A376 1295	Spacer - M6x10x5	1
34	AA16 1099	Lever Cushion	1
35	5053 0447	Bushing - 6mm	5

Index No.	Part No.	Description	Q'ty Per Assembly
36	A458 2251	Cushion - Bin Solenoid Lever	4
37	AA08 0238	Bushing - M6	1
38	B352 2207	Pad - Stapler Tray	4
39	G565 2222	Guide - Trailing Edge	1
101	0454 4006Q	Tapping Screw:4x6	
102	1204 2384	Interlock Switch	
103	0623 0120E	Spring Pin - M3x12	
104	0720 0040E	Retaining Ring - M4	
105	0805 0089	Retaining Ring - M4	
106	0454 3006Q	Tapping Screw - M3x6	
107	1105 0623	Clamp - LBWS-0206S-V0	

 7.STAPLE TRAY 1 (G838)

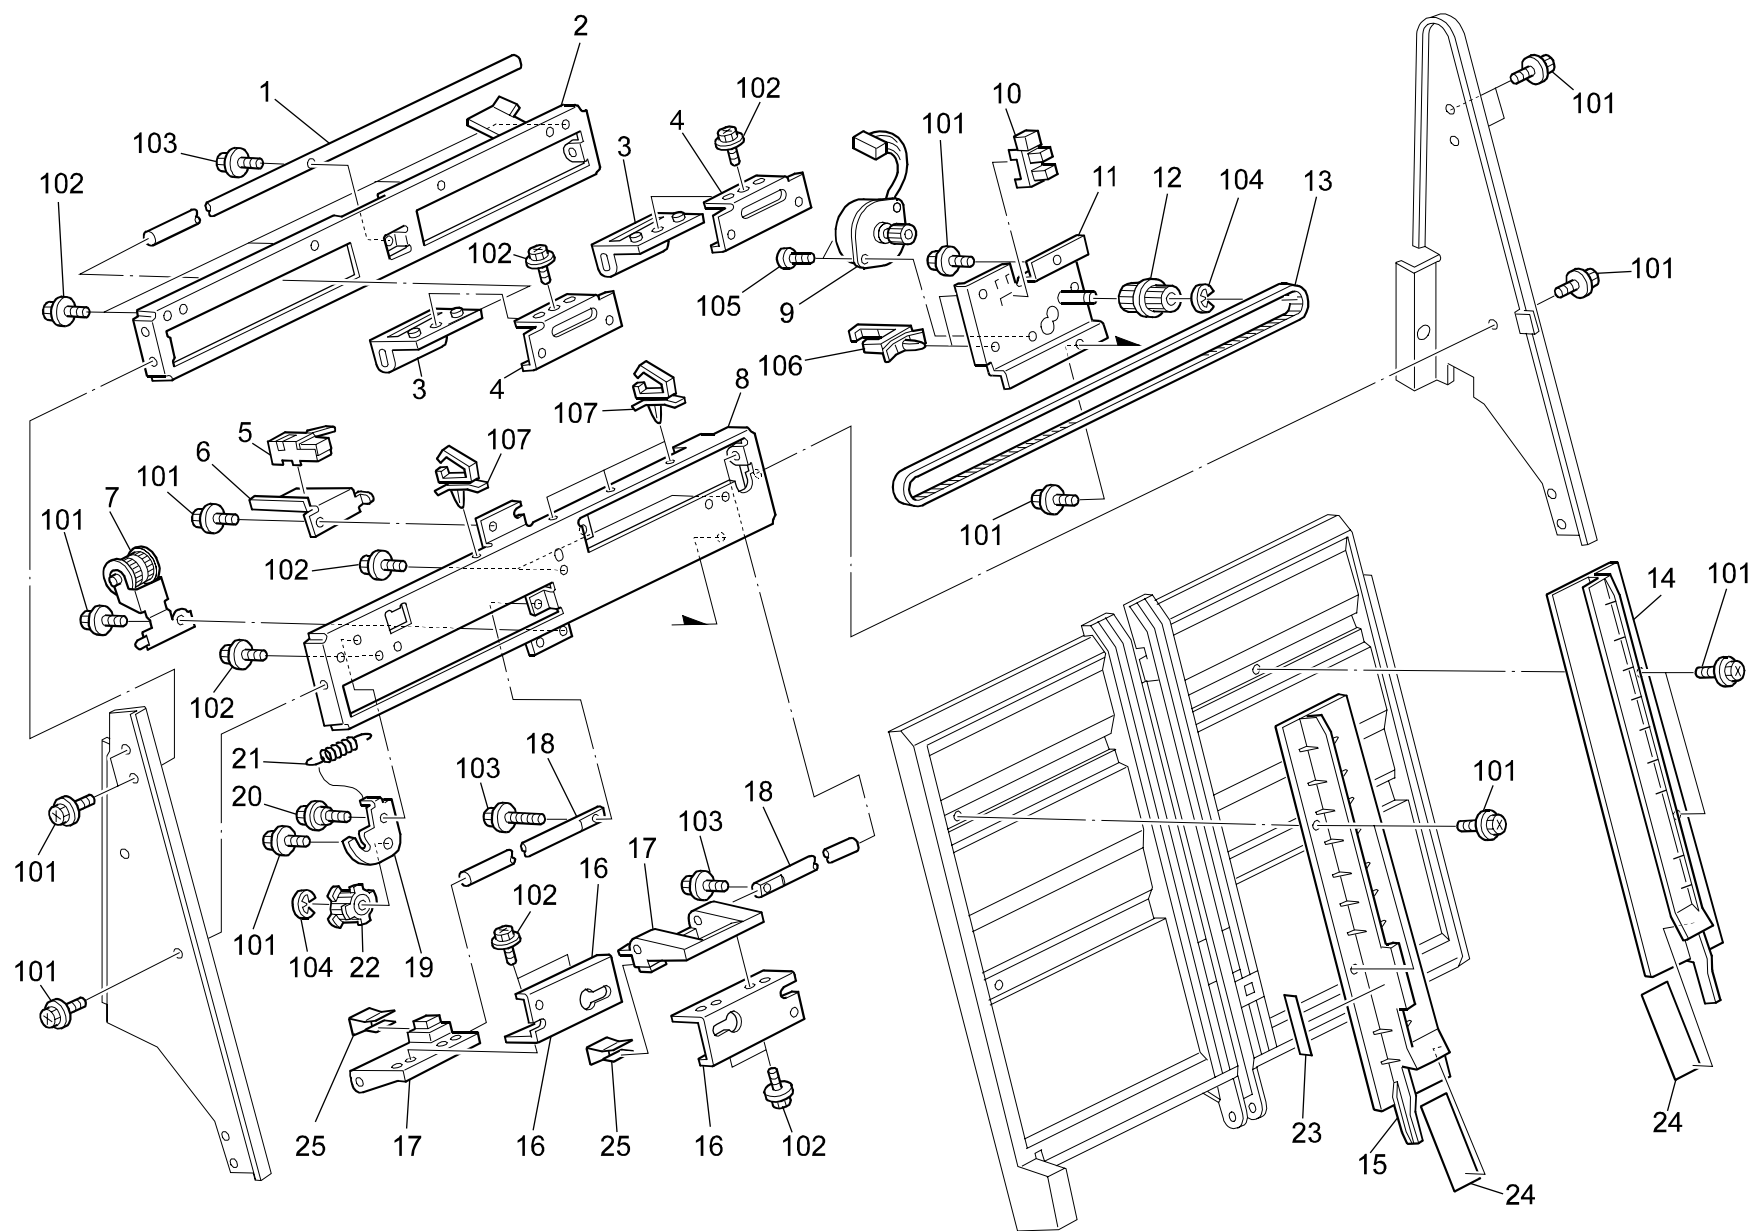


7.STAPLE TRAY 1 (G838)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B352 4215	Shaft - Jogger Fence	1
2	B545 4151	Upper Stay - Jogger Fence	1
3	B352 4152	Upper Slider - Jogger Fence	1
4	B545 4153	Upper Bracket - Jogger Fence	2
5	AW02 0166	Photointerruptor:Paper Feed Sensor	2
6	B545 4245	Bracket - Pull Out Sensor	1
7	B352 4261	Tightener - Exit Belt	1
8	B545 4161	Jogger Fence Stay	1
9	AX05 0244	Stepper Motor:Mm42:0.85a	1
10	AW02 0156	Photointerruptor:Ee-sx4235a-p2	1
11	B545 4171	Jogger Motor Bracket	1
12	B352 4175	Timing Pulley - Jogger Drive	1
13	B352 4185	Timing Belt - 940P2M4	1
14	B352 4141	Rear Jogger Fence	1
15	B352 4131	Front Jogger Fence	1
16	B545 4163	Jogger Fence Bracket	2
17	B352 4162	Jogger Fence Slider	2
18	B352 4165	Slider Shaft - Jogger Fence	2
19	B545 4183	Tightener:Jogger:Ass'y	1
20	AA14 3790	Screw:Contact Point	1
21	AA06 2334	Tension Spring:4.9n	1
22	A697 4170	Pulley - 32T	1
23	B352 7301	Decal - R5	1
24	B302 4629	Guide Mylar	2
25	A300 3634	Spring Plate - Timing Belt	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 3006Q	Tapping Screw - M3x6	
102	0450 3008N	Tapping Screw - M3x8	
103	0454 3008Q	Tapping Screw:3x8	
104	0720 0040E	Retaining Ring - M4	
105	0453 3006N	Tapping Screw - M3x6	
106	1105 0310	Harness Clamp - LWS-1S	
107	1105 0623	Clamp - LBWS-0206S-V0	

 8.STAPLE TRAY 2 (G838)

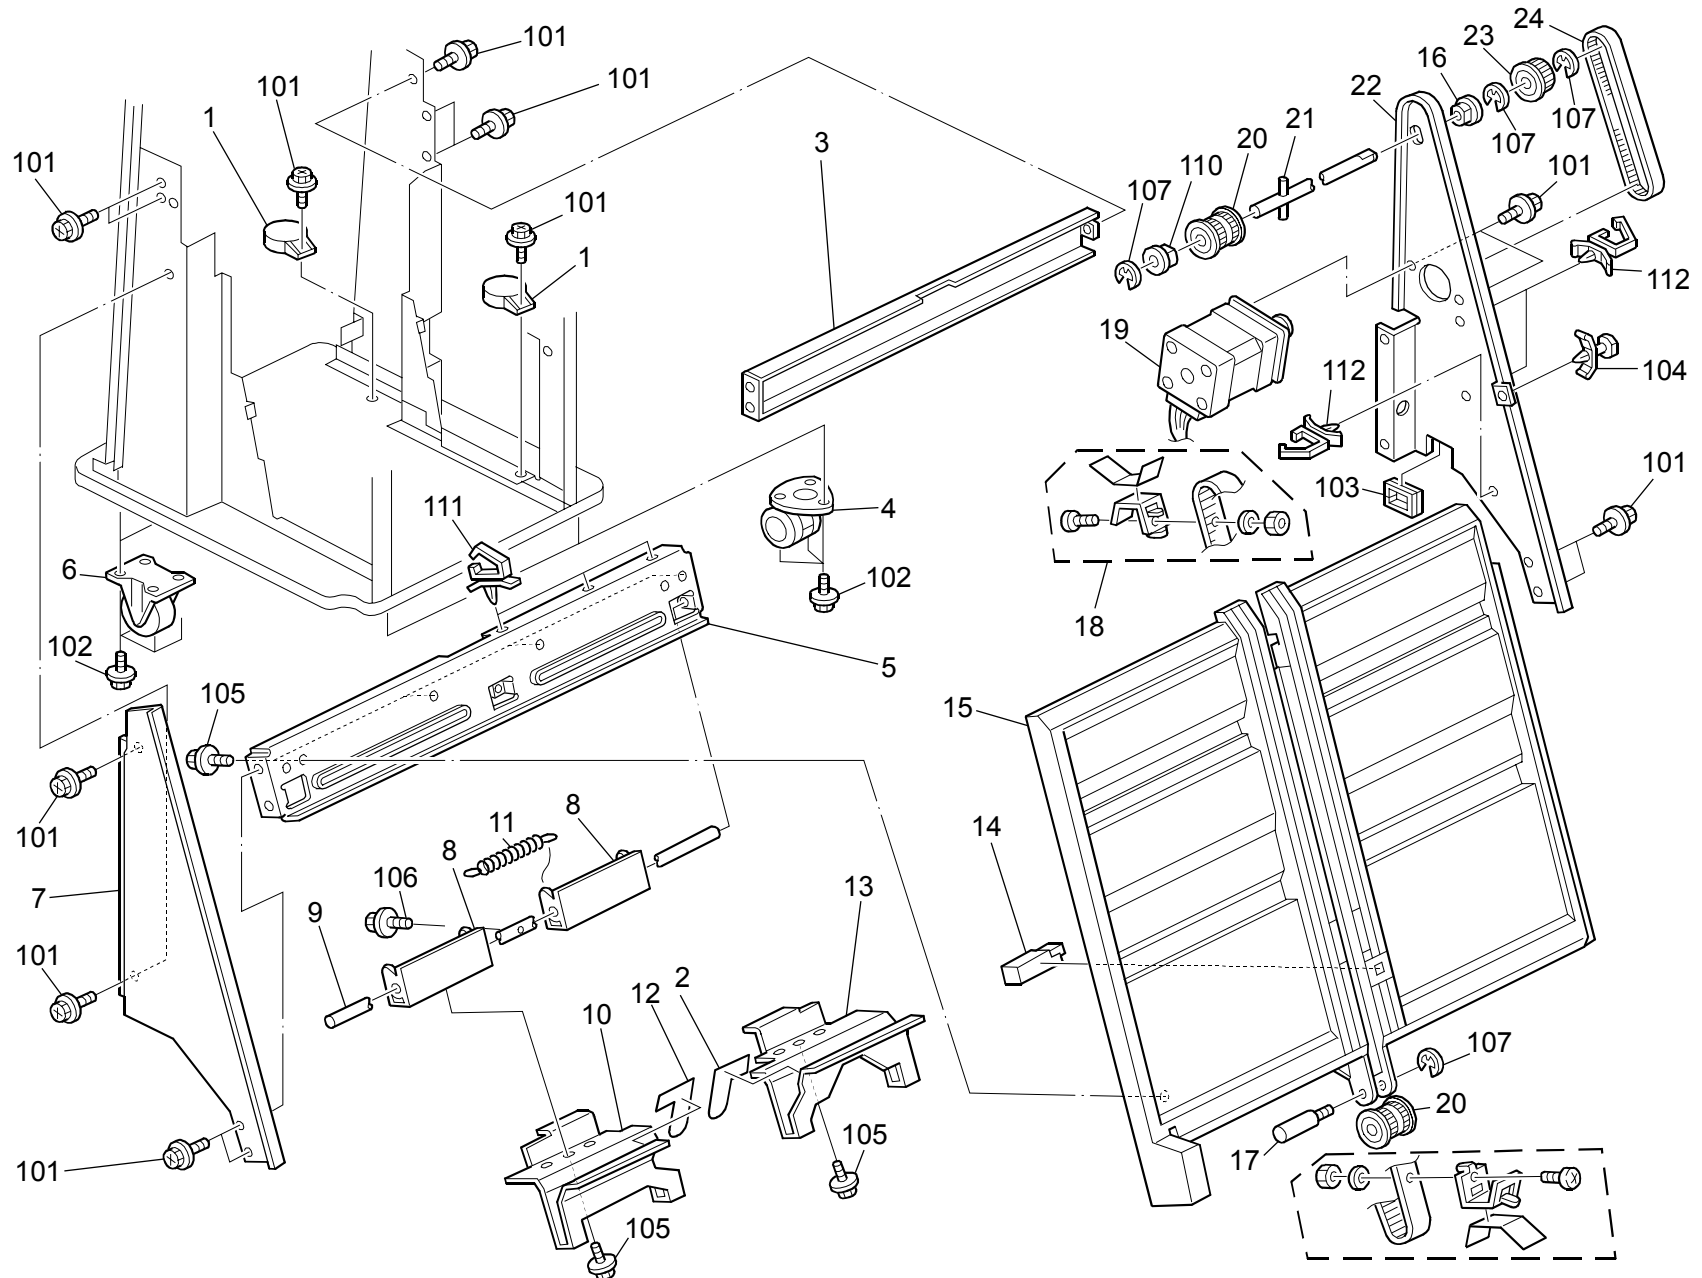


8.STAPLE TRAY 2 (G838)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B804 1117	Cap - Base	1
2	G565 4235	Rear Fence Guide	1
3	B545 1120	Stay - Stapler Tray	1
4	B545 2019	Caster:ÏÜ50:490n	1
5	B545 4211	Slider Fence Stay	1
6	B545 1130	Caster:40kgf	1
7	B545 4111	Side Plate - Front Tray - Stapler	1
8	B352 4232	Slider - Training Edge Fence	2
9	B352 4215	Shaft - Jogger Fence	1
10	B352 4221	Front Training Edge Fence	1
11	B700 4107	Spring:Return:Standard Fence	1
12	G565 4234	Front Entrance Guide	2
13	B352 4231	Rear Training Edge Fence	1
14	AW01 0109	Photo Refiection Sensor:Ps117ed1	1
15	B352 4100	Stapler Tray	1
16	5053 0447	Bushing - 6mm	1
17	A300 3813	Shaft - 6x21.5	1
18	B545 4052	Exit Belt Ass'y	2
19	B545 5510	Stepper Motor:Exit:Ass'y	1
20	A666 3180	Timing Pulley - Z32	1
21	B352 4251	Upper Exit Shaft	1
22	B545 4121	Rear Side Plate - Stapler Tray	1
23	B312 4126	Pulley - 32T	1
24	B352 4255	Timing Belt - 258P2M4	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 3006Q	Tapping Screw - M3x6	
102	0454 4008Q	Tapping Screw - M4x8	
103	1105 0334	Edge - 17	
104	1105 0410	Card Spacer - 9.4mm	
105	0450 3008N	Tapping Screw - M3x8	
106	0454 3008Q	Tapping Screw:3x8	
107	0720 0040E	Retaining Ring - M4	
110	0805 3385	Bushing - 6mm	
111	1105 0623	Clamp - LBWS-0206S-V0	
112	1105 0291	Harness Clamp - LWS-3S	

 9.STAPLE UNIT (G838)

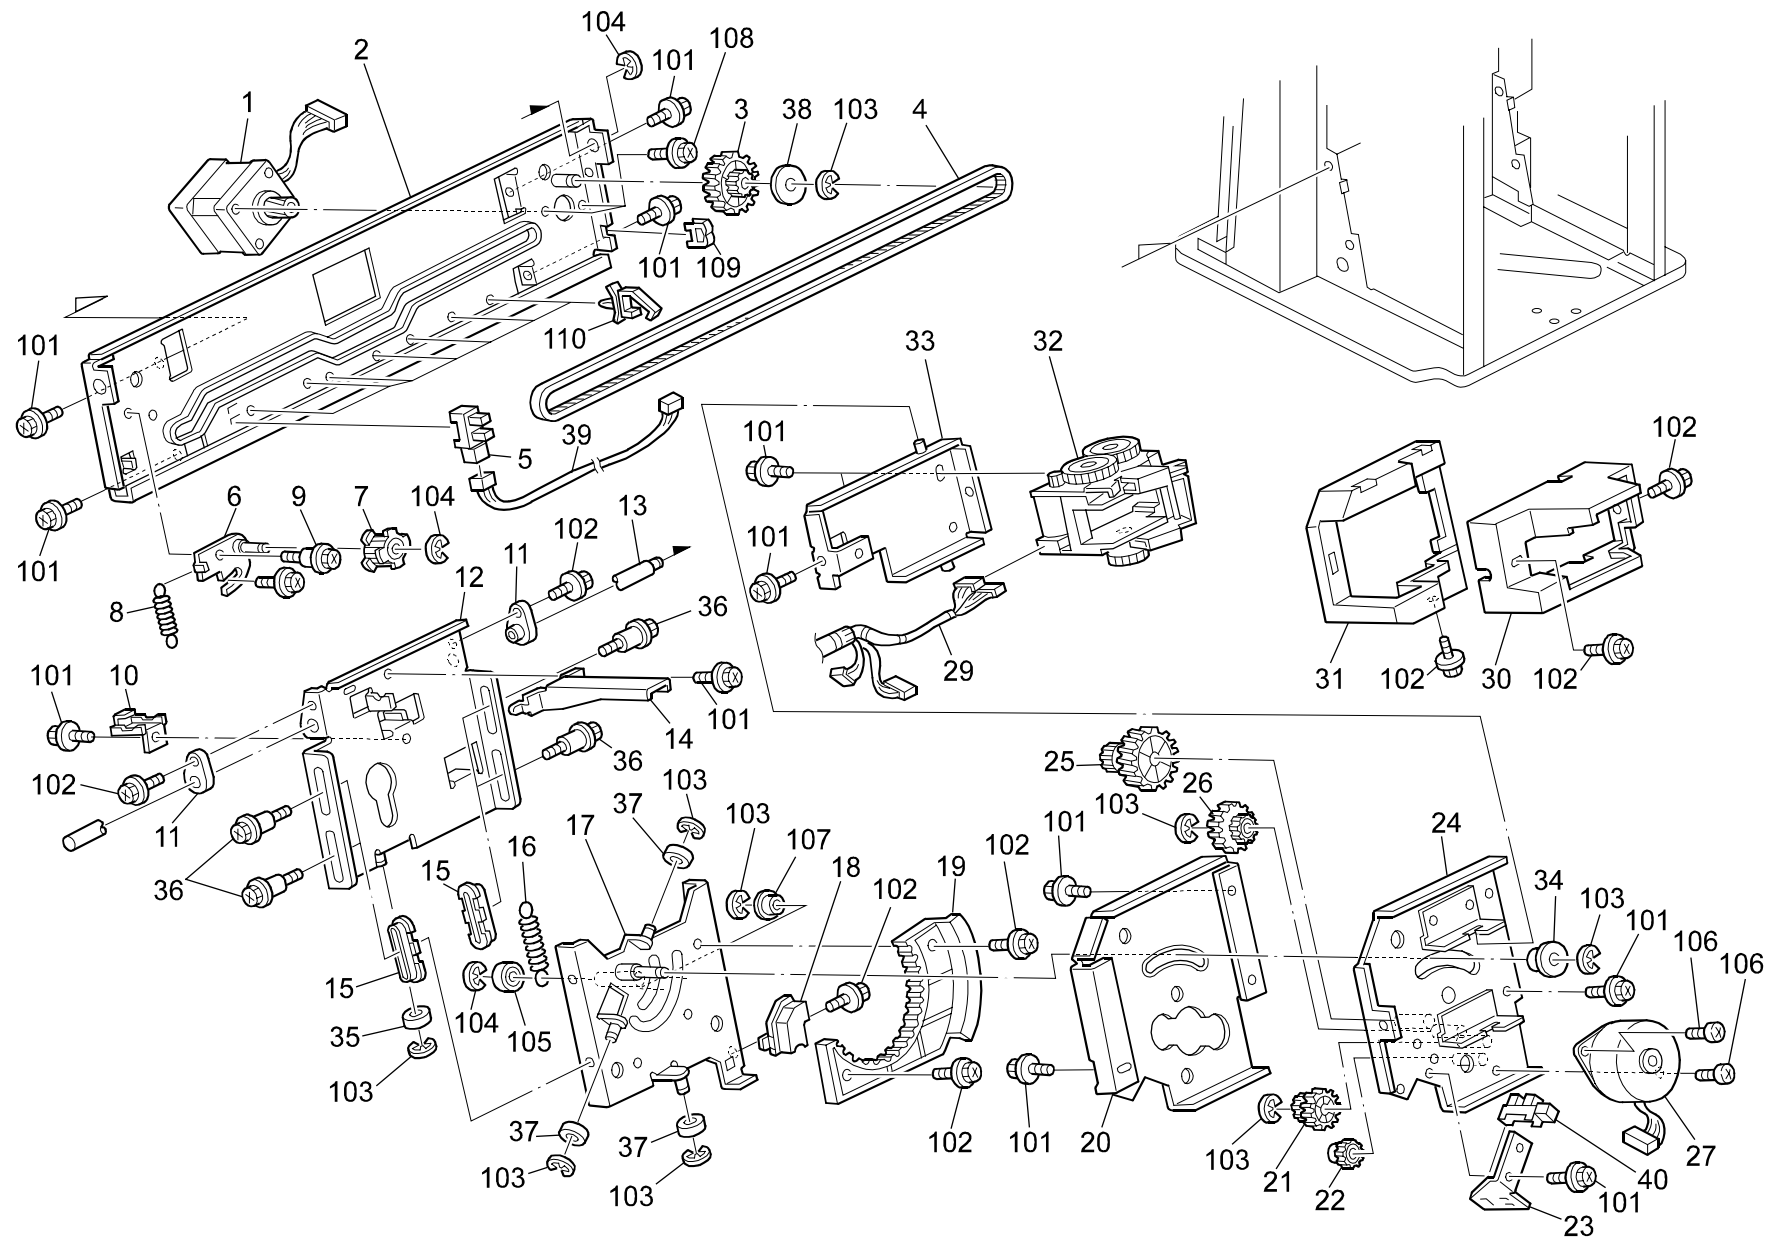


9. STAPLE UNIT (G838)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B700 5809	Stepper Motor:Stapler:Moveable:Ass'y	1
2	B545 4411	Bracket - Stapler Movement	1
3	B352 4421	Timing Pulley - Drive	1
4	B352 4422	Timing Belt - 918P3M4	1
5	AW02 0156	Photointerruptor:Ee-sx4235a-p2	1
6	B545 4431	Tightener Bracket	1
7	AB03 0278	Idler - 20z	1
8	AA06 2334	Tension Spring:4.9n	1
9	AA14 3790	Screw:Contact Point	1
10	B352 4316	Stopper - Timing Belt	1
11	B352 4318	Bushing - Lower Slider	1
12	B545 4311	Stapler Unit Slider	1
13	B352 4415	Guide Rod	1
14	B545 4317	Fence Hook	1
15	A300 3731	Slide Supporter	4
16	B352 4315	Spring - 18N	1
17	B545 4321	Lower Slider - Staple Unit	1
18	B545 4327	Holder:Harness:Stapler	1
19	B352 4331	Sector Gear - Staple Unit	1
20	B545 4355	Slider Holder - Stapler Unit	1
21	B352 4351	Gear - 46Z/25Z	1
22	B352 4354	Gear - 27Z	1
23	B545 4362	Bracket:Sensor:Diagonal,slanted	1
24	B545 4391	Slider:Turn:Ass'y	1
25	B352 4353	Pinion - 46Z/18Z	1
26	B352 4352	Gear - 46Z/19Z	1
27	AX05 0244	Stepper Motor:Mm42:0.85a	1
29	B545 5237	Harness:Stapler	1
30	B352 4378	Stapler Cover	1
31	B352 4358	Stapler Base Cover	1
32	B545 4079	Stapler Unit	1
33	B545 4371	Stapler Base	1
34	B352 4347	Bushing - 6mm	1
35	A300 2132	Guide Roller	1
36	B545 4150	Screw:Pin:Positioning	4

Index No.	Part No.	Description	Q'ty Per Assembly
37	A377 4741	Roller - M14	3
38	A300 3812	Spacer - 6x22x1.5	1
39	B545 5310	Harness:Connecting:560mm	1
40	AW02 0114	Photo Interruptor - Lower Limit	1
41	B352 4379	Lower Guide Plate	1
101	0454 3006Q	Tapping Screw - M3x6	
102	0454 3008Q	Tapping Screw:3x8	
103	0720 0040E	Retaining Ring - M4	
104	0720 0060E	Retaining Ring - M6	
105	0740 3008	Ball Bearing - 8x22x7	
106	0453 3006N	Tapping Screw - M3x6	
107	0805 3263	Bearing - 6x10x6mm	
108	0353 0050N	Screw-m3x5	
109	1105 0328	Harness Clamp - ES-0505	
110	1105 0623	Clamp - LBWS-0206S-V0	

 10.UPPER PAPER EXIT 1 (G838)

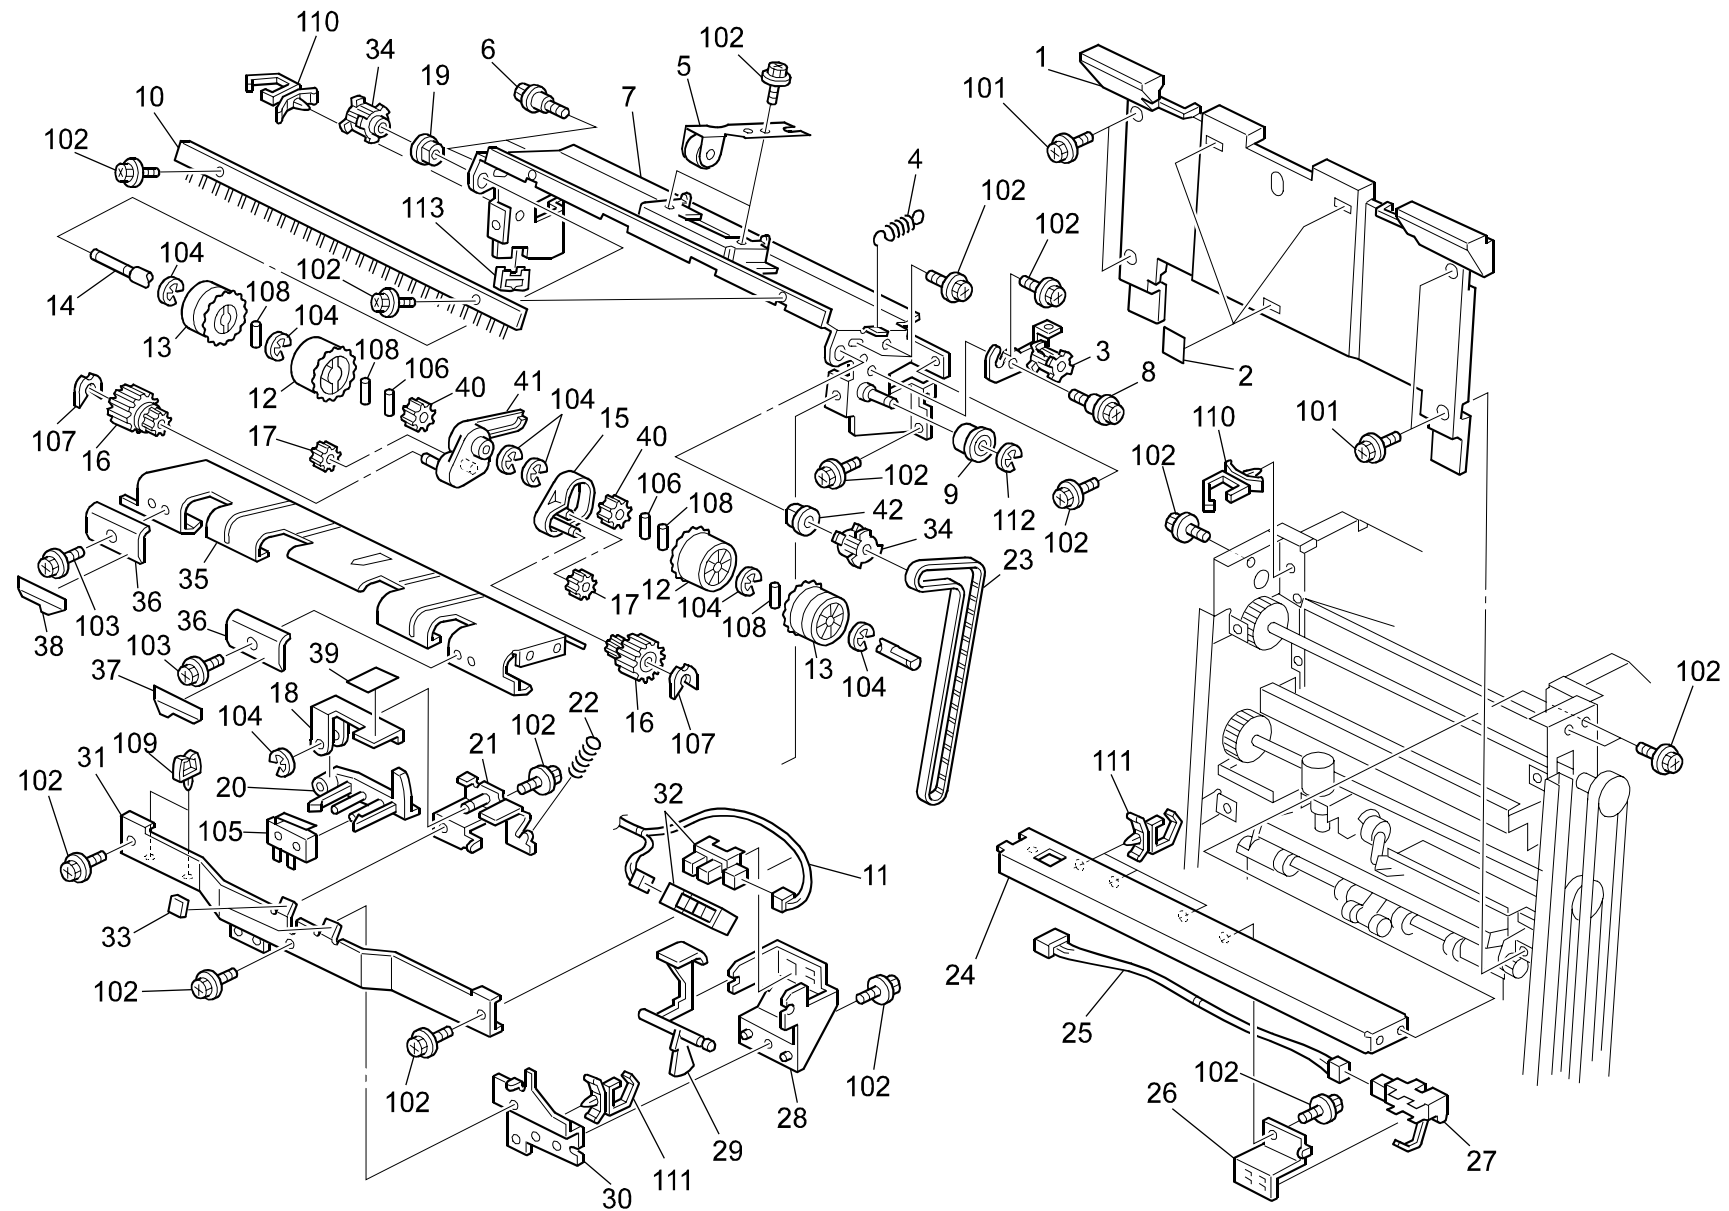


10.UPPER PAPER EXIT 1 (G838)

Index No.	Part No.	Description	Q'ty Per Assembly
1	G565 6401	Left Upper Cover	1
2	B352 2365	Upper Left Pad	3
3	B545 1625	Bracket:Tightener:Ass'y	1
4	B352 1630	Tension Spring	1
5	A666 4260	Entrance Roller	2
6	AA14 3823	Tapping Screw	2
7	B545 2120	Upper Guide Plate - Exit	1
8	AA14 3790	Screw:Contact Point	1
9	B312 1615	Tension Roller	1
10	AA12 0090	Discharge Brush L=320 MM3	1
11	B545 5222	Harness:Sensor:Paper Sensor	1
12	B352 2400	Exit Roller	2
13	B352 2405	Outer Exit Roller	2
14	B352 2406	Exit Roller Shaft	1
15	B352 2410	Front Arm - Reverse Roller	1
16	B352 2407	Reverse Roller - 20Z	2
17	B352 2409	Idler Gear - 17Z	2
18	B545 3102	Micro Switch Lever	1
19	AA08 0238	Bushing - M6	1
20	B352 3655	Switch Holder	1
21	B545 3105	Bracket - Micro Switch	1
22	B352 3656	Compression Spring	1
23	B352 1631	Timing Belt - B40S2M594	1
24	B545 3130	Exit Stay	1
25	B408 5355	Harness:Connecting:280mm	1
26	B545 2126	Upper Bracket - Paper Feed Sensor	1
27	AW02 0155	Photointerruptor:Paper Size Sensor	1
28	B352 3101	Holder - Sensor Feeler	1
29	B352 3100	Sensor Feeler	1
30	B545 3215	Adjusting Bracket - Sensor Feeler	1
31	B545 2125	Upper Bracket - Paper Exit Unit	1
32	AW02 0156	Photointerruptor:Ee-sx4235a-p2	2
33	B352 3220	Roller Pad	2
34	B352 1600	Timing Pulley - S2M T24	1
35	B545 2124	Upper Guide Plate - Exit Small	1

Index No.	Part No.	Description	Q'ty Per Assembly
36	B352 2131	Exit Guide	2
37	B352 2132	Front Exit Plate	1
38	B352 2133	Rear Exit Plate	1
39	B352 3225	Pad - Switch Lever	1
40	B352 2408	Gear - 26Z	2
41	B352 2411	Rear Arm - Reverse Roller	1
42	5053 0447	Bushing - 6mm	1
101	0454 3008Q	Tapping Screw:3x8	
102	0454 3006Q	Tapping Screw - M3x6	
103	0353 0060N	Philips Pan Head Bind Screw - M3x6	
104	0720 0040E	Retaining Ring - M4	
105	1204 2543	Switch - DE2L-BJ22	
106	0622 0100E	Spring Pin - 2x10mm	
107	0805 0089	Retaining Ring - M4	
108	0632 0100G	Pin - 2x10mm	
109	1105 0230	Clamp	
110	1105 0310	Harness Clamp - LWS-1S	
111	1105 0623	Clamp - LBWS-0206S-V0	
112	0720 0060E	Retaining Ring - M6	
113	1105 0329	Clamp - ES-0510	

 11.UPPER PAPER EXIT 2 (G838)

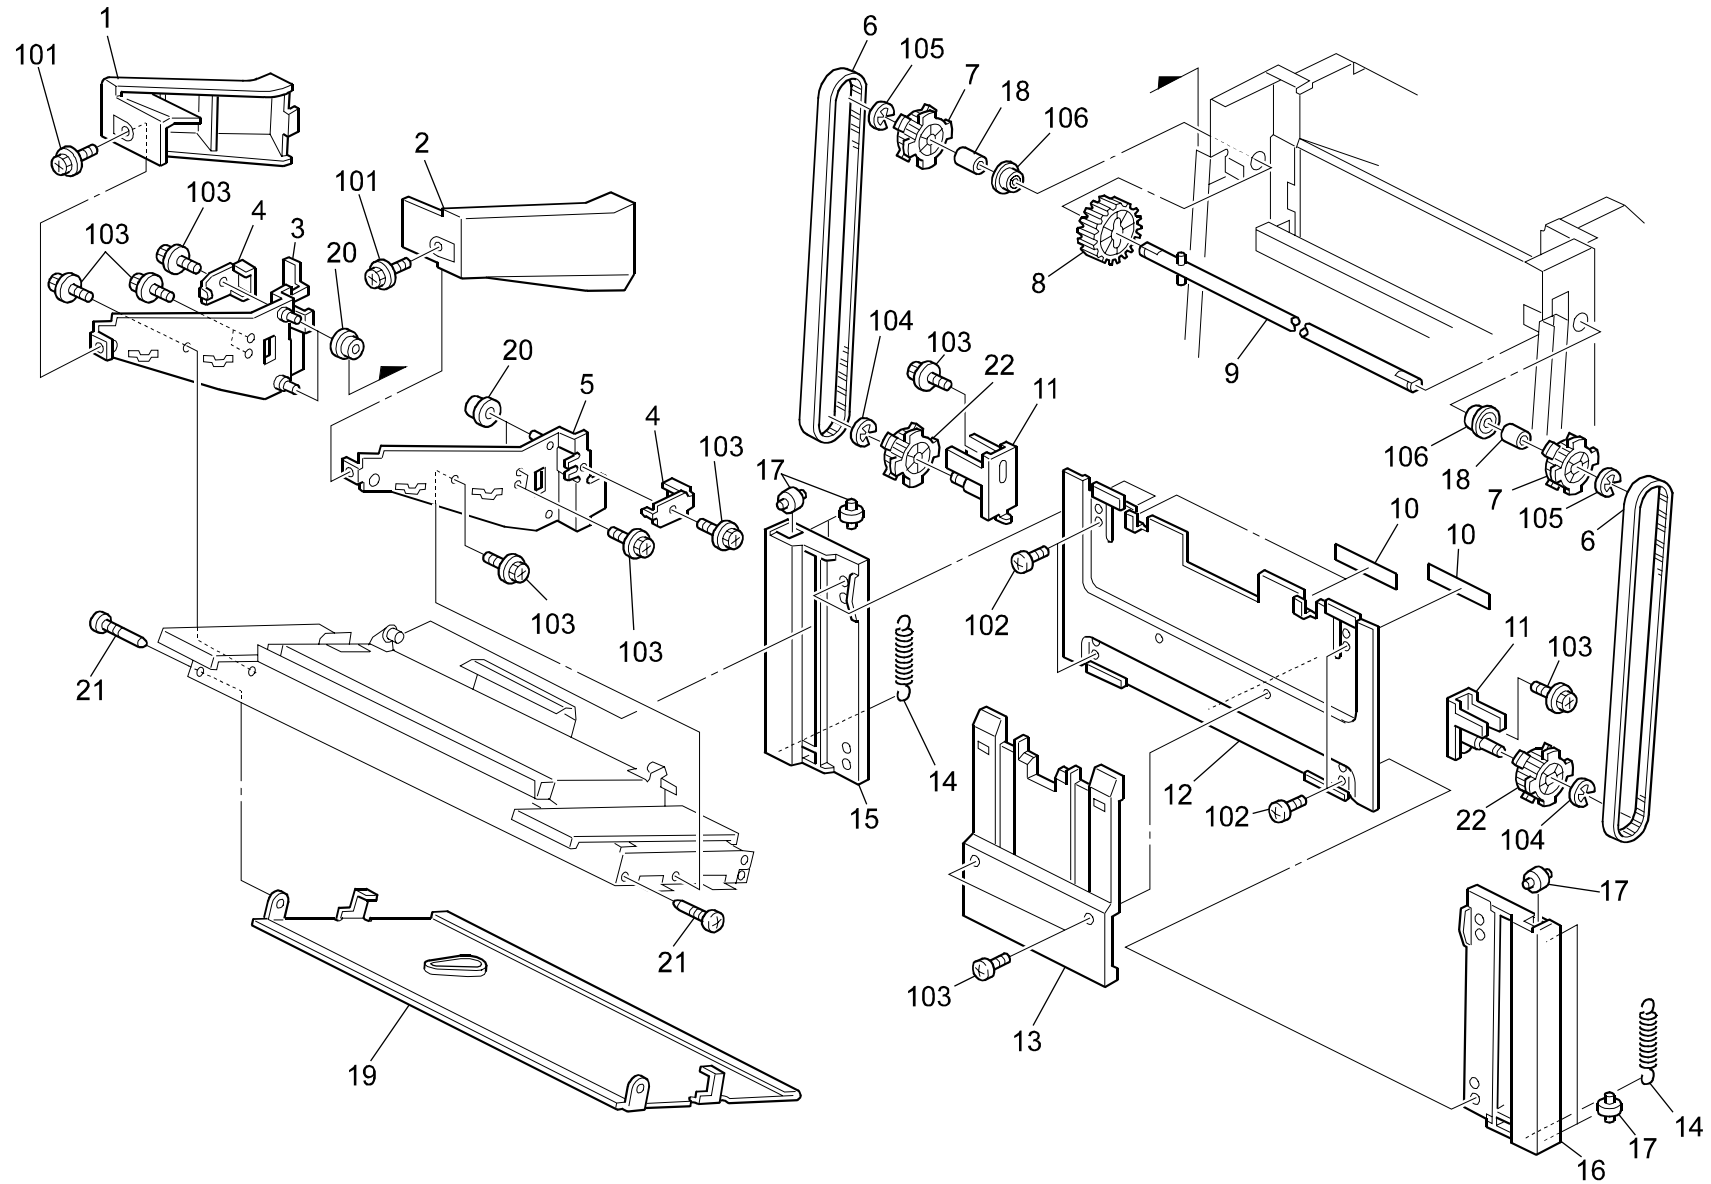


11.UPPER PAPER EXIT 2 (G838)

Index No.	Part No.	Description	Q'ty Per Assembly
1	G565 6651	Rear Upper Tray Cover	1
2	G565 6601	Front Upper Tray Cover	1
3	B545 3530	Side Plate - Upper Rear	1
4	B352 3165	Timing Belt Guide Plate	1
5	B545 3520	Side Plate - Upper Front	1
6	B352 3161	Timing Belt - B60S5M1055	2
7	B352 3145	Timing Pulley - T18	2
8	G838 2347	Gear:Z45	1
9	B352 3013	Shaft - Upper Drive	1
10	B352 3605	Upper Guide - End Fence	1
11	B545 3155	Upper Tighter	2
12	B545 3601	End Fence	1
13	G565 3611	End Fence Guide Plate	1
14	B352 3608	Tension Spring - End Fence	1
15	G565 3631	Rear End Fence Rail	1
16	G565 3621	Front End Fence Rail	1
17	B352 3629	End Fence Roller	6
18	B352 3170	Spacer	1
19	B545 3761	Base Cover	1
20	A379 3316	Shift Guide Roller	4
21	AA14 3788	Pin:Guide Plate:Paper Feed	2
22	B352 3146	Timing Pulley - T18	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 3008Q	Tapping Screw:3x8	
102	0452 3008N	Tapping Screw - M3x8	
103	0454 3006Q	Tapping Screw - M3x6	
104	0720 0040E	Retaining Ring - M4	
105	0720 0060E	Retaining Ring - M6	
106	0742 3808	Ball Bearing - 8x16x5	

 12.UPPER PAPER EXIT 3 (G838)

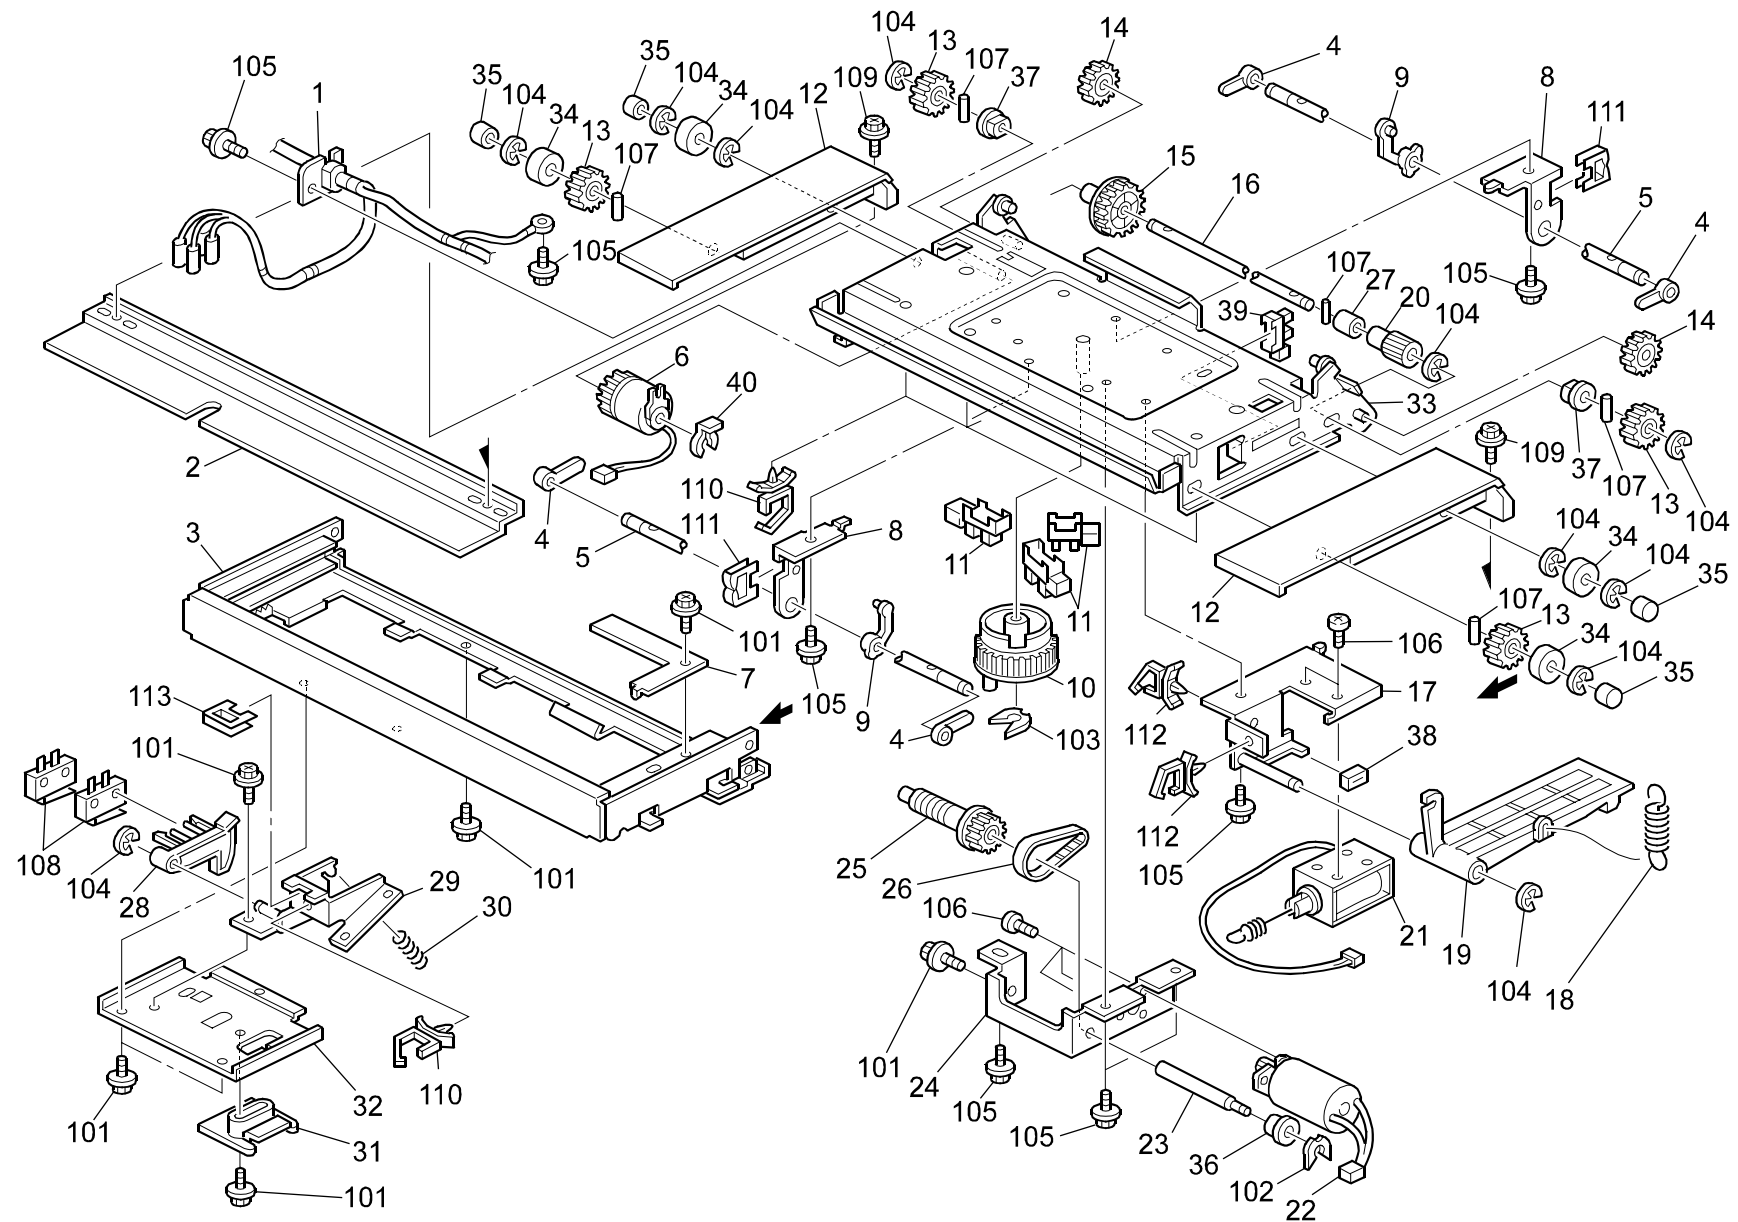


12.UPPER PAPER EXIT 3 (G838)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B545 5275	Harness:Connecting:Shift Tray:Upper:Ass'y	1
2	B545 3766	Slide Cover	1
3	B545 3510	Base - Upper Tray	1
4	B352 3572	Bushing - 6mm	4
5	B352 3575	Shaft - Upper Tray	2
6	AX21 0095	Magnetic Clutch:Z30	1
7	B545 3515	Front Stopper - Tray Shift	1
8	B545 3570	Support Plate - Tray Shift	2
9	B352 3571	Slider Bearing	2
10	B352 3580	Worm Wheel - 40Z	1
11	AW02 0141	Photointerruptor	3
12	G565 3751	Upper Base Cover	2
13	B352 3576	Gear - 20Z	4
14	B352 3592	Idle Gear - 20Z	2
15	B352 3591	Gear - 40Z	1
16	B352 3595	Rear Shaft - Upper Tray	1
17	B545 3700	Bracket - Lock Lever	1
18	AA06 2333	Tension Spring:2.16n	1
19	B352 3705	Lock Lever - Upper Tray	1
20	B352 3593	Rachet - Tray Lock	1
21	B545 5809	DC Solenoid:Polarization Powl	1
22	AX05 0243	DC Motor:Dc24v:7.2w	1
23	B352 3586	Shift - Worm Gear	1
24	B545 3585	Motor Bracket	1
25	A681 3316	Shift Tray Worm	1
26	B352 3587	Timing Belt - B0S2M104	1
27	B545 3594	Torque Limiter:100mn.m	4
28	B352 3655	Switch Holder	1
29	B545 3650	Bracket - Tray Safety Switch	1
30	B352 3656	Compression Spring	1
31	B352 3517	Slide Guide	1
32	B545 3516	Base Bracket	1
33	B545 3560	Base - Shift	1
34	A353 3272	Guide Roller	1
35	B352 3577	Shaft Cap	4

Index No.	Part No.	Description	Q'ty Per Assembly
36	5443 2668	Bushing - 4x6x7mm	1
37	5053 0447	Bushing - 6mm	1
38	A697 2102	Dumper - Junction Gate Sololenoid	1
39	AW02 0114	Photo Interruptor - Lower Limit	1
40	G011 3275	Snap Ring	1
101	0451 3006N	Tapping Screw - 3x6	
102	0805 0092	Retaiming Ring - 3m	
103	0805 0088	Retaining Ring - M6	
104	0720 0040E	Retaining Ring - M4	
105	0802 5276	Tapping Screw With Washer - M3x6	
106	0313 0050N	Philips Pan Head Screw - M3x5	
107	0632 0120G	Parallel Pin - 2x12	
108	1204 2543	Switch - DE2L-BJ22	
109	0802 5277	Tapping Screw	
110	1105 0310	Harness Clamp - LWS-1S	
111	1105 0329	Clamp - ES-0510	
112	1105 0623	Clamp - LBWS-0206S-V0	
113	1105 0522	Edge Saddle - LES0510	

 13.LOWER PAPER EXIT (G838)

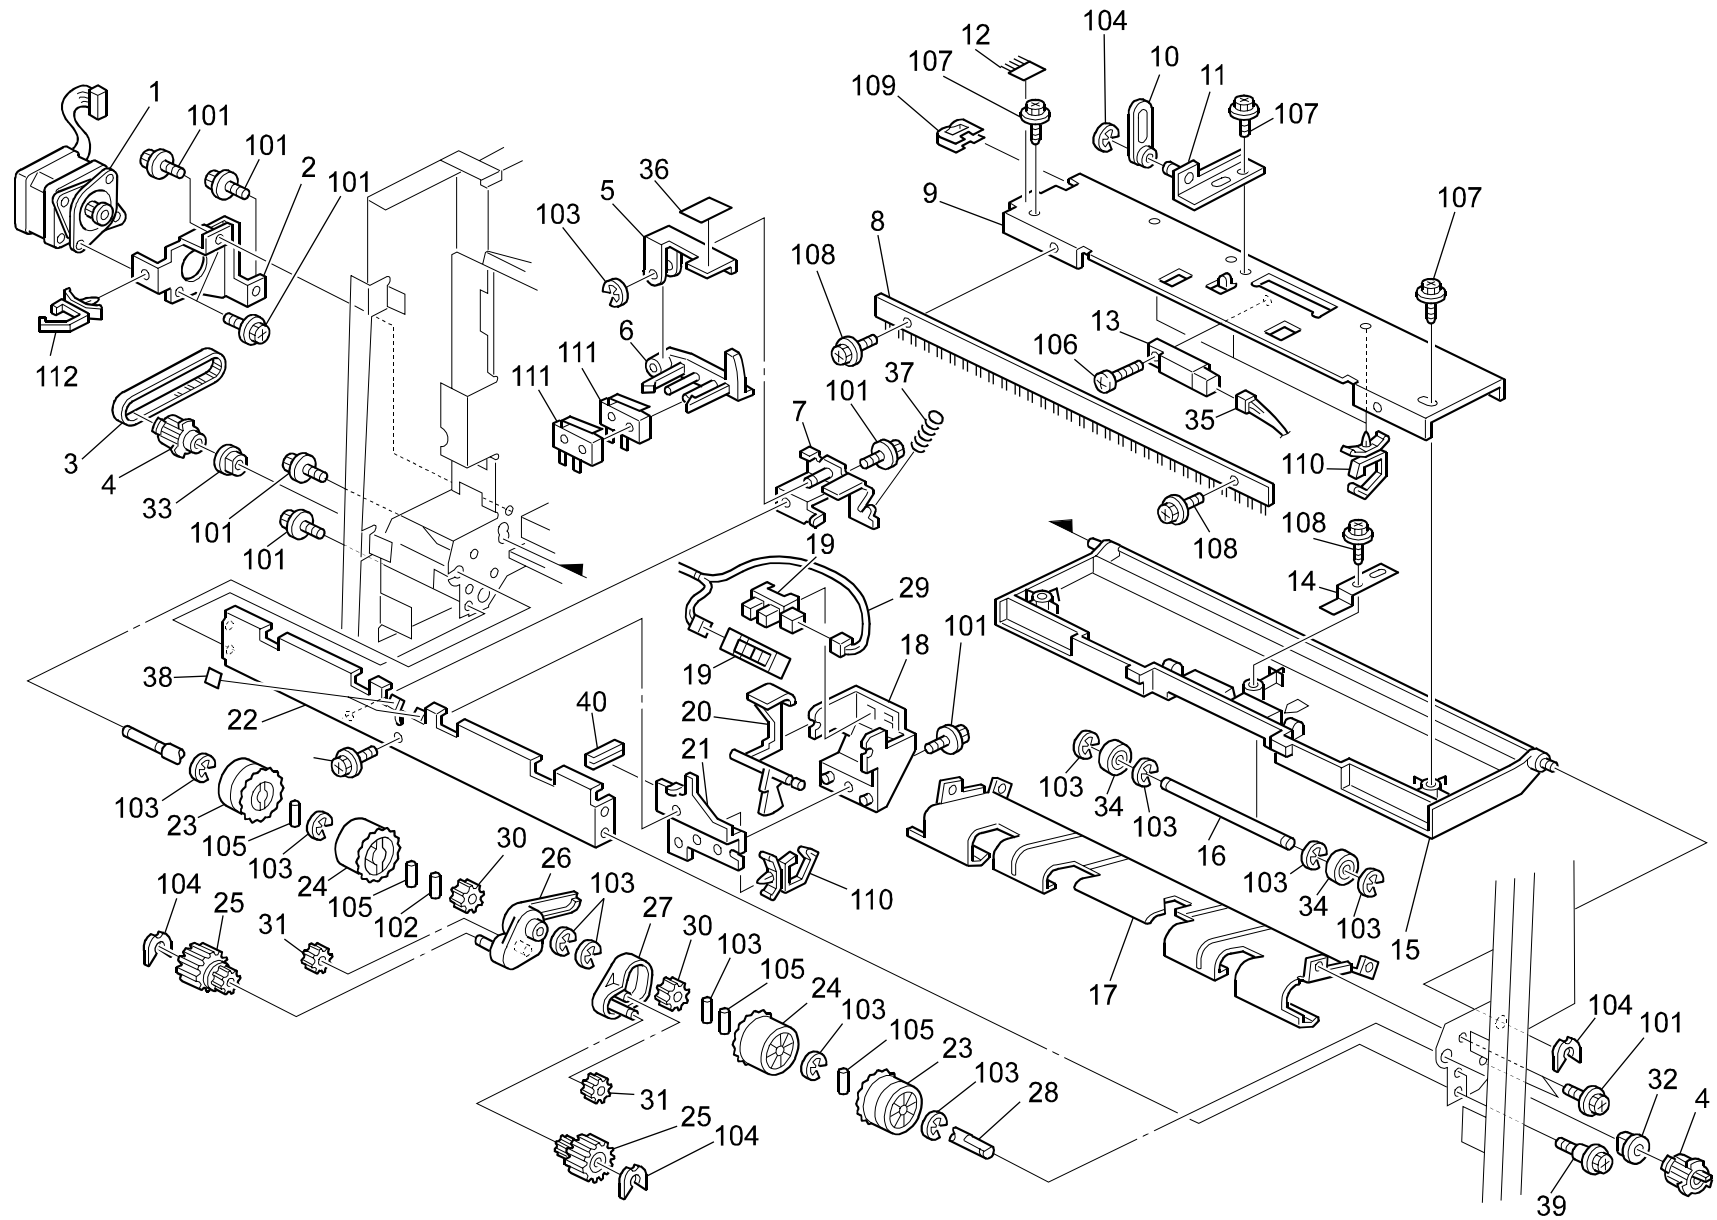


13.LOWER PAPER EXIT (G838)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B545 5515	Stepper Motor:Exit:Ass'y	1
2	B545 1620	Exit Roller Bracket	1
3	B352 1632	Timing Belt - B40S2M200	1
4	B352 1600	Timing Pulley - S2M T24	1
5	B545 3102	Micro Switch Lever	1
6	B352 3655	Switch Holder	1
7	B545 3105	Bracket - Micro Switch	1
8	AA12 0027	Antistatic Brush	1
9	B545 2438	Bracket:Guide:Exit	1
10	B352 3190	Driven Roller Link	1
11	B545 3185	Bracket - Open Link	1
12	A697 2131	Antistatic Brush	1
13	AW01 0123	Photo Refiection Sensor:Psr11d1-b	1
14	A353 3354	Driven Roller Holder	1
15	B545 2437	Guide Plate:Exit:Moveable	1
16	A379 2212	Driven Roller Shaft	1
17	B545 2415	Lower Guide Plate	1
18	B352 3101	Holder - Sensor Feeler	1
19	AW02 0156	Photointerruptor:Ee-sx4235a-p2	1
20	B352 3100	Sensor Feeler	1
21	B545 3215	Adjusting Bracket - Sensor Feeler	1
22	B545 3210	Exit Roller Cover	1
23	B352 2405	Outer Exit Roller	2
24	B352 2400	Exit Roller	2
25	B352 2407	Reverse Roller - 20Z	1
26	B352 2411	Rear Arm - Reverse Roller	1
27	B352 2410	Front Arm - Reverse Roller	1
28	B352 2406	Exit Rooler Shaft	1
29	B545 5327	Harness:Connecting:Paper Senser	1
30	B352 2408	Gear - 26Z	2
31	B352 2409	Idler Gear - 17Z	2
32	5053 0447	Bushing - 6mm	1
33	AA08 0238	Bushing - M6	2
34	B352 2436	Exit Driven Roller	1
35	B545 5305	Harness:Connecting:430mm	1

Index No.	Part No.	Description	Q'ty Per Assembly
36	B352 3225	Pad - Switch Lever	1
37	B352 3656	Compression Spring	1
38	B352 3220	Roller Pad	1
39	AA14 3823	Tapping Screw	1
40	B352 5450	Bushing - CE-012LV0	1
101	0454 3006Q	Tapping Screw - M3x6	
102	0622 0100E	Spring Pin - 2x10mm	
103	0720 0040E	Retaining Ring - M4	
104	0805 0089	Retaining Ring - M4	
105	0632 0100G	Pin - 2x10mm	
106	0313 0100N	Pan Head Screw:M3x10	
107	0450 4008N	Tapping Screw - M4x8	
108	0454 4006Q	Tapping Screw:4x6	
109	1105 0328	Harness Clamp - ES-0505	
110	1105 0623	Clamp - LBWS-0206S-V0	
111	1204 2543	Switch - DE2L-BJ22	
112	1105 0310	Harness Clamp - LWS-1S	

 14.SHIFT DRIVE 1 (G838)

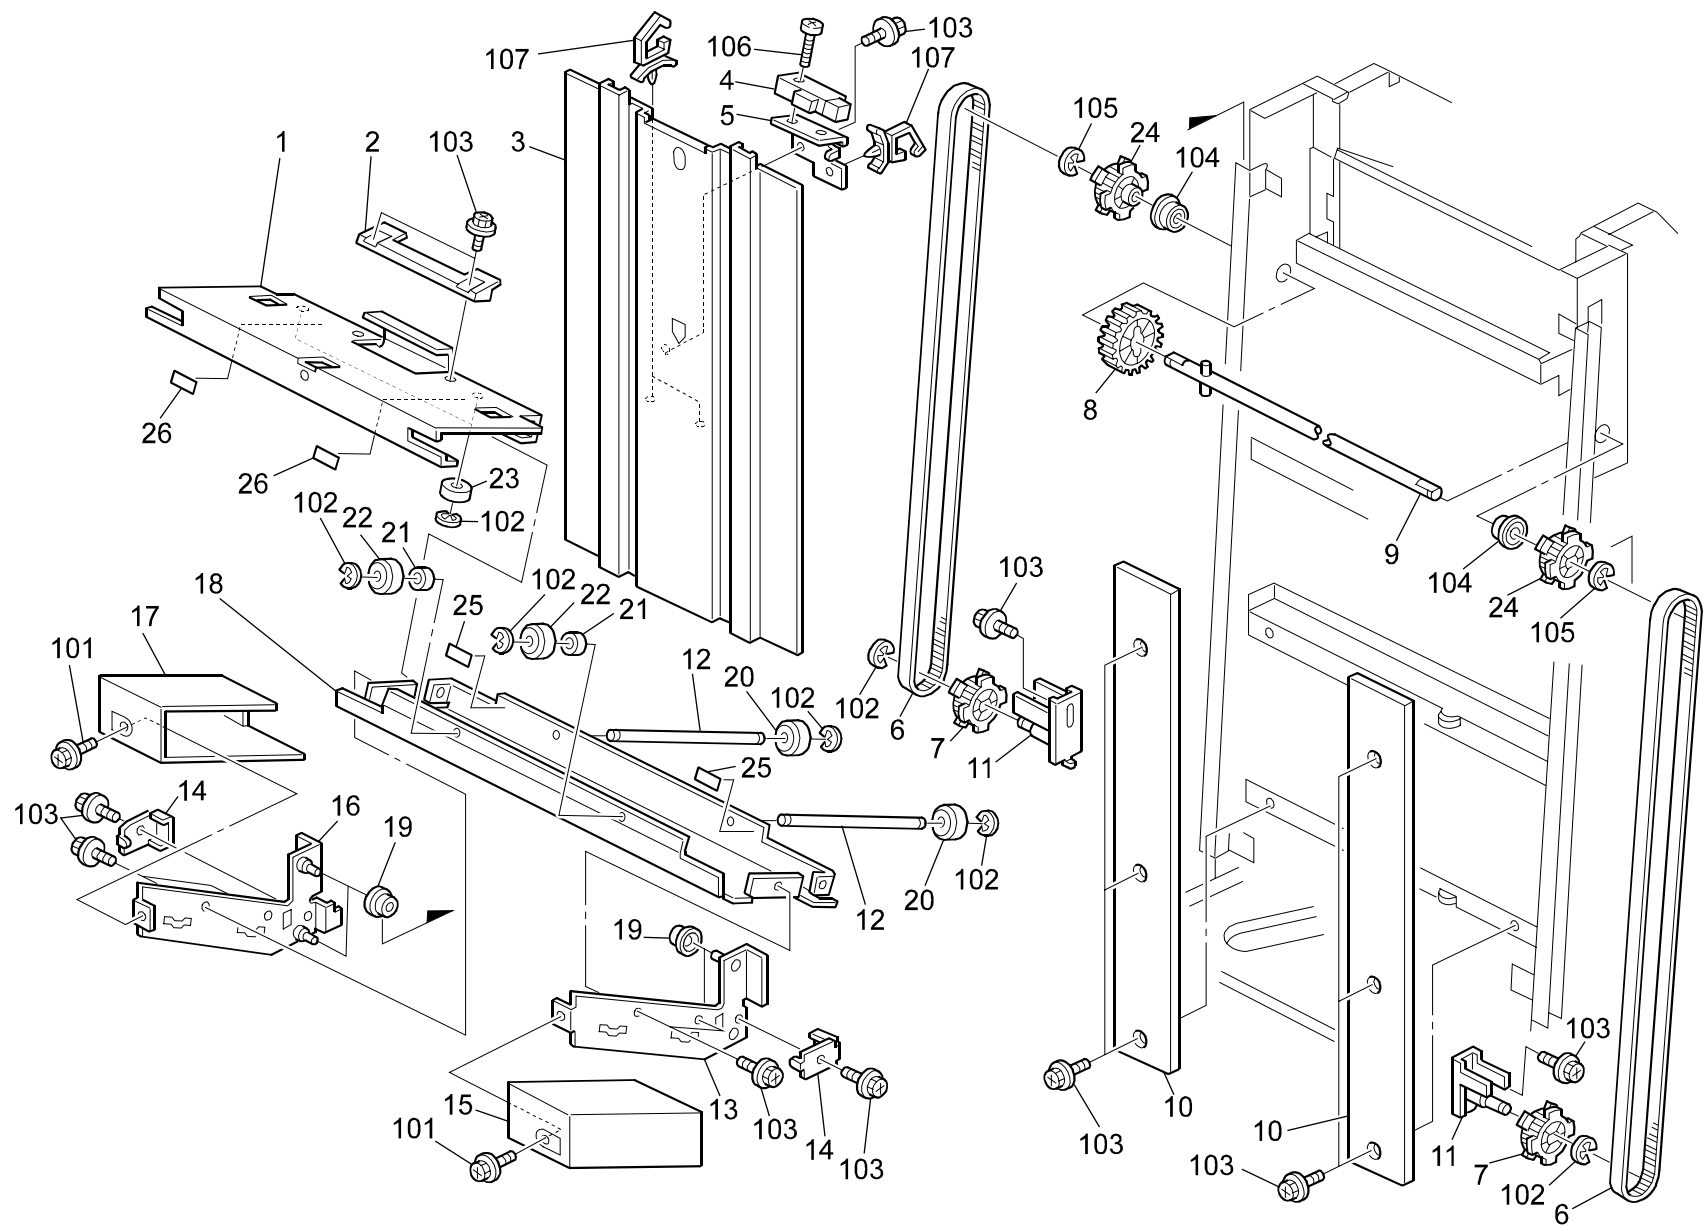


14.SHIFT DRIVE 1 (G838)

Index No.	Part No.	Description	Q'ty Per Assembly
1	G565 3840	Slider:Tray:Peen	1
2	B352 3845	Slider Pawl	1
3	B545 3110	End Fence	1
4	AW01 0089	Photosensor - GP2A28C	1
5	B545 3115	Sensor Bracket	1
6	B352 3160	Timing Belt - B60S5M1530	2
7	B352 3146	Timing Pulley - T18	2
8	G838 2347	Gear:Z45	1
9	B352 3016	Shaft - Lower Drive	1
10	B545 3140	End Fence Cover	1
11	B545 3150	Lower Tighter	2
12	B599 3835	Tray Shift Shaft	1
13	B545 3812	Side Plate - Lower Front	1
14	B352 3165	Timing Belt Guide Plate	2
15	G565 6701	Front Lower Tray Cover	1
16	B545 3822	Side Plate - Lower Back	1
17	G565 6751	Rear Lower Tray Cover	1
18	B545 3830	Base - Lower Tray	1
19	A379 3316	Shift Guide Roller	4
20	A666 2213	Shift Tray Roller	2
21	A697 1606	Spacer - 6x12x2.7mm	2
22	A353 3351	Exit Driven Roller	2
23	A353 3272	Guide Roller	2
24	B352 3145	Timing Pulley - T18	2
25	B352 3833	Short Cushion - Base	2
26	B352 3844	Long Cushion - Base	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3008N	Tapping Screw - M3x8	
102	0720 0040E	Retaining Ring - M4	
103	0454 3006Q	Tapping Screw - M3x6	
104	0742 3808	Ball Bearing - 8x16x5	
105	0720 0060E	Retaining Ring - M6	
106	0313 0100N	Pan Head Screw:M3x10	
107	1105 0623	Clamp - LBWS-0206S-V0	

 15.SHIFT DRIVE 2 (G838)

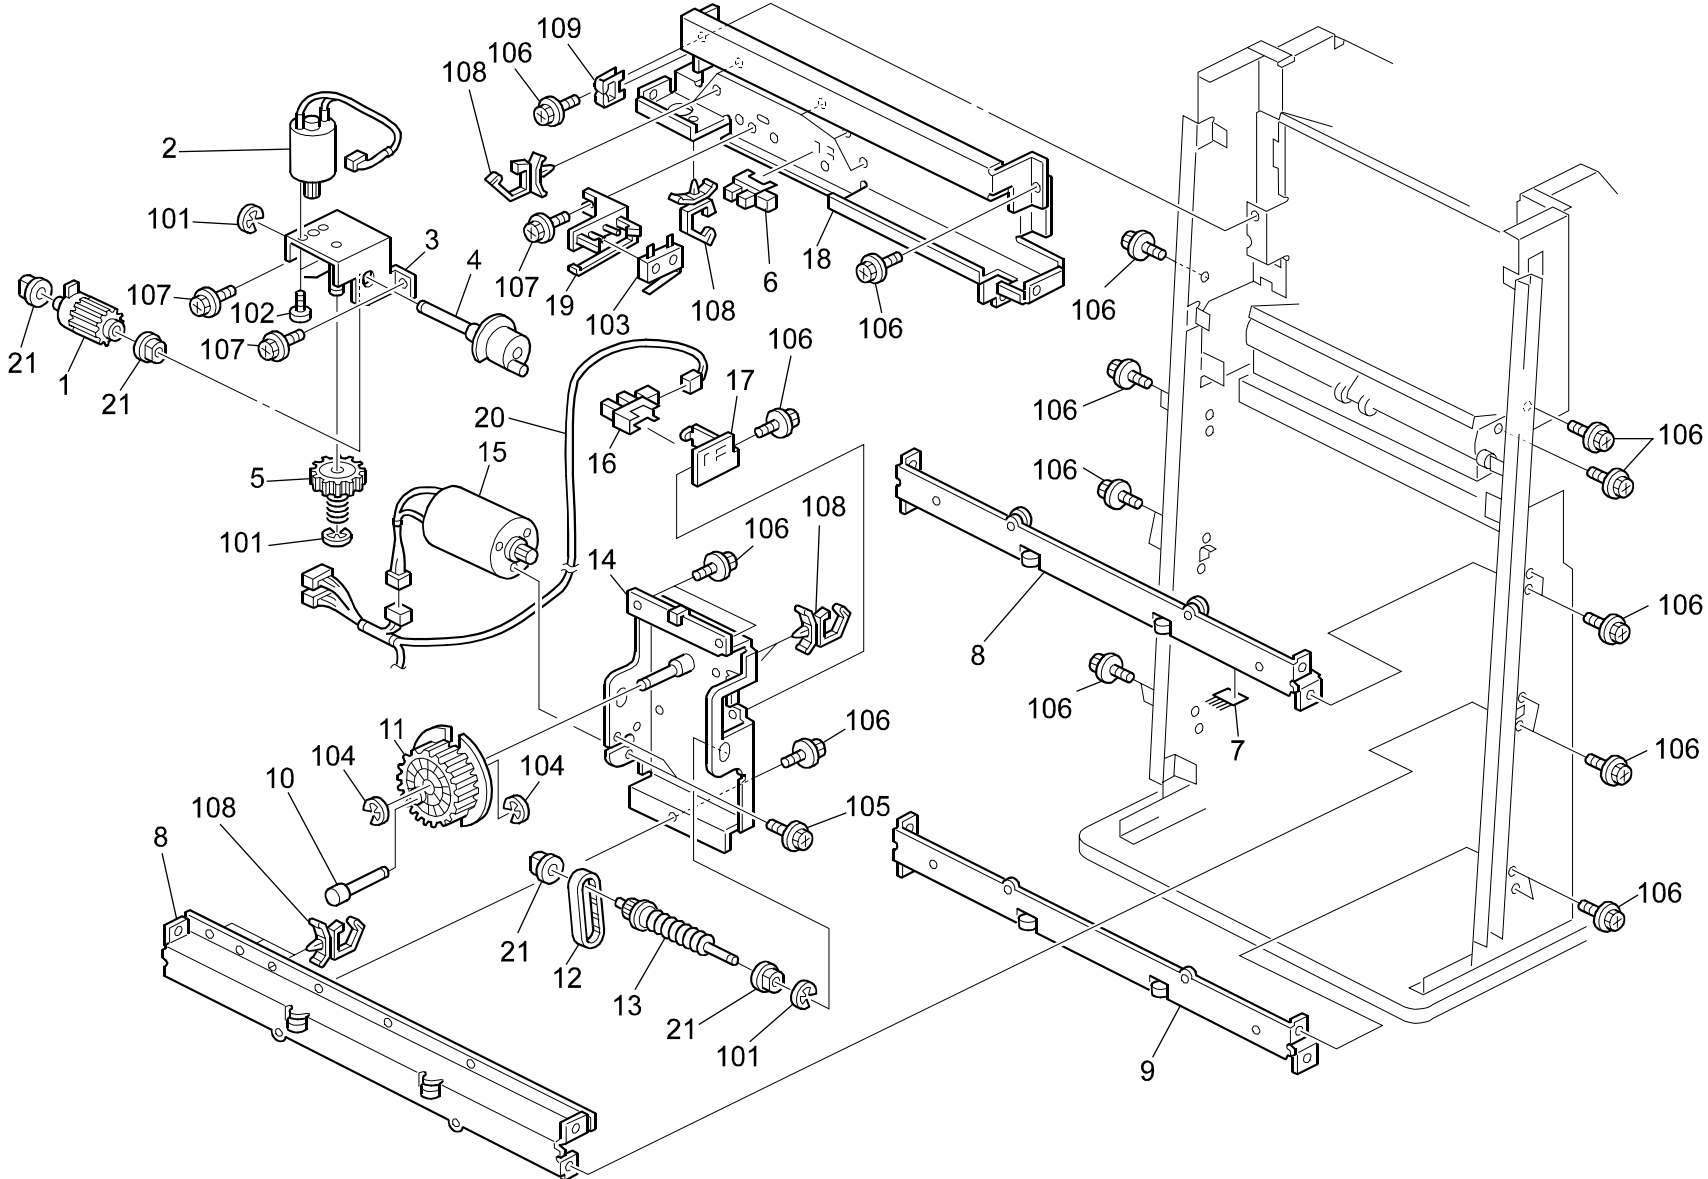


15.SHIFT DRIVE 2 (G838)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A681 2702	Worm Wheel - 20Z	1
2	AX04 0148	DC Motor:24v:2.2w:Cw/ccw	1
3	B545 3180	Motor Bracket	1
4	B352 3176	Cam:Paper Exit Unit	1
5	A681 2711	Worm Gear - 50z	1
6	AW02 0156	Photointerruptor:Ee-sx4235a-p2	1
7	A697 2131	Antistatic Brush	1
8	B545 3120	Stay - Upper Exit	2
9	B545 3125	Stay - Lower Exit	1
10	A697 3200	Worm Wheel Shaft	1
11	A697 3195	Worm Wheel	1
12	A697 3220	Timing Belt - B40S2M112	1
13	A697 3215	Pulley - 19T	1
14	A697 3210	Shift Motor Bracket	1
15	AX05 0230	DC Motor:Shift	1
16	AW02 0141	Photointerruptor	1
17	A697 3205	Shift Sensor Bracket	1
18	B545 3131	Upper Left Stay	1
19	B352 3195	Exit Switch holder	1
20	B545 5322	Harness:Connecting:Shift Tray:Lower	1
21	5053 0447	Bushing - 6mm	4

Index No.	Part No.	Description	Q'ty Per Assembly
101	0720 0040E	Retaining Ring - M4	
102	0800 0072	Philips Pan Head Screw - M2.6x4	
103	1204 2544	Switch - DE2L-BJ23	
104	0720 0060E	Retaining Ring - M6	
105	0454 4006Q	Tapping Screw:4x6	
106	0454 3006Q	Tapping Screw - M3x6	
107	0802 5277	Tapping Screw	
108	1105 0623	Clamp - LBWS-0206S-V0	
109	1105 0328	Harness Clamp - ES-0505	

 16.DRIVE SECTION (G838)

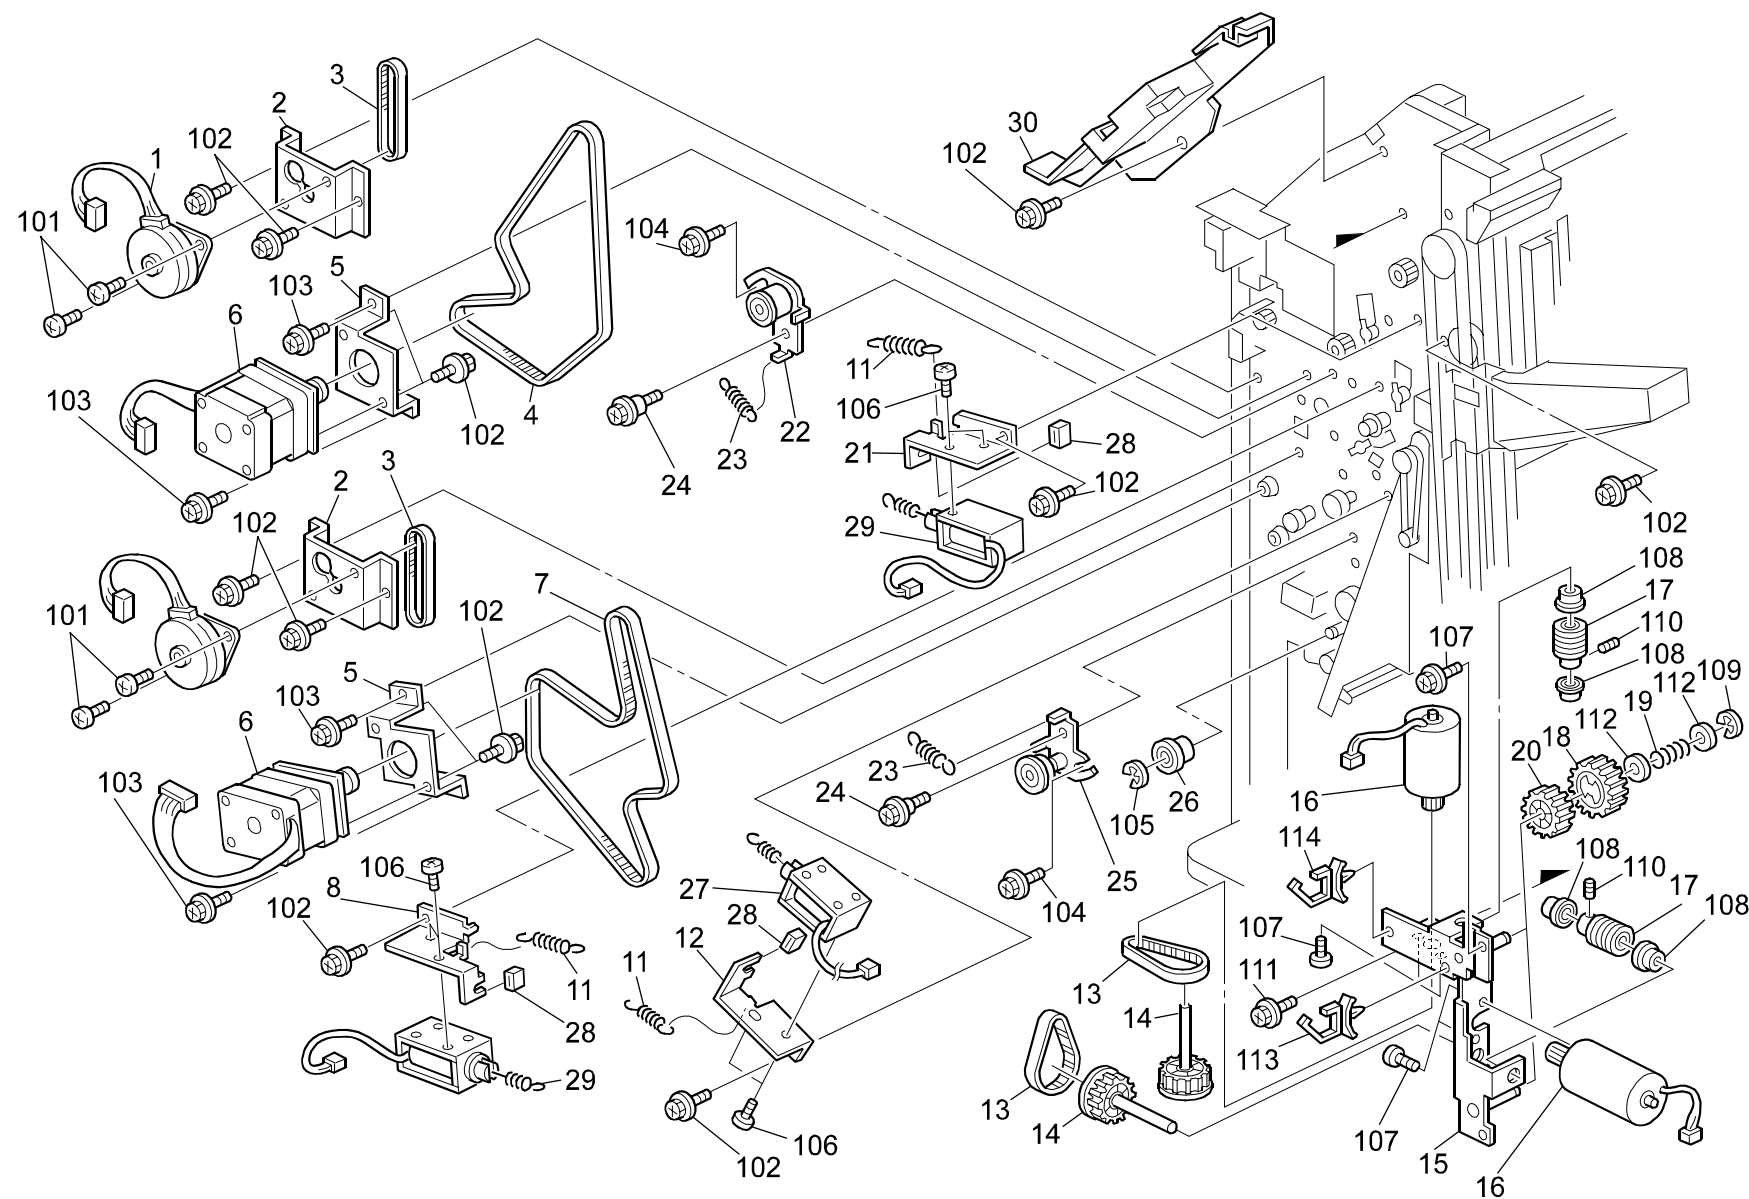


16.DRIVE SECTION (G838)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AX04 0218	Stepper Motor:Mm42:90Ω:CT	1
2	B312 1524	Motor Bracket	2
3	B352 1601	Timing Belt - B40S2M196	1
4	B352 1610	Timing Belt - B40S3M612	1
5	B545 1612	Bracket:Stepper Motor	2
6	C683 5750	Stepper Motor:Sub-ass'y	2
7	B352 1617	Timing Belt - B40S3M759	2
8	A697 2105	Bracket - Junction Gate Solenoid	1
11	AA06 2333	Tension Spring:2.16n	3
12	B545 2106	Bracket:Dc Solenoid:Gate Pawl:Duplex Stack	1
13	AA04 3054	Timing Belt - 142 P2M4	2
14	A697 3225	Worm Wheel Shaft	2
15	B545 3200	Bracket - Tray Lift Motor	1
16	AX06 0305	DC Motor:Na4056d05	2
17	A300 2736	Worm Gear	1
18	B352 3206	Worm Wheel - 30Z	2
19	B700 3322	Compression Spring - 10n	2
20	B352 3205	Gear - 26Z	2
21	A697 2235	Bracket - Junction Gate Solenoid	1
22	B312 1600	Tightener	1
23	B700 1501	Tension Spring - Pressure	2
24	AA14 3790	Screw:Contact Point	1
25	B312 1605	Tightener	1
26	B312 1615	Tension Roller	1
27	B545 2104	DC Solenoid:Gate Pawl:Duplex Stack:Ass'y	1
28	A697 2102	Dumper - Junction Gate Solenoid	3
29	B545 5809	DC Solenoid:Polarization Powl	2
30	G565 6130	Rear Cover - Side Plate	1
31	AB01 3709	Worm Gear	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0453 3006N	Tapping Screw - M3x6	
102	0454 3006Q	Tapping Screw - M3x6	
103	0454 4006Q	Tapping Screw:4x6	
104	0454 3008Q	Tapping Screw:3x8	
105	0720 0040E	Retaining Ring - M4	
106	0313 0040N	Screw:M3x4	
107	0313 0050N	Philips Pan Head Screw - M3x5	
108	0741 3506	Ball Bearing - 6x12x4 Mm	
109	0720 0060E	Retaining Ring - M6	
110	0574 0040E	Hexagon Headless Set Screw - M4x4	
111	0802 5277	Tapping Screw	
112	0807 5056	Washer - 8.1mm	
113	1105 0310	Harness Clamp - LWS-1S	
114	1105 0623	Clamp - LBWS-0206S-V0	

 17.ELECTRICAL SECTION (G838)

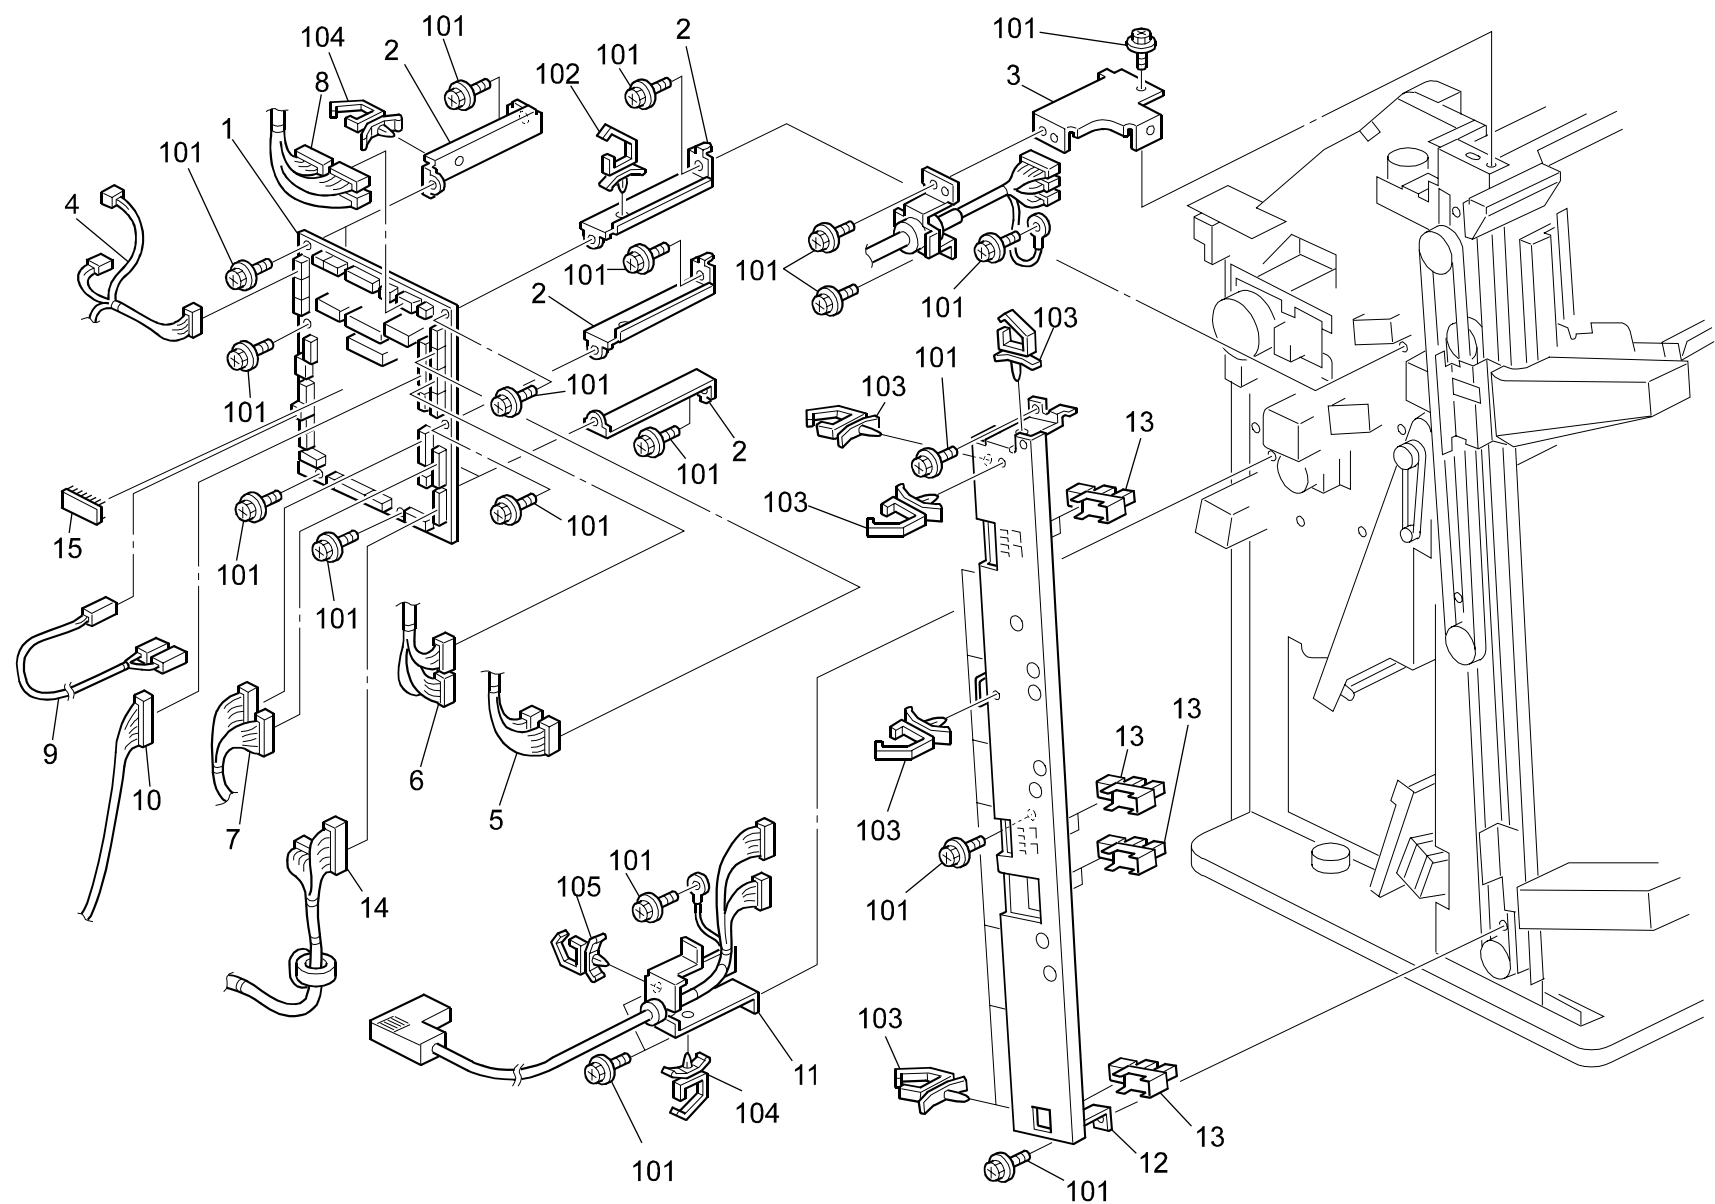

17.ELECTRICAL SECTION (G838)

Index No.	Part No.	Description	Q'ty Per Assembly
1	G838 5100	PCB:Main Control	1
2	B545 1140	Boardd Bracket	6
3	B545 1150	Upper Cover Bracket	1
4	B545 5217	Harness:Sensor:Entrance	1
5	B545 5242	Harness:Motor:Rising Tray	1
6	B545 5252	Harness:Shift Tray:Upper	1
7	G838 5227	Harness:Sensor:Shift Tray	1
8	B545 5222	Harness:Sensor:Paper Sensor	1
9	B545 5210	Harness:Safety Switch	1
10	B545 5247	Harness:Shift Tray:Lower	1
11	G838 5271	Harness:Interface	1
12	G838 3135	Stay:Positioning Sensor	1
13	AW02 0114	Photo Interruptor - Lower Limit	7
14	B545 5232	Harness:Stapler Tray:Upper	1
15	G838 5103	Eprom:Main Control	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 3006Q	Tapping Screw - M3x6	
102	1105 0292	Wire Saddle	
103	1105 0291	Harness Clamp - LWS-3S	
104	1105 0310	Harness Clamp - LWS-1S	
105	1105 0623	Clamp - LBWS-0206S-V0	

18.DECAL AND DOCUMENT (G838)

1

>PS<

R₁

↑

R₁

2

>PS<

R₂

↓

R₂

3

>PS<

R₃

↓

R₃

4

↶

R₄

>PS<

5

R₅

↷

>PS<

6

1

2

3

4

5

6

7

8

1

2

3

4

5

6

1

2

1

2

3

4

5

6

7

8

18.DECAL AND DOCUMENT (G838)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B352 7101	Decal - R1	1
2	B352 7151	Decal - R2	1
3	B352 7201	Decal - R3	1
4	B352 7251	Decal - R4	1
5	B352 7301	Decal - R5	1
6	G565 7351	Decal - Misfeed Removal	1

Index No.	Part No.	Description	Q'ty Per Assembly

Parts Index

Parts Index

Part No.	Description	Page and Index No.
G838 1151	Bracket:Hopper	11 - 9
G838 2174	Compression Spring	15 - 13
G838 2347	Gear:Z45	27 - 8
G838 2347	Gear:Z45	33 - 8
G838 3135	Stay:Positioning Sensor	39 - 12
G838 5100	PCB:Main Control	39 - 1
G838 5103	Eprom:Main Control	39 - 15
G838 5227	Harness:Sensor:Shift Tray	39 - 7
G838 5271	Harness:Interface	39 - 11

Part No.	Description	Page and Index No.
A300 2132	Guide Roller	23 - 35
A300 2736	Worm Gear	37 - 17
A300 3634	Spring Plate - Timing Belt	19 - 25
A300 3731	Slide Supporter	23 - 15
A300 3812	Spacer - 6x22x1.5	23 - 38
A300 3813	Shaft - 6x21.5	21 - 17
A300 3851	Positioning Roller Bracket	17 - 6
A300 3858	Stepped Screw - M4	17 - 1
A300 3865	Release Spring	17 - 2
A353 3272	Guide Roller	33 - 23
A353 3272	Guide Roller	29 - 34
A353 3351	Exit Driven Roller	33 - 22
A353 3354	Driven Roller Holder	31 - 14
A376 1295	Spacer - M6x10x5	17 - 33
A376 1295	Spacer - M6x10x5	15 - 19
A377 4741	Roller - M14	23 - 37
A379 2212	Driven Roller Shaft	31 - 16
A379 3316	Shift Guide Roller	27 - 20
A379 3316	Shift Guide Roller	33 - 19
A458 2251	Cushion - Bin Solenoid Lever	17 - 36
A458 2251	Cushion - Bin Solenoid Lever	15 - 20
A458 2251	Cushion - Bin Solenoid Lever	13 - 20
A606 1595	Small Door Cover	7 - 14
A612 2435	Support Plate	9 - 5
A612 2435	Support Plate	15 - 16
A666 2213	Shift Tray Roller	33 - 20
A666 3180	Timing Pulley - Z32	21 - 20
A666 4260	Entrance Roller	25 - 5
A681 2702	Worm Wheel - 20Z	35 - 1
A681 2711	Worm Gear - 50z	35 - 5
A681 3316	Shift Tray Worm	29 - 25
A697 1128	Joint Lever	11 - 14
A697 1144	Rear Joint Bracket	7 - 5
A697 1153	Front Joint Bracket	7 - 6
A697 1606	Spacer - 6x12x2.7mm	33 - 21

Part No.	Description	Page and Index No.
A697 2102	Dumper - Junction Gate Solenoid	37 - 28
A697 2102	Dumper - Junction Gate Solenoid	29 - 38
A697 2105	Bracket - Junction Gate Solenoid	37 - 8
A697 2131	Antistatic Brush	31 - 12
A697 2131	Antistatic Brush	35 - 7
A697 2145	Entrance Sensor Bracket	11 - 4
A697 2150	Lower Entrance Guide	11 - 3
A697 2187	Pressure Spring - 14.1mm	17 - 25
A697 2235	Bracket - Junction Gate Solenoid	37 - 21
A697 2245	Junction Gate - Proof Tray	13 - 5
A697 2250	Lower Relay Guide	11 - 6
A697 3195	Worm Wheel	35 - 11
A697 3200	Worm Wheel Shaft	35 - 10
A697 3205	Shift Sensor Bracket	35 - 17
A697 3210	Shift Motor Bracket	35 - 14
A697 3215	Pulley - 19T	35 - 13
A697 3220	Timing Belt - B40S2M112	35 - 12
A697 3225	Worm Wheel Shaft	37 - 14
A697 4170	Pulley - 32T	19 - 22
A821 1662	Interlock Switch Lever	17 - 14
B302 4629	Guide Mylar	19 - 24
B312 1521	Timing Pulley - 20T	15 - 3
B312 1524	Motor Bracket	37 - 2
B312 1600	Tightener	37 - 22
B312 1605	Tightener	37 - 25
B312 1615	Tension Roller	37 - 26
B312 1615	Tension Roller	25 - 9
B312 2100	Pre-stack Gate	15 - 7
B312 2151	Left Guide - Vertical Transport	15 - 15
B312 2166	Vertical Guide	15 - 6
B312 2171	Middle Guide - Vertical Transport	15 - 10
B312 2172	Driven Roller	15 - 14
B312 2173	Support Plate	15 - 9
B312 2176	Transport Roller	15 - 5
B312 2176	Transport Roller	13 - 3

Part No.	Description	Page and Index No.
B312 2187	Positioning Roller	17 - 12
B312 4126	Pulley - 32T	21 - 23
B352 1600	Timing Pulley - S2M T24	31 - 4
B352 1600	Timing Pulley - S2M T24	25 - 34
B352 1601	Timing Belt - B40S2M196	37 - 3
B352 1602	Timing Pulley - T20-S2M	11 - 12
B352 1605	Timing Belt - B40S3M216	13 - 17
B352 1606	Timing Pulley - T20-S3M	13 - 16
B352 1606	Timing Pulley - T20-S3M	15 - 2
B352 1607	Timing Pulley - T20-S3M	15 - 1
B352 1607	Timing Pulley - T20-S3M	13 - 1
B352 1607	Timing Pulley - T20-S3M	17 - 5
B352 1610	Timing Belt - B40S3M612	37 - 4
B352 1617	Timing Belt - B40S3M759	37 - 7
B352 1630	Tension Spring	25 - 4
B352 1631	Timing Belt - B40S2M594	25 - 23
B352 1632	Timing Belt - B40S2M200	31 - 3
B352 2111	Guide Plate - Transport Cover	9 - 6
B352 2112	Link - Transport Cover	9 - 9
B352 2113	Link Spacer	9 - 7
B352 2114	Pressure Spring	9 - 8
B352 2131	Exit Guide	25 - 36
B352 2132	Front Exit Plate	25 - 37
B352 2133	Rear Exit Plate	25 - 38
B352 2135	Sector Gear - Transport Cover	9 - 17
B352 2136	Oil Damper Shaft	9 - 16
B352 2140	Oil Damper	9 - 13
B352 2200	Lower Guide Plate	17 - 27
B352 2201	Guide - Trailing Edge	17 - 29
B352 2203	Discharge Brush - Stapler Tray	17 - 30
B352 2204	Driven Roller	17 - 26
B352 2204	Driven Roller	15 - 23
B352 2204	Driven Roller	9 - 1
B352 2204	Driven Roller	13 - 12
B352 2205	Bushing - Driven Roller	9 - 2

Part No.	Description	Page and Index No.
B352 2205	Bushing - Driven Roller	13 - 10
B352 2205	Bushing - Driven Roller	15 - 12
B352 2205	Bushing - Driven Roller	17 - 24
B352 2206	Tension Spring - Lower Guide	17 - 28
B352 2207	Pad - Stapler Tray	17 - 38
B352 2221	Holder - Paper Guide	17 - 20
B352 2222	Paper Guide - Trailing Edge	17 - 21
B352 2229	Roller - Paper Guide	17 - 22
B352 2232	Torsion Spring	17 - 23
B352 2235	Mylar - Exit Guide	13 - 21
B352 2365	Upper Left Pad	25 - 2
B352 2400	Exit Roller	31 - 24
B352 2400	Exit Roller	25 - 12
B352 2405	Outer Exit Roller	25 - 13
B352 2405	Outer Exit Roller	31 - 23
B352 2406	Exit Roller Shaft	25 - 14
B352 2406	Exit Rooler Shaft	31 - 28
B352 2407	Reverse Roller - 20Z	25 - 16
B352 2407	Reverse Roller - 20Z	31 - 25
B352 2408	Gear - 26Z	31 - 30
B352 2408	Gear - 26Z	25 - 40
B352 2409	Idler Gear - 17Z	31 - 31
B352 2409	Idler Gear - 17Z	25 - 17
B352 2410	Front Arm - Reverse Roller	31 - 27
B352 2410	Front Arm - Reverse Roller	25 - 15
B352 2411	Rear Arm - Reverse Roller	25 - 41
B352 2411	Rear Arm - Reverse Roller	31 - 26
B352 2420	Guide Plate - Shift Tray	13 - 8
B352 2431	Sheet - Guide Plate	13 - 14
B352 2436	Exit Driven Roller	31 - 34
B352 2440	Junction Gate - Stapler Tray	13 - 6
B352 2445	Pulley - T31	17 - 4
B352 2446	Positioning Roller Shaft	17 - 10
B352 2600	Upper Transport Roller	13 - 24
B352 2610	Shift Transport Roller	13 - 25

Part No.	Description	Page and Index No.
B352 2630	Exit Roller - Stapler	17 - 31
B352 2650	Magnet Catch - 5N	13 - 9
B352 2650	Magnet Catch - 5N	9 - 25
B352 3013	Shaft - Upper Drive	27 - 9
B352 3016	Shaft - Lower Drive	33 - 9
B352 3100	Sensor Feeler	25 - 29
B352 3100	Sensor Feeler	31 - 20
B352 3101	Holder - Sensor Feeler	31 - 18
B352 3101	Holder - Sensor Feeler	25 - 28
B352 3145	Timing Pulley - T18	27 - 7
B352 3145	Timing Pulley - T18	33 - 24
B352 3146	Timing Pulley - T18	33 - 7
B352 3146	Timing Pulley - T18	27 - 22
B352 3160	Timing Belt - B60S5M1530	33 - 6
B352 3161	Timing Belt - B60S5M1055	27 - 6
B352 3165	Timing Belt Guide Plate	33 - 14
B352 3165	Timing Belt Guide Plate	27 - 4
B352 3170	Spacer	27 - 18
B352 3176	Cam:Paper Exit Unit	35 - 4
B352 3190	Driven Roller Link	31 - 10
B352 3195	Exit Switch holder	35 - 19
B352 3205	Gear - 26Z	37 - 20
B352 3206	Worm Wheel - 30Z	37 - 18
B352 3220	Roller Pad	25 - 33
B352 3220	Roller Pad	31 - 38
B352 3225	Pad - Switch Lever	25 - 39
B352 3225	Pad - Switch Lever	31 - 36
B352 3517	Slide Guide	29 - 31
B352 3571	Slider Bearing	29 - 9
B352 3572	Bushing - 6mm	29 - 4
B352 3575	Shaft - Upper Tray	29 - 5
B352 3576	Gear - 20Z	29 - 13
B352 3577	Shaft Cap	29 - 35
B352 3580	Worm Wheel - 40Z	29 - 10
B352 3586	Shift - Worm Gear	29 - 23

Part No.	Description	Page and Index No.
B352 3587	Timing Belt - B0S2M104	29 - 26
B352 3591	Gear - 40Z	29 - 15
B352 3592	Idle Gear - 20Z	29 - 14
B352 3593	Rachet - Tray Lock	29 - 20
B352 3595	Rear Shaft - Upper Tray	29 - 16
B352 3605	Upper Guide - End Fence	27 - 10
B352 3608	Tension Spring - End Fence	27 - 14
B352 3629	End Fence Roller	27 - 17
B352 3655	Switch Holder	29 - 28
B352 3655	Switch Holder	31 - 6
B352 3655	Switch Holder	25 - 20
B352 3656	Compression Spring	9 - 23
B352 3656	Compression Spring	31 - 37
B352 3656	Compression Spring	25 - 22
B352 3656	Compression Spring	29 - 30
B352 3705	Lock Lever - Upper Tray	29 - 19
B352 3833	Short Cushion - Base	33 - 25
B352 3844	Long Cushion - Base	33 - 26
B352 3845	Slider Pawl	33 - 2
B352 4100	Stapler Tray	21 - 15
B352 4131	Front Jogger Fence	19 - 15
B352 4141	Rear Jogger Fence	19 - 14
B352 4152	Upper Slider - Jogger Fence	19 - 3
B352 4162	Jogger Fence Slider	19 - 17
B352 4165	Slider Shaft - Jogger Fence	19 - 18
B352 4175	Timing Pulley - Jogger Drive	19 - 12
B352 4185	Timing Belt - 940P2M4	19 - 13
B352 4215	Shaft - Jogger Fence	21 - 9
B352 4215	Shaft - Jogger Fence	19 - 1
B352 4221	Front Training Edge Fence	21 - 10
B352 4231	Rear Training Edge Fence	21 - 13
B352 4232	Slider - Training Edge Fence	21 - 8
B352 4251	Upper Exit Shaft	21 - 21
B352 4255	Timing Belt - 258P2M4	21 - 24
B352 4261	Tightener - Exit Belt	19 - 7

Part No.	Description	Page and Index No.
B352 4315	Spring - 18N	23 - 16
B352 4316	Stopper - Timing Belt	23 - 10
B352 4318	Bushing - Lower Slider	23 - 11
B352 4331	Sector Gear - Staple Unit	23 - 19
B352 4347	Bushing - 6mm	23 - 34
B352 4351	Gear - 46Z/25Z	23 - 21
B352 4352	Gear - 46Z/19Z	23 - 26
B352 4353	Pinion - 46Z/18Z	23 - 25
B352 4354	Gear - 27Z	23 - 22
B352 4358	Stapler Base Cover	23 - 31
B352 4378	Stapler Cover	23 - 30
B352 4379	Lower Guide Plate	23 - 41
B352 4415	Guide Rod	23 - 13
B352 4421	Timing Pulley - Drive	23 - 3
B352 4422	Timing Belt - 918P3M4	23 - 4
B352 5450	Bushing - CE-012LV0	31 - 40
B352 7101	Decal - R1	41 - 1
B352 7101	Decal - R1	13 - 18
B352 7151	Decal - R2	15 - 17
B352 7151	Decal - R2	41 - 2
B352 7201	Decal - R3	41 - 3
B352 7201	Decal - R3	15 - 18
B352 7251	Decal - R4	41 - 4
B352 7251	Decal - R4	17 - 32
B352 7301	Decal - R5	19 - 23
B352 7301	Decal - R5	41 - 5
B408 1413	Coupling Stay	17 - 18
B408 1413	Coupling Stay	11 - 13
B408 5355	Harness:Connecting:280mm	25 - 25
B545 1120	Stay - Stapler Tray	21 - 3
B545 1130	Caster:40kgf	21 - 6
B545 1135	Angle:Harness Clamp	11 - 11
B545 1140	Boardd Bracket	39 - 2
B545 1150	Upper Cover Bracket	39 - 3
B545 1170	Bracket:Ground Plate:Upper:Ass'y	7 - 7

Part No.	Description	Page and Index No.
B545 1612	Bracket:Stepper Motor	37 - 5
B545 1620	Exit Roller Bracket	31 - 2
B545 1625	Bracket:Tightener:Ass'y	25 - 3
B545 1661	Cover:Safety Switch	17 - 15
B545 2019	Caster:ÏÜ50:490n	21 - 4
B545 2084	Positioning Roller Solenoid	17 - 3
B545 2101	Guide Plate - Entrance Cover	9 - 20
B545 2104	DC Solenoid:Gate Pawl:Duplex Stack:Ass'y	37 - 27
B545 2105	Film:Shielding Plate	9 - 26
B545 2106	Bracket:Dc Solenoid:Gate Pawl:Duplex Stack	37 - 12
B545 2110	Upper Guide Plate	13 - 2
B545 2115	Transport Cover	9 - 11
B545 2120	Upper Guide Plate - Exit	25 - 7
B545 2124	Upper Guide Plate - Exit Small	25 - 35
B545 2125	Upper Bracket - Paper Exit Unit	25 - 31
B545 2126	Upper Bracket - Paper Feed Sensor	25 - 26
B545 2137	Bracket - Oil Damper	9 - 14
B545 2138	Bracket - Entrance Cover	9 - 18
B545 2139	Bracket - Transport Cover	9 - 15
B545 2145	Support Plate - Transport Cover	9 - 21
B545 2210	Vertical Transport Guide	15 - 4
B545 2215	Exit Sensor Bracket	17 - 17
B545 2217	Exit Guide Plate	13 - 15
B545 2221	Stay:Guide:Trailing Edge	17 - 19
B545 2251	Upper Relay Guide	11 - 5
B545 2415	Lower Guide Plate	31 - 17
B545 2425	Lower4 Turn Guide Plate	13 - 4
B545 2430	Guide Plate - Turn Gate	13 - 13
B545 2437	Guide Plate:Exit:Moveable	31 - 15
B545 2438	Bracket:Guide:Exit	31 - 9
B545 2450	Support Plate - Guide Plate	13 - 7
B545 2500	Guide Plate:Auxiliary:Punch:Ass'y	11 - 7
B545 2505	Front Cover - Hopper	11 - 16
B545 2506	Rear Cover - Punch Unit	11 - 10
B545 2811	Positioning Roller Arm	17 - 8

Part No.	Description	Page and Index No.
B545 3102	Micro Switch Lever	31 - 5
B545 3102	Micro Switch Lever	25 - 18
B545 3105	Bracket - Micro Switch	25 - 21
B545 3105	Bracket - Micro Switch	31 - 7
B545 3110	End Fence	33 - 3
B545 3115	Sensor Bracket	33 - 5
B545 3120	Stay - Upper Exit	35 - 8
B545 3125	Stay - Lower Exit	35 - 9
B545 3130	Exit Stay	25 - 24
B545 3131	Upper Left Stay	35 - 18
B545 3140	End Fence Cover	33 - 10
B545 3150	Lower Tighter	33 - 11
B545 3155	Upper Tighter	27 - 11
B545 3180	Motor Bracket	35 - 3
B545 3185	Bracket - Open Link	31 - 11
B545 3200	Bracket - Tray Lift Motor	37 - 15
B545 3210	Exit Roller Cover	31 - 22
B545 3215	Adjusting Bracket - Sensor Feeler	25 - 30
B545 3215	Adjusting Bracket - Sensor Feeler	31 - 21
B545 3510	Base - Upper Tray	29 - 3
B545 3515	Front Stopper - Tray Shift	29 - 7
B545 3516	Base Bracket	29 - 32
B545 3520	Side Plate - Upper Front	27 - 5
B545 3530	Side Plate - Upper Rear	27 - 3
B545 3560	Base - Shift	29 - 33
B545 3570	Support Plate - Tray Shift	29 - 8
B545 3585	Motor Bracket	29 - 24
B545 3594	Torque Limiter:100mn.m	29 - 27
B545 3601	End Fence	27 - 12
B545 3650	Bracket - Tray Safety Switch	29 - 29
B545 3700	Bracket - Lock Lever	29 - 17
B545 3761	Base Cover	27 - 19
B545 3766	Slide Cover	29 - 2
B545 3812	Side Plate - Lower Front	33 - 13
B545 3822	Side Plate - Lower Back	33 - 16

Part No.	Description	Page and Index No.
B545 3830	Base - Lower Tray	33 - 18
B545 4052	Exit Belt Ass'y	21 - 18
B545 4079	Stapler Unit	23 - 32
B545 4111	Side Plate - Front Tray - Stapler	21 - 7
B545 4121	Rear Side Plate - Stapler Tray	21 - 22
B545 4150	Screw:Pin:Positioning	23 - 36
B545 4151	Upper Stay - Jogger Fence	19 - 2
B545 4153	Upper Bracket - Jogger Fence	19 - 4
B545 4161	Jogger Fence Stay	19 - 8
B545 4163	Jogger Fence Bracket	19 - 16
B545 4171	Jogger Motor Bracket	19 - 11
B545 4183	Tightener:Jogger:Ass'y	19 - 19
B545 4211	Slider Fence Stay	21 - 5
B545 4245	Bracket - Pull Out Sensor	19 - 6
B545 4311	Stapler Unit Slider	23 - 12
B545 4317	Fence Hook	23 - 14
B545 4321	Lower Slider - Staple Unit	23 - 17
B545 4327	Holder:Harness:Stapler	23 - 18
B545 4355	Slider Holder - Stapler Unit	23 - 20
B545 4362	Bracket:Sensor:Diagonal,slanted	23 - 23
B545 4371	Stapler Base	23 - 33
B545 4391	Slider:Turn:Ass'y	23 - 24
B545 4411	Bracket - Stapler Movement	23 - 2
B545 4431	Tightener Bracket	23 - 6
B545 5210	Harness:Safety Switch	39 - 9
B545 5217	Harness:Sensor:Entrance	39 - 4
B545 5222	Harness:Sensor:Paper Sensor	25 - 11
B545 5222	Harness:Sensor:Paper Sensor	39 - 8
B545 5232	Harness:Stapler Tray:Upper	39 - 14
B545 5237	Harness:Stapler	23 - 29
B545 5242	Harness:Motor:Rising Tray	39 - 5
B545 5247	Harness:Shift Tray:Lower	39 - 10
B545 5252	Harness:Shift Tray:Upper	39 - 6
B545 5275	Harness:Connecting:Shift Tray:Upper:Ass'y	29 - 1
B545 5300	Harness:Connecting:240mm	11 - 2

Part No.	Description	Page and Index No.
B545 5305	Harness:Connecting:430mm	31 - 35
B545 5310	Harness:Connecting:560mm	23 - 39
B545 5322	Harness:Connecting:Shift Tray:Lower	35 - 20
B545 5327	Harness:Connecting:Paper Sensor	31 - 29
B545 5510	Stepper Motor:Exit:Ass'y	21 - 19
B545 5515	Stepper Motor:Exit:Ass'y	31 - 1
B545 5809	DC Solenoid:Polarization Powl	37 - 29
B545 5809	DC Solenoid:Polarization Powl	29 - 21
B545 6101	Cover:Upper	7 - 3
B545 6203	Upper Hinge - Frontdoor	7 - 8
B545 6206	Lower Hinge - Front Door	7 - 15
B545 7507	Screw:Punch	11 - 15
B599 3835	Tray Shift Shaft	33 - 12
B700 1501	Tension Spring - Pressure	37 - 23
B700 3322	Compression Spring - 10n	37 - 19
B700 4107	Spring:Return:Standard Fence	21 - 11
B700 5809	Stepper Motor:Stapler:Moveable:Ass'y	23 - 1
B704 4121	Transport Roller:Lower	15 - 8
B704 4121	Transport Roller:Lower	11 - 8
B804 1117	Cap - Base	21 - 1
C683 5750	Stepper Motor:Sub-ass'y	37 - 6
G011 3275	Snap Ring	29 - 40
G034 2986	Flanged Hexagonal Head Bolt - M4x8	7 - 1
G034 2993	Flanged Hexagonal Head Bolt - M3x6	11 - 18
G034 2993	Flanged Hexagonal Head Bolt - M3x6	7 - 4
G522 1152	Flanged Hexagonal Head Bolt	7 - 19
G565 2151	Entrance Cover	9 - 19
G565 2222	Guide - Trailing Edge	17 - 39
G565 3611	End Fence Guide Plate	27 - 13
G565 3621	Front End Fence Rail	27 - 16
G565 3631	Rear End Fence Rail	27 - 15
G565 3751	Upper Base Cover	29 - 12
G565 3840	Slider:Tray:Peen	33 - 1
G565 3912	Shift Tray	7 - 18
G565 3921	Slide Tray	7 - 17

Part No.	Description	Page and Index No.
G565 4234	Front Entrance Guide	21 - 12
G565 4235	Rear Fence Guide	21 - 2
G565 6130	Rear Cover - Side Plate	37 - 30
G565 6201	Front Cover	7 - 10
G565 6202	Auxiliary Grip Cover	7 - 12
G565 6301	Rear Cover	7 - 2
G565 6401	Left Upper Cover	25 - 1
G565 6451	Lower Left Cover	7 - 16
G565 6501	Inner Cover	7 - 9
G565 6601	Front Upper Tray Cover	27 - 2
G565 6651	Rear Upper Tray Cover	27 - 1
G565 6701	Front Lower Tray Cover	33 - 15
G565 6751	Rear Lower Tray Cover	33 - 17
G565 7351	Decal - Misfeed Removal	7 - 11
G565 7351	Decal - Misfeed Removal	41 - 6
G800 3089	Bushing - 6mm	11 - 20

Part No.	Description	Page and Index No.
AA02 1030	Magnet Catch	9 - 4
AA04 3054	Timing Belt - 142 P2M4	37 - 13
AA06 0557	Positioning Roller Spring	17 - 7
AA06 2333	Tension Spring:2.16n	37 - 11
AA06 2333	Tension Spring:2.16n	29 - 18
AA06 2334	Tension Spring:4.9n	23 - 8
AA06 2334	Tension Spring:4.9n	19 - 21
AA06 3529	Pressure Spring - 14.5mm	15 - 22
AA06 3529	Pressure Spring - 14.5mm	9 - 3
AA06 3529	Pressure Spring - 14.5mm	13 - 11
AA08 0238	Bushing - M6	17 - 37
AA08 0238	Bushing - M6	25 - 19
AA08 0238	Bushing - M6	15 - 25
AA08 0238	Bushing - M6	31 - 33
AA08 0238	Bushing - M6	13 - 22
AA08 0238	Bushing - M6	11 - 19
AA12 0027	Antistatic Brush	31 - 8
AA12 0090	Discharge Brush L=320 MM3	25 - 10
AA14 3788	Pin:Guide Plate:Paper Feed	27 - 21
AA14 3788	Pin:Guide Plate:Paper Feed	9 - 24
AA14 3790	Screw:Contact Point	25 - 8
AA14 3790	Screw:Contact Point	23 - 9
AA14 3790	Screw:Contact Point	19 - 20
AA14 3790	Screw:Contact Point	37 - 24
AA14 3790	Screw:Contact Point	11 - 17
AA14 3823	Tapping Screw	31 - 39
AA14 3823	Tapping Screw	25 - 6
AA16 1099	Lever Cushion	17 - 34
AB01 3709	Worm Gear	37 - 31
AB03 0278	Idler - 20z	23 - 7
AG07 0512	Magnet Catch:Ass'y	7 - 13
AG07 0515	Magnet Catch:13n	9 - 22
AG07 1012	Magnet Catch:Ass'y	15 - 11
AW01 0089	Photosensor - GP2A28C	33 - 4
AW01 0089	Photosensor - GP2A28C	11 - 1

Part No.	Description	Page and Index No.
AW01 0109	Photo Refiection Sensor:Ps117ed1	21 - 14
AW01 0123	Photo Refiection Sensor:Psr11d1-b	31 - 13
AW02 0114	Photo Interruptor - Lower Limit	39 - 13
AW02 0114	Photo Interruptor - Lower Limit	29 - 39
AW02 0114	Photo Interruptor - Lower Limit	23 - 40
AW02 0141	Photointerruptor	29 - 11
AW02 0141	Photointerruptor	35 - 16
AW02 0155	Photointerruptor:Paper Size Sensor	25 - 27
AW02 0156	Photointerruptor:Ee-sx4235a-p2	23 - 5
AW02 0156	Photointerruptor:Ee-sx4235a-p2	19 - 10
AW02 0156	Photointerruptor:Ee-sx4235a-p2	35 - 6
AW02 0156	Photointerruptor:Ee-sx4235a-p2	9 - 12
AW02 0156	Photointerruptor:Ee-sx4235a-p2	31 - 19
AW02 0156	Photointerruptor:Ee-sx4235a-p2	25 - 32
AW02 0166	Photointerruptor:Paper Feed Sensor	19 - 5
AW02 0169	Photointerruptor - Os - 580213-703	17 - 16
AX04 0148	DC Motor:24v:2.2w:Cw/ccw	35 - 2
AX04 0218	Stepper Motor:Mm42:90Ω:CT	37 - 1
AX05 0230	DC Motor:Shift	35 - 15
AX05 0243	DC Motor:Dc24v:7.2w	29 - 22
AX05 0244	Stepper Motor:Mm42:0.85a	23 - 27
AX05 0244	Stepper Motor:Mm42:0.85a	19 - 9
AX06 0305	DC Motor:Na4056d05	37 - 16
AX21 0095	Magnetic Clutch:Z30	29 - 6

Part No.	Description	Page and Index No.
0313 0040N	Screw:M3x4	37 - 106
0313 0050N	Philips Pan Head Screw - M3x5	29 - 106
0313 0050N	Philips Pan Head Screw - M3x5	37 - 107
0313 0100N	Pan Head Screw:M3x10	31 - 106
0313 0100N	Pan Head Screw:M3x10	33 - 106
0313 0120N	Pan Head Screw:M3x12	11 - 103
0353 0050N	Screw-m3x5	23 - 108
0353 0060N	Philips Pan Head Bind Screw - M3x6	25 - 103
0450 3008N	Tapping Screw - M3x8	9 - 104
0450 3008N	Tapping Screw - M3x8	21 - 105
0450 3008N	Tapping Screw - M3x8	9 - 101
0450 3008N	Tapping Screw - M3x8	19 - 102
0450 3008N	Tapping Screw - M3x8	13 - 104
0450 3008N	Tapping Screw - M3x8	7 - 102
0450 4008N	Tapping Screw - M4x8	31 - 107
0451 3006N	Tapping Screw - 3x6	29 - 101
0451 3008N	Tapping Screw - M3x8	33 - 101
0452 3008N	Tapping Screw - M3x8	27 - 102
0452 3008N	Tapping Screw - M3x8	15 - 104
0453 3006N	Tapping Screw - M3x6	37 - 101
0453 3006N	Tapping Screw - M3x6	19 - 105
0453 3006N	Tapping Screw - M3x6	23 - 106
0454 3006Q	Tapping Screw - M3x6	25 - 102
0454 3006Q	Tapping Screw - M3x6	7 - 103
0454 3006Q	Tapping Screw - M3x6	23 - 101
0454 3006Q	Tapping Screw - M3x6	9 - 102
0454 3006Q	Tapping Screw - M3x6	11 - 101
0454 3006Q	Tapping Screw - M3x6	35 - 106
0454 3006Q	Tapping Screw - M3x6	39 - 101
0454 3006Q	Tapping Screw - M3x6	21 - 101
0454 3006Q	Tapping Screw - M3x6	27 - 103
0454 3006Q	Tapping Screw - M3x6	37 - 102
0454 3006Q	Tapping Screw - M3x6	33 - 103
0454 3006Q	Tapping Screw - M3x6	31 - 101
0454 3006Q	Tapping Screw - M3x6	19 - 101

Part No.	Description	Page and Index No.
0454 3006Q	Tapping Screw - M3x6	17 - 106
0454 3006Q	Tapping Screw - M3x6	13 - 102
0454 3008Q	Tapping Screw:3x8	21 - 106
0454 3008Q	Tapping Screw:3x8	23 - 102
0454 3008Q	Tapping Screw:3x8	7 - 101
0454 3008Q	Tapping Screw:3x8	25 - 101
0454 3008Q	Tapping Screw:3x8	27 - 101
0454 3008Q	Tapping Screw:3x8	37 - 104
0454 3008Q	Tapping Screw:3x8	19 - 103
0454 4006Q	Tapping Screw:4x6	31 - 108
0454 4006Q	Tapping Screw:4x6	9 - 105
0454 4006Q	Tapping Screw:4x6	35 - 105
0454 4006Q	Tapping Screw:4x6	37 - 103
0454 4006Q	Tapping Screw:4x6	15 - 103
0454 4006Q	Tapping Screw:4x6	17 - 101
0454 4008Q	Tapping Screw - M4x8	21 - 102
0574 0040E	Hexagon Headless Set Screw - M4x4	37 - 110
0622 0100E	Spring Pin - 2x10mm	31 - 102
0622 0100E	Spring Pin - 2x10mm	25 - 106
0623 0120E	Spring Pin - M3x12	17 - 103
0632 0100G	Pin - 2x10mm	31 - 105
0632 0100G	Pin - 2x10mm	25 - 108
0632 0120G	Parallel Pin - 2x12	29 - 107
0720 0040E	Retaining Ring - M4	9 - 103
0720 0040E	Retaining Ring - M4	27 - 104
0720 0040E	Retaining Ring - M4	11 - 104
0720 0040E	Retaining Ring - M4	13 - 101
0720 0040E	Retaining Ring - M4	15 - 101
0720 0040E	Retaining Ring - M4	31 - 103
0720 0040E	Retaining Ring - M4	29 - 104
0720 0040E	Retaining Ring - M4	37 - 105
0720 0040E	Retaining Ring - M4	25 - 104
0720 0040E	Retaining Ring - M4	17 - 104
0720 0040E	Retaining Ring - M4	19 - 104
0720 0040E	Retaining Ring - M4	21 - 107

Part No.	Description	Page and Index No.
0720 0040E	Retaining Ring - M4	35 - 101
0720 0040E	Retaining Ring - M4	23 - 103
0720 0040E	Retaining Ring - M4	33 - 102
0720 0060E	Retaining Ring - M6	37 - 109
0720 0060E	Retaining Ring - M6	35 - 104
0720 0060E	Retaining Ring - M6	33 - 105
0720 0060E	Retaining Ring - M6	25 - 112
0720 0060E	Retaining Ring - M6	27 - 105
0720 0060E	Retaining Ring - M6	23 - 104
0740 3008	Ball Bearing - 8x22x7	23 - 105
0741 3506	Ball Bearing - 6x12x4 Mm	37 - 108
0742 3808	Ball Bearing - 8x16x5	33 - 104
0742 3808	Ball Bearing - 8x16x5	27 - 106
0800 0072	Philips Pan Head Screw - M2.6x4	35 - 102
0802 5276	Tapping Screw With Washer - M3x6	29 - 105
0802 5277	Tapping Screw	29 - 109
0802 5277	Tapping Screw	37 - 111
0802 5277	Tapping Screw	35 - 107
0805 0088	Retaining Ring - M6	29 - 103
0805 0089	Retaining Ring - M4	31 - 104
0805 0089	Retaining Ring - M4	25 - 107
0805 0089	Retaining Ring - M4	15 - 102
0805 0089	Retaining Ring - M4	17 - 105
0805 0089	Retaining Ring - M4	13 - 103
0805 0092	Retaining Ring - 3m	29 - 102
0805 3263	Bearing - 6x10x6mm	23 - 107
0805 3385	Bushing - 6mm	21 - 110
0807 5056	Washer - 8.1mm	37 - 112
1105 0230	Clamp	25 - 109
1105 0291	Harness Clamp - LWS-3S	39 - 103
1105 0291	Harness Clamp - LWS-3S	21 - 112
1105 0292	Wire Saddle	39 - 102
1105 0310	Harness Clamp - LWS-1S	25 - 110
1105 0310	Harness Clamp - LWS-1S	31 - 112
1105 0310	Harness Clamp - LWS-1S	39 - 104

Part No.	Description	Page and Index No.
1105 0310	Harness Clamp - LWS-1S	37 - 113
1105 0310	Harness Clamp - LWS-1S	29 - 110
1105 0310	Harness Clamp - LWS-1S	11 - 105
1105 0310	Harness Clamp - LWS-1S	19 - 106
1105 0328	Harness Clamp - ES-0505	35 - 109
1105 0328	Harness Clamp - ES-0505	23 - 109
1105 0328	Harness Clamp - ES-0505	31 - 109
1105 0329	Clamp - ES-0510	25 - 113
1105 0329	Clamp - ES-0510	29 - 111
1105 0329	Clamp - ES-0510	11 - 106
1105 0334	Edge - 17	21 - 103
1105 0410	Card Spacer - 9.4mm	21 - 104
1105 0522	Edge Saddle - LES0510	29 - 113
1105 0623	Clamp - LBWS-0206S-V0	21 - 111
1105 0623	Clamp - LBWS-0206S-V0	39 - 105
1105 0623	Clamp - LBWS-0206S-V0	31 - 110
1105 0623	Clamp - LBWS-0206S-V0	11 - 102
1105 0623	Clamp - LBWS-0206S-V0	37 - 114
1105 0623	Clamp - LBWS-0206S-V0	33 - 107
1105 0623	Clamp - LBWS-0206S-V0	35 - 108
1105 0623	Clamp - LBWS-0206S-V0	17 - 107
1105 0623	Clamp - LBWS-0206S-V0	29 - 112
1105 0623	Clamp - LBWS-0206S-V0	19 - 107
1105 0623	Clamp - LBWS-0206S-V0	23 - 110
1105 0623	Clamp - LBWS-0206S-V0	25 - 111
1204 2384	Interlock Switch	17 - 102
1204 2543	Switch - DE2L-BJ22	25 - 105
1204 2543	Switch - DE2L-BJ22	29 - 108
1204 2543	Switch - DE2L-BJ22	31 - 111
1204 2544	Switch - DE2L-BJ23	35 - 103

Part No.	Description	Page and Index No.
5053 0447	Bushing - 6mm	13 - 23
5053 0447	Bushing - 6mm	15 - 24
5053 0447	Bushing - 6mm	31 - 32
5053 0447	Bushing - 6mm	29 - 37
5053 0447	Bushing - 6mm	35 - 21
5053 0447	Bushing - 6mm	17 - 35
5053 0447	Bushing - 6mm	21 - 16
5053 0447	Bushing - 6mm	25 - 42
5443 2668	Bushing - 4x6x7mm	29 - 36
5447 2681	Snap Ring	9 - 10
5447 2681	Snap Ring	17 - 13
5447 2681	Snap Ring	15 - 21
5919 2127	Positioning Roller Pulley	17 - 9
5919 2132	Positioning Roller Belt	17 - 11