

Model: Booklet finisher SR4130		Date: 8-Mar-17	No.: RD3CH001
Subject: Manual correction – Proper procedure for moving the Booklet finisher SR4130-		Prepared by: A.Shigeta	
From: 1st Tech Service Sec. MFP Tech Service Dept.			
Classification:	<input type="checkbox"/> Troubleshooting <input type="checkbox"/> Mechanical <input type="checkbox"/> Paper path <input type="checkbox"/> Product Safety	<input type="checkbox"/> Part information <input type="checkbox"/> Electrical <input type="checkbox"/> Transmit/receive <input type="checkbox"/> Other ()	<input type="checkbox"/> Action required <input checked="" type="checkbox"/> Service manual revision <input type="checkbox"/> Retrofit information <input type="checkbox"/> Tier 2

Service Manual Correction

The procedure on how to properly move the Booklet finisher was added to the Service Manual.

Applied Models

MP C6503SP/C8003SP, Pro C5200S/C5210S

MP 6503SP/7503SP/9003SP

Moving the Finisher

- As a general rule for moving the finisher, move it from the front to the rear of the machine as indicated with the arrows in green, by gripping the positions outlined in blue in the photo below.
- Make sure to grip both front and back of the finisher at the top to prevent the unit from tipping over.
- When connecting or disconnecting the finisher to or from the main frame, slightly move it in the direction indicated with the yellow arrow.



Note

When the finisher has to be lifted up, for instance, when moving it over an object on the ground, hold the bottom frame. DO NOT hold the ground plate.



Do not grip the following locations when moving the finisher:

- Proof tray
- Entrance guide plate
- Front and rear covers
- Shift tray base
- Connection lever
- Waste punch full detection sensor bracket
- Booklet stapler unit
- The edge part of the upper cover

