


Notes for Users


Note the following additional information on the use of this finisher.

When using thin coated paper with a paper size of B4 \square , 8 $\frac{1}{2}$ x 14 \square or larger, and with a paper weight of 105.0 g/m² (28 lb. Bond) or less, the output paper might not align properly. If this happens, set the auxiliary tray for thin coated paper to the finisher shift tray.

1. Press the [Suspend/Resume] key.
2. Remove the copies/prints.
3. Pull out the finisher shift tray's extension.

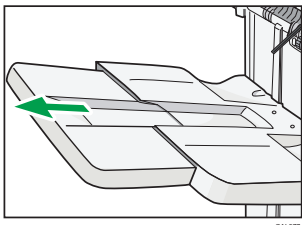

4. Set the auxiliary tray for thin coated paper by aligning the tray with the grooves on the end fence.

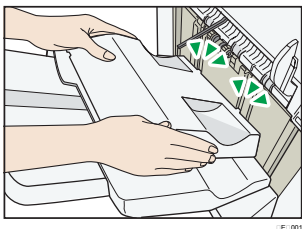

5. Press the [Suspend/Resume] key to restart the print.

Note

- When the output paper curls downward, it might not align properly, even if the auxiliary tray for thin coated paper is used. If the paper curls downward, fan the stack of paper and fix the curl, then turn the paper over and put it back. If the printer or multi-function device has a paper curl correction function, correct the paper curl to make the paper flat or curl upward. For details about correcting the paper curl, see the manuals provided with the printer or multi-function device.
- When removing the output paper, make sure the auxiliary tray for thin coated paper remains in its set position.

