

SR760 (B352)

SR760 (B352)

PARTS CATALOG

This catalog gives the numbers and names of parts on this machine.

 
CONTENTS

LOCATION OF UNIT	2	18.MAIN CONTROL BOARD (B352)	40
1.EXTERIOR 1 (B352)	6	19.DECAL AND DOCUMENT (B352)	44
2.EXTERIOR 2 (B352)	8	Parts Index	47
3.PUNCH FRAME (B352)	10		
4.PAPER TRANSFER 1 (B352)	12		
5.PAPER TRANSFER 2 (B352)	14		
6.PAPER TRANSFER 3 (B352)	16		
7.STAPLE TRAY 1 (B352)	18		
8.STAPLE TRAY 2 (B352)	20		
9.STAPLE UNIT (B352)	22		
10.UPPER PAPER EXIT 1 (B352)	24		
11.UPPER PAPER EXIT 2 (B352)	26		
12.UPPER PAPER EXIT 3 (B352)	28		
13.LOWER PAPER EXIT (B352)	30		
14.SHIFT DRIVE 1 (B352)	32		
15.SHIFT DRIVE 2 (B352)	34		
16.DRIVE SECTION (B352)	36		
17.ELECTRICAL SECTION (B352)	38		

February ,5 ' 2001


LOCATIONS OF UNITS

1. EXTERIOR 1 (B352)

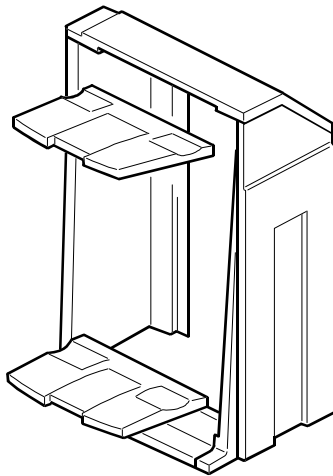


See Page 7

 2. EXTERIOR 2 (B352)

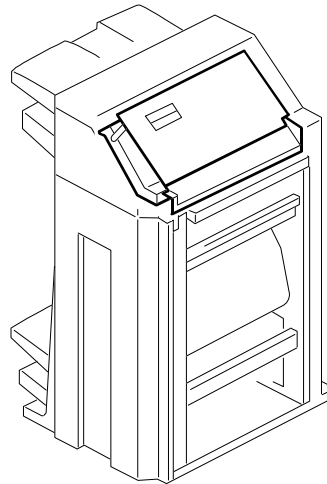


See Page 9

 3. PUNCH FRAME (B352)

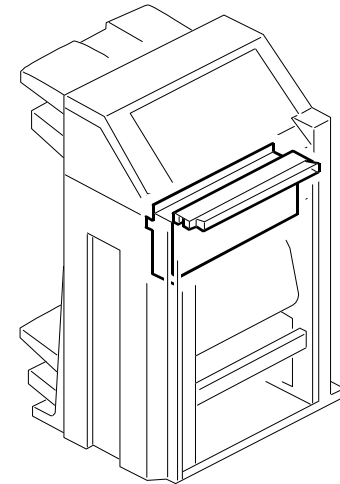


See Page 11

 4. PAPER TRANSFER 1 (B352)

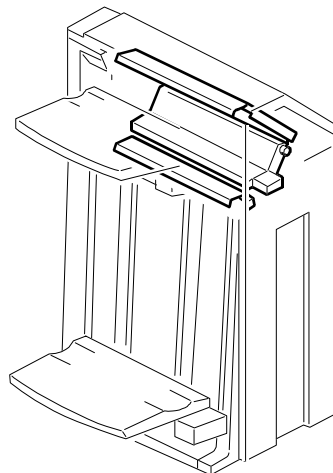


See Page 13

 5. PAPER TRANSFER 2 (B352)

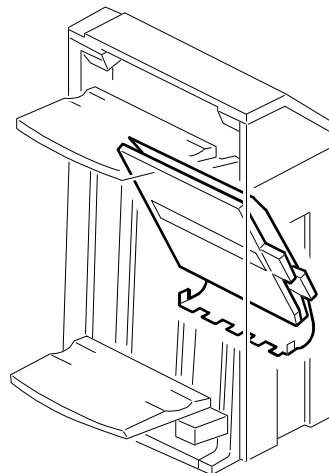

See Page 15

 
6. PAPER TRANSFER 3 (B352)

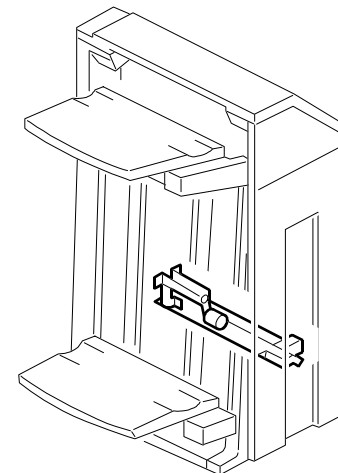

See Page 17


LOCATIONS OF UNITS

 7. STAPLE TRAY 1 (B352)

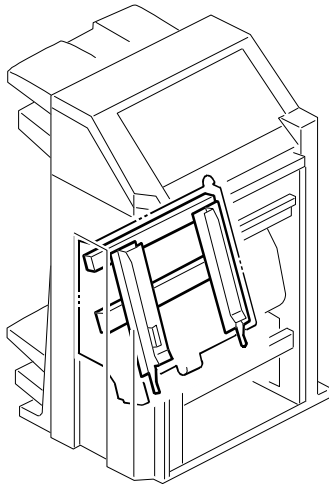


See Page 19

 8. STAPLE TRAY 2 (B352)

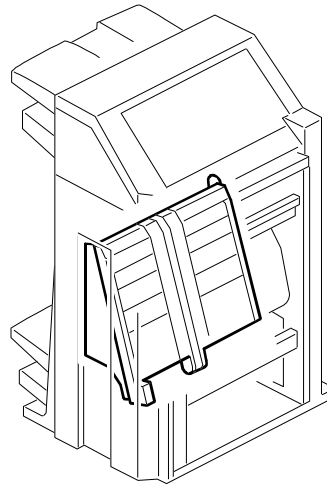


See Page 21

 9. STAPLE UNIT (B352)

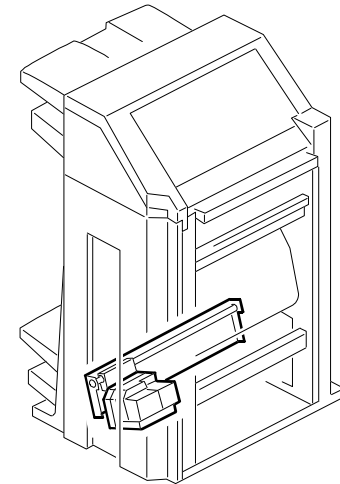


See Page 23

 10. UPPER PAPER EXIT 1 (B352)

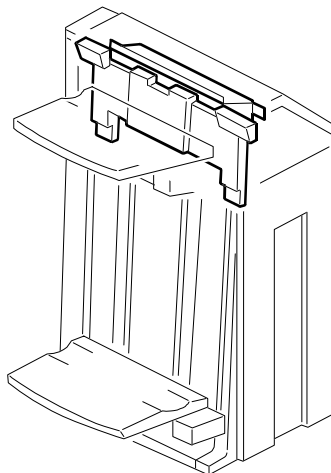


See Page 25

 11. UPPER PAPER EXIT 2 (B352)

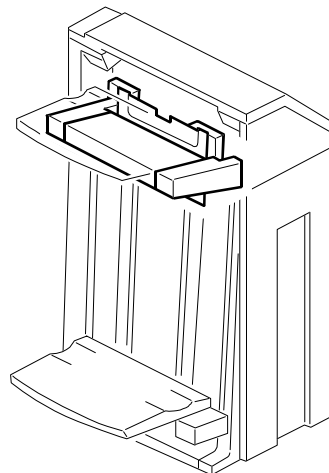

See Page 27

 
12. UPPER PAPER EXIT 3 (B352)

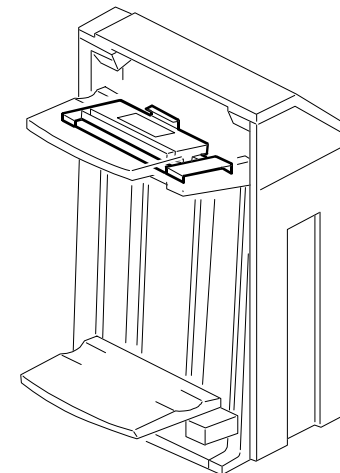

See Page 29


LOCATIONS OF UNITS

 13. LOWER PAPER EXIT (B352)

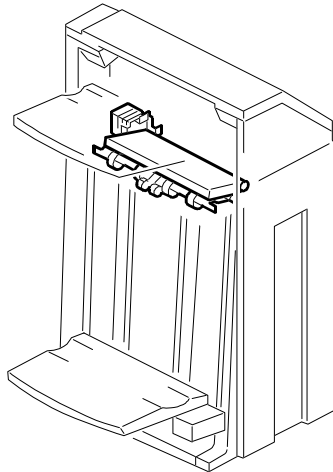


See Page 31

 14. SHIFT DRIVE 1 (B352)

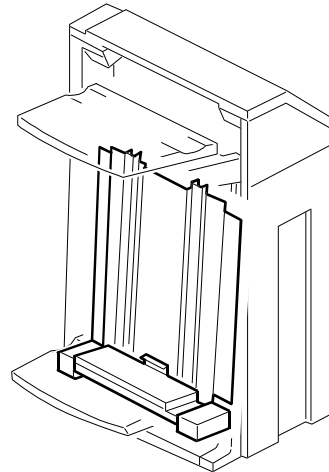


See Page 33

 15. SHIFT DRIVE 2 (B352)

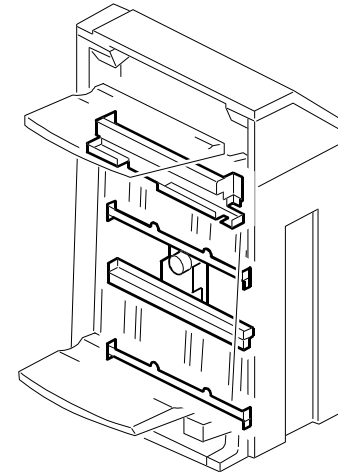


See Page 35

 16. DRIVE SECTION (B352)

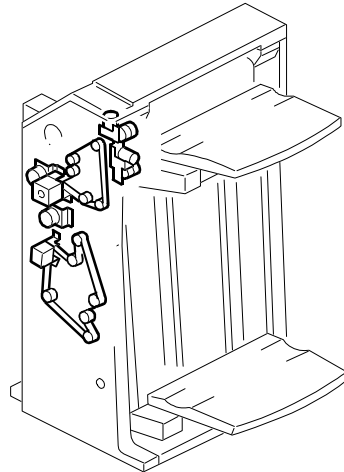


See Page 37

 17. ELECTRICAL SECTION (B352)

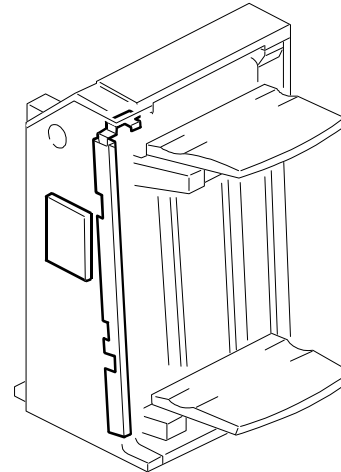

See Page 39

 1.EXTERIOR 1 (B352)

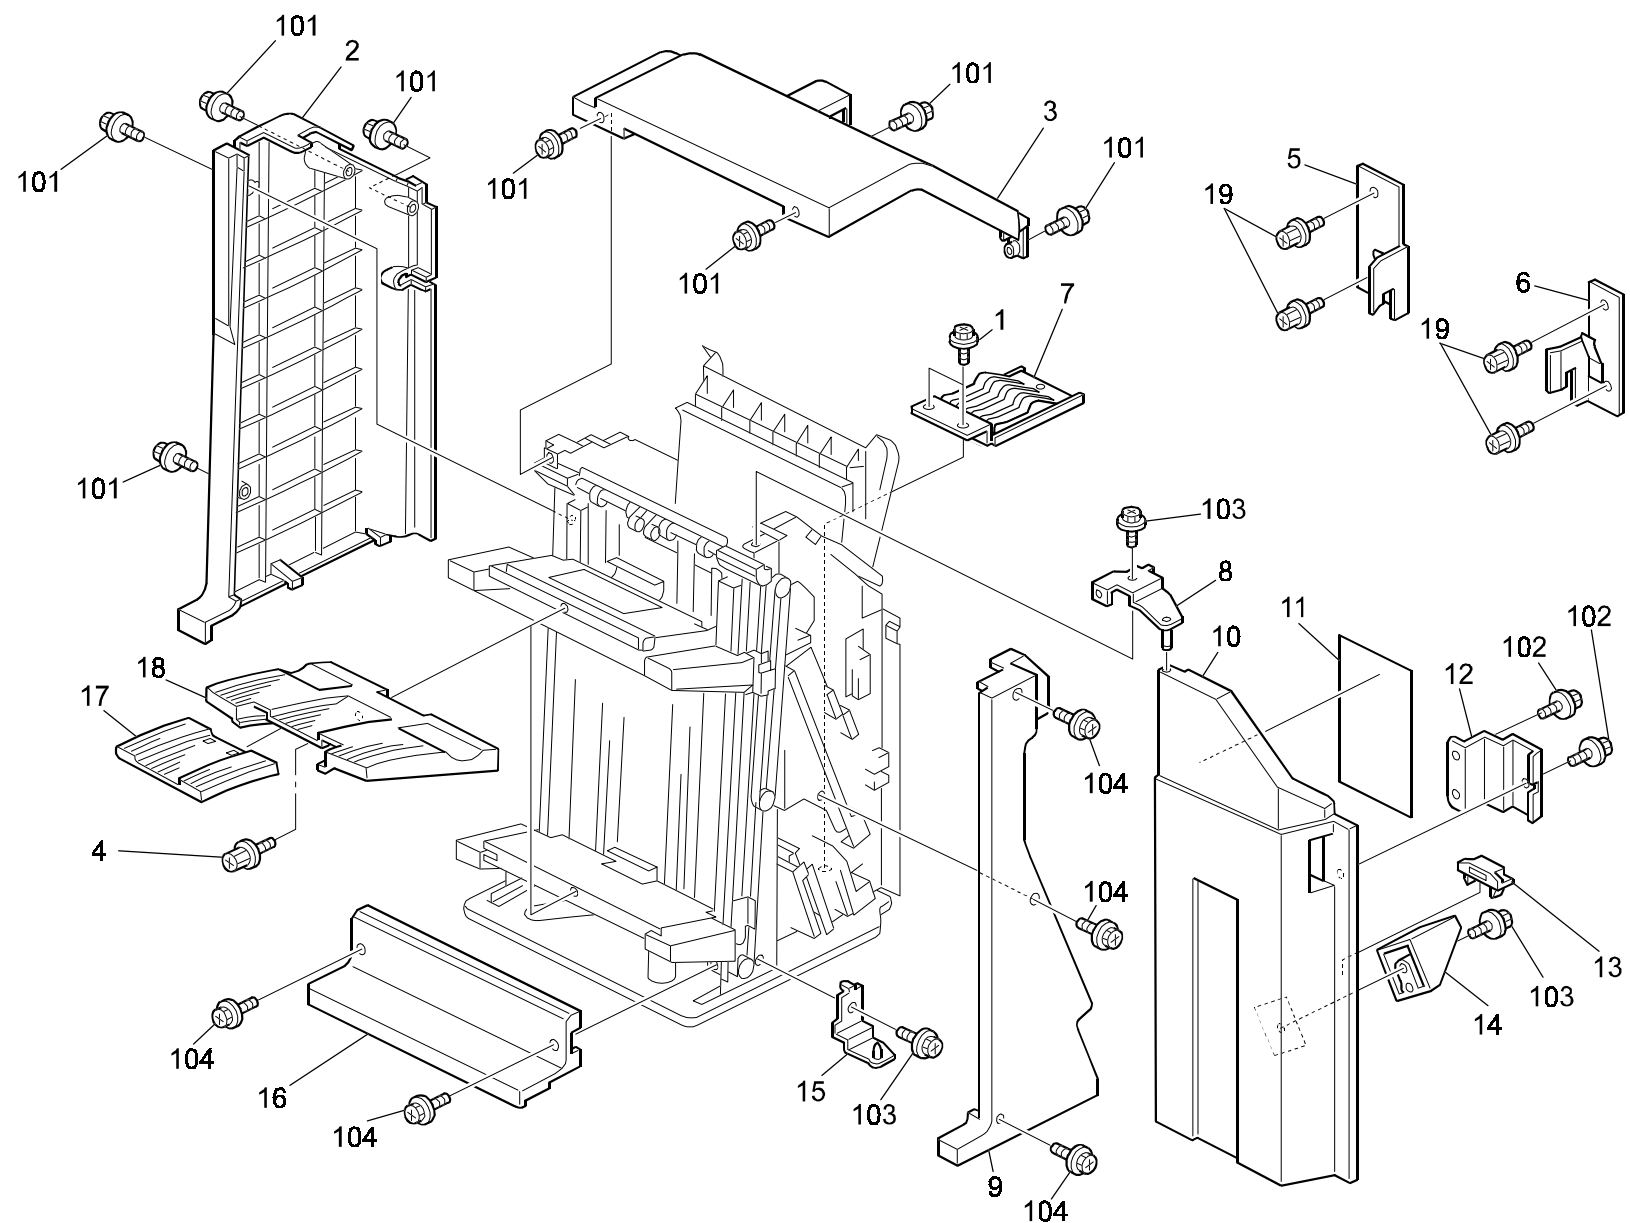


1.EXTERIOR 1 (B352)

Index No.	Part No.	Description	Q'ty Per Assembly
1	G034 2986	Flanged Hexagonal Head Bolt - M4x8	2
2	B352 6301	Rear Cover	1
3	B352 6101	Upper Cover	1
4	G034 2993	Flanged Hexagonal Head Bolt - M3x6	2
5	A697 1144	Rear Joint Bracket	1
6	A697 1153	Front Joint Bracket	1
7	B352 1160	Grounding Plate Bracket	1
8	B352 6203	Upper Hinge - Front Door	1
9	B352 6501	Inner Cover	1
10	B352 6201	Front Cover	1
11	B352 7351	Decal - Misfeed Removal	1
12	B352 6202	Grip Cover	1
13	G020 2630	Magnetic Catch	1
14	A606 1595	Small Door Cover	1
15	B352 6206	Lower Hinge - Front Door	1
16	B352 6451	Lower Left Cover	1
17	B352 3921	Sub - Shift Tray	1
18	B352 3911	Shift Tray	1
19	G522 1152	Flanged Hexagonal Head Bolt	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0802 5277	Tapping Screw	
102	0450 3008B	Tapping Screw - M3x8	
103	0451 3006B	Tapping Screw - M3x6	
104	0451 3008H	Tapping Screw - M3x8	
105	0802 5276	Tapping Screw With Washer - M3x6	

 2.EXTERIOR 2 (B352)

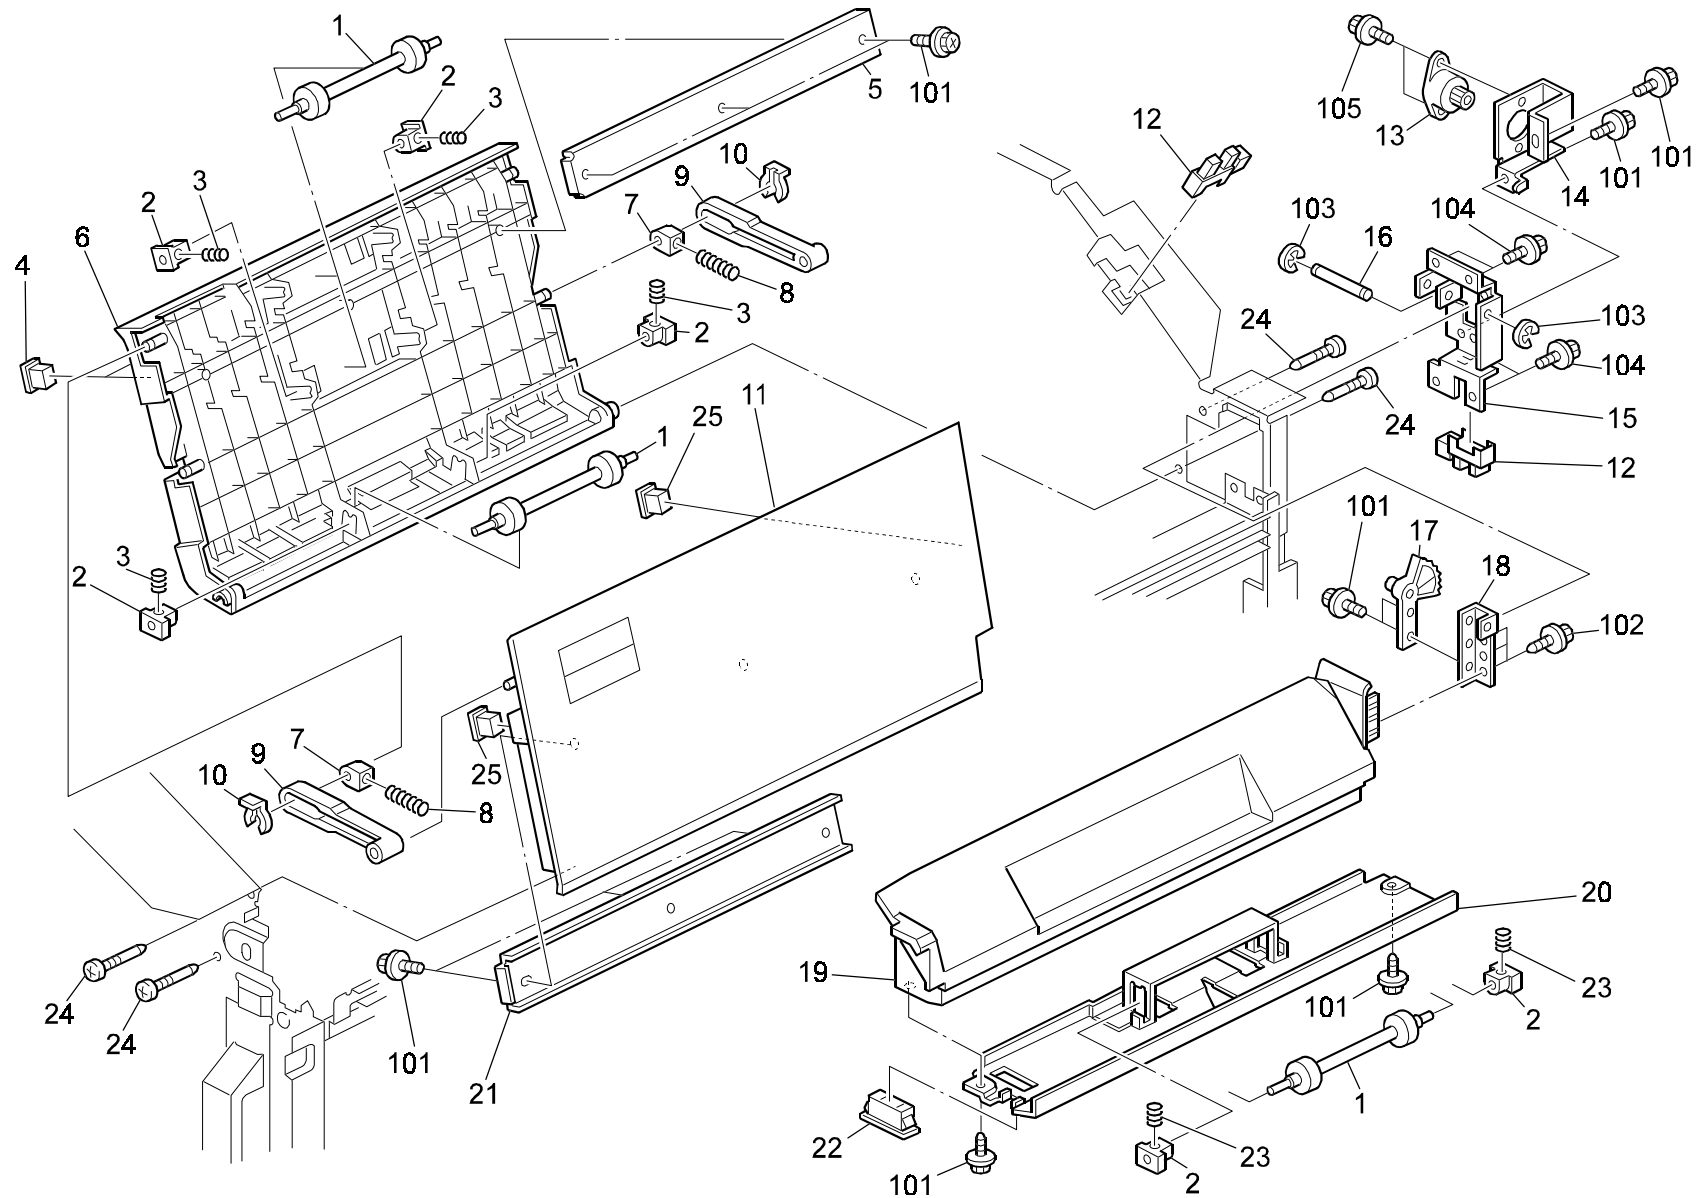


2.EXTERIOR 2 (B352)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B352 2204	Driven Roller	4
2	B352 2205	Bushing - Driven Roller	8
3	AA06 3529	Pressure Spring - 14.5mm	8
4	A049 3371	Magnet	2
5	A612 2435	Support Plate	1
6	B352 2111	Guide Plate - Transport Cover	1
7	B352 2113	Link Spacer	2
8	B352 2114	Pressure Spring	2
9	B352 2112	Link - Transport Cover	2
10	5447 2681	Snap Ring	2
11	B352 2115	Transport Cover	1
12	AW02 0086	Photointerruptor	2
13	B352 2140	Oil Damper	1
14	B352 2137	Bracket - Oil Damper	1
15	B352 2139	Bracket - Transport Cover	1
16	B352 2136	Oil Damper Shaft	1
17	B352 2135	Sector Gear - Transport Cover	1
18	B352 2138	Bracket - Entrance Cover	1
19	B352 2100	Entrance Cover	1
20	B352 2101	Guide Plate - Entrance Cover	1
21	B352 2145	Support Plate - Trnasport Cover	1
22	A680 1181	Magnetic Catch	1
23	B352 3656	Compression Spring	2
24	5446 2824	Screw - Duplex Guide Plate	4
25	B352 2650	Magnet Catch - 5N	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0450 3008B	Tapping Screw - M3x8	
102	0450 3010B	Tapping Screw - M3x10	
103	0720 0040B	Retaining Ring - M4	
104	0802 5276	Tapping Screw With Washer - M3x6	
105	0451 4006B	Tapping Screw - 4x6	

 3.PUNCH FRAME (B352)

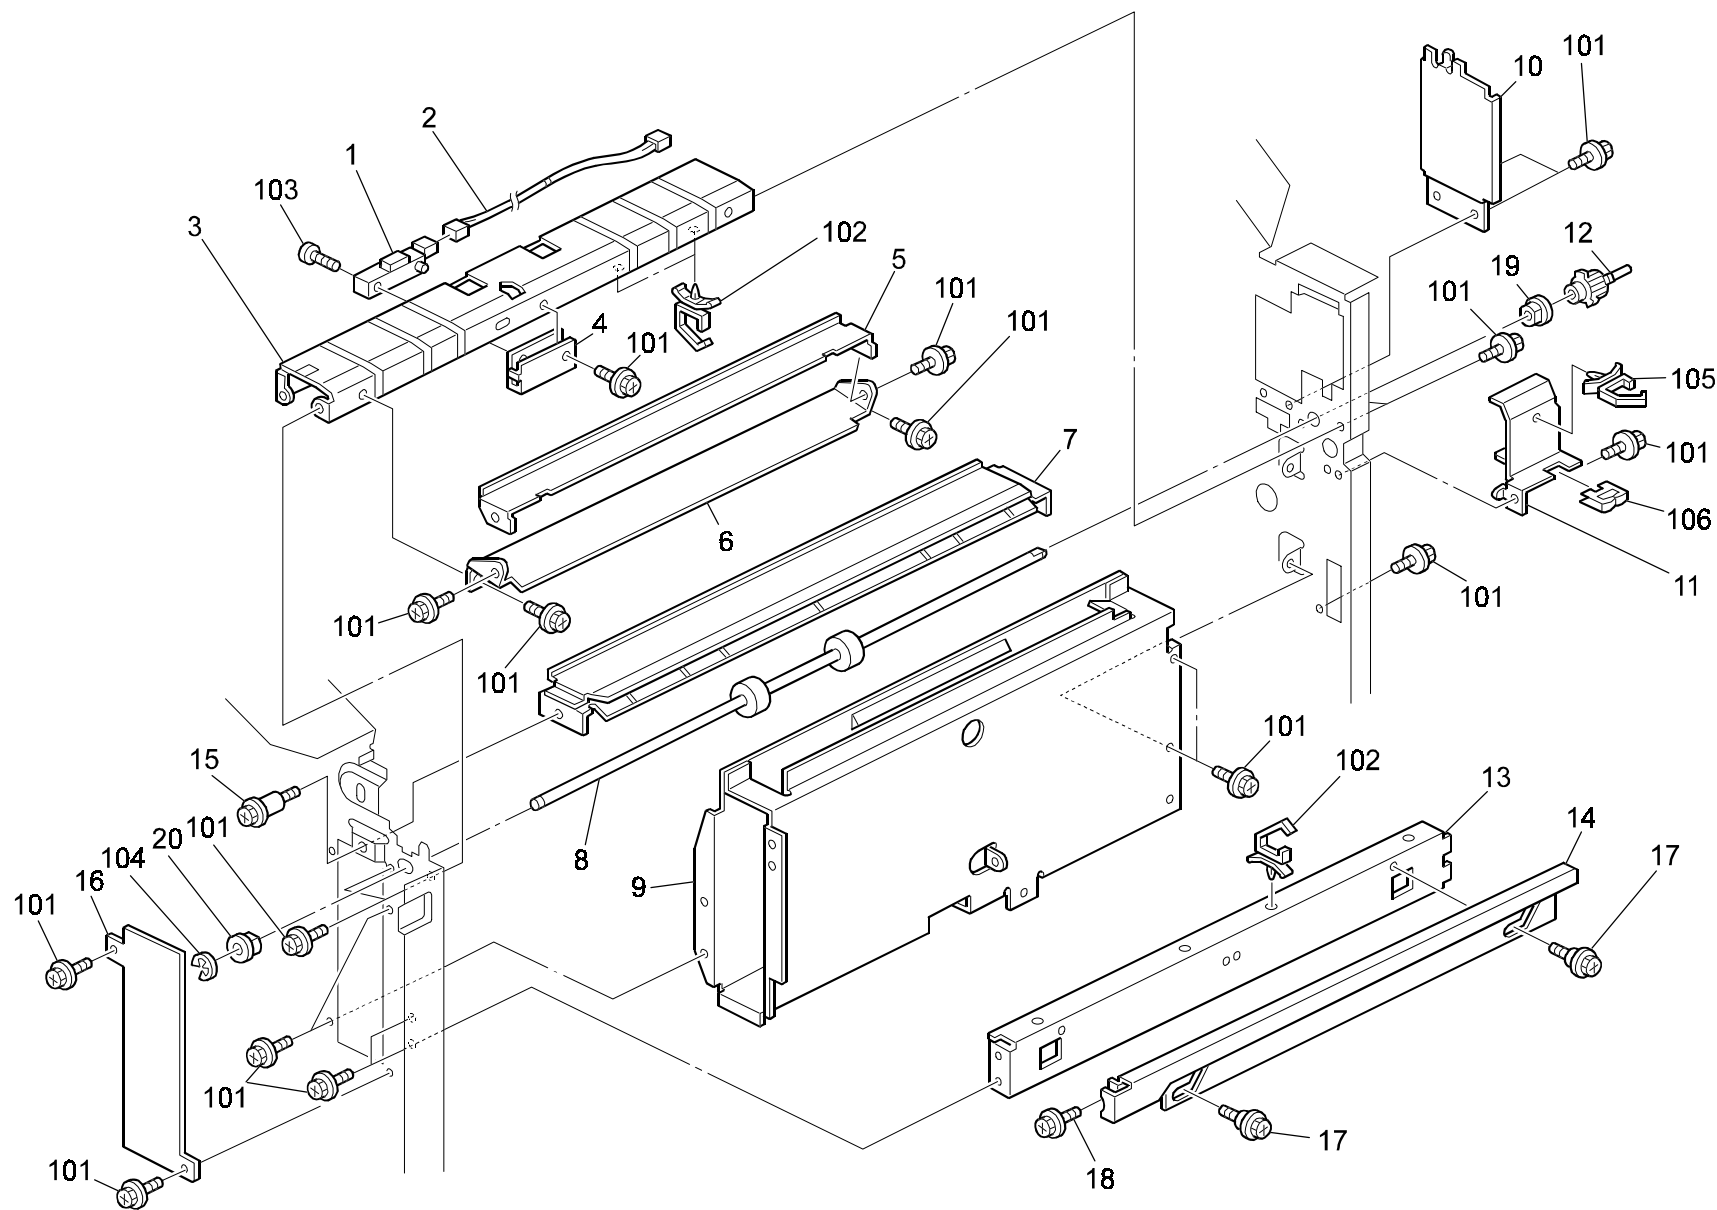


3.PUNCH FRAME (B352)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AW01 0089	Photosensor - GP2A28C	1
2	B352 5322	Sensor Relay Harness - 240mm	1
3	A697 2150	Lower Entrance Guide	1
4	A697 2145	Entrance Sensor Bracket	1
5	B352 2251	Upper Relay Guide	1
6	A697 2250	Lower Relay Guide	1
7	B352 2500	Support Guide - Punch Unit	1
8	B352 2620	Lower Transport Roller	1
9	A697 1151	Hopper Bracket	1
10	B352 2506	Rear Cover - Punch Unit	1
11	B352 1135	Bracket - Harness Clamp	1
12	B352 1602	Timing Pulley - T20-S2M	1
13	A697 1100	Right Stay	1
14	A697 1128	Joint Lever	1
15	B352 7507	Screw - Punch	1
16	B352 2505	Front Cover - Hopper	1
17	A697 1125	Stepped Screw - Lever	2
18	G034 2993	Flanged Hexagonal Head Bolt - M3x6	1
19	AA08 0238	Bushing - M6	1
20	5053 0447	Bushing - 6mm	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006B	Tapping Screw - M3x6	
102	1105 0511	Harness Clamp - LWS-0306ZC	
103	0313 0120B	Philips Pan Head Screw - M3x12	
104	0720 0040B	Retaining Ring - M4	
105	1105 0310	Harness Clamp - LWS-1S	
106	1105 0329	Clamp - ES-0510	

 4.PAPER TRANSFER 1 (B352)

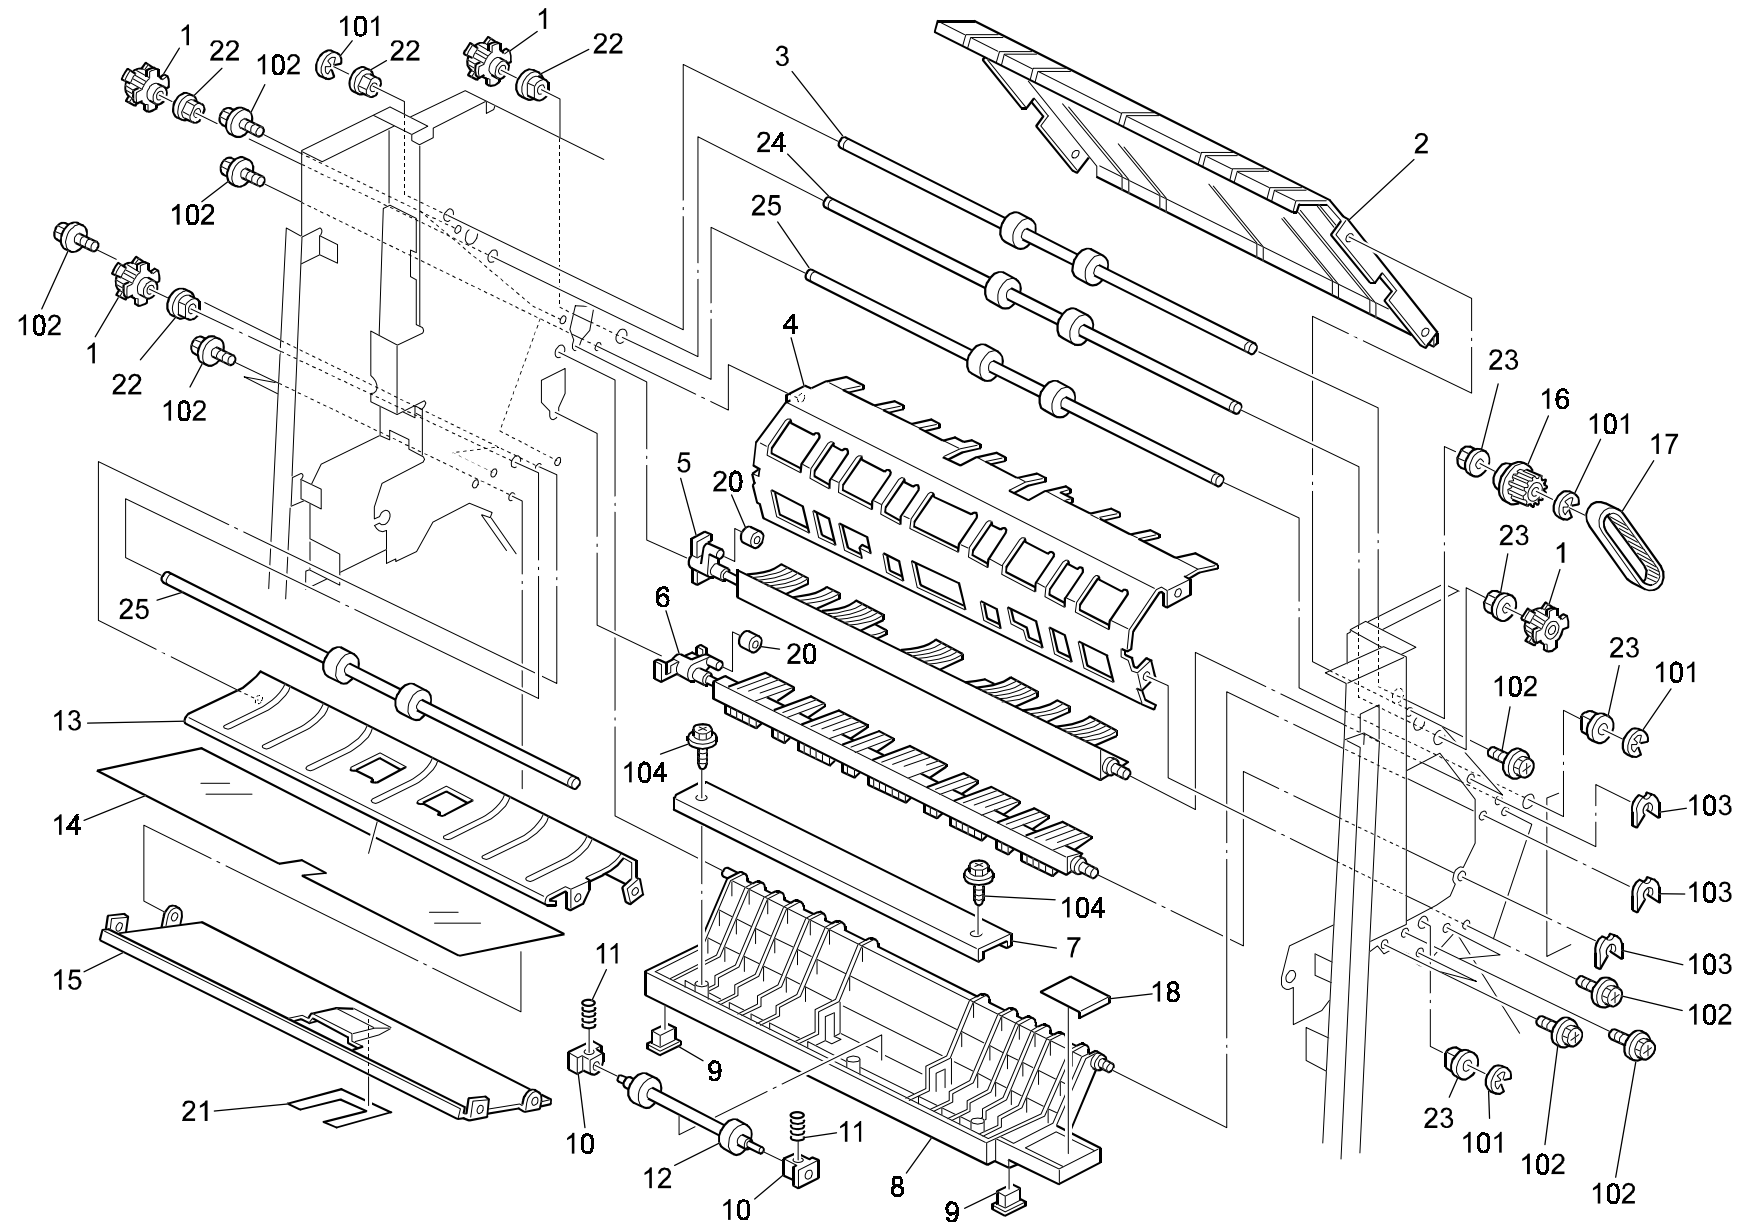


4.PAPER TRANSFER 1 (B352)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B352 1607	Timing Pulley - T20-S3M	4
2	B352 2110	Upper Guide Plate	1
3	B312 2176	Transport Roller	1
4	B352 2425	Lower Turn Guide Plate	1
5	A697 2245	Junction Gate - Proof Tray	1
6	B352 2440	Junction Gate - Stapler Tray	1
7	B352 2450	Support Plate - Guide Plate	1
8	B352 2420	Guide Plate - Shift Tray	1
9	B352 2650	Magnet Catch - 5N	1
10	B352 2205	Bushing - Driven Roller	2
11	AA06 3529	Pressure Spring - 14.5mm	1
12	B352 2204	Driven Roller	1
13	B352 2430	Guide Plate - Turn Gate	1
14	B352 2431	Sheet - Guide Plate	1
15	B352 2217	Exit Guide Plate	1
16	B352 1606	Timing Pulley - T20-S3M	1
17	B352 1605	Timing Belt - B40S3M216	1
18	B352 7101	Decal - R1	1
20	A458 2251	Cushion - Bin Solenoid Lever	2
21	B352 2235	Mylar - Exit Guide	1
22	AA08 0238	Bushing - M6	4
23	5053 0447	Bushing - 6mm	4
24	B352 2600	Upper Transport Roller	1
25	B352 2610	Shift Transport Roller	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0720 0040B	Retaining Ring - M4	
102	0451 3006B	Tapping Screw - M3x6	
103	0805 0089	Retaining Ring - M4	
104	0450 3008B	Tapping Screw - M3x8	

 5.PAPER TRANSFER 2 (B352)

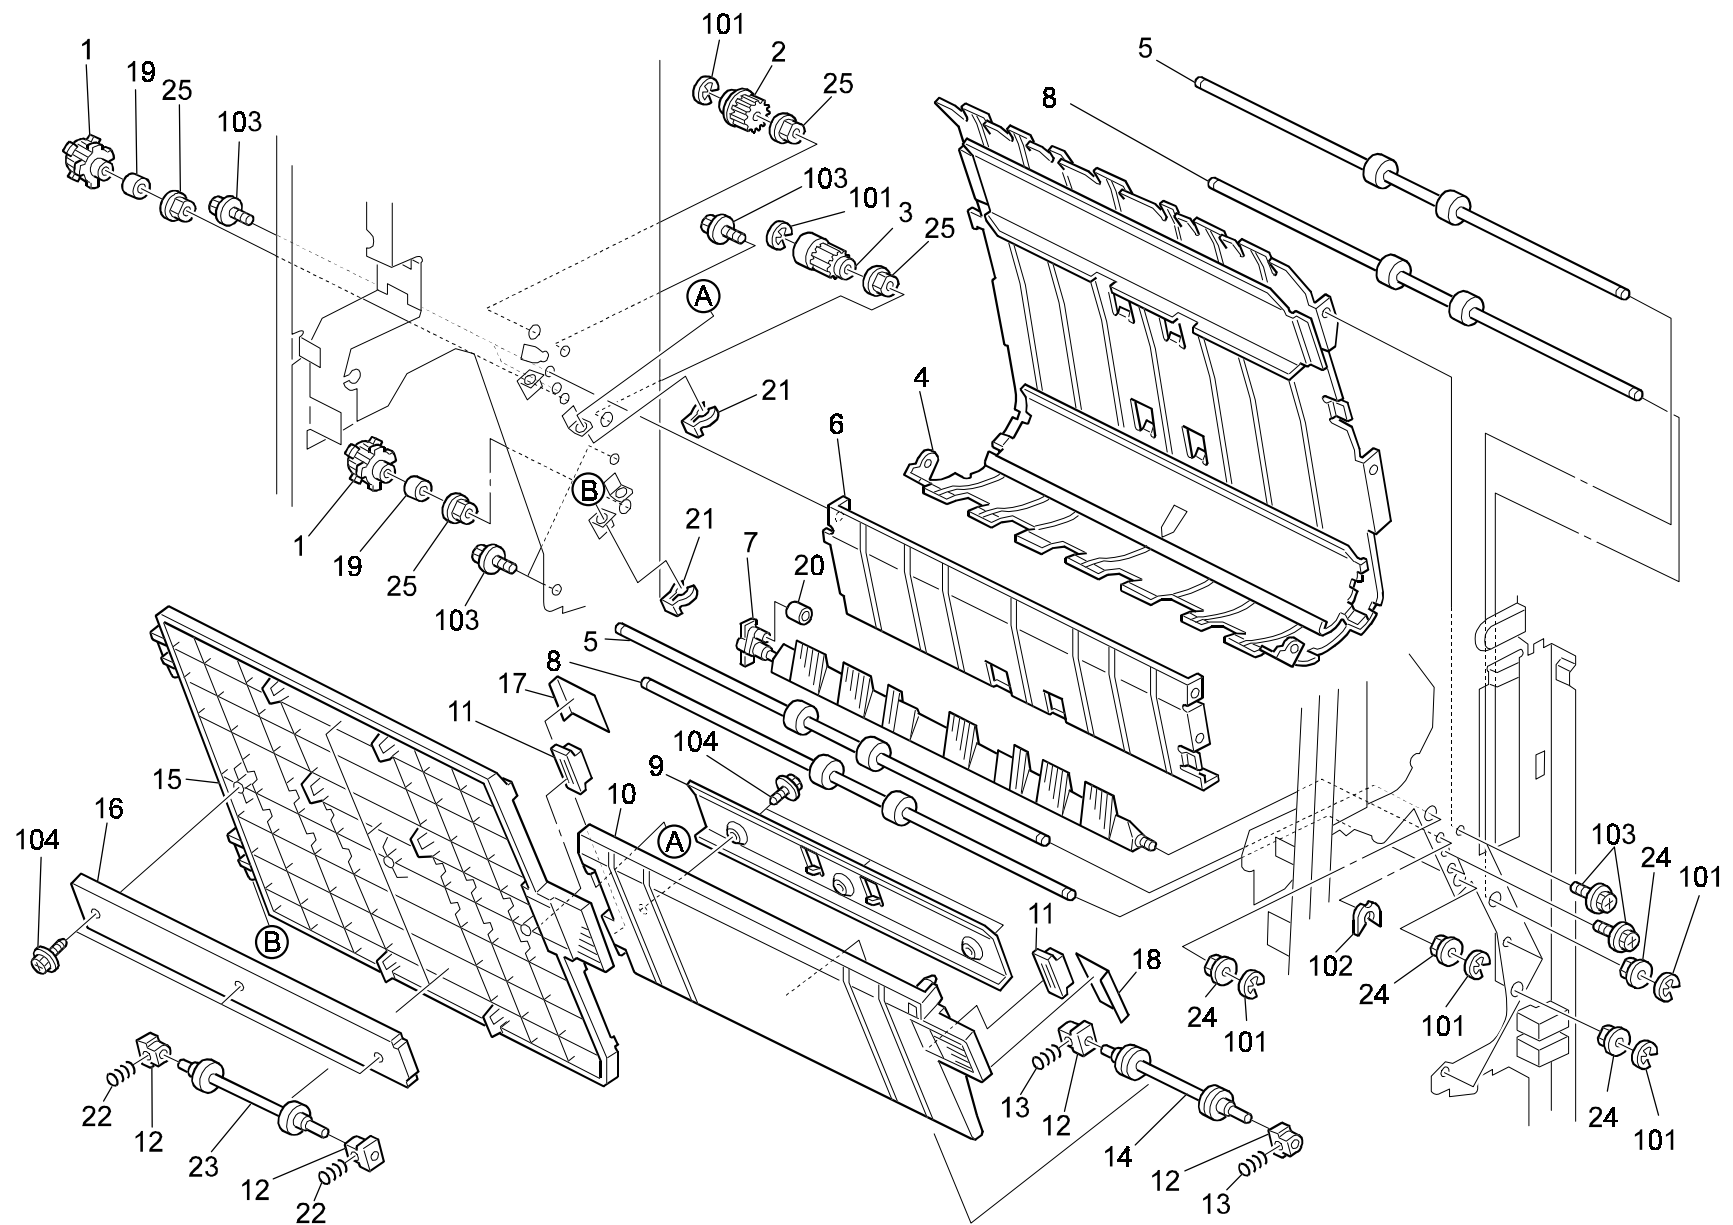


5.PAPER TRANSFER 2 (B352)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B352 1607	Timing Pulley - T20-S3M	3
2	B352 1606	Timing Pulley - T20-S3M	1
3	B312 1521	Timing Pulley - 20T	1
4	B352 2210	Vertical Transport Guide	1
5	B312 2176	Transport Roller	2
6	B312 2166	Vertical Guide	1
7	B312 2100	Pre-stack Gate	1
8	B352 2620	Lower Transport Roller	2
9	B312 2173	Support Plate	1
10	B312 2171	Middle Guide - Vertical Transport	1
11	AG07 1010	Magnet Catch	2
12	B352 2205	Bushing - Driven Roller	8
13	B312 2174	Pressure Spring - 12mm	2
14	B312 2172	Driven Roller	1
15	B312 2151	Left Guide - Vertical Transport	1
16	A612 2435	Support Plate	1
17	B352 7151	Decal - R2	1
18	B352 7201	Decal - R3	1
19	A376 1295	Spacer - M6x10x5	1
20	A458 2251	Cushion - Bin Solenoid Lever	1
21	5447 2681	Snap Ring	2
22	AA06 3529	Pressure Spring - 14.5mm	6
23	B352 2204	Driven Roller	3
24	5053 0447	Bushing - 6mm	4
25	AA08 0238	Bushing - M6	1


Index No.	Part No.	Description	Q'ty Per Assembly
101	0720 0040B	Retaining Ring - M4	
102	0805 0089	Retaining Ring - M4	
103	0451 4006B	Tapping Screw - 4x6	
104	0452 3008B	Tapping Screw - M3x8	

 6.PAPER TRANSFER 3 (B352)

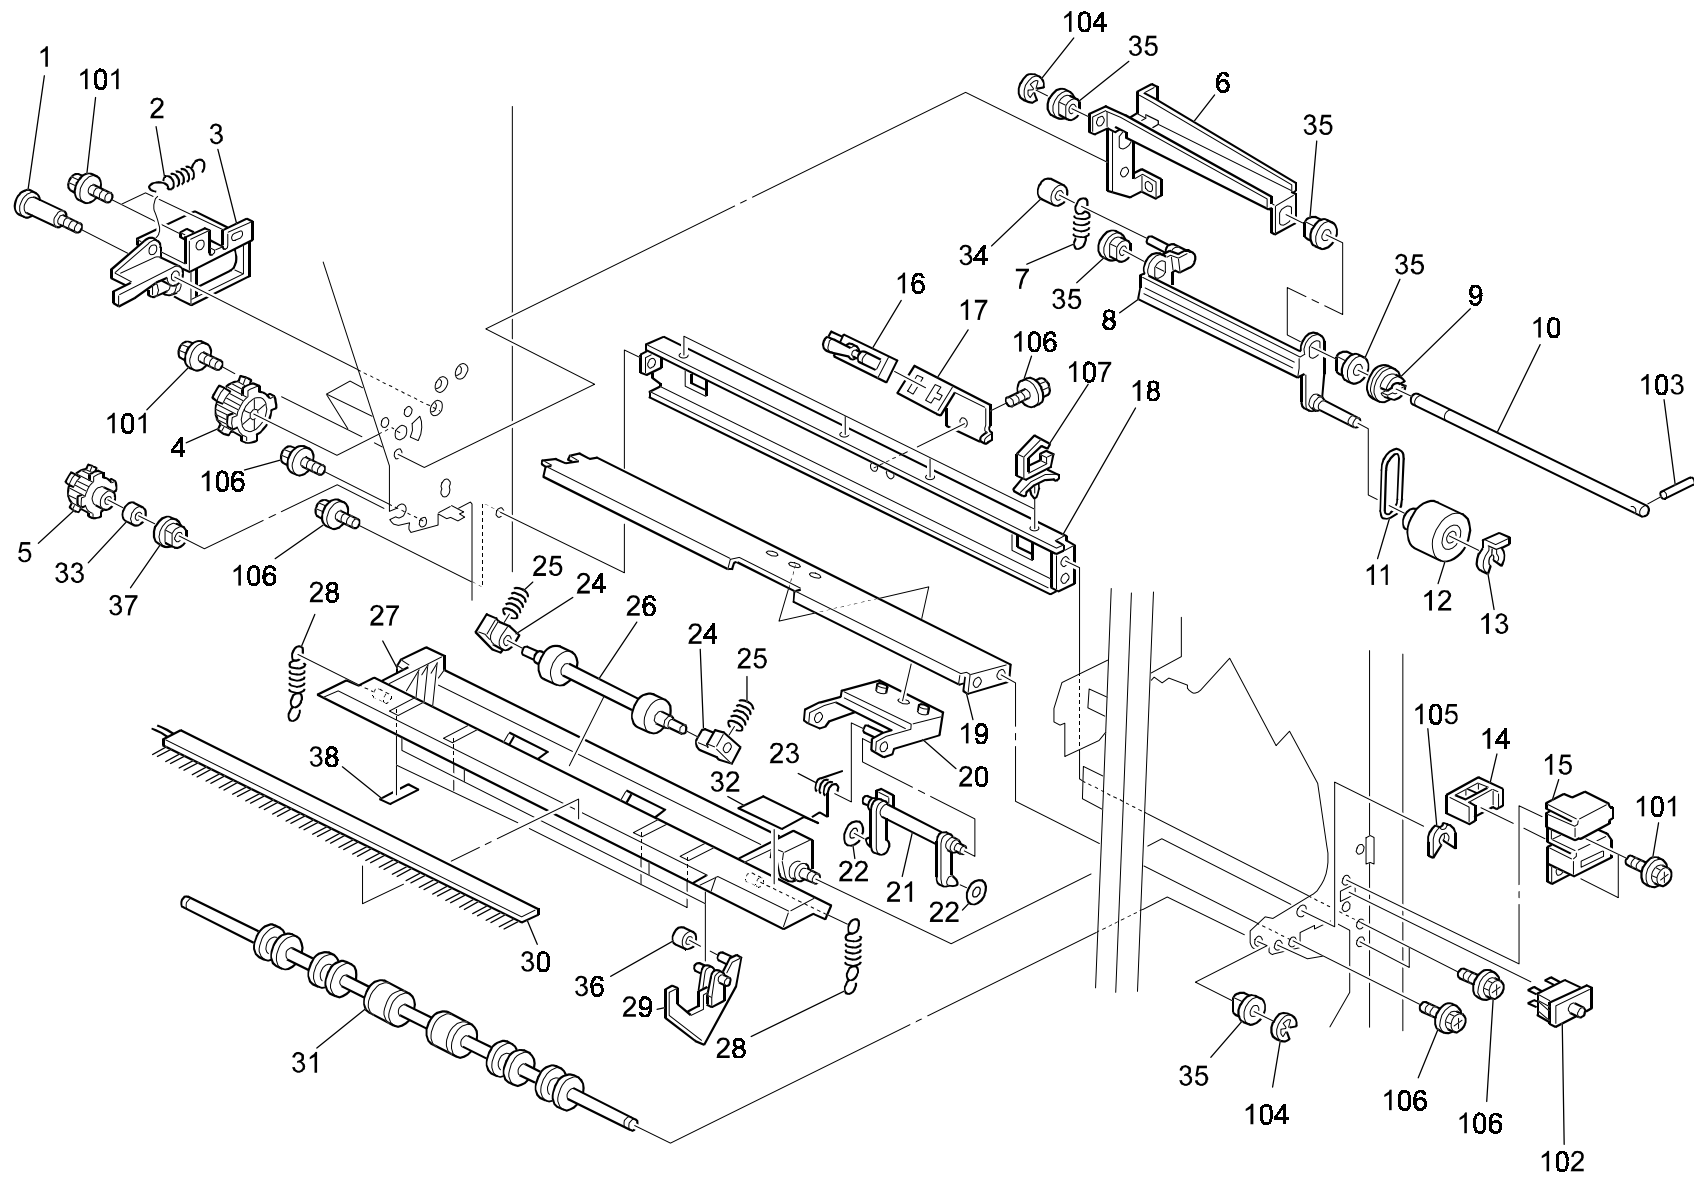



 7.STAPLE TRAY 1 (B352)

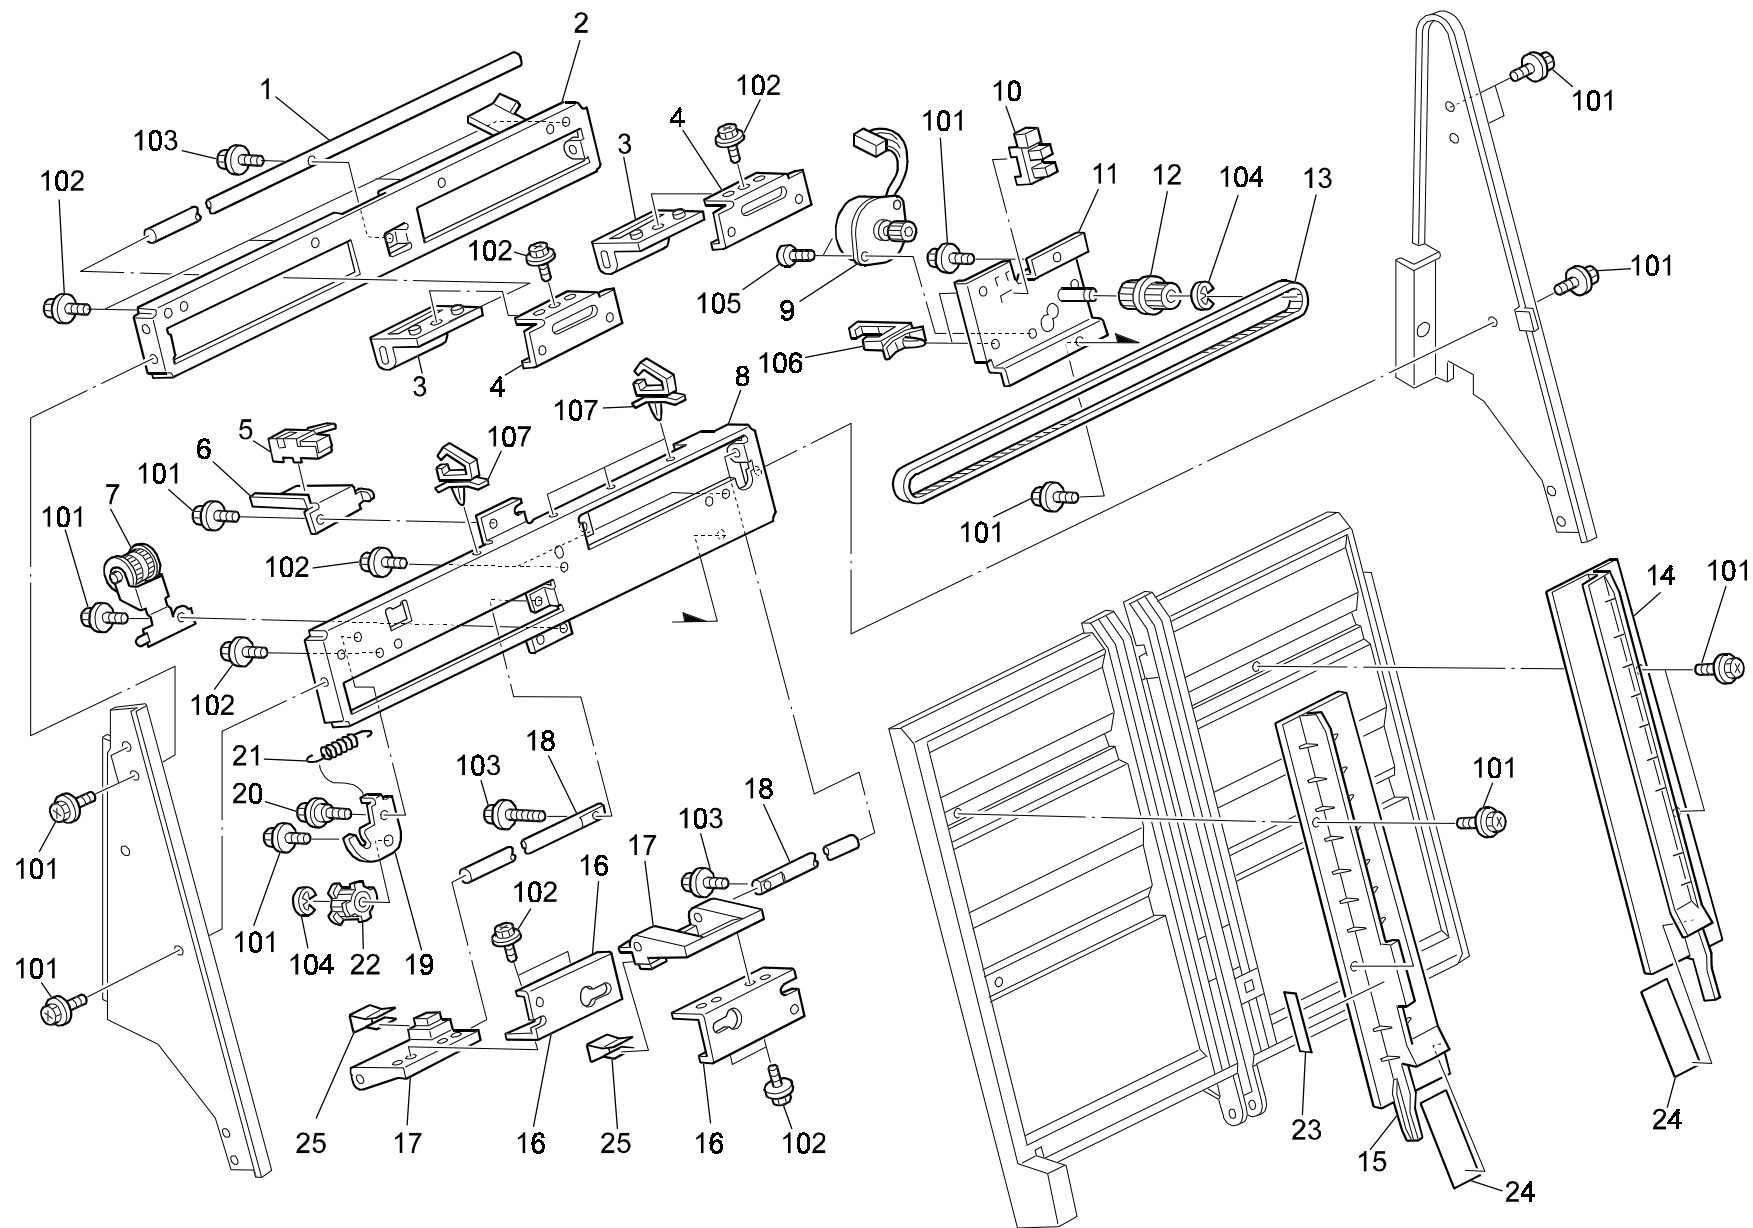


7.STAPLE TRAY 1 (B352)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B352 4215	Shaft - Jogger Fence	1
2	B352 4151	Upper Stay - Jogger Fence	1
3	B352 4152	Upper Slider - Jogger Fence	1
4	B352 4153	Upper Bracket - Jogger Fence	2
5	G020 4429	Exit Sensor	2
6	B352 4245	Bracket - Pull Out Sensor	1
7	B352 4261	Tightener - Exit Belt	1
8	B352 4161	Jogger Fence Stay	1
9	AX05 0160	Stepper Motor - MM42 0.85A	1
10	AW02 0086	Photointerruptor	1
11	B352 4171	Jogger Motor Bracket	1
12	B352 4175	Timing Pulley - Jogger Drive	1
13	B352 4185	Timing Belt - 940P2M4	1
14	B352 4141	Rear Jogger Fence	1
15	B352 4131	Front Jogger Fence	1
16	B352 4163	Jogger Fence Bracket	2
17	B352 4162	Jogger Fence Slider	2
18	B352 4165	Slider Shaft - Jogger Fence	2
19	B352 4181	Tightener	1
20	A697 1125	Stepped Screw - Lever	1
21	5442 4121	Spring - Oil Blade	1
22	A697 4170	Pulley - 32T	1
23	B352 7301	Decal - R5	1
24	B302 4629	Guide Mylar	2
25	A300 3634	Spring Plate - Timing Belt	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006B	Tapping Screw - M3x6	
102	0450 3008B	Tapping Screw - M3x8	
103	0451 3008B	Tapping Screw - M3x8	
104	0720 0040B	Retaining Ring - M4	
105	0453 3006B	Tapping Screw - M3x6	
106	1105 0310	Harness Clamp - LWS-1S	
107	1105 0511	Harness Clamp - LWS-0306ZC	

 8.STAPLE TRAY 2 (B352)

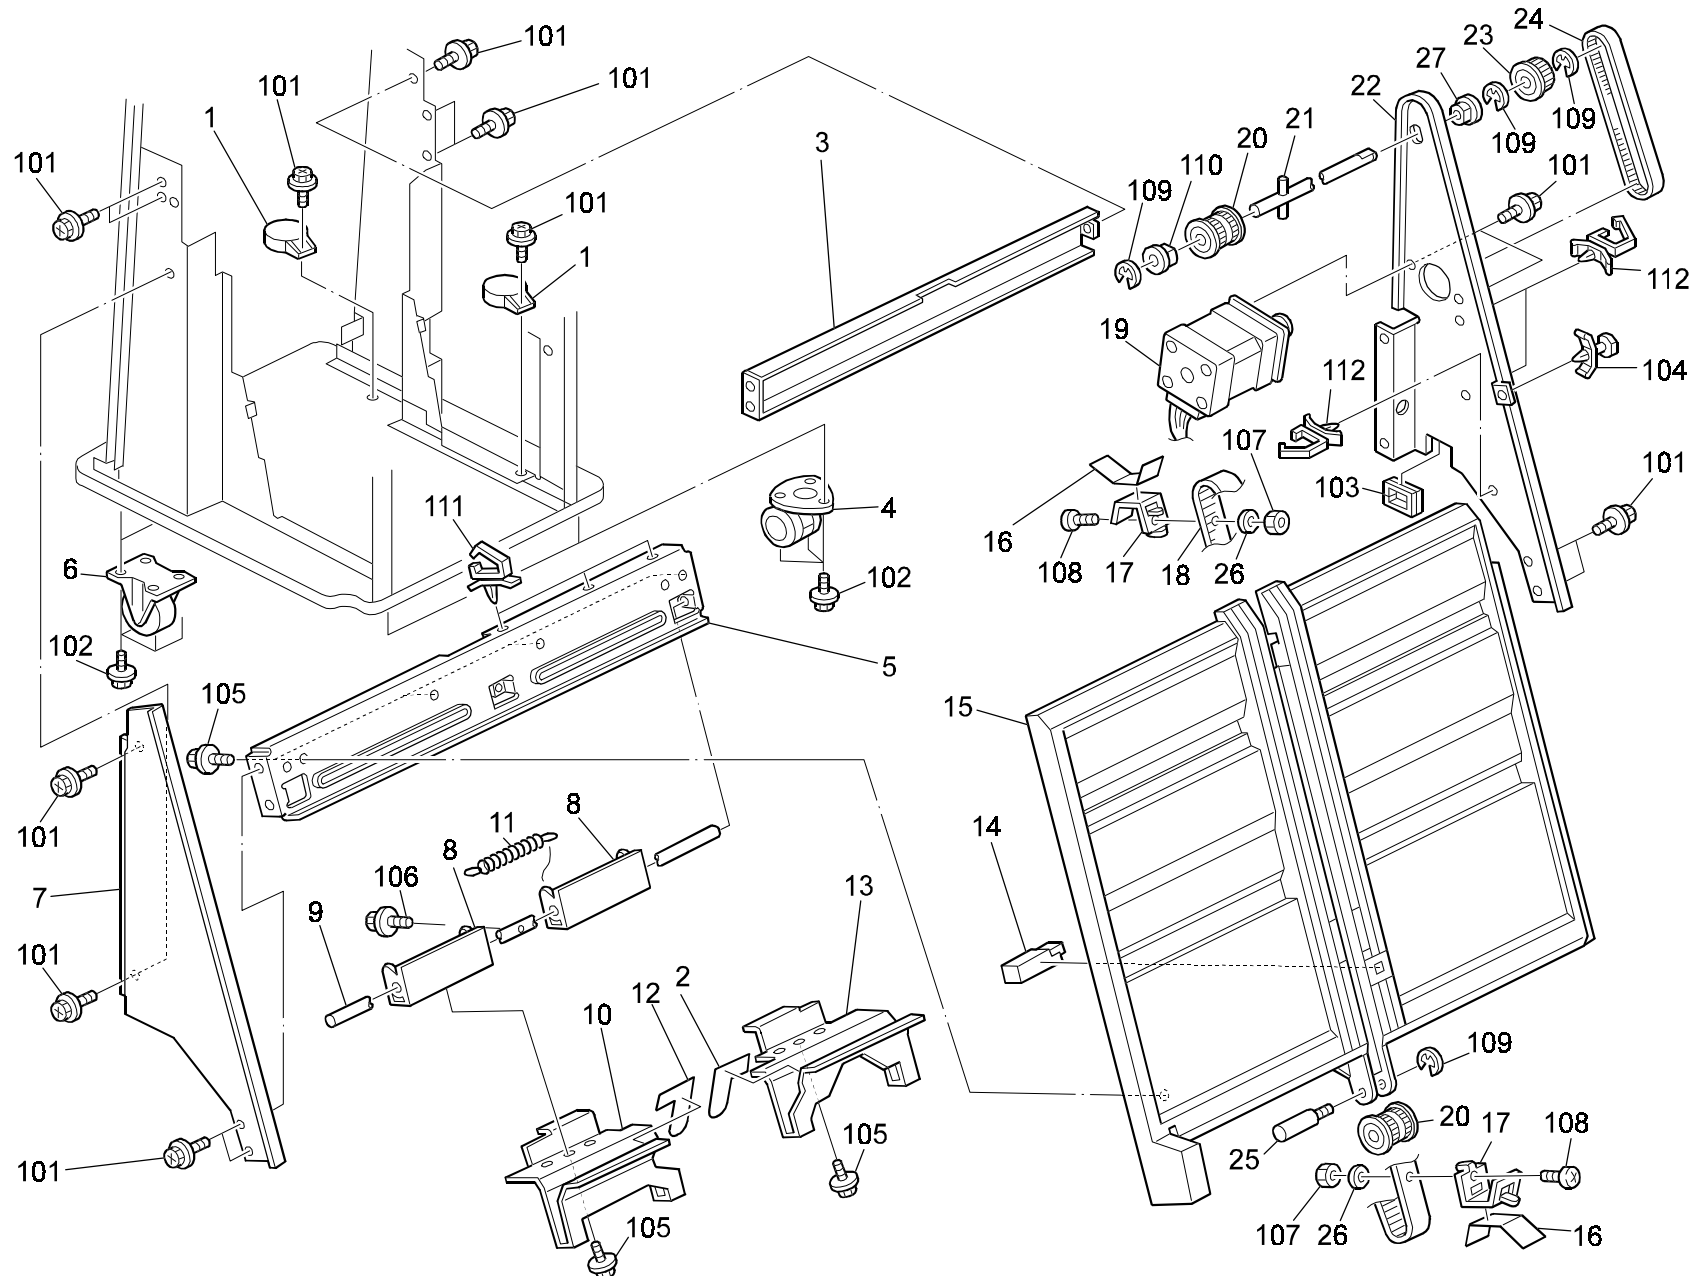


8.STAPLE TRAY 2 (B352)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A697 1117	Base Palte Cap	1
2	G565 4235	Rear Fence Guide	1
3	B352 1120	Stay - Stapler Tray	1
4	AH01 2019	Caster	1
5	B352 4211	Slider Fence Stay	1
6	B352 1130	Caster - M50 - 490n	1
7	B352 4111	Side Plate - Front Tray - Stapler	1
8	B352 4232	Slider - Training Edge Fence	2
9	B352 4215	Shaft - Jogger Fence	1
10	B352 4221	Front Training Edge Fence	1
11	A300 3759	Spring	1
12	G565 4234	Front Entrance Guide	2
13	B352 4231	Rear Training Edge Fence	1
14	AW01 0076	Photosensor - PS-117D1	1
15	B352 4100	Stapler Tray	1
16	B352 4237	Sheet - Pull Out Pawl	2
17	A697 4235	Paper Exit Pawl	2
18	B352 4242	Exit Belt-900p2m14	1
19	B312 4121	Stepping Motor	1
20	A666 3180	Timing Pulley - Z32	1
21	B352 4251	Upper Exit Shaft	1
22	B352 4121	Rear Side Plate - Stapler Tray	1
23	B312 4126	Pulley - 32T	1
24	B352 4255	Timing Belt - 258P2M4	1
25	A300 3813	Shaft - 6x21.5	1
26	A353 2763	Washer - M5	2
27	5053 0447	Bushing - 6mm	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006B	Tapping Screw - M3x6	
102	0451 4008B	Philips Tapping Screw - M4x8	
103	1105 0334	Edge - 17	
104	1105 0410	Card Spacer - 9.4mm	
105	0450 3008B	Tapping Screw - M3x8	
106	0451 3008B	Tapping Screw - M3x8	
107	0710 0020W	Hexagonal Nut - M2	
108	0242 0035B	Pan Head Screw - M2x3.5	
109	0720 0040B	Retaining Ring - M4	
110	0805 3385	Bushing - 6mm	
111	1105 0511	Harness Clamp - LWS-0306ZC	
112	1105 0291	Harness Clamp - LWS-3S	

 9.STAPLE UNIT (B352)

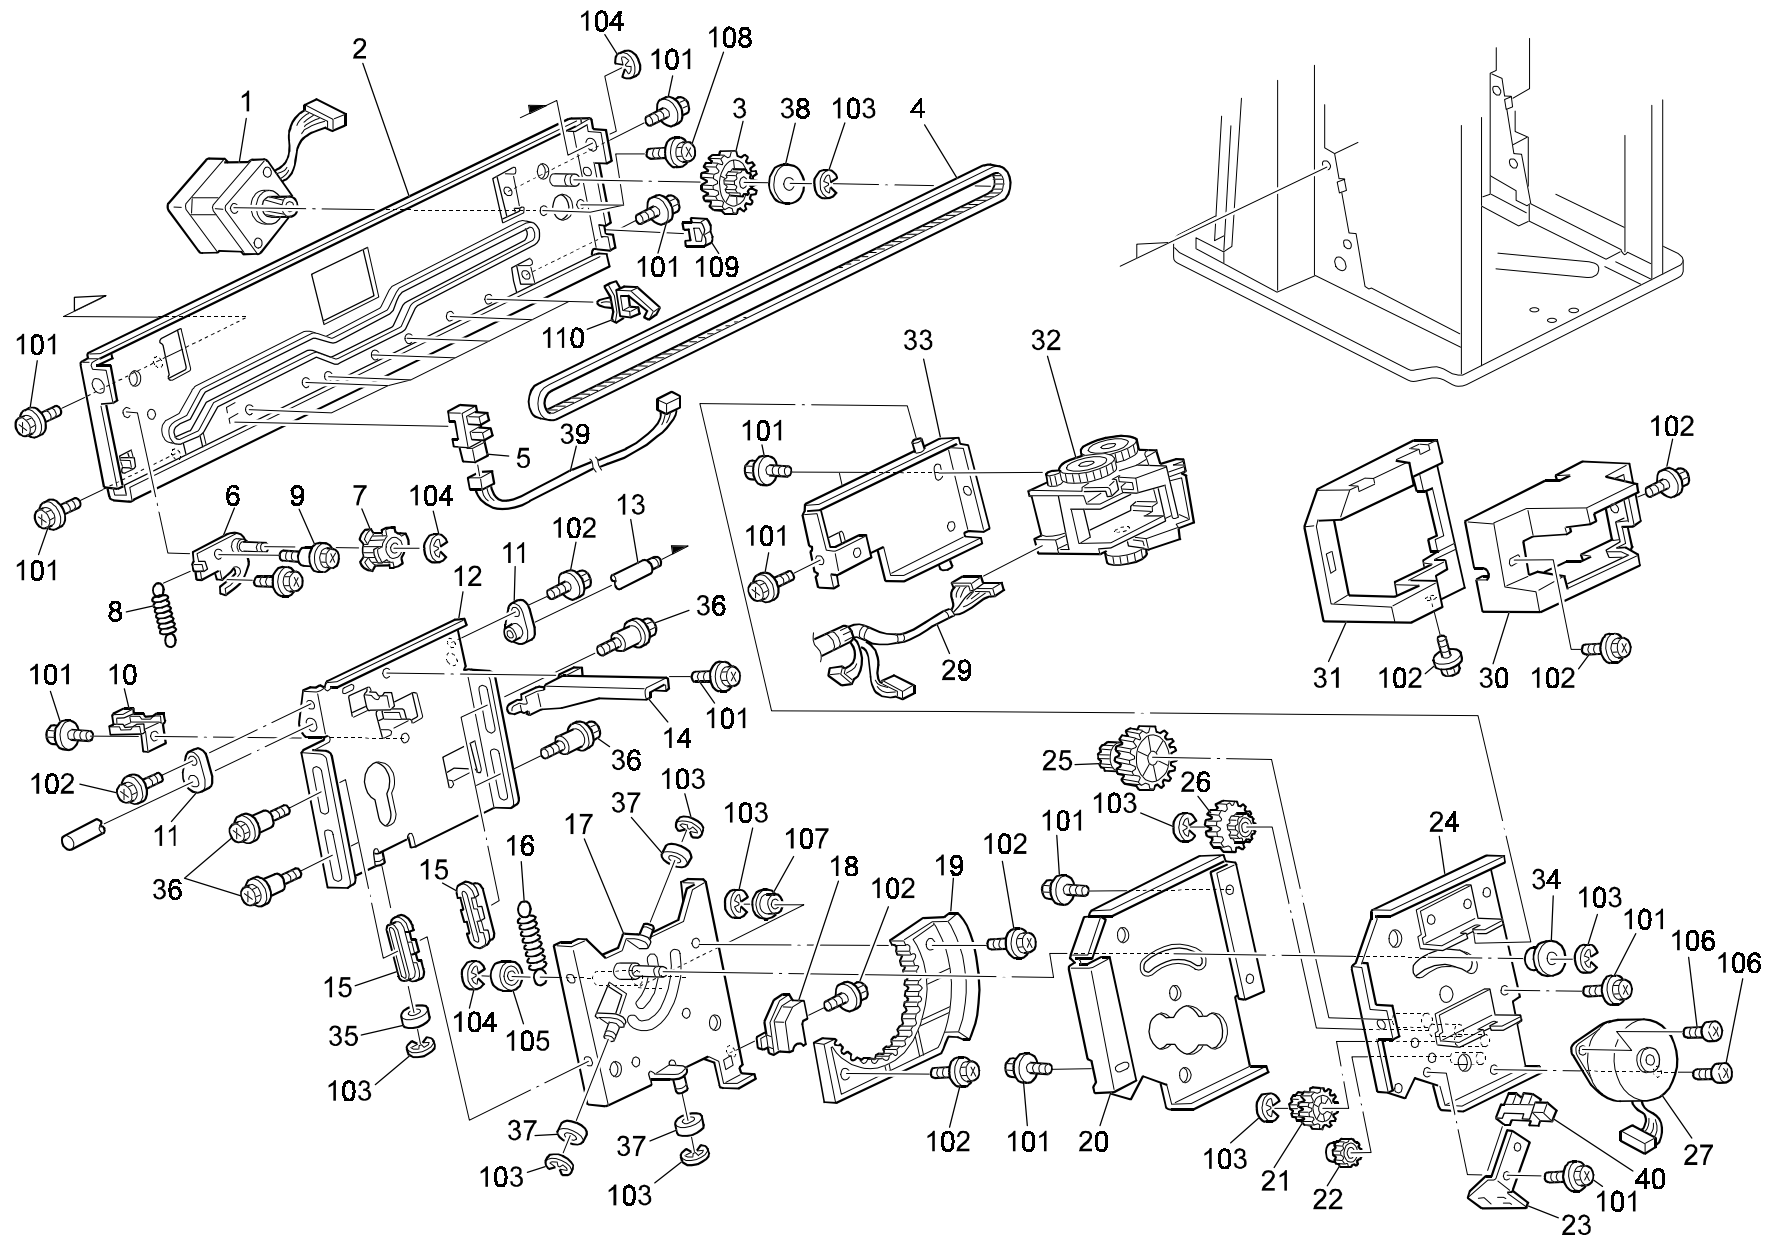


9. STAPLE UNIT (B352)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B312 4145	Stepping Motor - 8.0W	1
2	B352 4411	Bracket - Stapler Movement	1
3	B352 4421	Timing Pulley - Drive	1
4	B352 4422	Timing Belt - 918P3M4	1
5	AW02 0086	Photointerruptor	1
6	B352 4431	Tightener Bracket	1
7	AB03 0278	Idler - 20z	1
8	5442 4121	Spring - Oil Blade	1
9	A697 1125	Stepped Screw - Lever	1
10	B352 4316	Stopper - Timing Belt	1
11	B352 4318	Bushing - Lower Slider	1
12	B352 4311	Stapler Unit Slider	1
13	B352 4415	Guide Rod	1
14	B352 4317	Fence Hook	1
15	A300 3731	Slide Supporter	4
16	B352 4315	Spring - 18N	1
17	B352 4321	Lower Slider - Staple Unit	1
18	B352 4328	Harness Holder	1
19	B352 4331	Sector Gear - Staple Unit	1
20	B352 4355	Slider Holder - Staple Unit	1
21	B352 4351	Gear - 46Z/25Z	1
22	B352 4354	Gear - 27Z	1
23	B352 4361	Sensor Bracket	1
24	B352 4341	Slider - Staple Unit	1
25	B352 4353	Pinion - 46Z/18Z	1
26	B352 4352	Gear - 46Z/19Z	1
27	AX05 0160	Stepper Motor - MM42 0.85A	1
29	B352 5305	Stapler Harness	1
30	B352 4378	Stapler Cover	1
31	B352 4358	Stapler Base Cover	1
32	B352 4079	Stapler Unit	1
33	B352 4371	Stapler Base	1
34	B352 4347	Bushing - 6mm	1
35	A300 2132	Guide Roller	1
36	A697 4150	Stepped Screw - M5	4

Index No.	Part No.	Description	Q'ty Per Assembly
37	A377 4741	Roller - M14	3
38	A300 3812	Spacer - 6x22x1.5	1
39	B352 5326	Sensor Relay Harness - 560mm	1
40	AW02 0114	Photo Interruptor - Lower Limit	1
101	0451 3006B	Tapping Screw - M3x6	
102	0451 3008B	Tapping Screw - M3x8	
103	0720 0040B	Retaining Ring - M4	
104	0720 0060B	Retaining Ring - M6	
105	0740 3008	Ball Bearing - 8x22x7	
106	0453 3006B	Tapping Screw - M3x6	
107	0805 3263	Bearing - 6x10x6mm	
108	0353 0050B	Philips Truss Head Screw - M3x5	
109	1105 0328	Harness Clamp - ES-0505	
110	1105 0511	Harness Clamp - LWS-0306ZC	

 10.UPPER PAPER EXIT 1 (B352)

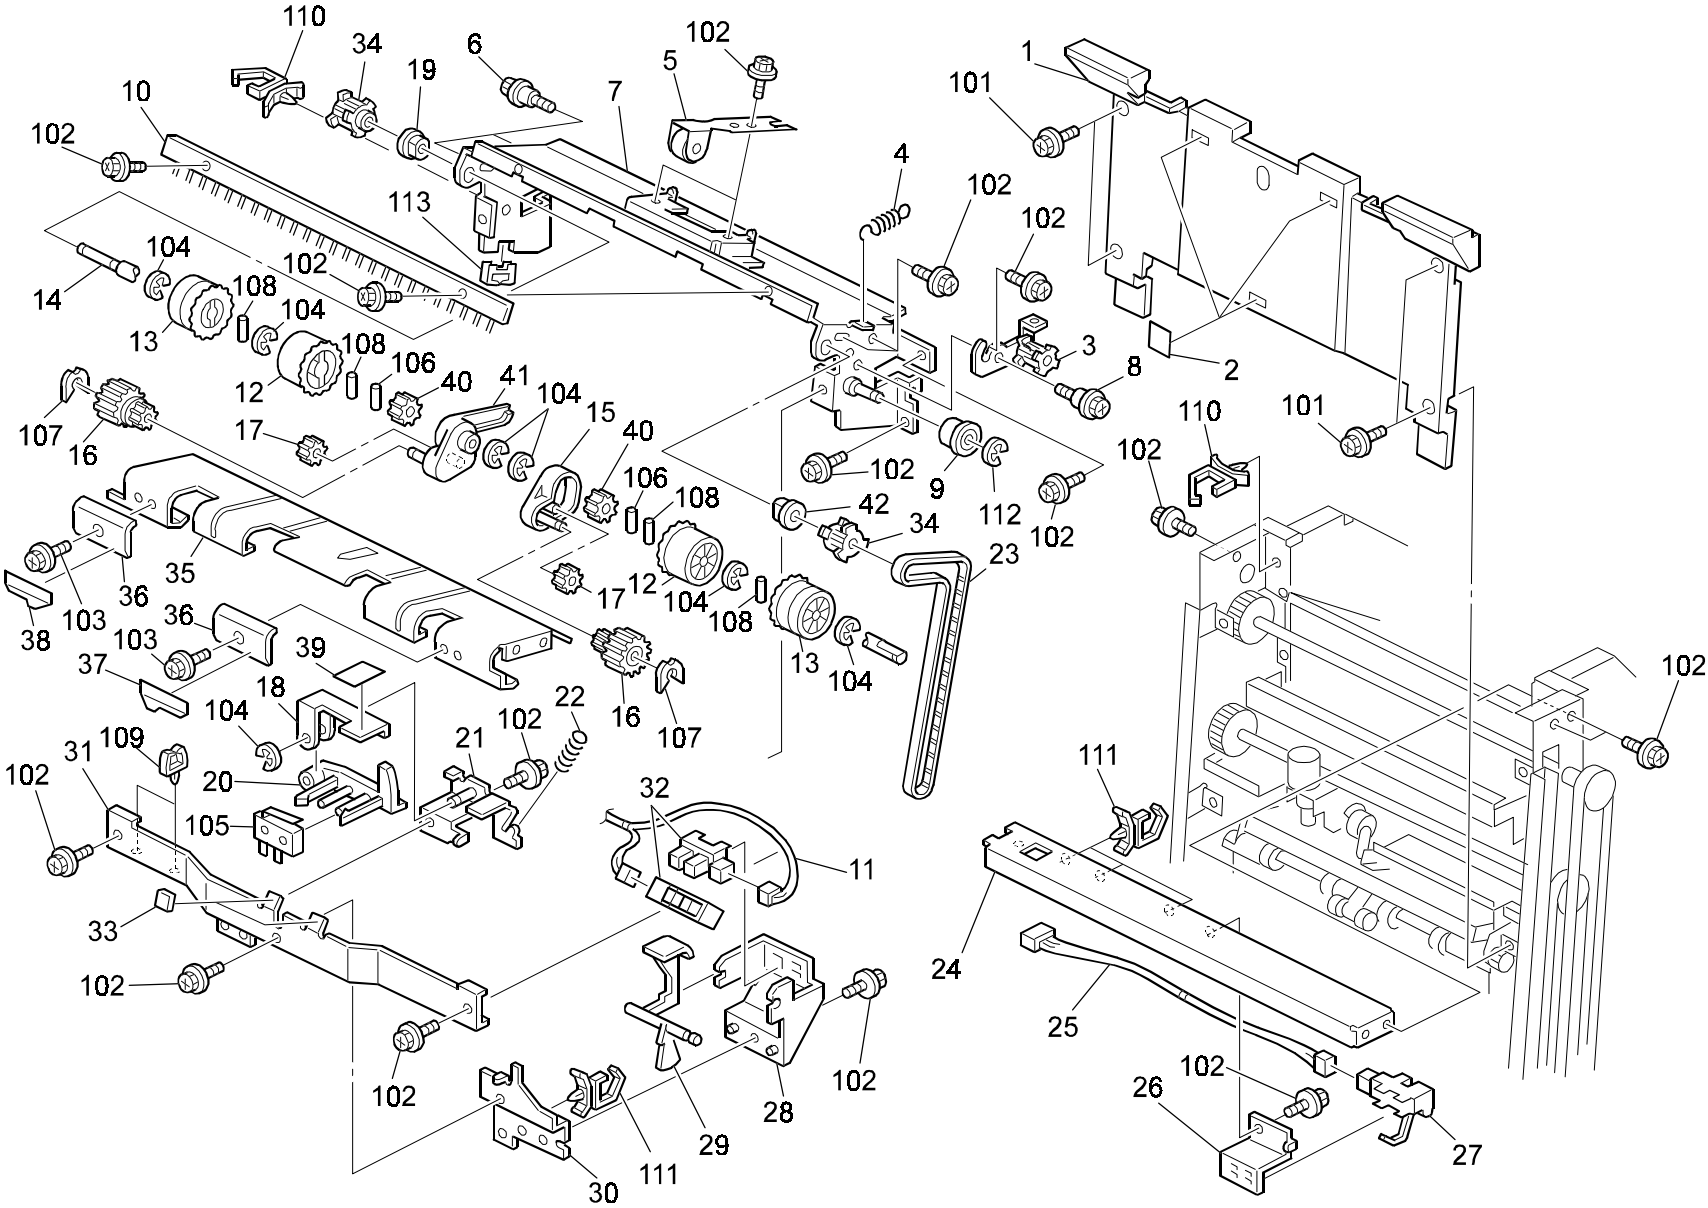


10. UPPER PAPER EXIT 1 (B352)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B352 6401	Upper Left Cover	1
2	B352 2365	Upper Left Pad	3
3	B352 1533	Tightener	1
4	B352 1630	Tension Spring	1
5	A666 4260	Entrance Roller	2
6	A666 4170	Stepped Screw - M3x6	2
7	B352 2120	Upper Guide Plate - Exit	1
8	A697 1125	Stepped Screw - Lever	1
9	B312 1615	Tension Roller	1
10	AA12 0090	Discharge Brush L=320 MM3	1
11	B352 5309	Harness - Paper Sensor	1
12	B352 2400	Exit Roller	2
13	B352 2405	Outer Exit Roller	2
14	B352 2406	Exit Roller Shaft	1
15	B352 2410	Front Arm - Reverse Roller	1
16	B352 2407	Reverse Roller - 20Z	2
17	B352 2409	Idle Gear - 17Z	2
18	B352 3102	Micro Switch Lever	1
19	AA08 0238	Bushing - M6	1
20	B352 3655	Switch Holder	1
21	B352 3105	Bracket - Micro Switch	1
22	B352 3656	Compression Spring	1
23	B352 1631	Timing Belt - B40S2M594	1
24	B352 3130	Exit Stay	1
25	B352 5323	Sensor Relay Harness - 280mm	1
26	B352 2126	Upper Bracket - Paper Feed Sensor	1
27	AW02 0104	Photointerruptor	1
28	B352 3101	Holder - Sensor Feeler	1
29	B352 3100	Sensor Feeler	1
30	B352 3215	Adjusting Bracket - Sensor Feeler	1
31	B352 2125	Upper Bracket - Papaer Exit Unit	1
32	AW02 0086	Photointerruptor	2
33	B352 3220	Roller Pad	2
34	B352 1600	Timing Pulley - S2M T24	1
35	B352 2124	Upper Guide Plate - Exit Small	1

Index No.	Part No.	Description	Q'ty Per Assembly
36	B352 2131	Exit Guide	2
37	B352 2132	Front Exit Plate	1
38	B352 2133	Rear Exit Plate	1
39	B352 3225	Pad - Switch Lever	1
40	B352 2408	Gear - 26Z	2
41	B352 2411	Rear Arm - Reverse Roller	1
42	5053 0447	Bushing - 6mm	1
101	0451 3008H	Tapping Screw - M3x8	
102	0451 3006B	Tapping Screw - M3x6	
103	0353 0060B	Philips Pan Head Screw - M3x6	
104	0720 0040B	Retaining Ring - M4	
105	1204 2543	Switch - DE2L-BJ22	
106	0632 0080G	Parallel Key - 2x8mm	
107	0805 0089	Retaining Ring - M4	
108	0632 0100G	Pin - 2x10mm	
109	1105 0230	Clamp	
110	1105 0310	Harness Clamp - LWS-1S	
111	1105 0511	Harness Clamp - LWS-0306ZC	
112	0720 0060B	Retaining Ring - M6	
113	1105 0329	Clamp - ES-0510	

 11.UPPER PAPER EXIT 2 (B352)

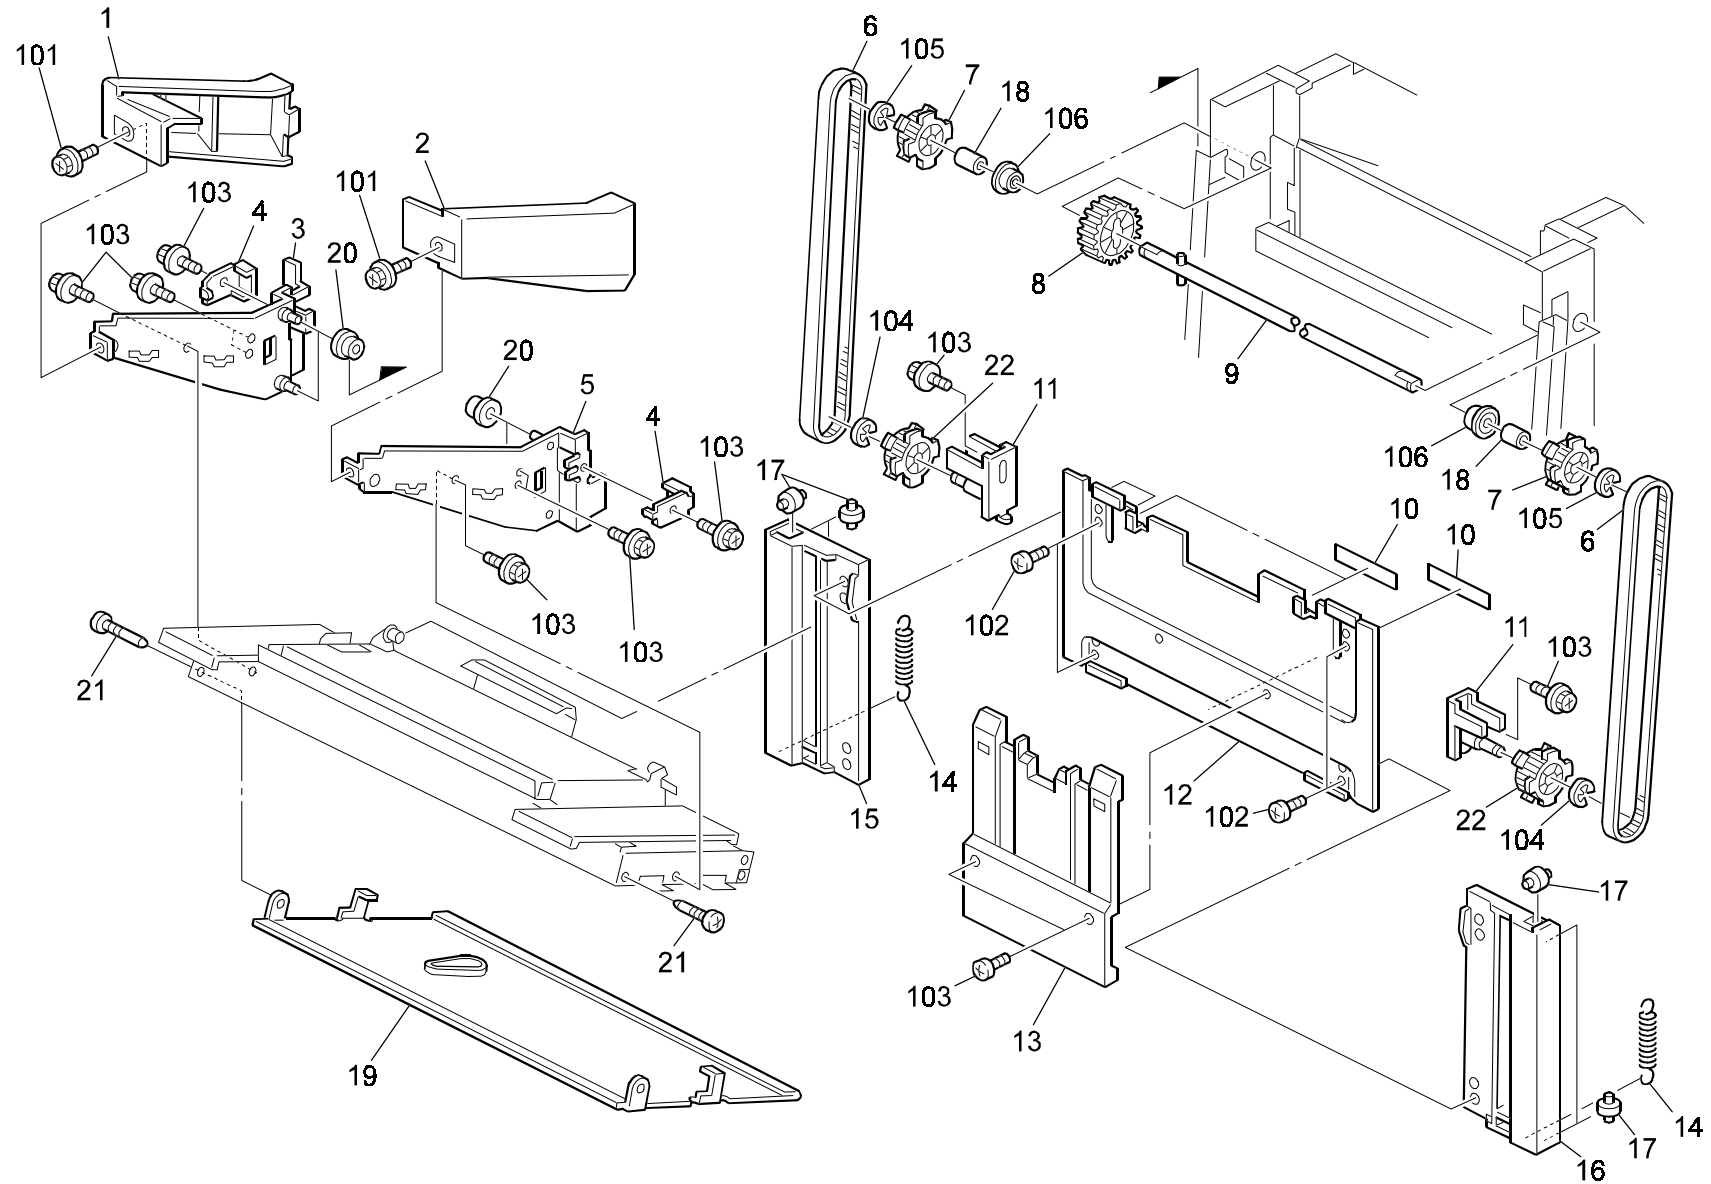


11.UPPER PAPER EXIT 2 (B352)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B352 6651	Rear Cover - Upper Tray	1
2	B352 6601	Front Cover - Upper Tray	1
3	B352 3530	Side Plate - Upper Rear	1
4	B352 3165	Timing Belt Guide Plate	1
5	B352 3520	Side Plate - Upper Front	1
6	B352 3161	Timing Belt - B60S5M1055	2
7	B352 3145	Timing Pulley - T18	2
8	A666 2347	Gear - Z45	1
9	B352 3013	Shaft - Upper Drive	1
10	B352 3605	Upper Guide - End Fence	1
11	B352 3155	Upper Tightener	2
12	B352 3601	End Fence	1
13	B352 3611	Guide Plate - End Fence	1
14	B352 3608	Tension Spring - End Fence	1
15	B352 3631	Rail - Rear End Fence	1
16	B352 3621	Rail - Front End Fence	1
17	B352 3629	End Fence Roller	6
18	B352 3170	Spacer	1
19	B352 3761	Base Cover	1
20	A379 3316	Shift Guide Roller	4
21	5446 2824	Screw - Duplex Guide Plate	2
22	B352 3146	Timing Pulley - T18	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3008H	Tapping Screw - M3x8	
102	0452 3008B	Tapping Screw - M3x8	
103	0451 3006B	Tapping Screw - M3x6	
104	0720 0040B	Retaining Ring - M4	
105	0720 0060B	Retaining Ring - M6	
106	0742 3808	Ball Bearing - 8x16x5	

 12. UPPER PAPER EXIT 3 (B352)

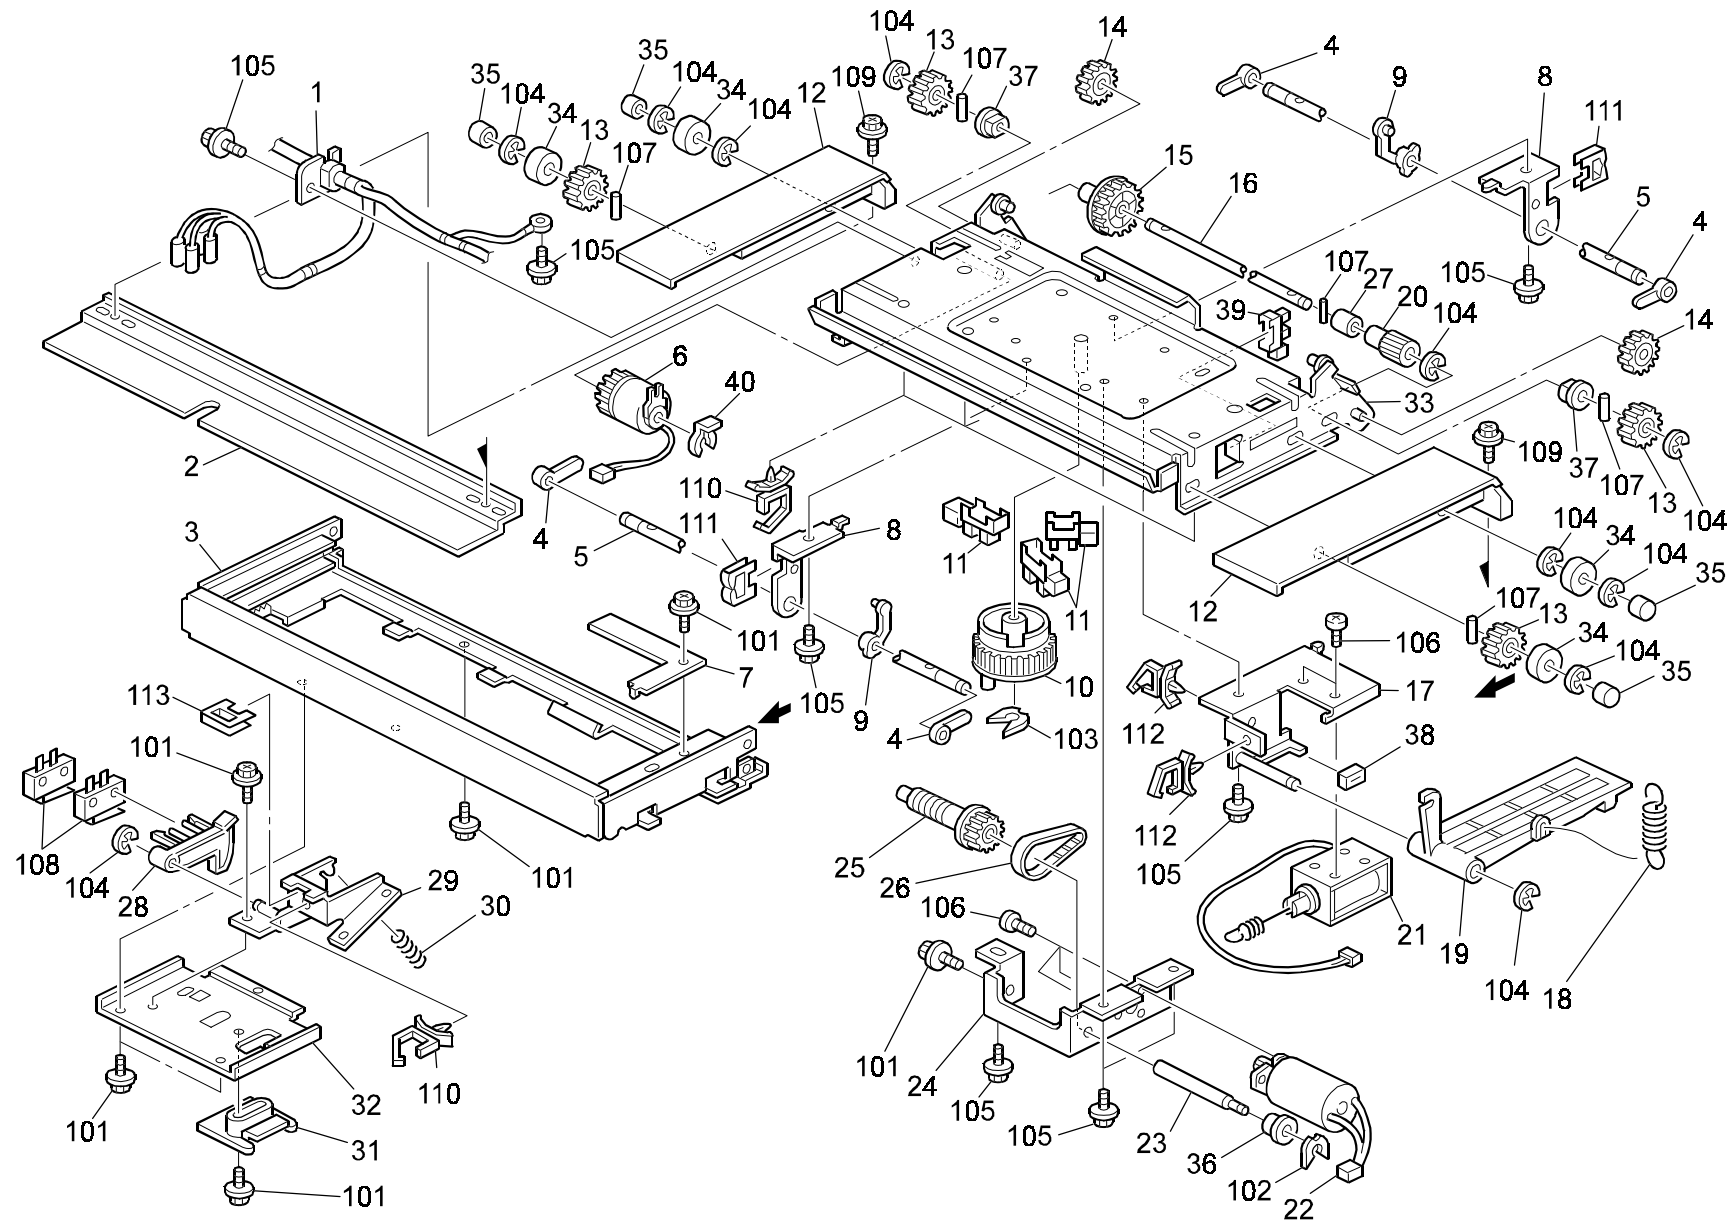


12. UPPER PAPER EXIT 3 (B352)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B352 3771	Upper Harness - Shift Tray	1
2	B352 3766	Slide Cover	1
3	B352 3510	Base - Upper Tray	1
4	B352 3572	Bushing - 6mm	4
5	B352 3575	Shaft - Upper Tray	2
6	AX21 0069	Magnetic Clutch - Z30	1
7	B352 3515	Front Stopper - Tray Shift	1
8	B352 3570	Support Plate - Tray Shift	2
9	B352 3571	Slider Bearing	2
10	B352 3580	Worm Wheel - 40Z	1
11	AW02 0075	Photointerruptor	3
12	B352 3751	Base Upper Cover	2
13	B352 3576	Gear - 20Z	4
14	B352 3592	Idle Gear - 20Z	2
15	B352 3591	Gear - 40Z	1
16	B352 3590	Rear Shaft - Upper Tray	1
17	B352 3700	Bracket - Lock Lever	1
18	AA06 0092	Release Spring	1
19	B352 3705	Lock Lever - Upper Tray	1
20	B352 3593	Ratchet - Tray Lock	1
21	B352 2090	DC Solenoid Assembly	1
22	AX05 0161	DC Motor - DC24V 7.2W	1
23	B352 3586	Shift - Worm Gear	1
24	B352 3585	Motor Bracket	1
25	A681 3316	Shift Tray Worm	1
26	B352 3587	Timing Belt - B0S2M104	1
27	B352 3594	Torque Limiter - 100MN	4
28	B352 3655	Switch Holder	1
29	B352 3650	Bracket - Tray Safety Switch	1
30	B352 3656	Compression Spring	1
31	B352 3517	Slide Guide	1
32	B352 3516	Base Bracket	1
33	B352 3560	Base - Shift	1
34	A353 3272	Guide Roller	1
35	B352 3577	Shaft Cap	4

Index No.	Part No.	Description	Q'ty Per Assembly
36	5443 2668	Bushing - 4x6x7mm	1
37	5053 0447	Bushing - 6mm	1
38	A697 2102	Dumper - Junction Gate Solenoid	1
39	AW02 0114	Photo Interruptor - Lower Limit	1
40	G011 3275	Snap Ring	1
101	0451 3006B	Tapping Screw - M3x6	
102	0805 0092	Retaining Ring - 3m	
103	0805 0088	Retaining Ring - M6	
104	0720 0040B	Retaining Ring - M4	
105	0802 5276	Tapping Screw With Washer - M3x6	
106	0313 0050B	Philips Pan Head Screw - M3x5	
107	0632 0120G	Parallel Pin - 2x12	
108	1204 2543	Switch - DE2L-BJ22	
109	0802 5277	Tapping Screw	
110	1105 0310	Harness Clamp - LWS-1S	
111	1105 0329	Clamp - ES-0510	
112	1105 0511	Harness Clamp - LWS-0306ZC	
113	1105 0522	Edge Saddle - LES0510	

 13.LOWER PAPER EXIT (B352)

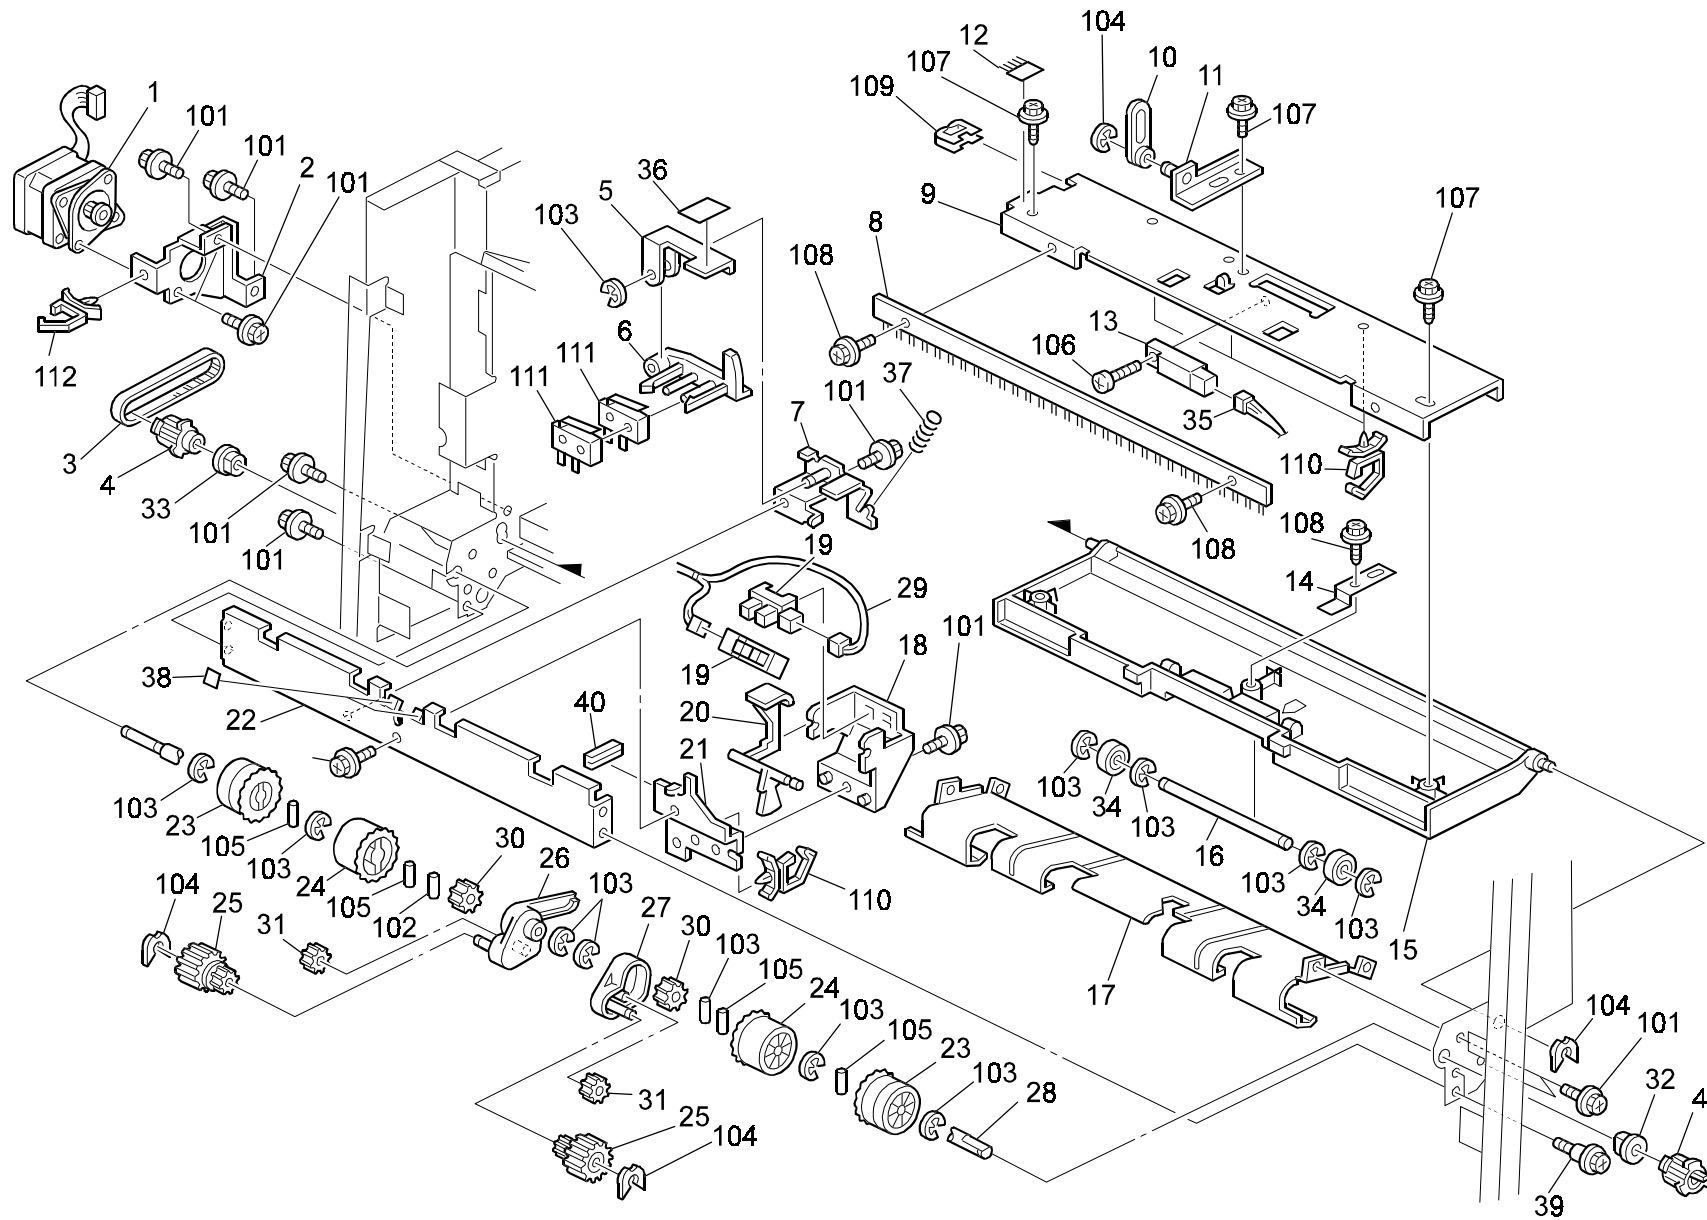


13.LOWER PAPER EXIT (B352)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B312 1550	Stepping Motor - DC 6.2W	1
2	B352 1620	Exit Roller Bracket	1
3	B352 1632	Timing Belt - B40S2M200	1
4	B352 1600	Timing Pulley - S2M T24	1
5	B352 3102	Micro Switch Lever	1
6	B352 3655	Switch Holder	1
7	B352 3105	Bracket - Micro Switch	1
8	AA12 0027	Antistatic Brush	1
9	A379 2213	Exit Guide Bracket	1
10	B352 3190	Driven Roller Link	1
11	B352 3185	Bracket - Open Link	1
12	A697 2131	Antistatic Brush	1
13	AW01 0070	Photosensor - PS-R11D1-B	1
14	A353 3354	Driven Roller Holder	1
15	B352 2435	Exit Guide	1
16	A379 2212	Driven Roller Shaft	1
17	B352 2415	Lower Guide Plate	1
18	B352 3101	Holder - Sensor Feeler	1
19	AW02 0086	Photointerruptor	1
20	B352 3100	Sensor Feeler	1
21	B352 3215	Adjusting Bracket - Sensor Feeler	1
22	B352 3210	Exit Roller Cover	1
23	B352 2405	Outer Exit Roller	2
24	B352 2400	Exit Roller	2
25	B352 2407	Reverse Roller - 20Z	1
26	B352 2411	Rear Arm - Reverse Roller	1
27	B352 2410	Front Arm - Reverse Roller	1
28	B352 2406	Exit Rooler Shaft	1
29	B352 5325	Paper Sensor Relay Harness	1
30	B352 2408	Gear - 26Z	2
31	B352 2409	Idler Gear - 17Z	2
32	5053 0447	Bushing - 6mm	1
33	AA08 0238	Bushing - M6	2
34	B352 2436	Exit Driven Roller	1
35	B352 5321	Sensor Relay Harness - 430mm	1

Index No.	Part No.	Description	Q'ty Per Assembly
36	B352 3225	Pad - Switch Lever	1
37	B352 3656	Compression Spring	1
38	B352 3220	Roller Pad	1
39	A666 4170	Stepped Screw - M3x6	1
40	B352 5450	Bushing - CE-012LV0	1
101	0451 3006B	Tapping Screw - M3x6	
102	0632 0080G	Parallel Key - 2x8mm	
103	0720 0040B	Retaining Ring - M4	
104	0805 0089	Retaining Ring - M4	
105	0632 0100G	Pin - 2x10mm	
106	0313 0100B	Philips Pan Head Screw - M3x10	
107	0450 4008B	Tapping Screw - 4x8	
108	0451 4006B	Tapping Screw - 4x6	
109	1105 0328	Harness Clamp - ES-0505	
110	1105 0511	Harness Clamp - LWS-0306ZC	
111	1204 2543	Switch - DE2L-BJ22	
112	1105 0310	Harness Clamp - LWS-1S	

 14.SHIFT DRIVE 1 (B352)

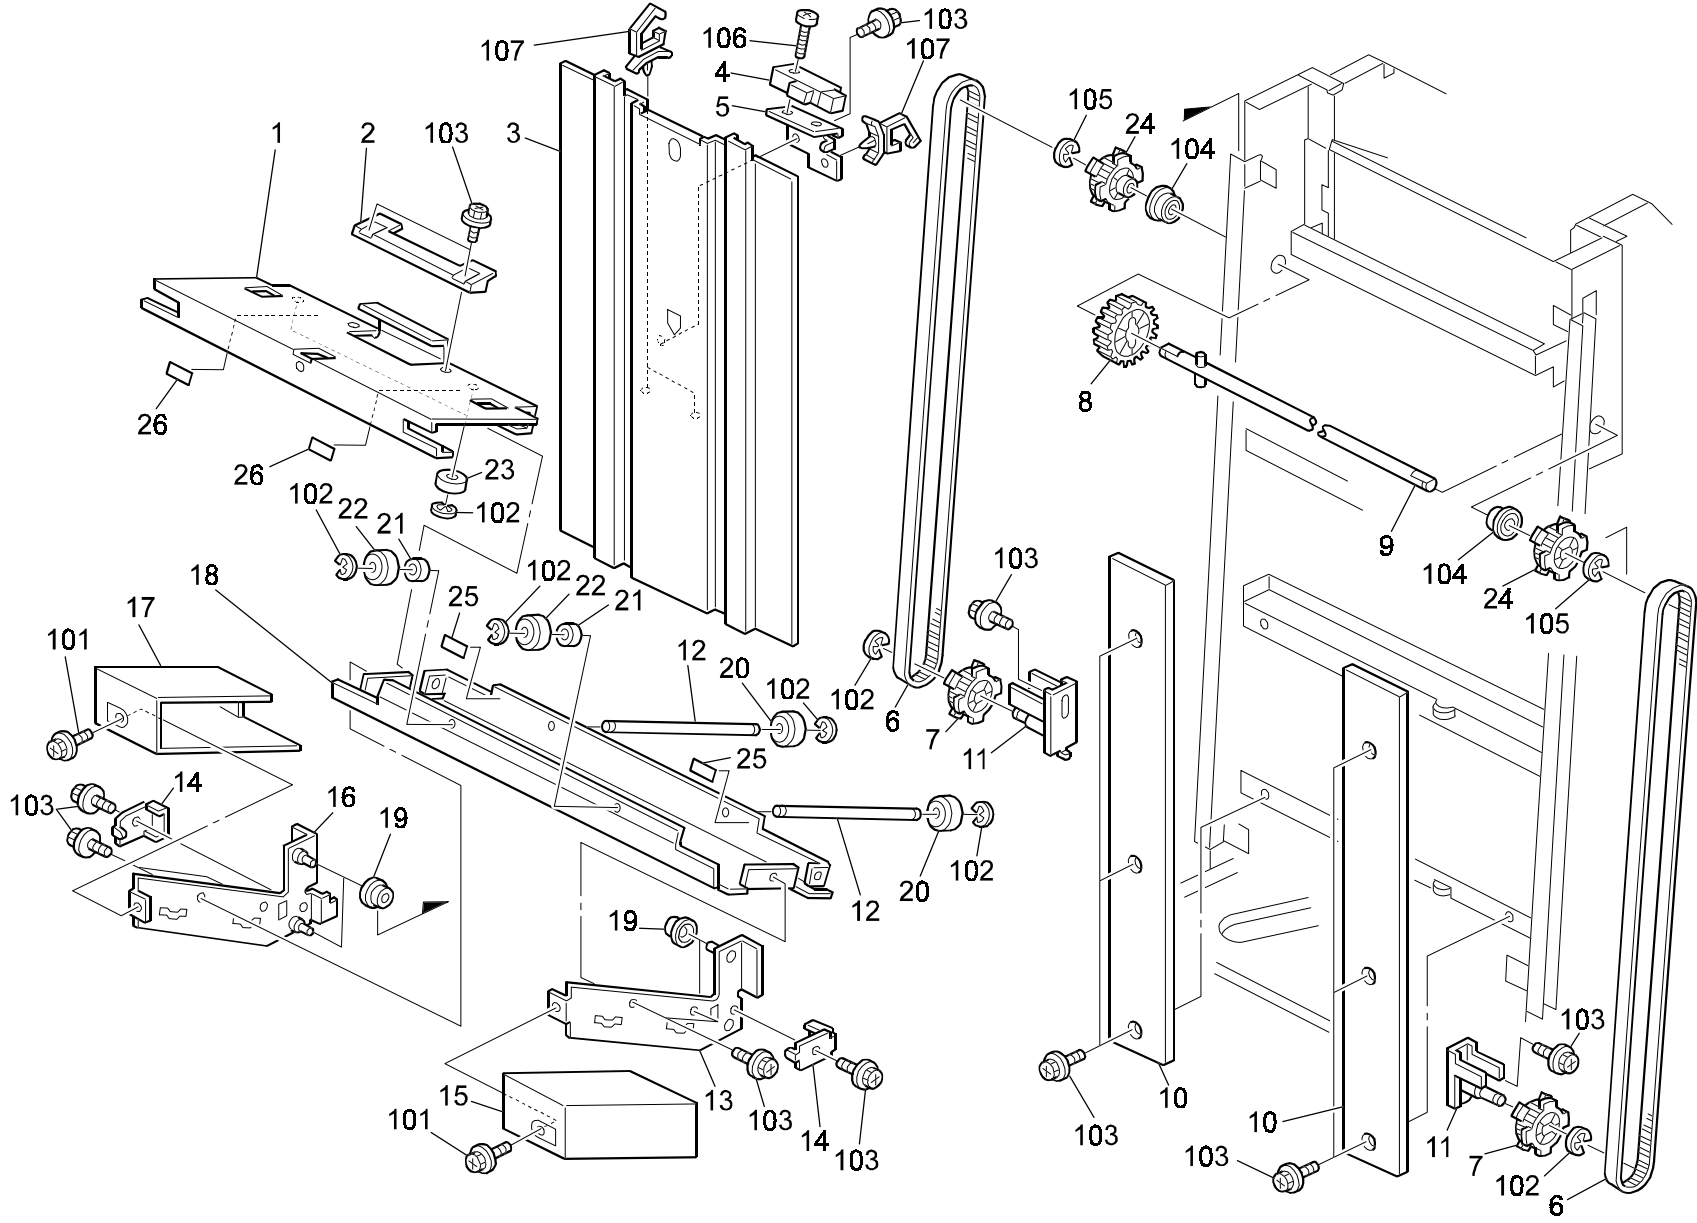


14.SHIFT DRIVE 1 (B352)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B352 3840	Lower Tray Holder	1
2	B352 3845	Slider Pawl	1
3	B352 3110	End Fence	1
4	AW01 0089	Photosensor - GP2A28C	1
5	B352 3115	Sensor Bracket	1
6	B352 3160	Timing Belt - B60S5M1530	2
7	B352 3146	Timing Pulley - T18	2
8	A666 2347	Gear - Z45	1
9	B352 3016	Shaft - Lower Drive	1
10	B352 3140	End Fence Cover	1
11	B352 3150	Lower Tightener	2
12	B352 3835	Tray Shift Shaft	1
13	B352 3810	Side Plate - Lower Front	1
14	B352 3165	Timing Belt Guide Plate	2
15	B352 6701	Front Cover - Lower Tray	1
16	B352 3820	Side Plate - Lower Rear	1
17	B352 6751	Rear Cover - Lower Tray	1
18	B352 3831	Base - Lower Tray	1
19	A379 3316	Shift Guide Roller	4
20	A666 2213	Shift Tray Roller	2
21	A697 1606	Spacer - 6x12x2.7mm	2
22	A353 3351	Exit Driven Roller	2
23	A353 3272	Guide Roller	2
24	B352 3145	Timing Pulley - T18	2
25	B352 3833	Short Cushion - Base	2
26	B352 3844	Long Cushion - Base	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3008H	Tapping Screw - M3x8	
102	0720 0040B	Retaining Ring - M4	
103	0451 3006B	Tapping Screw - M3x6	
104	0742 3808	Ball Bearing - 8x16x5	
105	0720 0060B	Retaining Ring - M6	
106	0313 0100B	Philips Pan Head Screw - M3x10	
107	1105 0511	Harness Clamp - LWS-0306ZC	

 15.SHIFT DRIVE 2 (B352)

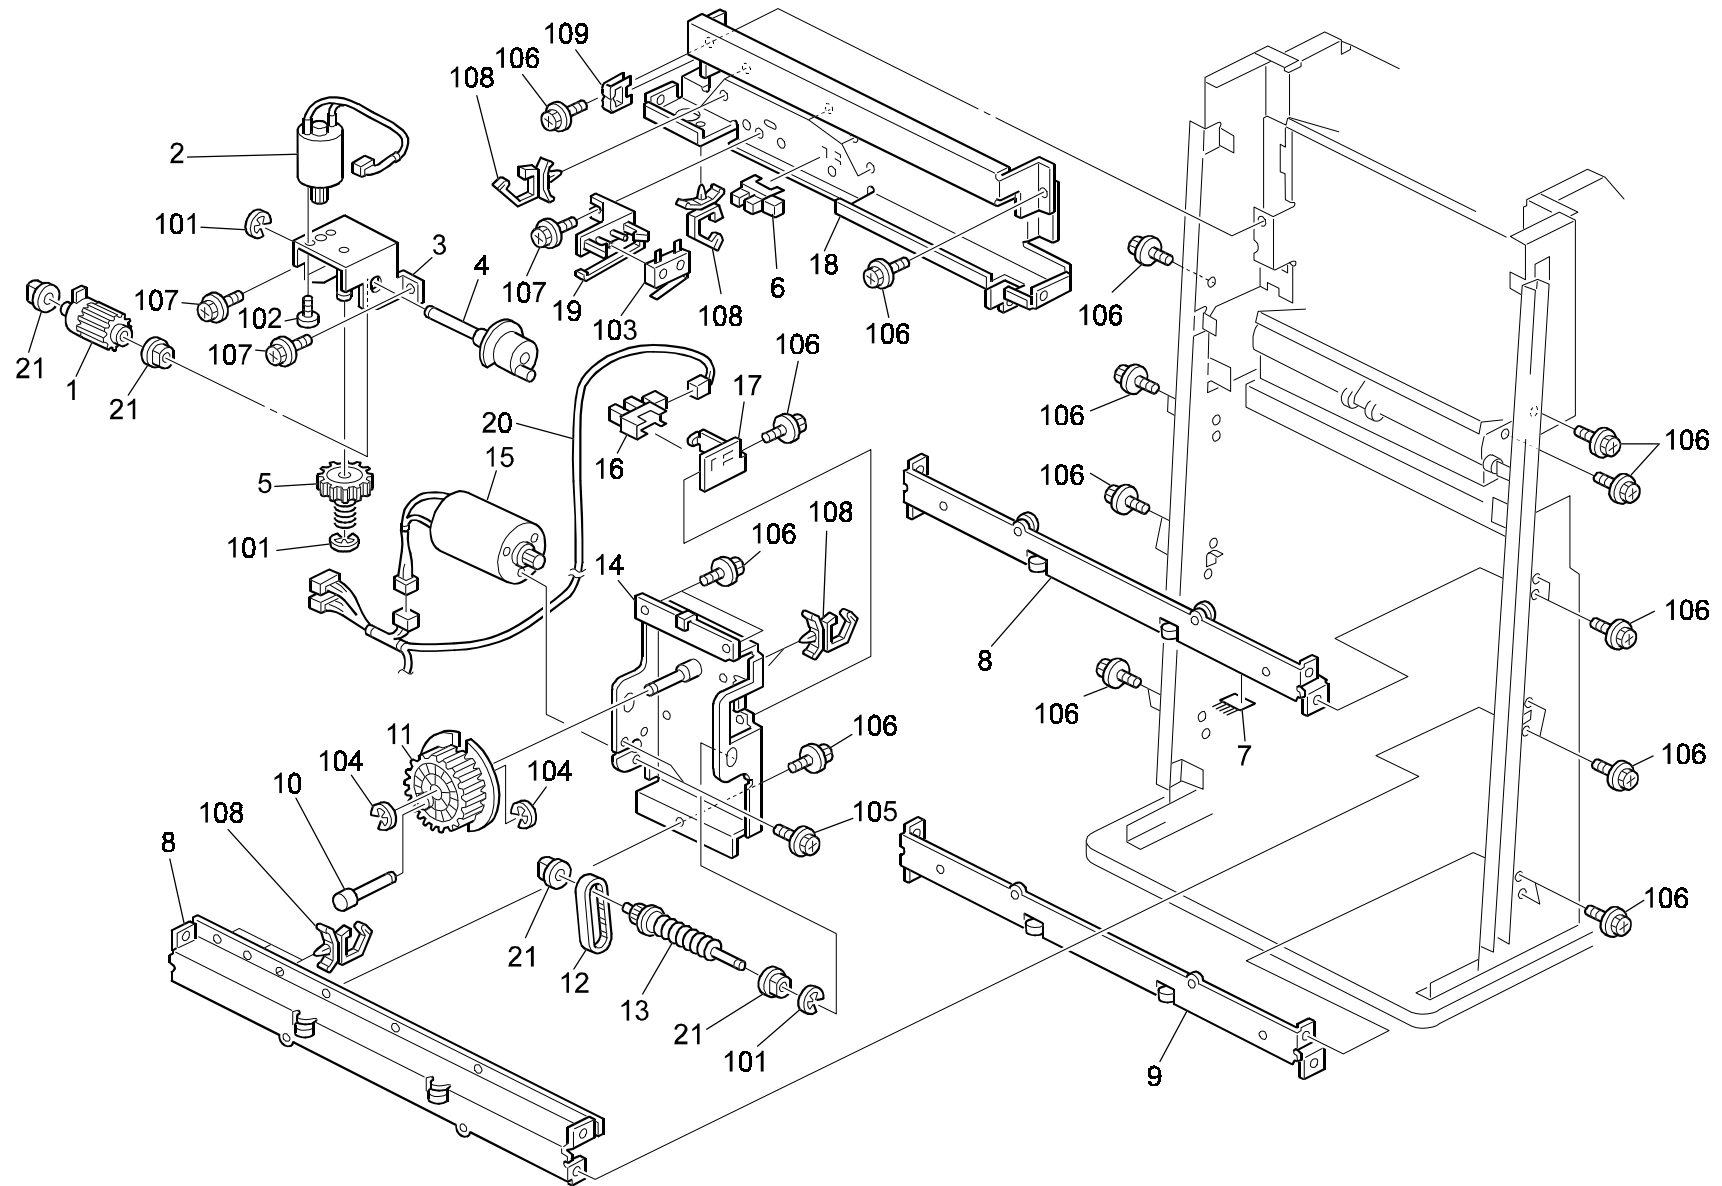


15.SHIFT DRIVE 2 (B352)



Index No.	Part No.	Description	Q'ty Per Assembly
1	A681 2702	Worm Wheel - 20Z	1
2	AX04 0053	DC Motor - 24V/2.2W	1
3	B352 3180	Motor Bracket	1
4	B352 3175	Cam - Paper Exit Unit	1
5	A681 2711	Worm Gear - 50z	1
6	AW02 0086	Photointerruptor	1
7	A697 2131	Antistatic Brush	1
8	B352 3120	Stay - Upper Exit	2
9	B352 3125	Stay - Lower Exit	1
10	A697 3200	Worm Wheel Shaft	1
11	A697 3195	Worm Wheel	1
12	A697 3220	Timing Belt - B40S2M112	1
13	A697 3215	Pulley - 19T	1
14	A697 3210	Shift Motor Bracket	1
15	AX05 0115	DC Motor - 24V 7.2W	1
16	AW02 0075	Photointerruptor	1
17	A697 3205	Shift Sensor Bracket	1
18	B352 3131	Upper Left Stay	1
19	B352 3195	Exit Switch holder	1
20	B352 5320	Relay Harness - Shift Motor	1
21	5053 0447	Bushing - 6mm	4

Index No.	Part No.	Description	Q'ty Per Assembly
101	0720 0040E	Retaining Ring - M4	
102	0800 0072	Philips Pan Head Screw - M2.6x4	
103	1204 2544	Switch - DE2L-BJ23	
104	0720 0060B	Retaining Ring - M6	
105	0451 4006B	Tapping Screw - 4x6	
106	0451 3006B	Tapping Screw - M3x6	
107	0802 5277	Tapping Screw	
108	1105 0511	Harness Clamp - LWS-0306ZC	
109	1105 0328	Harness Clamp - ES-0505	

 16.DRIVE SECTION (B352)

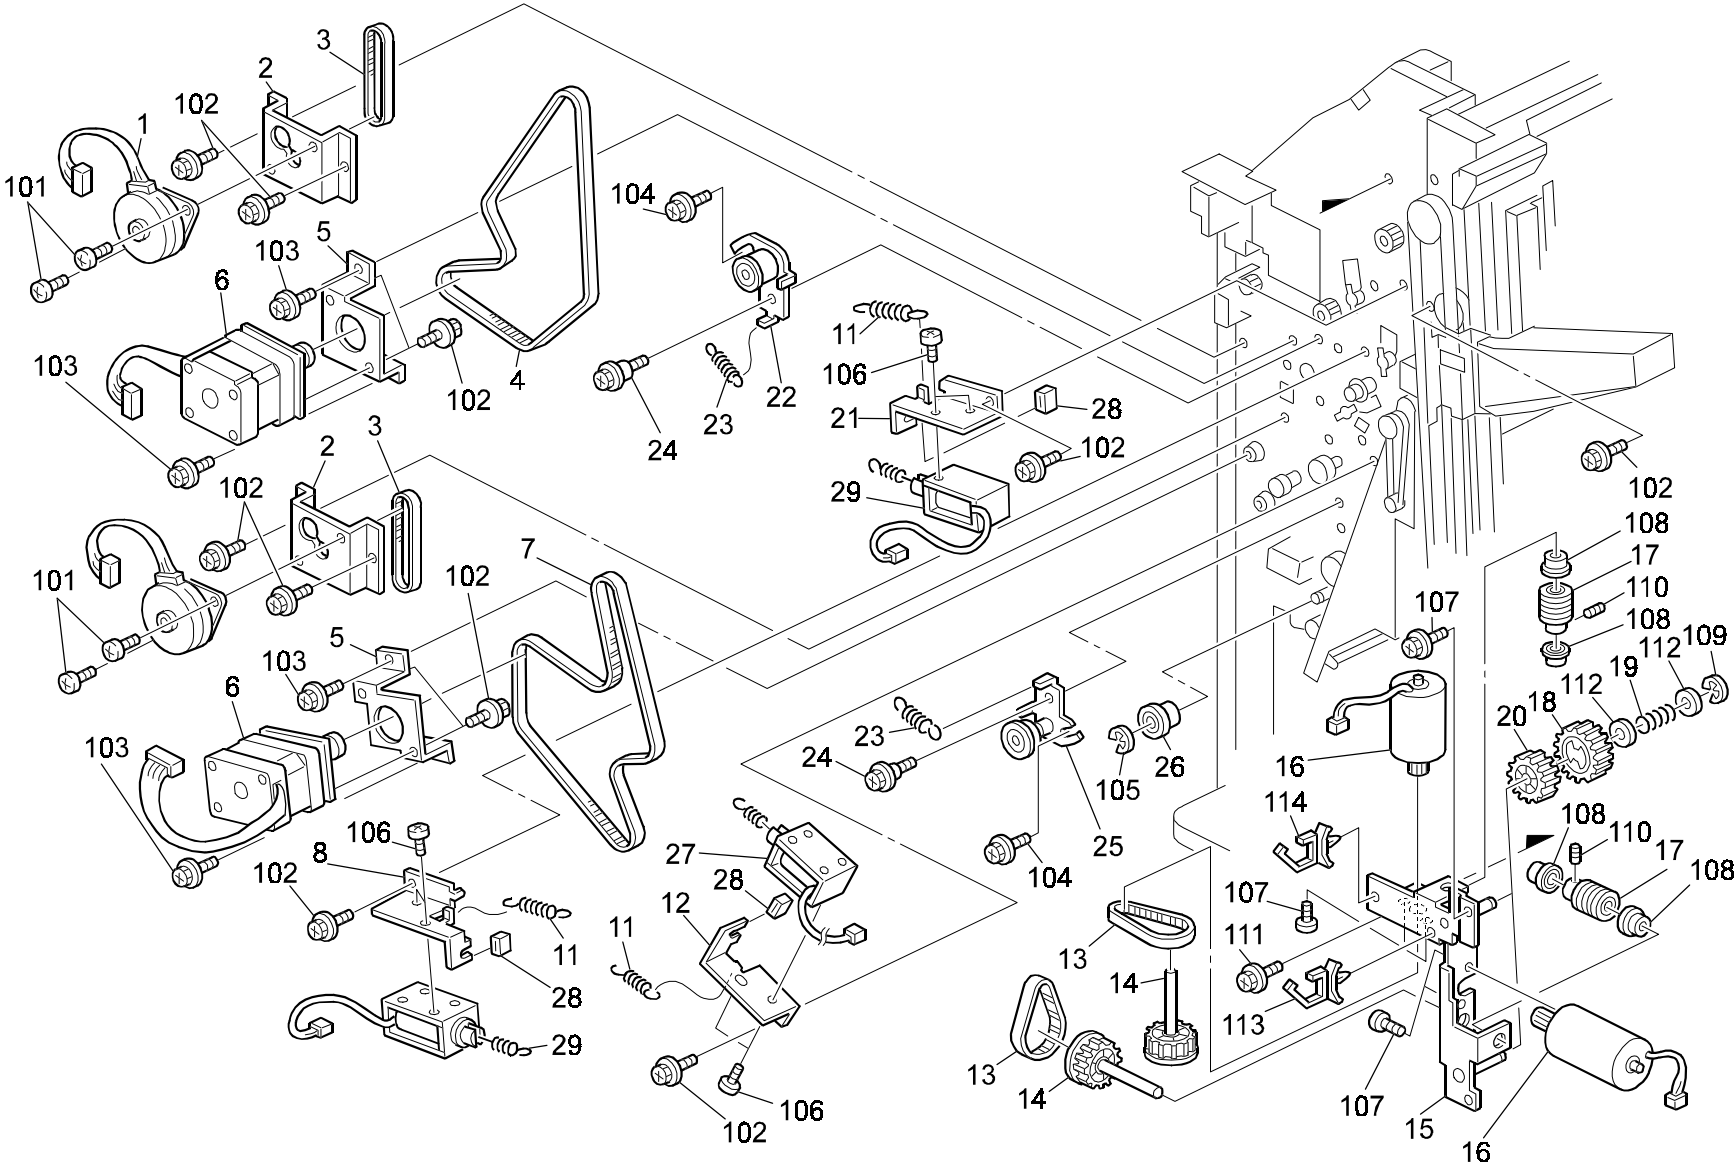


16.DRIVE SECTION (B352)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AX04 0121	Stepping Motor - DC 6.5W	1
2	B312 1524	Motor Bracket	2
3	B352 1601	Timing Belt - B40S2M196	1
4	B352 1610	Timing Belt - B40S3M612	1
5	A612 1612	Bracket - Motor	2
6	B312 1515	Stepping Motor - DC 6.2W	2
7	B352 1617	Timing Belt - B40S3M759	2
8	A697 2105	Bracket - Junction Gate Solenoid	1
11	AA06 0092	Release Spring	3
12	B312 2106	Bracket - Pre-stack Gate Solenoid	1
13	AA04 3054	Timing Belt - 142 P2M4	2
14	A697 3225	Worm Wheel Shaft	2
15	B352 3200	Bracket - Tray Lift Motor	1
16	AX06 0211	DC Motor - NA4056D05	2
17	AB01 3709	Worm Gear	1
18	B352 3206	Worm Wheel - 30Z	2
19	A353 3113	Pressure Spring	2
20	B352 3205	Gear - 26Z	2
21	A697 2235	Bracket - Junction Gate Solenoid	1
22	B312 1600	Tightener	1
23	A697 1518	Spring-oil Blade	2
24	A697 1125	Stepped Screw - Lever	1
25	B312 1605	Tightener	1
26	B312 1615	Tension Roller	1
27	B312 2105	Pre-stack Gate Solenoid	1
28	A697 2102	Dumper - Junction Gate Solenoid	3
29	B352 2090	DC Solenoid Assembly	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0453 3006B	Tapping Screw - M3x6	
102	0451 3006B	Tapping Screw - M3x6	
103	0451 4006B	Tapping Screw - 4x6	
104	0451 3008B	Tapping Screw - M3x8	
105	0720 0040B	Retaining Ring - M4	
106	0313 0040B	Philips Pan Head Screw - M3x4	
107	0313 0050B	Philips Pan Head Screw - M3x5	
108	0741 3506	Ball Bearing - 6x12x4 Mm	
109	0720 0060B	Retaining Ring - M6	
110	0574 0040E	Hexagon Headless Set Screw - M4x4	
111	0802 5277	Tapping Screw	
112	0807 5056	Washer - 8.1mm	
113	1105 0310	Harness Clamp - LWS-1S	
114	1105 0511	Harness Clamp - LWS-0306ZC	

 17.ELECTRICAL SECTION (B352)

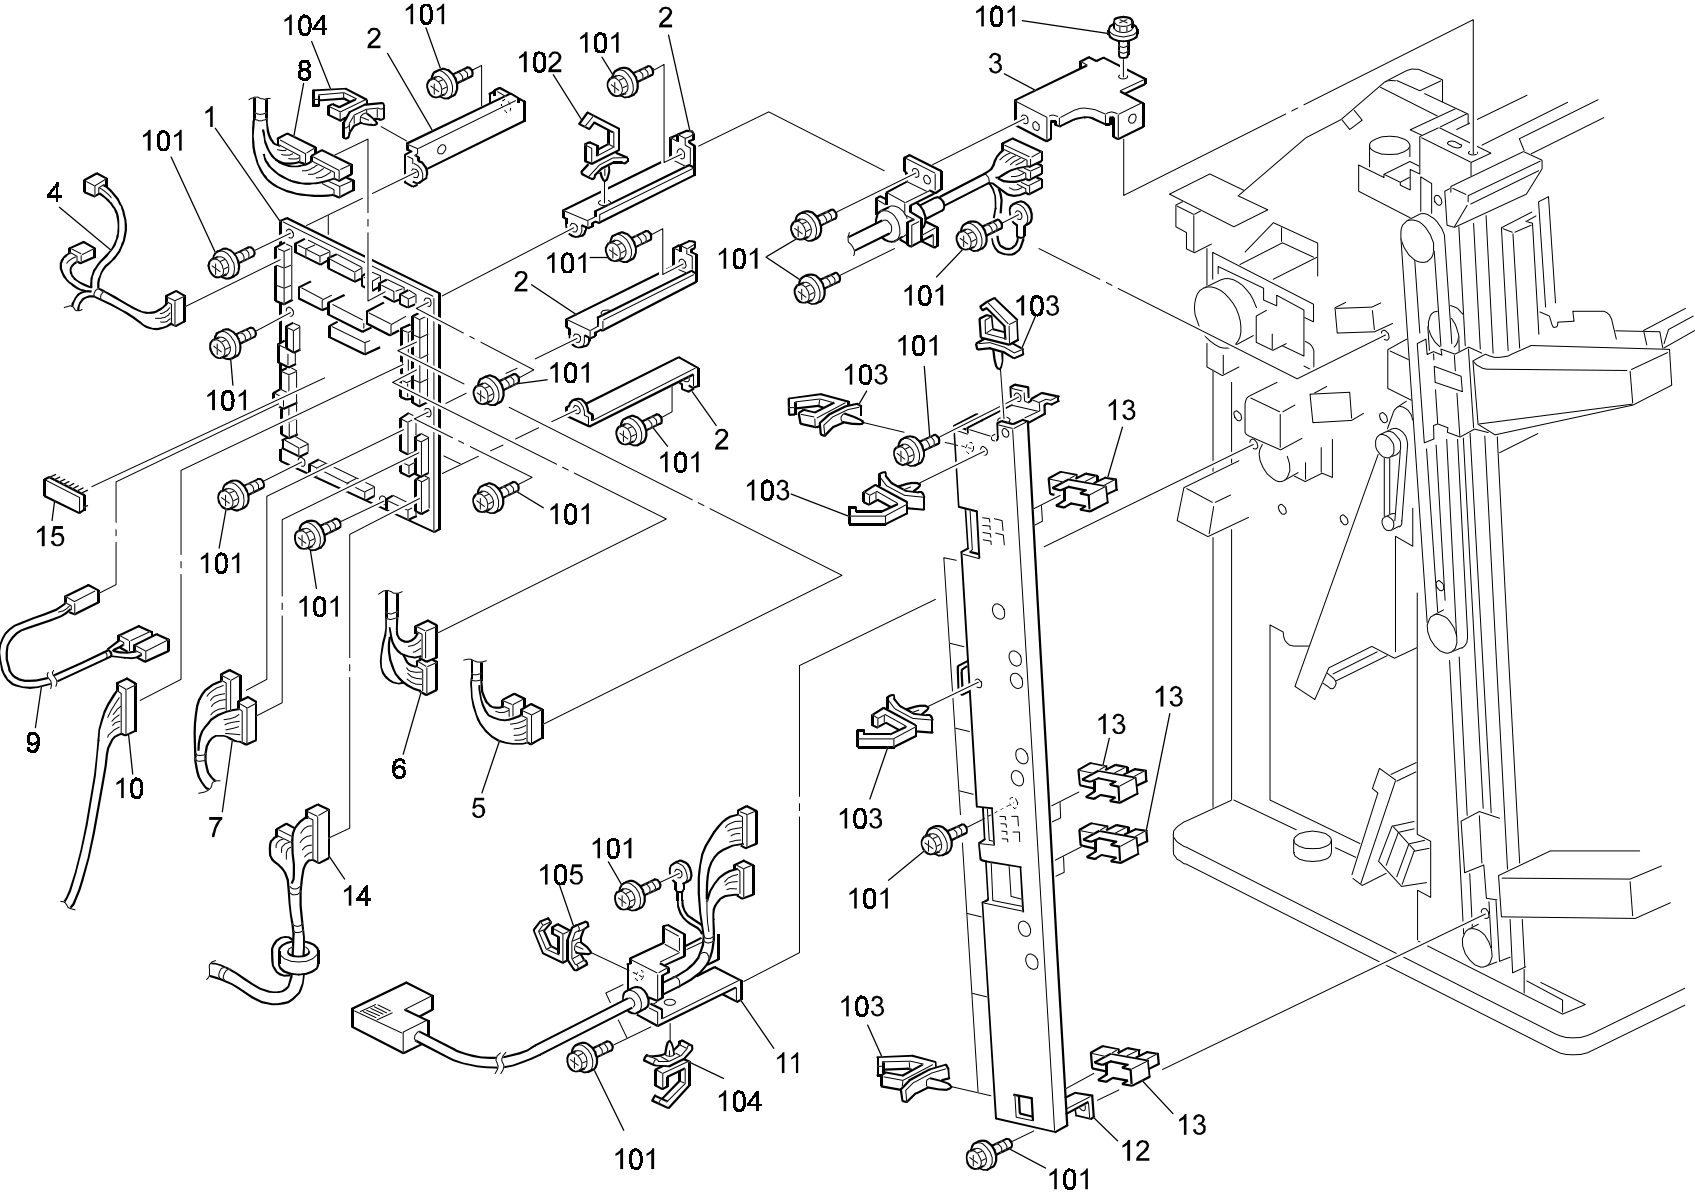

17.ELECTRICAL SECTION (B352)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B352 5500	Main Control Board	1
2	B352 1140	Board Bracket	6
3	B352 1150	Upper Cover Bracket	1
4	B352 5302	Harness - Entrance	1
5	B352 5306	Harness - Motor	1
6	B352 5316	Upper Relay Harness - Shift Tray	1
7	B352 5308	Sensor Harness - Lower Shift Tray	1
8	B352 5309	Harness - Paper Sensor	1
9	B352 5310	Harness - Safety Switch	1
10	B352 5307	Harness - Lower Shift Tray	1
11	B352 5401	Interface Harness	1
12	B352 3135	Stay - Positioning Sensor	1
13	AW02 0114	Photo Interruptor - Lower Limit	7
14	B352 5304	Upper Harness - Stapler Tray	1
15	B352 5700	EPROM - Main Control	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006B	Tapping Screw - M3x6	
102	1105 0292	Wire Saddle	
103	1105 0291	Harness Clamp - LWS-3S	
104	1105 0310	Harness Clamp - LWS-1S	
105	1105 0511	Harness Clamp - LWS-0306ZC	

18.MAIN CONTROL BOARD (B352)

CAPACITOR

SYMBOL NO.	INDEX NO.	SYMBOL NO.	INDEX NO.	SYMBOL NO.	INDEX NO.	SYMBOL NO.	INDEX NO.	SYMBOL NO.	INDEX NO.	SYMBOL NO.	INDEX NO.	SYMBOL NO.	INDEX NO.
C101	193	C111	187	C121	189	C131	193	C141	189	C151	190	C161	192
C102	193	C112	186	C122	186	C132	186	C142	193	C152	190	C162	190
C103	186	C113	193	C123	187	C133	193	C143	193	C153	190	C163	193
C104	186	C114	193	C124	186	C134	190	C144	193	C154	190	C164	190
C105	186	C115	184	C125	187	C135	186	C145	193	C155	190	C165	190
C106	186	C116	193	C126	193	C136	193	C146	190	C156	190	C166	193
C107	186	C117	193	C127	193	C137	192	C147	193	C157	192	C167	189
C108	193	C118	193	C128	193	C138	185	C148	190	C158	190	C168	192
C109	193	C119	186	C129	193	C139	186	C149	190	C159	192	C169	193
C110	186	C120	189	C130	186	C140	186	C150	190	C160	192	C170	193

CAPACITOR

SYMBOL NO.	INDEX NO.	SYMBOL NO.	INDEX NO.	SYMBOL NO.	INDEX NO.	SYMBOL NO.	INDEX NO.	SYMBOL NO.	INDEX NO.	SYMBOL NO.	INDEX NO.	SYMBOL NO.	INDEX NO.
C171	189	C181	190	C191	190	C201	192	C211	192	C221	190	C231	193
C172	192	C182	192	C192	193	C202	192	C212	193	C222	190	C232	193
C173	190	C183	190	C193	190	C203	190	C213	189	C223	190	C233	193
C174	190	C184	192	C194	193	C204	190	C214	189	C224	190	C234	191
C175	190	C185	192	C195	190	C205	190	C215	192	C225	190	C235	189
C176	189	C186	193	C196	190	C206	190	C216	193	C226	192	C236	193
C177	189	C187	193	C197	190	C207	193	C217	193	C227	190	C237	189
C178	193	C188	193	C198	190	C208	191	C218	193	C228	193	C238	193
C179	193	C189	189	C199	193	C209	193	C219	189	C229	190	C239	192
C180	190	C190	192	C200	192	C210	193	C220	190	C230	190	C240	189

18.MAIN CONTROL BOARD (B352)

CAPACITOR

SYMBOL NO.	INDEX NO.
C241	189
C242	191
C243	193
C244	193
C245	193
C246	192
C247	190
C248	190
C249	192
C250	190

SYMBOL NO.	INDEX NO.
C251	190
C252	193
C253	189
C254	189
C255	193
C256	192
C257	193
C258	193
C259	192
C260	193

SYMBOL NO.	INDEX NO.
C261	192
C262	193
C263	192
C264	190
C265	188
C266	192
C267	190
C268	190
C269	190
C270	190

SYMBOL NO.	INDEX NO.
C271	193
C272	190
C273	190
C274	193
C275	190
C276	190

CONNECTOR

SYMBOL NO.	INDEX NO.
CN101	122
CN102	123
CN103	120
CN104	109
CN105	105
CN106	117
CN107	106
CN108	108
CN109	119
CN110	113

SYMBOL NO.	INDEX NO.
CN111	106
CN112	116
CN113	106
CN114	111
CN115	108
CN116	115
CN117	124
CN118	112
CN119	107
CN120	102

SYMBOL NO.	INDEX NO.
CN121	112
CN122	104
CN123	103
CN124	121
CN125	102
CN126	107
CN127	102
CN128	114
CN129	118
CN130	107

CONNECTOR

SYMBOL NO.	INDEX NO.
CN131	111
CN132	109
CN133	110
CN134	103

DIODE

SYMBOL NO.	INDEX NO.
D101	134
D102	134
D103	134
D104	136
D105	136
D106	134
D107	136
D108	134
D109	134
D110	136

SYMBOL NO.	INDEX NO.
D111	136
D112	136
D113	136

DIP SWITCH

SYMBOL NO.	INDEX NO.
DPS101	128

FB

SYMBOL NO.	INDEX NO.
FB101	157
FB102	157
FB103	157
FB104	157
FB105	157
FB106	157
FB107	157
FB108	157
FB109	157
FB110	157

SYMBOL NO.	INDEX NO.
FB111	157
FB112	157
FB113	157
FB114	157

FUSE

SYMBOL NO.	INDEX NO.
FU101	127
(Holder)	125

IC

SYMBOL NO.	INDEX NO.
IC101	141
IC102	143
IC103	152
IC104	142
IC105	146
IC106	146
IC107	150
IC108	138
IC109	138
IC110	150

SYMBOL NO.	INDEX NO.
IC111	150
IC112	2
(IC112)	126
IC113	145
IC114	145
IC115	145
IC116	145
IC117	147
IC118	151
IC119	139
IC120	148

18.MAIN CONTROL BOARD (B352)

IC

SYMBOL NO.	INDEX NO.
IC121	1
IC122	152
IC123	152
IC124	152
IC125	152
IC126	149
IC127	141
IC128	152
IC129	152
IC130	140

PC

SYMBOL NO.	INDEX NO.
IC131	143
IC132	143
IC133	144

OSC

SYMBOL NO.	INDEX NO.
OSC101	153

PC

SYMBOL NO.	INDEX NO.
PC101	137
PC102	137
PC103	137
PC104	137

Q

SYMBOL NO.	INDEX NO.
Q101	130
Q102	130
Q103	130
Q104	131
Q105	132
Q106	132
Q107	131
Q108	131
Q109	132
Q110	129

RESISTOR

SYMBOL NO.	INDEX NO.
R101	176
R102	176
R103	181
R104	181
R105	181
R106	181
R107	181
R108	181
R109	181
R110	181

SYMBOL NO.	INDEX NO.
R111	181
R112	181
R113	181
R114	181
R115	181
R116	181
R117	181
R118	181
R119	181
R120	181

SYMBOL NO.	INDEX NO.
R121	181
R122	181
R123	181
R124	181
R125	181
R126	181
R127	181
R128	181
R129	181
R130	181

RESISTOR

SYMBOL NO.	INDEX NO.
R131	181
R132	176
R133	176
R134	176
R135	176
R136	176
R137	183
R138	183
R139	171
R140	176

SYMBOL NO.	INDEX NO.
R141	176
R142	183
R143	183
R144	183
R145	183
R146	176
R147	161
R148	176
R149	170
R150	161

SYMBOL NO.	INDEX NO.
R151	169
R152	164
R153	164
R154	164
R155	170
R156	170
R157	170
R158	164
R159	164
R160	170

SYMBOL NO.	INDEX NO.
R161	170
R162	170
R163	170
R164	164
R165	170
R166	170
R167	164
R168	164
R169	158
R170	158

SYMBOL NO.	INDEX NO.
R171	170
R172	170
R173	170
R174	170
R175	170
R176	170
R177	170
R178	180
R179	177
R180	160

SYMBOL NO.	INDEX NO.
R181	162
R182	158
R183	162
R184	160
R185	159
R186	159
R187	162
R188	160
R189	161
R190	164

SYMBOL NO.	INDEX NO.
R191	164
R192	164
R193	164
R194	164
R195	164
R196	164
R197	164
R198	176
R199	158
R200	176

18.MAIN CONTROL BOARD (B352)

RESISTOR

SYMBOL NO.	INDEX NO.	SYMBOL NO.	INDEX NO.	SYMBOL NO.	INDEX NO.	SYMBOL NO.	INDEX NO.	SYMBOL NO.	INDEX NO.	SYMBOL NO.	INDEX NO.	SYMBOL NO.	INDEX NO.
R201	176	R211	174	R221	165	R231	170	R241	177	R251	167	R261	163
R202	159	R212	159	R222	165	R232	170	R242	170	R252	165	R262	169
R203	165	R213	176	R223	176	R233	170	R243	170	R253	180	R263	176
R204	165	R214	176	R224	176	R234	170	R244	165	R254	177	R264	176
R205	174	R215	165	R225	180	R235	164	R245	165	R255	164	R265	170
R206	168	R216	175	R226	177	R236	176	R246	165	R256	170	R266	170
R207	182	R217	165	R227	170	R237	176	R247	167	R257	176	R267	170
R208	182	R218	176	R228	170	R238	176	R248	165	R258	178	R268	170
R209	179	R219	173	R229	170	R239	176	R249	165	R259	166	R269	164
R210	182	R220	165	R230	170	R240	180	R250	176	R260	176	R270	170

RESISTOR

SYMBOL NO.	INDEX NO.
R271	172
R272	172
R273	165
R274	165
R275	164
R276	164
R277	170
R278	170
R279	170

RAY

SYMBOL NO.	INDEX NO.
RAY101	156
RAY102	156
RAY103	154
RAY104	156
RAY105	154
RAY106	154
RAY107	154
RAY108	154
RAY109	154
RAY110	154

SYMBOL NO.	INDEX NO.
RAY111	156
RAY112	154
RAY113	154
RAY114	154
RAY115	154
RAY116	155
RAY117	155
RAY118	154
RAY119	155
RAY120	156

SYMBOL NO.	INDEX NO.
RAY121	156
RAY122	156
RAY123	156
RAY124	154
RAY125	154
RAY126	156
RAY127	156

TP

SYMBOL NO.	INDEX NO.
TP101	101
TP102	101
TP103	101
TP104	101

ZD

SYMBOL NO.	INDEX NO.
ZD101	133
ZD102	133
ZD103	135

18.MAIN CONTROL BOARD (B352)


Index No.	Part No.	Description	Q'ty Per Assembly
*	B352 5500	Main Control Board	1
1	A377 5150	IC - TC11DG03AF-0071	1
2	B352 5650	EPROM - Main Control	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	1101 0328	Connector Pin Contact	
102	1102 4201	Connector - 2P	
103	1102 4203	CT Header - 4P	
104	1102 4204	CT Header - 5P	
105	1102 4205	CT Header - 6P	
106	1102 4206	Connector - 7P	
107	1102 4207	Connector - 8P	
108	1102 4208	Connector - 9P	
109	1102 4209	CT Header - 10P	
110	1102 4210	Connector - 11P	
111	1102 4212	CT Header - 15P	
112	1102 4464	CT Header(h) - 6P	
113	1102 4465	Connector - 7P	
114	1102 4497	Connector - 13P	
115	1102 4624	CT Connector - 7P	
116	1102 4625	CT Connector 8P	
117	1102 4626	Connector - 9P	
118	1102 4630	CT Connector	
119	1102 5007	CT Header - 14P	
120	1102 5301	Connector - 2P	
121	1102 6295	Connector - 2P	
122	1102 6301	Connector - 8P	
123	1102 6302	Connector - 9P	
124	1102 6956	Connector - 13P	
125	1104 0333	Fuse Holder	
126	1104 0589	Dip Socket - 32P	
127	1107 0884	Fuse - 5A 250V	
128	1204 2368	Dip Switch - DSS804	
129	1400 0398	Transistor - 2SC2412K	
130	1400 0748	Transistor - FMG1A	
131	1400 0762	Transistor - 2SB1344	
132	1400 0763	Transistor - 2SD2025	
133	1402 1353	Diode - HZ12BP	
134	1402 1506	Diode - ERA15-02	
135	1402 1507	Diode - UDZS8.2B	

Index No.	Part No.	Description	Q'ty Per Assembly
136	1402 1559	Diode - ERC91-02	
137	1403 0519	Photocoupler - TLP621	
138	1407 1596	TTLIC - SN74LS14NS	
139	1407 2187	TTLIC - SN74LS07NS	
140	1407 2218	TTLIC - SN74LS06NS	
141	1407 2231	IC - TD62308AF	
142	1407 3202	CMOS IC - TC74HC00AF	
143	1407 3286	IC - TC74HC04AF	
144	1407 3290	IC - TC74HC02AF	
145	1407 3395	CMOS IC - TC74HC541AF	
146	1407 4316	IC - TD52308BF	
147	1407 4724	CPU HD6413003TF-16	
148	1408 0611	IC - 3771	
149	1408 0827	IC - TA8429H	
150	1408 1200	IC - STK681-050	
151	1408 1287	IC - SI-8501L	
152	1408 1394	IC - STK672-110	
153	1503 0347	Oscillator - 12MHZ	
154	1601 7751	Resistor - 4.7K Ω $\pm$ 5%	
155	1601 7752	Resistor Array - 10K Ω $\pm$ 5%	
156	1601 7814	Resistor 3.3k Ω $\pm$ 5%	
157	1607 0069	Fuse - BI02rn2-r62-pb	
158	1630 1562	Resistor - 5.6 Ω $\pm$ 5% 1/4W	
159	1630 3101	Resistor - 100 Ω - 1/10W	
160	1630 3103	Resistor - 10K Ω 1/10W $\pm$ 5%	
161	1630 3122	Resistor - 1.2K Ω 1/10W $\pm$ 5%	
162	1630 3472	Resistor - 4.7K Ω 1/10W $\pm$ 5%	
163	1630 4100	Resistor - 10 Ω $\pm$ 5% 1/16W	
164	1630 4102	Resistor - 1.0K Ω $\pm$ 5% 1/16W	
165	1630 4103	Resistor - 10K Ω $\pm$ 5% 1/16W	
166	1630 4161	Resistor - 160 Ω $\pm$ 5% 1/16W	
167	1630 4203	Resistor - 20K Ω $\pm$ 5% 1/16W	
168	1630 4221	Resistor - 220 Ω $\pm$ 5% 1/16W	
169	1630 4222	Resistor - 2.2K Ω $\pm$ 5%	
170	1630 4223	Resistor - 22K Ω $\pm$ 5% 1/16W	

Index No.	Part No.	Description	Q'ty Per Assembly
171	1630 4330	Resistor - 33 Ω $\pm$ 5% 1/8W	
172	1630 4332	Resistor - 3.3K Ω $\pm$ 5% 1/16W	
173	1630 4362	Resistor - 3.6K Ω $\pm$ 5% 1/16W	
174	1630 4391	Resistor - 390 Ω $\pm$ 5.00% 1/16W	
175	1630 4392	Resistor - 3.9 Ω $\pm$ 5% 1/16W	
176	1630 4472	Resistor - 4.7K Ω $\pm$ 5% 1/16W	
177	1630 4511	Resistor - 510 Ω - $\pm$ 5% - 1/16W	
178	1630 4562	Resistor - 5.6k Ω - $\pm$ 5% - 1/16W	
179	1630 4821	Resistor - 820 Ω $\pm$ 5% 1/16W	
180	1630 4822	Resistor - 8.2 Ω $\pm$ 5% 1/16W	
181	1630 4910	Resistor - 91 Ω $\pm$ 5% 1/16W	
182	1630 4912	Resistor - 9.1K Ω $\pm$ 5% 1/16W	
183	1634 0000	Resistor - 0 Ω 1/16W	
184	1640 0331	Capacitor - 330 μ F10V $\pm$ 20%	
185	1640 5100	Capacitor - 10 μ F+20% 50	
186	1640 5101	Capacitor - 100 μ F $\pm$ 20% 50V	
187	1640 5109	Capacitor - 1 μ F- $\pm$ 20% - 50V	
188	1660 2471	Capacitor - 470pF - $\pm$ 5% - 50V	
189	1660 4102	Capacitor - 1000pF $\pm$ 10% 50V	
190	1660 4103	Capacitor - 10000pF - $\pm$ 10% - 50V	
191	1660 4472	Capacitor - 4700pF $\pm$ 10% 50V	
192	1660 7104	Capacitor - 100000pF 50V	
193	1660 8104	Capacitor - 0.1 μ F+80-20% 25V	

 19.DECAL AND DOCUMENT (B352)

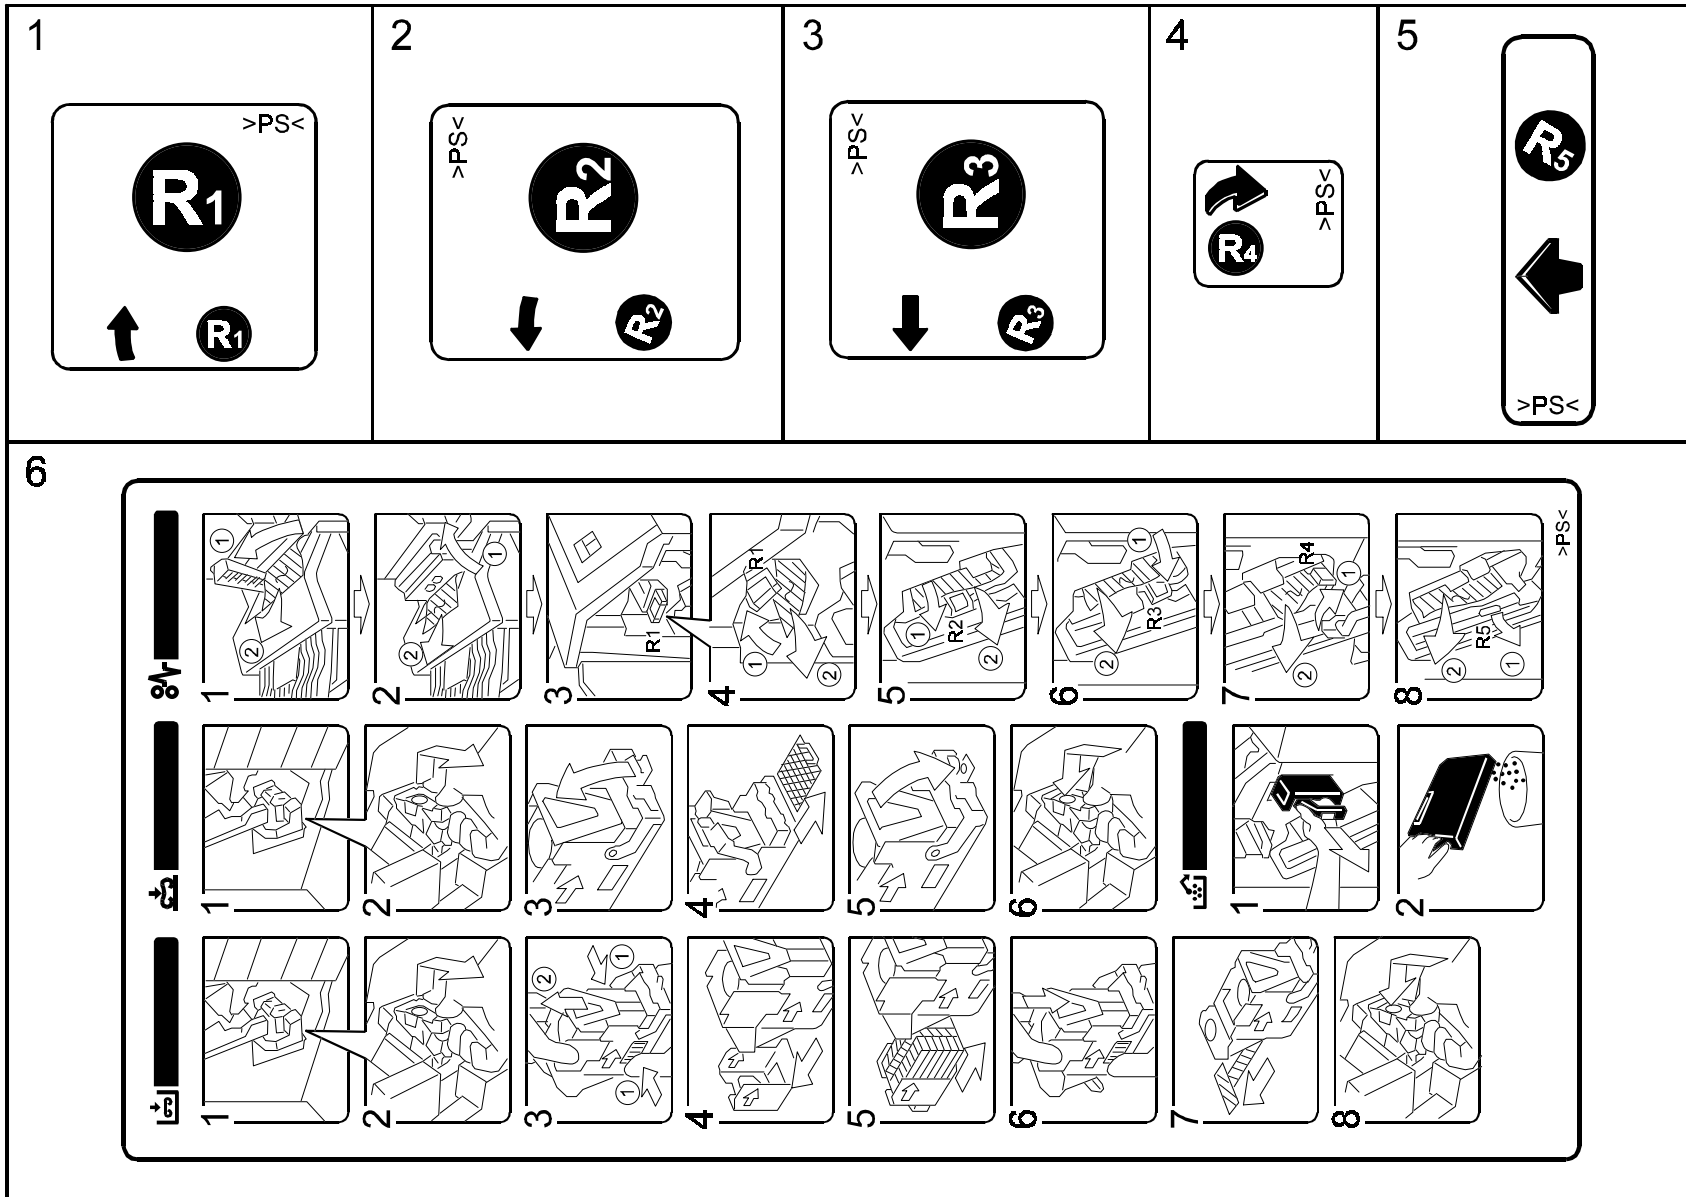

19.DECAL AND DOCUMENT (B352)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B352 7101	Decal - R1	1
2	B352 7151	Decal - R2	1
3	B352 7201	Decal - R3	1
4	B352 7251	Decal - R4	1
5	B352 7301	Decal - R5	1
6	B352 7351	Decal - Misfeed Removal	1

Index No.	Part No.	Description	Q'ty Per Assembly

Parts Index

Parts Index

Part No.	Description	Page and Index No.
B352 1120	Stay - Stapler Tray	21- 3
B352 1130	Caster - M50 - 490n	21- 6
B352 1135	Bracket - Harness Clamp	11- 11
B352 1140	Board Bracket	39- 2
B352 1150	Upper Cover Bracket	39- 3
B352 1160	Grounding Plate Bracket	7- 7
B352 1533	Tightener	25- 3
B352 1600	Timing Pulley - S2M T24	25- 34
B352 1600	Timing Pulley - S2M T24	31- 4
B352 1601	Timing Belt - B40S2M196	37- 3
B352 1602	Timing Pulley - T20-S2M	11- 12
B352 1605	Timing Belt - B40S3M216	13- 17
B352 1606	Timing Pulley - T20-S3M	15- 2
B352 1606	Timing Pulley - T20-S3M	13- 16
B352 1607	Timing Pulley - T20-S3M	17- 5
B352 1607	Timing Pulley - T20-S3M	15- 1
B352 1607	Timing Pulley - T20-S3M	13- 1
B352 1610	Timing Belt - B40S3M612	37- 4
B352 1617	Timing Belt - B40S3M759	37- 7
B352 1620	Exit Roller Bracket	31- 2
B352 1630	Tension Spring	25- 4
B352 1631	Timing Belt - B40S2M594	25- 23
B352 1632	Timing Belt - B40S2M200	31- 3
B352 2084	DC Solenoid Assembly	17- 3
B352 2090	DC Solenoid Assembly	29- 21
B352 2090	DC Solenoid Assembly	37- 29
B352 2100	Entrance Cover	9- 19
B352 2101	Guide Plate - Entrance Cover	9- 20
B352 2110	Upper Guide Plate	13- 2
B352 2111	Guide Plate - Transport Cover	9- 6
B352 2112	Link - Transport Cover	9- 9
B352 2113	Link Spacer	9- 7
B352 2114	Pressure Spring	9- 8
B352 2115	Transport Cover	9- 11
B352 2120	Upper Guide Plate - Exit	25- 7

Part No.	Description	Page and Index No.
B352 2124	Upper Guide Plate - Exit Small	25- 35
B352 2125	Upper Bracket - Papaer Exit Unit	25- 31
B352 2126	Upper Bracket - Paper Feed Sensor	25- 26
B352 2131	Exit Guide	25- 36
B352 2132	Front Exit Plate	25- 37
B352 2133	Rear Exit Plate	25- 38
B352 2135	Sector Gear - Transport Cover	9- 17
B352 2136	Oil Damper Shaft	9- 16
B352 2137	Bracket - Oil Damper	9- 14
B352 2138	Bracket - Entrance Cover	9- 18
B352 2139	Bracket - Transport Cover	9- 15
B352 2140	Oil Damper	9- 13
B352 2145	Support Plate - Trnasport Cover	9- 21
B352 2200	Lower Guide Plate	17- 27
B352 2201	Guide - Trailing Edge	17- 29
B352 2203	Discharge Brush - Stapler Tray	17- 30
B352 2204	Driven Roller	13- 12
B352 2204	Driven Roller	17- 26
B352 2204	Driven Roller	15- 23
B352 2204	Driven Roller	9- 1
B352 2205	Bushing - Driven Roller	15- 12
B352 2205	Bushing - Driven Roller	13- 10
B352 2205	Bushing - Driven Roller	17- 24
B352 2205	Bushing - Driven Roller	9- 2
B352 2206	Tension Spring - Lower Guide	17- 28
B352 2207	Pad - Stapler Tray	17- 38
B352 2210	Vertical Transport Guide	15- 4
B352 2215	Exit Sensor Bracket	17- 17
B352 2217	Exit Guide Plate	13- 15
B352 2220	Stay - Guide Holder	17- 19
B352 2221	Holder - Paper Guide	17- 20
B352 2222	Paper Guide - Trailing Edge	17- 21
B352 2229	Roller - Paper Guide	17- 22
B352 2232	Torsion Spring	17- 23
B352 2235	Mylar - Exit Guide	13- 21

Part No.	Description	Page and Index No.
B352 2251	Upper Relay Guide	11- 5
B352 2365	Upper Left Pad	25- 2
B352 2400	Exit Roller	31- 24
B352 2400	Exit Roller	25- 12
B352 2405	Outer Exit Roller	25- 13
B352 2405	Outer Exit Roller	31- 23
B352 2406	Exit Rooler Shaft	31- 28
B352 2406	Exit Roller Shaft	25- 14
B352 2407	Reverse Roller - 20Z	31- 25
B352 2407	Reverse Roller - 20Z	25- 16
B352 2408	Gear - 26Z	25- 40
B352 2408	Gear - 26Z	31- 30
B352 2409	Idler Gear - 17Z	25- 17
B352 2409	Idler Gear - 17Z	31- 31
B352 2410	Front Arm - Reverse Roller	31- 27
B352 2410	Front Arm - Reverse Roller	25- 15
B352 2411	Rear Arm - Reverse Roller	25- 41
B352 2411	Rear Arm - Reverse Roller	31- 26
B352 2415	Lower Guide Plate	31- 17
B352 2420	Guide Plate - Shift Tray	13- 8
B352 2425	Lower Turn Guide Plate	13- 4
B352 2430	Guide Plate - Turn Gate	13- 13
B352 2431	Sheet - Guide Plate	13- 14
B352 2435	Exit Guide	31- 15
B352 2436	Exit Driven Roller	31- 34
B352 2440	Junction Gate - Stapler Tray	13- 6
B352 2445	Pulley - T31	17- 4
B352 2446	Positioning Roller Shaft	17- 10
B352 2450	Support Plate - Guide Plate	13- 7
B352 2500	Support Guide - Punch Unit	11- 7
B352 2505	Front Cover - Hopper	11- 16
B352 2506	Rear Cover - Punch Unit	11- 10
B352 2600	Upper Transport Roller	13- 24
B352 2610	Shift Transport Roller	13- 25
B352 2620	Lower Transport Roller	11- 8

Part No.	Description	Page and Index No.
B352 2620	Lower Transport Roller	15- 8
B352 2630	Exit Roller - Stapler	17- 31
B352 2650	Magnet Catch - 5N	13- 9
B352 2650	Magnet Catch - 5N	9- 25
B352 3013	Shaft - Upper Drive	27- 9
B352 3016	Shaft - Lower Drive	33- 9
B352 3100	Sensor Feeler	31- 20
B352 3100	Sensor Feeler	25- 29
B352 3101	Holder - Sensor Feeler	31- 18
B352 3101	Holder - Sensor Feeler	25- 28
B352 3102	Micro Switch Lever	31- 5
B352 3102	Micro Switch Lever	25- 18
B352 3105	Bracket - Micro Switch	25- 21
B352 3105	Bracket - Micro Switch	31- 7
B352 3110	End Fence	33- 3
B352 3115	Sensor Bracket	33- 5
B352 3120	Stay - Upper Exit	35- 8
B352 3125	Stay - Lower Exit	35- 9
B352 3130	Exit Stay	25- 24
B352 3131	Upper Left Stay	35- 18
B352 3135	Stay - Positioning Sensor	39- 12
B352 3140	End Fence Cover	33- 10
B352 3145	Timing Pulley - T18	33- 24
B352 3145	Timing Pulley - T18	27- 7
B352 3146	Timing Pulley - T18	27- 22
B352 3146	Timing Pulley - T18	33- 7
B352 3150	Lower Tightener	33- 11
B352 3155	Upper Tightener	27- 11
B352 3160	Timing Belt - B60S5M1530	33- 6
B352 3161	Timing Belt - B60S5M1055	27- 6
B352 3165	Timing Belt Guide Plate	27- 4
B352 3165	Timing Belt Guide Plate	33- 14
B352 3170	Spacer	27- 18
B352 3175	Cam - Paper Exit Unit	35- 4
B352 3180	Motor Bracket	35- 3

Part No.	Description	Page and Index No.
B352 3185	Bracket - Open Link	31- 11
B352 3190	Driven Roller Link	31- 10
B352 3195	Exit Switch holder	35- 19
B352 3200	Bracket - Tray Lift Motor	37- 15
B352 3205	Gear - 26Z	37- 20
B352 3206	Worm Wheel - 30Z	37- 18
B352 3210	Exit Roller Cover	31- 22
B352 3215	Adjusting Bracket - Sensor Feeler	31- 21
B352 3215	Adjusting Bracket - Sensor Feeler	25- 30
B352 3220	Roller Pad	25- 33
B352 3220	Roller Pad	31- 38
B352 3225	Pad - Switch Lever	31- 36
B352 3225	Pad - Switch Lever	25- 39
B352 3510	Base - Upper Tray	29- 3
B352 3515	Front Stopper - Tray Shift	29- 7
B352 3516	Base Bracket	29- 32
B352 3517	Slide Guide	29- 31
B352 3520	Side Plate - Upper Front	27- 5
B352 3530	Side Plate - Upper Rear	27- 3
B352 3560	Base - Shift	29- 33
B352 3570	Support Plate - Tray Shift	29- 8
B352 3571	Slider Bearing	29- 9
B352 3572	Bushing - 6mm	29- 4
B352 3575	Shaft - Upper Tray	29- 5
B352 3576	Gear - 20Z	29- 13
B352 3577	Shaft Cap	29- 35
B352 3580	Worm Wheel - 40Z	29- 10
B352 3585	Motor Bracket	29- 24
B352 3586	Shift - Worm Gear	29- 23
B352 3587	Timing Belt - B0S2M104	29- 26
B352 3590	Rear Shaft - Upper Tray	29- 16
B352 3591	Gear - 40Z	29- 15
B352 3592	Idle Gear - 20Z	29- 14
B352 3593	Ratchet - Tray Lock	29- 20
B352 3594	Torque Limiter - 100MN	29- 27

Part No.	Description	Page and Index No.
B352 3601	End Fence	27- 12
B352 3605	Upper Guide - End Fence	27- 10
B352 3608	Tension Spring - End Fence	27- 14
B352 3611	Guide Plate - End Fence	27- 13
B352 3621	Rail - Front End Fence	27- 16
B352 3629	End Fence Roller	27- 17
B352 3631	Rail - Rear End Fence	27- 15
B352 3650	Bracket - Tray Safety Switch	29- 29
B352 3655	Switch Holder	25- 20
B352 3655	Switch Holder	31- 6
B352 3655	Switch Holder	29- 28
B352 3656	Compression Spring	9- 23
B352 3656	Compression Spring	31- 37
B352 3656	Compression Spring	25- 22
B352 3656	Compression Spring	29- 30
B352 3700	Bracket - Lock Lever	29- 17
B352 3705	Lock Lever - Upper Tray	29- 19
B352 3751	Base Upper Cover	29- 12
B352 3761	Base Cover	27- 19
B352 3766	Slide Cover	29- 2
B352 3771	Upper Harness - Shift Tray	29- 1
B352 3810	Side Plate - Lower Front	33- 13
B352 3820	Side Plate - Lower Rear	33- 16
B352 3831	Base - Lower Tray	33- 18
B352 3833	Short Cushion - Base	33- 25
B352 3835	Tray Shift Shaft	33- 12
B352 3840	Lower Tray Holder	33- 1
B352 3844	Long Cushion - Base	33- 26
B352 3845	Slider Pawl	33- 2
B352 3911	Shift Tray	7- 18
B352 3921	Sub - Shift Tray	7- 17
B352 4079	Stapler Unit	23- 32
B352 4100	Stapler Tray	21- 15
B352 4111	Side Plate - Front Tray - Stapler	21- 7
B352 4121	Rear Side Plate - Stapler Tray	21- 22

Part No.	Description	Page and Index No.
B352 4131	Front Jogger Fence	19- 15
B352 4141	Rear Jogger Fence	19- 14
B352 4151	Upper Stay - Jogger Fence	19- 2
B352 4152	Upper Slider - Jogger Fence	19- 3
B352 4153	Upper Bracket - Jogger Fence	19- 4
B352 4161	Jogger Fence Stay	19- 8
B352 4162	Jogger Fence Slider	19- 17
B352 4163	Jogger Fence Bracket	19- 16
B352 4165	Slider Shaft - Jogger Fence	19- 18
B352 4171	Jogger Motor Bracket	19- 11
B352 4175	Timing Pulley - Jogger Drive	19- 12
B352 4181	Tightener	19- 19
B352 4185	Timing Belt - 940P2M4	19- 13
B352 4211	Slider Fence Stay	21- 5
B352 4215	Shaft - Jogger Fence	19- 1
B352 4215	Shaft - Jogger Fence	21- 9
B352 4221	Front Training Edge Fence	21- 10
B352 4231	Rear Training Edge Fence	21- 13
B352 4232	Slider - Training Edge Fence	21- 8
B352 4237	Sheet - Pull Out Pawl	21- 16
B352 4242	Exit Belt-900p2m14	21- 18
B352 4245	Bracket - Pull Out Sensor	19- 6
B352 4251	Upper Exit Shaft	21- 21
B352 4255	Timing Belt - 258P2M4	21- 24
B352 4261	Tightener - Exit Belt	19- 7
B352 4311	Stapler Unit Slider	23- 12
B352 4315	Spring - 18N	23- 16
B352 4316	Stopper - Timing Belt	23- 10
B352 4317	Fence Hook	23- 14
B352 4318	Bushing - Lower Slider	23- 11
B352 4321	Lower Slider - Staple Unit	23- 17
B352 4328	Harness Holder	23- 18
B352 4331	Sector Gear - Staple Unit	23- 19
B352 4341	Slider - Staple Unit	23- 24
B352 4347	Bushing - 6mm	23- 34

Part No.	Description	Page and Index No.
B352 4351	Gear - 46Z/25Z	23- 21
B352 4352	Gear - 46Z/19Z	23- 26
B352 4353	Pinion - 46Z/18Z	23- 25
B352 4354	Gear - 27Z	23- 22
B352 4355	Slider Holder - Staple Unit	23- 20
B352 4358	Stapler Base Cover	23- 31
B352 4361	Sensor Bracket	23- 23
B352 4371	Stapler Base	23- 33
B352 4378	Stapler Cover	23- 30
B352 4411	Bracket - Stapler Movement	23- 2
B352 4415	Guide Rod	23- 13
B352 4421	Timing Pulley - Drive	23- 3
B352 4422	Timing Belt - 918P3M4	23- 4
B352 4431	Tightener Bracket	23- 6
B352 5302	Harness - Entrance	39- 4
B352 5304	Upper Harness - Stapler Tray	39- 14
B352 5305	Stapler Harness	23- 29
B352 5306	Harness - Motor	39- 5
B352 5307	Harness - Lower Shift Tray	39- 10
B352 5308	Sensor Harness - Lower Shift Tray	39- 7
B352 5309	Harness - Paper Sensor	25- 11
B352 5309	Harness - Paper Sensor	39- 8
B352 5310	Harness - Safety Switch	39- 9
B352 5316	Upper Relay Harness - Shift Tray	39- 6
B352 5320	Relay Harness - Shift Motor	35- 20
B352 5321	Sensor Relay Harness - 430mm	31- 35
B352 5322	Sensor Relay Harness - 240mm	11- 2
B352 5323	Sensor Relay Harness - 280mm	25- 25
B352 5325	Paper Sensor Relay Harness	31- 29
B352 5326	Sensor Relay Harness - 560mm	23- 39
B352 5401	Interface Harness	39- 11
B352 5450	Bushing - CE-012LV0	31- 40
B352 5500	Main Control Board	43- *
B352 5500	Main Control Board	39- 1
B352 5650	EPROM - Main Control	43- 2

Part No.	Description	Page and Index No.
B352 5700	EPROM - Main Control	39- 15
B352 6101	Upper Cover	7- 3
B352 6201	Front Cover	7- 10
B352 6202	Grip Cover	7- 12
B352 6203	Upper Hinge - Front Door	7- 8
B352 6206	Lower Hinge - Front Door	7- 15
B352 6301	Rear Cover	7- 2
B352 6401	Upper Left Cover	25- 1
B352 6451	Lower Left Cover	7- 16
B352 6501	Inner Cover	7- 9
B352 6601	Front Cover - Upper Tray	27- 2
B352 6651	Rear Cover - Upper Tray	27- 1
B352 6701	Front Cover - Lower Tray	33- 15
B352 6751	Rear Cover - Lower Tray	33- 17
B352 7101	Decal - R1	45- 1
B352 7101	Decal - R1	13- 18
B352 7151	Decal - R2	15- 17
B352 7151	Decal - R2	45- 2
B352 7201	Decal - R3	15- 18
B352 7201	Decal - R3	45- 3
B352 7251	Decal - R4	17- 32
B352 7251	Decal - R4	45- 4
B352 7301	Decal - R5	19- 23
B352 7301	Decal - R5	45- 5
B352 7351	Decal - Misfeed Removal	7- 11
B352 7351	Decal - Misfeed Removal	45- 6
B352 7507	Screw - Punch	11- 15

Part No.	Description	Page and Index No.
AA04 3054	Timing Belt - 142 P2M4	37- 13
AA06 0092	Release Spring	29- 18
AA06 0092	Release Spring	37- 11
AA06 0557	Positioning Roller Spring	17- 7
AA06 3529	Pressure Spring - 14.5mm	15- 22
AA06 3529	Pressure Spring - 14.5mm	13- 11
AA06 3529	Pressure Spring - 14.5mm	9- 3
AA08 0238	Bushing - M6	13- 22
AA08 0238	Bushing - M6	15- 25
AA08 0238	Bushing - M6	17- 37
AA08 0238	Bushing - M6	25- 19
AA08 0238	Bushing - M6	11- 19
AA08 0238	Bushing - M6	31- 33
AA12 0027	Antistatic Brush	31- 8
AA12 0090	Discharge Brush L=320 MM3	25- 10
AA16 1099	Lever Cushion	17- 34
AB01 3709	Worm Gear	37- 17
AB03 0278	Idler - 20z	23- 7
AG07 1010	Magnet Catch	15- 11
AH01 2019	Caster	21- 4
AW01 0070	Photosensor - PS-R11D1-B	31- 13
AW01 0076	Photosensor - PS-117D1	21- 14
AW01 0089	Photosensor - GP2A28C	11- 1
AW01 0089	Photosensor - GP2A28C	33- 4
AW02 0049	Photointerruptor - Os - 580213-703	17- 16
AW02 0075	Photointerruptor	29- 11
AW02 0075	Photointerruptor	35- 16
AW02 0086	Photointerruptor	9- 12
AW02 0086	Photointerruptor	31- 19
AW02 0086	Photointerruptor	35- 6
AW02 0086	Photointerruptor	23- 5
AW02 0086	Photointerruptor	25- 32
AW02 0086	Photointerruptor	19- 10
AW02 0104	Photointerruptor	25- 27
AW02 0114	Photo Interruptor - Lower Limit	23- 40

Part No.	Description	Page and Index No.
AW02 0114	Photo Interruptor - Lower Limit	29- 39
AW02 0114	Photo Interruptor - Lower Limit	39- 13
AX04 0053	DC Motor - 24V/2.2W	35- 2
AX04 0121	Stepping Motor - DC 6.5W	37- 1
AX05 0115	DC Motor - 24V 7.2W	35- 15
AX05 0160	Stepper Motor - MM42 0.85A	19- 9
AX05 0160	Stepper Motor - MM42 0.85A	23- 27
AX05 0161	DC Motor - DC24V 7.2W	29- 22
AX06 0211	DC Motor - NA4056D05	37- 16
AX21 0069	Magnetic Clutch - Z30	29- 6
B302 4629	Guide Mylar	19- 24
B312 1515	Stepping Motor - DC 6.2W	37- 6
B312 1521	Timing Pulley - 20T	15- 3
B312 1524	Motor Bracket	37- 2
B312 1550	Stepping Motor - DC 6.2W	31- 1
B312 1600	Tightener	37- 22
B312 1605	Tightener	37- 25
B312 1615	Tension Roller	25- 9
B312 1615	Tension Roller	37- 26
B312 2100	Pre-stack Gate	15- 7
B312 2105	Pre-stack Gate Solenoid	37- 27
B312 2106	Bracket - Pre-stack Gate Solenoid	37- 12
B312 2151	Left Guide - Vertical Transport	15- 15
B312 2166	Vertical Guide	15- 6
B312 2171	Middle Guide - Vertical Transport	15- 10
B312 2172	Driven Roller	15- 14
B312 2173	Support Plate	15- 9
B312 2174	Pressure Spring - 12mm	15- 13
B312 2176	Transport Roller	13- 3
B312 2176	Transport Roller	15- 5
B312 2187	Positioning Roller	17- 12
B312 4121	Stepping Motor	21- 19
B312 4126	Pulley - 32T	21- 23
B312 4145	Stepping Motor - 8.0W	23- 1
G011 3275	Snap Ring	29- 40

Part No.	Description	Page and Index No.
G020 2630	Magnetic Catch	7- 13
G020 4429	Exit Sensor	19- 5
G034 2986	Flanged Hexagonal Head Bolt - M4x8	7- 1
G034 2993	Flanged Hexagonal Head Bolt - M3x6	11- 18
G034 2993	Flanged Hexagonal Head Bolt - M3x6	7- 4
G522 1152	Flanged Hexagonal Head Bolt	7- 19
G565 4234	Front Entrance Guide	21- 12
G565 4235	Rear Fence Guide	21- 2
A049 3371	Magnet	9- 4
A300 2132	Guide Roller	23- 35
A300 3634	Spring Plate - Timing Belt	19- 25
A300 3731	Slide Supporter	23- 15
A300 3759	Spring	21- 11
A300 3812	Spacer - 6x22x1.5	23- 38
A300 3813	Shaft - 6x21.5	21- 25
A300 3851	Positioning Roller Bracket	17- 6
A300 3858	Stepped Screw - M4	17- 1
A300 3865	Release Spring	17- 2
A353 2763	Washer - M5	21- 26
A353 3113	Pressure Spring	37- 19
A353 3272	Guide Roller	29- 34
A353 3272	Guide Roller	33- 23
A353 3351	Exit Driven Roller	33- 22
A353 3354	Driven Roller Holder	31- 14
A376 1295	Spacer - M6x10x5	17- 33
A376 1295	Spacer - M6x10x5	15- 19
A377 4741	Roller - M14	23- 37
A377 5150	IC - TC11DG03AF-0071	43- 1
A379 2212	Driven Roller Shaft	31- 16
A379 2213	Exit Guide Bracket	31- 9
A379 2811	Positioning Roller Arm	17- 8
A379 3316	Shift Guide Roller	27- 20
A379 3316	Shift Guide Roller	33- 19
A458 2251	Cushion - Bin Solenoid Lever	15- 20
A458 2251	Cushion - Bin Solenoid Lever	17- 36

Part No.	Description	Page and Index No.
A458 2251	Cushion - Bin Solenoid Lever	13- 20
A606 1595	Small Door Cover	7- 14
A612 1612	Bracket - Motor	37- 5
A612 2435	Support Plate	15- 16
A612 2435	Support Plate	9- 5
A666 2213	Shift Tray Roller	33- 20
A666 2347	Gear - Z45	27- 8
A666 2347	Gear - Z45	33- 8
A666 3180	Timing Pulley - Z32	21- 20
A666 4170	Stepped Screw - M3x6	31- 39
A666 4170	Stepped Screw - M3x6	25- 6
A666 4260	Entrance Roller	25- 5
A680 1181	Magnetic Catch	9- 22
A681 2702	Worm Wheel - 20Z	35- 1
A681 2711	Worm Gear - 50z	35- 5
A681 3316	Shift Tray Worm	29- 25
A697 1100	Right Stay	11- 13
A697 1100	Right Stay	17- 18
A697 1117	Base Palte Cap	21- 1
A697 1125	Stepped Screw - Lever	23- 9
A697 1125	Stepped Screw - Lever	25- 8
A697 1125	Stepped Screw - Lever	19- 20
A697 1125	Stepped Screw - Lever	37- 24
A697 1125	Stepped Screw - Lever	11- 17
A697 1128	Joint Lever	11- 14
A697 1144	Rear Joint Bracket	7- 5
A697 1151	Hopper Bracket	11- 9
A697 1153	Front Joint Bracket	7- 6
A697 1518	Spring-oil Blade	37- 23
A697 1606	Spacer - 6x12x2.7mm	33- 21
A697 2102	Dumper - Junction Gate Sololenoid	29- 38
A697 2102	Dumper - Junction Gate Sololenoid	37- 28
A697 2105	Bracket - Junction Gate Solenoid	37- 8
A697 2131	Antistatic Brush	35- 7
A697 2131	Antistatic Brush	31- 12

Part No.	Description	Page and Index No.
A697 2145	Entrance Sensor Bracket	11- 4
A697 2150	Lower Entrance Guide	11- 3
A697 2187	Pressure Spring - 14.1mm	17- 25
A697 2235	Bracket - Junction Gate Solenoid	37- 21
A697 2245	Junction Gate - Proof Tray	13- 5
A697 2250	Lower Relay Guide	11- 6
A697 3195	Worm Wheel	35- 11
A697 3200	Worm Wheel Shaft	35- 10
A697 3205	Shift Sensor Bracket	35- 17
A697 3210	Shift Motor Bracket	35- 14
A697 3215	Pulley - 19T	35- 13
A697 3220	Timing Belt - B40S2M112	35- 12
A697 3225	Worm Wheel Shaft	37- 14
A697 4150	Stepped Screw - M5	23- 36
A697 4170	Pulley - 32T	19- 22
A697 4235	Paper Exit Pawl	21- 17
A821 1661	Interlock Switch Cover	17- 15
A821 1662	Interlock Switch Lever	17- 14

Part No.	Description	Page and Index No.
5053 0447	Bushing - 6mm	17- 35
5053 0447	Bushing - 6mm	31- 32
5053 0447	Bushing - 6mm	29- 37
5053 0447	Bushing - 6mm	25- 42
5053 0447	Bushing - 6mm	21- 27
5053 0447	Bushing - 6mm	35- 21
5053 0447	Bushing - 6mm	15- 24
5053 0447	Bushing - 6mm	13- 23
5053 0447	Bushing - 6mm	11- 20
5442 4121	Spring - Oil Blade	19- 21
5442 4121	Spring - Oil Blade	23- 8
5443 2668	Bushing - 4x6x7mm	29- 36
5446 2824	Screw - Duplex Guide Plate	27- 21
5446 2824	Screw - Duplex Guide Plate	9- 24
5447 2681	Snap Ring	17- 13
5447 2681	Snap Ring	15- 21
5447 2681	Snap Ring	9- 10
5919 2127	Positioning Roller Pulley	17- 9
5919 2132	Positioning Roller Belt	17- 11

Part No.	Description	Page and Index No.
0242 0035B	Pan Head Screw - M2x3.5	21-108
0313 0040B	Philips Pan Head Screw - M3x4	37-106
0313 0050B	Philips Pan Head Screw - M3x5	29-106
0313 0050B	Philips Pan Head Screw - M3x5	37-107
0313 0100B	Philips Pan Head Screw - M3x10	33-106
0313 0100B	Philips Pan Head Screw - M3x10	31-106
0313 0120B	Philips Pan Head Screw - M3x12	11-103
0353 0050B	Philips Truss Head Screw - M3x5	23-108
0353 0060B	Philips Pan Head Screw - M3x6	25-103
0450 3008B	Tapping Screw - M3x8	21-105
0450 3008B	Tapping Screw - M3x8	9-101
0450 3008B	Tapping Screw - M3x8	19-102
0450 3008B	Tapping Screw - M3x8	13-104
0450 3008B	Tapping Screw - M3x8	7-102
0450 3010B	Tapping Screw - M3x10	9-102
0450 4008B	Tapping Screw - 4x8	31-107
0451 3006B	Tapping Screw - M3x6	31-101
0451 3006B	Tapping Screw - M3x6	21-101
0451 3006B	Tapping Screw - M3x6	23-101
0451 3006B	Tapping Screw - M3x6	19-101
0451 3006B	Tapping Screw - M3x6	17-106
0451 3006B	Tapping Screw - M3x6	33-103
0451 3006B	Tapping Screw - M3x6	37-102
0451 3006B	Tapping Screw - M3x6	25-102
0451 3006B	Tapping Screw - M3x6	13-102
0451 3006B	Tapping Screw - M3x6	11-101
0451 3006B	Tapping Screw - M3x6	29-101
0451 3006B	Tapping Screw - M3x6	27-103
0451 3006B	Tapping Screw - M3x6	39-101
0451 3006B	Tapping Screw - M3x6	7-103
0451 3006B	Tapping Screw - M3x6	35-106
0451 3008B	Tapping Screw - M3x8	23-102
0451 3008B	Tapping Screw - M3x8	19-103
0451 3008B	Tapping Screw - M3x8	37-104
0451 3008B	Tapping Screw - M3x8	21-106

Part No.	Description	Page and Index No.
0451 3008H	Tapping Screw - M3x8	7-104
0451 3008H	Tapping Screw - M3x8	27-101
0451 3008H	Tapping Screw - M3x8	33-101
0451 3008H	Tapping Screw - M3x8	25-101
0451 4006B	Tapping Screw - 4x6	9-105
0451 4006B	Tapping Screw - 4x6	35-105
0451 4006B	Tapping Screw - 4x6	17-101
0451 4006B	Tapping Screw - 4x6	31-108
0451 4006B	Tapping Screw - 4x6	37-103
0451 4006B	Tapping Screw - 4x6	15-103
0451 4008B	Philips Tapping Screw - M4x8	21-102
0452 3008B	Tapping Screw - M3x8	27-102
0452 3008B	Tapping Screw - M3x8	15-104
0453 3006B	Tapping Screw - M3x6	23-106
0453 3006B	Tapping Screw - M3x6	37-101
0453 3006B	Tapping Screw - M3x6	19-105
0574 0040E	Hexagon Headless Set Screw - M4x4	37-110
0623 0120E	Spring Pin - M3x12	17-103
0632 0080G	Parallel Key - 2x8mm	25-106
0632 0080G	Parallel Key - 2x8mm	31-102
0632 0100G	Pin - 2x10mm	25-108
0632 0100G	Pin - 2x10mm	31-105
0632 0120G	Parallel Pin - 2x12	29-107
0710 0020W	Hexagonal Nut - M2	21-107
0720 0040B	Retaining Ring - M4	29-104
0720 0040B	Retaining Ring - M4	9-103
0720 0040B	Retaining Ring - M4	27-104
0720 0040B	Retaining Ring - M4	13-101
0720 0040B	Retaining Ring - M4	15-101
0720 0040B	Retaining Ring - M4	33-102
0720 0040B	Retaining Ring - M4	17-104
0720 0040B	Retaining Ring - M4	11-104
0720 0040B	Retaining Ring - M4	37-105
0720 0040B	Retaining Ring - M4	19-104
0720 0040B	Retaining Ring - M4	25-104

Part No.	Description	Page and Index No.
0720 0040B	Retaining Ring - M4	21-109
0720 0040B	Retaining Ring - M4	23-103
0720 0040B	Retaining Ring - M4	31-103
0720 0040E	Retaining Ring - M4	35-101
0720 0060B	Retaining Ring - M6	33-105
0720 0060B	Retaining Ring - M6	25-112
0720 0060B	Retaining Ring - M6	37-109
0720 0060B	Retaining Ring - M6	27-105
0720 0060B	Retaining Ring - M6	23-104
0720 0060B	Retaining Ring - M6	35-104
0740 3008	Ball Bearing - 8x22x7	23-105
0741 3506	Ball Bearing - 6x12x4 Mm	37-108
0742 3808	Ball Bearing - 8x16x5	27-106
0742 3808	Ball Bearing - 8x16x5	33-104
0800 0072	Philips Pan Head Screw - M2.6x4	35-102
0802 5276	Tapping Screw With Washer - M3x6	9-104
0802 5276	Tapping Screw With Washer - M3x6	29-105
0802 5276	Tapping Screw With Washer - M3x6	7-105
0802 5277	Tapping Screw	37-111
0802 5277	Tapping Screw	35-107
0802 5277	Tapping Screw	7-101
0802 5277	Tapping Screw	29-109
0805 0088	Retaining Ring - M6	29-103
0805 0089	Retaining Ring - M4	25-107
0805 0089	Retaining Ring - M4	15-102
0805 0089	Retaining Ring - M4	13-103
0805 0089	Retaining Ring - M4	31-104
0805 0089	Retaining Ring - M4	17-105
0805 0092	Retaining Ring - 3m	29-102
0805 3263	Bearing - 6x10x6mm	23-107
0805 3385	Bushing - 6mm	21-110
0807 5056	Washer - 8.1mm	37-112
1101 0328	Connector Pin Contact	43-101
1102 4201	Connector - 2P	43-102
1102 4203	CT Header - 4P	43-103

Part No.	Description	Page and Index No.
1102 4204	CT Header - 5P	43-104
1102 4205	CT Header - 6P	43-105
1102 4206	Connector - 7P	43-106
1102 4207	Connector - 8P	43-107
1102 4208	Connector - 9P	43-108
1102 4209	CT Header - 10P	43-109
1102 4210	Connector - 11P	43-110
1102 4212	CT Header - 15P	43-111
1102 4464	CT Header(h) - 6P	43-112
1102 4465	Connector - 7P	43-113
1102 4497	Connector - 13P	43-114
1102 4624	CT Connector - 7P	43-115
1102 4625	CT Connector 8P	43-116
1102 4626	Connector - 9P	43-117
1102 4630	CT Connector	43-118
1102 5007	CT Header - 14P	43-119
1102 5301	Connector - 2P	43-120
1102 6295	Connector - 2P	43-121
1102 6301	Connector - 8P	43-122
1102 6302	Connector - 9P	43-123
1102 6956	Connector - 13P	43-124
1104 0333	Fuse Holder	43-125
1104 0589	Dip Socket - 32P	43-126
1105 0230	Clamp	25-109
1105 0291	Harness Clamp - LWS-3S	39-103
1105 0291	Harness Clamp - LWS-3S	21-112
1105 0292	Wire Saddle	39-102
1105 0310	Harness Clamp - LWS-1S	29-110
1105 0310	Harness Clamp - LWS-1S	31-112
1105 0310	Harness Clamp - LWS-1S	25-110
1105 0310	Harness Clamp - LWS-1S	39-104
1105 0310	Harness Clamp - LWS-1S	19-106
1105 0310	Harness Clamp - LWS-1S	37-113
1105 0310	Harness Clamp - LWS-1S	11-105
1105 0328	Harness Clamp - ES-0505	23-109

Part No.	Description	Page and Index No.
1105 0328	Harness Clamp - ES-0505	31-109
1105 0328	Harness Clamp - ES-0505	35-109
1105 0329	Clamp - ES-0510	29-111
1105 0329	Clamp - ES-0510	11-106
1105 0329	Clamp - ES-0510	25-113
1105 0334	Edge - 17	21-103
1105 0410	Card Spacer - 9.4mm	21-104
1105 0511	Harness Clamp - LWS-0306ZC	17-107
1105 0511	Harness Clamp - LWS-0306ZC	29-112
1105 0511	Harness Clamp - LWS-0306ZC	19-107
1105 0511	Harness Clamp - LWS-0306ZC	31-110
1105 0511	Harness Clamp - LWS-0306ZC	11-102
1105 0511	Harness Clamp - LWS-0306ZC	25-111
1105 0511	Harness Clamp - LWS-0306ZC	35-108
1105 0511	Harness Clamp - LWS-0306ZC	33-107
1105 0511	Harness Clamp - LWS-0306ZC	23-110
1105 0511	Harness Clamp - LWS-0306ZC	37-114
1105 0511	Harness Clamp - LWS-0306ZC	21-111
1105 0511	Harness Clamp - LWS-0306ZC	39-105
1105 0522	Edge Saddle - LES0510	29-113
1107 0884	Fuse - 5A 250V	43-127
1204 2368	Dip Switch - DSS804	43-128
1204 2384	Interlock Switch	17-102
1204 2543	Switch - DE2L-BJ22	25-105
1204 2543	Switch - DE2L-BJ22	31-111
1204 2543	Switch - DE2L-BJ22	29-108
1204 2544	Switch - DE2L-BJ23	35-103
1400 0398	Transistor - 2SC2412K	43-129
1400 0748	Transistor - FMG1A	43-130
1400 0762	Transistor - 2SB1344	43-131
1400 0763	Transistor - 2SD2025	43-132
1402 1353	Diode - HZ12BP	43-133
1402 1506	Diode - ERA15-02	43-134
1402 1507	Diode - UDZS8.2B	43-135
1402 1559	Diode - ERC91-02	43-136

Part No.	Description	Page and Index No.
1403 0519	Photocoupler - TLP621	43-137
1407 1596	TTLIC - SN74LS14NS	43-138
1407 2187	TTLIC - SN74LS07NS	43-139
1407 2218	TTLIC - SN74LS06NS	43-140
1407 2231	IC - TD62308AF	43-141
1407 3202	CMOS IC - TC74HC00AF	43-142
1407 3286	IC - TC74HC04AF	43-143
1407 3290	IC - TC74HC02AF	43-144
1407 3395	CMOS IC - TC74HC541AF	43-145
1407 4316	IC - TD52308BF	43-146
1407 4724	CPU HD6413003TF-16	43-147
1408 0611	IC - 3771	43-148
1408 0827	IC - TA8429H	43-149
1408 1200	IC - STK681-050	43-150
1408 1287	IC - SI-8501L	43-151
1408 1394	IC - STK672-110	43-152
1503 0347	Oscillator - 12MHZ	43-153
1601 7751	Resistor - 4.7K Ω $\pm$ 5%	43-154
1601 7752	Resistor Array - 10K Ω $\pm$ 5%	43-155
1601 7814	Resistor 3.3k Ω $\pm$ 5%	43-156
1607 0069	Fuse - BI02rn2-r62-pb	43-157
1630 1562	Resistor - 5.6 Ω $\pm$ 5% 1/4W	43-158
1630 3101	Resistor - 100 Ω - 1/10W	43-159
1630 3103	Resistor - 10K Ω 1/10W $\pm$ 5%	43-160
1630 3122	Resistor - 1.2K Ω 1/10W $\pm$ 5%	43-161
1630 3472	Resistor - 4.7K Ω 1/10W $\pm$ 5%	43-162
1630 4100	Resistor - 10 Ω $\pm$ 5% 1/16W	43-163
1630 4102	Resistor - 1.0K Ω $\pm$ 5% 1/16W	43-164
1630 4103	Resistor - 10K Ω $\pm$ 5% 1/16W	43-165
1630 4161	Resistor - 160 Ω $\pm$ 5% 1/16W	43-166
1630 4203	Resistor - 20K Ω $\pm$ 5% 1/16W	43-167
1630 4221	Resistor - 220 Ω $\pm$ 5% 1/16W	43-168
1630 4222	Resistor - 2.2K Ω $\pm$ 5%	43-169
1630 4223	Resistor - 22K Ω $\pm$ 5% 1/16W	43-170
1630 4330	Resistor - 33 Ω $\pm$ 5% 1/8W	43-171

Part No.	Description	Page and Index No.
1630 4332	Resistor - 3.3K Ω $\pm$ 5% 1/16W	43-172
1630 4362	Resistor - 3.6K Ω $\pm$ 5% 1/16W	43-173
1630 4391	Resistor - 390 Ω $\pm$ 5.00% 1/16W	43-174
1630 4392	Resistor - 3.9 Ω $\pm$ 5% 1/16W	43-175
1630 4472	Resistor - 4.7K Ω $\pm$ 5% 1/16W	43-176
1630 4511	Resistor - 510 Ω - $\pm$ 5% - 1/16W	43-177
1630 4562	Resistor - 5.6k Ω - $\pm$ 5% - 1/16W	43-178
1630 4821	Resistor - 820 Ω $\pm$ 5% 1/16W	43-179
1630 4822	Resistor - 8.2 Ω $\pm$ 5% 1/16W	43-180
1630 4910	Resistor - 91 Ω $\pm$ 5% 1/16W	43-181
1630 4912	Resistor - 9.1K Ω $\pm$ 5% 1/16W	43-182
1634 0000	Resistor - 0 Ω 1/16W	43-183
1640 0331	Capacitor - 330 μ F 10V $\pm$ 20%	43-184
1640 5100	Capacitor - 10 μ F +20% 50	43-185
1640 5101	Capacitor - 100 μ F $\pm$ 20% 50V	43-186
1640 5109	Capacitor - 1 μ F - $\pm$ 20% - 50V	43-187
1660 2471	Capacitor - 470pF - $\pm$ 5% - 50V	43-188
1660 4102	Capacitor - 1000pF $\pm$ 10% 50V	43-189
1660 4103	Capacitor - 10000pF - $\pm$ 10% - 50V	43-190
1660 4472	Capacitor - 4700pF $\pm$ 10% 50V	43-191
1660 7104	Capacitor - 100000pF 50V	43-192
1660 8104	Capacitor - 0.1 μ F +80-20% 25V	43-193