

Z-folding Unit Type 2105
(B660)

Z-folding Unit Type 2105 (B660)


PARTS CATALOG

This catalog gives the numbers and names of parts on this machine.

1.Exterior (B660)	2
2.Paper Transfer 1 (B660)	4
3.Paper Transfer 2 (B660)	6
4.Folder Section 1 (B660)	8
5.Folder Section 2 (B660)	10
6.Folder Section 3 (B660)	12
7.Folder Section 4 (B660)	14
8.Folder Section 5 (B660)	16
9.Folder Section 6 (B660)	18
10.Drive Section (B660)	20
11.ElectricalSection (B660)	22
12.Frame Section (B660)	24
Parts Index	27

Februaly ,13 ' 2004

1.Exterior (B660)

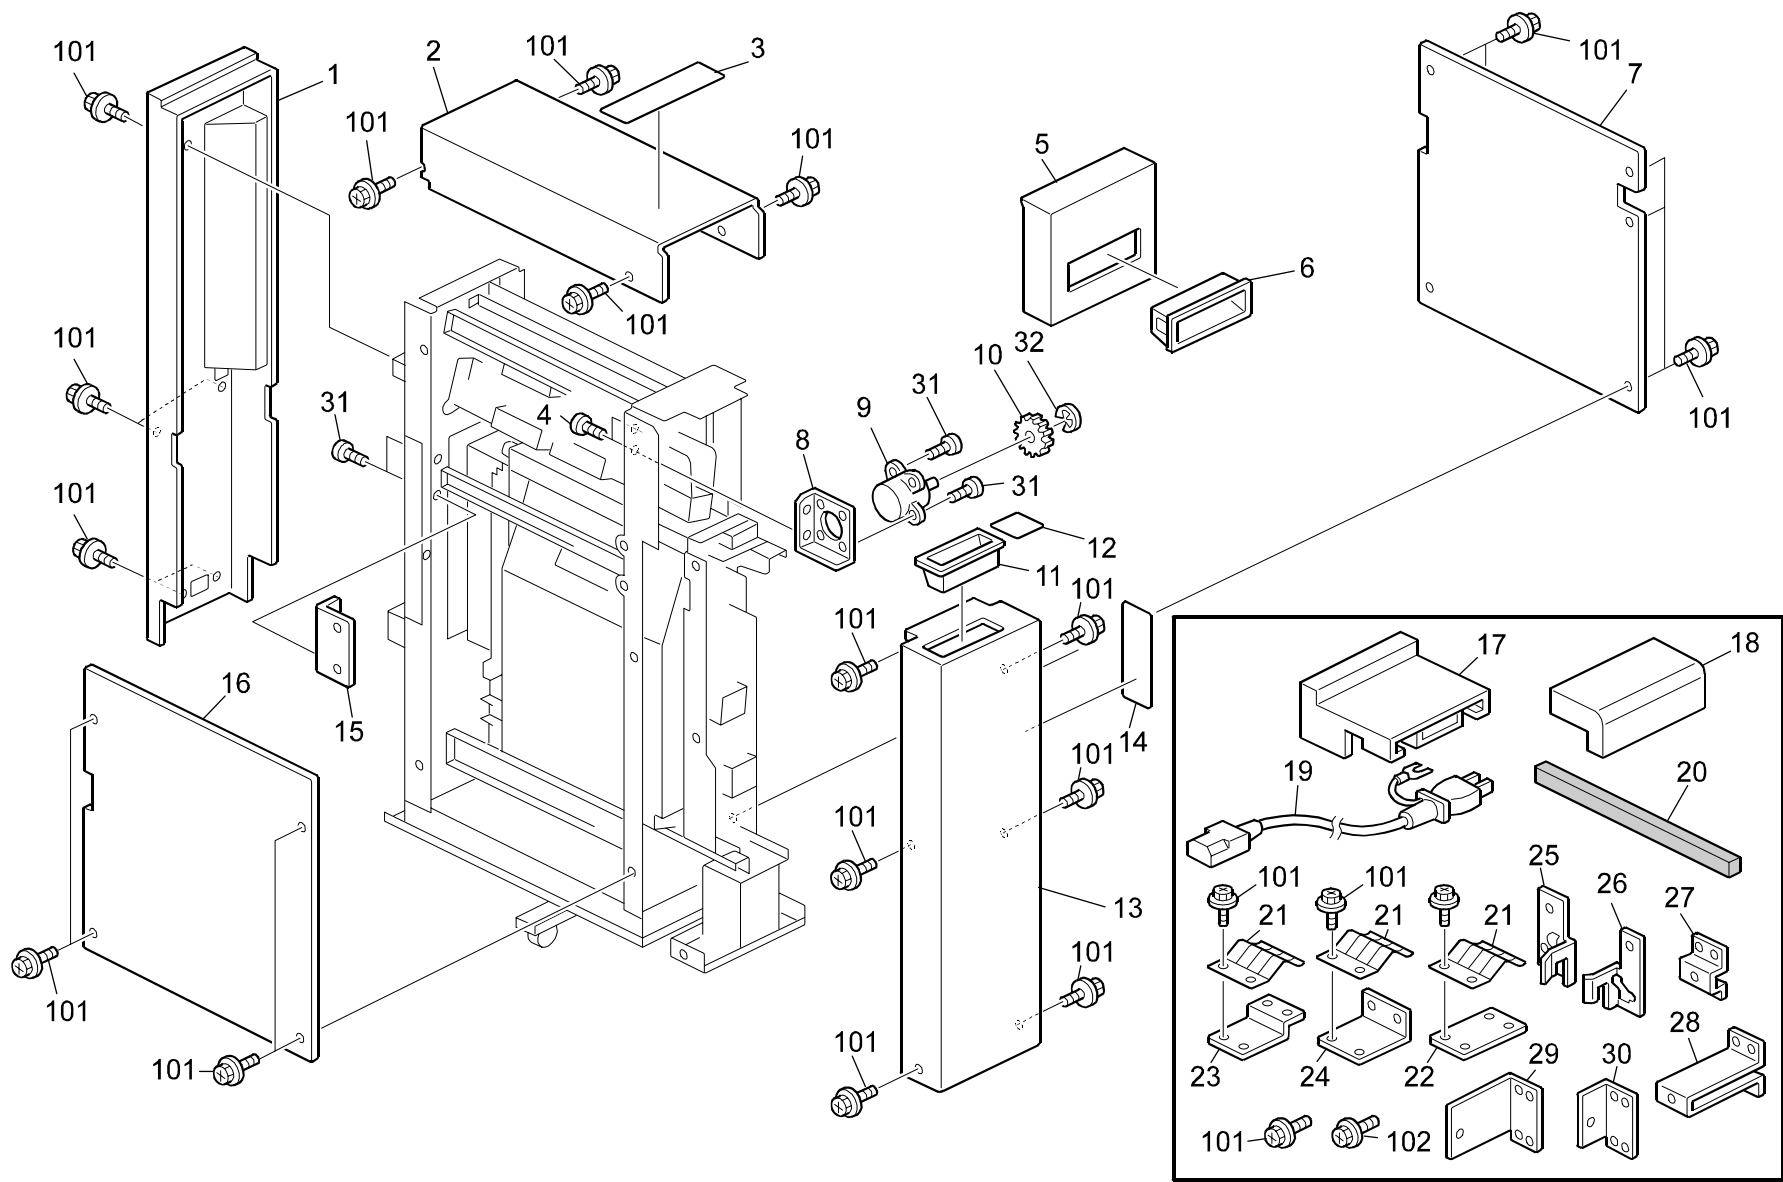


1.Exterior (B660)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B660 3175	Rear Cover :PF4132P174A	1
2	B660 3171	Upper Cover :PF4132P173A	1
3	B660 3311	Decal - Misfeed Removal N1 :PF4132P364A	1
4	B660 4541	Screw :040060FNBI	2
5	B660 3215	Front Cover :PF4132P420A	1
6	B660 1645	Cover Grip :PF4132P012A	1
7	B660 3221	Frame Cover :PF4132P443A	1
8	B660 1585	Damper Bracket :PF4132P430A	1
9	B660 1921	Damper :PF4132P336A	1
10	B660 1915	Gear - Z20 :PF4132P335A	1
11	B660 3135	Cover Grip :PF4132P030A	1
12	B660 3321	Decal - Misfeed Removal N2 :PF4132P365A	1
13	B660 3165	Front Cover :PF4132P168A	1
14	B660 3331	Decal - Misfeed Removal N2 Side :PF4132P366	1
15	B660 1441	Coupling Bracket :PF4132P143A	1
16	B660 3191	Frame Cover :PF4132P409A	1
17	B660 4185	Rear Upper Cover :PF4132K133A	1
18	B660 4181	Front Upper Cover :PF4132K132A	1
19	B660 4172	Power Supply Cord -120V	1
19	B660 4173	Power Supply Cord -230V	1
20	B660 4161	Right Cover Sponge :PF4132P340A	1
21	B302 1163	Grounding Plate	3
22	B660 4132	Ground Plate Bracket CF :PF4132P465A	1
23	B660 4122	Ground Plate Bracket Fin :PF4132P404A	1
24	B660 4112	Ground Plate Bracket :PF4132P403A	1
25	A697 1144	Rear Joint Bracket	1
26	A697 1153	Front Joint Bracket	1
27	B660 4141	Front Fin Coupling Bracket :PF4132P405A	1
28	B660 4151	CF Fin Coupling Bracket :PF4132P407A	1
29	B660 4155	CF Fin Coupling Bracket :PF4132P408A	1
30	B660 4145	Rear Fin Coupling Bracket :PF4132P406A	1
31	B660 4835	Screw :S-SCR00045A	4

Index No.	Part No.	Description	Q'ty Per Assembly
32	B660 4625	Retaining Ring :ER050SKP	1
101	0451 4006N	Tapping Screw - 4x6	
102	0451 3006N	Tapping Screw - 3x6	

2.Paper Transfer 1 (B660)

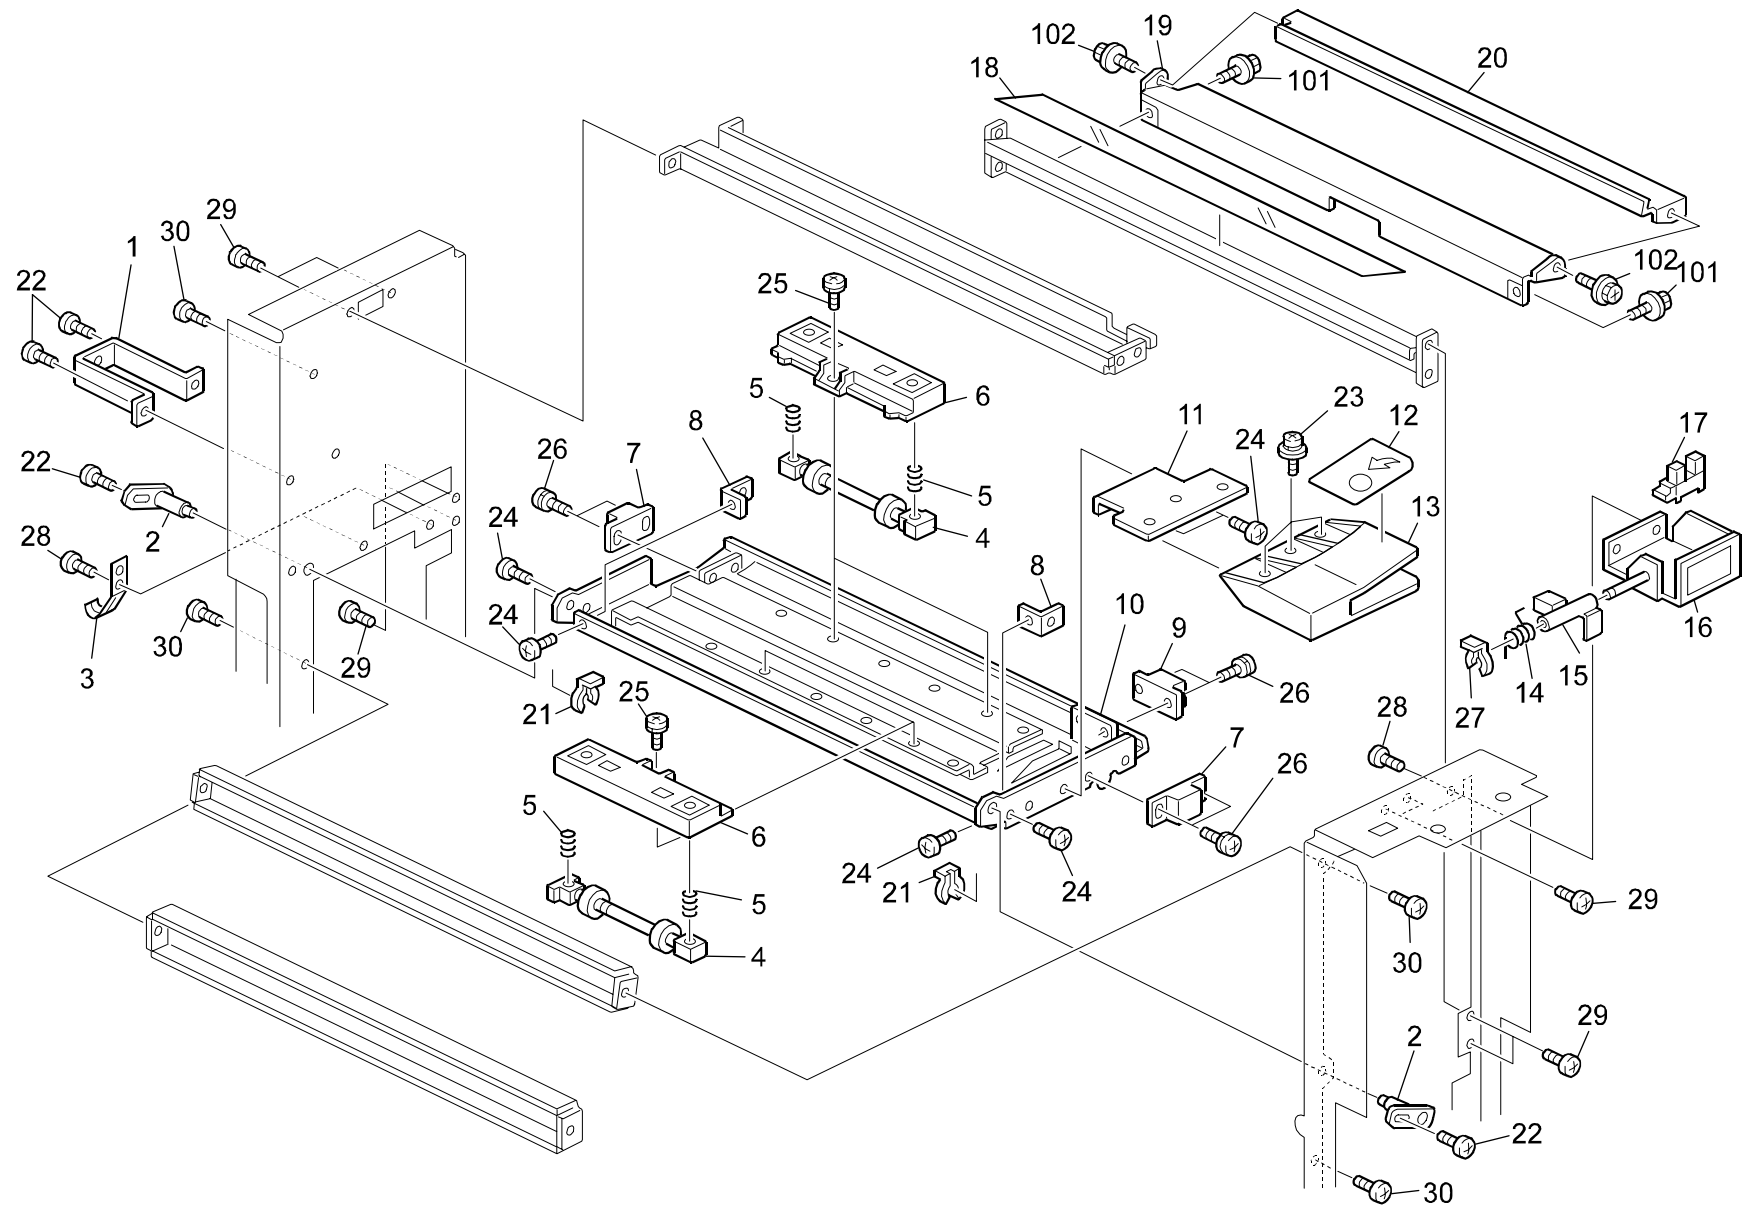


2.Paper Transfer 1 (B660)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B660 1561	Cover Bracket :PF4132P196A	1
2	B660 2251	Horizontal Guide Plate :PF4132K081A	2
3	B660 1165	Frame Spring Plate :PF4132P158A	1
4	AF02 2147	Driven Roller	4
5	B660 1821	Roller Spring :PF4132P311A	8
6	B660 1635	Roller Holder :PF4132P010A	4
7	B660 1795	Magnet Catch :PF4132P304A	2
8	B660 1595	Guide Plate Bracket :PF4132P433A	2
9	B660 1111	Magnet Catch :PF2214P393A	1
10	B660 1755	Horizontal Guide Plate :PF4132P149A	1
11	B660 1581	Guide Plate Bracket :PF4132P429A	1
12	B660 3341	Decal - Grip N1 :PF4132P367A	1
13	B660 3125	Grip Guide Plate :PF4132P024A	1
14	B660 1865	Sensor Spring :PF4132P323A	1
15	B660 1631	Sensor Lever :PF4132P009A	1
16	B660 2291	Roller Bracket :PF4132K100A	1
17	B660 5441	No.1 Entrance Sensor :E314000619	1
18	B660 1961	Entrance Guide :PF4132P360A	1
19	B408 2191	Guide Plate - Connecting Lower	1
20	B468 2196	Upper Guide Plate	1
21	B660 4835	Screw :S-SCR00045A	2
22	B660 4816	C Ring :NS-CLP00007A	4
23	B660 4545	Screw :040080FNWS	3
24	B660 4521	Screw :030080FNBI	6
25	B660 4531	Screw :030080FNWS	4
26	B660 4525	Screw :030080FNWS	6
27	B660 4811	External Circlip :S-CLP00001A	1
28	B660 4831	Screw :S-SCR00016A	1
29	B660 4511	Screw :030040FNBI	4
30	B660 4541	Screw :040060FNBI	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0802 5276	Tapping Screw With Washer - M3x6	

3.Paper Transfer 2 (B660)

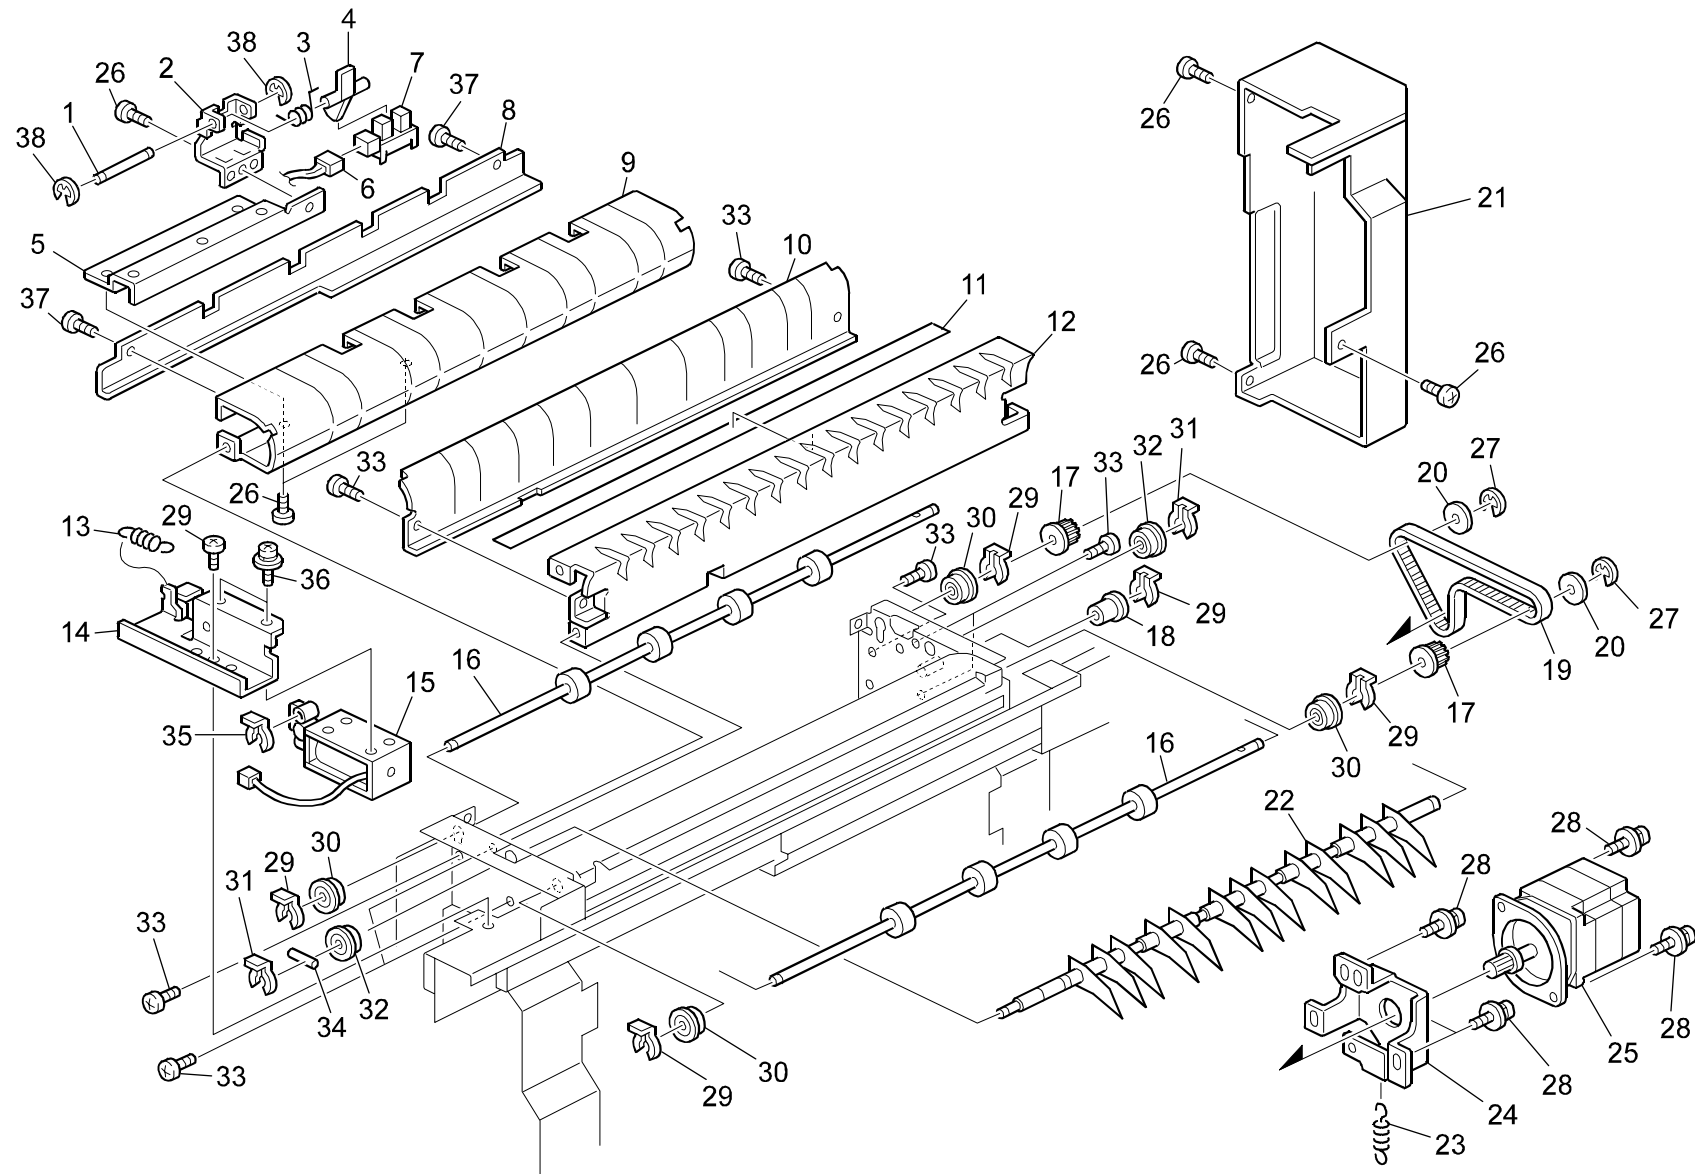


3.Paper Transfer 2 (B660)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B660 1775	Sensor Shaft :PF4132P230A	1
2	B660 1455	Sensor Bracket :PF4132P150A	1
3	B660 1831	Sensor Spring :PF4132P313A	1
4	B660 1621	Sensor Lever :PF2171P358A	1
5	B660 1425	Guide Plate Bracket :PF4132P129A	1
6	B660 5195	Harness - Exit Sensor :PF4132K444A	1
7	B660 5441	No.1 Entrance Sensor :E314000619	1
8	B660 3145	Paper Crimp Sub-unit Cover :PF4132P130A	1
9	B660 1685	Horizontal Guide Plate :PF4132P117A	1
10	B660 1695	Exit Guide Plate :PF4132P119A	1
11	B660 1845	Paper Crimp Guide Sub-unit :PF4132P316A	1
12	B660 1691	Horizontal Guide Plate :PF4132P118A	1
13	B660 1825	Solenoid Spring :PF4132P312A	1
14	B660 1411	Solenoid Bracket :PF4132P113A	1
15	B660 2231	DC Solenoid - Exchange Powl :PF4132K052A	1
16	B660 2695	Paper Crimp Transport Roller :PF4132P305A	2
17	B660 2555	Timing Pulley - S2M25 :PF4132P008A	1
18	B660 2521	Tension Roller :PF4099P386A	1
19	B660 2461	Timing Belt :S-BLT00307A	1
20	B660 2515	Flange :PF2147P032A	2
21	B660 3195	Drive Sub-unit Cover :PF4132P417A	1
22	B660 1861	Entrance Exchange Powl :PF4132P319A	1
23	B660 1891	Motor Tension Spring :PF4132P329A	1
24	B660 2591	Motor Bracket :PF4132P104A	1
25	B660 5411	Stepper Motor :PF2269K243A	1
26	B660 4541	Screw :040060FNBI	3
27	B660 4621	Retaining Ring :ER040SKP	1
28	B660 4545	Screw :040080FNWS	5
29	B660 4625	Retaining Ring :ER050SKP	5
30	B660 4843	Bushing :NS-BRG00016A	4
31	B660 4821	External Circlip :S-CLP00008A	2

Index No.	Part No.	Description	Q'ty Per Assembly
32	B660 4847	Bushing :NS-MTL00009A	2
33	B660 4835	Screw :S-SCR00045A	8
34	B660 4781	Spring Pin:3x12 :SP030120FPA	1
35	B660 4811	External Circlip :S-CLP00001A	1
36	B660 4515	Screw :030050FNWS	2
37	B660 4511	Screw :030040FNBI	2
38	B660 4611	Retaining Ring :ER015SKP	2

4.Folder Section 1 (B660)

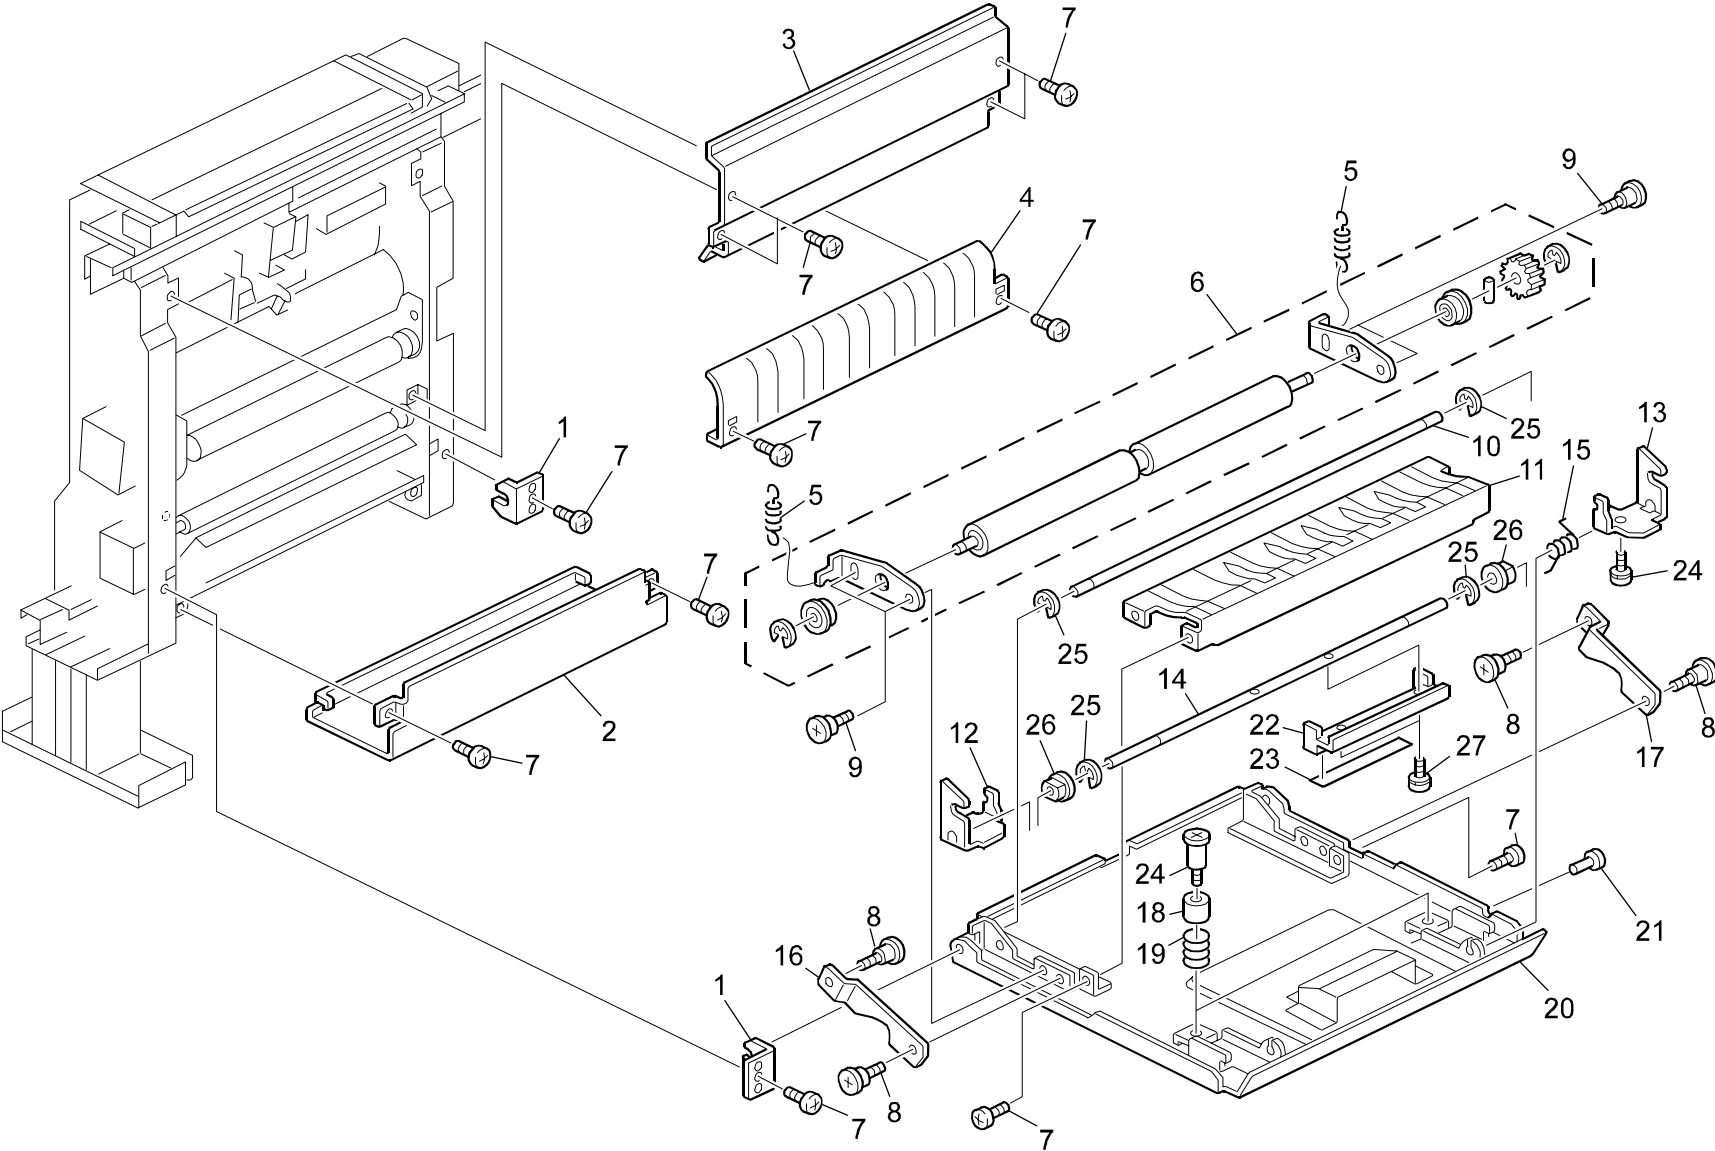


4.Folder Section 1 (B660)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B660 1995	Stud Bracket :PF4132P421A	2
2	B660 3155	Paper Crimp Sub-unit Cover :PF4132P163A	1
3	B660 3151	Paper Crimp Sub-unit Cover :PF4132P161A	1
4	B660 1731	Right Lower Guide Plate :PF4132P124A	1
5	B660 1871	Roller Spring :PF4132P324A	2
6	B660 2750	Roller Ass'y :PF4132K102	1
7	B660 4541	Screw :040060FNBI	12
8	B660 4915	Screw :PF2205P362A	4
9	B660 4921	Screw :PF2229P408A	2
10	B660 1225	Cover Shaft :PF4132P237A	1
11	B660 1675	Right Lower Guide Plate :PF4132P109A	1
12	B660 1451	Grip Arm :PF4132P148A	1
13	B660 1445	Grip Arm :PF4132P147A	1
14	B660 2625	Grip Shaft :PF4132P200A	1
15	B660 1781	Grip Spring :PF4132P301A	1
16	B660 1381	Cover Arm :PF4132P106A	1
17	B660 1521	Cover Arm :PF4132P183A	1
18	B660 3121	Cover Spacer :PF4132P017A	2
19	B606 1895	Lock Spring :PF4132P330A	2
20	B660 3141	Paper Crimp Sub-unit Cover :PF4132P105A	1
21	B660 3115	Spacer :PF2147P049A	1
22	B660 3131	Grip :PF4132P029A	1
23	B660 3351	Decal - Grip N2 :PF4132P368A	1
24	B660 4841	Screw :S-SCR00202A	2
25	B660 4625	Retaining Ring :ER050SKP	4
26	B660 4847	Bushing :NS-MTL00009A	2
27	B660 4525	Screw :030080FNSW	2

Index No.	Part No.	Description	Q'ty Per Assembly

5.Folder Section 2 (B660)

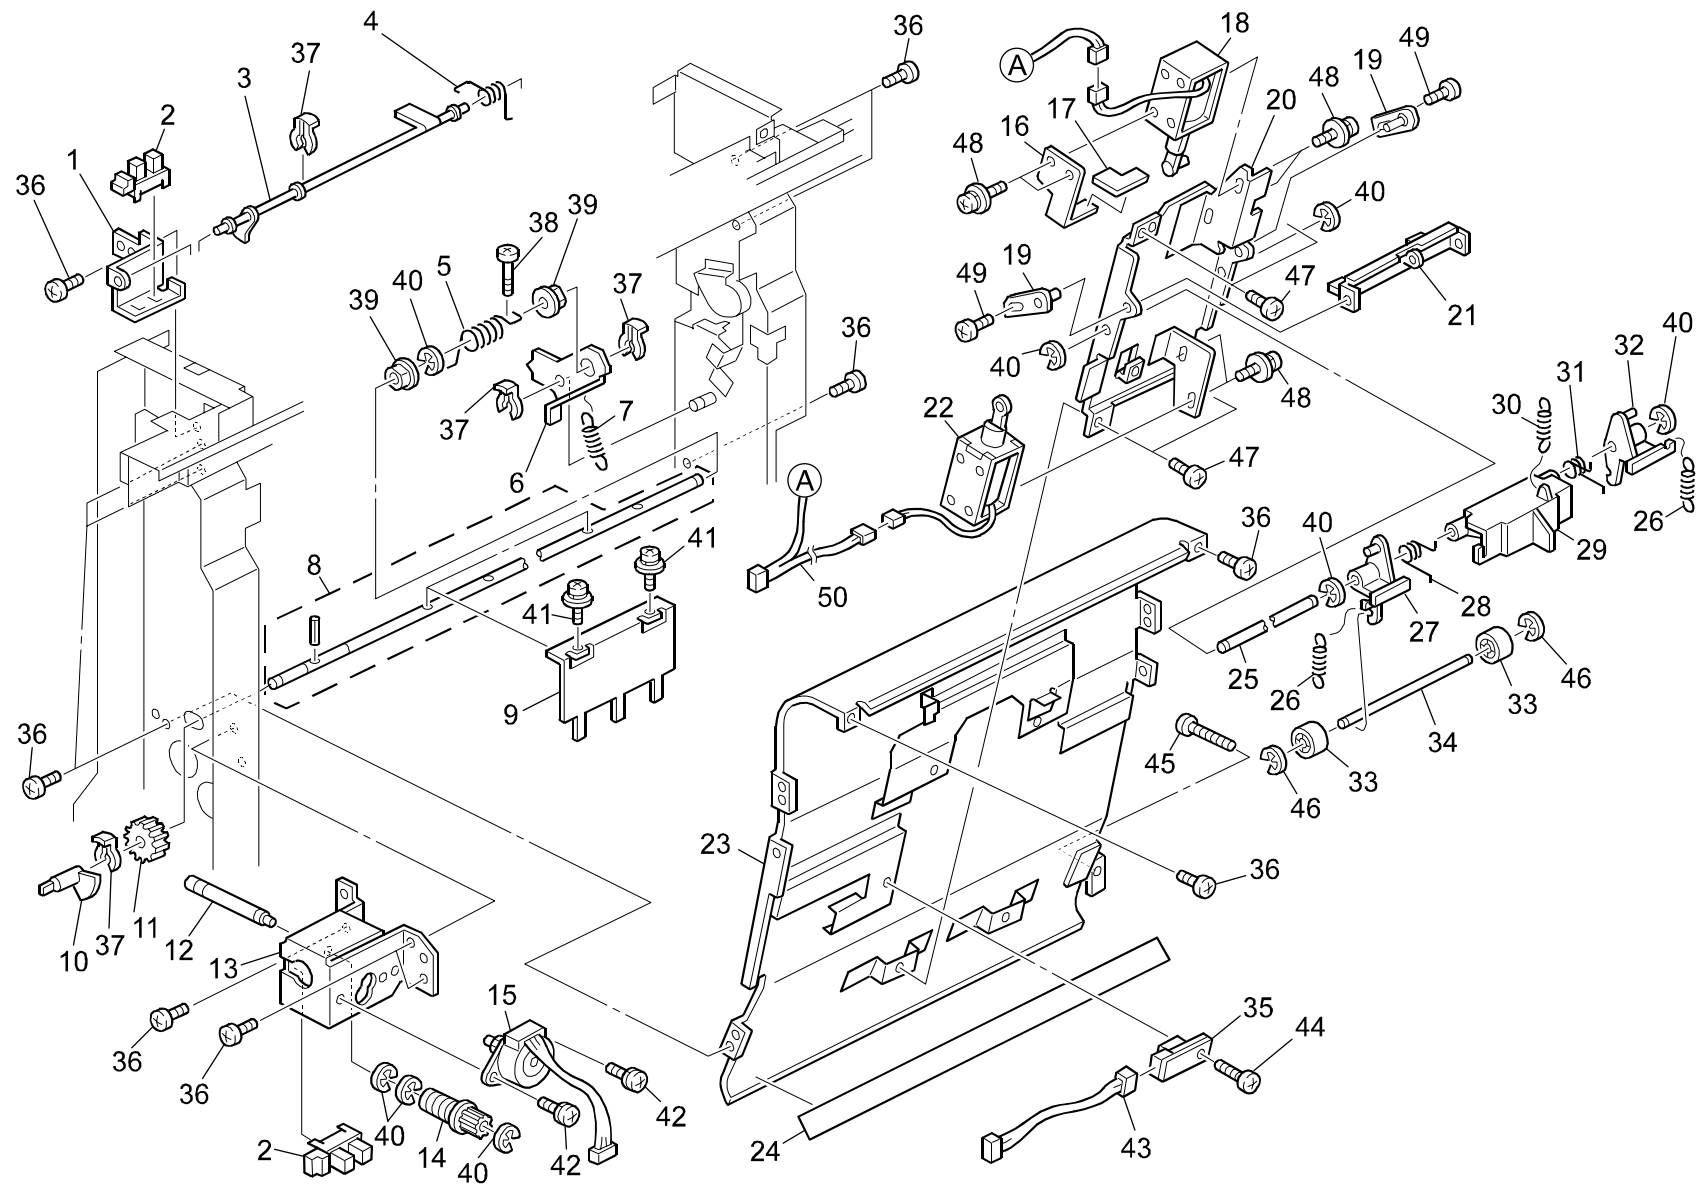


5.Folder Section 2 (B660)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B660 1591	Sensor Bracket :PF4132P431A	1
2	B660 5441	No.1 Entrance Sensor :E314000619	2
3	B660 1651	Sensor Lever :PF4132P021A	1
4	B660 1935	Transport Sensor Spring :PF4132P339A	1
5	B660 1955	Shaft Spring :PF4132P354A	1
6	B660 1975	Stopper Stay :PF4132P411A	1
7	B660 1925	Spring :PF4132P337A	1
8	B660 2634	Shaft :PF4132K144	1
9	B660 1745	Pawl Stopper :PF4132P128A	1
10	B660 2531	Sensor Lever :PF4132P002A	1
11	B660 2535	Gear - Z20 :PF4132P003A	1
12	B660 2631	Gear Z16 Shaft :PF4132P204A	1
13	B660 1415	Motor Bracket :PF4132P114A	1
14	B660 2525	Gear - Z16 :PF4132P001A	1
15	B660 5421	Stepper Motor :PF4099K353A	1
16	B660 1541	Stopper Arm :PF4132P192A	1
17	B660 1911	Solenoid Spacer :PF4132P331A	1
18	B660 2211	DC Solenoid - Release :PF4132K017A	1
19	B660 2241	Pressure Arm :PF4132K060A	2
20	B660 1485	Pressure Roller Bracket :PF4132P171A	1
21	B660 1535	Pressure Roller Arm :PF4132P191A	1
22	B660 2221	DC Solenoid - Nip :PF4132K020A	1
23	B660 1761	Guide Plate:Horizontal :PF4132P159A	1
24	B660 1841	Guide:Paper Crimp Sub-unit :PF4132P315A	1
25	B660 2641	Pressure Roller Shaft :PF4132P210A	1
26	B660 1885	Pressure Roller Spring :PF4132P327A	2
27	B660 1655	Roller Holder :PF4132P025A	1
28	B660 1875	Pressure Roller Spring :PF4132P325A	1
29	B660 1671	Pressure Roller Holder :PF4132P028A	1
30	B660 1825	Solenoid Spring :PF4132P312A	1
31	B660 1881	Pressure Roller Spring :PF4132P326A	1
32	B660 1665	Roller Holder :PF4132P027A	1
33	B660 1661	Pressure Roller :PF4132P026A	2
34	B660 2681	Roller Shaft :PF4132P222A	1

Index No.	Part No.	Description	Q'ty Per Assembly
35	B660 5451	No.2 Entrance Sensor :PF2240P835A	1
36	B660 4835	Screw :S-SCR00045A	10
37	B660 4821	External Circlip :S-CLP00008A	3
38	B660 4925	Drawer Screw :PF4051P361A	1
39	B660 4846	Bushing :NS-MTL00004A	2
40	B660 4625	Retaining Ring :ER050SKP	8
41	B660 4531	Screw :030080FNWS	2
42	B660 4525	Screw :030080FNSW	2
43	B660 5121	Harness - Sensor Pressure :PF4132K419A	1
44	B660 4521	Screw :030080FNBI	1
45	B660 4561	Screw :040200FNBI	1
46	B660 4615	Retaining Ring :ER020SKP	2
47	B660 4535	Screw :040050FNIT	2
48	B660 4515	Screw :030050FNWS	4
49	B660 4831	Screw :S-SCR00016A	2
50	B660 5151	Harness - Solenoid :PF4132K425A	1

6.Folder Section 3 (B660)

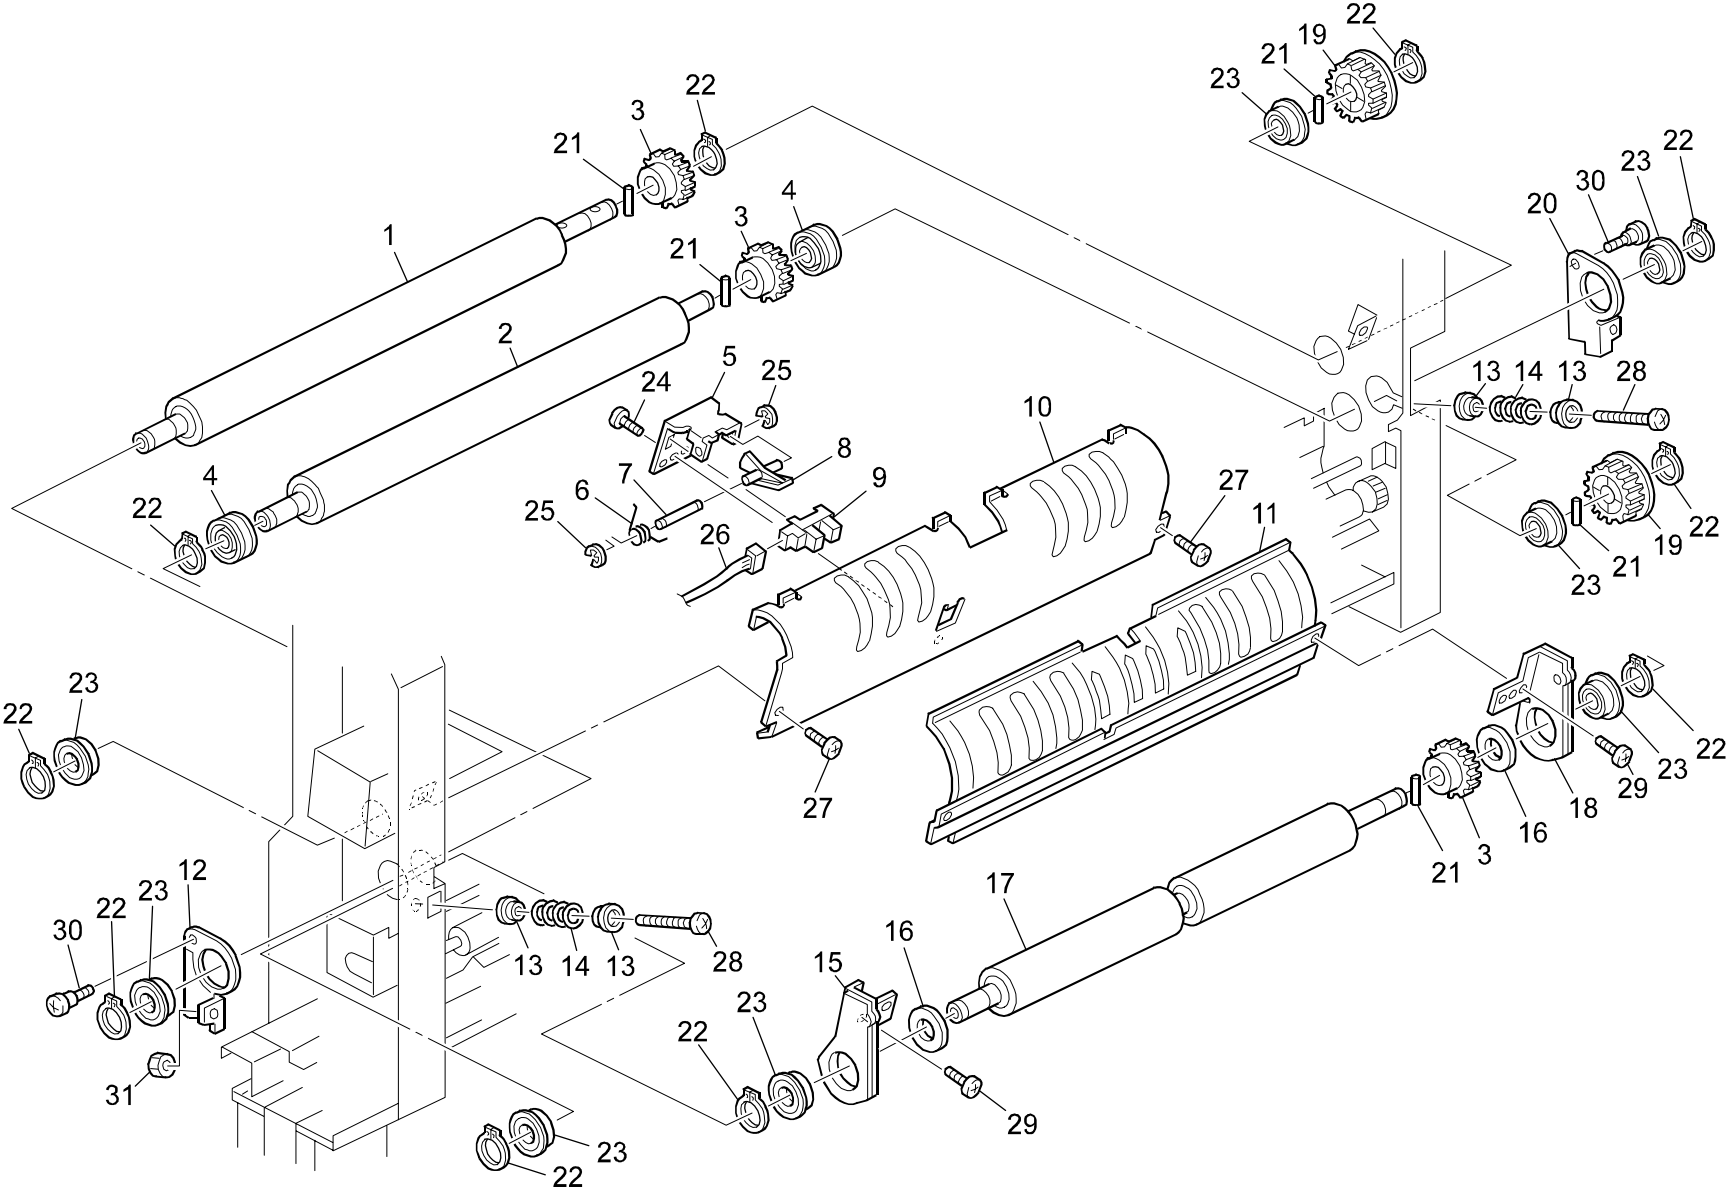


6.Folder Section 3 (B660)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B660 2785	Roller :PF4132P610A	1
2	B660 2791	Roller :PF4132P611A	1
3	B660 2775	Gear - Z40 :PF4132P606A	3
4	B660 2761	Collar :PF4132P600A	2
5	B660 1465	Sensor Bracket :PF4132P160A	1
6	B660 1831	Sensor Spring :PF4132P313A	1
7	B660 1775	Sensor Shaft :PF4132P230A	1
8	B660 1621	Sensor Lever :PF2171P358A	1
9	B660 5441	No.1 Entrance Sensor :E314000619	1
10	B660 1725	Right Upper Guide Plate :PF4132P123A	1
11	B660 1721	Right Upper Guide Plate :PF4132P122A	1
12	B660 1421	Paper Crimp Arm Sub-unit :PF4132P115A	1
13	B660 1615	Paper Crimp Flange Sub-unit :PF4132P449A	4
14	B660 1785	Paper Crimp Spring Sub-unit :P F4132P302A	2
15	B660 1511	Roller Bracket :PF4132P181A	1
16	B660 3225	Spacer :PF4132P620A	2
17	B660 2795	Roller :PF4132P612A	1
18	B660 1515	Roller Bracket :PF4132P182A	1
19	B660 2511	Timing Pulley - 20Z :PF2138P037A	2
20	B660 1475	Paper Crimp Arm Sub-unit :PF4132P169A	1
21	B660 4721	Parallel Pin :HP020220SCH	4
22	B660 4635	Retaining Rings-C :YA1025P232A	10
23	B660 4845	Bushing :NS-BRG00101A	8
24	B660 4511	Screw :030040FNBI	12
25	B660 4611	Retaining Ring :ER015SKP	1
26	B660 5141	Harness - Sensor :PF4132K423A	1
27	B660 4541	Screw :040060FNBI	2
28	B660 4565	Screw :040350FNBI	2
29	B660 4835	Screw :S-SCR00045A	2
30	B660 4921	Screw :PF2229P408A	2
31	B660 4751	Nut :NT040FN2	1

Index No.	Part No.	Description	Q'ty Per Assembly

7.Folder Section 4 (B660)

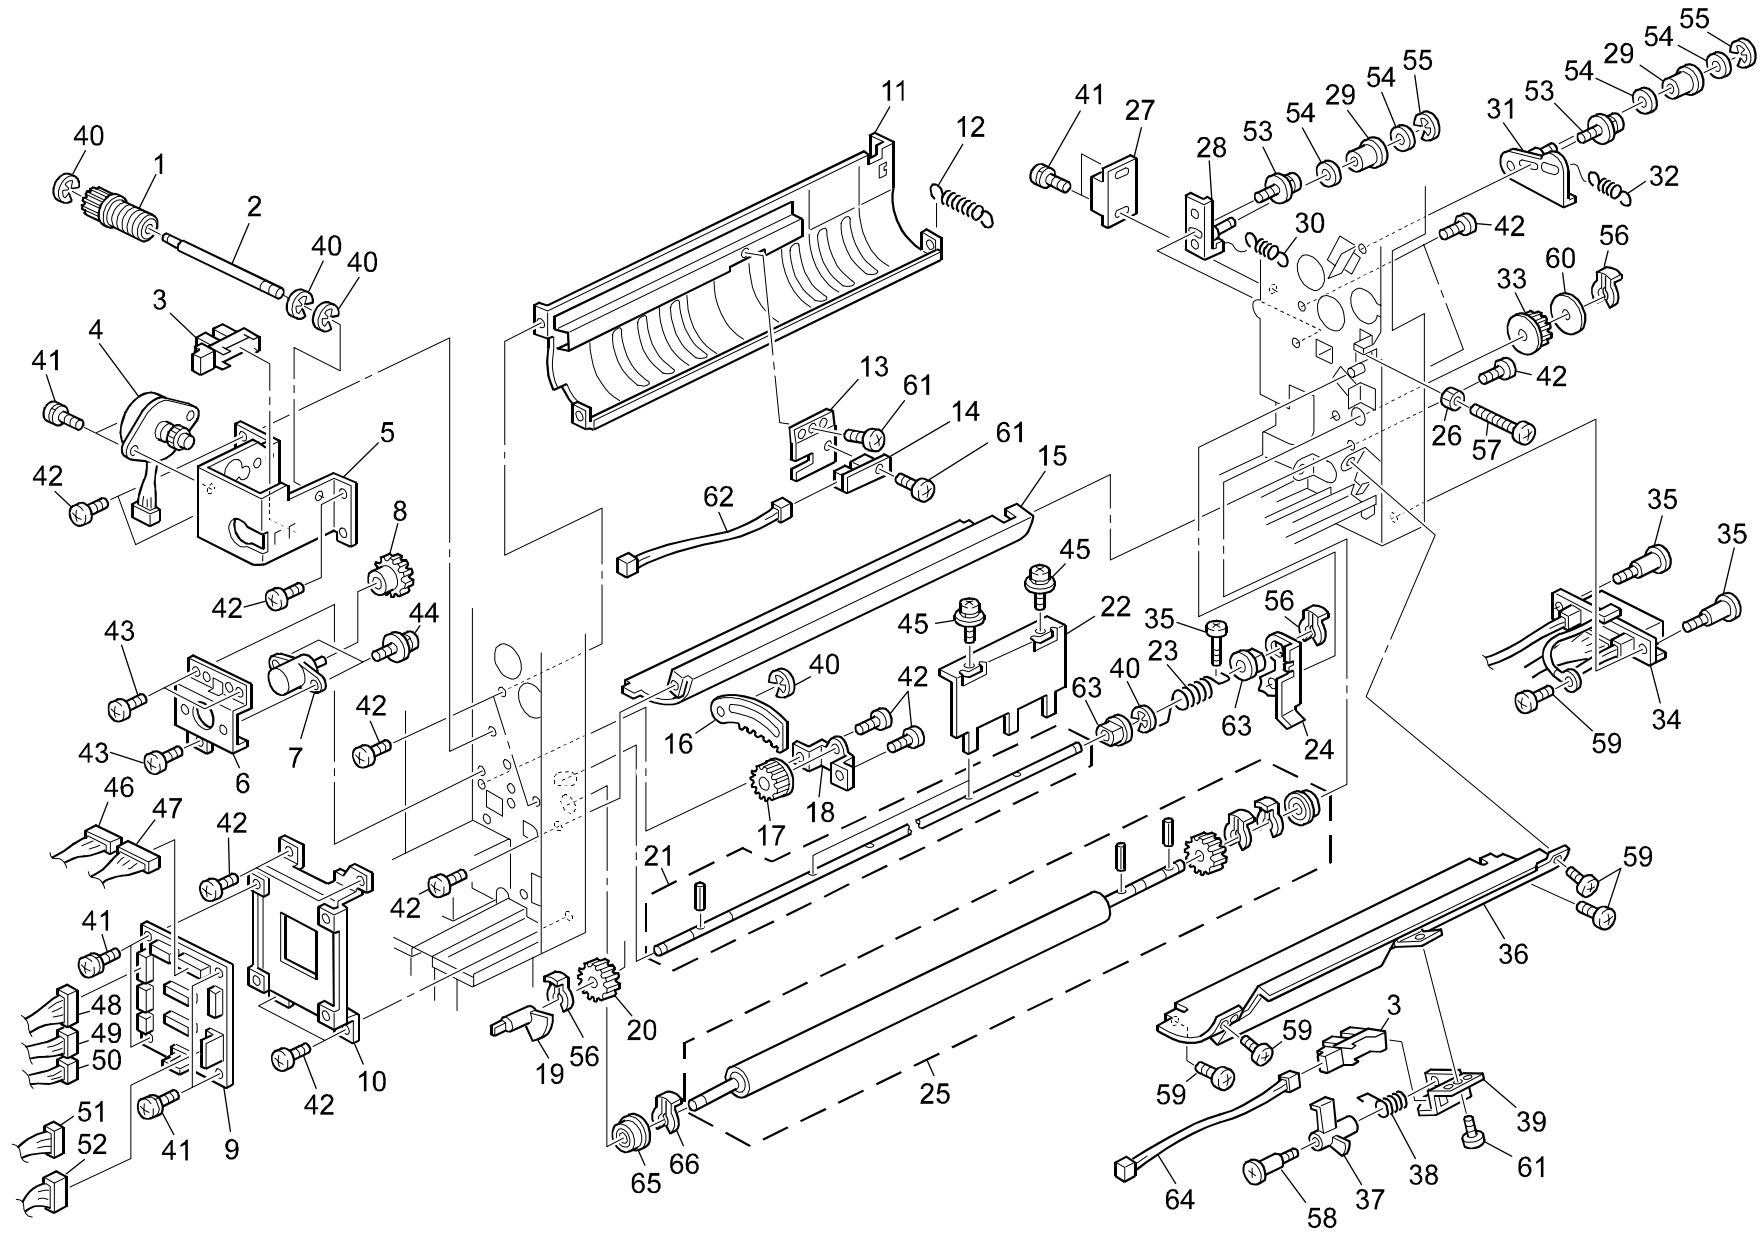


7.Folder Section 4 (B660)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B660 2525	Gear - Z16 :PF4132P001A	1
2	B660 2631	Gear Z16 Shaft :PF4132P204A	1
3	B660 5441	No.1 Entrance Sensor :E314000619	2
4	B660 5421	Stepper Motor :PF4099K353A	1
5	B660 1415	Motor Bracket :PF4132P114A	1
6	B660 2121	Damper Bracket :PF4132P434A	1
7	B660 1921	Damper :PF4132P336A	1
8	B660 1915	Gear - Z20 :PF4132P335A	1
9	B660 5511	Main Control Base :PF4132K406A	1
10	B660 1545	Base Bracket :PF4132P193A	1
11	B660 1735	Middle Guide Plate :PF4132P125A	1
12	B660 1925	Spring :PF4132P337A	1
13	B660 2111	Sensor Bracket :PF4132P422A	1
14	B660 5451	No.2 Entrance Sensor :PF2240P835A	1
15	B660 1711	Lower Guide Plate :PF4132P120A	1
16	B660 1481	Paper Crimp Rack Sub-unit :PF4132P170A	1
17	B660 1951	Gear - Z16 :PF4132P353A	1
18	B660 1611	Gear Bracket :PF4132P448A	1
19	B660 2531	Sensor Lever :PF4132P002A	1
20	B660 2535	Gear - Z20 :PF4132P003A	1
21	B660 2634	Shaft :PF4132K144	1
22	B660 1745	Pawl Stopper :PF4132P128A	1
23	B660 1955	Shaft Spring :PF4132P354A	1
24	B660 1971	Stopper Stay :PF4132P410A	1
25	B660 2724	roller Ass'y :PF4132K027	1
26	B660 4751	Nut :NT040FN2	1
27	B660 1795	Magnet Catch :PF4132P304A	1
28	B660 2831	Drive Stay :PF4132K041A	1
29	B660 2487	Pulley :PF4132P035A	2
30	B660 1931	Motor Tension Spring :PF4132P338A	1
31	B660 2821	Drive Stay :PF4132K036A	1
32	B660 1811	Drive Tension Spring :PF4132P309A	1
33	B660 2812	Timing Pulley :PF4025P024B	1
34	B660 5175	Harness - Drawer :PF4132K434A	1
35	B660 4925	Drawer Screw :PF4051P361A	2

Index No.	Part No.	Description	Q'ty Per Assembly
36	B660 1715	Lower Guide Plate :PF4132P121A	1
37	B660 1641	Sensor Lever :PF4132P011A	1
38	B660 1815	Sensor Spring :PF4132P310A	1
39	B660 1461	Sensor Bracket :PF4132P156A	1
40	B660 4625	Retaining Ring :ER050SKP	5
41	B660 4525	Screw :030080FNWS	8
42	B660 4835	Screw :S-SCR00045A	14
43	B660 4535	Screw :040050FNIT	3
44	B660 4555	Screw :040120FNWS	2
45	B660 4531	Screw :030080FNWS	2
46	B660 5145	Harness - Solenoid :PF4132K424A	1
47	B660 5131	Harness - Upper Stopper :PF4132K421A	1
48	B660 5111	Harness - Sensor :PF4132K415A	1
49	B660 5135	Harness - Sensor :PF4132K422A	1
50	B660 5115	Harness - Sensor Pressure :PF4132K418A	1
51	B660 5191	Harness - Horizontal Transport :PF4132K439A	1
52	B660 5165	Harness - Paper Crimp :PF4132K428A	1
53	B660 4545	Screw :040080FNWS	2
54	B660 4842	Bushing :NS-BRG00013A	4
55	B660 4631	Retaining Ring :ER070SKP	2
56	B660 4821	External Circlip :S-CLP00008A	3
57	B660 4561	Screw :040200FNBI	1
58	B660 4931	Screw :PF4099P463A	1
59	B660 4541	Screw :040060FNBI	5
60	B660 2815	Spacer :PF4099P337	1
61	B660 4511	Screw :030040FNBI	1
62	B660 5115	Harness - Sensor Pressure :PF4132K418A	1
63	B660 4846	Bushing :NS-MTL00004A	2
64	B660 5141	Harness - Sensor :PF4132K423A	1
65	B660 4844	Bushing :NS-BRG00081A	1
66	B660 4825	External Circlip :S-CLP00011A	1

8.Folder Section 5 (B660)

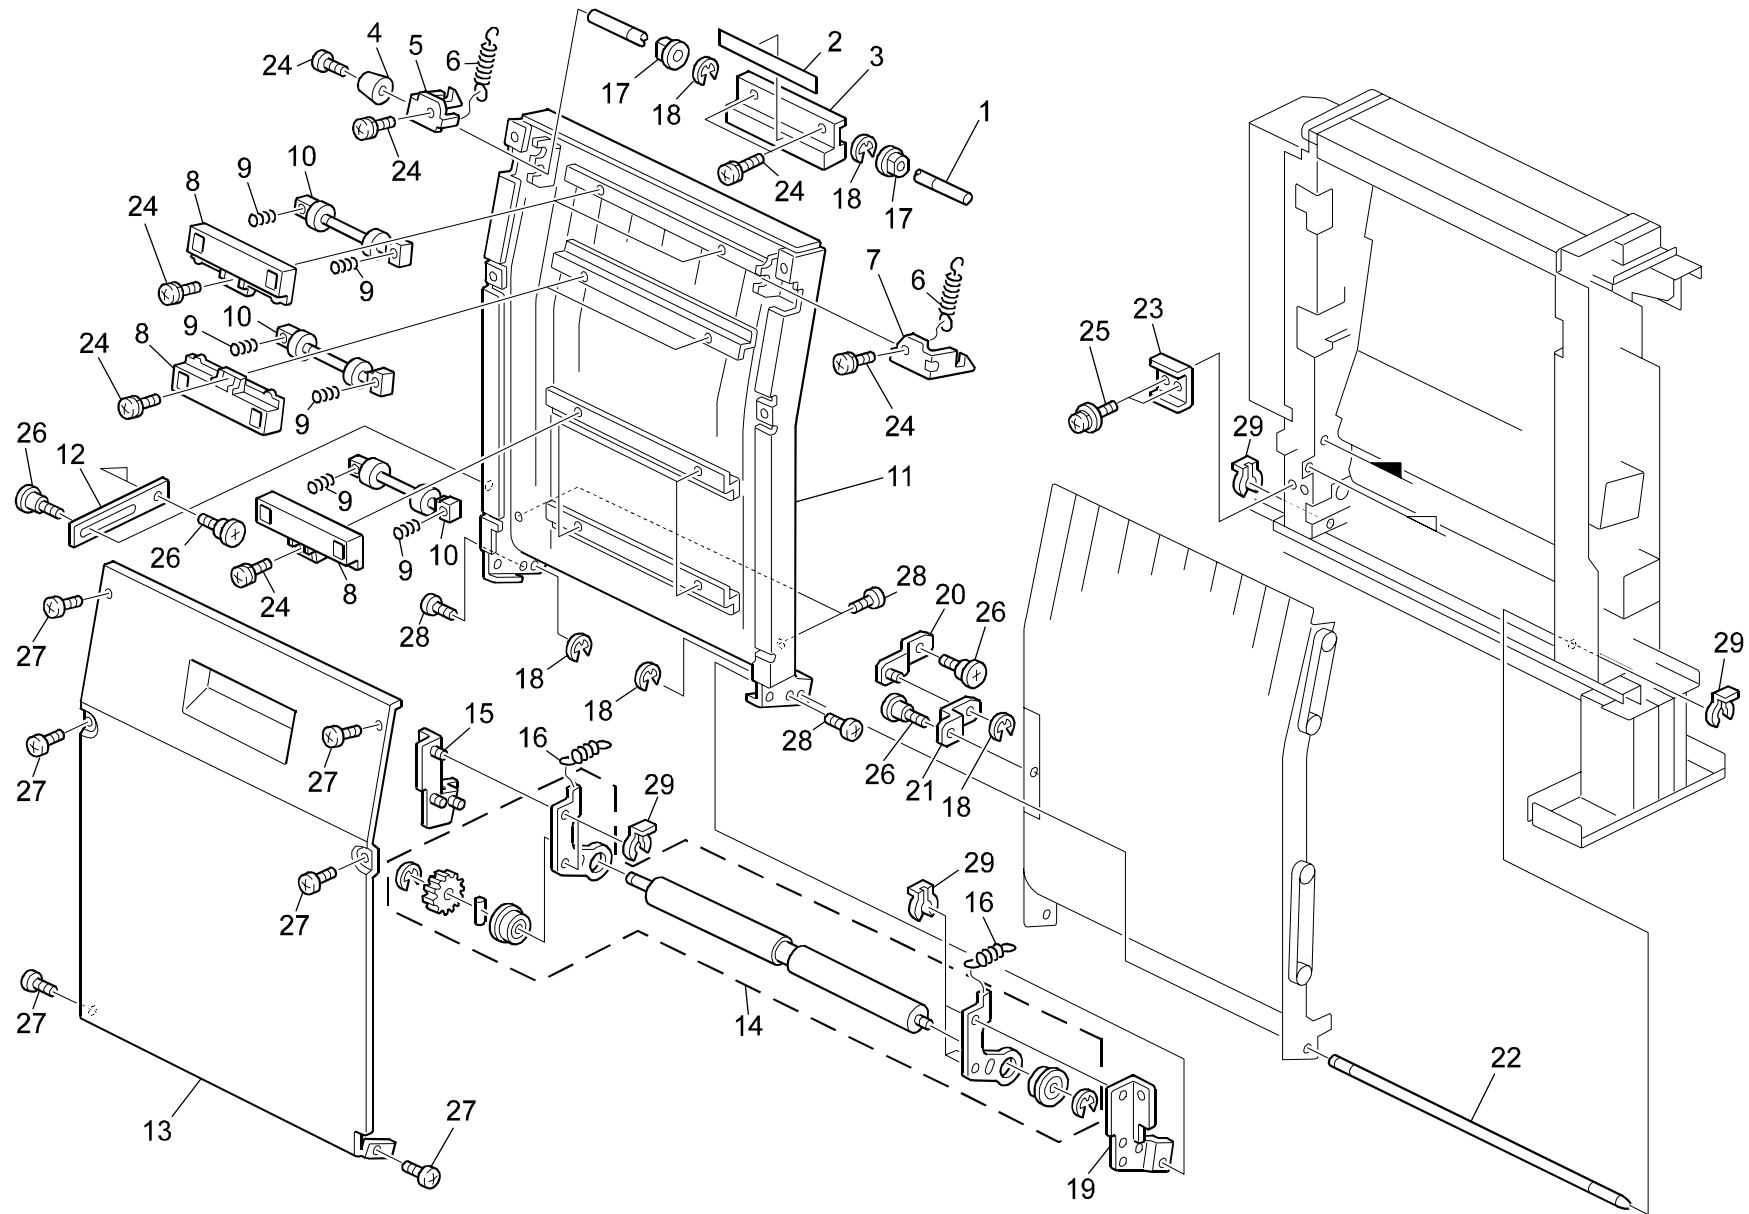


8.Folder Section 5 (B660)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B660 1771	Grip Shaft :PF4132P206A	1
2	B660 3361	Decal - Grip N3 :PF4132P369A	1
3	B660 3131	Grip :PF4132P029A	1
4	B660 0311	Rubber Foot :HM1001P342A	1
5	B660 1451	Grip Arm :PF4132P148A	1
6	B660 1855	Grip Spring :PF4132P318A	2
7	B660 1445	Grip Arm :PF4132P147A	1
8	B660 1635	Roller Holder :PF4132P010A	6
9	B660 1821	Roller Spring :PF4132P311A	12
10	AF02 2147	Driven Roller	6
11	B660 1765	Left Guide Plate :PF4132P165A	1
12	B660 1471	Guide Plate Arm :PF4132P162A	1
13	B660 3161	Paper Crimp Sub-unit Cover	1
		:PF4132P166A	
14	B660 2740	Roller Ass'y :PF4132K092A	1
15	B660 2311	Roller Bracket :PF4132K101A	1
16	B660 1945	Roller Spring :PF4132P349A	2
17	B660 4847	Bushing :NS-MTL00009A	2
18	B660 4625	Retaining Ring :ER050SKP	5
19	B660 2291	Roller Bracket :PF4132K100A	1
20	B660 2271	Open And Close Stay :PF4132K089A	1
21	B660 1991	Guide Plate - Stay :PF4132P416A	1
22	B660 1221	Guide Plate Shaft :PF4132P234A	1
23	B660 2125	Stopper Positioning Plate :PF4132P454A	1
24	B660 4525	Screw :030080FNWS	10
25	B660 4531	Screw :030080FNWS	1
26	B660 4921	Screw :PF2229P408A	4
27	B660 4541	Screw :040060FNBI	6
28	B660 4911	Screw :PF2078P458A	4
29	B660 4821	External Circlip :S-CLP00008A	2

Index No.	Part No.	Description	Q'ty Per Assembly

9.Folder Section 6 (B660)

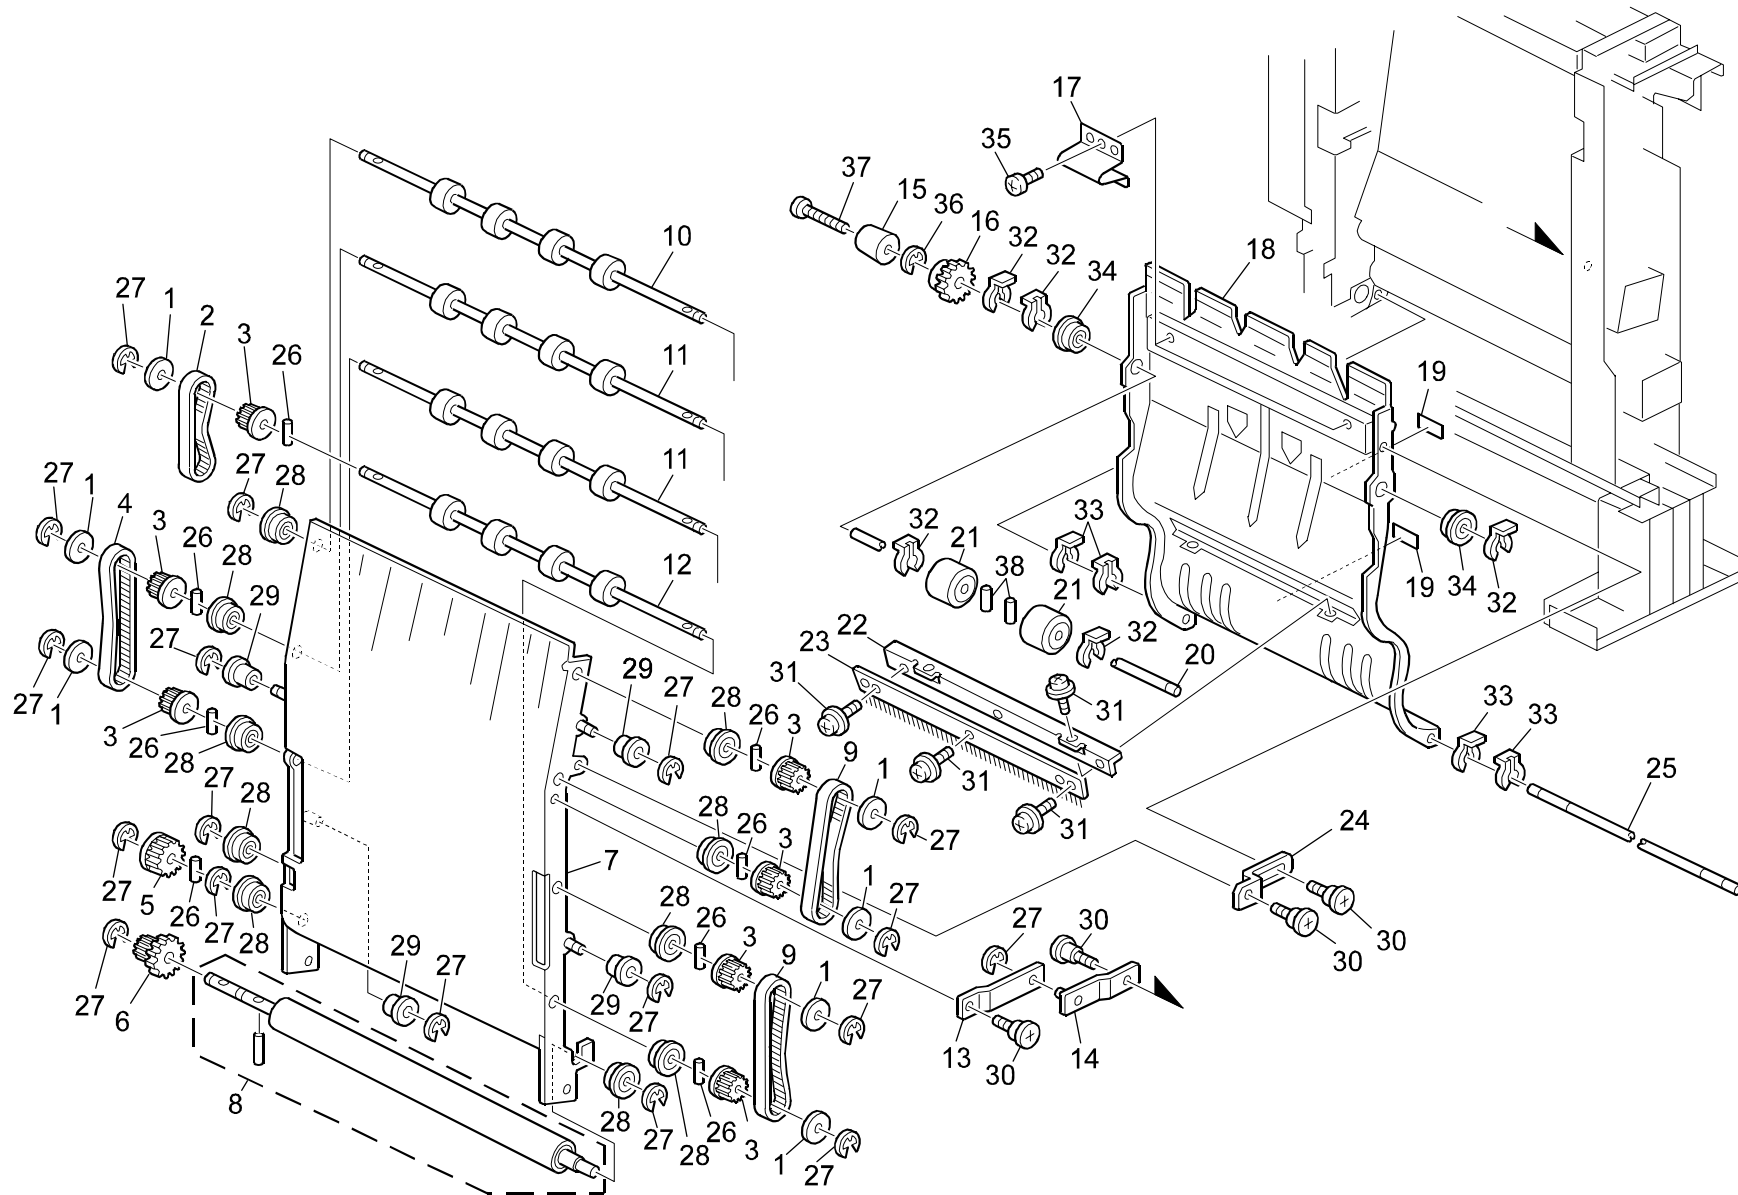


9.Folder Section 6 (B660)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B660 2515	Flange :PF2147P032A	7
2	B660 2411	Timing Belt :S-BLT00090A	1
3	B660 2511	Timing Pulley - 20Z :PF2138P037A	7
4	B660 2481	Timing Belt :S-BLT00309A	1
5	B660 2541	Gear - Z20 :PF4132P004A	1
6	B660 2781	Gear - Z20 :PF4132P607A	1
7	B660 1681	Left Upper Guide Plate :PF4132P116A	1
8	B660 2734	Roller Ass'y :PF4132K146A	1
9	B660 2471	Timing Belt :S-BLT00308A	2
10	B660 2711	Upper Transport Roller :PF4132P306A	1
11	B660 2715	Middle Transport Roller :PF4132P307A	2
12	B660 2721	Lower Transport Roller :PF4132P308A	1
13	B660 1985	Guide Plate - Stay :PF4132P414A	1
14	B660 2261	Open And Close Stay :PF4132K088A	1
15	B660 0311	Rubber Foot :HM1001P342A	1
16	B660 2745	Gear - Z20 :PF4132P351A	1
17	B660 1395	Guide Plate Spring :PF4132P110A	2
18	B660 1741	Middle Guide Plate :PF4132P126A	1
19	B660 1625	Sensor Reflector :PF2250P341A	2
20	B660 2675	Paper Crimp Sub-unit Cover :PF4132P221A	1
21	B660 2731	Release Roller :PF4132P345A	2
22	B660 2115	Discharge Brush Bracket :PF4132P423A	1
23	B660 1835	Discharge Brush :PF4132P314A	1
24	B660 1981	Guide Plate - Stay :PF4132P412A	1
25	B660 1215	Guide Plate Shaft :PF4132P229A	1
26	B660 4711	Parallel Pin :HP020080SCH	8
27	B660 4625	Retaining Ring :ER050SKP	17
28	B660 4843	Bushing :NS-BRG00016A	10
29	B660 2521	Tension Roller :PF4099P386A	4
30	B660 4921	Screw :PF2229P408A	4
31	B660 4535	Screw :040050FNIT	4
32	B660 4825	External Circlip :S-CLP00011A	5
33	B660 4821	External Circlip :S-CLP00008A	4
34	B660 4844	Bushing :NS-BRG00081A	2

Index No.	Part No.	Description	Q'ty Per Assembly
35	B660 4835	Screw :S-SCR00045A	2
36	B660 4631	Retaining Ring :ER070SKP	1
37	B660 4525	Screw :030080FNSW	1
38	B660 4715	Parallel Pin :HP020120SCH	2

10. Drive Section (B660)

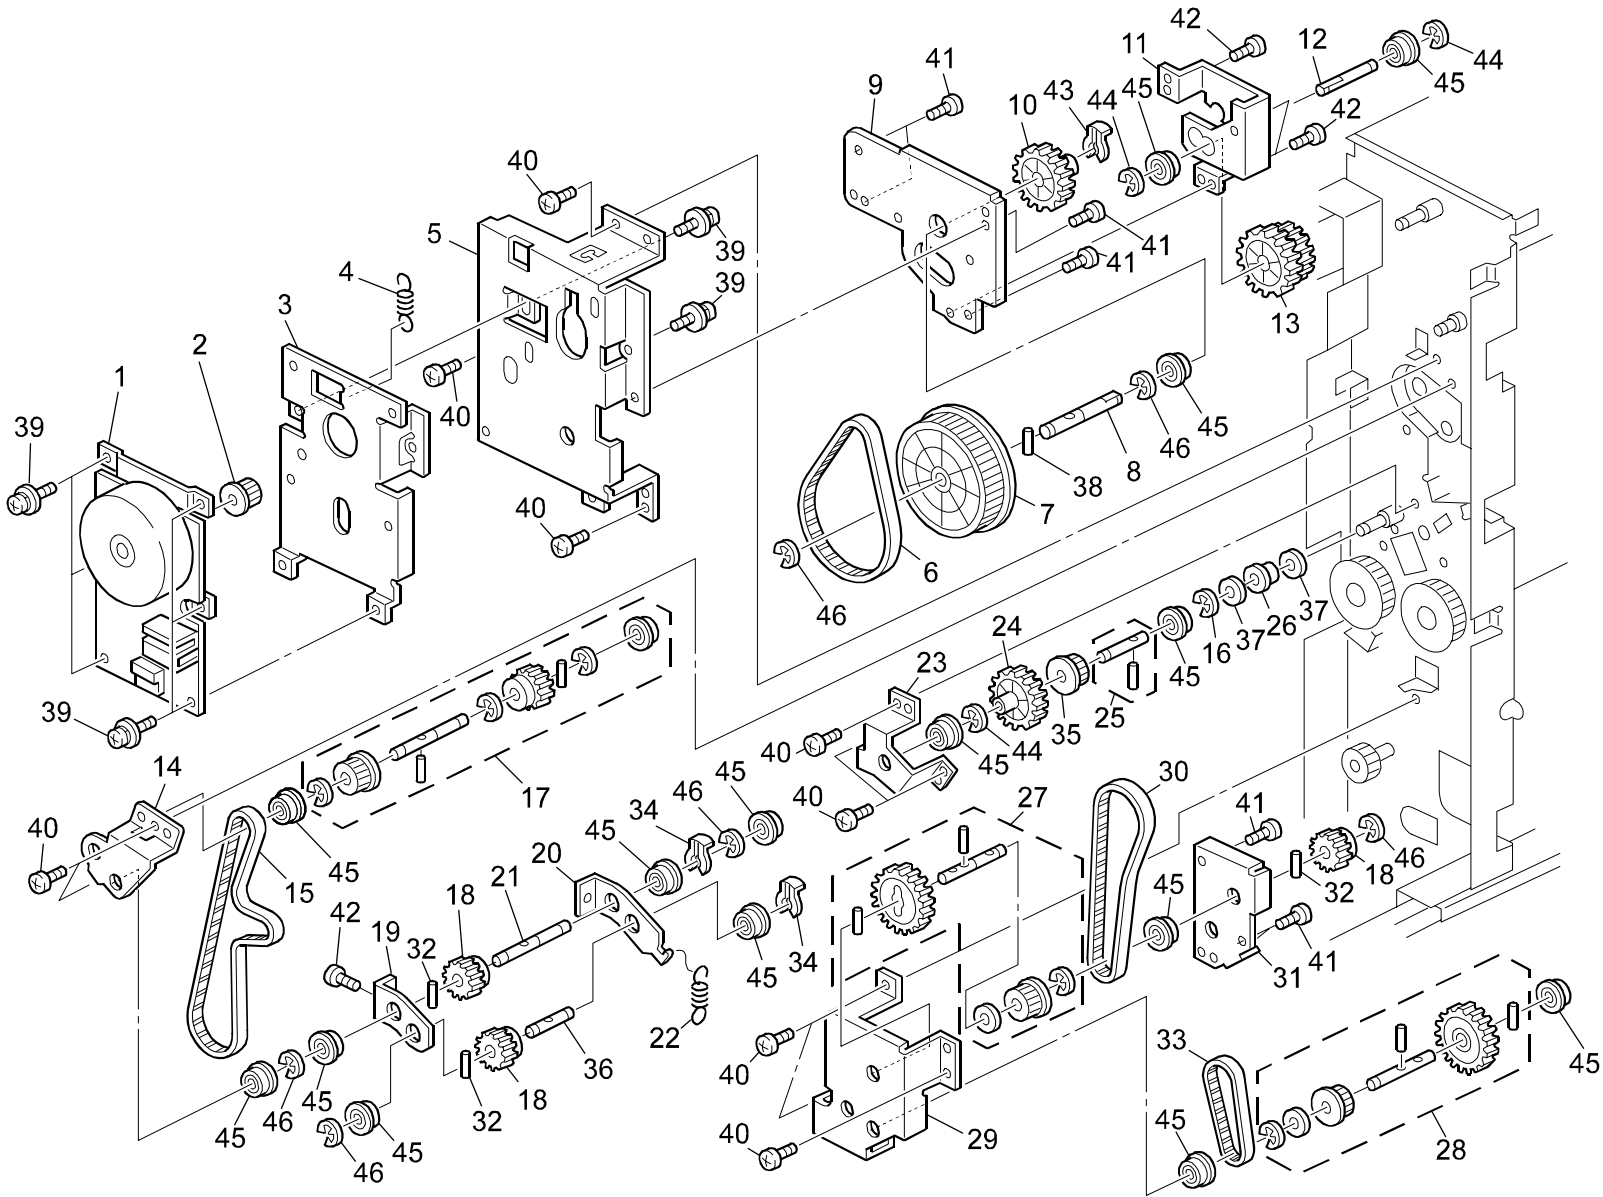


10. Drive Section (B660)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B660 5431	Brushless Motor :PF4132P521A	1
2	B660 2811	Timing Pulley - S3M16 :PF4132P615A	1
3	B660 2621	Motor Stay :PF4132P199A	1
4	B660 1931	Motor Tension Spring :PF4132P338A	1
5	B660 2575	Motor Bracket :PF4132P100A	1
6	B660 2421	Timing Belt :S-BLT00117A	1
7	B660 2545	Timing Pulley - S3M64 :PF4132P005A	1
8	B660 2655	Drive Shaft :PF4132P217A	1
9	B660 2595	Motor Stay :PF4132P151A	1
10	B660 2565	Gear - Z25 :PF4132P014A	1
11	B660 2755	Gear - Z30/Z32 BRACKET :PF4132P400A	1
12	B660 2691	Gear Shaft :PF4132P228A	1
13	B660 2571	Gear - Z30/Z32 :PF4132P015A	1
14	B660 1491	Pulley Bracket :PF4132P177A	1
15	B660 2441	Timing Belt :S-BLT00305A	1
16	B660 4631	Retaining Ring :ER070SKP	1
17	B660 2660	Drive Roller Ass'y :PF4132K032A	1
18	B660 2541	Gear - Z20 :PF4132P004A	3
19	B660 2615	Drive Bracket :PF4132P153A	1
20	B660 2611	Drive Stay :PF4132P152A	1
21	B660 2665	Drive Shaft :PF4132P219A	1
22	B660 1885	Pressure Roller Spring :PF4132P327A	1
23	B660 1565	Pulley Bracket :PF4132P198A	1
24	B660 2561	Gear - Z31 :PF4132P013A	1
25	B660 2684	Shaft :PF4132K145A	1
26	B660 2487	Pulley :PF4132P035A	1
27	B660 2644	Gear Ass'Y :PF4132K038A	1
28	B660 2650	Gear Ass'y :PF4132K039A	1
29	B660 2581	Drive Bracket :PF4132P101A	1
30	B660 2485	Timing Belt :NS-BLT000143	1
31	B660 2585	Drive Stay :PF4132P102A	1
32	B660 4771	Spring Pin :SP020120FPA	3
33	B660 2486	Timing Belt :NS-BLT000210	1
34	B660 4821	External Circlip :S-CLP00008A	2
35	B660 2488	Timing Pulley :PF4132P036	1

Index No.	Part No.	Description	Q'ty Per Assembly
36	B660 2671	Drive Shaft :PF4132P220A	1
37	B660 4842	Bushing :NS-BRG00013A	2
38	B660 4725	Parallel Pin :HP030180SCH	1
39	B660 4545	Screw :040080FNWS	8
40	B660 4835	Screw :S-SCR00045A	11
41	B660 4541	Screw :040060FNBI	6
42	B660 4511	Screw :030040FNBI	4
43	B660 4815	External Circlip :S-CLP00003A	1
44	B660 4621	Retaining Ring :ER040SKP	3
45	B660 4843	Bushing :NS-BRG00016A	12
46	B660 4625	Retaining Ring :ER050SKP	6

11.ElectricalSection (B660)

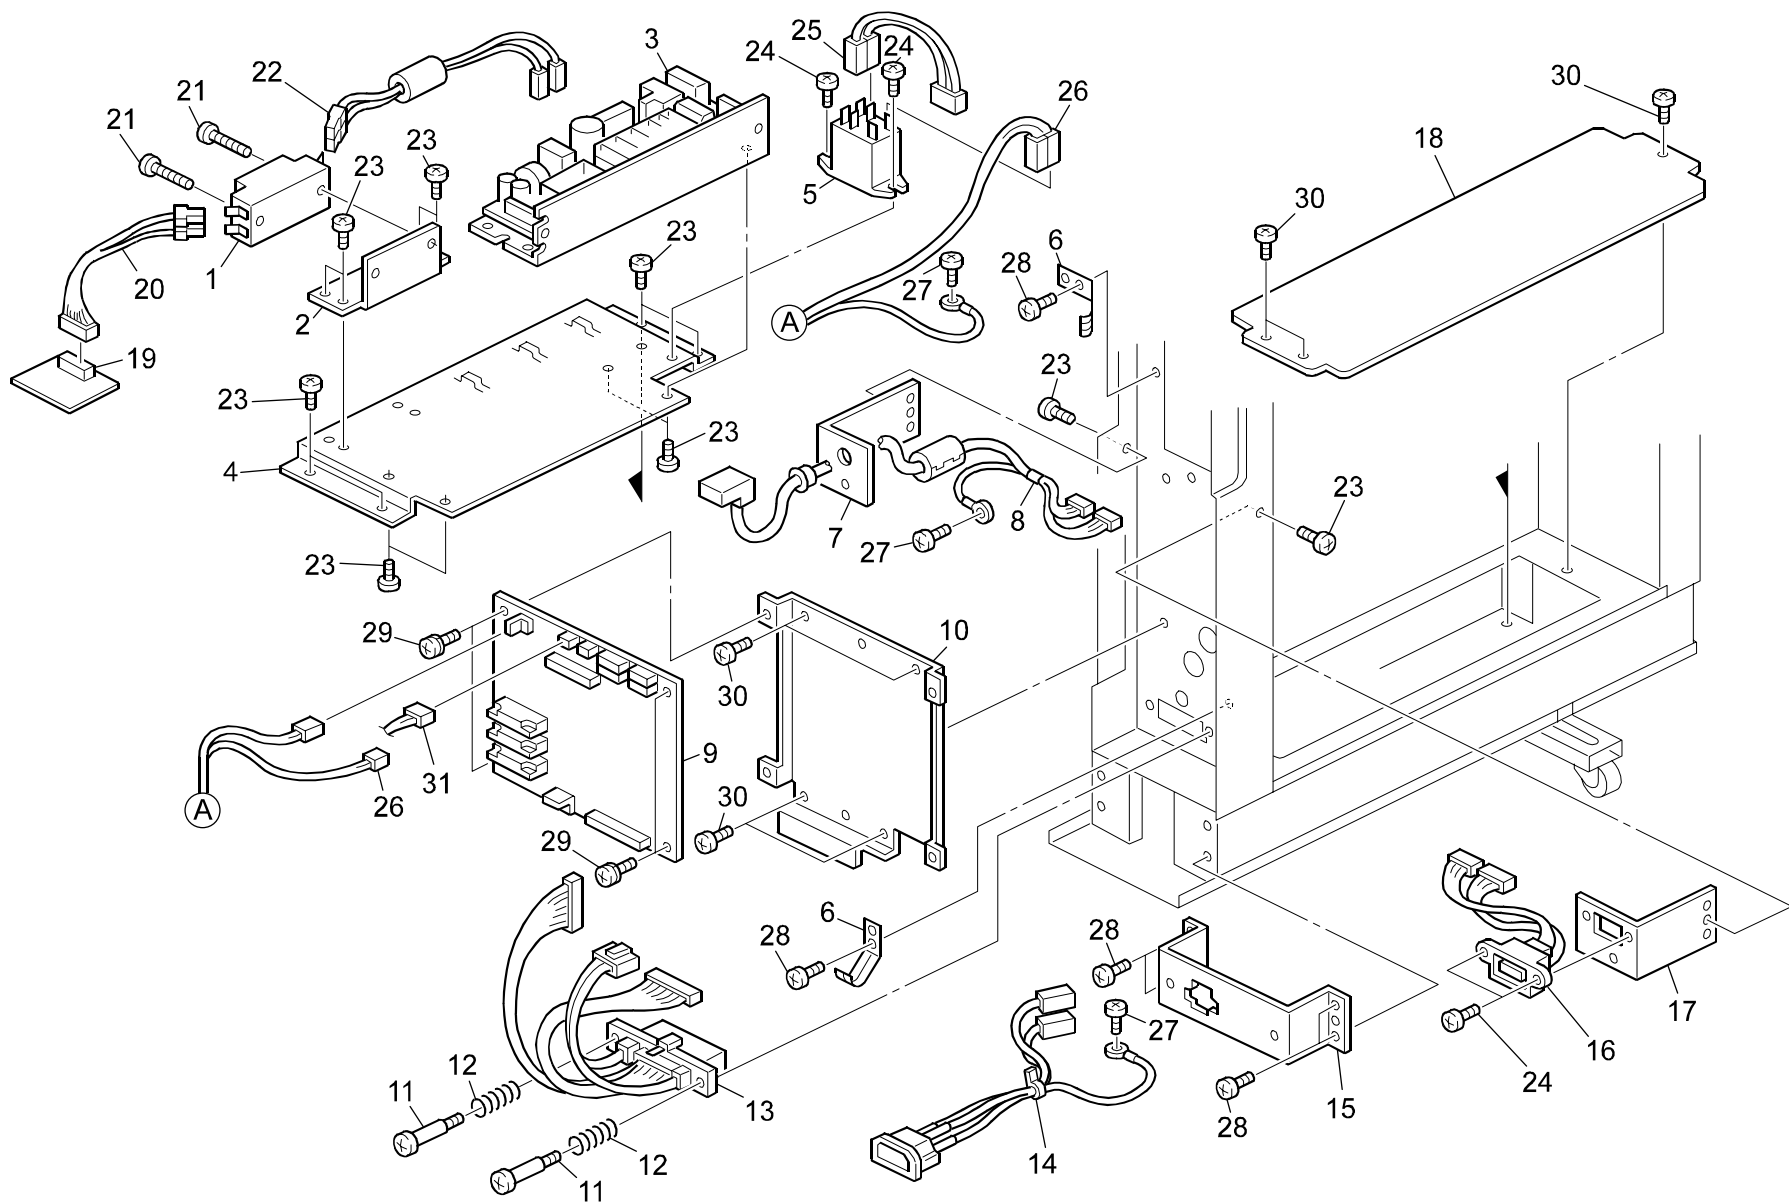


11.ElectricalSection (B660)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B660 5261	Leak Breaker :E120001715	1
2	B660 1571	Leak Breaker Bracket :PF4132P418A	1
3	B660 5265	Power Supply Unit :PF4132P520A	1
4	B660 1495	Power Source Bracket :PF4132P178A	1
5	B660 5255	Relay :E120001731	1
6	B660 1165	Frame Spring Plate :PF4132P158A	2
7	B660 1551	Interface Bracket :PF4132P194A	1
8	B660 5155	Harness - Interface :PF4132K426A	1
9	B660 5511	Main Control Base :PF4132K406A	1
10	B660 1531	Base Bracket :PF4132P187A	1
11	B660 4925	Drawer Screw :PF4051P361A	2
12	B660 1851	Drawer Spring :PF4132P317A	2
13	B660 5171	Harness - Drawer :PF4132K433A	1
14	B660 5245	Harness - Inlet :PF4132K464A	1
15	B660 1525	AC Power Supply Bracket :PF4132P185A	1
16	B660 5161	Harness - Interface Fin :PF4132K427A	1
17	B660 1555	Interface Bracket :PF4132P195A	1
18	B660 3181	Holder Cover :PF4132P179A	1
19	B660 5512	Relay Board :PF4132K408	1
20	B660 5251	Harness - Sp Base :PF4132K465A	1
21	B660 4561	Screw :040200FNBI	2
22	B660 5215	Harness - AC Power Supply:PF4132K446A	1
23	B660 4541	Screw :040060FNBI	14
24	B660 4521	Screw :030080FNBI	4
25	B660 5231	Harness - AC Power Supply:PF4132K447A	1
26	B660 5185	Harness - Power Source :PF4132K437A	1
27	B660 4545	Screw :040080FNWS	3
28	B660 4831	Screw :S-SCR00016A	6
29	B660 4525	Screw :030080FNSW	4
30	B660 4835	Screw :S-SCR00045A	8
31	B660 5125	Harness - Cover Sensor :PF4132K420A	1

Index No.	Part No.	Description	Q'ty Per Assembly

12.Frame Section (B660)

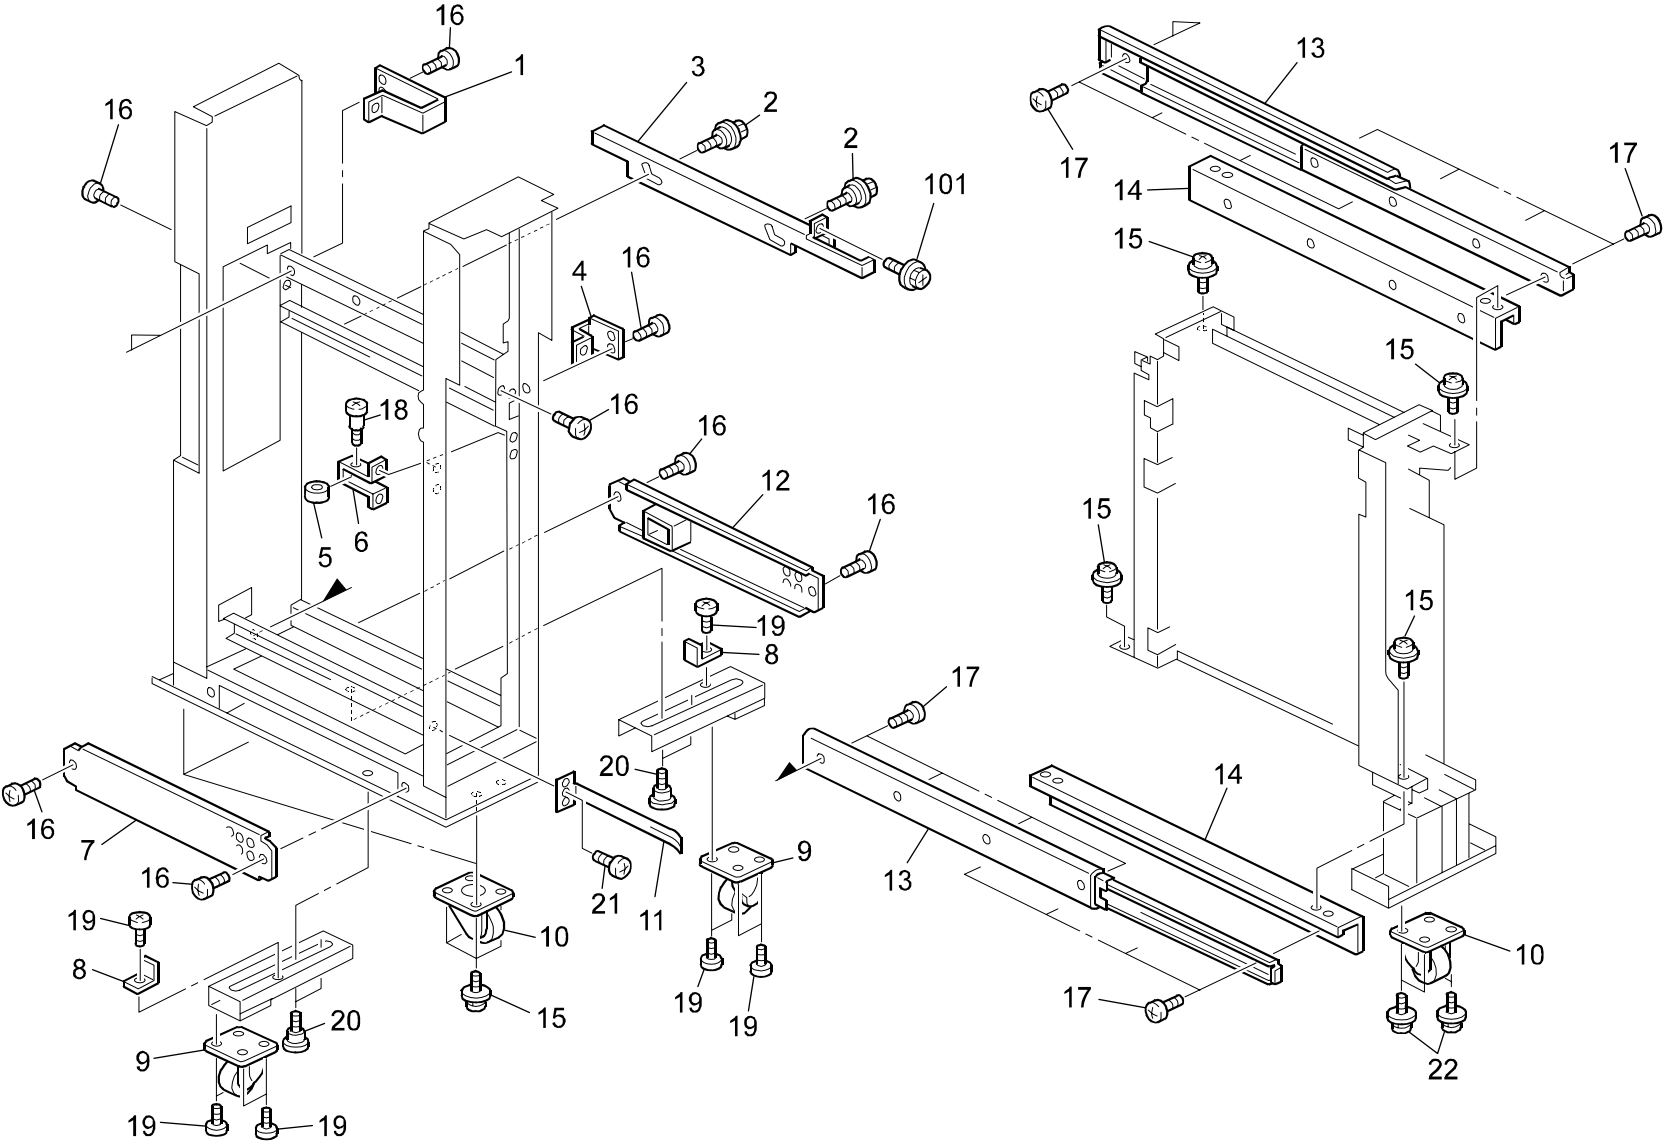

12.Frame Section (B660)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B660 1435	Ground Plate Bracket :PF4132P139A	1
2	A697 1125	Stepped Screw - Lever	2
3	B660 1211	Coupling Lever :PF4132P197A	1
4	B660 1431	Ground Plate Bracket :PF4132P138A	1
5	B660 1121	Lock Roller :PF4132P018A	1
6	B660 1575	Roller Bracket :PF4132P427A	1
7	B660 3185	Holder Cover :PF4132P184A	1
8	B660 1601	Stay Bracket :PF4132P440A	2
9	B660 1231	Caster Stay :PF4132P343A	2
10	B660 1115	Caster :PF4051P384A	2
11	B660 1161	Frame Spring Plate :PF4132P157A	1
12	B660 3211	Holder Cover :PF4132P419A	1
13	B660 1791	Slide Rail :PF4132P303A	2
14	B660 1171	Rail Stay :PF4132P164A	2
15	B660 4535	Screw :040050FNIT	8
16	B660 4835	Screw :S-SCR00045A	7
17	B660 4541	Screw :040060FNBI	16
18	B660 4841	Screw :S-SCR00202A	1
19	B660 4511	Screw :030040FNBI	10
20	B660 4921	Screw :PF2229P408A	4
21	B660 4831	Screw :S-SCR00016A	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	

Parts Index

Parts Index

Part No.	Description	Page and Index No.
B660 0311	Rubber Foot :HM1001P342A	17 - 4
B660 0311	Rubber Foot :HM1001P342A	19 - 15
B660 1111	Magnet Catch :PF2214P393A	5 - 9
B660 1115	Caster :PF4051P384A	25 - 10
B660 1121	Lock Roller :PF4132P018A	25 - 5
B660 1161	Frame Spring Plate :PF4132P157A	25 - 11
B660 1165	Frame Spring Plate :PF4132P158A	23 - 6
B660 1165	Frame Spring Plate :PF4132P158A	5 - 3
B660 1171	Rail Stay :PF4132P164A	25 - 14
B660 1211	Coupling Lever :PF4132P197A	25 - 3
B660 1215	Guide Plate Shaft :PF4132P229A	19 - 25
B660 1221	Guide Plate Shaft :PF4132P234A	17 - 22
B660 1225	Cover Shaft :PF4132P237A	9 - 10
B660 1231	Caster Stay :PF4132P343A	25 - 9
B660 1381	Cover Arm :PF4132P106A	9 - 16
B660 1395	Guide Plate Spring :PF4132P110A	19 - 17
B660 1411	Solenoid Bracket :PF4132P113A	7 - 14
B660 1415	Motor Bracket :PF4132P114A	15 - 5
B660 1415	Motor Bracket :PF4132P114A	11 - 13
B660 1421	Paper Crimp Arm Sub-unit :PF4132P115A	13 - 12
B660 1425	Guide Plate Bracket :PF4132P129A	7 - 5
B660 1431	Ground Plate Bracket :PF4132P138A	25 - 4
B660 1435	Ground Plate Bracket :PF4132P139A	25 - 1
B660 1441	Coupling Bracket :PF4132P143A	3 - 15
B660 1445	Grip Arm :PF4132P147A	9 - 13
B660 1445	Grip Arm :PF4132P147A	17 - 7
B660 1451	Grip Arm :PF4132P148A	17 - 5
B660 1451	Grip Arm :PF4132P148A	9 - 12
B660 1455	Sensor Bracket :PF4132P150A	7 - 2
B660 1461	Sensor Bracket :PF4132P156A	15 - 39
B660 1465	Sensor Bracket :PF4132P160A	13 - 5
B660 1471	Guide Plate Arm :PF4132P162A	17 - 12
B660 1475	Paper Crimp Arm Sub-unit :PF4132P169A	13 - 20
B660 1481	Paper Crimp Rack Sub-unit :PF4132P170A	15 - 16
B660 1485	Pressure Roller Bracket :PF4132P171A	11 - 20

Part No.	Description	Page and Index No.
B660 1491	Pulley Bracket :PF4132P177A	21 - 14
B660 1495	Power Source Bracket :PF4132P178A	23 - 4
B660 1511	Roller Bracket :PF4132P181A	13 - 15
B660 1515	Roller Bracket :PF4132P182A	13 - 18
B660 1521	Cover Arm :PF4132P183A	9 - 17
B660 1525	AC Power Supply Bracket :PF4132P185A	23 - 15
B660 1531	Base Bracket :PF4132P187A	23 - 10
B660 1535	Pressure Roller Arm :PF4132P191A	11 - 21
B660 1541	Stopper Arm :PF4132P192A	11 - 16
B660 1545	Base Bracket :PF4132P193A	15 - 10
B660 1551	Interface Bracket :PF4132P194A	23 - 7
B660 1555	Interface Bracket :PF4132P195A	23 - 17
B660 1561	Cover Bracket :PF4132P196A	5 - 1
B660 1565	Pulley Bracket :PF4132P198A	21 - 23
B660 1571	Leak Breaker Bracket :PF4132P418A	23 - 2
B660 1575	Roller Bracket :PF4132P427A	25 - 6
B660 1581	Guide Plate Bracket :PF4132P429A	5 - 11
B660 1585	Damper Bracket :PF4132P430A	3 - 8
B660 1591	Sensor Bracket :PF4132P431A	11 - 1
B660 1595	Guide Plate Bracket :PF4132P433A	5 - 8
B660 1601	Stay Bracket :PF4132P440A	25 - 8
B660 1611	Gear Bracket :PF4132P448A	15 - 18
B660 1615	Paper Crimp Flange Sub-unit :PF4132P449A	13 - 13
B660 1621	Sensor Lever :PF2171P358A	7 - 4
B660 1621	Sensor Lever :PF2171P358A	13 - 8
B660 1625	Sensor Reflector :PF2250P341A	19 - 19
B660 1631	Sensor Lever :PF4132P009A	5 - 15
B660 1635	Roller Holder :PF4132P010A	17 - 8
B660 1635	Roller Holder :PF4132P010A	5 - 6
B660 1641	Sensor Lever :PF4132P011A	15 - 37
B660 1645	Cover Grip :PF4132P012A	3 - 6
B660 1651	Sensor Lever :PF4132P021A	11 - 3
B660 1655	Roller Holder :PF4132P025A	11 - 27
B660 1661	Pressure Roller :PF4132P026A	11 - 33
B660 1665	Roller Holder :PF4132P027A	11 - 32

Part No.	Description	Page and Index No.
B660 1671	Pressure Roller Holder :PF4132P028A	11 - 29
B660 1675	Right Lower Guide Plate :PF4132P109A	9 - 11
B660 1681	Left Upper Guide Plate :PF4132P116A	19 - 7
B660 1685	Horizontal Guide Plate :PF4132P117A	7 - 9
B660 1691	Horizontal Guide Plate :PF4132P118A	7 - 12
B660 1695	Exit Guide Plate :PF4132P119A	7 - 10
B660 1711	Lower Guide Plate :PF4132P120A	15 - 15
B660 1715	Lower Guide Plate :PF4132P121A	15 - 36
B660 1721	Right Upper Guide Plate :PF4132P122A	13 - 11
B660 1725	Right Upper Guide Plate :PF4132P123A	13 - 10
B660 1731	Right Lower Guide Plate :PF4132P124A	9 - 4
B660 1735	Middle Guide Plate :PF4132P125A	15 - 11
B660 1741	Middle Guide Plate :PF4132P126A	19 - 18
B660 1745	Pawl Stopper :PF4132P128A	15 - 22
B660 1745	Pawl Stopper :PF4132P128A	11 - 9
B660 1755	Horizontal Guide Plate :PF4132P149A	5 - 10
B660 1761	Guide Plate:Horizontal :PF4132P159A	11 - 23
B660 1765	Left Guide Plate :PF4132P165A	17 - 11
B660 1771	Grip Shaft :PF4132P206A	17 - 1
B660 1775	Sensor Shaft :PF4132P230A	7 - 1
B660 1775	Sensor Shaft :PF4132P230A	13 - 7
B660 1781	Grip Spring :PF4132P301A	9 - 15
B660 1785	Paper Crimp Spring Sub-unit :PF4132P302A	13 - 14
B660 1791	Slide Rail :PF4132P303A	25 - 13
B660 1795	Magnet Catch :PF4132P304A	15 - 27
B660 1795	Magnet Catch :PF4132P304A	5 - 7
B660 1811	Drive Tension Spring :PF4132P309A	15 - 32
B660 1815	Sensor Spring :PF4132P310A	15 - 38
B660 1821	Roller Spring :PF4132P311A	17 - 9
B660 1821	Roller Spring :PF4132P311A	5 - 5
B660 1825	Solenoid Spring :PF4132P312A	11 - 30
B660 1825	Solenoid Spring :PF4132P312A	7 - 13
B660 1831	Sensor Spring :PF4132P313A	13 - 6
B660 1831	Sensor Spring :PF4132P313A	7 - 3
B660 1835	Discharge Brush :PF4132P314A	19 - 23

Part No.	Description	Page and Index No.
B660 1841	Guide:Paper Crimp Sub-unit :PF4132P315A	11 - 24
B660 1845	Paper Crimp Guide Sub-unit :PF4132P316A	7 - 11
B660 1851	Drawer Spring :PF4132P317A	23 - 12
B660 1855	Grip Spring :PF4132P318A	17 - 6
B660 1861	Entrance Exchange Powl :PF4132P319A	7 - 22
B660 1865	Sensor Spring :PF4132P323A	5 - 14
B660 1871	Roller Spring :PF4132P324A	9 - 5
B660 1875	Pressure Roller Spring :PF4132P325A	11 - 28
B660 1881	Pressure Roller Spring :PF4132P326A	11 - 31
B660 1885	Pressure Roller Spring :PF4132P327A	11 - 26
B660 1885	Pressure Roller Spring :PF4132P327A	21 - 22
B660 1891	Motor Tension Spring :PF4132P329A	7 - 23
B660 1911	Solenoid Spacer :PF4132P331A	11 - 17
B660 1915	Gear - Z20 :PF4132P335A	15 - 8
B660 1915	Gear - Z20 :PF4132P335A	3 - 10
B660 1921	Damper :PF4132P336A	3 - 9
B660 1921	Damper :PF4132P336A	15 - 7
B660 1925	Spring :PF4132P337A	11 - 7
B660 1925	Spring :PF4132P337A	15 - 12
B660 1931	Motor Tension Spring :PF4132P338A	21 - 4
B660 1931	Motor Tension Spring :PF4132P338A	15 - 30
B660 1935	Transport Sensor Spring :PF4132P339A	11 - 4
B660 1945	Roller Spring :PF4132P349A	17 - 16
B660 1951	Gear - Z16 :PF4132P353A	15 - 17
B660 1955	Shaft Spring :PF4132P354A	11 - 5
B660 1955	Shaft Spring :PF4132P354A	15 - 23
B660 1961	Entrance Guide :PF4132P360A	5 - 18
B660 1971	Stopper Stay :PF4132P410A	15 - 24
B660 1975	Stopper Stay :PF4132P411A	11 - 6
B660 1981	Guide Plate - Stay :PF4132P412A	19 - 24
B660 1985	Guide Plate - Stay :PF4132P414A	19 - 13
B660 1991	Guide Plate - Stay :PF4132P416A	17 - 21
B660 1995	Stud Bracket :PF4132P421A	9 - 1
B660 2111	Sensor Bracket :PF4132P422A	15 - 13
B660 2115	Discharge Brush Bracket :PF4132P423A	19 - 22

Part No.	Description	Page and Index No.
B660 2121	Damper Bracket :PF4132P434A	15 - 6
B660 2125	Stopper Positioning Plate :PF4132P454A	17 - 23
B660 2211	DC Solenoid - Release :PF4132K017A	11 - 18
B660 2221	DC Solenoid - Nip :PF4132K020A	11 - 22
B660 2231	DC Solenoid - Exchange Powl :PF4132K052A	7 - 15
B660 2241	Pressure Arm :PF4132K060A	11 - 19
B660 2251	Horizontal Guide Plate :PF4132K081A	5 - 2
B660 2261	Open And Close Stay :PF4132K088A	19 - 14
B660 2271	Open And Close Stay :PF4132K089A	17 - 20
B660 2291	Roller Bracket :PF4132K100A	5 - 16
B660 2291	Roller Bracket :PF4132K100A	17 - 19
B660 2311	Roller Bracket :PF4132K101A	17 - 15
B660 2411	Timing Belt :S-BLT00090A	19 - 2
B660 2421	Timing Belt :S-BLT00117A	21 - 6
B660 2441	Timing Belt :S-BLT00305A	21 - 15
B660 2461	Timing Belt :S-BLT00307A	7 - 19
B660 2471	Timing Belt :S-BLT00308A	19 - 9
B660 2481	Timing Belt :S-BLT00309A	19 - 4
B660 2485	Timing Belt :NS-BLT000143	21 - 30
B660 2486	Timing Belt :NS-BLT000210	21 - 33
B660 2487	Pulley :PF4132P035A	15 - 29
B660 2487	Pulley :PF4132P035A	21 - 26
B660 2488	Timing Pulley :PF4132P036	21 - 35
B660 2511	Timing Pulley - 20Z :PF2138P037A	13 - 19
B660 2511	Timing Pulley - 20Z :PF2138P037A	19 - 3
B660 2515	Flange :PF2147P032A	19 - 1
B660 2515	Flange :PF2147P032A	7 - 20
B660 2521	Tension Roller :PF4099P386A	19 - 29
B660 2521	Tension Roller :PF4099P386A	7 - 18
B660 2525	Gear - Z16 :PF4132P001A	15 - 1
B660 2525	Gear - Z16 :PF4132P001A	11 - 14
B660 2531	Sensor Lever :PF4132P002A	11 - 10
B660 2531	Sensor Lever :PF4132P002A	15 - 19
B660 2535	Gear - Z20 :PF4132P003A	11 - 11
B660 2535	Gear - Z20 :PF4132P003A	15 - 20

Part No.	Description	Page and Index No.
B660 2541	Gear - Z20 :PF4132P004A	19 - 5
B660 2541	Gear - Z20 :PF4132P004A	21 - 18
B660 2545	Timing Pulley - S3M64 :PF4132P005A	21 - 7
B660 2555	Timing Pulley - S2M25 :PF4132P008A	7 - 17
B660 2561	Gear - Z31 :PF4132P013A	21 - 24
B660 2565	Gear - Z25 :PF4132P014A	21 - 10
B660 2571	Gear - Z30/Z32 :PF4132P015A	21 - 13
B660 2575	Motor Bracket :PF4132P100A	21 - 5
B660 2581	Drive Bracket :PF4132P101A	21 - 29
B660 2585	Drive Stay :PF4132P102A	21 - 31
B660 2591	Motor Bracket :PF4132P104A	7 - 24
B660 2595	Motor Stay :PF4132P151A	21 - 9
B660 2611	Drive Stay :PF4132P152A	21 - 20
B660 2615	Drive Bracket :PF4132P153A	21 - 19
B660 2621	Motor Stay :PF4132P199A	21 - 3
B660 2625	Grip Shaft :PF4132P200A	9 - 14
B660 2631	Gear Z16 Shaft :PF4132P204A	11 - 12
B660 2631	Gear Z16 Shaft :PF4132P204A	15 - 2
B660 2634	Shaft :PF4132K144	15 - 21
B660 2634	Shaft :PF4132K144	11 - 8
B660 2641	Pressure Roller Shaft :PF4132P210A	11 - 25
B660 2644	Gear Ass'Y :PF4132K038A	21 - 27
B660 2650	Gear Ass'y :PF4132K039A	21 - 28
B660 2655	Drive Shaft :PF4132P217A	21 - 8
B660 2660	Drive Roller Ass'y :PF4132K032A	21 - 17
B660 2665	Drive Shaft :PF4132P219A	21 - 21
B660 2671	Drive Shaft :PF4132P220A	21 - 36
B660 2675	Paper Crimp Sub-unit Cover :PF4132P221A	19 - 20
B660 2681	Roller Shaft :PF4132P222A	11 - 34
B660 2684	Shaft :PF4132K145A	21 - 25
B660 2691	Gear Shaft :PF4132P228A	21 - 12
B660 2695	Paper Crimp Transport Roller :PF4132P305A	7 - 16
B660 2711	Upper Transport Roller :PF4132P306A	19 - 10
B660 2715	Middle Transport Roller :PF4132P307A	19 - 11
B660 2721	Lower Transport Roller :PF4132P308A	19 - 12

Part No.	Description	Page and Index No.
B660 2724	roller Ass'y :PF4132K027	15 - 25
B660 2731	Release Roller :PF4132P345A	19 - 21
B660 2734	Roller Ass'y :PF4132K146A	19 - 8
B660 2740	Roller Ass'y :PF4132K092A	17 - 14
B660 2745	Gear - Z20 :PF4132P351A	19 - 16
B660 2750	Roller Ass'y :PF4132K102	9 - 6
B660 2755	Gear - Z30/Z32 BRACKET :PF4132P400A	21 - 11
B660 2761	Collar :PF4132P600A	13 - 4
B660 2775	Gear - Z40 :PF4132P606A	13 - 3
B660 2781	Gear - Z20 :PF4132P607A	19 - 6
B660 2785	Roller :PF4132P610A	13 - 1
B660 2791	Roller :PF4132P611A	13 - 2
B660 2795	Roller :PF4132P612A	13 - 17
B660 2811	Timing Pulley - S3M16 :PF4132P615A	21 - 2
B660 2812	Timing Pulley :PF4025P024B	15 - 33
B660 2815	Spacer :PF4099P337	15 - 60
B660 2821	Drive Stay :PF4132K036A	15 - 31
B660 2831	Drive Stay :PF4132K041A	15 - 28
B660 3115	Spacer :PF2147P049A	9 - 21
B660 3121	Cover Spacer :PF4132P017A	9 - 18
B660 3125	Grip Guide Plate :PF4132P024A	5 - 13
B660 3131	Grip :PF4132P029A	17 - 3
B660 3131	Grip :PF4132P029A	9 - 22
B660 3135	Cover Grip :PF4132P030A	3 - 11
B660 3141	Paper Crimp Sub-unit Cover :PF4132P105A	9 - 20
B660 3145	Paper Crimp Sub-unit Cover :PF4132P130A	7 - 8
B660 3151	Paper Crimp Sub-unit Cover :PF4132P161A	9 - 3
B660 3155	Paper Crimp Sub-unit Cover :PF4132P163A	9 - 2
B660 3161	Paper Crimp Sub-unit Cover :PF4132P166A	17 - 13
B660 3165	Front Cover :PF4132P168A	3 - 13
B660 3171	Upper Cover :PF4132P173A	3 - 2
B660 3175	Rear Cover :PF4132P174A	3 - 1
B660 3181	Holder Cover :PF4132P179A	23 - 18
B660 3185	Holder Cover :PF4132P184A	25 - 7
B660 3191	Frame Cover :PF4132P409A	3 - 16

Part No.	Description	Page and Index No.
B660 3195	Drive Sub-unit Cover :PF4132P417A	7 - 21
B660 3211	Holder Cover :PF4132P419A	25 - 12
B660 3215	Front Cover :PF4132P420A	3 - 5
B660 3221	Frame Cover :PF4132P443A	3 - 7
B660 3225	Spacer :PF4132P620A	13 - 16
B660 3311	Decal - Misfeed Removal N1 :PF4132P364A	3 - 3
B660 3321	Decal - Misfeed Removal N2 :PF4132P365A	3 - 12
B660 3331	Decal - Misfeed Removal N2 Side 3 - :PF4132P366	14
B660 3341	Decal - Grip N1 :PF4132P367A	5 - 12
B660 3351	Decal - Grip N2 :PF4132P368A	9 - 23
B660 3361	Decal - Grip N3 :PF4132P369A	17 - 2
B660 4112	Ground Plate Bracket :PF4132P403A	3 - 24
B660 4122	Ground Plate Bracket Fin :PF4132P404A	3 - 23
B660 4132	Ground Plate Bracket CF :PF4132P465A	3 - 22
B660 4141	Front Fin Coupling Bracket :PF4132P405A	3 - 27
B660 4145	Rear Fin Coupling Bracket :PF4132P406A	3 - 30
B660 4151	CF Fin Coupling Bracket :PF4132P407A	3 - 28
B660 4155	CF Fin Coupling Bracket :PF4132P408A	3 - 29
B660 4161	Right Cover Sponge :PF4132P340A	3 - 20
B660 4172	Power Supply Cord -120V	3 - 19
B660 4173	Power Supply Cord -230V	3 - 19
B660 4181	Front Upper Cover :PF4132K132A	3 - 18
B660 4185	Rear Upper Cover :PF4132K133A	3 - 17
B660 4511	Screw :030040FNBI	15 - 61
B660 4511	Screw :030040FNBI	13 - 24
B660 4511	Screw :030040FNBI	25 - 19
B660 4511	Screw :030040FNBI	7 - 37
B660 4511	Screw :030040FNBI	21 - 42
B660 4511	Screw :030040FNBI	5 - 29
B660 4515	Screw :030050FNWS	7 - 36
B660 4515	Screw :030050FNWS	11 - 48
B660 4521	Screw :030080FNBI	23 - 24
B660 4521	Screw :030080FNBI	5 - 24
B660 4521	Screw :030080FNBI	11 - 44

Part No.	Description	Page and Index No.
B660 4525	Screw :030080FNSW	17 - 24
B660 4525	Screw :030080FNSW	11 - 42
B660 4525	Screw :030080FNSW	19 - 37
B660 4525	Screw :030080FNSW	15 - 41
B660 4525	Screw :030080FNSW	5 - 26
B660 4525	Screw :030080FNSW	23 - 29
B660 4525	Screw :030080FNSW	9 - 27
B660 4531	Screw :030080FNWS	11 - 41
B660 4531	Screw :030080FNWS	15 - 45
B660 4531	Screw :030080FNWS	17 - 25
B660 4531	Screw :030080FNWS	5 - 25
B660 4535	Screw :040050FNIT	15 - 43
B660 4535	Screw :040050FNIT	25 - 15
B660 4535	Screw :040050FNIT	11 - 47
B660 4535	Screw :040050FNIT	19 - 31
B660 4541	Screw :040060FNBI	21 - 41
B660 4541	Screw :040060FNBI	7 - 26
B660 4541	Screw :040060FNBI	9 - 7
B660 4541	Screw :040060FNBI	3 - 4
B660 4541	Screw :040060FNBI	15 - 59
B660 4541	Screw :040060FNBI	13 - 27
B660 4541	Screw :040060FNBI	5 - 30
B660 4541	Screw :040060FNBI	17 - 27
B660 4541	Screw :040060FNBI	23 - 23
B660 4541	Screw :040060FNBI	25 - 17
B660 4545	Screw :040080FNWS	23 - 27
B660 4545	Screw :040080FNWS	5 - 23
B660 4545	Screw :040080FNWS	15 - 53
B660 4545	Screw :040080FNWS	21 - 39
B660 4545	Screw :040080FNWS	7 - 28
B660 4555	Screw :040120FNWS	15 - 44
B660 4561	Screw :040200FNBI	15 - 57
B660 4561	Screw :040200FNBI	23 - 21
B660 4561	Screw :040200FNBI	11 - 45
B660 4565	Screw :040350FNBI	13 - 28

Part No.	Description	Page and Index No.
B660 4611	Retaining Ring :ER015SKP	7 - 38
B660 4611	Retaining Ring :ER015SKP	13 - 25
B660 4615	Retaining Ring :ER020SKP	11 - 46
B660 4621	Retaining Ring :ER040SKP	7 - 27
B660 4621	Retaining Ring :ER040SKP	21 - 44
B660 4625	Retaining Ring :ER050SKP	11 - 40
B660 4625	Retaining Ring :ER050SKP	21 - 46
B660 4625	Retaining Ring :ER050SKP	3 - 32
B660 4625	Retaining Ring :ER050SKP	15 - 40
B660 4625	Retaining Ring :ER050SKP	7 - 29
B660 4625	Retaining Ring :ER050SKP	9 - 25
B660 4625	Retaining Ring :ER050SKP	19 - 27
B660 4625	Retaining Ring :ER050SKP	17 - 18
B660 4631	Retaining Ring :ER070SKP	15 - 55
B660 4631	Retaining Ring :ER070SKP	19 - 36
B660 4631	Retaining Ring :ER070SKP	21 - 16
B660 4635	Retaining Rings-C :YA1025P232A	13 - 22
B660 4711	Parallel Pin :HP020080SCH	19 - 26
B660 4715	Parallel Pin :HP020120SCH	19 - 38
B660 4721	Parallel Pin :HP020220SCH	13 - 21
B660 4725	Parallel Pin :HP030180SCH	21 - 38
B660 4751	Nut :NT040FN2	13 - 31
B660 4751	Nut :NT040FN2	15 - 26
B660 4771	Spring Pin :SP020120FPA	21 - 32
B660 4781	Spring Pin:3x12 :SP030120FPA	7 - 34
B660 4811	External Circlip :S-CLP00001A	5 - 27
B660 4811	External Circlip :S-CLP00001A	7 - 35
B660 4815	External Circlip :S-CLP00003A	21 - 43
B660 4816	C Ring :NS-CLP00007A	5 - 22
B660 4821	External Circlip :S-CLP00008A	19 - 33
B660 4821	External Circlip :S-CLP00008A	7 - 31
B660 4821	External Circlip :S-CLP00008A	21 - 34
B660 4821	External Circlip :S-CLP00008A	11 - 37
B660 4821	External Circlip :S-CLP00008A	15 - 56
B660 4821	External Circlip :S-CLP00008A	17 - 29

Part No.	Description	Page and Index No.
B660 4825	External Circlip :S-CLP00011A	19 - 32
B660 4825	External Circlip :S-CLP00011A	15 - 66
B660 4831	Screw :S-SCR00016A	23 - 28
B660 4831	Screw :S-SCR00016A	25 - 21
B660 4831	Screw :S-SCR00016A	11 - 49
B660 4831	Screw :S-SCR00016A	5 - 28
B660 4835	Screw :S-SCR00045A	15 - 42
B660 4835	Screw :S-SCR00045A	23 - 30
B660 4835	Screw :S-SCR00045A	3 - 31
B660 4835	Screw :S-SCR00045A	11 - 36
B660 4835	Screw :S-SCR00045A	21 - 40
B660 4835	Screw :S-SCR00045A	5 - 21
B660 4835	Screw :S-SCR00045A	7 - 33
B660 4835	Screw :S-SCR00045A	25 - 16
B660 4835	Screw :S-SCR00045A	13 - 29
B660 4835	Screw :S-SCR00045A	19 - 35
B660 4841	Screw :S-SCR00202A	9 - 24
B660 4841	Screw :S-SCR00202A	25 - 18
B660 4842	Bushing :NS-BRG00013A	15 - 54
B660 4842	Bushing :NS-BRG00013A	21 - 37
B660 4843	Bushing :NS-BRG00016A	21 - 45
B660 4843	Bushing :NS-BRG00016A	7 - 30
B660 4843	Bushing :NS-BRG00016A	19 - 28
B660 4844	Bushing :NS-BRG00081A	15 - 65
B660 4844	Bushing :NS-BRG00081A	19 - 34
B660 4845	Bushing :NS-BRG00101A	13 - 23
B660 4846	Bushing :NS-MTL00004A	11 - 39
B660 4846	Bushing :NS-MTL00004A	15 - 63
B660 4847	Bushing :NS-MTL00009A	17 - 17
B660 4847	Bushing :NS-MTL00009A	7 - 32
B660 4847	Bushing :NS-MTL00009A	9 - 26
B660 4911	Screw :PF2078P458A	17 - 28
B660 4915	Screw :PF2205P362A	9 - 8
B660 4921	Screw :PF2229P408A	9 - 9
B660 4921	Screw :PF2229P408A	13 - 30

Part No.	Description	Page and Index No.
B660 4921	Screw :PF2229P408A	19 - 30
B660 4921	Screw :PF2229P408A	17 - 26
B660 4921	Screw :PF2229P408A	25 - 20
B660 4925	Drawer Screw :PF4051P361A	23 - 11
B660 4925	Drawer Screw :PF4051P361A	11 - 38
B660 4925	Drawer Screw :PF4051P361A	15 - 35
B660 4931	Screw :PF4099P463A	15 - 58
B660 5111	Harness - Sensor :PF4132K415A	15 - 48
B660 5115	Harness - Sensor Pressure :PF4132K418A	15 - 62
B660 5115	Harness - Sensor Pressure :PF4132K418A	15 - 50
B660 5121	Harness - Sensor Pressure :PF4132K419A	11 - 43
B660 5125	Harness - Cover Sensor :PF4132K420A	23 - 31
B660 5131	Harness - Upper Stopper :PF4132K421A	15 - 47
B660 5135	Harness - Sensor :PF4132K422A	15 - 49
B660 5141	Harness - Sensor :PF4132K423A	15 - 64
B660 5141	Harness - Sensor :PF4132K423A	13 - 26
B660 5145	Harness - Solenoid :PF4132K424A	15 - 46
B660 5151	Harness - Solenoid :PF4132K425A	11 - 50
B660 5155	Harness - Interface :PF4132K426A	23 - 8
B660 5161	Harness - Interface Fin :PF4132K427A	23 - 16
B660 5165	Harness - Paper Crimp :PF4132K428A	15 - 52
B660 5171	Harness - Drawer :PF4132K433A	23 - 13
B660 5175	Harness - Drawer :PF4132K434A	15 - 34
B660 5185	Harness - Power Source :PF4132K437A	23 - 26
B660 5191	Harness - Horizontal Transport :PF4132K439A	15 - 51
B660 5195	Harness - Exit Sensor :PF4132K444A	7 - 6
B660 5215	Harness - AC Power Supply :PF4132K446A	23 - 22
B660 5231	Harness - AC Power Supply :PF4132K447A	23 - 25
B660 5245	Harness - Inlet :PF4132K464A	23 - 14
B660 5251	Harness - Sp Base :PF4132K465A	23 - 20
B660 5255	Relay :E120001731	23 - 5
B660 5261	Leak Breaker :E120001715	23 - 1
B660 5265	Power Supply Unit :PF4132P520A	23 - 3
B660 5411	Stepper Motor :PF2269K243A	7 - 25
B660 5421	Stepper Motor :PF4099K353A	11 - 15

Part No.	Description	Page and Index No.
B660 5421	Stepper Motor :PF4099K353A	15 - 4
B660 5431	Brushless Motor :PF4132P521A	21 - 1
B660 5441	No.1 Entrance Sensor :E314000619	7 - 7
B660 5441	No.1 Entrance Sensor :E314000619	11 - 2
B660 5441	No.1 Entrance Sensor :E314000619	13 - 9
B660 5441	No.1 Entrance Sensor :E314000619	5 - 17
B660 5441	No.1 Entrance Sensor :E314000619	15 - 3
B660 5451	No.2 Entrance Sensor :PF2240P835A	11 - 35
B660 5451	No.2 Entrance Sensor :PF2240P835A	15 - 14
B660 5511	Main Control Base :PF4132K406A	23 - 9
B660 5511	Main Control Base :PF4132K406A	15 - 9
B660 5512	Relay Board :PF4132K408	23 - 19

Part No.	Description	Page and Index No.
A697 1125	Stepped Screw – Lever	25 - 2
A697 1144	Rear Joint Bracket	3 - 25
A697 1153	Front Joint Bracket	3 - 26
B302 1163	Grounding Plate	3 - 21
B408 2191	Guide Plate - Connecting Lower	5 - 19
B468 2196	Upper Guide Plate	5 - 20
B606 1895	Lock Spring :PF4132P330A	9 - 19

Part No.	Description	Page and Index No.
AF02 2147	Driven Roller	5 - 4
AF02 2147	Driven Roller	17 - 10

Part No.	Description	Page and Index No.
0451 3006N	Tapping Screw - 3x6	3 -102
0451 3006N	Tapping Screw - 3x6	5 -101
0451 3006N	Tapping Screw - 3x6	25 -101
0451 4006N	Tapping Screw - 4x6	3 -101
0802 5276	Tapping Screw With Washer - M3x6	5 -102