
Operating Instructions Printer Reference

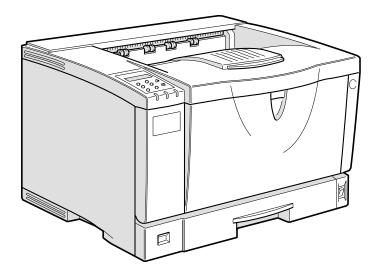

For safety, please read this manual carefully before you use this product and keep it handy for future reference.

Introduction

This manual contains detailed instructions on the operation and maintenance of this machine. To get maximum versatility from this machine all operators should carefully read and follow the instructions in this manual. Please keep this manual in a handy place near the machine.

Please read "Safety Information" in this manual before using this machine. It contains important information related to USER SAFETY and PREVENTING EQUIPMENT PROBLEMS.

Important

Contents of this manual are subject to change without prior notice. In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

Caution:

Use of controls or adjustment or performance of procedures other than those specified in this manual might result in hazardous radiation exposure.

Do not attempt any maintenance or troubleshooting other than that mentioned in this manual. This printer contains a laser beam generator and direct exposure to laser beams can cause permanent eye damage.

Two kinds of size notation are employed in this manual. With this machine refer to the inch version.

For good print quality, the supplier recommends that you use genuine toner from the supplier.

The supplier shall not be responsible for any damage or expense that might result from the use of parts other than genuine parts from the supplier with your office products.

Trademarks

Microsoft, Windows and Windows NT are registered trademarks of Microsoft Corporation in the United States and/or other countries.

Novell, Netware, NDS are registered trademarks or Novell, Inc.

PostScript is a registered trademark of Adobe Systems, Incorporated.

PCL is a registered trademark of Hewlett-Packard Company.

AppleTalk, Apple, Macintosh, TrueType and LaserWriter are registered trademarks of Apple Computer, Incorporated.

IPS-PRINT Printer Language Emulation Copyright© 1999-2000 Oak Technology, Inc., All rights reserved.

Ethernet is a registered trademark of Xerox Corporation.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights in those marks.

- The product name of Windows[®] 95 is Microsoft[®] Windows[®] 95.
- The product name of Windows[®] 98 is Microsoft[®] Windows[®] 98.
- The product name of Windows[®] Me is Microsoft[®] Windows[®] Millennium Edition (Windows Me).
- The product names of Windows[®] 2000 are as follows: Microsoft[®] Windows[®] 2000 Advanced Server Microsoft[®] Windows[®] 2000 Server Microsoft[®] Windows[®] 2000 Professional
- The product names of Windows[®] XP are as follows: Microsoft[®] Windows[®] XP Professional Microsoft[®] Windows[®] XP Home Edition
- The product names of Windows NT[®] 4.0 are as follows: Microsoft[®] Windows NT[®] Server 4.0 Microsoft[®] Windows NT[®] Workstation 4.0

Notes:

Some illustrations in this manual might be slightly different from the machine.

Certain options might not be available in some countries. For details, please contact your local dealer.

Manuals for This Printer

The following manuals describe the operational procedures and maintenance of this machine.

To enhance safe and efficient operation of this printer, all users should read and follow the instructions carefully.

Quick Installation Guide

Describes how to install the printer.

Setup Guide

Provides information about setting up the printer and its options. This manual is provided as a printed manual, and also on the CD-ROM labeled "Operating Instructions".

Printer Reference (this manual)

Provides information about using the printer and its options. This manual provided on the CD-ROM labeled "Operating Instructions".

Network Printing Guide

Provides information about setting up and using the printer in a network environment. This manual provided on the CD-ROM labeled "Operating Instructions".

PostScript 3 Operating Instructions Supplement

Describes the menus and features for the PostScript 3 printer driver. This manual provided on the CD-ROM labeled "Operating Instructions".

🖉 Note

□ There are three CD-ROMs that come with this printer. "Operating Instructions", "Printer Drivers and Utilities", and "Document Management Utility".

Concerning UNIX information, please visit our Web site or consult your authorized reseller.

How to Read This Manual

Symbols

In this manual, the following symbols are used:

A WARNING:

This symbol indicates a potentially hazardous situation which, if instructions are not followed, could result in death or serious injury.

A CAUTION:

This symbol indicates a potentially hazardous situation which, if instructions are not followed, may result in minor or moderate injury or damage to property.

* The statements above are notes for your safety.

∰Important

If this instruction is not followed, paper might be misfed, originals might be damaged, or data might be lost. Be sure to read this.

Preparation

This symbol indicates the prior knowledge or preparations required before operating.

🖉 Note

This symbol indicates precautions for operation, or actions to take after misoperation.

Limitation

This symbol indicates numerical limits, functions that cannot be used together, or conditions in which a particular function cannot be used.

✓ Reference

1

This symbol indicates a reference.

[

Keys that appear on the machine's panel display.

Keys and buttons that appear on the computer's display.

[]

Keys built into the machine's control panel.

Keys on the computer's keyboard.

TABLE OF CONTENTS

1. Setting Up the Printer Driver and Canceling a Print Job

PCL 6/5e - Accessing the Printer Properties
Windows 95/98/Me - Accessing the Printer Properties 1 Windows 2000/Windows XP - Accessing the Printer Properties 2 Windows NT 4.0 - Accessing the Printer Properties 4
RPCS - Accessing the Printer Properties
Windows 95/98/Me - Accessing the Printer Properties
Windows 2000/Windows XP - Accessing the Printer Properties
Windows NT 4.0 - Accessing the Printer Properties
PostScript - Setting Up for Printing11
Windows 95/98/Me - Accessing the Printer Properties
Windows 2000/Windows XP - Accessing the Printer Properties
Windows NT 4.0 - Accessing the Printer Properties 14
Macintosh - Setting Up for Printing16
Canceling a Print Job17
Windows 95/98/Me, Windows 2000, Windows XP,
Windows NT 4.0 - Canceling a Print Job17
Macintosh - Canceling a Print Job 18

2. Uninstalling the Printer Driver and Software

Uninstalling the PCL 6/5e Printer Driver	19
Windows 95/98/Me - Uninstalling the PCL 6/5e Printer Driver	19
Windows 2000/Windows XP - Uninstalling the PCL 6/5e Printer Driver	19
Windows NT 4.0 - Uninstalling the PCL 6/5e Printer Driver	20
Uninstalling the RPCS Printer Driver	21
Windows 95/98/Me - Uninstalling the RPCS Printer Driver	
Windows 2000/Windows XP - Uninstalling the RPCS Printer Driver	
Windows NT 4.0 - Uninstalling the RPCS Printer Driver	
Uninstalling the PostScript Printer Driver	23
Windows 95/98/Me - Uninstalling the PostScript Printer Driver	
Windows 2000/Windows XP - Uninstalling the PostScript Printer Driver	
Windows NT 4.0 - Uninstalling the PostScript Printer Driver	24
Macintosh - Uninstalling the PostScript Printer Driver	24

3. Paper and Other Media

Paper and Other Media Supported by This Printer	25
Paper Types and Sizes	
Paper Recommendations	33
Printable Area	
Loading Paper and Other Media	37
Loading Paper in the Paper Tray	37
Loading Paper in the Bypass Tray	40
Loading Paper in the Optional Paper Tray	
Loading Envelopes	

4. Sample Print/Locked Print

Sample Print	
Printing a Sample Print File	
Deleting a Sample Print File	
Checking the Error Log	
Locked Print	56
	JU
Printing a Locked Print File	

5. Troubleshooting

Error & Status Messages on the Control Panel Getting Printer Information over the Network	
Printer Does Not Print	76
Other Printing Problems	79
Removing Misfed Paper	82
When "Remove Misfeed Paper Tray" Appears	
When "Remove Misfeed Internal Path/Open Front Cover" Appears	
When "Remove Misfeed Paper Exit Cover" Appears	
When "Remove Misfeed Duplex Unit" Appears	
When "Remove Misfeed Mailbox" Appears	
When "Remove Misfeed Upper Tray Unit" Appears	
Replacing the Toner Cartridge	90
Cleaning and Adjusting the Printer	93
Cleaning the Friction Pad	
Cleaning the Paper Feed Roller	
Cleaning the Registration Roller	
Adjusting the Image Density	
Adjusting the Registration of the Trays	

6. Making Printer Settings with the Control Panel

Menu Chart	101
Accessing the Main Menu	
Paper Input Menu	
Paper Input Parameters	
Changing the Paper Input Menu	108
List/Test Print Menu	110
List/Test Print Parameters	110
Printing a Configuration Page	
Interpreting the Configuration Page	112
Maintenance Menu	
Maintenance Menu Parameters	115
Changing the Maintenance Menu	117

System Menu	124
System Parameters	
Changing the System Menu	
Host Interface Menu	130
Host Interface Parameters	130
Changing the Host Interface Menu	135
PCL Menu	137
PCL Parameters	137
Changing the PCL Menu	139
Language Menu	141
Changing the Language Menu	

7. Appendix

Replacing Parts MAINTENANCE KIT Type 2600 Replacing the Friction Pad Replacing the Paper Feed Rollers Replacing the Transfer Roller Replacing the Fusing Unit Collate and Shift Collate	
Spool Printing	
Memory Capacity and Paper Size	153 153
Moving and Transporting the Printer Moving the Printer	155
Specifications Mainframe Options	157 157
Consumables	
Information about Installed Software expat JPEG LIBRARY NetBSD	165 165
INDEX	168

1. Setting Up the Printer Driver and Canceling a Print Job

PCL 6/5e - Accessing the Printer Properties

Windows 95/98/Me - Accessing the Printer Properties

Changing the default printer settings

Click [Start] on the taskbar, point to [Settings], and then click [Printers]. The [Printers] window appears.

2 Click to select the icon of the printer whose default settings you want to change.

3 On the [File] menu, click [Properties]. The Printer Properties appear.

4 Make any settings you require and click [Apply].

- 🖉 Note
- □ With some applications, the printer driver's settings are not used, and the application's own default settings are applied.

5 Click [OK].

Making printer settings from an application

To make the printer settings for a specific application, open the **[Printer Properties]** dialog box from that application. The following example describes how to make settings for the WordPad application that comes with Windows 95/98/Me.

🖉 Note

- □ The actual procedure you should follow to open the **[Printer Properties]** dialog box may differ depending on the application. For more information, see the documentation that comes with the application you are using.
- □ Any settings you make in the following procedure are valid for the current application only.

1 On the [File] menu, click [Print].

The **[Print]** dialog box appears.

2 Select the printer you want to use in the [Name] list box, and then click [Properties].

The [Printer Properties] dialog box appears.

3 Make any settings you require and click [OK].

4 Click [OK] to start printing.

Windows 2000/Windows XP - Accessing the Printer Properties

Changing the default printer settings - Printer Properties

Limitation

□ Changing the setting of the printer requires Manage Printers permission. Members of the Administrators and Power Users groups have Manage Printers permission by default. When you set up options, log on using an account that has Manage Printers permission.

Click [Start] on the taskbar, point to [Settings], and then click [Printers].

The [Printers] window appears.

🖉 Note

- □ With Windows XP, access the **[Printers and Faxes]** window from **[Start]** on the taskbar.
- 2 Click to select the icon of the printer whose default setting you want to change.

On the [File] menu, click [Properties].

The Printer Properties appear.

4 Make any settings you require and click [OK].

🖉 Note

□ Settings you make here are used as the default settings for all applications.

5 Click [**0K**].

Changing the default printer settings – Printing Preferences Properties

Limitation

Changing the setting of the printer requires Manage Printers permission. Members of the Administrators and Power Users groups have Manage Printers permission by default. When you set up options, log on using an account that has Manage Printers permission.

Click [Start] on the taskbar, point to [Settings], and then click [Printers].

The **[Printers]** window appears.

2 Click to select the icon of the printer whose default settings you want to change.

On the [File] menu, click [Printing Preferences...].

The Printing Preferences Properties appears.

4 Make any settings you require and click [Apply].

🖉 Note

□ Settings you make here are used as the default settings for all applications.

5 Click [OK].

Making printer settings from an application

To make the printer settings for a specific application, open the **[Print]** dialog box from that application. The following example describes how to make settings for the WordPad application that comes with Windows 2000/Windows XP.

🖉 Note

- The actual procedures you should follow to open the [Print] dialog box may differ depending on the application. For more information, see the documentation that comes with the application you are using.
- □ Any settings you make in the following procedure are valid for the current application only.

On the [File] menu, click [Print...].

The [Print] dialog box appears.

2 Select the printer you want to use in the [Select Printer] box.

Click the tab that you want to change its print setting.

🖉 Note

With Windows XP, click [Preference] to open the Printer Preference window.

3 Make any settings you require and click [Apply].

🖉 Note

□ With Windows XP, make any settings you require and click **[OK]**.

4 Click [Print] to start printing.

Windows NT 4.0 - Accessing the Printer Properties

Changing the default printer settings - Printer Properties

Limitation

- Changing the setting of the printer requires Full Control access permission. Members of Administrators, Server Operators, Print Operators, and Power Users groups have Full Control permission by default. When you set up options, log on using an account that has Full Control permission.
- U Click [Start] on the taskbar, point to [Settings], and then click [Printers].

The [Printers] window appears.

2 Click to select the icon of the printer whose default settings you want to change.

3 On the [File] menu, click [Properties].

The Printer Properties appears.

4 Make any settings you require and click [OK].

🖉 Note

□ Settings you make here are used as the default settings for all applications.

Changing the default printer settings – Default Document Properties

Limitation

Changing the setting of the printer requires Full Control access permission. Members of the Administrators, Server Operators, Print Operators, and Power Users groups have Full Control permission by default. When you set up options, log on using an account that has Full Control permission.

1 Click [Start] on the taskbar, point to [Settings], and then click [Printers]. The [Printers] window appears.

2 Click to select the icon of the printer whose default settings you want to change.

On the [File] menu, click [Document Defaults].

The Default Document Properties appear.

4 Make any settings you require and click [OK].

🖉 Note

□ Settings you make here are used as the default settings for all applications.

Making printer settings from an application

To make the printer settings for a specific application, open the **[Printer Properties]** dialog box from that application. The following example describes how to make settings for the WordPad application that comes with Windows NT 4.0.

🖉 Note

- □ The actual procedure you should follow to open the **[Printer Properties]** dialog box may differ depending on the application. For more information, see the documentation that comes with the application you are using.
- □ Any settings you make in the following procedure are valid for the current application only.

1 On the [File] menu, click [Print].

The [Print] dialog box appears.

2 Select the printer you want to use in the [Name] list box, and then click [Properties].

The Printer Properties appears.

3 Make any settings you require and click [OK].

Click **[OK]** to start printing.

RPCS - Accessing the Printer Properties

Windows 95/98/Me - Accessing the Printer Properties

Changing the default printer settings

- **1** Click [Start] on the taskbar, point to [Settings], and then click [Printers]. The [Printers] window appears.
- 2 Click to select the icon of the printer whose default settings you want to change.

3 On the [File] menu, click [Properties].

The printer properties appear.

4 Make any settings you require and click [Apply].

🖉 Note

With some applications, the printer driver's settings are not used, and the application's own default settings are applied.

5 Click **[0K]**.

Making printer settings from an application

To make the printer settings for a specific application, open the **[Printer Properties]** dialog box from that application. The following example describes how to make settings for the WordPad application that comes with Windows 95/98/Me.

🖉 Note

- □ The actual procedure you should follow to open the **[Printer Properties]** dialog box may differ depending on the application. For more information, see the documentation that comes with the application you are using.
- Any settings you make in the following procedure are valid for the current application only.

On the [File] menu, click [Print].

The [Print] dialog box appears.

2 Select the printer you want to use in the [Name] list box, and then click [Properties].

The [Printer Properties] dialog box appears.

- **S** Make any settings you require and click [OK].
- 4 Click [OK] to start printing.

Windows 2000/Windows XP - Accessing the Printer Properties

Changing the default printer settings - Printer Properties

Limitation

Changing the setting of the printer requires Manage Printers permission. Members of the Administrators and Power Users groups have Manage Printers permission by default. When you set up options, log on using an account that has Manage Printers permission.

Click [Start] on the taskbar, point to [Settings], and then click [Printers].

The [Printers] window appears.

🖉 Note

□ With Windows XP, access the **[Printers and Faxes]** window from **[Start]** on the taskbar.

2 Click to select the icon of the printer whose default settings you want to change.

On the [File] menu, click [Properties].

The Printer Properties appears.

4 Make any settings you require and click [Apply].

🖉 Note

□ Settings you make here are used as the default settings for all applications.

5 Click [0K].

Changing the default printer settings – Printing Preferences Properties

Limitation

Changing the setting of the printer requires Manage Printers permission. Members of the Administrators and Power Users groups have Manage Printers permission by default. When you set up options, log on using an account that has Manage Printers permission.

U Click [Start] on the taskbar, point to [Settings], and then click [Printers].

The [Printers] window appears.

2 Click to select the icon of the printer whose default settings you want to change.

On the [File] menu, click [Printing Preferences...].

The Printing Preferences Properties appear.

4 Make any settings you require and click [Apply].

🖉 Note

□ Settings you make here are used as the default settings for all applications.

5 Click [OK].

Making printer settings from an application

To make the printer settings for a specific application, open the **[Print]** dialog box from that application. The following example describes how to make settings for the WordPad application that comes with Windows 2000.

🖉 Note

- □ The actual procedures you should follow to open the **[Print]** dialog box may differ depending on the application. For more information, see the documentation that comes with the application you are using.
- □ Any settings you make in the following procedure are valid for the current application only.

On the [File] menu, click [Print...].

The [Print] dialog box appears.

2 Select the printer you want to use in the [Select Printer] box.

Click the tab that you want to change its print setting.

🖉 Note

With Windows XP, click [Preference] to open the Printer Preference window.

3 Make any settings you require and click [Apply].

🖉 Note

• With Windows XP, make any settings you require and click **[OK]**.

4 Click [Print] to start printing.

Windows NT 4.0 - Accessing the Printer Properties

Changing the default printer settings - Printer Properties

Limitation

- Changing the setting of the printer requires Full Control access permission. Members of Administrators, Server Operators, Print Operators, and Power Users groups have Full Control permission by default. When you set up options, log on using an account that has Full Control permission.
- Click [Start] on the taskbar, point to [Settings], and then click [Printers].

The **[Printers]** window appears.

2 Click to select the icon of the printer you want to use.

3 On the [File] menu, click [Properties].

The [Printer Properties] dialog box appears.

4 Make any settings you require and click [OK].

🖉 Note

□ Settings you make here are used as the default settings for all applications.

Changing the default printer settings – Default Document Properties

Limitation

- Changing the setting of the printer requires Full Control access permission. Members of the Administrators, Server Operators, Print Operators, and Power Users groups have Full Control permission by default. When you set up options, log on using an account that has Full Control permission.
- Click [Start] on the taskbar, point to [Settings], and then click [Printers]. The [Printers] window appears.
- **2** Click to select the icon of the printer you want to use.

On the [File] menu, click [Document Defaults].

The Default Document Properties appear.

4 Make any settings you require and click [OK].

🖉 Note

□ Settings you make here are used as the default settings for all applications.

Making printer settings from an application

To make the printer settings for a specific application, open the **[Printer Properties]** dialog box from that application. The following example describes how to make settings for the WordPad application that comes with Windows NT 4.0.

🖉 Note

- □ The actual procedure you should follow to open the **[Printer Properties]** dialog box may differ depending on the application. For more information, see the documentation that comes with the application you are using.
- □ Any settings you make in the following procedure are valid for the current application only.

1 On the [File] menu, click [Print].

The [Print] dialog box appears.

2 Select the printer you want to use in the [Name] list box, and then click [Properties].

The [Printer Properties] dialog box appears.

3 Make any settings you require and click [OK].

4 Click [OK] to start printing.

PostScript - Setting Up for Printing

Windows 95/98/Me - Accessing the Printer Properties

Changing the default printer settings

🖉 Note

- □ With some applications, the printer driver's settings are not used, and the application's own default settings are applied.
- Click [Start] on the taskbar, point to [Settings], and then click [Printers]. The [Printers] window appears.
- **2** Click to select the icon of the printer whose default settings you want to change.

3 On the [File] menu, click [Properties].

The [Printer Properties] dialog box appears.

A Make any settings you require and click [Apply].

5 Click [OK].

Making printer settings from an application

To make the printer settings for a specific application, open the **[Printer Properties]** dialog box from that application. The following example describes how to make settings for the WordPad application that comes with Windows 95/98/Me.

🖉 Note

- □ The actual procedure you should follow to open the **[Printer Properties]** dialog box may differ depending on the application. For more information, see the documentation that comes with the application you are using.
- Any settings you make in the following procedure are valid for the current application only.

On the [File] menu, click [Print].

The **[Print]** dialog box appears.

2 Select the printer you want to use in the Name list box, and then click [Properties].

The [Printer Properties] dialog box appears.

- **S** Make any settings you require and click [Apply].
- 4 Click [OK] to start printing.

Windows 2000/Windows XP - Accessing the Printer Properties

Changing the default printer settings - Printer Properties

Limitation

Changing the setting of the printer requires Manage Printers permission. Members of the Administrators and Power Users groups have Manage Printers permission by default. When you set up options, log on using an account that has Manage Printers permission.

Click [Start] on the taskbar, point to [Settings], and then click [Printers].

The [Printers] window appears.

🖉 Note

- □ With Windows XP, access the **[Printers and Faxes]** window from **[Start]** on the taskbar.
- **2** Click to select the icon of the printer whose default settings you want to change.

On the [File] menu, click [Properties].

The Printer Properties appear.

4 Make any settings you require and click [Apply].

🖉 Note

□ Settings you make here are used as the default settings for all applications.

5 Click [0K].

Changing the default printer settings – Printing Preferences Properties

Limitation

Changing the setting of the printer requires Manage Printers permission. Members of the Administrators and Power Users groups have Manage Printers permission by default. When you set up options, log on using an account that has Manage Printers permission.

Click [Start] on the taskbar, point to [Settings], and then click [Printers].

The [Printers] window appears.

2 Click to select the icon of the printer whose default settings you want to change.

3 On the [File] menu, click [Printing Preferences...]. The Printing Preferences Properties appears.

4 Make any settings you require and click [Apply].

🖉 Note

□ Settings you make here are used as the default settings for all applications.

5 Click [OK].

Making printer settings from an application

To make the printer settings for a specific application, open the **[Print]** dialog box from that application. The following example describes how to make settings for the WordPad application that comes with Windows 2000/Windows XP.

🖉 Note

- The actual procedures you should follow to open the [Print] dialog box may differ depending on the application. For more information, see the documentation that comes with the application you are using.
- Any settings you make in the following procedure are valid for the current application only.

1 On the [File] menu, click [Print...].

The [Print] dialog box appears.

2 Select the printer you want to use in the [Select Printer] box.

Click the tab that you want to change its print setting.

🖉 Note

With Windows XP, click [Preference] to open the Printer Preference window.

3 Make any settings you require and click [Apply].

4 Click [OK] to start printing.

Windows NT 4.0 - Accessing the Printer Properties

Changing the default printer settings - Printer Properties

Limitation

- Changing the setting of the printer requires Full Control access permission. Members of Administrators, Server Operators, Print Operators, and Power Users groups have Full Control permission by default. When you set up options, log on using an account that has Full Control permission.
- U Click [Start] on the taskbar, point to [Settings], and then click [Printers].

The [Printers] window appears .

2 Click to select the icon of the printer whose default settings you want to change.

On the [File] menu, click [Properties].

The [Printer Properties] dialog box appears.

A Make any settings you require and click [OK].

🖉 Note

□ Setting you make here are used as the default settings for all applications.

Changing the default printer settings - Default Document Properties

Limitation

Changing the setting of the printer requires Full Control access permission. Members of the Administrators, Server Operators, Print Operators, and Power Users groups have Full Control permission by default. When you set up options, log on using an account that has Full Control permission.

Click [Start] on the taskbar, point to [Settings], and then click [Printers]. The [Printers] window appears.

2 Click to select the icon of the printer you want to use.

3 On the [File] menu, click [Document Defaults].

The Default Document Properties appear.

4 Make any settings you require and click [OK].

🖉 Note

□ Settings you make here are used as the default settings for all applications.

Making printer settings from an application

To make the printer settings for a specific application, open the **[Printer Properties]** dialog box from that application. The following example describes how to make settings for the WordPad application that comes with Windows NT 4.0.

🖉 Note

- □ The actual procedure you should follow to open the **[Printer Properties]** dialog box may differ depending on the application. For more information, see the documentation that comes with the application you are using.
- □ Any settings you make in the following procedure are valid for the current application only.

1 On the [File] menu, click [Print].

The **[Print]** dialog box appears.

2 Select the printer you want to use in the [Name] list box, and then click [Properties].

The [Printer Properties] dialog box appears.

3 Make any settings you require and click [OK].

4 Click [OK] to start printing.

Macintosh - Setting Up for Printing

Making paper settings from an application

1 Open the file you want to print.

2 On the [File] menu, click [Page Setup].

The [AdobePS Page Setup] dialog box appears.

Confirm that the printer you want to use is shown in the [Format for:] box.

🖉 Note

□ If the printer is not shown in the **[Format for:]** box, use the pop-up menu to display a list of available printers.

The actual appearance of the Page Setup depends on the application you are using. See the documentation that comes with the Macintosh for more information.

From the [Paper:] box, select the paper size.

5 Make any settings you require and then click [OK].

Setting up for printing from an application

1 Open the file you want to print.

2 On the [File] menu, click [Print].

The Printer Settings appears.

3 Confirm that the printer is selected in the [Printer :] box.

A Make any settings you require and click [Print] to start printing.

Canceling a Print Job

Windows 95/98/Me, Windows 2000, Windows XP, Windows NT 4.0 - Canceling a Print Job

1 Double-click the printer icon on the Windows taskbar.

A window appears, showing all the print jobs that are currently queuing to be printed. Check the current status of the job you want to cancel.

2 Select the name of the job you want to cancel.

On the [Document] menu, click [Cancel Printing].

🖉 Note

□ You can also open the print job queue window by double-clicking the printer icon in the **[Printer]** window.

Press [Job Reset] on the control panel.

The message appears on the panel display indicating that the print job is being canceled.

∰Important

□ When the printer is being shared by multiple computers, be careful not to accidentally cancel someone else's print job.

🖉 Note

- □ This procedure cancels the print job that is being processed by the printer. In some cases, the printer may already be processing data for the next series of print jobs following the one currently being output. In this case, the next print jobs are also canceled when you press **[Job Reset]**.
- A print job that contains a large volume of data may take considerable time to stop.

Macintosh - Canceling a Print Job

1 Double-click the printer's icon on the desktop.

A window appears, showing all the print jobs that are currently queuing to be printed. Check the current status of the job you want to cancel.

2 Select the name of the job you want to cancel.

3 Click the pause icon, and then click the trash icon.

Press [Job Reset] on the control panel.

The message appears on the panel display indicating that the print job is being canceled.

₿Important

□ When the printer is being shared by multiple computers, be careful not to accidentally cancel someone else's print job.

🖉 Note

- □ This procedure cancels the print job that is being processed by the printer. In some cases, the printer may already be processing data for the next series of print jobs following the one currently being output. In this case, the next print jobs are also canceled when you press **[Job Reset]**.
- A print job that contains a large volume of data may take considerable time to stop.

2. Uninstalling the Printer Driver and Software

Uninstalling the PCL 6/5e Printer Driver

This section describes how to uninstall the printer driver. The actual procedure may differ depending on the operating system.

Follow one of the appropriate procedures below.

Windows 95/98/Me - Uninstalling the PCL 6/5e Printer Driver

- **1** Close all applications that are currently running.
- **2** Click [Start] on the taskbar, point to [Settings], and then click [Printers]. The [Printers] window appears.
- **3** Click to select the icon of the printer you want to remove.
- 4 On the [File] menu, click [Delete].

A confirmation dialog box appears.

5 Click [Yes] to uninstall the printer driver.

Windows 2000/Windows XP - Uninstalling the PCL 6/5e Printer Driver

Limitation

Uninstalling a printer driver requires Manage Printers permission. Members of the Administrators and Power Users groups have Manage Printers permission by default. When you uninstall a printer driver, log on using an account that has Manage Printers permission.

1 Close all applications that are currently running.

2 Click [Start] on the taskbar, point to [Settings], and then click [Printers].

The [Printers] window appears.

🖉 Note

□ With Windows XP, access the **[Printers and Faxes]** window from **[Start]** on the taskbar.

Click to select the icon of the printer you want to remove.

4 On the [File] menu, click [Delete].

A confirmation dialog box appears.

5 Click [Yes] to uninstall the printer driver.

🖉 Note

□ Before upgrading the printer driver, restart your computer after uninstalling the old version of the printer driver.

Windows NT 4.0 - Uninstalling the PCL 6/5e Printer Driver

Limitation

Uninstalling a printer driver requires Full Control access permission. Members of the Administrators, Server Operators, Print Operators, and Power Users groups have Full Control Permission by default. When you install a printer driver, log on using an account that has Full Control permission.

1 Close all applications that are currently running.

2 Click [Start] on the taskbar, point to [Settings], and then click [Printers]. The [Printers] window appears.

3 Click to select the icon of the printer you want to remove.

4 On the [File] menu, click [Delete].

A confirmation dialog box appears.

5 Click [Yes] to uninstall the printer driver.

🖉 Note

□ Before upgrading the printer driver, restart your computer after uninstalling the old version of the printer driver.

Uninstalling the RPCS Printer Driver

This section describes how to uninstall the printer driver. The actual procedure may differ depending on the operating system.

Follow one of the appropriate procedures below.

Windows 95/98/Me - Uninstalling the RPCS Printer Driver

1 Close all applications that are currently running.

2 Click [Start] on the taskbar, point to [Settings], and then click [Printers]. The [Printers] window appears.

3 Click to select the icon of the printer you want to remove.

• On the [File] menu, click [Delete].

A confirmation dialog box appears.

5 Click [Yes] to uninstall the printer driver.

Windows 2000/Windows XP - Uninstalling the RPCS Printer Driver

Limitation

Uninstalling a printer driver requires Manage Printers permission. Members of the Administrators and Power Users groups have Manage Printers permission by default. When you uninstall a printer driver, log on using an account that has Manage Printers permission.

1 Close all applications that are currently running.

2 Click [Start] on the taskbar, point to [Settings], and then click [Printers].

The [Printers] window appears.

🖉 Note

□ With Windows XP, access the **[Printers and Faxes]** window from **[Start]** on the taskbar.

Click to select the icon of the printer you want to remove.

On the [File] menu, click [Delete].

A confirmation dialog box appears.

5 Click [Yes] to uninstall the printer driver.

🖉 Note

□ Before upgrading the printer driver, restart your computer after uninstalling the old version of the printer driver.

Windows NT 4.0 - Uninstalling the RPCS Printer Driver

Limitation

- Uninstalling a printer driver requires Full Control access permission. Members of the Administrators, Server Operators, Print Operators, and Power Users groups have Full Control Permission by default. When you install a printer driver, log on using an account that has Full Control permission.
- **1** Close all applications that are currently running.
- **2** Click [Start] on the taskbar, point to [Settings], and then click [Printers]. The [Printers] window appears.
- **3** Click to select the icon of the printer you want to remove.

4 On the [File] menu, click [Delete].

A confirmation dialog box appears.

5 Click [Yes] to uninstall the printer driver.

🖉 Note

□ Before upgrading the printer driver, restart your computer after uninstalling the old version of the printer driver.

Uninstalling the PostScript Printer Driver

This section describes how to uninstall the PostScript printer driver. The actual procedure may differ depending on the operating system. Follow one of the appropriate procedures below.

Windows 95/98/Me - Uninstalling the PostScript Printer Driver

1 Close all applications that are currently running.

2 Click [Start] on the taskbar, point to [Settings], and then click [Printers]. The [Printers] window appears.

3 Click to select the icon of the printer you want to remove.

4 On the [File] menu, click [Delete].

A confirmation dialog box appears.

5 Click [Yes] to uninstall the printer driver.

Windows 2000/Windows XP - Uninstalling the PostScript Printer Driver

Limitation

Uninstalling a printer driver requires Manage Printers permission. Members of the Administrators and Power Users groups have Manage Printers permission by default. When you uninstall a printer driver, log on using an account that has Manage Printers permission.

1 Close all applications that are currently running.

2 Click [Start] on the taskbar, point to [Settings], and then click [Printers].

The [Printers] window appears.

🖉 Note

□ With Windows XP, access the **[Printers and Faxes]** window from **[Start]** on the taskbar.

3 Click to select the icon of the printer you want to remove.

On the [File] menu, click [Delete].

A confirmation dialog box appears.

5 Click [Yes] to uninstall the printer driver.

🖉 Note

Before upgrading the printer driver, restart your computer after uninstalling the old version of the printer driver.

Windows NT 4.0 - Uninstalling the PostScript Printer Driver

Limitation

- Uninstalling a printer driver requires Full Control access permission. Members of the Administrators, Server Operators, Print Operators, and Power Users groups have Full Control Permission by default. When you uninstall a printer driver, log on using an account that has Full Control permission.
- **1** Close all applications that are currently running.
- **2** Click [Start] on the taskbar, point to [Settings], and then click [Printers]. The [Printers] window appears.
- **3** Click to select the icon of the printer you want to remove.

4 On the [File] menu, click [Delete].

A confirmation dialog box appears.

5 Click [Yes] to uninstall the printer driver.

🖉 Note

Before upgrading the printer driver, restart your computer after uninstalling the old version of the printer driver.

Macintosh - Uninstalling the PostScript Printer Driver

- Drag the "AdobePS" file from the [Extensions] folder in [System Folder] to [Trash].
- 2 Drag the PPD file and plug-in file from the [Printer Descriptions] folder in the [Extensions] folder in [System Folder] to [Trash].

3. Paper and Other Media

Paper and Other Media Supported by This Printer

Paper Types and Sizes

This section describes the type, size, feed direction, and maximum amount of paper that can be loaded into each paper tray in this printer.

∰Important

If you use damp or curled paper, a misfeed might occur. In this case, try turning over the paper stack in the paper tray. If there is no improvement, change to paper with less curl.

🔗 Note

□ The following symbols and terminology are used to represent the feed direction.

In this manual	On the panel display	Paper feed direction
$\square \uparrow$ (Feed direction)	A4 (210 × 297) Letter ($8^{1}/_{2}$ ×11)	Short-edge feed direction
\square \uparrow (Feed direction)	A4 (297 \times 210) Letter (11 \times 8 ¹ / ₂)	Long-edge feed direction

- It is recommended that you load paper of the size and direction you frequently use in the tray selected with "Tray Priority". For more information about Tray Priority, see p.106 "Paper Input Menu".
- When loading paper of the same size in more than one tray, it is recommended that you load paper in the same direction in each tray.

₽ Reference

For more information about loading each type of paper, see p.37 "Loading Paper and Other Media".

∰Important

- □ Be sure to set the paper size dial to match the actual paper size loaded in the tray. When the actual paper size is not shown on the dial, set the dial to "★" and select the paper size using the control panel.
- □ For Tray 1, 2 and 3, the dial setting overrides the setting made with the control panel.
- □ The optional Envelope Feeder Unit requires the installation of the optional Paper Feed Unit. Up to two Paper Feed Units can be installed to the printer at the same time. The Envelope Feeder Unit must be used in the top-most Paper Feed Unit (Tray2).

🔗 Note

- □ The printable paper size depends on the memory size of the printer and print data, see p.153 "Memory Capacity and Paper Size".
- □ For more information about the meanings of the abbreviations, see the notes at the bottom of each table.

Input Paper Sizes (Metric version)

	Feed direction	Size (mm)	Bypass Tray	Paper Tray (Tray1)	Paper Feed Unit (Tray 2/3)	Envelope Feeder Unit
A3	D	297 × 420	О	☆	☆	Х
B4 JIS	D	257×364	О	*	*	Х
A4	D	210×297	0	☆	☆	Х
		297×210	О	☆	☆	Х
B5 JIS	D	182 × 257	О	*	*	Х
		257×182	О	*	*	Х
A5	D	148×210	О	X	X	Х
		210×148	О	☆	*	Х
A6	D	105×148	О	X	X	Х
11×17	D	279 × 432	О	*	☆	Х
Legal (LG, $8^{1}/_{2} \times 14$)	D	216 × 356	0	*	☆	Х
Letter (LT, $8^1/_2 \times 11$)	D	216 × 279	0	☆	☆	Х
		279 × 216	0	☆	☆	Х
$5^{1}/_{2} \times 8^{1}/_{2}$	D	140×216	0	X	Х	Х
Executive (Exec., $7^{1}/_{4} \times 10^{1}/_{2}$)	D	184×276	0	Х	*	Х
		276 × 184	0	*	*	Х
Folio $(8^{1}/_{4} \times 13)$	D	210 × 330	0	*	*	Х
Foolscap (F4, $8^1/_2 \times 13$)	D	216 × 330	0	*	*	Х
F/GL (8×13)	D	203 × 330	0	*	*	Х
Com#10 Env $(4^1/_8 \times 9^1/_2)$	D	104.8×241.3	0	Х	Х	О
C5 Env (6.38 × 9.02)	D	162 ×229	0	Х	Х	О
C6 Env (4.49 × 6.38)	D	114×162	0	Х	Х	О
DL Env (4.33 × 8.66)	D	110×220	0	Х	Х	О
Monarch Env $(3^7/_8 \times 7^1/_2)$	D	98.4×190.5	0	Х	Х	О

	Feed direction	Size (mm)	Bypass Tray	Paper Tray (Tray1)	Paper Feed Unit (Tray 2/3)	Envelope Feeder Unit
Custom Size	—	—	O*	Х	★**	Х
8K $(10^1/_2 \times 15.35)$	D	267 × 390	О	*	*	Х
$16K (7.68 \times 10^{1}/_{2})$	D	195×267	О	*	*	Х
	P	267 × 195	О	*	*	Х

• 0

Means that the size is supported but the paper size should be set with the control panel. There is no dial on the tray.

See p.40 "Loading Paper in the Bypass Tray"

See p.47 "Loading envelopes into the Envelope Feeder Unit"

• 🕁

Means that the size is supported and indicated on the tray dial. Be sure to set the paper size dial to match the actual paper size loaded in the tray.

• ★

Means that the size is supported but not indicated on the tray dial. You should set the tray dial to " \bigstar ", and select the paper size with the control panel.

• • • •

Means that the supported size is approximately 90 - 305 mm in width, and approximately 148 - 432 mm in length. The supported size may differ depending on the printer language you use. Use the printer driver to set custom sizes. Set custom sizes with the control panel.

• ★**

Means that the supported size is approximately 182-297 mm in width, and approximately 148-432 mm in length. The supported size may differ depending on the printer language you use. Use the printer driver to set custom sizes. Set custom sizes with the control panel.

• X

Means that the size is not supported.

Input Paper Sizes (Inch version)

	Feed direction	Size (inch)	Bypass Tray	Paper Tray (Tray1)	Paper Feed Unit (Tray 2/3)	Envelope Feeder Unit
11×17	D	11×17	0	42	42	Х

Legal (LG)I8'1/2 × 14O**XLetter (LT)I8'1/2 × 11O**XI11 × 8^1/2O**XX5'1/2 × 8^1/2I5'1/2 × 8'1/2OXXXExecutive (Exec.)I7'1/4 × 10^1/2O**XA3I11.26 × 16.54O**XA4I826 × 5.83O**XA4I5.83 × 8.26O**XB5 JISI7.17 × 10.12O*XXA5I826 × 5.83O**XA5I7.17 × 10.12O*XXA5I8.13 × 8.26OXXXA6I4.13 × 5.63O**XA6I8.13 × 8.26OXXXA5II8.14 × 13O*XXA6I8.13 × 5.63OXXXFolioI8.14 × 13O*XXFolioI8.13 × 5.63OXXXFOLI8.13 × 5.63OXXXFolioI8.13 × 5.64OXXXFolioI8.13 × 5.63OXXXFOLI8.13 × 5.63OXX <td< th=""><th></th><th>Feed direction</th><th>Size (inch)</th><th>Bypass Tray</th><th>Paper Tray (Tray1)</th><th>Paper Feed Unit (Tray 2/3)</th><th>Envelope Feeder Unit</th></td<>		Feed direction	Size (inch)	Bypass Tray	Paper Tray (Tray1)	Paper Feed Unit (Tray 2/3)	Envelope Feeder Unit
Image: style	Legal (LG)	D	$8^{1}/_{2} \times 14$	О	☆	\$	Х
$5^1/_2 \times 8^1/_2$ \bigcirc \checkmark \checkmark \checkmark \checkmark Executive (Exec.) \square \square \square \square \square \square \square A3 \square \square \square \square \square \square \square \square A4 \square \square \square \square \square \square \square \square A4 \square \square \square \square \square \square \square \square B5 JIS \square \square \square \square \square \square \square \square \square A5 \square	Letter (LT)	D	$8^{1}/_{2} \times 11$	О	$\overrightarrow{\Delta}$	\$	Х
Executive (Exec.) \Box \Box $T^{1/4 \times 10^{1}/2}$ \odot X \star X A3 \Box \Box $10^{1}/2 \times 7^{1}/4$ \odot \star \star X B4 JIS \Box \Box 11.26×16.54 \odot \star \star X A4 \Box \Box 10.12×14.33 \odot \star \star X A4 \Box $S26 \times 5.83$ \odot \star \star X X B5 JIS \Box 7.17×10.12 \odot \star \star X A5 \Box $S83 \times 8.26$ \odot X X X A6 \Box 5.83×8.26 \odot X X X A5 \Box $S63 \times 8.26$ \odot X X X A6 \Box 4.13×5.63 \odot X X X Folio \Box $8^{1}/4 \times 13$ \bigcirc X X X Folio \Box $8^{1}/2 \times 13$ \bigcirc X X X F/GL \Box 8×13 \bigcirc X X \Box Com#10 Env \Box 4.49×6.38 \bigcirc X X \bigcirc DL Env \Box $3^{7}/8 \times 7^{1}/2$ \bigcirc X X \Box Monarch Env \Box \Box $10^{1}/2 \times 15.35$ \bigcirc X X X RK \Box \Box \Box \Box \Box X X \Box A6 \Box \Box \Box \Box \Box \Box \Box \Box Gold X <			$11 \times 8^{1}/_{2}$	О	$\overrightarrow{\Delta}$	Å	Х
Image: constraint of the system of the sy	$5^{1}/_{2} \times 8^{1}/_{2}$	D		О	Х	Х	Х
A3 \square \square \square \square \square \square \square \square \square B4 JIS \square A4 \square A4 \square A4 \square	Executive (Exec.)	D	$7^{1}/_{4} \times 10^{1}/_{2}$	О	X	*	Х
B4 JISI10.12 × 14.33O \star \star XA4I8.26 × 5.83O \star \star XI5.83 × 8.26O \star \star XB5 JISI7.17 × 10.12O \star \star XA5I5.83 × 8.26O \star XXA6I5.83 × 8.26OXXXFolio8.26 × 5.83O \star \star XXFolioI8.26 × 5.83O \star \star XA6I4.13 × 5.63OXXXFolioI8 ¹ / ₄ × 13O \star \star XFolioI8 ¹ / ₂ × 13O \star \star XFOGLI8×13O \star \star XOm#10 EnvI4 ¹ / ₈ × 9 ¹ / ₂ OXXOC5 EnvI4.33 × 8.66OXXODL EnvI3 ⁷ / ₈ × 7 ¹ / ₂ OXXOMonarch EnvI3 ⁷ / ₈ × 7 ¹ / ₂ OXXOKI10 ¹ / ₂ × 15.35O \star \star X16KI7.68 × 10 ¹ / ₂ O \star \star X			$10^{1}/_{2} \times 7^{1}/_{4}$	О	*	*	Х
A4 I 8.26 × 5.83 O \star \star X B5 JIS I 7.17 × 10.12 O \star \star X B5 JIS I I 10.12 × 7.17 O \star \star X A5 I S.83 × 8.26 O \star \star X A5 I S.83 × 8.26 O \star \star X A6 I 8.26 × 5.83 O \star \star X Folio I 8.26 × 5.83 O \star \star X Folio I 8.13 × 5.63 O \star \star X Folio I 8 ¹ / ₄ × 13 O \star \star X Folio I 8 ¹ / ₂ × 13 O \star \star X Com#10 Env I 8 ¹ / ₈ × 9 ¹ / ₂ O X X O C1 4 ¹ / ₈ × 9 ¹ / ₂ O X X O D1 Env I 4.33 × 8.66 O X X O	A3	D	11.26×16.54	О	*	☆	Х
Image: star star star star star star star star	B4 JIS	D	10.12×14.33	О	*	*	Х
B5 JIS \square \neg \neg \checkmark \checkmark A5 \square \square \square \square \square \square \square \square A5 \square \square \square \square \square \square \square \square A6 \square \square \square \square \square \square \square A6 \square \square \square \square \square \square \square Folio \square \square \square \square \square \square \square Folio \square \square \square \square \square \square \square Folio \square	A4	D	8.26 × 5.83	О	*	☆	Х
Image: constraint of the sector of the se			5.83×8.26	О	☆	☆	Х
A5 \Box \Box C C X X X A6 \Box $A.13 \times 5.63$ O X X X X Folio \Box $B^{1}/4 \times 13$ O X X X Foolscap F4 \Box $B^{1}/2 \times 13$ O \star \star X F/GL \Box $B^{1}/8 \times 9^{1}/2$ O X X X Com#10 Env \Box $A^{1}/8 \times 9^{1}/2$ O X X O C5 Env \Box $A.99 \times 6.38$ O X X O DL Env \Box $A.33 \times 8.66$ O X X O Monarch Env \Box $3^7/8 \times 7^1/2$ O X X O SK \Box D $10^1/2 \times 15.35$ O \star \star X X 16K \Box D $I^2 \times 10^1/2$ O \star \star X X	B5 JIS	D	7.17×10.12	О	*	*	Х
Image: constraint of the state of the st			10.12 × 7.17	О	*	*	Х
A6 \Box 4.13 × 5.63 \Box X X Folio \Box $B^1/_4 × 13$ \bigcirc \star \star X Foolscap F4 \Box $B^1/_2 × 13$ \bigcirc \star \star X F/GL \Box $B^{1/_2} × 13$ \bigcirc \star \star X Com#10 Env \Box $4^{1/_8} × 9^{1/_2}$ \bigcirc X X \bigcirc C5 Env \Box $6.38 × 9.02$ \bigcirc X X \bigcirc C6 Env \Box $4.49 × 6.38$ \bigcirc X X \bigcirc DL Env \Box $3^{7/_8} × 7^{1/_2}$ \bigcirc X X \bigcirc Monarch Env \Box \Box $10^{1/_2} × 15.35$ \bigcirc \star \star X 8K \Box $10^{1/_2} × 15.35$ \bigcirc \star \star X X	A5	D	5.83 × 8.26	О	Х	Х	Х
FolioI $8^{1}/4 \times 13$ O \star \star XFoolscap F4I $8^{1}/2 \times 13$ O \star \star XF/GLI 8×13 O \star \star XCom#10 EnvI $4^{1}/8 \times 9^{1}/2$ OXXOC5 EnvI6.38 $\times 9.02$ OXXOC6 EnvI4.49 $\times 6.38$ OXXODL EnvI $3^{7}/8 \times 7^{1}/2$ OXXOMonarch EnvI $0^{1}/2 \times 15.35$ OXXO16KII $7.68 \times 10^{1}/2$ O \star \star X			8.26 × 5.83	О	*	*	Х
Foolscap F4I $8^{1}/_{2} \times 13$ O \Rightarrow \star XF/GLI 8×13 O \star \star XCom#10 EnvI $4^{1}/_{8} \times 9^{1}/_{2}$ OXXOC5 EnvI 6.38×9.02 OXXOC6 EnvI 4.49×6.38 OXXODL EnvI 4.33×8.66 OXXOMonarch EnvI $3^{7}/_{8} \times 7^{1}/_{2}$ OXXOSKI $10^{1}/_{2} \times 15.35$ O \star \star X16KI7.68 \times 10^{1}/_{2}O \star \star X	A6	D	4.13×5.63	О	Х	Х	Х
F/GLI8 × 13O★XCom#10 EnvI $4^{1}/_{8} × 9^{1}/_{2}$ OXXOC5 EnvI $6.38 × 9.02$ OXXOC6 EnvI $4.49 × 6.38$ OXXODL EnvI $4.33 × 8.66$ OXXOMonarch EnvI $3^7/_8 × 7^1/_2$ OXXOCustom SizeO*XXX8KI $10^{1}/_2 × 15.35$ O★★X16KI7.68 × 10^{1}/_2O★★X	Folio	D	$8^{1}/_{4} \times 13$	О	*	*	Х
Com#10 EnvI $4^{1}/_{8} \times 9^{1}/_{2}$ OXXOC5 EnvI 6.38×9.02 OXXOC6 EnvI 4.49×6.38 OXXODL EnvI 4.33×8.66 OXXOMonarch EnvI $3^{7}/_{8} \times 7^{1}/_{2}$ OXXOCustom SizeO*XXX8KI $10^{1}/_{2} \times 15.35$ O★★X16KI7.68 \times 10^{1}/_{2}O★★X	Foolscap F4	D	$8^{1}/_{2} \times 13$	О	☆	*	Х
C5 EnvI 6.38×9.02 OXXOC6 EnvI 4.49×6.38 OXXODL EnvI 4.33×8.66 OXXOMonarch EnvI $3^{7}/_{8} \times 7^{1}/_{2}$ OXXOCustom SizeO*XXX8KI $10^{1}/_{2} \times 15.35$ O \star \star X16KI7.68 $\times 10^{1}/_{2}$ O \star \star X	F/GL	D	8×13	О	*	*	Х
C6 Env I 4.49 × 6.38 O X X O DL Env I 4.33×8.66 O X X O Monarch Env I $3^{7}/_{8} \times 7^{1}/_{2}$ O X X O Custom Size O* X X*** X 8K I $10^{1}/_{2} \times 15.35$ O X X X 16K I $7.68 \times 10^{1}/_{2}$ O X X X	Com#10 Env	D	$4^{1}/_{8} \times 9^{1}/_{2}$	О	Х	Х	О
DL Env I 4.33×8.66 O X X O Monarch Env I $3^7/_8 \times 7^1/_2$ O X X O Custom Size O* X X* X 8K I $10^1/_2 \times 15.35$ O X X X 16K I $7.68 \times 10^1/_2$ O X X X	C5 Env	D	6.38×9.02	О	Х	Х	О
Monarch Env I $3^7/_8 \times 7^1/_2$ O X X O Custom Size O* X ★** X 8K I $10^1/_2 \times 15.35$ O ★ ★ X 16K I $7.68 \times 10^1/_2$ O ★ ★ X	C6 Env	D	4.49×6.38	О	Х	Х	О
Custom Size - - O* X \star^{**} X 8K I $10^{1}/_{2} \times 15.35$ O \star \star X 16K I $7.68 \times 10^{1}/_{2}$ O \star \star X	DL Env	D	4.33×8.66	О	Х	Х	О
8K \square $10^{1}/_{2} \times 15.35$ \bigcirc \bigstar \bigstar X 16K \square $7.68 \times 10^{1}/_{2}$ \bigcirc \bigstar \bigstar X	Monarch Env	D	$3^{7}/_{8} \times 7^{1}/_{2}$	О	Х	X	О
16K \square 7.68 × 10 ¹ / ₂ \bigcirc \bigstar \bigstar X	Custom Size	—	—	O*	X	★**	X
	8K	D	$10^{1}/_{2} \times 15.35$	О	*	*	X
$\square 10^{1}/_{2} \times 7.68 \qquad \bigcirc \bigstar \bigstar X$	16K	D	$7.68 \times 10^{1}/_{2}$	О	*	*	X
		D	$10^{1}/_{2} \times 7.68$	О	*	*	X

• 0

Means that the size is supported but the paper size should be set with the control panel. There is no dial on the tray.

See p.40 "Loading Paper in the Bypass Tray"

See p.47 "Loading envelopes into the Envelope Feeder Unit"

• 🕁

Means that the size is supported and indicated on the tray dial. Be sure to set the paper size dial to match the actual paper size loaded in the tray.

• *

Means that the size is supported but not indicated on the tray dial. You should set the tray dial to " \bigstar ", and select the paper size with the control panel.

• 0*

Means that the supported size is approximately 3.55 - 12.00 inches in width, and approximately 5.83 - 17.00 inches in length. The supported size may differ depending on the printer language you use. Use the printer driver to set custom sizes. Set custom sizes with the control panel.

• ★**

Means that the supported size is approximately 7.16 - 11.7 inches in width, and approximately 5.8 - 17 inches in length. The supported size may differ depending on the printer language you use. Use the printer driver to set custom sizes. Set custom sizes with the control panel.

• X

means that the size is not supported.

Paper weight and number of sheets to be set

	Supported paper weight	Maximum number of sheets (plain paper) ^{*1}	
Paper Tray	60 - 105 g/m ² (16 - 28 lb. bond)	250 (80 g/m ² , 20 lb. bond)	
Paper Feed Unit Type 2600 (option)	60 - 105 g/m ² (16 - 28 lb. bond)	500 (80 g/m ² , 20 lb. bond)	
Bypass Tray	52 - 162 g/m ² (14 - 43 lb. bond)	100 (80 g/m ² , 20 lb. bond) For other kind of papers, see p.33 "Types of Paper and Other Media".	
Envelope Feeder Type 2600 *2	p.33 "Types of Paper and Other Media".		

^{*1} Confirm that the top of the stack is not higher than the limit mark indicated on the side fence of the tray.

^{*2} The Envelope Feeder Unit requires the installation of the optional Paper Feed Unit.

Output Paper Sizes (Metric version)

	Feed direction	Size (mm)	Output Tray (Standard Tray)	1-bin Shift Sort Tray	Mailbox	Duplex Unit
A3	D	297 × 420	О	О	О	О
B4 JIS	D	257 × 364	0	0	0	О
A4	D	210 × 297	0	0	0	О
		297 × 210	0	0	0	О
B5 JIS	D	182 × 257	О	0	0	О
		257 × 182	О	0	О	О
A5	D	148×210	О	Х	Х	X
		210×148	0	0	0	0
A6	D	105×148	0	Х	Х	Х
11 × 17	D	279 × 432	О	О	О	О
Legal (LG, $8^{1}/_{2} \times 14$)	D	216 × 356	0	0	0	0
Letter (LT, $8^{1}/_{2} \times 11$)	D	216 × 279	0	0	0	0
	P	279×216	0	0	0	0
$5^{1}/_{2} \times 8^{1}/_{2}$	D	140×216	0	Х	Х	Х
Executive (Exec., $7^{1}/_{4} \times 10^{1}/_{2}$)	D	184×276	0	0	0	X
	┏	276×184	0	О	0	0
Folio $(8^{1}/_{4} \times 13)$	D	210 × 330	0	0	0	0
Foolscap (F4, $8^1/_2 \times 13$)	D	216 × 330	О	О	О	О
F/GL (8×13)	D	203 × 330	0	0	0	0
Com#10 Env $(4^1/_8 \times 9^1/_2)$	D	104.8×241.3	0	Х	Х	X
CA Env (6.38 × 9.02)	D	162 ×229	О	Х	Х	X
C6 Env (4.49 × 6.38)	D	114×162	0	Х	Х	X
DL Env (4.33 × 8.66)	D	110×220	О	Х	Х	X
Monarch Env $(3^7/_8 \times 7^1/_2)$	D	98.4×190.5	О	Х	Х	X
Custom Size	—		0	Х	Х	Х
8K $(10^1/_2 \times 15.35)$	D	267 × 390	0	О	0	0
$16K (7.68 \times 10^{1}/_{2})$	D	195×267	О	О	0	О
	┏	267 × 195	О	О	О	О

• 0

Means that the size is supported.

• X

Means that the size is not supported.

Output Paper Sizes (Inch version)

	Feed direction	Size (inch)	Output Tray (Standard Tray)	1-bin Shift Sort Tray	Mailbox	Duplex Unit
11 × 17	D	11×17	О	О	О	О
Legal (LG)	D	$8^{1}/_{2} \times 14$	0	0	0	О
Letter (LT)	D	$8^{1}/_{2} \times 11$	0	0	0	О
		$11 \times 8^{1/2}$	О	О	О	О
$5^{1}/_{2} \times 8^{1}/_{2}$	D	$5^{1}/_{2} \times 8^{1}/_{2}$	О	Х	X	Х
Executive (Exec.)	D	$7^{1}/_{4} \times 10^{1}/_{2}$	О	О	О	Х
		$10^{1}/_{2} \times 7^{1}/_{4}$	О	О	О	О
A3	D	11.26×16.54	О	О	0	0
B4 JIS	D	10.12 × 14.33	О	0	0	0
A4	D	8.26 × 5.83	О	0	0	0
		5.83 × 8.26	О	О	О	О
B5 JIS	D	7.17×10.12	О	О	0	0
		10.12" × 7.17	О	О	О	О
A5	D	5.83 × 8.26	О	Х	Х	X
		8.26 × 5.83	О	О	О	О
A6	D	4.13 × 5.63	О	Х	X	X
Folio	D	$8^{1}/_{4} \times 13$	О	О	О	О
Foolscap F4	D	$8^{1}/_{2} \times 13$	О	О	О	О
F/GL	D	8×13	О	О	О	О
Com#10 Env	D	$4^{1}/_{8} \times 9^{1}/_{2}$	О	Х	X	X
C6 Env	D	4.49 × 6.38	О	X	X	X
C5 Env	D	6.38 × 9.02	О	X	X	X
DL Env	D	4.33 × 8.66	О	X	X	X
Monarch Env	D	$3^{7}/_{8} \times 7^{1}/_{2}$	О	X	X	X
Custom Size	—	—	О	Х	X	X
8K	D	$10^{1}/_{2} \times 15.35$	О	О	0	0

	Feed direction	Size (inch)	Output Tray (Standard Tray)	1-bin Shift Sort Tray	Mailbox	Duplex Unit
16K	₽	$7.68 \times 10^{1}/_{2}$	0	О	О	О
	D	$10^{1}/_{2} \times 7.68$	0	О	О	О

3

• 0

Means that the size is supported and that the paper size should be set with the control panel. There is no dial on the tray.

• X

Means that the size is not supported.

Paper Recommendations

Note the following suggestions when handling or selecting paper used with this printer.

Loading Paper

- Confirm the paper types of the printer. For more information, see p.33 "Types of Paper and Other Media". Print quality cannot be guaranteed if other paper types are used.
- Do not use paper that is already printed on.
- If you load paper into the paper tray, be sure not to stack over the limit mark.
- If you load paper onto the Bypass Tray, be sure that paper fits under the side guide.
- If you load paper into the paper tray, confirm that the print side is facing *down*.
- If you load paper onto the Bypass Tray, confirm that the print side is facing *up*.

Storing Paper

Paper should always be stored properly. Improperly stored paper might result in poor print quality, paper misfeeds or printer damage.

Recommendations are as follows:

- Avoid storing paper in humid areas.
- Avoid exposing paper to direct sunlight.
- Store on a flat surface.
- Keep open reams of paper in the package in which the paper came.

Types of Paper and Other Media

Plain paper

- If you print on paper heavier than 105 g/m^2 (28 lb. bond), use the Bypass Tray. The Bypass Tray can hold paper up to 162 g/m^2 (43 lb. bond) in weight.
- If you load paper heavier than 155 g/m^2 (41 lb. bond) onto the Bypass Tray, set the printer to Thick Paper mode using the control panel.
- If paper is curled or bent, correct it before loading.

OHP transparencies

- Load only one OHP transparency at the same time onto the Bypass Tray.
- When loading an OHP transparency onto the Bypass Tray, set the printer to Transparency mode with the control panel.
- Be careful not to touch the print side of the OHP transparencies, otherwise the print side gets dirty or damaged, and results in poor print quality.
- When printing on an OHP transparency that has a print side, load it facing down onto the Bypass Tray.

Adhesive labels

- Load only one adhesive label at the same time onto the Bypass Tray.
- Use adhesive labels in which the whole side can be printed on.
- Do not use adhesive labels having exposed glue.
- If the print side is coated, print quality might be reduced, as the toner might not fuse well.

Envelopes

- When printing on envelopes, use the Bypass Tray or the Envelope Feeder Unit.
- Even when the optional Envelope Feeder Unit is not installed, you can select the sizes for the Envelopes for Tray 2 using the control panel. However, you cannot load the envelopes until optional Envelop Feeder Unit is installed.

To use the Envelope Feeder Unit, installation of the optional Paper Feed Unit is required. See *"Envelope Feeder Type 2600"* in the Setup Guide.

• Specifications of envelopes are as follows:

	Metric version	Inch version
Weight	$72 - 90 \text{ g/m}^2$	19 – 24 lb. bond
Recommended weight and size	72 g/m ² , 114 × 162 mm (C6 Env)	24 lb. bond, $3^7/_8 \times 7^1/_2$ inches (Monarch)

- You can load up to 10 envelopes (72 90 g/m², 19 24 lb. bond) onto the Bypass Tray at the same time, without forcibly pressing them. Confirm that the envelopes are not damp, and that the top of the stack is not higher than the limit mark on the side guide. See p.45 "Loading envelopes onto the Bypass Tray".
- You can load up to 60 envelopes (72 90 g/m², 19 24 lb. bond) into optional Envelope Feeder Unit at the same time, without forcibly pressing them. Confirm that the envelopes are not damp, and that the top of the stack is not higher than the limit mark on the side guide. See p.47 "Loading envelopes into the Envelope Feeder Unit".
- Confirm that the print side is facing up when loading onto the Bypass Tray, and facing down when loading into the optional Envelope Feeder Unit.

- Load the envelopes with the flaps aligned to the left side fence. The flaps should be securely folded up.
- Confirm that there is no air in the envelopes before loading.
- To get better print quality, it is recommended that you set the right, left, top, and bottom print margin, to at least 15 mm (0.6 inches) each.
- Do not print on both sides of envelopes.
- Load only one size and type of envelopes at the same time.
- Before loading envelopes, flatten the leading edges (the side being fed into the printer) of them by running a pencil or ruler across them.
- Before loading envelopes, confirm that they are rectangular in shape.
- Do not use the non-supported envelopes listed on p.29 "Paper weight and number of sheets to be set".

Paper not supported by this printer

Avoid using the following types of paper that are not supported by this printer:

- Paper whose weight is heavier or lighter than the limitation. See p.25 "Paper Types and Sizes".
- Bent, folded or creased paper
- Curled or twisted paper
- Torn paper
- Wrinkled paper
- Damp paper
- Paper stuck together
- Paper that is dry enough to emit static electricity
- Paper that has already been printed on, with the exception of preprinted letterhead


🖉 Note

- □ Ink on paper from an earlier print job, another copier, an inkjet printer or other device could damage the fusing unit of this printer due to a difference in fusing temperatures.
- Coated paper
- Special paper like thermal paper, aluminum foil, carbon paper and conductive paper
- Heavily textured paper
- Glued paper
- Label paper on which glue or base paper is exposed
- Paper with clips or stapled
- Paper with tape or ribbons attached
- Envelopes in the following conditions:

- damp
- excessively curled or twisted
- stuck together
- damaged in any way
- with stamps attached
- with windows, holes, perforations, cutouts or embossing
- with metal clasps, string ties or metal folding bars
- designed to be interlocked
- with nicked edges or bent corners
- with rough, wrinkled or laid finishes
- with any exposed adhesive, when the flap is in the sealed or closed position

Printable Area

The following shows the printable area for this printer. Be sure to set the print margins correctly by the application.

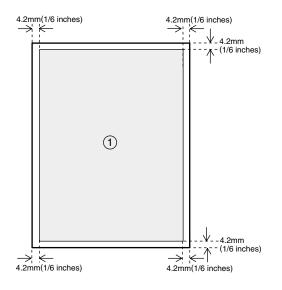

① : printable area

∰Important

The maximum printable length is 432 mm (17 inches) in the paper feed direction.

🖉 Note

□ The printable area may vary depending on the paper size, printer language and printer driver settings.

Loading Paper and Other Media


Loading Paper in the Paper Tray

Load paper in the optional Paper Feed Unit by following the procedures below.


With the paper tray, you can load up to 250 pages and with the optional Paper Feed Unit, you can load up to 500 pages at the same time. For more information about the type, size and feed direction of paper that can be loaded in the tray, see p.25 "Paper Types and Sizes".

When you change the paper size see p.38 "Changing the paper size".

1 Lift the paper tray slightly then pull it out until it stops.

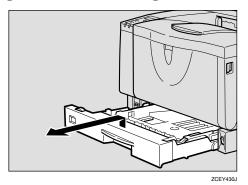


2 While lifting the front side of the tray, pull it out of the printer.

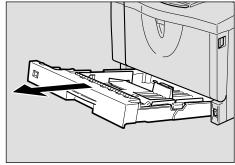

ZCEY140J


3 Load paper into the tray with the print side down.

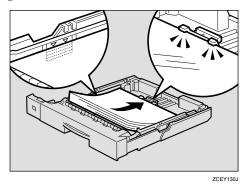

∰Important

- Confirm that the top of the stack is not higher than the limit mark inside the tray.
- □ Confirm that paper fits under the rear guide.

4 Carefully slide the paper tray into the printer until it stops.

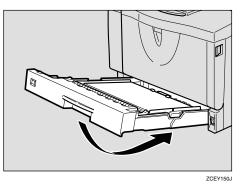


∰Important

Do not slide the paper tray in with force. If you do, the front and side guides might move.

Changing the paper size

∰Important


- Confirm that the setting of the paper size dial matches the paper size and feed direction of the paper in the tray, otherwise the printer might be damaged, or printing problems might occur.
- **1** Lift the paper tray slightly then pull it out until it stops. Adjust the paper size dial to match the size and feed direction of paper in the paper tray.

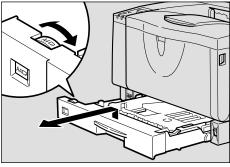

ZCEY110J

∰Important


- □ If you want to use the paper size and feed direction that are not indicated on the paper size dial, set the dial to "★". In this case, you should set the paper size using the control panel. See p.106 "Paper Input Menu".
- **2** While lifting the front side of the tray, pull it out of the printer.

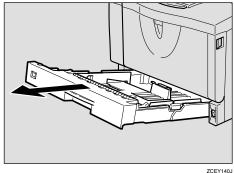


- ZCEY140
- If you load paper larger than A4
 □ or 8¹/₂ × 11 □, you should extend the tray as follows:

🖉 Note

- □ You cannot load paper smaller than A4 □ or 8¹/₂×11 □, if the tray is extended. In this case, return the tray to its standard length.
- Slide the catches inwards to unlock the tray.

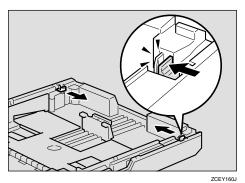


2 Slide the tray until it stops.

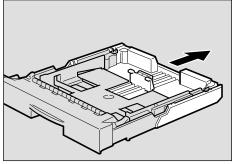


ZCEY170J

3 Return the catches to their original positions.

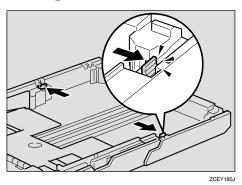


∰Important

- Confirm that the catches return to their original positions securely. If they are not locked securely, paper misfeeds might occur.
- 4 Adjust the rear and side guides to the paper size you want to load.

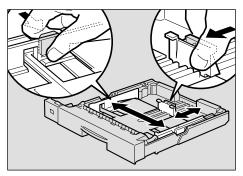

ZGDY120J

5 Load paper into the tray with the print side down.

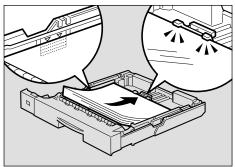


ZCEY130J

∰Important

- Confirm that the top of the stack is not higher than the limit mark inside the tray.
- □ Confirm that paper fits under the rear guide.

6 Carefully slide the paper tray into the printer until it stops.

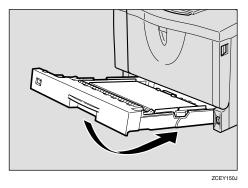

∰Important

Do not slide the paper tray in with force. If you do, the front and side guides might move.


Loading Paper in the Bypass Tray

With the Bypass Tray, you can load up to 100 pages at the same time. For more information about the type, size and feed direction of paper that can be loaded in the tray, see p.25 "Paper Types and Sizes".


🖉 Note

□ If you set custom size paper, you should set the paper size using the printer driver. Also, use the control panel to set the custom size setting.

Open the Bypass Tray.

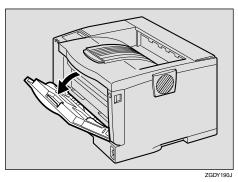


2 Slide the side guides outward, and load paper until it stops with the print side up.

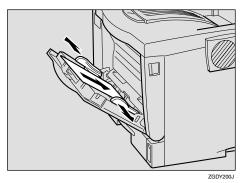


🖉 Note

□ If you load A4 □ or lager, or 8¹/₂ × 11 □ or larger, slide out the Bypass Tray extension (①) and then flip it open (②).

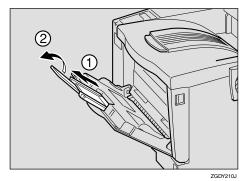

Adjust the side guides to the paper width.

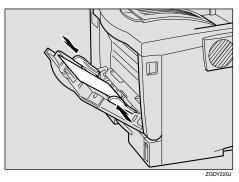


∰Important

□ Confirm that paper fits under the side guides.

4 Set the paper size and feed direction using the control panel as follows:

Press [Menu].

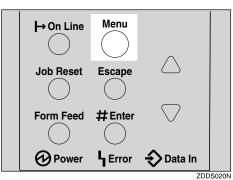


"Menu" appears on the panel display.

2 Press 【▼】 or 【▲】 to "Paper Input" menu.

Menu Paper Input

3 Press [Enter #].

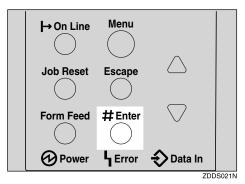

The following message appears on the panel display.

Paper Input: Bypass Size

Press [Enter #].

```
Bypass Size:
*11 X 17
```

6 Press [▼] or [▲] to select the paper size you want to use.


Byp	ass	Si	28	:
8	1/2	Х	11	

6 Press **[Enter #]** to apply the setting. Wait for a while.

Bypass	Size:
*8 1/2	X 11

The screen returns to step **3** in a few seconds.

After the panel display changes, press [On Line].

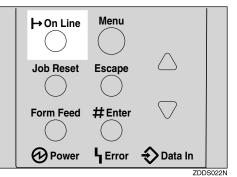

"Ready" appears on the panel display.

Ready

5 Start printing with the computer.

3

Loading custom sized paper in the Bypass Tray


∰Important

- The settings of custom sized paper that take effect are not the settings made on the control panel but the settings made in the printer driver. There is no need to change the settings on the control panel. However, when using a printer driver other than RPCS, you will need to change the settings on the control panel.
- Applications that do not allow a custom paper size to be set cannot print on custom sized paper.

🖉 Note


□ If you print on A3 or longer sheets, prints may become blurred.

1 Press [Menu].

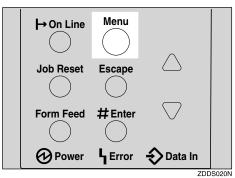

"Menu" appears on the panel display.

 2 Press [▼] or [▲] to display "Paper Input" menu.



B Press [Enter #].

Paper Input: Bypass Size

The following message appears on the panel display.

4 Press [▼] or [▲] to display "Custom Size".

Bypass Size: Custom Size

5 Press [Enter #].

 
The following message appears on the panel display.

6 Press [▼] or [▲] to display the length in the feed direction, and then press [Enter #].

Custom Size: Horiz. 11.69 "

The screen to enter the size along the length appears.

Press 【▼】 or 【▲】 to display the size along the length of the feed direction, and then press [Enter #].



The screen returns to step **4** in a few seconds.

8 Press [On Line].

Ready

"Ready" appears on the panel display.

Setting the Bypass Tray Paper Type


To make sure printing is done correctly, you must specify one of the following for the type of sheets loaded in the tray:

• Plain paper, Recycled paper, Special paper, Color paper, Letterhead, Preprinted, Labels, Bond paper, Cardstock, Transparencies, Thick paper

∰Important

When you load thick paper or transparencies in the Bypass Tray, always specify the type of paper. Duplex printing is not possible on paper in a tray for which Thick paper or Transparency has been set.

1 Press (Menu).

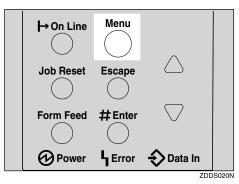

"Menu" appears on the panel display.

2 Press [▼] or [▲] to display "Paper Input" menu.

Menu Paper Input

B Press [Enter #].

The following message appears on the panel display.

Press [▼] or [▲] to display "Paper Type".

Paper Input: Paper Type

5 Press [Enter #].

The following message appears on the panel display.

6 Press [▼] or [▲] to display "Bypass Tray", and then press [Enter #].

Paper Type: Bypass Tray

The screen to select the paper type appears.

Press [▼] or [▲] to display the type of paper you have loaded, and then press [Enter #].

Bypass Tray: Thick Paper

The screen returns to step **G** in a few seconds.

8 Press [On Line].

Ready

"Ready" appears on the panel display.


Loading Paper in the Optional Paper Tray

With the Paper Feed Unit, you can load up to 500 pages at the same time.

For more information about the type, size and feed direction of paper that can be loaded in the tray, see p.25 "Paper Types and Sizes".


∰Important

- If the printer is equipped with the optional tray(s), do not slide out more than one tray at the same time. If you do, the printer might fall down.
- Confirm that the setting of the paper size dial matches the paper size and feed direction of the paper in the tray. If different, the printer might be damaged, or printing problems might occur.
- Lift the paper tray slightly then pull it out until it stops. Adjust the paper size dial to match the size and feed direction of paper in the Paper Feed Unit.

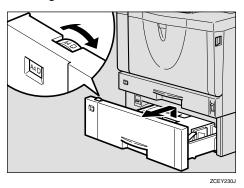


∰Important

- □ If you want to use paper sizes or feed directions that are not listed on the paper size dial, adjust the dial to "★". In this case, you should set the paper size using the control panel. See p.106 "Paper Input Menu".
- **2** While lifting the front side of the tray, pull it out of the printer.

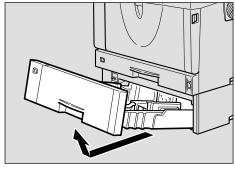


ZDDP330E

Adjust the rear and side guides to the paper size you want to load.

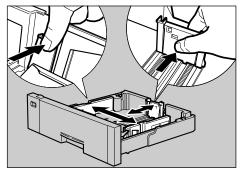

ZGDY250E


4 Load paper into the paper tray with the print side down.

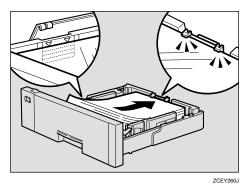

∰Important

- Confirm that the top of the stack is not higher than the limit mark inside the tray.
- □ Confirm that paper fits under the rear guide.

5 While lifting the front of the tray, place the tray into the printer. Then slide it inside until it stops.

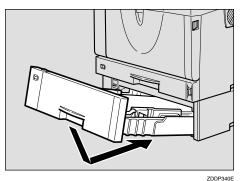

∰Important

Do not slide the paper tray in with force. If you do, the front and side guides might move.

Loading Envelopes

As there are many kinds of envelopes, be sure to check if those to be used are supported by this printer.

✓ Reference

For more information about envelopes, see p.33 "Types of Paper and Other Media".

∰Important


- Even when the optional Envelope Feeder Unit is not installed, you can select the sizes for the envelopes for Tray 2 using the control panel. However, you cannot load the envelopes until the optional Envelope Feeder Unit is installed.
- □ To install the Envelope Feeder Unit, the optional Paper Feed Unit must be installed. See *"Envelope Feeder Type 2600"* in the Setup Guide.

Loading envelopes onto the Bypass Tray


✓ Reference

With the Bypass Tray, you can load up to 10 envelopes at the same time. For more information about envelopes, see p.33 "Types of Paper and Other Media".

1 Open the Bypass Tray.

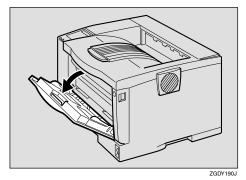

2 Load envelopes until they stop, with the print side up and the sides of the flaps on the left as shown below.

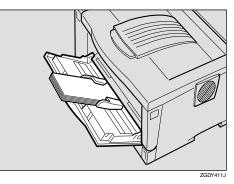

∰Important

□ Confirm that the envelope flaps are securely folded down, and that there is no air inside the envelopes.

🖉 Note


- Confirm that the top of the stack is not higher than the limit mark on the side guides.
- Do not push the stack of envelopes with too much force.

3 Slide the side guides against the edge of the envelope stack.

🖉 Note

Confirm that the edges of envelopes fit under the side guides.

- Set the envelope size and feed direction using the control panel as follows:
 - Press [Menu].

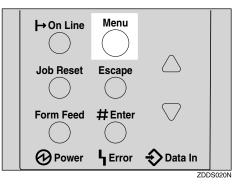


"Menu" appears on the panel display.

2 Press [▲] or [▼] to display "Paper Input" menu.

> Menu: Paper Input


3 Press [Enter #].

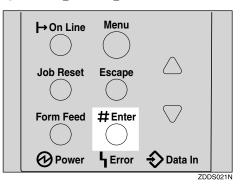

The following message appears.



 4 Press **[Enter #]**.




✓ Reference

For information about types of envelopes you can select, see p.25 "Paper and Other Media Supported by This Printer".

6 Press **[Enter #]** to apply the settings. Wait for a while.



After the panel display changes, press [On Line].

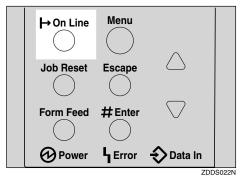

"Ready" appears on the panel display.


Ready

5 Start printing with the computer.

Loading envelopes into the Envelope Feeder Unit


Important

- □ With the optional Envelope Feeder Unit, you can load up to 60 envelopes at the same time. For more information about envelopes, see p.33 "Types of Paper and Other Media".
- **1** Slide the optional Paper Feed Unit (Tray 2) out until it stops. Next, lift it slightly, then slide it out.

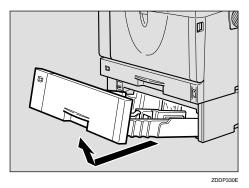

Note 🖉


- □ Keep the paper tray with paper in a cool and dry place.
- **2** Prepare the Envelope Feeder Unit.
- **3** While pinching the side guides, slide them outward until they stop. While pinching the rear guide, slide it toward the back.

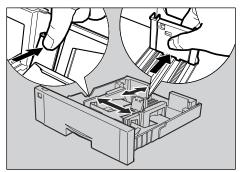


ZGDY260E

3

4 Push the bottom plate down until it locks into place.

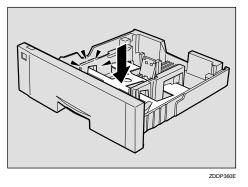

5 Load envelopes into the Envelope Feeder Unit, with the print side down and the flap on the left as shown in the illustration.

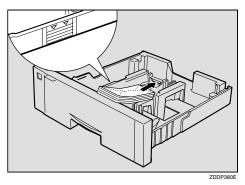


∰Important

Confirm that the envelope flaps are securely folded down, and that there is no air inside the envelopes.


🖉 Note

- Confirm that the top of the stack is not higher than the limit mark on the side guides.
- □ Confirm that the envelopes fit under the side guides.
- Do not push the stack of envelopes with too much force.

6 While pinching the side guides, slide them along the edge of the envelope stack.

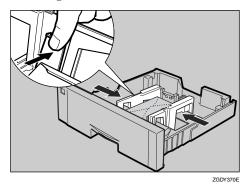

7 While pinching the rear guide, slide it along the edge of the envelope stack.

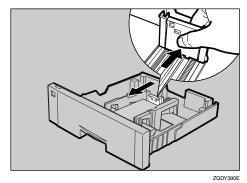


8 While lifting the front of the tray, place it into the printer. Then slide it until it stops.

Important

Do not slide the paper tray in with force. If you do, the front and side guides might move. **9** Set the envelope size and feed direction using the control panel as follows:

Press [Menu].

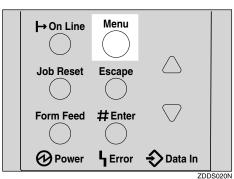


"Menu" appears on the panel display.

Press [▲] or [▼] to display "Paper Input" menu.

> Menu: Paper Input

Press [Enter #].

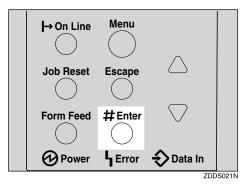

The following message appears on the panel display.

Paper Input Bypass Size

4 Press [▲] or [▼] to display "Tray Paper Size".

Paper Input: Tray Paper Size

 
6 Press [Enter #].

The following message appears on the panel display.

Tray Paper Size: Tray 1

E

6 Press [▲] or [▼] to display "Tray 2".



Press [Enter #].


8 Press [▲] or [▼] to select the envelope type you want to use.

PReference

For more information about types of envelopes you can select, see p.25 "Paper and Other Media Supported by This Printer".

9 Press **[Enter #]**. Wait for a while.

① After the panel display changes, press [On Line].

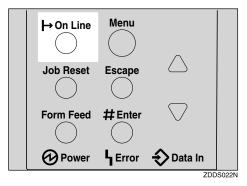

"Ready" message appears on the control panel.

Ready

1 Start printing with the computer.

4. Sample Print/Locked Print

Sample Print

Use this function to print only the first set of a multiple-set print jobs. The remaining sets are saved on the optional Hard Disk Drive in the printer. The saved job can be printed or canceled from the printer's control panel.

∰Important

Turning the printer off deletes any documents or error logs stored on the optional hard disk drive.

Limitation

To use this function, the optional Hard Disk Drive must be installed on the printer.

🖉 Note

- If the application has a collate option, confirm that it is not selected before sending a print job. By default, sample print jobs are automatically collated by the printer driver. If the collate option is selected from the application print dialog box, more pages than intended may be printed.
- You can identify the file you want to print by the User ID and the time when the job was stored.
- The actual number of pages the printer can save depends on the contents of the print images. For example, the printer can save up to 30 jobs or 1,000 pages. It depends on the data volume.

□ If the first set of the sample print file is not as you expected and you do not want to print the remaining sets, delete the sample print file using the control panel. If you print the remaining sets of the sample print file, the job in the printer is deleted automatically.

Printing a Sample Print File

The following procedure describes how to print a sample print file with the PCL printer driver. For information about how to print a sample print file with the PostScript printer driver, see the PostScript 3 Operating Instructions Supplement included on the CD-ROM. For more information about RPCS printer driver, see Help.

1 From an application, select the menu command to print.

The print dialog box appears.

- **2** Open the Printer Properties.
- From the [Job Type:] box on the [Setup] tab, select [Sample Print].
- 4 Click the [Details...] button.
- **5** In the [User ID:] box, type a User ID of up to eight alphanumeric characters.

🖉 Note

- □ This is used to identify the user associated with a job.
- The User ID can consist of up to eight alphanumeric (a-z, A-Z, 0-9) characters.

Click [OK].

After making all desired settings, click [OK].

8 Start printing from the application's print dialog box.


The sample print job is sent to the printer and the first set is printed.

9 Check the print job to confirm whether the settings are acceptable.

If the settings are fine, go to step **(**) to print the rest of the print job.

If not, you can delete the saved job. See p.53 "Deleting a Sample Print File"

On the printer's control panel, press [Menu].

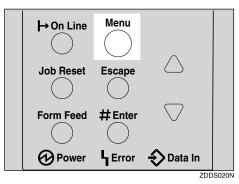


"Menu" appears on the panel display.

Press 【▼】 or 【▲】 to display the "Sample Print" menu.

Menu: Sample Print

Press [Enter #].

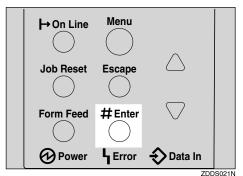

The following message appears on the panel display.



B Press [▼] or [▲] to display the file you want to print, and then press [Enter #].

🖉 Note

□ If you want to cancel the sample print file, press **[Escape]**.

Press [Enter #].

The following message appears on the panel display.

Qty: 1(1—999) Press # to Print

Press [▲] or [▼] to enter the number of sets.

🖉 Note

□ You can enter up to 999 sets.

6(1-999)Qty: Press # to Print

Bress [Enter #] to print the file.

The following message appears on the panel display.

Processing...


🖉 Note

If you are not satisfied with the first printout of the sample print file and do not want to print the remainder, the job in the printer is deleted automatically.

Deleting a Sample Print File

If you are not satisfied with the printout, delete the sample print file. Then revise it and print again until the settings are fine.

1 Press (Menu).

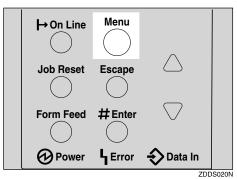


"Menu" appears on the panel display.


2 Press 【▼】 or 【▲】 to display the "Sample Print" menu.

Menu: Sample Print

3 Press [Enter #].

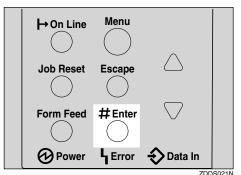

 The following message appears on the panel display.




Press [▼] or [▲] to display the file you want to delete, and then press [Enter #].

The following message appears on the panel display.



🖉 Note

 - □ If you want to cancel the deletion of a sample print file, press **[Escape]**.
- 5 Press [▼] or [▲] to display "Delete File", and then press [Enter #].




6 Press **[Enter #]** to delete the file.


The following message appears on the panel display.

Deleted

7 Press [On Line].

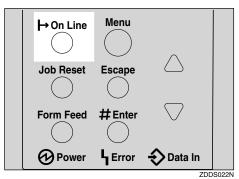

"Ready" appears on the panel display.

 

Checking the Error Log

Limitation

You can view only the latest 20 error logs of all.


Press [Menu].

"Menu" appears on the panel display.

2 Press [▼] or [▲] to display the "Sample Print" menu.

Menu: Sample Print

B Press [Enter #].

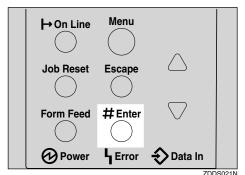

The following message appears on the panel display.



Press [▼] or [▲] to display "Error File(s)".

Sample Print: Error File(S)

5 Press [Enter #].

The following message appears on the panel display.

```
Error File(s):
06:52 ABCD1234
```


🖉 Note

- ☐ You can check the other error logs by using [▼] or [▲].
- 6 Press [▼] or [▲] to check "Error File(s)", and then press [Enter #].

The following message appears on the panel display.

Sample Print: Error File(S)

7 Press [On Line].

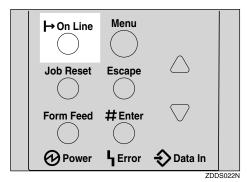

"Ready" appears on the panel display.

Ready		

Locked Print

Use this function to maintain privacy when printing confidential documents. Documents will not be printed out automatically, unless a password is entered, using the control panel after sending the print job.

∰Important

Turning the printer off deletes any documents or error logs stored on the optional hard disk drive.

Limitation

To use this function, the optional Hard Disk Drive must be installed on the printer.

🖉 Note

- If the application has a collate option, confirm that it is not selected before sending a print job. By default, locked print jobs are automatically collated by the printer driver. If the collate option is selected from the application print dialog box, more pages than intended may be printed.
- You can identify the file you want to print by the User ID and the time when the job was stored.
- The actual number of pages the printer can save depends on the contents of the print images. For example, the printer can save up to 30 jobs or 1,000 pages. It depends on the data volume.
- After the locked print file is printed, the job in the printer is deleted automatically.

Printing a Locked Print File

The following procedure describes how to print a locked print file with the PCL printer driver. For information about how to print a locked print file with the PostScript printer driver, see the PostScript 3 Operating Instructions Supplement included on the CD-ROM. For more information about RPCS printer driver, see Help.

1 From an application, select the menu command to print.

The print dialog box appears.

- **2** Open the Printer Properties.
- From the [Job Type:] box on the [Setup] tab, select [Locked Print].
- 4 Click the [Details:] button.
- **5** In the [User ID:] box, type a User ID of up to eight alphanumeric characters.

🖉 Note

- □ This is used to identify the user associated with a job.
- The User ID can consist of up to eight alphanumeric (a-z, A-Z, 0-9) characters.

6 In the [Password:] box, type a password of four digits.

🖉 Note

□ The password must be four digits (0-9).


7 Click [**0**K].

8 After making all desired settings, click [OK].

9 Start printing from the application's print dialog box.


The locked print job is sent to the printer.

On the printer's control panel, press [Menu].

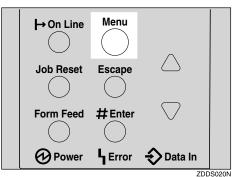


"Menu" appears on the panel display.

 Press [▼] or [▲] to display "Locked Print" menu.



Press [Enter #].

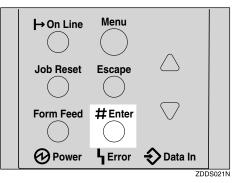

The following message appears on the panel display.



Press [▼] or [▲] to display a file you want to print, and then press [Enter #].

The following message appears on the panel display.

Password: [0----]

- Enter the password you entered in step 6.
 - Press [▲] or [▼] to enter the leftmost digit of the password.

Password: [1----]

2 Press [Enter #].

The next digit appears.

Password: [*2---]

🖉 Note

- □ If you want to change the locked print file, press **[Es-cape]**.
- 3 Repeat steps and 2 to enter the remaining digit of the password, and the press [Enter #].

If the password is not correct, the following message appears and the panel display returns to the password menu. Reset or reenter the password.

Invalid Password Try ASain

Press [▼] or [▲] to display "Print File", and then press [Enter #].

🖉 Note

□ If you want to change the locked print file, press [Escape].

16 Press [Enter #].

The following message appears on the panel display.


08:56 ABCD1234 Press # to Print

Press [Enter #] to print the file.

Processin§...

Deleting the Locked Print File

1 Press (Menu).

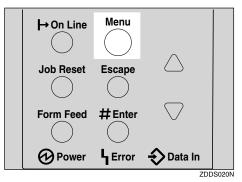


"Menu" appears on the panel display.

2 Press 【▼】 or 【▲】 to display the "Locked Print" menu.

Menu: Locked Print

B Press [Enter #].

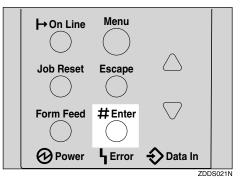

Locked Print: 08:56 ABCD1234

Press [▼] or [▲] to display the file you want delete, and then press [Enter #].

Password: [0----]

- **5** Enter the password of the locked print file.
 - Press [▲] or [▼] to enter the leftmost digit of the password.

Password: [1----]

Press [Enter #].

The next digit appears.

Password: [*2---]

🖉 Note

□ If you want to change the locked print file, press **[Es-cape]**.

Repeat steps 1 and 2 to enter the remaining password digits, and then press [Enter #].

If the password is not correct, the following message appears and the panel display returns to the password menu. Reenter the password.

Invalid Password Try Again

6 Press [▼] or [▲] to display "Delete File".

Select Action: Delete File

Press [Enter #].

The following message appears on the panel display.

08:56 ABCD1234 Press# to Delete

🖉 Note


□ If you want to change the locked print file, press **[Escape]**.

B Press [Enter #].

The following message appears on the panel display.

Deleted

Press [On Line].

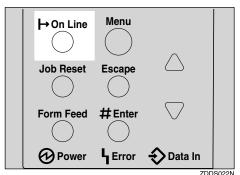

"Ready" appears on the panel display.


Ready

Checking the Error Log

Limitation

□ You can view only the latest 20 error logs of all.

1 Press [Menu].

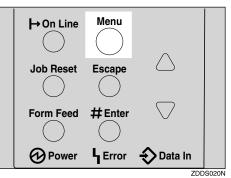


"Menu" appears on the panel display.

2 Press [▼] or [▲] to display the "Locked Print" menu.

Menu: Locked Print

B Press [Enter #].

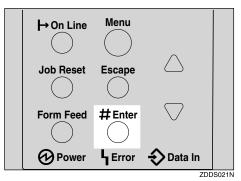

The following message appears on the panel display.



Press [▼] or [▲] to display "Error File(s)".


```
Locked Print:
Error File(s)
```

5 Press [Enter #].


The following message appears on the panel display.

Error	File(s):
06:52	ABCD1234

G Press [▼] or [▲] to check "Error File(s)", and then press [Escape].

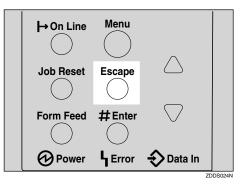

 
The following message appears on the panel display.



🖉 Note

□ Press **[Escape]** to return to the previous menu.

Press [On Line].

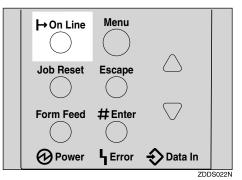

"Ready" appears on the panel display.

Ready

5. Troubleshooting

Error & Status Messages on the Control Panel

Messages/Second messages	Description	Solution
Call Service: EC Power Off On /If Error Reoccur Call Service	An error has occurred in the printer.	First, turn the power switch off and then on. If the message appears again, call your sales or service representative.
Change Setting Tray # /Paper Size: Paper Type:	The paper type and size set- ting on the tray differs from the setting on the driver.	 Load { paper size and type } paper with the selected feed direction into tray. Printing will not automatically resume if the paper type, size and direction setting is incorrect. Make sure that the paper size, feed directions and paper type set in the printer driver and on the control panel are the same. There are two methods to resume printing. ① Use the control panel to set the correct paper type, size and direction of the paper in tray. ② Press [Form Feed] and select the tray with the control panel. You can make to setting to print disregarding the error message. <i>P</i> Reference See "Ppr.Size Error" in p.115 "Maintenance Menu
Cannot Check Signal in Ad hoc	The signal strength for the wireless LAN cannot be checked because "Ad hoc" is selected in "Comm.Mode" for "IEEE 802.11b" in the Host In-	Parameters". Change the Transmission mode to [Infrastructure] in the Host Interface settings.
Close Duplex Unit Cover	terface menu. The cover of the optional Du- plex Unit is open.	Close the cover of the optional Duplex Unit.

Messages/Second messages	Description	Solution
Close Front Cover	The front cover is open.	Close the front cover.
Close Rear/Paper Exit Cover	The paper exit cover or the rear cover is open.	Close the paper exit cover or the rear cover.
Close Mailbox Cover	The cover of the Mailbox is open.	Close the cover of the Mailbox.
Close Upper Tray Cover	The cover of the output 1-bin Tray is open.	Close the cover of the output 1-bin Tray.
Energy Save Mode	The printer is in Energy Saver mode.	Wait for a while.
Hardware Problem DIM	An error has occurred in the printer.	First, turn the power switch off and then on. If the message appears again, call your sales or service representative.
Hardware Problem Ethernet	An error has occurred in the optional Network Interface Board.	First, turn off the power switch and then on. If the mes- sage appears again, call your sales or service representative.
		Turn off the power switch . Replace the Network Interface Board and turn on the power switch. See " <i>Network Interface</i> <i>Board Type 2610</i> " in the Setup Guide.
		Turn off the power switch, re- move the Network Interface Board and turn on the power switch.
		 Note If you remove the Net-work Interface Board, you cannot print over the net-work. You can send a print jobs to the printer only via a parallel cable connection.

Messages/Second messages	Description	Solution
Hardware Problem HDD	An error has occurred in the optional Hard Disk Drive.	First, turn the power switch off and then on, If the message appears again, call your sales or service representative.
		Turn off the power switch. Re- place the Hard Disk Drive and turn on the power switch. See <i>"Hard Disk Drive Type 2600"</i> in the Setup Guide.
		Turn off the power switch. Re- move the Hard Disk Drive and turn on the power switch.
		 Note If the Hard Disk Drive is not installed, you cannot send the sample print job, locked print job and download the font to Hard Disk Drive using the PS Utility for Mac.
Hardware Problem IEEE1394	An error has occurred in the optional 1394 Interface Unit.	First, turn the power switch off and then on, If the message appears again, call your sales or service representative.
		Turn off the power switch. Replace the 1394 Interface Unit and turn on the power switch. See "1394 Interface Unit Type 4510" in the Setup Guide.
		Turn off the power switch, re- move the 1394 Interface Unit and turn on the power switch.
		 Note If you remove the 1394 Interface Unit, you cannot send print jobs via the 1394 Interface Unit. You can only send print jobs to the printer via the parallel cable connection.
Hardware Problem IEEE 802.11b	An error has occurred in the optional 802.11b Interface Unit.	Replace the IEEE 802.11b board.

Messages/Second messages	Description	Solution
Hardware Problem NV-RAM	An error has occurred in the printer.	First, turn the power switch off and then on. If the message appears again, call your sales or service representative.
Hardware Problem Option RAM	An error has occurred in the optional Memory Unit.	First, turn the power switch off and then on. If the message appears again, call your sales or service representative.
		Turn off the power switch, Re- place the Memory Unit, and then turn on the power switch. See " <i>Memory Unit</i> <i>TypeB 64MB</i> " in the Setup Guide.
		Turn off the power switch, re- move the Memory Unit, and then turn on the power switch.
		 Note If you remove the Memory Unit, you must set up the option with the printer driver. If you are using Windows 95/98/Me, Win- dows 2000/Windows XP and Windows NT 4.0, see "Installing the Printer Driver and Software" in the Setup Guide. In this case, you might not be able to print complex print jobs.
Hardware Problem Shift Tray	An error has occurred in the shift motor of the shift tray.	First, turn the power switch off and then on. If the message appears again, call your sales or service representative.
Hardware Problem Parallel I/F	An error has occurred in the parallel I/F.	If you use the parallel I/F, re- place the interface cable that caused the error. If the mes- sage appears again, contact your sales or service repre- sentative.
Hardware Problem USB	There is a problem related to the Universal Serial Bus Con- nection and Hardware.	First, turn the power switch off and then on, If the message appears again, call your sales or service representative.

Messages/Second messages	Description	Solution
HDD Full	The maximum HDD area size for form/font has been ex-ceeded.	Delete the disused form/font types.
HDD Full	The optional Hard Disk Drive is full. The sample print job or locked print job to be sent from the computer is too large to store.	Delete any unnecessary stored files.
HDD Not Installed	You cannot print the sample print and the locked print jobs, because the optional Hard Disk Drive is not in- stalled.	Install the Hard Disk Drive. See <i>"Hard Disk Drive Type</i> 2600" in the Setup Guide.
Hex Dump Mode	The printer is in Hex Dump Mode.	Wait for a while. If the "Hex Dump Mode" message does not change, on the panel dis- play press [On Line] to return to the "Ready" condition.
I/O Buffer Overflow	There is too much data for the I/O buffer to handle.	Make sure the interface cable is inserted into the printer and your computer securely.
		Make sure the interface cable is not damaged or broken.
		Increase the size of the I/O buffer.
Invalid Password Try Again	The password was not en- tered correctly.	Wait for two seconds until the previous display appears. Then enter the password cor- rectly.
Load Correct Size Paper /Press # to Continue	The paper size setting on the tray differs from that of actual paper size in the tray.	 Load { paper size } paper of the selected feed direction and paper size into the tray. Print- ing will not automatically resume if the paper size and direction setting is incorrect. Make sure that the paper feed directions set in the printer driver and on the control pan- el are the same. There are two methods to resume printing. ① Use the control panel to set the correct paper size and direction of the paper in tray. Then press [Enter #]. ② Press [Form Feed] and se- lect the tray with the con- trol panel.

Messages/Second messages	Description	Solution
Load Paper /Paper Size: Paper Type:	The paper type and size set- tings for this tray do not match the size and type of pa- per actually loaded.	Load paper into the tray indi- cated, then press [Enter #] to resume printing. Or press [Form Feed] and select the tray that holds a different type of paper. To cancel printing, press [Job Reset] . Then press [Enter #] .
Load Paper Tray # /Paper Size: Paper Type:	There is no paper left in this tray.	Load paper into the tray indi- cated.
Menu Protected Cannot Change	The menu is protected and the settings cannot be changed.	Wait for two seconds until the previous display appears.
No Files Exist	There are no files available for the sample print job or the locked print job.	Wait for two seconds until the previous display appears.
Offline	The printer is offline.	If you want to bring the printer online. Press [On Line] .
Output Tray Changed	The output tray has been changed. The tray in the paper feed path is not set correctly when the printer receives the print job.	Select the output tray correct- ly.
Paper Invalid for Duplex:Tray # /Change Setting or Form Feed	A paper setting for the select- ed tray is not supported for duplex printing. #: tray number	Change the paper setting with the control panel. Or press [Form Feed] several times un- til a tray with supported pa- per settings appears on the panel display. Or press [Job Reset] to cancel the print job.
P= XX I= XXXXXXXX Power Off On /If Error Reoccur Call Service	A controller error. The SC number indicates the prob- lem.	First, turn the power switch off and then on. If the message appears again, call your sales or service representative.
Print Overrun	A Print overrun occurred on a file being printed. Only a part of the data on the page will be printed, and the print job is suspended, or the current print job has been canceled.	To print the image correctly, add memory to the printer or reduce the resolution of the image.
Printing		Wait for a while.
Processing	The printer is processing in- ternally.	Wait for a while.

Messages/Second messages	Description	Solution
Ready	The printer is online and ready to make prints.	If you want to take the printer offline, press [On Line] .
Remove Misfeed Duplex Unit /Open Duplex Unit Cover	There is misfeed in the Duplex Unit.	Remove the misfed paper.
Remove Misfeed Internal Path /Open Front Cover	There is a misfeed in the print- er.	Remove the misfed paper. See p.82 "Removing Misfed Pa- per".
Remove Misfeed Mailbox /Open Mailbox Cover	There is a misfeed in the Mailbox.	Remove the misfed paper.
Remove Misfeed Paper Exit Cover /Open Paper Exit Cover	There is a misfeed in the paper exit cover.	Remove the misfed paper.
Remove Misfeed Paper Tray /Remove Misfeed Paper Tray	There is a misfeed in the print- er.	Remove the misfed paper. See p.82 "Removing Misfed Pa- per".
Remove Misfeed Upper Tray Unit /Open Upper Tray Cover	There is a misfeed in the upper tray unit.	Remove the misfed paper.
Remove Paper All Output Trays	All output trays are full, and the print job is suspended.	Remove paper from all output trays, and the print job will be resumed automatically.
Remove Paper from Upper Tray	The upper tray is full, and the print job is suspended.	Remove paper from the upper tray, and the print job will be resumed automatically.
Remove Paper Mailbox Tray #	The Mailbox is full, and the print job is suspended.	Remove paper from the Mail- box, and the print job will be resumed automatically.
Remove Paper Standard Tray	The standard tray is full, and the print job is suspended.	Remove paper from the stand- ard tray, and the print job will be resumed automatically.
Replace Maintenance Kit	It is time to replace parts in- cluded in the Maintenance Kit.	Replace parts. See p.144 "MAINTENANCE KIT Type 2600".

Messages/Second messages	Description	Solution
Replace Toner Cartridge	The toner cartridge is not set correctly or toner is almost run out.	Set the toner cartridge correct- ly. See p.90 "Replacing the Toner Cartridge".
	The toner dust is full.	Prepare a new toner cartridge. If the image density gets too light, replace the toner car- tridge with a new one. See p.90 "Replacing the Toner Cartridge".
Reset Fusing Unit Correctly	The fusing unit is not set correctly.	Set the fusing unit correctly, or set the proper fusing unit.
Reset Toner Cartridge	The toner cartridge is not set correctly.	Set the toner cartridge correct- ly. See p.90 "Replacing the Toner Cartridge".
	The toner cartridge is not set installed.	If the cartridge is installed, close the front cover and turn the off power switch and then on. If the message appears again, contact your sales or service representative.
Reset Tray # Correctly	The input paper tray is not set correctly.	Set the input paper tray correctly.
Resetting Job	The print job is being reset.	Wait for a while.
SC XXX-X Power Off On If Error Reoccur Call Service	An error has occurred.	First, turn the power switch off and then on. If the message appears again, call your sales or service representative.
SC2001	An error has occurred in the resident font RAM.	First, turn the power switch off and then on. If the message appears again, call your sales or service representative.
Toner Is Almost Empty	The toner is almost run out.	Prepare a new toner cartridge. If the image density gets too light, replace the toner car- tridge with a new one. See p.90 "Replacing the Toner Cartridge".
Waiting	The printer is waiting for the next print job.	Wait for a while.
Warming Up	The printer is warming up or toner is being supplied.	Wait until the panel display change the "Ready".

Getting Printer Information over the Network

Printer current status

You can check the printer's status using the telnet command.

♦ telnet

Use the status command.

UNIX

Use the lpq or lpstat command or stat parameter of rsh, rcp, or ftp.

For more information, see "*Remote Maintenance by Telnet (mshell)*" in the Network Printing Guide is provided on the CD-ROM labeled "Operating Instructions".

Messages	Description	Comments
Call Service Center	There is a malfunction in the printer.	Turn the printer off and on.
Cover Open: Duplex Unit	The cover of the optional Du- plex Unit is open.	Close the cover of the optional Duplex Unit.
Cover Open: Front Cover	Close the front cover.	Close the front cover.
Cover Open: Mailbox	The cover of the Mailbox is open.	Close the cover of the Mailbox cover.
Cover Open: Paper Exit/Rear	The paper exit cover or the rear cover is open.	Close the paper exit cover or the rear cover.
Cover Open: Upper Tray	The upper tray cover is open.	Close the upper tray cover.
Empty: Toner	The toner cartridge is empty.	Replace the new toner car- tridge.
Energy Saver Mode	The printer is in Energy Save	Wait for a while.
Energy Saver Mode 1	Mode.	
Error: HDD Board	An error has occurred in the optional Hard Disk Drive.	First, turn the power switch off and then on. If the message appears again, call your sales or service representative.
IEEE 802.11b Card Error	The optional IEEE 802.11b board or the optional IEEE 802.11b card is not installed.	Install the optional IEEE 802.11b board or the optional IEEE 802.11b card.
IEEE 802.11b Card or Board Error	An error has occurred in the optional IEEE 802.11b board or the optional IEEE 802.11b card	First, turn the power switch off and then on. If the message appears again, set the optional IEEE 802.11b board. If the message still appears, call your sales or service repre- sentative.

Messages	Description	Comments
NVRAM Error	An error has occurred in the printer.	First, turn the power switch off and then on. If the message appears again, call your sales or service representative.
Error: IEEE 1394 Board	An error has occurred in the optional 1394 Interface Unit.	First, turn the power switch off and then on. If the message appears again, call your sales or service representative.
Error: Memory Switch	An error has occurred in printer.	First, turn the power switch off and then on. If the message appears again, call your sales or service representative.
Error: Optional RAM	An error has occurred in the optional Memory Unit.	First, turn the power switch off and then on. If the message appears again, call your sales or service representative.
Error: Parallel I/F Board	An error has occurred in the parallel interface board.	First, turn the power switch off and then on. If the message appears again, call your sales or service representative.
Full: Mailbox Tray 1	The output tray 1 of the op- tional Mailbox is full.	Remove paper from the out- put tray 1 of the optional Mail- box.
Full: Mailbox Tray 2	The output Tray 2 of the op- tional Mailbox is full.	Remove paper from the out- put Tray 2 of the optional Mailbox.
Full: Mailbox Tray 3	The output Tray 3 of the op- tional Mailbox is full.	Remove paper from the out- put Tray 3 of the optional Mailbox.
Full: Mailbox Tray 4	The output tray 4 of the op- tional Mailbox is full.	Remove paper from the out- put tray 4 of the optional Mail- box.
Full: Output Tray(s)	All output trays are full.	Remove paper from all output trays.
Full: Standard Output Tray	The output tray is full.	Remove paper from output trays.
Full: Waste Toner	The toner is almost run out.	Prepare a new toner cartridge.
Low: Toner	The toner cartridge is not set correctly or toner is almost running out.	Set the toner cartridge correct- ly.
Mismatch: Paper Size	The paper size setting of the tray differs from that of actual paper size in the tray.	Load paper of the indicated paper size into the paper tray being used. See p.25 "Paper and Other Media Supported by This Printer".

Messages	Description	Comments
Mismatch: Paper Size and Type	The paper type setting of the tray differs from that of actual paper type in the tray.	Load paper of the indicated paper size and type into the paper tray being used. See p.25 "Paper and Other Media Supported by This Printer".
Mismatch: Paper Type	The paper type setting of the tray differs from that of actual paper type in the tray.	Load paper of the indicated paper type into the paper tray being used. See p.25 "Paper and Other Media Supported by This Printer".
No Paper: Input Tray(s)	There is no paper of the indi- cated paper size in the paper tray.	Load paper into the paper tray. See p.37 "Loading Paper in the Paper Tray".
Not Detected: Fusing Unit	The fusing unit is not set cor- rectly.	Set the fusing unit correctly. If the message appears again, call your sales or service rep- resentative.
Not Detected: Input Tray(s)	The input tray is not set cor- rectly.	Set the input tray correctly. If the message appears again, call your sales or service rep- resentative.
Not Detected: Toner Car- tridge	The toner cartridge is not set correctly.	Set the toner cartridge correct- ly. If the message appears again, call your sales or serv- ice representative.
Paper Misfeed: Duplex Unit	There is misfeed in the Duplex Unit.	Remove the misfed paper. See p.87 "When "Remove Misfeed Duplex Unit" Appears".
Paper Misfeed: Front Cover	There is misfeed in the printer.	Remove the misfed paper. See p.83 "When "Remove Misfeed Internal Path/Open Front Cover" Appears".
Paper Misfeed: Input Tray	There is misfeed in the printer.	Remove the misfed paper. See p.82 "When "Remove Misfeed Paper Tray" Appears".
Paper Misfeed: Mailbox	There is misfeed in the Mailbox.	Remove the misfed paper. See p.89 "When "Remove Misfeed Mailbox" Appears".
Paper Misfeed: Output Tray	There is misfeed in output tray.	Remove the misfed paper. See p.84 "When "Remove Misfeed Paper Exit Cover" Appears".
Ready	The printer is on line and ready to make prints.	

Messages	Description	Comments
Replace Maintenance Kit	It is time to replace parts in- cluded in the Maintenance Kit.	Replace parts. See p.144 "MAINTENANCE KIT Type 2600".
Shift Tray Error	An error has occurred in the 1- bin Shift Sort Tray.	First, turn the power switch off and then on. If the message appears again, call your sales or service representative.
Size Media Mismatch	The paper size setting of the tray differs from that of actual paper type in the tray.	Load paper of the indicated paper size and type into the paper tray being used. See p.25 "Paper and Other Media Supported by This Printer".
Size Mismatch	The paper size setting of the tray differs from that of actual paper type in the tray.	Load paper of the indicated paper size and type into the paper tray being used. See p.25 "Paper and Other Media Supported by This Printer".
USB I/F Error	An error has occurred in the USB interface.	First, turn the power switch off and then on. If the message appears again, call your sales or service representative.
Warming Up/Adjusting	The printer is warming up or toner is being supplied.	Wait until the panel display change the "Ready".

Printer configuration

You can check the printer configuration using telnet.

♦ telnet

Use the info command.

UNIX

Use the info parameter of rsh, rcp, or ftp.

\mathcal{P} Reference

For more information, see "*Remote Maintenance by Telnet (mshell)*" in the Network Printing Guide is provided on the CD-ROM labeled "Operating Instructions".

🖉 Note

 \Box "*" (asterisk) is displayed with the current setting.

□ Regarding *1–*6, see below table.

Item	Description
Printer System	Version of the printer
Network Board	Version of the network board
Input Tray	
No.	ID number of the paper tray
Name	Name of the paper tray ^{*1}
PaperSize	Paper size loaded in the paper tray ^{*2}
Status	Current status of the paper tray ^{*3}
Output Tray	
No.	ID number of the output tray
Name	Name of the output tray ^{*4}
Status	Current status of the output tray ^{*5}
Emulation	
No.	ID number of the emulation used by the print-
Name	er
Version	Name of the emulation used in the printer
	Version of the emulation
Program	
No.	ID number of the program
Name	Name of the program

*1 Input Tray: Name

Name	Description
Tray X	Name of installed paper tray. (X is the number of tray.)
Bypass Tray	Bypass Tray

✤ *2 Input Tray: Paper Size

Paper Size	Description
A3 (297 × 420)	A3 🔽
B4JIS (257 × 364)	B4 🔽
A4 (297 × 210)	A4D
A4 (210 × 297)	A4D
B5JIS (257 × 182)	B5D
B5JIS (182 × 257)	B5 🖓
A5 (210×148)	A5D
A5 (148 × 210)	A5D
A6 (105×148)	A6D
11 × 17	279 × 432 🖵
$8^{1}/_{2} \times 14$	LG/216 × 356 🖓
$11 \times 8^{1}/_{2}$	LT/279×216
8 ¹ / ₂ ×11	LT/216×279 🖵
$5^{1}/_{2} \times 8^{1}/_{2}$	140×216 🔽
FRI	Custom Size
$10^{1}/_{2} \times 7^{1}/_{4}$	$10^{1}/_{2} \times 7^{1}/_{4}$
$7^{1}/_{4} \times 10^{1}/_{2}$	$7^{1}/_{4} \times 10^{1}/_{2}$
8 ¹ / ₄ ×13	8 ¹ / ₄ × 13 🔽
8 ¹ / ₂ ×13	8 ¹ / ₂ × 13
$4^{1}/_{8} \times 9^{1}/_{2}$	4 ¹ / ₈ ×9 ¹ / ₂ D
$3^{7}/_{8} \times 7^{1}/_{2}$	$3^{7}/_{8} \times 7^{1}/_{2}$
110×220	$4^{1}/_{3} \times 8^{3}/_{4}$
C5 Env(162 × 229)	C5 Env 🖓
8×13	203 × 330 🖵
C6 Env(114 × 162)	C6 Env 🖓
8K (267 × 390)	8K 🖓
16K (267 × 195)	16KD
16K (195 × 267)	16K 🔽
NCS	There is no tray.
**	The paper size is not selected.

♦ *3 Input Tray: Status

Status	Description
Normal	—
NoTray	There is no paper tray
PaperEnd	There is no paper in the paper tray

♦ *4 Output Tray: Name

Name	Description
Standard Tray	Output Tray
1-bin Shift Tray	1-bin Shift Sort Tray
Mailbox Tray 1-4	Mailbox output tray 1-4

♦ *5 Output Tray: Status

Status	Description
Normal	
PaperExist	There is paper in the output tray
OverFlow	Output tray is full of paper
Error	Other error

Printer Does Not Print

Possible Cause	Solutions
Is the power on?	Confirm that the cable is securely plugged into the power outlet and the printer.
	Turn on the power switch.
Does the On Line indica- tor stay on?	Press [On Line] so the indicator lights.
Does the Error indicator stay red?	Check the error message on the panel display and take the re- quired action.
Is paper loaded?	Load paper into the paper tray or on the Bypass Tray. See p.37 "Loading Paper and Other Media".
Can you print a configura- tion page?	If you cannot print a test page, it probably indicates a printer mal- function. You should contact your sales or service representative. See p.110 "List/Test Print Menu".
	If you can print a test page but cannot get the printer to print when you issue a print command from the computer, it probably means there is a problem with the computer.
	Note that large or complex data might take a long time to be print- ed.
Is the interface cable con- necting the printer to the computer connected se- curely?	Connect the interface cable properly. If there are any connectors or screws, confirm that they are fastened securely.
Are you using the correct interface cable?	The type of interface cable you should use depends on the compu- ter. Be sure to use the correct one.
	If the cable is damaged or worn, replace it with a new one.
Is the paper feed roller clean?	Clean the paper feed roller if it is dirty. See p.94 "Cleaning the Paper Feed Roller".

Possible Cause	Solutions
Is the Data In indicator blinking or lit after starting the print job?	If not blinking or lit, the data is not being sent to the printer.
	 If the printer is connected to the computer using the interface cable Make sure the following printer port settings are correct: For a parallel port connection, port LPT1 or LPT2 should be set.
	 For a USB port connection, port USB00 (n) ^{*1} should be set. For a IEEE 1394 (SCSI print) port connection, port 1394_00(n) ^{*1} should be set. *1 (n) is the number of printers connected.
	• Windows 95/98/Me
	 Click [Start], point to [Settings] and then click [Printers]. Click to select the icon of the printer. Next, on the [File] menu, click [Properties].
	 ③ Click the [Details] tab. ④ Check the [Print to the following port] box to confirm that the correct port is selected.
	• Windows 2000
	① Click [Start] , point to [Settings] and then click [Printers] .
	② Click to select the icon of the printer. Next, on the [File] menu, click [Properties].
	③ Click the [Port] tab.
	④ Check the [Print to the following port] box to confirm that the correct port is selected.
	Windows XP
	 Access the [Printers and Faxes] window from [Start] on the taskbar.
	② Click to select the icon of the printer. Next, on the [File] menu, click [Properties].
	③ Click the [Port] tab.
	④ Check the [Print to the following port(s).] box to confirm that the correct port is selected.
	 Windows NT 4.0 ① Click [Start], point to [Settings] and then click [Printers].
	 ② Click to select the icon of the printer. Next, on the [File] menu, click [Properties]. ③ Click the [Dett] to b
	 ③ Click the [Port] tab. ④ Check the [Print to the following port] box to confirm that the correct port is selected.
	Network Connection Contact your network administrator.

Possible Cause	Solutions
Do you print via a net- work?	Confirm that the "Ethernet" setting is correct from the control pan- el. See p.130 "Host Interface Menu".
	The setting governs the data transfer speed used by the Network Interface Board. Three options are available:
	Auto (default)
	• 100 Mbps
	• 10 Mbps
	For more information about the appropriate setting to use on your network, contact your network administrator.
If you use IEEE 1394, check	① Make sure the 1394 Interface Unit is installed properly.
for the followings.	② Make sure the IEEE 1394 cable is connected properly.
	③ Restart the computer. If the problem still exists when SCSI print is used with Win- dows 2000 and Windows XP, go to step ④.
	④ Disconnect all the IEEE 1394 cables from the computer.
	(5) If you uninstall the printer driver when the printer is connected to a computer with "SCSI print", the printer driver may not be uninstalled properly. To uninstall the driver properly, use the IEEE 1394 Printer Removal Utility on the CD-ROM that comes with the printer. Stored in: CD-ROM labeled "Operating Instructions"\DRIV-ERS\UTILITY\1394\
	🖉 Note
	 For more information about the IEEE 1394 Printer Removal Utility, see the README file in the same folder as the pro- gram.
	Restart the computer.
How is the signal strength when using the wireless LAN?	Check the signal strength from the Maintenance menu. If the sig- nal is weak, move to a place with better signal strength or remove objects that are possibly interfering with data transmission.
	The signal strength appears only in infrastructure mode. If you are using the ad hoc mode, the signal strength does not appear on the control panel. For more information about displaying the signal strength, see p.120 "Displaying the Signal Strength".

🔗 Note

□ If you cannot solve the problem by taking the preceding actions, contact your sales or service representative.

Other Printing Problems

Status	Possible Causes, Descriptions, and Solutions
The print side of the page is a hazy gray.	Adjust the image density.
	See p.101 "Making Printer Settings with the Control Panel".
	If paper is curled, correct it.
	If you continuously print data that contains extremely small amount of words or images in the printable area, the printed side of the page could be a hazy gray. Adjust the image den- sity. See p.101 "Making Printer Settings with the Control Panel".
	Shaking the toner cartridge after pulling out the toner seal can cause dirt on paper surfaces, toner spillage, or printer failure. If you have accidentally shaken the toner cartridge, print some pages (about 50 pages) until the dirt disappear.
Image quality varies when	Switch to Thick Paper mode.
printing on thick paper or on	• When toner is not fused enough, set it to "On".
OHP transparencies.	• When the image is blurred, set it to "".
	See p.101 "Making Printer Settings with the Control Panel".
Some parts of the print image	Make the image density darker.
are not clear.	See p.101 "Making Printer Settings with the Control Panel".
	If Toner Saving mode is selected using the control panel, the whole image gets lighter.
The print image is not clear.	Due to a sudden change in temperature, condensation might appear inside the printer, reducing print quality. If this oc- curs, when you move the printer from a cold room to a warmer room, do not use the printer until it acclimatizes to the temperature.
Nothing is printed on the paper.	Check if the tape of the toner cartridge is completely re- moved. Be sure to remove the tape completely when replac- ing the toner cartridge. See p.90 "Replacing the Toner Cartridge".
	 Note If the power switch is turned on with the tape still attached to the toner cartridge, the printer might be damaged.
Multiple pages are fed through the printer at once.	Clean the friction pad if it is dirty. See p.93 "Cleaning the Friction Pad".
	Remove all paper from the tray and fan it gently to get air be- tween the sheets. After that, load it back into the tray.
The image is printed on the re- verse side of the paper.	Set the paper the other way up.

Status	Possible Causes, Descriptions, and Solutions
Paper misfeeds occur frequent- ly.	Check the paper size settings. The size set with the paper size dial might be different from the actual paper size. Make the correct dial setting.
	See p.37 "Loading Paper and Other Media".
	Use the recommended paper. Avoid using curled, folded, wrinkled, perforated or glossy paper. See p.35 "Paper not supported by this printer".
	Clean the paper feed roller, friction pad and/or registration roller, if they are dirty. See p.94 "Cleaning the Paper Feed Roller".
	Thin paper, if printed on both sides, may curl up at the corners and get wrinkled and clogged. Select [Curl Prevention] [ON] from the [Maintenance] menu.
The control panel error message stays on after removing the mis- fed paper.	Open the front cover of the printer and then close it. See p.82 "Removing Misfed Paper".
Output are not delivered to the selected tray you require.	Check the paper size settings. The size selected with the pa- per size dial might be different from the actual paper size. Make the correct dial setting.
	See p.37 "Loading Paper and Other Media".
	When using the Bypass Tray, set the paper size using the control panel.
	See p.37 "Loading Paper and Other Media".
	When you are using a Windows operating system, the print- er driver settings override those set using the control panel. Set the desired output tray using the printer driver. See the driver's online Help file.
The printed image is different from the image on the computer.	When you use some functions, such as enlargement and re- duction, the layout of the image might be different from that shown in the computer display.
It takes too much time to resume printing.	The data is so large or complex that it takes time to process it. If the Data In indicator is blinking, the data processing is being done. Just wait until it resumes.
	Changing the paper feed direction may sometimes reduce the time to resume printing.
The image is printed in the wrong orientation.	Set the correct orientation under the "PCL Menu" with the control panel. See p.137 "PCL Menu".
	Confirm that the setting of orientation has been set in the application you use.
	Set the correct paper size and feed direction that matches tray settings on the RPCS printer driver.
Part of the image cannot be printed.	A paper size which is smaller than that selected in the appli- cation is used for printing. Load the correct size of paper.

Status	Possible Causes, Descriptions, and Solutions
Network configurations you have made do not become effec- tive.	Print a configuration page and check the network settings.
Printing from a Macintosh with the network standard model is slow.	Set the Ethernet speed of the machine to 10Mbps. If you want to use the machine with Macintosh at the Ethernet speed of 100Mbps, call your sales or service representative. See "Ethernet" in the Network Setup menu.

🖉 Note

 $\hfill\square$ If the problem cannot be solved, contact your sales or service representative.

Removing Misfed Paper

When a paper misfeed occurs, an error message appears on the panel display. The procedure you should follow to remove misfed paper depends on the location of the misfeed, which is indicated on the panel display.

A CAUTION:

• When removing misfed paper, do not touch the fusing section because it becomes very hot.

∰Important


Check the following points if paper continues to misfeed.

- Confirm that the setting of the paper size dial matches the size and feed direction of the paper loaded in the paper tray.
- If the friction pad or the paper feed roller is dirty, clean it. For more information, see p.93 "Cleaning the Friction Pad".
- Confirm that the toner cartridge is set correctly.
- □ If a paper misfeed still occurs, contact your sales or service representative.
- Forcefully removing misfed paper may cause paper to tear and leave scraps of paper in the printer.
- **D** Do not leave any scraps of paper in the printer.


When "Remove Misfeed Paper Tray" Appears

∰Important

- Forcefully removing misfed paper may cause paper to tear and leave scraps of paper in the printer. This might cause a misfeed and damage the printer.
- **1** Lift the paper tray slightly. Pull it out until it stops, and then remove the misfed paper.

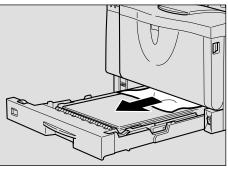


2 Carefully slide the paper tray into the printer until it stops.

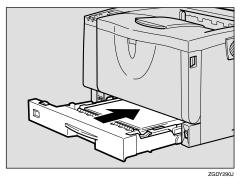

∰Important

Do not slide the paper tray in with force. If you do, the front and side guides might move. **3** Open the front cover by pushing the front cover release button, and then close it to reset the misfeed condition.

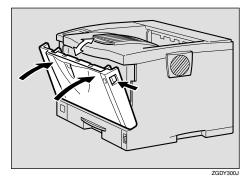


🖉 Note

- You can apply this procedure for both the paper tray and the optional Paper Feed Unit.
- □ To reset the misfeed condition, open and close the front cover, then the indicator will be off.

When "Remove Misfeed Internal Path/Open Front Cover" Appears

∰Important


- Forcefully removing misfed paper may cause paper to tear and leave scraps of paper in the printer. This might cause a misfeed and damage the printer.
- **1** Open the front cover by pushing the front cover release button.

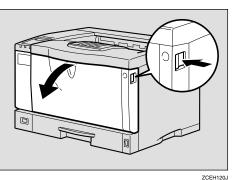


2 While lifting the front side of the toner cartridge, pull it out of the printer.

∰Important

- □ Be sure to put the toner cartridge on a stable, flat surface.
- Do not hold the toner cartridge upside down or stand it vertically.

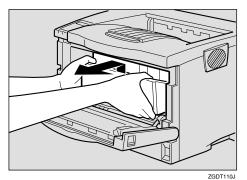


3 Pull out the misfed paper by holding both sides of paper. Be careful not to get toner dust on your hands or clothes.

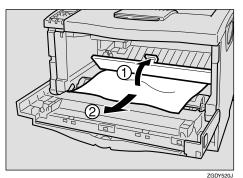


5


4 Holding the grips of the toner cartridge, insert it into the printer until it stops.

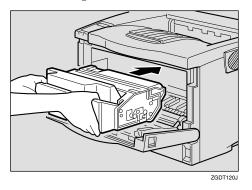

5 Push down the toner cartridge to settle it in appropriate position.

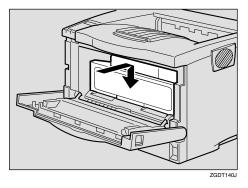

6 Close the front cover.

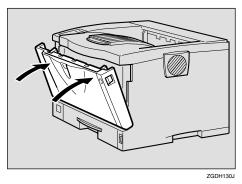

∰Important

If paper is fed from the Bypass Tray, be sure to remove all the paper from the Bypass Tray and close it before opening the front cover.

When "Remove Misfeed Paper Exit Cover" Appears


A CAUTION:

- When removing misfed paper, do not touch the fusing section because it becomes very hot.
- The fusing unit becomes very hot. When installing the new fusing unit, turn off the printer and wait about an hour. After that, install the new fusing unit. Not waiting for the unit to cool down can result in a burn.


∰Important

- Forcefully removing misfed paper may cause paper to tear and leave scraps of paper in the printer. This might cause a misfeed and damage the printer.
- If you installed the 1-bin Shift Sort Tray, slide the upper tray out from it. If you installed the Mailbox, slide the output tray into lower slide out from it.


The following procedures are example of Mailbox.

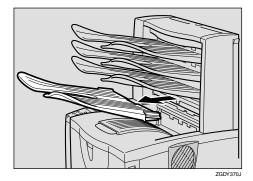


2 Open the paper exit cover.

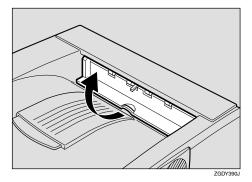


3 Remove the misfed paper.

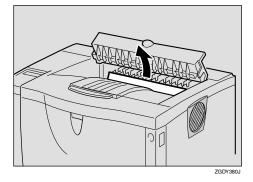


4 Close the paper exit cover until it clicks.

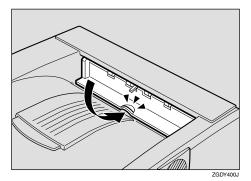


- **5** If the misfed paper is in the fusing unit, remove it.
 - Open the rear cover by pushing the two knobs.

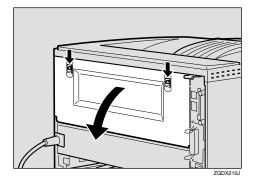

2 Remove the rear cover in a horizontal direction.

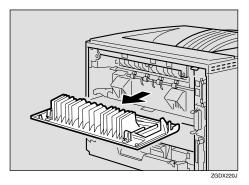


6 Lift the lock levers of the fusing unit as shown in the illustration.

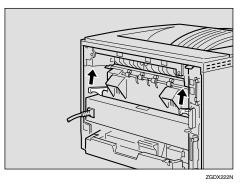


5

2 Pull the fusing unit out.

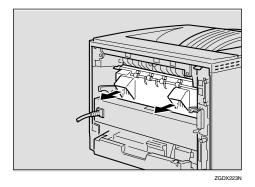


8 While holding the tab, remove the misfed paper.

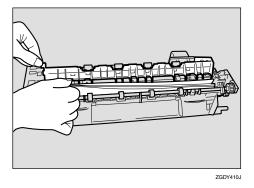


∰Important


- Do not touch the metal part of the fusing unit. It becomes very hot. Touching it could result in a burn.
- 9 Insert the fusing unit until it stops.

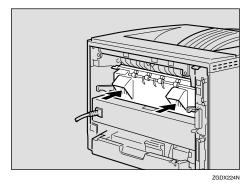


Push the lock levers of the fusing unit down until it clicks.

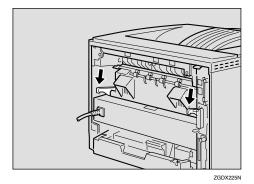

1 Insert the rear cover to the inside grooves on both sides of the printer in a horizontal direction.

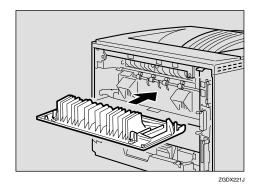

12 Close the rear cover.

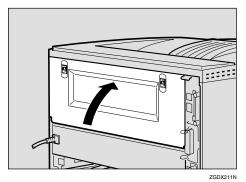

5

86

When "Remove Misfeed Duplex Unit" Appears

A CAUTION:


• When removing misfed paper, do not touch the fusing section because it becomes very hot.

 
∰Important


Forcefully removing misfed paper may cause paper to tear and leave scraps of paper in the Dupelx Unit. This might cause a misfeed and damage the printer.

1 Remove the misfed paper inside of the cover.


• Open the rear cover of the Duplex Unit.

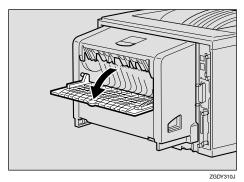




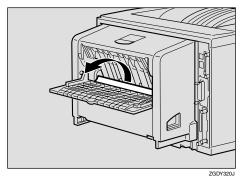

3 Close the rear cover of the Duplex Unit.

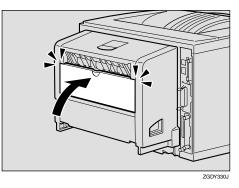


While lifting the lever (①), open the cover of the Duplex Unit (②).

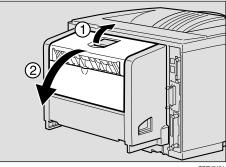


5

6 Remove the misfed paper.

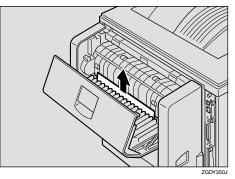


6 Close the cover of the Duplex Unit.

If the error message appears again, go to step **2**.

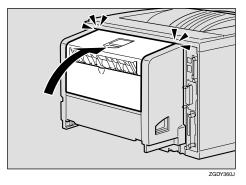


2 Pull the Duplex Unit out of the printer until it stops, and remove the misfed paper.

Push down the lever on the right side of the Duplex Unit
 (1) and pull it out until it stops
 (2).

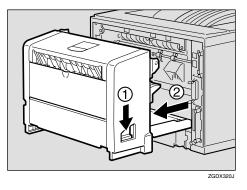


2 Lift the guide board inside the Duplex Unit, and remove the misfed paper.

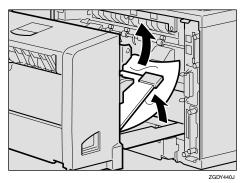

∰Important

- When A5D paper misfeeds, you might not be able to remove it by pulling the Duplex Unit out. In this case, pull the paper tray out and remove the paper.
- 3 While aligning the power cord with the groove of the left slide of the Duplex Unit, insert the Duplex Unit into back of the printer aligning the rails inside of the printer until it is connected.

If the error message appears again, the misfed paper might be left in the printer. Confirm that any torn paper scraps are not in the inside of the printer. For more information, see p.83 "When "Remove Misfeed Internal Path/Open Front Cover" Appears".

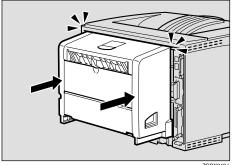


ZGDX240J


When "Remove Misfeed Mailbox" Appears

₿Important


□ Forcefully removing misfed paper may cause paper to tear and leave scraps of paper in the Mailbox. This might cause a misfeed and damage the printer.

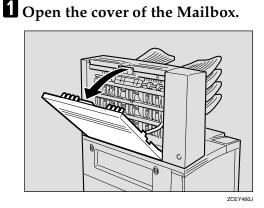

2 Remove the misfed paper.

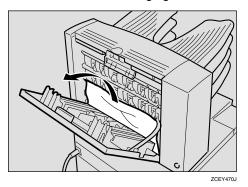

3 Close the cover of the Mailbox.

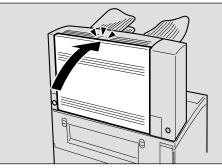



ZCEY480.

When "Remove Misfeed Upper **Tray Unit**" Appears

#Important

 
□ Forcefully removing misfed paper may cause paper to tear and leave scraps of paper in the 1-bin Shift Sort Tray. This might cause a misfeed and damage the printer.




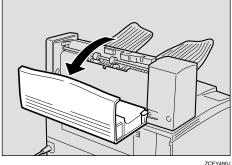




5

 

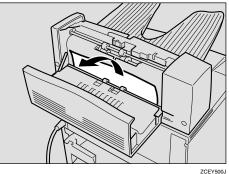

3 Close the upper tray cover.

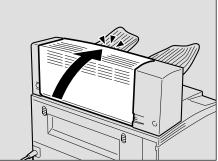

ZCEY510J

89

Replacing the Toner Cartridge

\land WARNING:

- Do not incinerate spilled toner or used toner. Toner dust might ignite when exposed to an open flame.
- Disposal can take place at our authorized dealer or at appropriate collection sites.
- If you dispose the used toner cartridges yourself, dispose of them according to your local regulations.

A CAUTION:

- Do not eat or swallow toner.
- Keep toner (used or unused) and toner cartridges out of reach of children.
- Our products are engineered to meet the highest standards of quality and functionality. When purchasing expendable supplies, we recommend using only those specified by an authorized dealer.


When "Replace Toner Cartridge" appears on the panel display, the toner is almost empty. Prepare a new toner cartridge. If the image density gets too light, replace the toner cartridge with a new one.

Important

Do not expose the toner cartridge to light for a long time. Do not leave the front cover open for a long time. If the toner cartridge is exposed to a light for a long time, the toner cartridge might be damaged and print quality might be reduced.

🖉 Note

- □ Do not stand or place the toner cartridge upside-down.
- □ The actual number of printed pages you get from a particular toner cartridge depends on the type and size of paper you are using, the contents of the print images, and printing environment conditions. All this means that a toner cartridge might require replacement sooner than the normal life described on p.164 "Consumables".
- **1** Open the front cover by pushing the front cover release button.

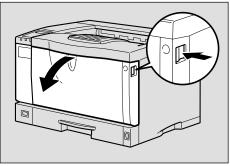


ZCEH120J


2 Be sure to put the toner cartridge on a stable, flat surface.

🖉 Note

□ Do not put the toner cartridge on an unstable or tilted surface.

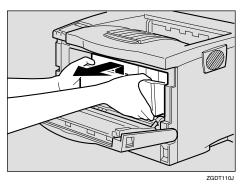


3 Wipe around the metallic registration roller by turning with a soft damp cloth.

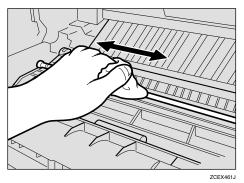

∰Important

- Do not use chemical cleaner or organic solvent such as thinner or benzene.
- **4** Take the new toner cartridge from the box.

5 Place the toner cartridge on a flat surface. Pull out the tape inside the unit horizontally while holding the cartridge with one hand as shown in the illustration.

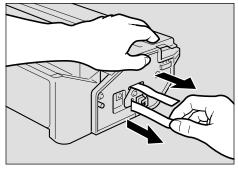


ZCET151J


5

🔗 Note


- Be sure to remove the tape completely before installing the new toner cartridge, otherwise the printer might be damaged.
- Keep the toner cartridge horizontal when pulling out the toner seal. Pulling out the toner seal with the cartridge upright or tilted can cause printer failure.
- Be careful not to get toner dust on your hands or clothes.
- Do not shake or shock the toner cartridge after pulling out the toner seal to avoid dirt on paper surfaces, toner spillage, or printer failure.
- 6 Holding the grips of the cartridge, insert it into the printer until it stops.

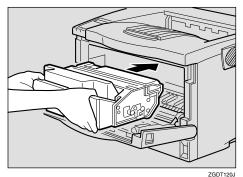

2 Push down the toner cartridge to settle it in appropriate position.

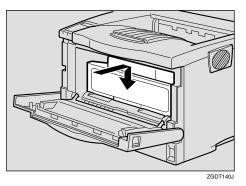

8 Close the front cover.

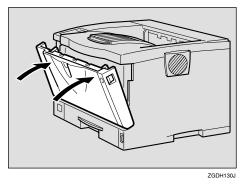

∰Important


Do not close the front cover with force. If you cannot close the cover easily, pull out the toner cartridge from the printer and insert it again. After that, close the front cover again.

Cleaning and Adjusting the Printer


Cleaning the Friction Pad

If the friction pad is dirty, a multifeed or a misfeed might occur. In this case, clean the pad as follows:

1 Lift the paper tray slightly then pull it out until it stops, and while lifting the front side of the tray, pull it out of the printer.

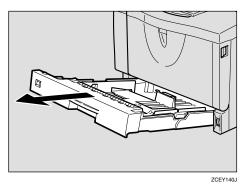


- **2** Place the tray on a flat surface. When there is paper in the tray, remove paper.
- **3** Wipe the brown part of the friction pad with a soft damp cloth. After that, wipe it with a dry cloth to remove the water.

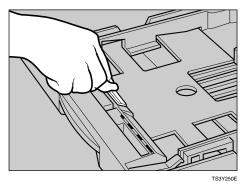

∰Important

Do not use chemical cleaner or organic solvent such as thinner or benzene. 4 Load paper into the paper tray with the print side up. Carefully slide the paper tray into the printer until it stops.

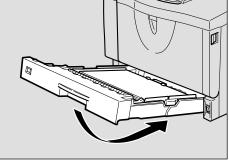

ZCEY150J

5

∰Important

Do not slide the paper tray in with force. If you do, the front and side guides might move.

🖉 Note

- If misfeeds or multi-feeds of paper occur after cleaning the friction pad, contact your sales or service representative.
- Follow the same procedure to clean the friction pad of the optional Paper Feed Unit and the Envelope Feeder Unit.

Cleaning the Paper Feed Roller

 
If the paper feed roller is dirty, a misfeed might occur. In this case, clean the roller as follows:

 
A CAUTION:

- When lifting the printer, use the grips on both sides of the printer, otherwise the printer might fall and cause personal injury.
- When you move the printer, unplug the power cord from the wall outlet to avoid a fire or an electric shock.
- When you pull out the plug from the socket, grip the plug to avoid damaging the cord and causing a fire or an electric shock.


∰Important

- The following are examples of cleaning the paper feed roller on the paper tray.
- You can clean the paper feed roller on the optional Paper Feed Unit by following the procedures below. The paper feed roller on the optional Paper Feed Unit differs from the one on the paper tray. Confirm the type of paper feed roller you are installing.






2 Pull out the plug from the socket. Remove all the cables from the printer. **3** Lift the paper tray slightly then pull it out until it stops, and while lifting the front side of the tray, pull it out of the printer.

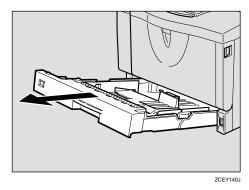


4 Move the printer to the edge of a stable table or desk.

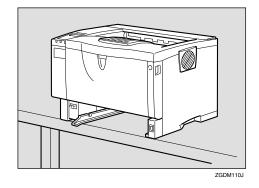

∰Important

- Do not put the printer on an unstable or tilted surface.
- If the printer is equipped with the optional Paper Feed Unit, do not move the printer and unit together as they are not securely attached.
- When lifting the printer, confirm that the optional Paper Feed Unit is not attached to the printer.


5 Slide the green lock lever to the left (①), so that the paper feed roller can be released (②).

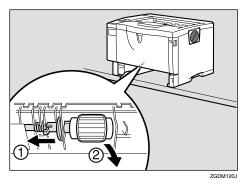

6 Wipe the rubber part of the roller with a soft damp cloth. After that, wipe it with a dry cloth to remove the water.


∰Important

- Do not use chemical cleaner or organic solvent such as thinner or benzene.
- While sliding the green lock lever to the left (①), set the paper feed roller to its original position (②). After that, return the green lock lever to its original position (③).

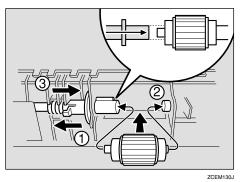

🖉 Note

Confirm that the green lock lever secures the roller correctly by confirming that the roller rotates smoothly. 8 Move the printer to the place where it was placed. Carefully slide the paper tray into the printer until it stops.

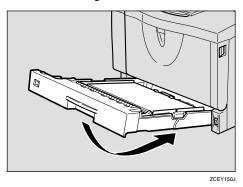

∰Important

- Do not slide the paper tray in with force. If you do, the front and side guides might move.
- Insert the plug of the power cord into the wall socket securely. Connect all the cables that were removed in step 2.
- **10** Turn on the power switch.

🖉 Note

□ Follow the same procedure to clean the paper feed roller of the optional Paper Feed Unit.

5

Cleaning the Registration Roller

If the registration roller is dirty, a misfeed might occur. In this case, clean the roller as follows:


\land WARNING:

• Be sure to turn off the power switch and wait for about 30 minutes before cleaning the registration roller. Not waiting for the printer to cool down can result in a burn.

 The inside of the machine could be very hot. Do not touch the parts with a label indicating "A" (means hot surface). Touching "A" (means hot surface) could result in a burn.


1 Turn off the power switch.

2 Open the front cover by pushing the front cover release button.

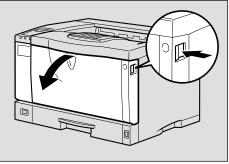


ZCEH120J

Pull the toner cartridge out of the printer by holding the grips of the cartridge.

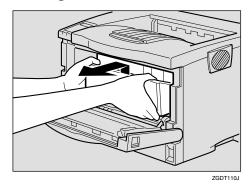


🖉 Note

- Do not hold the toner cartridge upside down or stand it vertically.
- Do not put the toner cartridge on an unstable or tilted surface.
- 4 Wipe around the metallic registration roller by turning with a soft damp cloth.

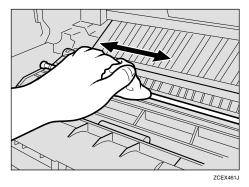



Important


Do not use chemical cleaner or organic solvent such as thinner or benzene. 5 Holding the grips of the toner cartridge, insert it into the printer until it stops.

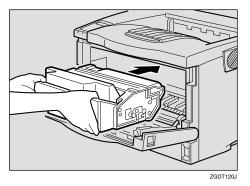

 6 Push down the toner cartridge to settle it in appropriate position.

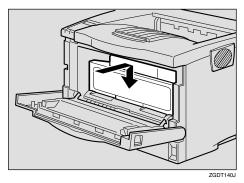



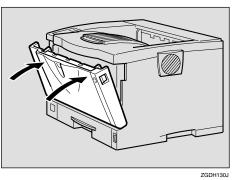

∰Important

Carefully close the front cover. If you cannot close the cover easily, pull the toner cartridge out of the printer and insert it again. After that, close the front cover again.


Adjusting the Image Density

You can adjust the image density when the print side of the page is a shaded or print image is too light.

∰Important


- Extreme settings may create printouts that appear dirty.
- Image density settings should be made from the application or the printer driver whenever possible.

1 Press [Menu].

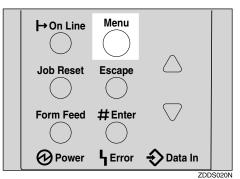

"Menu" appears on the panel display.

2 Press [▲] or [▼] to display the "Maintenance" menu, and then press [Enter #].

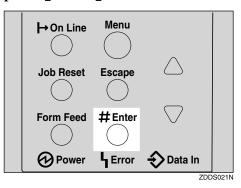


The following message appears on the panel display.

Maintenance: Ima≋e Density

8 Turn on the power switch.

 B Press [Enter #].




Press [▲] or [▼] to set the image density value.

🖉 Note

- To maintain a darker image under high volume printing conditions, we highly recommended that you select 3 from the control panel.
- You can adjust the image density in seven steps from -3 to +3. Increasing the value makes the printouts darker and decreasing the value makes the printouts lighter.

5 Press [Enter #].

6 Press [On Line].

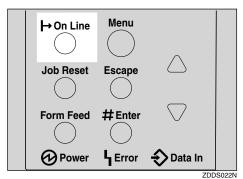

"Ready" appears on the panel display.


Ready

Adjusting the Registration of the Trays

You can adjust the registration of each tray. The vertical adjustment is used for all trays. Normally, you need not update the registration. But when the optional Paper Feed Unit or the Duplex Unit is installed, updating the registration is useful in some case.


The following procedure describes how to adjust Tray 1. You can use the same procedure to adjust the other tray as well.


Press [Menu].

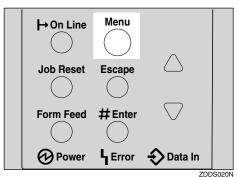

"Menu" appears on the panel display.

 2 Press [▲] or [▼] to display the "Maintenance" menu, and then press [Enter #].

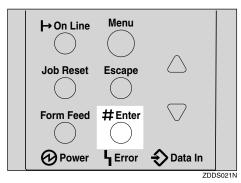




Press [▲] or [▼] to display "Registration", and then press [Enter #].

The following message appears on the panel display.

ReSistration: Prt. Test Sheet


4 Print the test sheet to preview the settings you have made.

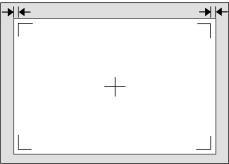

ZCEX480.

After confirming that "Prt. Test Sheet" is on the panel display, press [Enter #].

 The following message appears on the panel display.



2 Press [▲] or [▼] to display the tray you want to adjust, and then press [Enter #] to print the test sheet. Wait for a few seconds.

The following message appears on the panel display.

Printing...

5 Adjust the registration by confirming the position of the printed image of the test sheet.

The following is an example of adjusting the margin on the test sheet equally.

Press [▲] or [▼] to display "Adjustment", and then press [Enter #].

The following message appears on the panel display.


Adjustment: Horiz.: Tray 1

Press [▲] or [▼] to display the tray you want to adjust, and then press [Enter #].

The following message appears on the panel display.

Horiz.: Tray: (-4.0 +4.0) 0

③ Press [▲] or [▼] to set the digit of the registration value (mm).

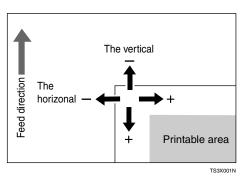

🖉 Note


- Increase the value to shift the print area to the positive direction, and decrease to shift to the negative direction.
- □ Pressing [▲] or [▼] makes the value increase or decrease by 0.5 mm step.

Press [OK].

6 Print the test sheet to check the settings you have made.

7 Repeat steps **3** and **4** to adjust the registration if necessary.

8 Press [On Line].

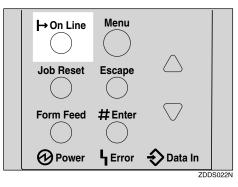

"Ready" appears on the panel display.

Ready

6. Making Printer Settings with the Control Panel

Menu Chart

This section describes how to change the default settings of the printer and provides information on the parameters included in each menu. Some items in the menu appear only when certain options are installed.

Category	Function menu	
Sample Print $^{*1} \Rightarrow p.51$	Select Action / Error File(s)	
Locked Print $^{*1} \Rightarrow p.56$	Select Action / Error File(s)	
Paper Input \Rightarrow p.106	Bypass Size	
	Tray Paper Size	
	Paper Type	
	Tray Locking	
	Tray Priority	
List/Test Print \Rightarrow p.110	Config. Page	
	Menu List	
	PS Font List	
	PCL Config.Page	
	Hex Dump	
Maintenance \Rightarrow p.114	Image Density	
	Registration	
	Curl Prevention	
	ROM Update *2	
	HDD Format	
	WL.LAN Signal *3	
	WL.LAN Defaults	
	Key Repeat	
	Menu Protect ^{*4}	
	Series Prnt.Job *4	
	Ppr.Size Error *4	

Category	Function menu
System \Rightarrow p.124	MisfeedRecovery
	Prt. Err Report
	Auto Continue
	Memory Overflow
	Sub Paper Size
	Page Size
	Edge-Edge Print
	Duplex *5
	Output Tray
	Job Separation
	Energy Saver
	Memory Usage
	Unit Of Measure
	Edge Smoothing
	Resolution
	Toner Saving
	Spool Printing
Host Interface ⇒ $p.130$	I/O Buffer
	I/O Timeout
	Network Setup
	IEEE 1394 Setup *6
	IEEE 802.11b *7
	USB Setting ^{*4}
PCL Menu⇒ p.137	Orientation
	Form Lines
	Font Source
	Font Number
	Point Size
	Font Pitch
	Symbol Set
	Ext. A4 Width
Language⇒ p.141	


^{*1} The "Sample Print" menu and the "Locked Print" menu appear only when the optional Hard Disk Drive is installed.
*2 ROM Update is not currently used.

- *3 The "WL.LAN Signal" menu appears only when "IEEE 802.11b" is selected in "LAN Type" in the Host Interface menu.
- ^{*4} While the printer is **On Line**, press **[Enter #]**, and then press **[Escape]**. Finally, press **[Menu]**. You can access the "Menu Protect", "Series Prnt.Job", "Ppr.Size Error", and "USB Setting" on the panel display.
- ^{*5} The "Duplex" menu appears only when the optional Duplex Unit is installed.
 ^{*6} The "IEEE 1394 Setup" menu appears only when the optional 1394 Interface Unit is installed.
- *7 The "IEEE 802.11b Setup" menu appears only when the optional 802.11b Interface Unit is installed.

6

Accessing the Main Menu

Press [Menu], and "Menu" appears on the panel display.

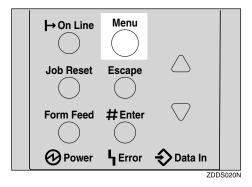


This menu shows the following nine items which can be displayed one by one pressing $[\blacktriangle]$ or $[\blacktriangledown]$.

- Sample Print
- Locked Print
- Paper Input
- List/Test Print
- Maintenance
- System
- Host Interface
- PCL Menu
- Language


🖉 Note

- "Sample Print" and "Locked Print" appear only when the optional Hard Disk Drive is installed.
- □ **(**▼**)**: Press to go to the next page.
- \Box [\blacktriangle]: Press to go back to the previous page.

□ After making the printer settings, be sure to return to the previous menu by pressing **[Escape]**.

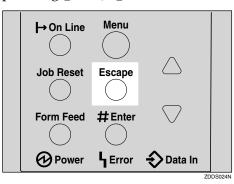

□ After making the printer settings, press **[On Line]** to return to the "Ready" condition.

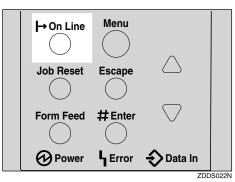

□ The revised settings are not canceled even if the power switch is turned off.

Paper Input Menu

There are five menu items in the "Paper Input" menu.

- Bypass size
- Tray Paper Size
- Paper type
- Tray Locking
- Tray Priority

For more information about loading paper in the tray, see p.37 "Loading Paper and Other Media".


Paper Input Parameters

Menu	Description
Bypass Size	The paper size for the Bypass Tray.
	For more information about paper sizes that can be set in the By- pass Tray, see p.25 "Paper and Other Media Supported by This Printer".
Tray Paper Size	The paper size for each tray.
	When you select sizes that are not indicated on the paper size dial of Tray 1, Tray 2 or Tray 3, you should set the dial to " \bigstar " and then select the paper size here.
	Tray 1 For more information about paper sizes that can be set in the Tray 1, see p.25 "Paper and Other Media Supported by This Printer".
	Tray 2 For more information about paper sizes that can be set in the Tray 2, see p.25 "Paper and Other Media Supported by This Printer".
	Tray 3 For more information about paper sizes that can be set in the Tray 3, see p.25 "Paper and Other Media Supported by This Printer".
	NoteOnly the installed trays appear on the panel display.

Menu	Description			
Paper Type	If you use different kinds of paper, you set the paper type for Tray 1, Tray 2, Tray 3 or Bypass Tray.			
	Tray 1, Tray 2, Tray 3 Plain Paper, Recycled Paper, Special Paper, Color Paper, Let- terhead, Preprinted, Prepunched, Bond paper, Cardstock			
	Bypass Tray Plain Paper, Recycled Paper, Special Paper, Color Paper, Let- terhead, Preprinted, Prepunched, Labels, Bond paper, Card- stock, Transparency, Thick Paper			
	SP Note			
	Default : Plain Paper			
	Only the installed trays appear on the panel display.			
Tray Locking	If you use different kinds of paper, you can lock a tray to prevent printing on wrong paper such as letterhead or colored paper. When "Auto Select" is selected in the Paper Source selections from the printer driver, the locked tray will not be used. Tray 1, Tray 2, Tray 3, Bypass Tray			
	Ø Note			
	Only the installed trays appear on the panel display.			
	□ You cannot lock multiple trays.			
	If you want to use the locked tray, you must select the tray from the printer driver.			
	When a locked tray is selected from the printer driver, the printer does not search for another tray.			
Tray Priority	You can set priority tray for paper feed when "Auto tray Selected" is selected in the Paper Source selections from the printer driver. When printing from DOS, the tray selected here is used when no tray is selected for a print job.			
	Tray 1, Tray 2, Tray 3, Bypass Tray			
	Service Note			
	Default : Tray 1			
	 Only the installed trays appear on the panel display. 			
	It is recommended that you load paper of the size and direc- tion you most frequently use in the tray selected with "Tray Priority".			

Changing the Paper Input Menu

1 Press [Menu].

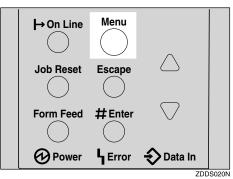


"Menu" appears on the panel display.

2 Press **[▲]** or **[▼]** to display the "Paper Input" menu.

ľ

Menu: Paper Input

B Press [Enter #].

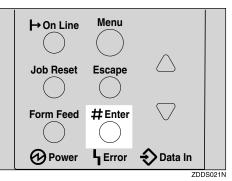

Press [▲] or [▼] to display "Tray Priority".


Paper Input: Tray Priority

5 Press [Enter #].

The following message appears on the panel display.

Tray Priority: *Tray 1 **6** Press **[A]** or **[V]** to select the tray type you want to use.

- **7** Press [Enter #]. Wait for a few seconds.
- 8 Press [On Line].

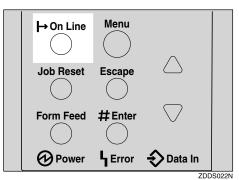

"Ready" appears on the panel display.

Ready

List/Test Print Menu

There are five menu items in the "List/Test Print" menu.

- Config. Page
- Menu List
- PS Font List
- PCL Config.Page
- Hex Dump

List/Test Print Parameters


Menu	Description
Config. Page	You can print the current configuration of the printer. See p.110 "Printing a Configuration Page".
Menu List	You can print the Menu List which shows the function menus of this printer.
PS Font List	You can print the current configuration and installed PS font list of PostScript.
PCL Config.Page	You can print the current configuration of PCL.
Hex Dump	You can print the data sent by the computer using the Hex Dump mode.

Printing a Configuration Page

₽ Reference


For more information, see p.112 "Interpreting the Configuration Page".

1 Press [Menu].

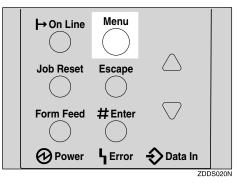


"Menu" appears on the panel display.

 2 Press **[▼]** or **[▲]** to display the "List/Test Print" menu.



→ On Line Menu

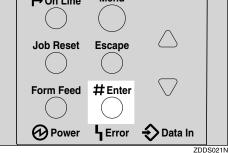

The following message appears on the panel display.

```
List/Test Print:
Confi§. Pa§e
```

4 Press [Enter #].

The following message appears on the panel display.


```
Printinë...
```

The configuration page will be printed in a short time.

∰Important

If you cannot print a configuration page correctly, check for an error message on the panel display. For more information about error messages, see p.61 "Error & Status Messages on the Control Panel".

5 Press [On Line].

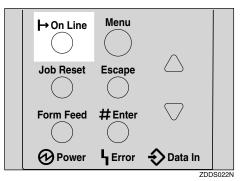

"Ready" appears on the panel display.

Ready

Interpreting the Configuration Page

System Reference

Printer ID

Shows the serial number assigned to the board by its manufacturer.

Firmware Version

- Firmware Shows the version number of the printer firmware.
- Engine Shows the version number of the printer engine.
- NCS

Shows the version number of the Network interface.

Pages Printed

Shows the total number of pages printed by the printer to date.

Total Memory

Shows the total amount of memory (SDRAM) installed on the printer.

Printer Language

Shows the version number of the printer driver language.

Controller Option

The item(s) appears when the controller option(s) is installed.

Options

Shows the optional trays that you installed.

112

6

Paper Input

Shows the settings made under the "Paper Input" menu.

✓ Reference

For more information, see p.106 "Paper Input Menu".

Maintenance

Shows the settings made under the "Maintenance" menu.

For more information, see p.114 "Maintenance Menu".

System

Shows the settings made under the "System" menu.

For more information, see p.124 "System Menu".

PCL Menu

Shows the settings you made under the "PCL Menu".

For more information, see p.137 "PCL Menu".

Host Interface

Shows the settings you made under the "Host Interface" menu.

When DHCP is active on the network, the actual IP Address, Subnet Mask and Gateway Address appear in parentheses on the configuration page.

For more information about "Host Interface" menu, see p.130 "Host Interface Menu".

Interface Information

Shows the interface information.

Error Log

Shows the log of printer errors.

6

Maintenance Menu

There are 11 menu items in the "Maintenance" menu.

- Image Density
- Registration
- ROM Update
- Curl Prevention
- HDD Format
- WL.LAN Signal
- WL.LAN Defaults
- Key Repeat
- Menu Protect
- Series Prnt.Job
- Ppr.Size Error

🖉 Note

□ "HDD Format" appears only when the optional Hard Disk Drive is installed. For more information, see "*Hard Disk Drive Type 2600*" in the Setup Guide.

Maintenance Menu Parameters

Menu	Description	
Image Density	You can select the print image density.	
	-3 to 3	
	\mathcal{P} Reference	
	For more information, see p.97 "Adjusting the Image Densi- ty".	
Registration	Prt. Test Sheet	
	You can print the registration test sheet. Tray 1, Tray 2, Tray 3, Bypass Tray, Duplex backside	
	🖉 Note	
	Default : Tray 1	
	Only the installed trays appear on the panel display.	
	 Adjustment You can select the start position for printing on a page. Horiz.: Tray 1, Horiz.: Tray 2, Horiz.: Tray 3, Horiz.: Bypass, Horiz.: Dup.Back, Vert.: All Trays, Vert.: Dup.Back -4 to 4 	
	🖉 Note	
	Default : Horiz.: Tray 1	
	The registration value is not a default.	
	Only the installed trays appear on the panel display.	
	₽ Reference	
	For more information, see p.98 "Adjusting the Registration of the Trays".	
Curl Prevention	You can control the fuser temperature to prevent paper from curl- ing.	
	Ø Note	
	Default: Off	
	Use this mode only when paper misfeed occurs frequently during duplex printing.	
ROM Update	This menu is not currently used.	
HDD Format	After installing the Hard Disk Drive, format it.	
	 Note This menu appears only when the optional Hard Disk Drive is installed. 	
	Reference For more information about formatting the Hard Disk Drive, see p.119 "Formatting Hard Disk Drive Type 2600".	

Menu	Description
WL. LAN Signal	You can check the signal strength when using the wireless LAN.
	Reference For more information about displaying the signal strength, see p.120 "Displaying the Signal Strength".
WL. LAN Defaults	You can reset the wireless LAN settings to the default.
Key Repeat	You can scroll through the menu by holding this key down.
	NoteDefault: On
Menu Protect ^{*1}	 This procedure lets you protect menu settings against accidental changes. It makes it impossible to change the menu settings you make with the normal procedure unless you perform the required key operation. In a network environment, protecting settings restricts who can change menu settings to network administrators. Level 1 Level 2 Off
Series Prnt.Job *1	You can print series of print jobs without time intervals between them when jobs are sent from the same computer, PDL, and interface.
	 Default: On When the Job Reset key is pressed, all jobs sent to the machine will be canceled.
Ppr.Size Error *1	You can select whether to have an error report printed when the paper size setting for the tray differs from the actual size of the pa- per in the tray. You can also select whether to have an error mes- sage displayed when feeding paper from the tray.
	 Note Default: Do not detect When it is "Detect", it prints with the paper size that was set when the error message appeared.


*1 While the printer is Online, press [Enter #], and then press [Escape]. Finally, press [Menu]. You can access the "Menu Protect", "Series Prnt.Job" and "Ppr. Size Error" menu on the panel display.

Changing the Maintenance Menu

Protecting the menus

1 Check if the On Line indicator is on. If not, press [On Line] to enter the "Ready" condition.

2 Press [Enter #], then [Escape], and then [Menu].

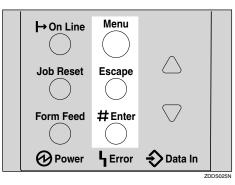

"Menu" appears on the panel display.

B Press [▲] or [▼] to display the "Maintenance" menu, and then press [Enter #].

The following message appears on the panel display.

```
Maintenance:
Imaŝe Density
```

4 Press [▲] or [▼] to display "Menu Protect".

Maintenance: Menu Protect

5 Press [Enter #].


The following message appears on the panel display.

```
Menu Protect:
*Off
```

6 Press [▲] or [▼] to select the levels desired, and then press [Enter #]. Wait for a few seconds.

6

7 Press [On Line].

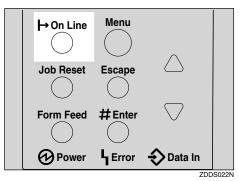

"Ready" appears on the panel display.

	Ready				
--	-------	--	--	--	--

Canceling the protection

Check if the On Line indicator is on. If not, press [On Line] to enter the "Ready" condition.

2 Press [Enter #], then [Escape], and then [Menu].

"Menu" appears on the panel display.

B Press [▲] or [▼] to display "Maintenance" menu, and then press [Enter #]. The following message appears on the panel display.

```
Maintenance:
Ima≋e Density
```

- Press [▲] or [▼] to display "Menu Protect", and then press [Enter #].
- Press [▲] or [▼] to display "Off", and then press [Enter #]. Wait for a few seconds.

6 Press [On Line].

"Ready" appears on the panel display.

Formatting Hard Disk Drive Type 2600

If you are formatting the Hard Disk Drive for the first time, follow the procedures below using the control panel.

1 Press (Menu).

"Menu" appears on the panel display.

2 Press **[▲]** or **[▼]** to display "Maintenance" menu.

Menu: Maintenance

3 Press [Enter #].

The following message appears on the panel display.

```
Maintenance:
Imaše Density
```

Press [▲] or [▼] to display "HDD Format".

Maintenance: HDD Format

5 Press [Enter #].

The following message appears on the panel display.

```
HDD Format:
Press# to Start
```

6 Press [Enter #].

∰Important

Do not turn off the printer while formatting the Hard Disk Drive. Turning off the printer while formatting the Hard Disk Drive can damage the Hard Disk Drive.

If you successfully format the Hard Disk Drive, the following message appears on the panel display.


```
Completed
Restart Printer
```

7 Turn off the power switch, and then turn it back on.

Displaying the Signal Strength

If you need to check the IEEE 802.11b (Wireless LAN) signal, select "WL.LAN Signal" in the "Maintenance" menu.

1 Press (Menu).

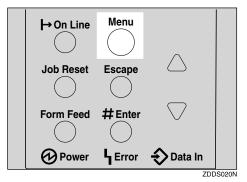


"Menu" appears on the panel display.

2 Press **[▼]** or **[▲]** to display the "Maintenance" menu.



B Press [Enter #].

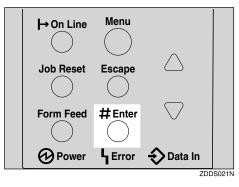

The following message appears on the panel display.




4 Press 【▼】 or 【▲】 to display "WL.LAN Signal".

Maintenance: WL.LAN Si§nal

5 Press [Enter #].

One of the following messages appears on the panel display.

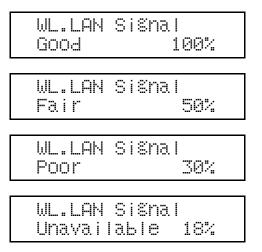


🖉 Note

- If "WL.LAN Signal" is not displayed, "IEEE 802.11b" has not been selected for "LAN Type" in "Network Setup" of the Host Interface menu. Select "IEEE 802.11b" for "LAN Type", and then check the "WL.LAN Signal" in the Maintenance menu again.
- □ If "Ad hoc" in "Comm. Mode" of "IEEE 802.11b" in the Host Interface menu is selected, you cannot check the signal. Select "Infrastructure" and then check it again.
- Every time you press **[Enter #]**, the signal is updated.
- □ The signal is indicated as "Good" if the signal strength is 76-100%, "Fair" if the strength is 41-75%, "Poor" if the strength is 21-40%, and "Unavailable" if the strength is 0-20%. If the signal is unstable or unavailable, remove obstacles or move the printer to a place where the signal can be received.
- Using wireless devices or microwave sources near the printer might affect the signal.


6 Press [Escape].

6

7 Press [On Line].

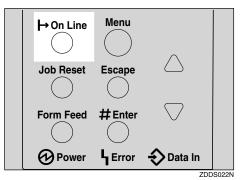

"Ready" appears on the panel display.

 


Resetting the IEEE 802.11b (Wireless LAN) Settings

If you need to reset the wireless LAN setting, select "WL.LAN Defaults" in the Maintenance menu.

🖉 Note

□ The four items that can be reset in "IEEE 802.11b" of the Host Interface menu are "Comm.Mode", "Channel", "Trans. Speed", and "WEP Settings". Other items that can be reset are the SSID settings, the WEP key settings, and the wireless LAN settings that can be made with telnet.

Press [Menu].

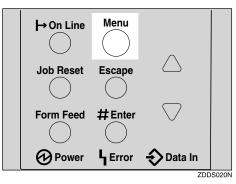


"Menu" appears on the panel display.

2 Press **[▼]** or **[▲]** to display the "Maintenance" menu.

Menu: Maintenance

3 Press [Enter #].

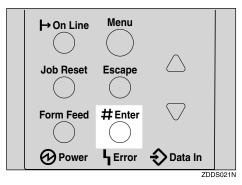

The following message appears on the panel display.

Maintenance	:	
Imaŝe Dens	İ	ty

Press **[▼]** or **[▲]** to display "WL.LAN Defaults".

Maintenance: WL.LAN Defaults

5 Press [Enter #].

```
WL.LAN Defaults
Reset->Defaults?
```

6 Press [Enter #].

The following message appears on the panel display.

```
Defaults reset
```

The wireless LAN setting value is reset.

"Ready" appears on the panel display.

Ready

System Menu

There are 17 menu items in the "System" menu.

- MisfeedRecovery
- Prt. Err Report
- Auto Continue
- Memory Overflow
- Sub Paper Size
- Page Size
- Edge-Edge Print
- Duplex
- Output Tray
- Job Separation
- Energy Saver
- Memory Usage
- Unit Of Measure
- Edge Smoothing
- Resolution
- Toner Saving
- Spool Printing

System Parameters

Menu	Description
MisfeedRecovery	 You can select whether Misfeed Recovery is enabled. When it is on, printing restarts after the misfed paper has been cleared. On Off Ø Note Default: On
Prt. Err Report	 You can select whether or not to have an error report printed when a printer error or memory error occurs. On Off Note Default: Off


Menu	Description		
Auto Continue	 You can set whether Auto Continue is enabled. When it is on, printing continues after a system error occurs. Off 0 minute 1 minute 5 minutes 10 minutes 15 minutes Ø Note Default: Off When it is on and certain types of error occur, the current job might be canceled, and the next job started automatically. 		
Memory Overflow	 You can select whether the memory overflow error report is printed when the data is too large and cannot be processed. Not Print Error List Note Default: Not Print 		
Sub Paper Size	 You can select whether the printer automatically selects the paper tray containing paper of the specified size. Off Auto Note Default: Off 		
Page Size	You can specify the default paper size. 11 x 17, 8 1/2 x 14, 11 x 8 1/2, 5 1/2 x 8 1/2, 7 1/4 x 10 1/2, 8 x 13, 8 1/2 x 13, 8 1/4 x 13, A3, B4, A4, B5, A5, A6, 8K, 16K, 4 1/8 x 9 1/2, 3 7/8 x 7 1/2, C5 Env, C6 Env, DL Env, Custom Size ⊘ Note □ Default: 11 x 8 1/2		
Edge-Edge Print	 You can print on the complete area of an A4 sheet leaving no border on any edge. Note Default: Off 		
Duplex	 You can select whether you want to print on both sides of each page. Off Short Edge Bind Long Edge Bind Mote Default: Off This menu appears only when the optional Duplex Unit is installed. 		

Menu	Description
Output Tray	You can select the default output tray. When you select "Auto Tray Sw.", the printer automatically changes to another output tray if an output tray becomes full. This function is available only when the Mailbox or the 1-bin Shift Sort Tray is installed.
	Standard Tray, Mailbox Tray 1, Mailbox Tray 2, Mailbox Tray 3, Mailbox Tray 4, Upper Tray, Auto Tray Sw.
	S Note
	 Default: Standard Tray Only the installed trays appear on the panel display.
Job Separation	You can enable Job Separation.
	• On
	• Off
	I Note
	Default: Off
	 This menu appears only when the optional 1-bin Shift Sort Tray is installed.
Energy Saver	You can set how many minutes the printer waits before switching to Energy Saver mode. Energy Saver mode reduces electric power consumption. On, Off
	1 minute, 5 minutes, 15 minutes, 30 minutes, 45 minutes, 60 minutes
	SP Note
	Default: On
	 Default: 30 minutes If there is an error with the printer, the printer will not switch
	If there is an error with the printer, the printer will not switch to Energy Saver mode.
	When the printer switches to Energy Saver mode, the Power indicator turns off while the On Line indicator stays on.
Memory Usage	 You can select memory to be used from "Font Priority" or "Frame Priority" according to the paper size, resolution or printer lan- guage. Font Priority This setting uses memory for registering fonts. Frame Priority This setting uses memory for high speed printing
	This setting uses memory for high speed printing. Note
	 Default: Frame Priority
	₽ Reference
	For more information, see p.153 "Memory Capacity and Paper Size".
Unit Of Measure	You can select "mm" or "inch" for the custom paper sizes.

Menu	Description
Edge Smoothing	You can set whether Edge Smoothing is enabled. When it is on, jagged lines appear more smoothly. Set it to off when the print image contains fine gradation in tone.
	• On
	• Off
	SP Note
	 Default: On If "Top or Courts of the "On" "Edge Streagthing" is impared over if
	If "Toner Saving" is "On", "Edge Smoothing" is ignored even if it is "On".
Resolution	You can set the print resolution in dots per inch.
	♦ PCL 300 dpi, 600 dpi
	♦ PS 300 dpi, 600 dpi, 1200 dpi
	TIFF 200 dpi, 300 dpi, 400 dpi, 600 dpi, 1200 dpi
	Default: 600 dpi
Toner Saving	You can select whether or not Toner Saving is enabled.
	OnOff
	Note
	Default: Off
	If "Toner Saving" is "On", "Edge Smoothing" is ignored even if it is "On".
Spool Printing	You can select whether all of the print data is spooled to the Hard Disk Drive before printing.
	OnOff
	Note
	Default: Off
	 Spooling stores the print job sent by a computer temporarily in the printer, transfers the print job, and then prints it.
	This menu appears only when the optional Hard Disk Drive is installed.

Changing the System Menu

1 Press [Menu].

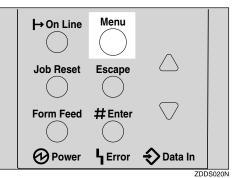


"Menu" appears on the panel display.

2 Press **[▲]** or **[▼]** to display the "System" menu.

Menu:	
System	

B Press [Enter #].

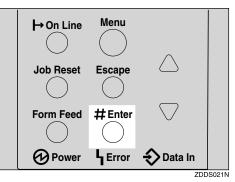

The following message appears on the panel display.

System: MisfeedRecovery

Press [▲] or [▼] to display "Energy Saver".

System: Enersy Saver

5 Press [Enter #].

The following message appears on the panel display.

Enersy Saver: E.Saver On/Off

6 Press **[▲]** or **[▼]** to display "E. Saver Timer".

```
Eneršy Saver:
E. Saver Timer
```

Press [Enter #].

The following message appears on the panel display.


```
Ener%y Saver:
*30 minutes
```

8 Press [▲] or [▼] to select how many minutes the printer waits before switching to Energy Saver mode.

9 Press [Enter #].

The screen returns to step **[**] in a few seconds.

Press [On Line].

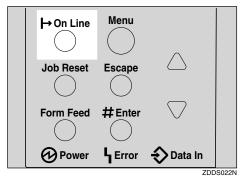

"Ready" appears on the panel display.

Ready

Host Interface Menu

There are six menu items in the "Host Interface" menu.

- I/O Buffer
- I/O Timeout
- Network Setup
- IEEE 1394 Setup
- IEEE 802.11b
- USB Setting

Host Interface Parameters

Menu	Description
I/O Buffer	You can set the size of the I/O Buffer. Normally it is not necessary to change this setting.
	16 KB, 32 KB, 64 KB, 128 KB, 256 KB, 512 KB
	SP Note
	Default: 128 KB
I/O Timeout	You can set how many seconds the printer waits before ending a print job if more data is not received when using parallel interface and USB. If data from another port often appears in the middle of a print job, you should increase the timeout value.
	10 seconds, 15 seconds, 20 seconds, 25 seconds, 60 seconds
	NoteDefault: 15 seconds

Menu	Description
Network Setup	Note Items only appear in the Network Setup when the related op-
	tions are installed. "IEEE 1394 Setup" appears only when the optional IEEE 1394 board is installed. "IEEE 802.11b" appears only when the optional IEEE 802.11b board is installed.
	₽ Reference
	For more information about the "Network Setup", see "Config- uring the Printer for the Network" in the Setup Guide.
	For more information about the "IEEE 1394 Setup", see "Con- figuring the Printer for the Network" in the Setup Guide.
	For more information about the "IEEE 802.11b", see "Configur- ing the Printer for the Network" in the Setup Guide.
	✤ IP Address
	You can set the IP Address.
	NoteDefault: 011.022.033.044
	Subnet Mask You can set the Subnet Mask.
	NoteDefault: All zero
	 Gateway Address You can set the Gateway Address.
	NoteDefault: All zero

Menu	Description
Network Setup	Network Boot You can set how the Network Interface Board acquires TCP/IP settings.
	NoteDefault: None
	Frame Type (NW) You can set the Frame Type for NetWare.
	NoteDefault: Auto
	 Active Protocol You can set the active protocol. TCP/IP, NetWare, NetBEUI, AppleTalk
	NoteDefault: All Active
	 Ethernet You can select the speed of the network to which the printer is connected. Auto, 10 Mbps, 100Mbps
	NoteDefault: Auto
	LAN Type You can select Ethernet or IEEE 802.11b for the LAN type.
	 Note Default: Ethernet Appears only when the optional 802.11b Interface Unit is installed in the Network standard model.
	Reference For more information about Network Setup, see "Configuring the Printer for the Network" in the Setup Guide.


Menu	Description
IEEE 1394 Setup ^{*1}	You can make settings for using IEEE 1394. This menu appears only when the optional IEEE 1394 board is installed.
	 IP Address1394 You can set the IP address for IEEE 1394 (IP over 1394).
	NoteDefault: All zero
	Subnet Mask1394 You can set the Subnet Mask for IEEE 1394 (IP over 1394).
	NoteDefault: All zero
	IP over 1394 You can activate IP over 1394.
	NoteDefault: Active
	SCSI print You can activate SCSI print.
	NoteDefault: Activate
	Bidi-SCSI print You can activate bidirectional transmission for SCSI print.
	NoteDefault: Activate

Menu	Description
IEEE 802.11b *2	You can make settings for using the wireless LAN. This menu appears only when the optional IEEE 802.11b board is installed.
	Comm.Mode You can set the transmission mode for IEEE 802.11b.
	NoteDefault: Ad hoc
	Channel The selectable channels are 1-11 (Inch version) and 1-13 (Metric version).
	NoteDefault: 11
	Trans. Speed You can set the transmission speed for IEEE 802.11b.
	NoteDefault: Auto
	✤ WEP Settings You can set the code for IEEE 802.11b.
	✓ Note□ Default: Not Active
	You need to set the WEP code key from the network before making this setting. Without the key, transmission cannot be performed.
	\Box Be sure to set the key before setting the code to "Active".
USB Setting *3	You can set the transmission speed for USB.
	NoteDefault: Auto

^{*1} Appears only when the 1394 Interface Unit board is installed.
 ^{*2} Appears only when the 802.11b Interface Unit board is installed.
 ^{*3} While the printer is Online, press [Enter #], and then press [Escape]. Finally, press [Menu]. You can access the "USB Setting" menu on the panel display.

Changing the Host Interface Menu

1 Press [Menu].

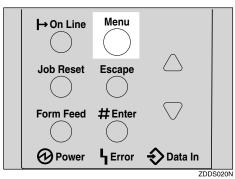


"Menu" appears on the panel display.

2 Press (▲) or (▼) to display the "Host Interface" menu.

Menu: Host Interface

B Press [Enter #].

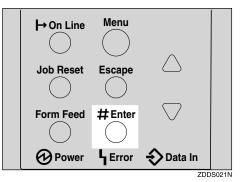

The following message appears on the panel display.

Host Interface: I/O Buffer

Press [▲] or [▼] to display "I/O Timeout".

Host Interface: I/O Timeout

5 Press [Enter #].

The following message appears on the panel display.


I/0	Timeout:	
*15	seconds	

G Press [▲] or [▼] to select how many minutes the printer waits before ending a print job.

Press [Enter #].

The screen returns to step **4** in a few seconds.

Press [On Line].

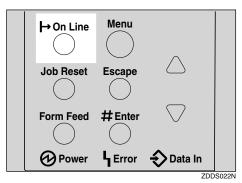

"Ready" appears on the panel display.

Ready

PCL Menu

There are eight menu items in the "PCL Menu".

- Orientation
- Form Lines
- Font Source
- Font Number
- Point Size
- Font Pitch
- Symbol Set
- Ext. A4 Width

PCL Parameters

Menu	Description
Orientation	You can set the page orientation.PortraitLandscape
	NoteDefault: Portrait
Form Lines	You can set the number of lines per page. 5-128
	 Note Default: 64 (Metric version), 60 (Inch version)
Font Source	You can set the location of the default font.InternalDownloadHDD
	 Note Default: Internal When you select "Download", you can select only fonts downloaded to printer RAM.
Font Number	You can set the ID of the default font you want to use.0 to 50 (for Internal)1 to downloaded number
	 Note Default: Internal Default: 0


137

6

Menu	Description
Point Size	You can set the point size you want to use for the default font. 4 to 999.75 by 0.25
	□ Default: 12.00
	□ This setting is effective only for a variable-space font.
Font Pitch	You can set the number of characters per inch you want to use for the default font.
	0.44 to 99.99 by 0.01
	Default: 10.00
	□ This setting is effective only for a fixed-space font.
Symbol Set	You can specify the set of print characters for the default font. The available options are as follows.
	Roman-8, ISO L1, ISO L2, ISO L5, PC-8, PC-8 D/N, PC-850, PC- 852, PC8-TK, Win L1, Win L2, Win L5, Desktop, PS Text, VN Intl, VN US, MS Publ, Math-8, PS Math, VN Math, Pifont, Legal, ISO 4, ISO 6, ISO 11, ISO 15, ISO 17, ISO 21, ISO 60, ISO 69, Win 3.0
	Default: Roman-8
Ext. A4 Width	You can extend the width of the printable area for an A4 sheet leaving a narrow margin on the sides.
	Default: Off


Changing the PCL Menu

1 Press [Menu].

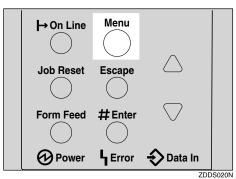

"Menu" appears on the panel display.


2 Press **[▲]** or **[▼]** to display "PCL Menu", and then press **[Enter #]**.

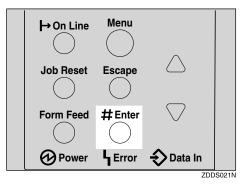

The following message appears on the panel display.



 
3 Press [Enter #].



Press [▲] or [▼] to select the orientation desired, and then press [Enter #]. Wait for a few seconds.

The screen returns to step **2** in a few seconds.

5 Press (On Line).

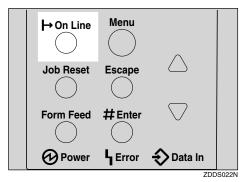

"Ready" appears on the panel display.

Ready		

Language Menu

You can select the language you use. Available language as are follows:

English, French, German, Italian, Spanish, Dutch, Swedish, Norwegian, Danish, Finnish, Portuguese, Czech, Polish, Hungarian


🖉 Note

□ Default: English

Changing the Language Menu

You can change the language by the following procedures below.

1 Press [Menu].

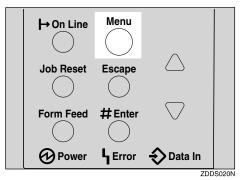


"Menu" appears on the panel display.

2 Press **[▲]** or **[▼]** to display "Language" menu.



6

3 Press [Enter #].

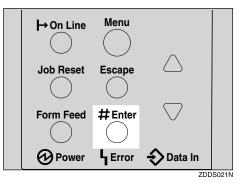

The following message appears on the panel display.


Lanŝuaŝe	:
*En≋lish	

Press [▲] or [▼] until the language you want to select appears on the panel display.

5 Press [Enter #]. Wait for a few seconds.

The screen returns to step **2** in a few seconds.

6 Press [On Line].

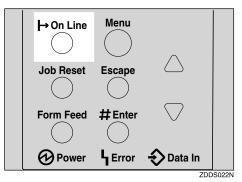

"Ready" appears on the panel display.

Ready

7. Appendix

Replacing Parts

The maintenance kit contains parts necessary for maintaining the printer. When "Replace Maintenance Kit" appears on the panel display, install the replacement parts included in the maintenance kit.

A WARNING:

• It is dangerous to handle the plug with wet hands. An electric shock might occur.

A CAUTION:

- The inside of the machine could be very hot. Do not touch the parts with a label indicating "^A" (means hot surface). Touching "^A" (means hot surface) could result in a burn.
- When you pull the plug out of the socket, grip the plug to avoid damaging the cord and causing a fire or an electric shock.
- Be sure to turn off the printer and wait for about an hour before replacing parts. Not waiting for the printer to cool down can result in a burn.

🖉 Note

□ If you dispose of the used parts yourself, dispose of them according to local regulations.

MAINTENANCE KIT Type 2600

Checking the contents of the box

Check the contents of the box according to the following list. If one or more items are missing, contact your sales or service representative.

Description	Quantity		
Friction pad for the paper tray (Tray 1)	1 pc		See p.145 "Replacing the Fric- tion Pad".
Friction pad for the Paper Feed Unit (Tray 2, 3)	2 pcs		
Paper feed roller for the paper tray (Tray 1)	1 pc		See p.146 "Replacing the Pa- per Feed Rollers".
Paper feed roller for the Paper Feed Unit (Tray 2, 3)	2 pcs		
Transfer roller	1 pc	\$	See p.147 "Replacing the Transfer Roller".
Gloves	1 pair	Entry	
Fusing Unit	1 pc		See p.149 "Replacing the Fus- ing Unit".

Preparing to replace the parts

You should replace all the parts included in Maintenance Kit at the same time. Be sure to replace them in the following order:

1 Check the contents of the box for the following items:

- Friction pad for the paper tray (Tray 1)
- Friction pad for the Paper Feed Unit (Tray 2, 3)
- Paper feed roller for the paper tray (Tray 1)
- Paper feed roller for the Paper Feed Unit (Tray 2, 3)
- Transfer roller
- Fusing Unit
- Gloves


2 Confirm that the followings are true:

- The power switch is turned off.
- The power cord is unplugged from the wall outlet.
- The interface cable is unplugged from the printer.


Replacing the Friction Pad

Replace all friction pad of the tray. There are two kinds of friction pads. One is for the paper tray (Tray 1), and the other are for the Paper Feed Unit(s) (Tray 2, 3). The following procedure shows how to replacing friction pad of the paper tray (Tray1).


- **1** If the optional Duplex Unit, the Mailbox or the 1-bin Shift Sort Tray are installed, uninstall them from the printer.
- **2** Lift the paper tray slightly then pull it out until it stops.

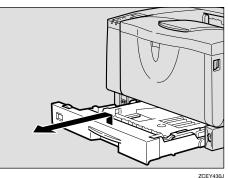


3 While lifting the front side of the tray, pull it out of the printer.

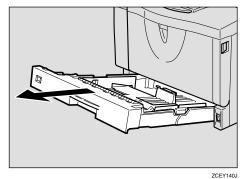


4 Remove paper from the paper tray. Place the tray upside down on a flat surface.

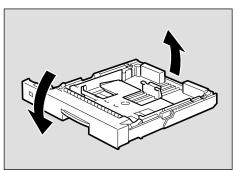

5 Use a sharp-pointed item like a ball-point pen, to release the two catches that lock the friction pad.

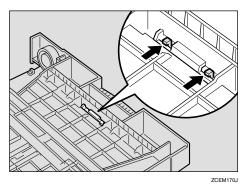


6 Return the paper tray to its original position, and remove the friction pad from the tray.

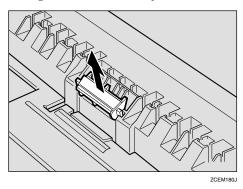

7 Insert the new friction pad in the paper tray.

Attach the center projection of the new friction pad to the spring and align the projection of both sides of the friction pad to the holes of the paper tray. Then push the friction pad as shown in the illustration until it clicks.

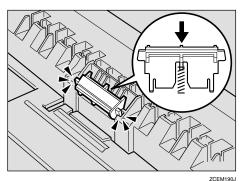


- 8 Push the friction pad until it locks securely.
- 9 If your printer is equipped with the optional Paper Feed Unit(s), follow the same procedure when replacing the friction pad.

Replacing the Paper Feed Rollers

Replace all feed rollers including the printer and the optional Paper Feed Unit(s). The following procedure shows how to replacing the paper feed rollers of the printer.

A CAUTION:

- When lifting the machine, use the inset grips on both sides. Otherwise the printer could break or cause injury if dropped.
- **1** Move the printer to the edge of a sturdy and stable table or desk.

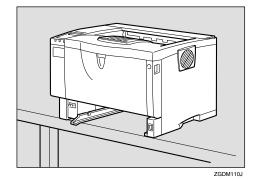


∰Important


- Be sure to move the printer horizontally. Moving the printer facing up on down may cause the toner to scatter.
- Do not put the printer on an unstable or tilted surface.

🔗 Note

- If the printer is equipped with the optional Paper Feed Unit, do not move the printer and the unit together, they are not securely attached.
- 2 Slide the green lock lever to the right (1), remove the paper feed roller (2).

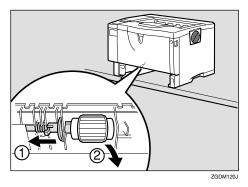

While sliding the green lock lever to the right (①), set the new roller (②). After that, return the green lock lever to its original position (③).

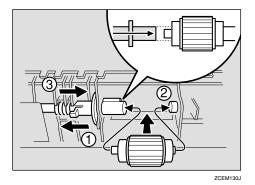

🖉 Note


Confirm that the green lock lever secures the roller correctly by checking if the new roller rotates smoothly. 4 If the printer is equipped with the optional Paper Feed Unit(s), follow the same procedure when replacing the paper feed roller.

If you installed two Paper Feed Units, also replace both paper feed rollers.

5 Leave the paper tray pulled out and go to p.147 "Replacing the Transfer Roller".

Replacing the Transfer Roller


1 Open the front cover by pushing the front cover release button.

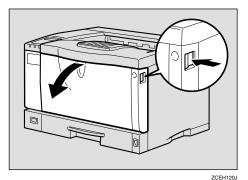

2 Pull the toner cartridge out of the printer, while lifting the front side.

🖉 Note


□ Be sure to place the used cartridge on the level place.

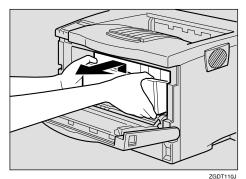

147


3 To avoid making your hands dirty with toner from the transfer roller, wear the gloves included in the maintenance kit.

4 Hold the lock levers ("●" parts), and pull them.

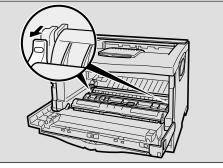


ZCEM200J

5 Hold the green parts of the roller on both sides, and remove the roller from the printer as shown in the illustration.

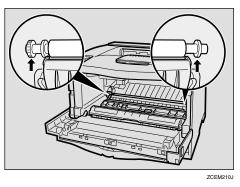


6 Insert the new transfer roller on the socket with the gear of the roller positioned on the left.

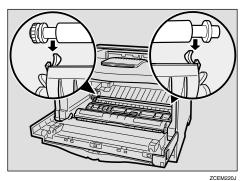


∰Important

- Do not insert the roller on the back of the socket, or the printer might be damaged.
- □ Insert the metallic part of the roller on the socket. If you insert the sponge part of the roller, the roller might be damaged.
- **7** Push down the green parts of both sides of the printer until it clicks as shown in the illustration.

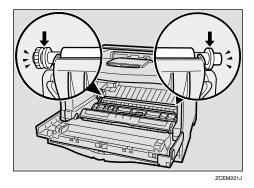


🖉 Note


- When the transfer roller is set, the transfer roller cover will return to its original position automatically.
- 8 Holding the grips of the toner cartridge, insert it into the printer until it stops.

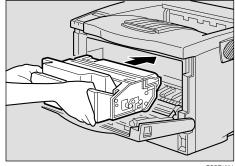

9 Push down the toner cartridge to insert it in its appropriate position.

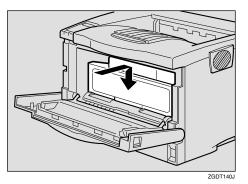

1 Close the front cover.

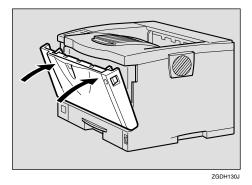


Take the gloves off and go to p.149 "Replacing the Fusing Unit".

Replacing the Fusing Unit


A CAUTION:

- The fusing unit becomes very hot. When installing the new fusing unit, turn off the printer and wait about an hour. After that, install the new fusing unit. Not waiting for the unit to cool down can result in a burn.
- **1** If the rear cover is attached to the printer, remove it.


• Open the rear cover by pushing the two knobs.

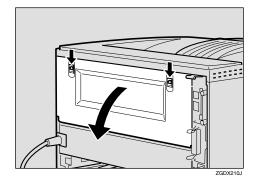


2 Remove the rear cover in a horizontal direction.

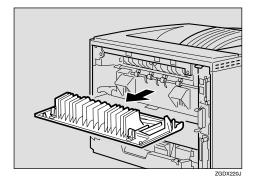


2 Lift the lock levers of the fusing unit as shown in the illustration.

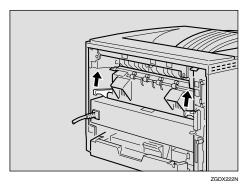


3 Pull the fusing unit out.

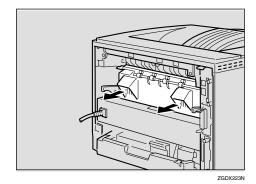


• Replace the new fusing unit into the printer.

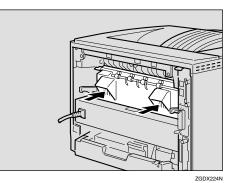



5 Push the lock levers of the fusing unit down until it clicks.

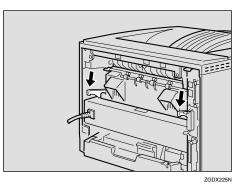

 6 Insert the rear cover to the inside grooves on both sides of the printer in a horizontal direction.

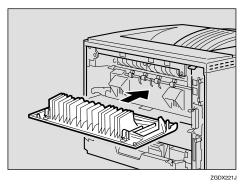



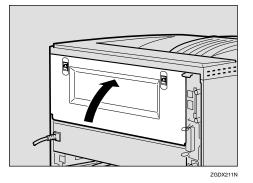

8 Print a configuration page to confirm that the printer works properly.

₽ Reference

 
For more information about printing the configuration page, see *"List/Test Print Menu"* in the Printer Reference provided as a PDF file on the CD-ROM labeled "Operating Instructions".

Collate and Shift Collate

For more information about collate and shift collate, see the printer driver's Help file.


Collate

Outputs can be assembled as sets in sequential order.



Shift Collate

 The shift tray moves backward or forward each time the copies of one set or those of each job are delivered, and makes the next copy to shift when delivered to differentiate each set or jobs.



Limitation

- □ To use these functions, the optional Memory Unit of at least 96 MB or the optional Hard Disk Drive must be installed on the printer.
- Up to 200 pages can be sorted using RAM. If the optional Hard Disk Drive is installed, up to 1000 pages can be sorted. The maximum number of pages to be sorted is 200 pages.
- □ Shift Collate requires the optional 1-bin Shift Sort Tray to be installed on the printer.

🖉 Note

When using PostScript 3, if you select Upper Tray as an output tray, it is shift collated automatically. When using RPCS, you can select collate function.

Spool Printing

With spool printing, the whole data of a print job is saved in the Printer Hard Disk before printing. To use this function, set it from the menu. See p.124 "System Menu".

∰Important

Do not turn off the printer or the computer when a print job is being spooled and the **Data In** indicator is blinking. If you do, the print job will remain in the Printer Hard Disk and be printed when the printer is turned on.

Limitation

- Spool printing does not appear unless the optional Hard Disk Drive is installed.
- Data that has been received in the protocol other than LPD or IPP cannot be spooled.
- **Up** to 50 jobs (approximately 500 MB) can be spooled at a time.
- □ When spool printing is on, the size of a single print job cannot exceed 500 MB.
- When sending spooled print jobs from more than one computer at the same time, up to five LPR jobs and one IPP job can be spooled. Jobs exceeding the maximum number cannot be spooled. Wait until the number of spooled print jobs falls below the maximum.

🖉 Note

□ When "On" is selected, the first print will take time.

Confirm or delete the spooled job from a Web browser.

The spooled job can be seen or deleted from a Web browser. Start a Web browser, and then input the IP address of the printer for URL to show the top page. Click **[Admin Info.]**, and then click **[Spool Printing]**. Select the file, check for delete, input the password, and then click the delete button. (The default password is "password".)

Memory Capacity and Paper Size

The following tables show the typical memory requirements of the RPCS printer language. Memory requirements depend on your print data and printing environment, such as the "Memory Priority" setting or total memory size that the printer has available. The print mode also effects whether the print job will equally completed.

Setting of the "Frame Priority"

Papar Siza	Memory	Resolution (dpi)	
Paper Size	Capacity	600 x 600	1200 x 1200
B5	32MB	О	О
	96MB	О	О
A4 (210 × 297)	32MB	О	О
Letter $(8^{1}/_{2} \times 11)$	96MB	О	О
B4	32MB	О	О
PT	96MB	О	О
A3	32MB	О	O*
(11 × 17)	96MB	О	О

Ο

Means that the print job is supported by simplex and duplex printing.

O*

Means it might be impossible to print images complex data with duplex printing. Even with simple date, the number of pages printed with duplex printing might be limited.

Setting of the "Font Priority"

Papar Siza	Memory	Resolution (dpi)	
Paper Size	Capacity	600 x 600	1200 x 1200
В5	32MB	О	0
	96MB	О	О
A4 (210 × 297)	32MB	О	O*
Letter $(8^{1}/_{2} \times 11)$	96MB	О	О
B4	32MB	О	O*
DE	96MB	О	О
A3	32MB	О	•*
(11 × 17)	96MB	0	О

Ο

Means that the print job is supported by simplex and duplex printing.

O*

*

Means it might be impossible to print images complex data with duplex printing. Even with simple date, the number of pages printed with duplex printing might be limited.

Means it might be impossible to print images complex data with printing. Even with simple data, the number of pages printed with printing might be limited.

Moving and Transporting the Printer

A CAUTION:

- When lifting the machine, use the inset grips on both sides. Otherwise the printer could break or cause injury if dropped.
- When you move the printer, remember to unplug the power cord from the wall outlet to avoid a fire or an electric shock.
- When you pull out the plug from the socket, grip the plug to avoid damaging the cord and causing a fire or an electric shock.

Repack the printer in its original packing materials for transporting.

∰Important

- Be sure to disconnect all cables from the printer before transporting it.
- The printer is a precision piece of machinery. Take care to avoid damage during shipment.

Moving the Printer

A CAUTION:

- The machine weight is approximately 18 kg (39.7 lb. bond).
- When lifting the machine, use the inset grips on both sides. Otherwise the printer could break or cause injury if dropped.
- Before moving the machine, unplug the power cord from the outlet. If the cord is unplugged abruptly, it could become damaged. Damaged plugs or cords can cause an electrical or fire hazard.


Moving the printer in the short distance

- **1** Confirm that the followings are true:
 - The power switch is turned off.
 - The power cord is unplugged from the wall outlet.
 - The interface cable is unplugged from the printer.
- **2** If you installed external options, remove them.


Removing the Mailbox or the 1bin Shift Sort Tray

The following procedure shows how to remove the Mailbox as an example.

1 Pull all the upper trays out.

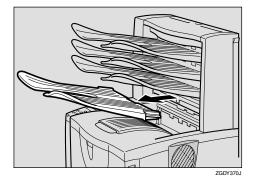


While pushing the lock buttons (1), pull the Mailbox out (2).

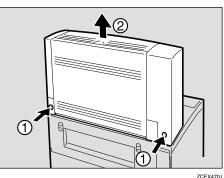


Removing the Duplex Unit

 Push down the lever on right side of the Duplex Unit (1) and pull it out until it stops (2).

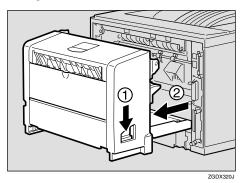

Push the under board levers
 (1) and pull the Duplex Unit out of the printer (2).

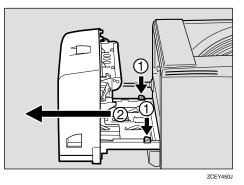


Be sure to close the Bypass Tray and the front cover.

4 Lift the printer and move it to the place where you want to install it.

A CAUTION:

 When lifting the machine, use the inset grips on both sides.
 Otherwise the printer could break or cause injury if dropped.

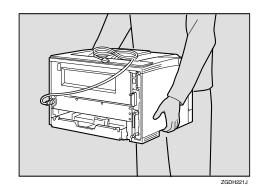

∰Important

- Be sure to move the printer horizontally. Moving the printer facing up on down may cause the toner to scatter.
- □ If the Paper Feed Unit(s) is installed, detach and move the printer separately. Never move the printer with the Paper Feed Unit(s) attached.

Specifications

Mainframe

Configuration:

Desktop

Print Process:

Laser beam scanning & Electrophotographic printing Dual component toner development

Printing Speed:

Maximum 26 pages per minute (A4 \Box , $8^1/_2 \times 11 \Box$)

🖉 Note

Continuous printing on sheets with a width of 230 mm or smaller may decrease the printing speed depending on the temperature control of the fusing unit.

Interface:

Standard 36–pin printer cable and a parallel port on the host computer IEEE 1284 I/F (Compatible, ECP, Nibble)

- Do not use a cable more than 2.5 meters (8.2 feet) long.
- USB1.1
- USB2.0
- Bidirectional IEEE1284
- 10/100Base-TX(std.for AP2610N)

Resolution:

1,200 × 1,200 dpi (PCL 6, RPCS, PS) 600 × 600 dpi (PCL 6, PCL 5e, RPCS, PS) 300 × 300 dpi(PCL5e)

Printer Language:

PCL 6 (XL), PCL 5e, RPCS, Adobe PostScript 3

Fonts:

PCL 6, PCL 5e

Agfa Font Manager 35 Intellifonts, 10 TrueType fonts, and 1 bitmap font Font Manager available, plus 31 additional fonts. **PostScript** 136 fonts(Type 2:24, Type 14:112)

Paper size:

See p.25 "Paper and Other Media Supported by This Printer"

Paper Weight:

See p.25 "Paper and Other Media Supported by This Printer"

Power Source:

120V, 60 Hz, 8.4A or more

Power Consumption:

Maximum	870 W or less	
Printing	610 W or less	
Energy Saver	 Basic model: 12 W Network standard model: 13 W 	

✤ Noise Emission ^{*1}:

Sound Power Level

	Mainframe only
During Printing	63 dB (A)
Stand-by	40 dB (A)

Sound Pressure level *2

	Mainframe only
During Printing	52 dB (A)

^{*1} The following measurements are actual values made in accordance with ISO7779.
 ^{*2} Measured at the position of a bystander.

Dimensions: *1

	Width	Depth	Height
Printer only (tray not extended)	478 mm (18.4 inches)	437 mm (17.2 inches)	305 mm (12.0 inches)
Printer only (tray ex- tended)	478 mm (18.4 inches)	555 mm (21.9 inches)	305 mm (12.0 inches)
With one optional feed unit	478 mm (18.4 inches)	555 mm (21.9 inches)	434 mm (17.1 inches)
With two optional feed units	478 mm (18.4 inches)	555 mm (21.9 inches)	562 mm (22.1 inches)

 *1 Measurement conditions: With paper tray, Bypass Tray and output tray extension closed.

♦ Weight:

Approximately 18 kg (39.7 lb. bond) (toner cartridge and power cord included)

Warm-up Time:

Less than 19 seconds (23°C, 73F)

Paper Capacity:

Standard paper tray	250 sheets *1 (80g/m ² , 20 lb.bond)
Bypass Tray *2	100 sheets *1 (80g/m ² , 20 lb.bond)
Optional Paper Feed Unit × 2	500 sheets \times 2 ^{*1} (80g/m ² , 20 lb.bond)
Optional Envelope Feeder *3	60 envelopes ^{*4}

^{*1} Paper weight: $60 - 105 \text{ g/m}^2$ (16 - 28 lb. bond)

- ^{*2} You can load up to 10 envelopes $(55 157 \text{ g/m}^2, 14 42 \text{ lb. bond})$ at the same time. ^{*3} To use the Envelope Feeder Unit, the optional Paper Feed Unit is required. The
- ^{*4} For more information about envelopes, see p.33 "Types of Paper and Other Me-
- ^{*4} For more information about envelopes, see p.33 "Types of Paper and Other Media".

Paper Output Capacity:

250 sheets (80 g/m^2 , 20 lb. bond)

♦ Memory:

Standard 32MB, up to 96MB (with the optional Memory Unit)

Network (Basic model printer requires the optional Network Interface Board): Topology: Ethernet (10BaseT/100BaseTX) Protocol: TCP/IP, NetBEUI, IPX/SPX, AppleTalk

Optional Equipment:

Common for the Basic model printer and the Network standard model printer

- Paper Feed Unit Type 2600
- Envelope Feeder Type 2600
- 1-bin Shift Sort Tray Type 2600
- CS380 (Mailbox)
- AD410 (Duplex Unit)
- Memory Unit TypeB 64MB
- Hard Disk Drive Type 2600
- 1394 Interface Unit Type 4510
- 802.11b Interface Unit Type A

Unique for the Basic model printer

• Network Interface Board Type 2610

Options

Paper Feed Unit Type 2600

- Dimensions (W×D×H): 468 × 545 × 130 mm (18.4 × 19.7 × 5.1 inches) (without pins on the unit)
- ♦ Paper Weight: 60 - 105 g/m² (16 - 28 lb. bond)
- Paper Size: See p.25 "Paper and Other Media Supported by This Printer".

Envelope Feeder Type 2600

- Dimensions (W×D×H): 468 × 410 × 130 mm (18.4 × 16.1 × 5.1 inches)
- ♦ Paper Weight: 72 - 90 g/m² (19 - 24 lb. bond)
- Paper Size:

See p.25 "Paper and Other Media Supported by This Printer".

AD410 (Duplex Unit)

- Dimensions (W×D×H): 380 × 150 × 220 mm (15.0 × 5.9 × 8.7 inches)
- Paper Size: See p.25 "Paper and Other Media Supported by This Printer".
- ◆ Paper Weight: 60 - 105 g/m² (17 - 28 lb. bond)
- ♦ Weight:
 - 5 kg (11.0 lb. bond)

1-bin Shift Sort Tray Type 2600

- Dimensions (W × D × H): 465 × 395 × 160 mm (18.3 × 15.6 × 6.3 inches)
- Paper Size: See p.25 "Paper and Other Media Supported by This Printer".
- ♦ Paper Weight: 60 - 105 g/m² (16 - 28 lb. bond)
- Stack Capacity: 250 sheets / bin (80 g/m², 20 lb. bond)
- Weight: 3.5 kg (7.7 lb. bond)

CS380 (Mailbox)

- Dimensions (W × D × H): 465 × 395 × 285 mm (18.3 × 15.6 × 11.2 inches)
- Paper Size: See p.25 "Paper and Other Media Supported by This Printer".
- ♦ Paper Weight: 60 - 105 g/m² (16 - 28 lb. bond)
- Stack Capacity: 50 sheets / bin (80 g/m², 20 lb. bond)
- ♦ Weight:

5.5 kg (12.1 lb. bond)

Hard Disk Drive Type 2600

Storage Capacity (Formatted):

6 GB

You can install PostScript fonts with this optional Hard Disk Drive. With a Macintosh, types of fonts supported are PostScript Type 1 and PostScript Type 2. To download them, use PS Utility for Mac.

Memory Unit TypeB 64MB

Module Type:

SO-DIMM (Small Outline Dual-in-line Memory Module)

Memory Type:

SDRAM (Synchronous Dynamic RAM)

Number of Pins: 144 pins

Network Interface Board Type 2610

- Topology: Ethernet (10BaseT/100BaseTX)
- Protocols: TCP/IP, NetBEUI, IPX/SPX, AppleTalk
- Interface Connector: RJ45
- Required Cable: STP (Shielded Twisted-Pair) cable Category / Type5 or better

1394 Interface Unit Type 4510

- Transmission Spec.: IEEE 1394
- Device Class: SCSI print, IP over 1394
- Interface Connector: IEEE 1394 (6 pins × 2)
- Required cable: 1394 interface cable (6 pins x 4 pins, 6 pins x 6 pins)

Important

- □ You cannot plug devices together to create loops.
- Do not use a cable more than 4.5 meters (14.8 feet) long.
- Connectable number of device in a bus: Maximum 63

Allowed cable hops in a bus:

Maximum 16

Power supply:

Nonpower supply Cable Power repeated (IEEE 1394a-2000 compliant)

802.11b Interface Unit TypeA (R-WL11)

Transmission Spec.:

Based on IEEE 802.11b (Wireless LAN)

Protocol:

TCP/IP, NetBEUI, IPX/SPX, AppleTalk

🖉 Note

□ SmartNetMonitor and WebStatusMonitor are supported.

Data Transfer Speed:

Auto select from below speed 1Mbps, 2Mbps, 5.5Mbps, 11Mbps

Frequency Range:

- Inch version: 2412-2464 Mhz (1-11 channels)
- Metric version: 2412-2472 Mhz (1-13 channels)

Transmittable Distance:

1Mbps 400m ^{*1} 2Mbps 270m ^{*1} 5.5Mbps 200m ^{*1} 11Mbps 140m ^{*1}

^{*1} These figures are a guideline for outdoor use. In general, the transmittable distance indoors is 10-100 m, depending on the environment.

Transmission Mode:

ad hoc mode and infrastructure mode

Consumables

A CAUTION:

• Our products are engineered to meet the highest standards of quality and functionality. When purchasing expendable supplies, we recommend using only those specified by an authorized dealer.

Toner Cartridge

	Printable number of pages per cartridge *1
Toner Cartridge	20,000 pages

*1 A4, 5% test chart

🖉 Note

- The actual number of printed pages you get from a particular toner cartridge depends on the type and size of paper you are using, the contents of your print images, and printing environment conditions. All this means that a toner cartridge might require replacement sooner than the normal life described above.
- □ The number of printable pages that can be expected from the starter toner cartridge included in the printer is about 6,000 pages (A4, 5% chart).

Maintenance Kit

MAINTENANCE KIT Type 2600

It is required to change the maintenance kit after every 90,000 pages have been printed. However, it may be necessary to change the parts earlier depending on their operating period.

Information about Installed Software

expat

Expat(Version 1.1). Copyright 1998, 1999 James Clark. All rights reserved.

- The software installed on this product includes the expat application software Version 1.1 (hereinafter "expat 1.1").
- The product manufacturer has not made any modification to the source code of the expat 1.1.
- The product manufacturer provides warranty and support to the software of the product including the expat 1.1 and the product manufacturer makes Mr. James Clark, the initial developer of the expat 1.1, free from these obligations.
- The expat 1.1 is made available under Mozilla Public License Version 1.1 (hereinafter "MPL 1.1"), and controller software of the product equals the Larger Work as defined in MPL 1.1. The software of this product except the expat 1.1 is licensed to the product manufacturer under separate agreement(s).
- The source code of the expat 1.1 is available at: ftp://ftp.jclark.com/pub/xml/expat1_1.zip
- MPL 1.1 is also available at: http://www.mozilla.org/MPL/MPL-1.1.html
- Information relating to the expat 1.1 is available at: http://www.jclark.com/xml/expat.html

JPEG LIBRARY

• The software installed on this product is based in part on the work of the Independent JPEG Group.

NetBSD

Copyright Notice of NetBSD

For all users to use this product:

This product contains NetBSD operating system:

For the most part, the software constituting the NetBSD operating system is not in the public domain; its authors retain their copyright.

The following text shows the copyright notice used for many of the NetBSD source code. For exact copyright notice applicable for each of the files/binaries, the source code tree must be consulted.

A full source code can be found at http://www.netbsd.org/.

Copyright © 1999, 2000 The NetBSD Foundation, Inc.

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- ② Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- ③ All advertising materials mentioning features or use of this software must display the following acknowledgment: This product includes software developed by the NetBSD Foundation, Inc. and its contributors.
- ④ Neither the name of The NetBSD Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE NETBSD FOUNDATION, INC. AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MER-CHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DIS-CLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEM-PLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMIT-ED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CON-TRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTH-ERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Authors Name List

All product names mentioned herein are trademarks of their respective owners.

The following notices are required to satisfy the license terms of the software that we have mentioned in this document:

- This product includes software developed by the University of California, Berkeley and its contributors.
- This product includes software developed by Jonathan R. Stone for the NetB-SD Project.
- This product includes software developed by the NetBSD Foundation, Inc. and its contributors.
- This product includes software developed by Manuel Bouyer.
- This product includes software developed by Charles Hannum.
- This product includes software developed by Charles M. Hannum.
- This product includes software developed by Christopher G. Demetriou.
- This product includes software developed by TooLs GmbH.
- This product includes software developed by Terrence R. Lambert.
- This product includes software developed by Adam Glass and Charles Hannum.
- This product includes software developed by Theo de Raadt.
- This product includes software developed by Jonathan Stone and Jason R. Thorpe for the NetBSD Project.
- This product includes software developed by the University of California, Lawrence Berkeley Laboratory and its contributors.
- This product includes software developed by Christos Zoulas.
- This product includes software developed by Christopher G. Demetriou for the NetBSD Project.
- This product includes software developed by Paul Kranenburg.
- This product includes software developed by Adam Glass.
- This product includes software developed by Jonathan Stone.
- This product includes software developed by Jonathan Stone for the NetBSD Project.
- This product includes software developed by Winning Strategies, Inc.
- This product includes software developed by Frank van der Linden for the NetBSD Project.
- This product includes software developed for the NetBSD Project by Frank van der Linden
- This product includes software developed for the NetBSD Project by Jason R. Thorpe.
- The software was developed by the University of California, Berkeley.
- This product includes software developed by Chris Provenzano, the University of California, Berkeley, and contributors.

INDEX

1394 interface cable, 1621394 Interface Unit Type 4510, 1621-bin Shift Sort Tray Type 2600, 161

A

AD410, 160 adhesive labels, 34 Adjusting the image density, 97 Adjusting the Registration, 98 Auto Continue, 124

В

Bypass size, 106

С

Collate, 151 Config. Page, 110 CS380, 161 Curl Prevention, 114

D

Data In indicator, 77 Duplex, 124

E

Edge-Edge Print, 124 Edge Smoothing, 124 Energy Saver, 124 Envelope Feeder Type 2600, 160 envelopes, 34 envelopes, loading, 45 error, 61 Error indicator, 76 Escape key, 105 Ethernet cable, 162 Ext. A4 Width, 137

F

Font Number, 137 Font Pitch, 137 fonts, 157 Font Source, 137 Form Lines, 137 friction pad, 145 friction pad, cleaning, 93 fusing unit, 149

Η

Hard Disk Drive Type 2600, 161 HDD Format, 114 Hex Dump, 110 Host Interface, 104, 130

IEEE 1394 Setup, 130 IEEE 802.11b, 130 Image density, 114 I/O Buffer, 130 I/O Timeout, 130

J

Job Separation, 124

Κ

Key Repeat, 114

L

Language, 104, 141 List/Test Print, 104, 110 List/Test Print Parameters, 110 Locked Print, 56, 104

Μ

Macintosh uninstall, PostScript, 24 Maintenance, 104, 114, 115 MAINTENANCE KIT Type 2600, 144 media, 25 memory, 153, 159 Memory Overflow, 124 Memory Unit TypeB 64MB, 162 Memory Usage, 124 menu, accessing, 104 menu, changing, 141 Menu Chart, 101 Menu key, 104 Menu List, 110 Menu Protect, 114 messages, 61 misfeed, 82 MisfeedRecovery, 124

Ν

Network Interface Board, 159, 162 Network Printing Guide, ii Network Setup, 130 NIB, 159

0

OHP transparencies, 34 On Line indicator, 76 On Line key, 76, 105 options, 159, 160 Orientation, 137 Output Tray, 124

Ρ

Page Size, 124 panel display, messages, 61 paper, 25 paper feed roller, 146 paper feed roller, cleaning, 94 Paper Feed Unit Type 2600, 160 Paper Input, 104, 106 paper, loading, 37 paper, sizes, types, 25 Paper type, 106 Parallel cable, 157 PCL, 137 PCL 5e Windows 2000, uninstalling, 19 Windows 95/98/Me, uninstalling, 19 Windows NT 4.0, uninstalling, 20 Windows XP, uninstalling, 19 PCL 6 Windows 2000, uninstalling, 19 Windows 95/98/Me, uninstalling, 19 Windows NT 4.0, uninstalling, 20 Windows XP, uninstalling, 19 PCL Config.Page, 110 PCL Menu, 104 plain paper, 33 Point Size, 137 PostScript Macintosh, uninstall, 24 Windows 2000, uninstalling, 23 Windows 95/98/Me, uninstalling, 23 Windows NT 4.0, uninstalling, 24 Windows XP, uninstalling, 23 Ppr.Size Error, 114 Printer Reference, ii Prt. Err Report, 124 PS Font List, 110

Q

Quick Installation Guide, ii

R

Registration, 114 registration roller, cleaning, 96 Resolution, 124 ROM Update, 114 RPCS *Windows 2000, uninstalling, 21 Windows 95/98/Me, uninstalling, 21 Windows NT 4.0, uninstalling, 22 Windows XP, uninstalling, 21*

S

Sample Print, 51, 104 SDRAM, 159, 162 Series Prnt.Job, 114 Setup Guide, ii Shift Collate, 151 specifications, 157 Spool Printing, 124 Sub Paper Size, 124 Symbol Set, 137 System, 104, 124

Т

toner cartridge, replacing, 90 Toner Saving, 124 transfer roller, 147 Tray Locking, 106 Tray Paper Size, 106 Tray Priority, 106 troubleshooting, 61

U

Unit Of Measure, 124 USB Setting, 130

Windows 2000 PCL 5e, uninstalling, 19 PCL 6, uninstalling, 19 PostScript, uninstalling, 23 printer properties, PCL, 2 printer properties, PostScript, 12 printer properties, RPCS, 7 RPCS, uninstalling, 21 Windows 95/98/Me PCL 5e, uninstalling, 19 PCL 6, uninstalling, 19 PostScript, uninstalling, 23 printer properties, PCL, 1 printer properties, PostScript, 11 printer properties, RPCS, 6 RPCS, uninstalling, 21 Windows 95/98/Me, Windows 2000, Windows XP, Windows NT 4.0 canceling a job, 17 Windows NT 4.0 PCL 5e, uninstalling, 20 PCL 6, uninstalling, 20 PostScript, uninstalling, 24 printer properties, PCL, 4 printer properties, PostScript, 14 printer properties, RPCS, 9 RPCS, uninstalling, 22 Windows XP PCL 5e, uninstalling, 19 PCL 6, uninstalling, 19 PostScript, uninstalling, 23 printer properties, PCL, 2 printer properties, PostScript, 12 printer properties, RPCS, 7 RPCS, uninstalling, 21 WL.LAN Defaults, 114 WL.LAN Signal, 114



Addendum

This manual describes necessary information about using this machine.

Notes to Windows XP Users

- The printer driver ^{*1} for Windows 2000 can be used with Windows XP Professional and Windows XP Home Edition.
- When you install the printer driver in Windows XP, the **[Hardware Installation]** dialog box may appear. In this case, click **[Continue Anyway]** to continue the installation.
- ^{*1} The RPCS driver does not support Fast User Switching function.

🖉 Note

□ You can set a port using TCP/IP and the IEEE 1394 (IP over 1394) interface. For more information, see the manual that comes with the 1394 Interface Unit.

Notes to Windows Me Users

You cannot print with IP over 1394 by following the "Printing with IP over 1394" setting method in the manual that comes with the machine.

Reference

For more information about how to make settings, see the manual that comes with the 1394 Interface Unit.

Appendix

This section provides information that is not in the Printer Reference.

Making Printer Settings with the Control Panel

System Menu

Menu	Description
Edge-Edge Print	You can print on the complete area of an A4 sheet leaving no border on any edge.
	Note Default: Off

PCL Menu

Menu	Description
Ext. A4 Width	You can extend the width of the printable area for an A4 sheet leaving a narrow margin on the sides.
	NoteDefault: Off

Copyright © 2002 Printed in China UE USA G065-8743