
# Operating Instructions Maintenance Guide

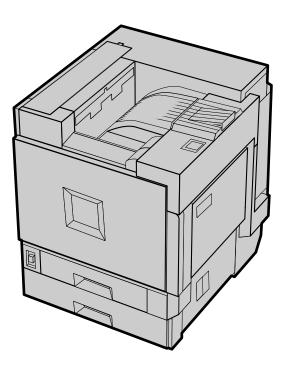

For safety, please read this manual carefully before you use this product and keep it handy for future reference.

### Introduction

This manual describes detailed instructions on the operation and notes about the use of this machine. To get maximum versatility from this machine all operators are requested to read this manual carefully and follow the instructions. Please keep this manual in a handy place near the machine.

# **Trademarks**

Microsoft, Windows and Windows NT are registered trademarks of Microsoft Corporation in the United States and/or other countries.

IPS-PRINT Printer Language Emulation Copyright© 1999-2000 Oak Technology, Inc., All rights reserved.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights in those marks.

### Notes:

Some illustrations in this manual might be slightly different from the machine. Certain options might not be available in some countries. For details, please contact your local dealer.

### Note

The proper names of the Windows operating systems are as follows:

- Microsoft<sup>®</sup> Windows<sup>®</sup> 95 operating system
- Microsoft® Windows® 98 operating system
- Microsoft<sup>®</sup> Windows<sup>®</sup> Millennium Edition (Windows Me)
- The product names of Windows<sup>®</sup> 2000 are as follows: Microsoft<sup>®</sup> Windows<sup>®</sup> 2000 Advanced Server Microsoft<sup>®</sup> Windows<sup>®</sup> 2000 Server Microsoft<sup>®</sup> Windows<sup>®</sup> 2000 Professional
- The product names of Windows<sup>®</sup> XP are as follows: Microsoft<sup>®</sup> Windows<sup>®</sup> XP Professional Microsoft<sup>®</sup> Windows<sup>®</sup> XP Home Edition
- The product names of Windows NT<sup>®</sup> 4.0 are as follows: Microsoft<sup>®</sup> Windows NT<sup>®</sup> Server 4.0 Microsoft<sup>®</sup> Windows NT<sup>®</sup> Workstation 4.0

# **Safety Information**

When using your printer, the following safety precautions should always be followed.

# **Safety During Operation**

In this manual, the following important symbols are used:

### **⚠ WARNING:**

Indicates a potentially hazardous situation which, if instructions are not followed, could result in death or serious injury.

### **A CAUTION:**

Indicates a potentially hazardous situation which, if instructions are not followed, may result in minor or moderate injury or damage to property.

### **MARNING:**

- Disconnect the power plug (by pulling the plug, not the cable) if the power cable or plug becomes frayed or otherwise damaged.
- To avoid hazardous electric shock or laser radiation exposure, do not remove any covers or screws other than those specified in this manual.
- Turn off the power and disconnect the power plug (by pulling the plug, not the cable) if any of the following conditions exists:
  - · You spill something into the equipment.
  - You suspect that your equipment needs service or repair.
  - Your equipment's cover has been damaged.
- Do not incinerate spilled toner or used toner. Toner dust might ignite when exposed to an open flame.
- Disposal can take place at our authorized dealer or at appropriate collection sites.
- Dispose of the used toner cartridge in accordance with the local regulation.

### **A CAUTION:**

- Protect the machine from dampness or wet weather, such as rain and snow.
- Unplug the power cord from the wall outlet before you move the machine.
   While moving the machine, you should take care that the power cord will not be damaged under the machine.
- When you disconnect the power plug from the wall outlet, always pull the plug (not the cable).
- Do not allow paper clips, staples, or other small metallic objects to fall inside the machine.
- Keep toner (used or unused) and toner cartridge out of the reach of children.
- For environmental reasons, do not dispose of the machine or expended supply waste at household waste collection points. Disposal can take place at an authorized dealer.
- The inside of the machine could be very hot. Do not touch the parts with a label indicating the "hot surface". Otherwise an injury might occur.
- Our products are engineered to meet high standards of quality and functionality, and we recommend that you use only the expendable supplies available at an authorized dealer.

# **ENERGY STAR Program**



As an ENERGY STAR Partner, we have determined that this machine model meets the ENERGY STAR Guidelines for energy efficiency.

The ENERGY STAR Guidelines intend to establish an international energy-saving system for developing and introducing energy-efficient office equipment to deal with environmental issues, such as global warming.

When a product meets the ENERGY STAR Guidelines for energy efficiency, the Partner shall place the ENERGY STAR logo onto the machine model.

This product was designed to reduce the environmental impact associated with office equipment by means of energy-saving features, such as Low-power mode.

### Low-power Mode (Energy Saver mode)

This printer automatically lowers its power consumption 60 minutes after the last operation has been completed. To exit Low-power (Energy Saver) mode, press any key on the control panel.

# Specifications

Energy Saver mode	Power Consumption	45 W or less
	Default Time	60 minutes
	Recovery Time	120 seconds or less

# **How to Read This Manual**

# **Symbols**

In this manual, the following symbols are used:

### **⚠ WARNING:**

This symbol indicates a potentially hazardous situation which, if instructions are not followed, could result in death or serious injury.

### **A CAUTION:**

This symbol indicates a potentially hazardous situation which, if instructions are not followed, may result in minor or moderate injury or damage to property.

\* The statements above are notes for your safety.

# ∰Important

If this instruction is not followed, paper might be misfed or data might be lost. Be sure to read this.

# Preparation

This symbol indicates the prior knowledge or preparations required before operating.

## Ø Note

This symbol indicates precautions for operation, or actions to take after misoperation.

# Limitation

This symbol indicates numerical limits, functions that cannot be used together, or conditions in which a particular function cannot be used.

# 

This symbol indicates a reference.

[ ]

Keys that appear on the machine's panel display.

Keys and buttons that appear on the computer's display.

Keys built into the machine's control panel

Keys on the computer's keyboard.

# **TABLE OF CONTENTS**

# 1. Paper and Other Media

Paper and Other Media Supported by This Printer Paper Sizes	
Paper Recommendations	7
Loading Paper	7
Storing Paper Types of Paper and Other Media	
Printable Area	11
Loading Paper	12
Loading Paper in Tray 1	
Loading Paper in Tray 2 and the Optional Paper Feed Unit	
Loading paper in Paper Bank PS470 (2000-sheet Large Capacity Tray)	
Load Paper in the Bypass Tray  Changing the Paper Tray Settings	
Changing the raper tray detailings	10
2. Cleaning and Adjusting the Printer	
Cautions to Take When Cleaning	<u> 19</u>
Cleaning the Registration Roller	20
Cleaning the DustProof Glass	
Adjusting the Color Registration	
Auto Adjust	
Fuser Adjust	
Manual Adjust	
Test Sheet Samples	28
Adjusting the Image Density	30
Adjusting the Registration of the Trays	31
3. Using SmartNetMonitor	
SmartNetMonitor for Admin	
Installing SmartNetMonitor for Admin	33
SmartNetMonitor for Client	
Installing SmartNetMonitor for Client	36
Displaying the Status of Printer	
SmartNetMonitor for Admin	
SmartNetMonitor for Client	38

# 4. Troubleshooting

Error & Status Messages on the Control Panel	41
Printer Does Not Print	48
Other Printing Problems	50
Removing Misfed Paper	53
Detaching the 2 Tray Finisher	53
Opening and Closing the Duplex Reversal Unit	
When "Remove Misfeed A:Internal Path" Appears	
When "Remove Misfeed B: Fusing Unit" Appears	
When "Remove Misfeed W: Mailbox" Appears	50 56
When "Remove Misfeed Y: Paper Tray" Appears	
When "Remove Misfeed :Duplex Unit " Appears	
Removing Jammed Staples	60
Removing Punch-hole Chips	
When the message appears even after removing the Punch-hole chips	
5. Replacing Consumables and Maintenance Kit	
Detaching the SR770 (2 Tray Finisher)	63
Opening and Closing the Duplex Reversal Unit	
Replacing the Toner Cartridge	
Replacing the Fuser Oil Unit	
Replacing the Photoconductor Unit	
Replacing the Development Unit	
Replacing the Fusing Unit	
Replacing the Dustproof Filter	
Replacing the Waste Toner Bottle	
Replacing the Paper Feed Rollers	
Adding Staples	
6. Appendix	
Staple and Punch Position	
Stapling	
Punching	
Removing Misfed Paper in the Duplex Feed Unit	
When the Front Cover Does Not Close	
Consumables	. 101
INDEX	. 103

# 1. Paper and Other Media

# Paper and Other Media Supported by This Printer

# **Paper Sizes**

This section describes the type, size, feed direction, and maximum amount of paper that can be loaded into each paper tray in this printer.

### **𝚱** Note

 $\square$  The following symbols and terminology are used to represent the feed direction.

In this manual	On the panel display	Paper feed direction
$\square \leftarrow$ (Feed direction)	A4 (210 × 297) 8 1/2 × 11	Short-edge feed direction
$\square \leftarrow$ (Feed direction)	A4 (297 $\times$ 210) 11 $\times$ 8 1/2	Long-edge feed direction

 $\square$  Be careful of the paper feed direction. The direction is determined for each paper size.

# Input Paper Sizes (Metric version)

	Feed direction	Size (mm)	Bypass tray	Paper Tray (Tray 1)	Paper Feed Unit (Tray 2/3/4)	2000-sheet Large Capacity Tray
A3	₽	297 × 420	☆	×	0	×
B4 JIS	₽	257 × 364	☆	×	☆	×
A4	₽	210 × 297	☆	×	☆	×
	D	297 × 210	☆	•	0	•
B5 JIS	₽	182 × 257	☆	×	☆	×
	D	257 × 182	☆	×	0	×
A5	₽	148 × 210	☆	×	×	×
	Ū	210 × 148	☆	×	0	×
B6 JIS	□	128 × 182	*	×	×	×

	Feed direction	Size (mm)	Bypass tray	Paper Tray (Tray 1)	Paper Feed Unit (Tray 2/3/4)	2000-sheet Large Capacity Tray
A6	┏	$105 \times 148$	☆	×	×	×
11"×17"	□	279 × 432	☆	×	0	×
Legal (LG, 8 <sup>1</sup> / <sub>2</sub> " × 14")	D-	216 × 356	☆	×	☆	×
Letter (LT, $8^1/_2$ " × 11")	D-	216 × 279	☆	×	☆	×
	D	279 × 216	☆	×	0	×
$5^1/2" \times 8^1/2"$	D	140 × 216	☆	×	×	×
Executive (Exec., $7^{1}/_{4}$ " × $10^{1}/_{2}$ ")	D	184 × 276	☆	×	☆	×
	D	276 × 184	☆	×	×	×
Folio (8 <sup>1</sup> / <sub>4</sub> " × 13")	D	210 × 330	☆	×	☆	×
Foolscap (F4, 8 <sup>1</sup> / <sub>2</sub> " × 13")	D	216 × 330	☆	×	☆	×
F/GL (8" × 13")	D .	203 × 330	☆	×	☆	×
Com#10 Env $(9^1/2" \times 4^1/8")$	Ū	241.3 × 104.8	☆	×	×	×
C5 Env (9.02" × 6.38")	D	229 × 162	☆	×	×	×
C6 Env (6.38" × 4.49")	D	162 × 114	☆	×	×	×
DL Env (8.66" × 4.33")	D	220 × 110	☆	×	×	×
Monarch Env $(7^1/_2" \times 3^7/_8")$	D	190.5 × 98.4	☆	×	×	×
Custom Size	D	-	★*	×	×	×
$8K (10^1/2" \times 15.35")$	┏	267 × 390	☆	×	☆	×
$16K (7.68" \times 10^{1}/_{2}")$	┏	195 × 267	☆	×	☆	×
	D	267 × 195	☆	×	☆	×

- means that the size is exclusive.
- © means that the size is supported and printer select the paper size automatically.
- ★ means that the size is supported but paper size should be selected with the control panel.
- ★ means that the size is supported but paper size should be set with the control panel as a custom size.
- ★\* means that the supported size is approximately 90 304.8 mm in width, and approximately 148.2 457.2 mm in length. Set the custom size setting with the printer driver.
- × means that the size is not supported.

# Input Paper Sizes (Inch version)

	Feed direction	Size (inch)	Bypass Tray	Paper Tray (Tray 1)	Paper Feed Unit (Tray 2/3/4)	2000-sheet Large Capacity Tray
11"×17"	D	11"×17"	☆	×	0	×
Legal (LG)	D	$8^1/_2$ " × 14"	☆	×	0	×
Letter (LT)	D	8 <sup>1</sup> / <sub>2</sub> "×11"	☆	×	0	×
	D	11"×8 <sup>1</sup> / <sub>2</sub> "	☆	•	0	•
$5^1/_2$ " × $8^1/_2$ "	D	$5^1/_2$ " × $8^1/_2$ "	☆	×	×	×
Executive (Exec.)	D	$7^1/_4$ " × $10^1/_2$ "	☆	×	☆	×
	D	$10^{1}/_{2}" \times 7^{1}/_{4}"$	☆	×	×	×
A3	D	11.26" × 16.54"	☆	×	0	×
B4 JIS	D	10.12" × 14.33"	☆	×	0	×
A4	D	8.26" × 5.83"	☆	×	0	×
	D	5.83" × 8.26"	☆	×	0	×
B5 JIS	₽	7.17" × 10.12"	☆	×	☆	×
	D	10.12" × 7.17"	☆	×	0	×
A5	₽	5.83" × 8.26"	☆	×	×	×
	D	8.26" × 5.83"	☆	×	0	×
B6 JIS	₽	5.04" × 7.17"	*	×	×	×
A6	₽	4.13" × 5.63"	☆	×	×	×
Folio	₽	8 <sup>1</sup> / <sub>4</sub> " × 13"	☆	×	☆	×
Foolscap F4	₽	$8^1/_2$ " × 13"	☆	×	☆	×
F/GL	₽	8"×13"	☆	×	☆	×
Com#10 Env	D	$9^1/_2 \times "4^1/_8"$	☆	×	×	×
C5 Env	D	9.02"×6.38"	☆	×	×	×
C6 Env	D	6.38" × 4.49"	☆	×	×	×
DL Env	D	8.66" × 4.33"	☆	×	×	×
Monarch Env	D	$7^{1}/_{2}" \times 3^{7}/_{8}"$	☆	×	×	×
Custom Size	□	-	*	×	×	×
8K	₽	$10^1/_2$ " × 15.35"	☆	×	☆	×
16K	₽	$7.68" \times 10^1/_2"$	☆	×	☆	×
	D	$10^1/_2$ " × 7.68"	☆	×	☆	×

- means that the size is exclusive.
- © means that the size is supported and printer select the paper size automatically.
- ★ means that the size is supported but the paper size should be selected with the control panel.
- ★ means that the size is supported but the paper size should be set with the control panel as a custom size.
- ★\* means that the supported size is approximately 3.5 12 inch in width, and approximately 5.8 18 inch in length. Set the custom size setting with the printer driver.
- × means that the size is not supported.

### Paper weight and number of sheets to be set

	Supported paper weight	Maximum number of sheets (plain paper) *1
Tray 1	60 - 105 g/m <sup>2</sup> (16 - 28 lb)	500 (80 g/m², 20 lb)
Tray 2	60 - 105 g/m <sup>2</sup> (16 - 28 lb)	500 (80 g/m², 20 lb)
Bypass Tray	52 - 162 g/m <sup>2</sup> (14 - 42 lb)	100 (80 g/m², 20 lb)
PAPER FEED UNIT Type 3800C (500 × 1)	60 - 105 g/m <sup>2</sup> (16 - 28 lb)	500 (80 g/m <sup>2</sup> , 20 lb)
PAPER FEED UNIT Type 3800C (500 × 2)	60 - 105 g/m <sup>2</sup> (16 - 28 lb)	1000 (80 g/m², 20 lb)
Paper Bank PS470 (2000-sheet Large Capacity Tray)	60 - 105 g/m <sup>2</sup> (16 - 28 lb)	2000 (80 g/m², 20 lb)
SR770 (2 Tray Finisher)	60 - 105 g/m <sup>2</sup> (16 - 28 lb)	2000 (80 g/m², 20 lb)

 $<sup>^{*1}</sup>$  Confirm that the top of the stack is not higher than the limit mark inside the tray.

# Output Paper Sizes (Metric version)

	Feed direction	Size (mm)	Standard Tray	Output Tray	2 Tray Finisher	4-bin Mailbox
A3		297 × 420	0	0	0	0
B4 JIS	┏	257 × 364	0	0	0	0
A4	┏	210×297	0	0	0	0
	D	297 × 210	0	0	0	0
B5 JIS	□	182 × 257	0	0	0	0
	D	257 × 182	0	0	0	0
A5	┏	148×210	0	0	×	0
	₽	210 × 148	0	0	0	0
B6 JIS	□	128 × 182	0	0	×	×
A6	□	$105 \times 148$	0	0	×	×
11"×17"	┏	279 × 432	0	0	0	0
Legal (LG, 8 <sup>1</sup> / <sub>2</sub> " × 14")	┏	216 × 356	0	0	0	0
Letter (LT, $8^1/_2$ " × 11")	₽	216 × 279	0	0	0	0
	₽	279 × 216	0	0	0	0
$5^1/_2$ " × $8^1/_2$ "	□	140×216	0	0	×	0
Executive (Exec., $7^1/_4$ " × $10^1/_2$ ")		184×276	0	0	0	0
	D	276 × 184	0	0	×	×
Folio (8 <sup>1</sup> / <sub>4</sub> " × 13")	┏	210 × 330	0	0	0	×
Foolscap (F4, 8 <sup>1</sup> / <sub>2</sub> " × 13")	₽	216 × 330	0	0	0	×
F/GL (8"×13")	┏	203 × 330	0	0	0	0
Com#10 Env $(9^1/_2" \times 4^1/_8")$	D	241.3 × 104.8	×	0	×	×
C6 Env (9.02" × 6.38")	D	229 × 162	×	0	×	×
C6 Env (6.38" × 4.49")	D	162×114	×	0	×	×
DL Env (8.66" × 4.33")	D	220×110	×	0	×	×
Monarch Env $(7^1/_2" \times 3^7/_8")$	D	190.5 × 98.4	×	0	×	×
Custom Size		-	0	0	×	×
8K (10 <sup>1</sup> / <sub>2</sub> "×15.35")		267 × 390	0	0	0	×
$16K (7.68" \times 10^{1}/_{2}")$	□	195 × 267	0	0	0	0
	D	267 × 195	0	0	0	0

- O means that the size is supported.
- × means that the size is not supported.

# Output Paper Sizes (Inch version)

	Feed direction	Size (inch)	Standard Tray	Output Tray	2 Tray Finisher	4-bin Mailbox
11"×17"	₽	11"×17"	0	0	0	0
Legal (LG)	□	$8^1/_2$ " × 14"	0	0	0	0
Letter (LT)	D	$8^{1}/_{2}" \times 11"$	0	0	0	0
	D	$11" \times 8^1/_2"$	0	0	0	0
$5^1/_2$ " × $8^1/_2$ "	₽	$5^1/_2$ " × $8^1/_2$ "	0	0	×	0
Executive (Exec.)	D	$7^1/_4$ " × $10^1/_2$ "	0	0	0	0
	D	$10^{1}/_{2}" \times 7^{1}/_{4}"$	0	0	×	×
A3	□	11.26" × 16.54"	0	0	0	0
B4 JIS	D	10.12" × 14.33"	0	0	0	0
A4	D	8.26" × 5.83"	0	0	0	0
	₽	5.83" × 8.26"	0	0	0	0
B5 JIS	□	7.17" × 10.12"	0	0	0	0
	D	10.12" × 7.17"	0	0	0	0
A5	□	5.83" × 8.26"	0	0	×	0
	D	8.26" × 5.83"	0	0	0	0
B6 JIS	D	5.04" × 7.17"	0	0	×	×
A6	□	4.13" × 5.63"	0	0	×	×
Folio	□	$8^1/_4$ " × 13"	0	0	0	×
Foolscap F4	□	$8^{1}/_{2}" \times 13"$	0	0	0	×
F/GL	□	8" × 13"	0	0	0	0
Com#10 Env	D	$9^1/_2$ " × $4^1/_8$ "	×	0	×	×
C6 Env	D	6.38" × 4.49"	×	0	×	×
C5 Env	D	9.02" × 6.38"	×	0	×	×
DL Env	D	8.66" × 4.33"	×	0	×	×
Monarch Env	D	$7^1/_2$ " × $3^7/_8$ "	×	0	×	×
Custom Size	□	-	0	0	×	×
8K	□	$10^{1}/_{2}$ " × 15.35"	0	0	0	×
16K	□	$7.68" \times 10^1/_2"$	0	0	0	0
	₽	$10^1/_2$ " × 7.68"	0	0	0	0

- O means that the size is supported and that the paper size should be set with the control panel. There is no dial in the tray.
- × means that the size is not supported.

# **Paper Recommendations**

# **Loading Paper**

# **∰**Important

- ☐ Do not use paper that is meant for an ink-jet printer or it may stick to the Fusing Unit and cause a paper misfeed.
- ☐ When printing on an OHP transparency that has a print side, load it with the print side over on the Bypass Tray. Not taking this precaution may cause it to stick to the Fusing Unit and cause a misfeed.
- ☐ Print quality cannot be guaranteed if recommended paper is not used. For details about recommended paper, contact your sales or service representative.
- ☐ Do not use paper that has already been printed onto by other printers.

# **Storing Paper**

- Paper should always be stored properly. Improperly stored paper might result in poor print quality, paper misfeeds, or printer damage. Recommendations are as follows:
  - Avoid storing paper in humid areas.
  - Avoid exposing paper to direct sunlight.
  - Store on a flat surface.
- Keep open reams of paper in the package in which the paper came.

# Types of Paper and Other Media

## Plain Paper

- Tray 1/2 can hold up to 500 sheets.
   PAPER FEED UNIT Type 3800C (500x1) can hold up to 500 sheets.
   PAPER FEED UNIT Type 3800C (500x2) can hold up to 1000 sheets.
   Paper Bank PS470 can hold up to 2000 sheets.
   Confirm that the top of the stack is not higher than the limit mark inside the tray.
- Bypass Tray supports custom size, approximately 90 to 304.8 mm in width, and approximately 148.2 to 457.2 mm in length.
- When printing on the reverse side of plain paper that is already printed on, you should load it on the Bypass Tray and select [Plain(Duplex Backside)] from [Media Type] with the printer driver.

# Thick Paper

- Use the Bypass Tray.
- The Bypass Tray can hold paper up to 135 kg (163 g/m²) in weight. The print quality on paper that is thicker cannot be guaranteed.
- Confirm that the top of the stack is not higher than the limit mark inside the tray.
- When printing on thick paper, select thick paper mode with the printer driver.
- When printing on the reverse side of plain paper that is already printed on, you should load it on the Bypass Tray and select [Thick(Duplex Backside)] from [Media Type] with the printer driver.

# Note

☐ The number of sheets to be set may vary depending on the paper thickness and media type.


# OHP transparencies

- When printing on OHP transparencies, use the Bypass Tray.
- Load OHP transparencies on the tray with the print side over or they may stick to the Fusing Unit and cause a misfeed.
- Remove any unused OHP transparencies from the Bypass Tray after you finish printing. Leaving them in the tray may cause them to stick together.
- When printing on OHP transparencies, you should select the OHP transparency mode with the printer driver.
- Confirm that the top of the stack is not higher than the limit mark inside the tray.
- When you print OHP transparencies more than one copies, remove each sheet from the tray one by one before next sheet is printed out, or select "Slip Sheet" in the printer driver.

## Envelopes

# #Important

☐ Only envelopes ① and ② as shown below are supported.

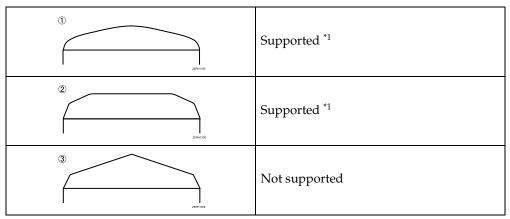


Misfeeds also might occur when using envelopes ① and ② depending on the length and shape of the flaps.

- When printing on envelopes, use the bypass tray, and select thick paper mode with the printer driver.
- Specifications of envelopes are as follows:

	Metric version	Inch version
Weight	72 - 90 g/m <sup>2</sup>	19 - 24 lb
Recommended weight and size	72 g/m <sup>2</sup> , 114 × 162 mm (C6 Env)	24 lb, $3^7/_8$ " × $7^1/_2$ "  (Monarch)

- You can load up to 10 envelopes  $(72 92 \text{ g/m}^2, 19 24 \text{ lb})$  in the Bypass Tray at the same time, without forcibly pressing them. Confirm that the envelopes are not damp, and that the top of the stack is not higher than the limit mark on the side guide.
- Confirm that the print side is facing up when loading onto the Bypass Tray.
- When loading envelopes, be sure to unfold the flaps and position them opposite to the paper feed direction.

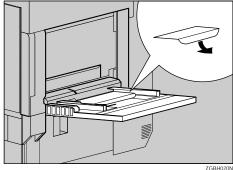

- Confirm that there is no air in the envelopes before loading.
- To get better print quality, it is recommended that you set the right, left, top, and bottom print margin, to at least 15 mm (0.6") each.
- Do not print on both sides of envelopes.
- Load only one size and type of envelopes at the same time.
- Before loading envelopes, flatten the leading edges (the side being fed into the printer) of them by running a pencil or ruler across them.
- Before loading envelopes, confirm that they are rectangular in shape.
- Supported size of envelope is listed on p.1 "Paper and Other Media".


## Paper not supported by this printer

Avoid using the following types of paper that are not supported by this printer:

- Paper meant for an ink-jet printer
- Bent, folded, or creased paper
- Curled or twisted paper
- Torn paper
- Wrinkled paper
- Damp paper
- Paper that is dry enough to emit static electricity
- Paper that has already been printed onto, except a preprinted letterhead
- Coated paper
- Special paper, such as thermal paper, aluminum foil, carbon paper and conductive paper
- Paper whose weight is heavier or lighter than the limitation.
- With windows, holes, perforations, cutouts, or embossing
- · Label paper on which glue or base paper is exposed
- Paper with clips or staples

# **Printable Area**

The following shows the printable area for this printer. Be sure to set the print margins correctly by the application.

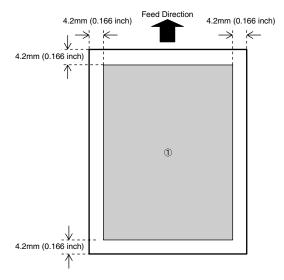

①: printable area

# Note

☐ The printable area may vary depending on the paper size, printer language and printer driver settings.

# **Loading Paper**

Load paper and change the paper size in Tray 1, Tray 2 and the optional Paper Feed Unit by following the procedures below.

# **#Important**

- ☐ Tray 1 uses  $11 \times 8^1/_2$  ☐ paper exclusively. Load only  $11 \times 8^1/_2$  paper at all times.
- □ 2000-sheet Large Capacity Tray uses  $11 \times 8^1/_2$  □ paper exclusively. Load only  $11 \times 8^1/_2$  paper at all times.
- ☐ If you want to load A4 ☐ in Tray 1 and optional 2000-sheet Large Capacity Tray, contact your sales or service representative.


# 

See p.1 "Paper Sizes" concerning paper to be loaded in the Paper Tray and optional Paper Feed Unit.


# Loading Paper in Tray 1

# **∰**Important

- ☐ Tray 1 uses  $11 \times 8^1/2$  ☐ paper exclusively. Load only  $11 \times 8^1/2$  paper at all times.
- ☐ If you want to load A4 ☐ in Tray 1, contact your sales or service representative.
- Pull out the paper tray slowly until it stops.

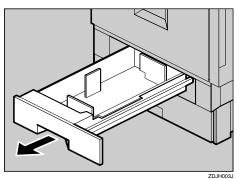

2 Load paper into the tray with the print side down.

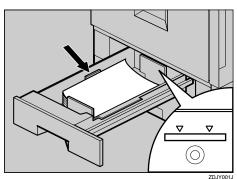

# **∰**Important


- ☐ Confirm that the top of the stack is not higher than the limit mark inside the tray.
- **3** Carefully slide the paper tray into the printer until it stops.

F


# Loading Paper in Tray 2 and the Optional Paper Feed Unit

This section describes loading paper which is different from default size in Tray 2.


1 Pull out the Paper Tray slowly until it stops.

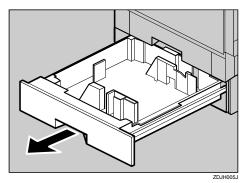


2 Set the paper guide lock to the "unlocked" position.

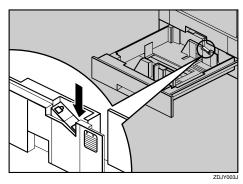


Pushing the green lever of the side guide (①), move the side guide toward you to open it (②).

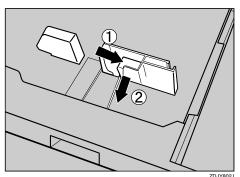

Pinching both sides of the end guide (1), move the end guide in the direction of the arrow to open it.

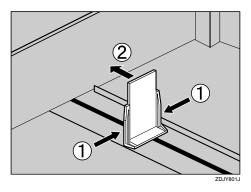


**5** Load paper in the same direction.

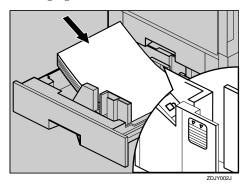


# **∰**Important


- ☐ Confirm that the top of the stack is not higher than the limit mark inside the tray.
- Pushing the green lever of the side guide (①), move the side guide toward the paper stack until it stops (②).

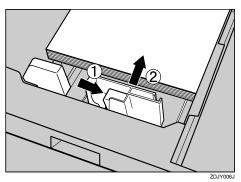

Make sure the paper is fixed in place, and then lock the side guide.

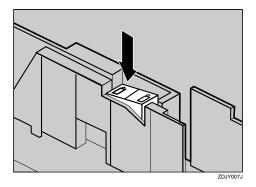

Pinching both sides of the end guide (①), move the end guide toward the paper stack until it stops (②).

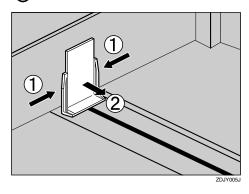

2 Carefully slide the paper tray into the printer until it stops.


# **∰**Important

☐ Do not slide the paper tray in with force. If you do, the front and side guides might move.


# Loading paper in Paper Bank PS470 (2000-sheet Large Capacity Tray)

# **∰**Important

- □ 2000-sheet Large Capacity Tray uses  $11 \times 8^1/2$  □ paper exclusively. Load only  $11 \times 8^1/2$  paper at all times.
- ☐ If you want to load A4 ☐ in the 2000-sheet Large Capacity Tray, contact your sales or service representative.
- 1 Pull out the Paper Tray slowly until it stops.

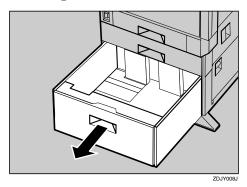

With the print side down, align all four sides of two paper stacks, and then load them next to each other in the tray. Each side has a limit of 1,000 sheets.

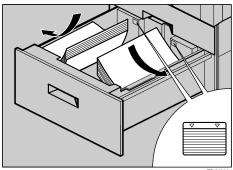

ZDJY009

# **∰**Important

- ☐ Align the paper and load them against the left and right walls, or a paper misfeed might occur.
- ☐ Confirm that the top of the stack is not higher than the limit mark inside the tray.
- Push in the Paper Tray slowly until it stops.

# Load Paper in the Bypass Tray

Besides regular paper, you can load thick paper, envelopes, OHP transparencies, and paper that is longer than A3 $\square$  onto the Bypass Tray, which cannot be loaded in the Paper Trays or Paper Feed Unit.


# Note

- ☐ Paper sizes supported by the Bypass Tray are 90 - 304.8 mm in width, and 148.2 - 457.2 mm in length.
- ☐ If you load custom size paper, select [Custom Size] in the [Bypass Tray **Size]** with the control panel. And set the paper size with the printer driver.
- ☐ When you load custom-sized paper into the Bypass Tray, be sure to load it in the direction of short edge feed.
- ☐ The number of pages that can be loaded in the Bypass Tray differs depending on the media type. Confirm that the top of the stack is not higher than the limit mark inside the tray.

# Limitation


- ☐ You cannot use the following functions when printing on paper that is loaded in the Bypass Tray.
  - Duplex Print
  - Collate
  - Staple/Punch
  - **Auto Tray Select**

# 1 Open the bypass tray.

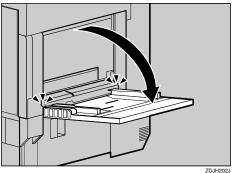


# Note


☐ If you load A4 or larger size paper, pull out the bypass tray extension, and then flip it open.

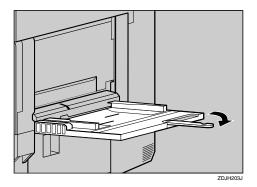

2 Slide the side guides outward (1), and then load paper until it stops with the print side up (2).

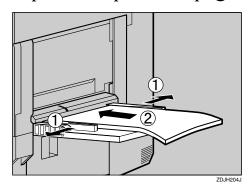

Adjust the side guides to the paper width.

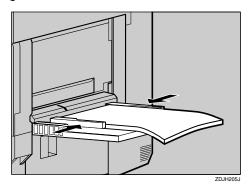

# ∰Important

- ☐ Confirm that the top of the stack is not higher than the limit mark inside the tray.
- ☐ Shuffle the paper before loading the stack onto the tray so multiple sheets are not fed in at one time.

# Setting the Paper Feed Direction

When using the Bypass Tray, you can set feed direction for the following sizes: A4, A5, B5, Executive, Letter and 16K.

1 Set feed direction and paper size using the control panel.

2 Use the printer driver to set the size of the paper loaded on the Bypass Tray.

# **Changing the Paper Tray Settings**

This section describes the settings of "Size", "Type", "Locking" and "Tray Priority" of the paper tray.

### Size

You can set the paper size for Tray 2, optional Tray 3 and Tray 4.

### 

□ Paper sizes that are not selected automatically are B5 JIS (182 × 257), 8  $1/2 \times 11$ , 8  $1/2 \times 14$ , 16k (267 × 195), 16k (195 × 267), 8k (267 × 390), 8  $1/4 \times 13$ , 8  $1/2 \times 13$ , 8 × 13 and 7  $1/4 \times 10$  1/2.

# Type

If you use different kinds of paper, you can set the media type for Tray 1, Tray 2, optional Tray 3 or optional Tray 4.

By selecting the media type you want to load, the printer can execute better printing. You can select from the following media types:

Tray 1 - 4
 Plain Paper, Recycled Paper, Special Paper, Color Paper, Letterhead, Preprinted, Prepunched, Bond Paper, Card Stock

# N

## Locking

If you use different kinds of paper, you can lock a tray to prevent printing on wrong paper such as letterhead or colored paper. When "Auto Tray Select" is selected in the Input Tray selections from the printer driver, the locked tray will not be used. You can select each tray set to on or off.

# Tray Priority

You can set which tray should be checked first when "Auto Tray Select" is selected in the Paper Source selections from the printer driver. However, Bypass Tray cannot be selected for Tray Priority.

# **∰**Important

☐ Tray 1 uses  $11 \times 8^1/_2$  ☐ paper exclusively. Load only  $11 \times 8^1/_2$  paper at all times.

Paper Bank PS470 uses  $11 \times 8^1/2$  paper exclusively. Load only  $11 \times 8^1/2$  paper at all times.

If you want to load A4  $\square$  in optional Paper Bank PS470, contact your sales or service representative.

1 Keep pressing [Menu] until "Tray Setup Menu" appears.

Tray Setup Menu

# Press [Enter #].

The following message appears on the panel display.

Tray 1 Type Plain Paper \* Press [▲] or [▼] until the media type you want to select appears on the panel display, and then press [Enter #].

The following message appears on the panel display.

Tray 1 Locking Off \*

Press [▲] or [▼] to select "On" or "Off", and then press [Enter #].

The following message appears on the panel display.

Tray 2 Size Auto \*

Press [▲] or [▼] until the paper size you want to select appears on the panel display, and then press [Enter #].

The following message appears on the panel display.

Tray 2 Type Plain Paper \*

Press [▲] or [▼] until the media type you want to select appears on the panel display, and then press [Enter #].

The following message appears on the panel display.

Tray 2 Lockin§ Off \*

Repeat from step **3** to set other trays in the same way.

And then following message appears on the panel display.

Tray Priority Tray 1 Press [▲] or [▼] until the paper tray you want to select appears on the panel display, and then press [Enter #].

# Note

☐ When sheets of mixed orientation are loaded, print appears in the direction of the long edge feed, regardless of the Tray Priority setting.

After a while, "Ready" appears on the panel display.

# 2. Cleaning and Adjusting the Printer

# Cautions to Take When Cleaning

### **⚠ WARNING:**

- Do not remove any covers or screws other than those specified in this manual. Some parts of the machine are at a high voltage and could give you an electric shock. Also, if the machine has laser systems, direct (or indirect) reflected eye contact with the laser beam may cause serious eye damage. When the machine needs to be checked, adjusted, or repaired, contact your service representative.
- Do not take apart or attempt any modifications to this machine. There
  is a risk of fire, electric shock, explosion or loss of sight. If the machine
  has laser systems, there is a risk of serious eye damage.

### **⚠** CAUTION:

• When removing misfed paper, do not touch the fusing unit because it could be very hot.

Clean the printer periodically to maintain fine printing.

Dry wipe the exterior with a soft cloth. If dry wiping is not enough, wipe with a soft, wet cloth that is wrung out well. If you still cannot remove the stain or grime, use a neutral detergent, then wipe over with a well-wrung wet cloth, dry wipe, and let it dry.

# **∰**Important

- ☐ To avoid deformation, discoloration, or cracking, do not use volatile chemicals, such as benzine and thinner, or spray insecticide on the printer.
- $\Box$  If there is dust or grime inside the printer, wipe with a clean, dry cloth.


# Cleaning the Registration Roller

### riangle CAUTION:


 The inside of the printer becomes very hot. Do not touch the parts with a label indicating the "hot surface", otherwise it could cause a burn.

Clean the roller when replacing the black Development Unit.


- 1 Turn off the power switch and unplug the power cable.
- 2 Open the right cover shown in the illustration.

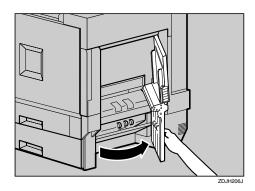

The registration roller is set shown in the illustration.

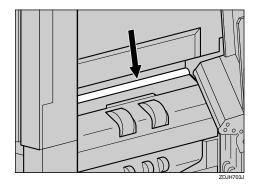


Wipe around the registration roller by turning with a soft damp cloth.

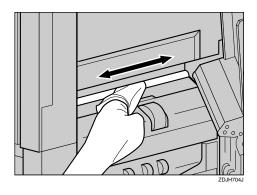

# ∰Important

- ☐ Do not use chemical cleaner or organic solvent such as thinner or benzene.
- 4 Close the right cover by pushing the area labeled "PUSH".

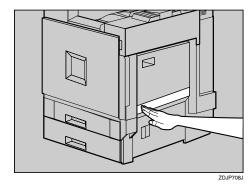


Plug in the power cable and turn on the power switch.


# Cleaning the DustProof Glass

The dustproof glass may require cleaning if white lines appear on the print side of the document.


- 1 Turn off the power switch and unplug the power cable.
- 2 Open the front cover and remove the cleaning brush.

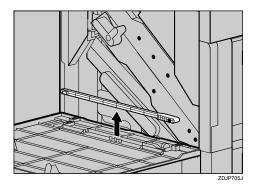

There are four holes for cleaning the dustproof glass.

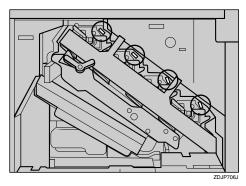

Slide the cleaning brush in and out slowly 8 to 10 times to clean all four areas.

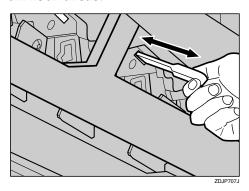

# **∰**Important

- ☐ Do not insert the brush roughly, or the printer might be damaged.
- 4 Return the cleaning brush to its original position.
- Plug in the power cable and turn on the power switch.

# Adjusting the Color Registration

When the printer is moved, when the Fusing Unit is replaced, or after printing repeatedly for some time, registration shifting might occur. By performing color registration adjustment, you can maintain optimum print results.


# Note

☐ Normally, do not perform manual color adjustment.

# **Auto Adjust**

If the color documents show registration shifting, perform automatic color adjustment.


1 Keep pressing [Menu] until "Maintenance" appears.

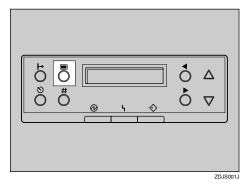

Ma intenance

# Press [Enter #].

The following message appears on the panel display.

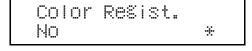

- Press [▲] or [▼] to select "Yes", and then press [Enter].
- Press [▲] or [▼] to display "Auto Adjust", and then press [Enter #].

Auto Adjust

# Press [Enter #].

The following message appears on the panel display.

Auto Adjust Now Yes \*

Press [▲] or [▼] to select "Yes", and then press [Enter #]. Automatic color adjustment begins, and the following message appears on the panel display.

Adjustin§...

When it completes, a check message is displayed, and the display is returned to the "Auto Adjust" menu.

Completed

Auto Adjust Yes \*

After a while, "Ready" appears on the panel display.

## Note

☐ When the toner cartridge is almost empty or "Auto Adjust" is not completed, the following message appears on the panel display.

Failed. Press # To Exit

Press **[Enter #]** to return to "Maintenance", and then repeat the steps from **2**.

# **Fuser Adjust**

## When replacing the fusing unit


☐ When "Toner is Almost Empty" appears on the panel display, replace the toner cartridge and perform "Auto Adjust", and then perform the "Fuser Adjust".

# 

 $\Rightarrow$  p.65 "Replacing the Toner Cartridge"

⇒ p.22 "Auto Adjust"

1 Keep pressing [Menu] until "Maintenance" appears.

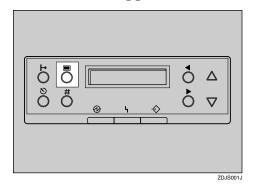

Maintenance

# Press [Enter #].

The following message appears on the panel display.

Color Re≋ist. No \*

- Press [▲] or [▼] to select "Yes", and then press [Enter #].
- Press [▲] or [▼] to display "Fuser Adjust At Unit Replace", and then press [Enter #].

Fuser Adjust At Unit Replace

The following message appears on the panel display.

Print Test Sheet No \*

# **#Important**

☐ When the toner cartridge is almost empty or "Auto Adjust" is not finished, the following message appears on the panel display and Fuser Adjust is not available.

Cannot Adjust See User's Guide

Confirm that the toner cartridge is installed. The toner cartridge must be installed. See p.65 "Replacing the Toner Cartridge".

If the toner cartridge is installed, perform "Auto Adjust". See p.22 "Auto Adjust".

Confirm that the A3 paper which comes with the Fusing Unit is in the Bypass Tray, and then press [▲] or [▼] to select "Yes", and then press [Enter #].

The printer prints 8 Test Sheet (A - H). For details about Test Sheet, see p.28 "Test Sheet Samples"

To make the offset settings, repeat steps 1 to 1 and select "No" when the following message appears on the panel display.

Print Test Sheet No \*

# Press [Enter #].

Check the test sheets and select the correction value for A through H.

- Select "1", if black and magenta square overlap sharply and you can see white slits as the sample.
- Select "0", if black and magenta square do not overlap sharply and you can not see white slits clearly.

A B C D E F G H 0 0 0 0 0 0 0 0

Press [♠] or [▼] to select "0" or "1" as the values for A - H. Press [▶] or [♠] to move to the next letter. After setting the value for "H", press [Enter #] and the printer returns to "Fuser Adjust At Unit Replace".

After a while, "Ready" appears on the panel display.

# **∰**Important

☐ If you select "0" for each alphabets or an invalid value is selected, an error message is displayed. In this case, press [Enter] to repeat steps from 7.

Invalid Value Cannot Adjust

### When color shifting occurs

Perform this procedure when color shifting occurs even after performing "Auto Adjust".

1 Load A4 or larger paper in the Bypass Tray.


### Note

☐ Be sure to select paper size in the "Tray Setup Menu".

# 

For details about paper size and the procedure for loading paper in the Bypass Tray, see p.16 "Changing the Paper Tray Settings".

**2** Keep pressing [Menu] until "Maintenance" appears.

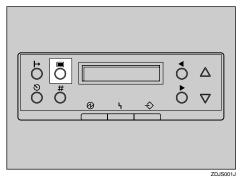

Maintenance

# Press [Enter #].

The following message appears on the panel display.

Color Re§ist. No \*

- Press [▲] or [▼] to select "Yes", and then press [Enter #].
- Press [▲] or [▼] to display "Fuser Adjust Custom Adjust", and then press [Enter #].

Fuser Adjust Custom Adjust

The following message appears on the panel display.

Custom Adjust Plain 600 dpi \*

# **∰**Important

☐ When the toner cartridge is almost empty or "Auto Adjust" is not finished, the following message appears on the panel display and Fuser Adjust is not available.

Cannot Adjust See User's Guide

Confirm that the toner cartridge is installed. The toner cartridge must be installed. See p.65 "Replacing the Toner Cartridge".

If the toner cartridge is installed, perform "Auto Adjust". See p.22 "Auto Adjust".

Press [▲] or [▼] to display the media types and resolution in which color shifting occurs, and then press [Enter #].

Select a value from "Plain 600 dpi", "Plain 1200 dpi" or "Thick 600 dpi".

## Note

☐ To adjust the color registration on thick paper, select "Thick: 600dpi" regardless of the current resolution.

The following message appears on the panel display.

Print Test Sheet No \*

Press [▲] or [▼] to select "Yes", and then press [Enter #].

The following message appears on the panel display.

Set Sheet Bypass A3

After printing the test sheet, "Ready" appears on the panel display.

To make the offset settings, repeat steps 2 to 3 and select "No" when the following message appears on the panel display.

Print Test Sheet No \*

# 9 Press [Enter #].

The following message appears on the panel display.

Select Action 0:Exit

# Press [▲] or [▼] to make the offset settings, and then press [Enter #].

When such a clear (not smeared in red) square as the sample is:

- at its center position, select "0".
- shifted to the left, select "-1".
- shifted to the right, select "+1".

Select Action: 0: Exit

Select Action: -1: Re-adjust

Select Action: +1: Re-adjust


If you select "0: Exit", the printer returns to the previous menu.

If you select "-1" or "+1", the printer returns to step **6**. Keep adjusting until "0" is available.

# **Manual Adjust**

# #Important

- ☐ Normally, do not perform manual color adjustment.
- **1** Keep pressing [Menu] until "Maintenance" appears.

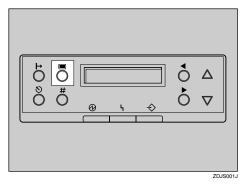

Maintenance

# Press [Enter #].

The following message appears on the panel display.

Color Re§ist. No \*

- Press [▲] or [▼] to select "Yes", and then press [Enter].
- Press [▲] or [▼] to display "Manual Adjust", and then press [Enter].

Manual Adjust

The following message appears on the panel display.

Print Test Sheet No \* Press [▲] or [▼] to select "Yes", and then press [Enter #].

The printer prints the test sheet. See p.28 "Test Sheet Samples".

To make the offset settings, repeat steps 1 to 2 and select "No" when the following message appears on the panel display.

Print Test Sheet No \*

Press [Enter #].

The following massage appears on the panel display.

Adjustment A 0.0 \*

- Enter the correct values for A through L on the test sheet in order.
  - Note
  - ☐ Confirm the printed Test Sheet to enter the correction values.
  - Use [▲] or [▼] to enter the value (-7.0 to +7.0) shown next to the whitest square, into box A of the Test Sheet.

Adjustment A +2.0

- Note
- ☐ Pressing 【▲】 or 【▼】 increases or decreases the value in 0.5 units.
- ☐ Sometimes, there are two of the whitest squares next to each other. For example, if the two squares of "+1" and "+2" are the whitest, enter "+1.5".

- ☐ You can adjust the color alignment for each color in the range of "-7.0 to +7.0".
- ☐ There is an area on the Test Sheet for you to put down the values of "A" through "L".
- 2 Press [Enter #].
- 3 Make the settings for "B" to "L" in the same manner, using steps 1 and 2.
- 4 When you finish the settings up to "L", press [Enter #].

The following message appears on the panel display.


Maintenance

After a while, "Ready" appears on the panel display.


### **Test Sheet Samples**

Following images are samples for the test sheet.


### ❖ ColorRegistSheet

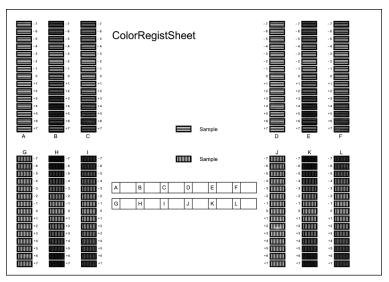

### **❖** Fuser Adjust Sheet I

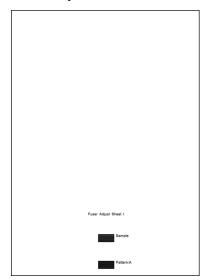

### ❖ Fuser Adjust Sheet II

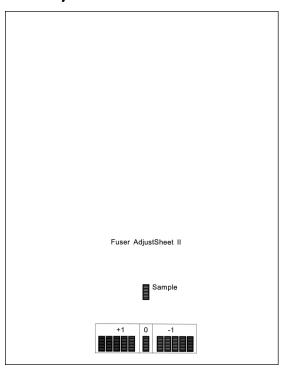

### 2

### **Adjusting the Image Density**


Adjust the image density when the print side of the page is a hazy gray or the print image looks patchy.

### ∰Important

- ☐ Extreme settings may create output that appears dirty.
- ☐ Image density settings should be made from the application or the printer driver whenever possible.

### Note

- ☐ Changing the image density setting might cause a deterioration of color balance. We recommend that you leave the image density at its factory default setting.
- 1 Keep pressing [Menu] until "Maintenance" appears.

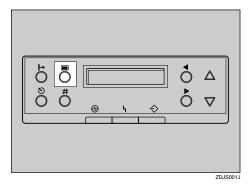

Maintenance

**2** Keep pressing [Enter #] until "Image Density" appears.



## Press [▲] or [▼] to select "Yes", and then press [Enter #].

The following massage appears on the panel display.

Black Ø

Press [▲] or [▼] to set the image density value for each color, and then press [Enter #].

The display of the following color appears on the panel display.

#### Note

☐ You can adjust the image density in seven steps from -3 to +3. Increasing the value makes the printouts darker and decreasing the value makes the printouts lighter.

When the setting completes, "Maintenance" appears on the panel display.


Ma intenance

After a while, "Ready" appears on the panel display.

### Adjusting the Registration of the Trays


You can adjust the registration of each tray. The vertical adjustment is used for all trays. Normally, you need not update the registration. But when the optional Paper Feed Unit or the Duplex Unit is installed, updating the registration is useful in some cases. The following procedure describes how to adjust Tray 3. You can use the same procedure to adjust the other tray as well.

**1** Keep pressing [Menu] until "Maintenance" appears.

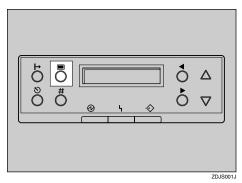

Maintenance

2 Keep pressing [Enter #] until "Registration" appears.

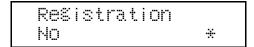


Press [▲] or [▼] to select "Yes", and then press [Enter #].

Print the test sheet to preview the settings.

- Press [▲] or [▼] to select "Yes", and then press [Enter #].
- Press [▲] or [▼] to select the tray to adjust, and then press [Enter #].

  The printer prints the test sheet.

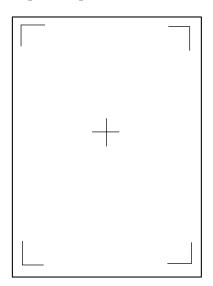

Confirm the position of the image to test sheet, and then adjust the registration value.

To make adjustment, repeat steps
to and select "No" when the
following message appears on the
panel display.

Print Test Sheet No \*

Press [Enter #].

The following massage appears on the panel display.

Enter Adjustment Vertical

### 8 Press [Enter #].


The following massage appears on the panel display.

Tray 3 0

Press [▲] or [▼] to set the registration value, and then press [Enter #].

The display of the following tray appears on the panel display.

- **𝒜** Note
- ☐ You can adjust the registration for each tray in the range of "-4 to +4".
- □ Pressing [♠] or [♥] makes the value increase or decrease by 1.0 mm step.
- ☐ Increase the value to shift the print area in a positive direction, and decrease to shift in a negative direction.

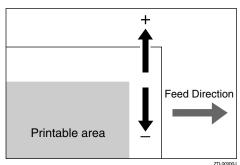

When the setting completes, "Maintenance" appears on the panel display.

Maintenance ReSistration

Print the test sheet to check the settings you have made.

## 3. Using SmartNetMonitor

### **SmartNetMonitor for Admin**

SmartNetMonitor for Admin is a software that uses the TCP/IP and IPX/SPX protocols to monitor the printers in a network. It can monitor multiple network printers having IP/IPX addresses. We recommend network administrators to use this software.

#### What can it do?

SmartNetMonitor for Admin is equipped with the following functions.

- Monitors multiple printers at the same time. When there are many printers, you can create groups and classify the printers to facilitate management.
- Checks the printer's network settings and detailed information of devices.
- Checks per print job the number of pages printed with the printer.
- Enables extra-router printer searching and non-local printer monitoring.

#### 

See the SmartNetMonitor for Admin Help file for more information about using SmartNetMonitor for Admin.

### Installing SmartNetMonitor for Admin

- 1 Close all applications that are running.
- **2** Insert the CD-ROM into the CD-ROM drive.
- 3 Click [Start] on the task bar.
- 4 Click to select [Run].
- In the [Run] dialog box, click [Browse].
- 6 Select the CD-ROM drive.
- **7** Select the file titled [SSetup.exe].
- 8 Click [Open].
- 9 Click [0K].

### 10 Select a language to change the interface language, and then click [OK].

The following languages are available: ENGLISH (English), DEUTSCH (German), FRANCAIS (French), ITALIANO (Italian), ESPANOL (Spanish), SVENSKA (Swedish), NEDRLNDS (Dutch), NORSK (Norwegian), DANSK (Danish), SUOMI (Finnish), PORTUGUS (Portuguese), POLSKI (Polish), CHESKY (Czech), MAGYAR (Hungarian)

- Select the SmartNetMonitor for Admin, and then click [OK].
- **1** Follow the instructions on the screen.

#### Note

- ☐ If you require restarting the computer after the installation of SmartNet-Monitor for Admin is completed, restart the computer and continue the configuration.
- ☐ SmartNetMonitor for Admin is stored in the following folder on the CD-ROM

NETWORK\NETMON\ADMIN\DISK1

### Protocol Stack

OS	Protocol Stack	
Microsoft Windows 95/98/Me	TCP/IP provided with Windows 95/98/Me	
	IPX/SPX provided with Windows 95/98/Me	
	NetWare network client provided with Windows 95/98	
	Novell Client for Windows 95/98	
Microsoft Windows 2000	TCP/IP provided with Windows 2000	
	IPX/SPX provided with Windows 2000	
	NetWare Client provided with Windows 2000	
	Novell Client for Windows NT/2000	
Microsoft Windows XP	TCP/IP provided with Windows XP	
Microsoft Windows NT4.0	TCP/IP provided with Windows NT	
	IPX/SPX provided with Windows NT	
	Client Service for NetWare provided with Windows NT	
	Novell Client for Windows NT/2000	

### **SmartNetMonitor for Client**

SmartNetMonitor for Client is a software equipped with the following functions. We recommend all users of this printer to install this software.

- Provides the function to print in a Peer-to-Peer network, using the TCP/IP protocol and IPP from Windows 95/98/Me, Windows 2000, Windows XP and Windows NT 4.0.
- Uses the TCP/IP and IPX/SPX protocols to monitor the status of devices in a network constantly.

#### ♦ What can it do?

SmartNetMonitor for Client is equipped with the following functions.

- Peer-to-Peer print function
  - Prints directly on the network printer without a print server.
  - Prints on a substitute printer when there are too many jobs accumulated in the specified printer, or when an error disables printing (Recovery printing).
  - Allocates multiple printings to multiple printers (Parallel Printing).
  - Prior group registration of printers specified for Recovery/Parallel Printing.
- Simultaneously monitors multiple printers in use.
- Checks the printer's network settings and detailed information of devices.
- An error message warns when there is an error on the specified printer during transfer of data.
- Enables extra-router printer searching and non-local printer monitoring.

### Limitation

- ☐ Make similar settings for the option configuration of the printer for Recovery/Parallel Printing and the printer for giving print commands. If the required options necessary for printing, such as the Paper Feed Unit, are not installed on the substitute printer, that function is disabled.
- □ Load paper of the same size on both the printer for Recovery/Parallel Printing and the printer for giving print commands. When specifying a particular Paper Tray for printing, load paper of the same size into that tray.
- ☐ If the type and devices of the printer for Recovery/Parallel Printing and the printer for giving commands are different, the print results might not turn out identical.
- ☐ If you select Check and Print or Secure Print, you cannot execute Recovery/Parallel Printing.

### **₽** Reference

See the SmartNetMonitor for Client Help file for more information about using SmartNetMonitor for Client.

### **Installing SmartNetMonitor for Client**

- 1 Close all applications that are running.
- **2** Insert the CD-ROM into the CD-ROM drive.
- Click [Start] on the task bar.
- 4 Click to select [Run].
- In the [Run] dialog box, click [Browse].
- **6** Select the CD-ROM drive.
- **7** Select the file titled [SSetup.exe].
- 8 Click [Open].
- 9 Click [OK].
- f 0 Select a language to change the interface language, and then click [OK].

The following languages are available: ENGLISH (English), DEUTSCH (German), FRANCAIS (French), ITALIANO (Italian), ESPANOL (Spanish), SVENSKA (Swedish), NEDRLNDS (Dutch), NORSK (Norwegian), DANSK (Danish), SUOMI (Finnish), PORTUGUS (Portuguese), POLSKI (Polish), CHESKY (Czech), MAGYAR (Hungarian)

- Select the SmartNetMonitor for Client, and then click [OK].
- 12 Follow the instructions on the screen.

### **𝚱** Note

- ☐ If you require restarting the computer after the installation of SmartNet-Monitor for Client is completed, restart the computer and continue the configuration.
- ☐ SmartNetMonitor for Client is stored in the following folder on the CD-ROM

NETWORK\NETMON\CLIENT\DISK1



OS	Protocol Stack
Microsoft Windows 95/98/Me	TCP/IP provided with Windows 95/98/Me IPX/SPX provided with Windows 95/98/Me NetWare network client provided with Windows 95/98 Novell Client for Windows 95/98
Microsoft Windows 2000	TCP/IP provided with Windows 2000 IPX/SPX provided with Windows 2000 NetWare Client provided with Windows 2000 Novell Client for Windows NT/2000
Microsoft Windows XP	TCP/IP provided with Windows XP
Microsoft Windows NT4.0	TCP/IP provided with Windows NT IPX/SPX provided with Windows NT Client Service for NetWare provided with Windows NT Novell Client for Windows NT/2000

### Displaying the Status of Printer

You can view the status of printers using SmartNetMonitor for Admin and SmartNetMonitor for Client.

### SmartNetMonitor for Admin

- 1 Run SmartNetMonitor for Admin.
- 2 Click the [Group] menu, point to [Open LAN], and select [TCP/IP] or [IPX/SPX]. The status of each printer is indicated with an icon in the list.
  - Ø Note
  - ☐ For more information about the status icons, see the Help file.
- To get further information, click the desired printer to select from the list, and then click [Open] on the [Device] menu.

The status of the printer is displayed on a dialog box.

- Note
- ☐ For more information about each item on the dialog box, see the Help file.

### SmartNetMonitor for Client

To view the status of printers using SmartNetMonitor for Client, you must, in advance, configure SmartNetMonitor for Client so it monitors the printer whose status you want to view.

### **Monitoring Printers**

1 Run SmartNetMonitor for Client.

The SmartNetMonitor for Client icon appears at the right end of the taskbar.

- 2 Right-click the SmartNetMonitor for Client icon, and check if the desired printer is configured on the pop-up menu that appears.
  - If it is configured, see p.39 "Displaying the Status of Printers".
- If the desired printer is not configured, click [Options] on the pop-up menu. The [SmartNetMonitor for Client Options] dialog box appears.

- 4 Click the printer to be monitored, and select the [To Be Monitored] check box from the [Monitoring Information Settings] group.
  - Note
  - ☐ Selecting the **[Displayed on Task Bar]** check box will bring up the status of a printer with an icon on the SmartNetMonitor for Client icon on the task tray.
- Click [OK].

The dialog box closes and the configured printer is monitored.

#### Displaying the Status of Printers

- **1** Run SmartNetMonitor for Client.
- **2** The status of each printer is displayed on the SmartNetMonitor for Client icon on the task tray.
  - Ø Note
  - ☐ For more information about the status icons, see the Help file.
- To get further information on the status, right-click the SmartNetMonitor for Client icon and click the desired printer.

The status of the printer is displayed on a dialog box.

- Note
- ☐ For more information about each item on the dialog box, see the Help file.

## 4. Troubleshooting

## Error & Status Messages on the Control Panel

### Status Messages

Messages/Second messages	Description	Solution
Calibrating	The printer is calibrating the color.	Wait for a while.
Energy Save Mode	In Energy Save Mode Level 2.	No action required.
Hex Dump Mode	In Hex Dump Mode.	No action required.
Loading Toner	The printer is loading the toner.	Wait for a while.
Offline	The printer is offline and cannot print data.	Press [On Line].
Processing	Print data is being processed.	Wait for a while.
Ready	The default ready message. The printer is ready to use.	No action required.
Resetting Job	Job is being reset.	Wait for a while.
Warming Up	The printer is warming up and not ready.	Wait until the printer signals Ready.

### **♦** Alert Messages

Messages/Second messages	Description	Solution
Add Staples	The stapler is out of staples. Job is not stapled.	Replace new staples. See p.90 "Adding Staples".
Add Toner/Yellow/Magenta/Cyan/Black	The printer is out of the indicated toner(s).	Replace a new toner cartridge of the indicated color(s). See p.63 "Replacing Consum- ables and Maintenance Kit".
Close Duplex Unit Cover	The cover for the duplex unit is open.	Close the cover for the duplex unit.
Close Finisher Front Cover	The front cover for the finisher is open.	Close the front cover for finisher.
Close Upper Right Cover	The upper right cover (the cover for the toner cartridge) is open.	Close the upper right cover.
Close Finisher Upper Cover	The finisher upper cover is open.	Close the upper cover for the finisher.
	The paper entrance cover for the finisher is open.	Close the upper entrance cover for the finisher.

Description	Solution
The front cover is open.	Close the front cover for the printer.
The right cover for the paper feed table/large capacity tray is open.	Close the right cover for the paper feed table/large capacity tray.
The cover for 4-bin Mailbox is open.	Close the cover for the 4-bin Mailbox tray.
The right cover is open.	Close the right cover.
The upper left cover (the cover for the fusing unit) is open.	Close the upper left cover.
There is a problem with the finisher.	Turn the power switch off and then on. If the message ap- pears again, contact your sales or service representative.
There is misfeed in the finisher or there is a problem with the staple unit failure.	Remove the misfeed. If the message appears again, contact your sales or service representative.
There is a problem with the paper lift motor of the Tray 1.	Turn the power switch off and then on. If the message ap- pears again, contact your sales or service representative.
There is a problem with the paper lift motor of the Tray 2.	Turn the power switch off and then on. If the message ap- pears again, contact your sales or service representative.
There is a problem with the paper lift motor of the paper tray 3.	Align paper and set them in the collect position in the paper tray 3.
	Turn the power switch off and then on. If the message ap- pears again, contact your sales or service representative.
There is a problem with the paper lift motor of the paper tray 4.	Turn the power switch off and then on. If the message ap- pears again, contact your sales or service representative.
The paper size or media type set in the Bypass Tray differs from the setting made.	Load {paper size and media type} paper into the Bypass Tray, and then change the paper size and media type with the operation panel.  Or press [Enter #], and then select the tray with the control panel.  Or press[Cancel] to cancel the
	The right cover is open.  The right cover for the paper feed table/large capacity tray is open.  The cover for 4-bin Mailbox is open.  The right cover is open.  The upper left cover (the cover for the fusing unit) is open.  There is a problem with the finisher.  There is a problem with the staple unit failure.  There is a problem with the paper lift motor of the Tray 1.  There is a problem with the paper lift motor of the paper tray 3.  There is a problem with the paper lift motor of the paper tray 4.  The paper size or media type set in the Bypass Tray differs

Messages/Second messages	Description	Solution
Load Paper Tray #	The indicated tray is out of paper. #: tray number	Load paper into the indicated paper tray.
Load Tray # Paper Size Media Type	The paper size or media type set in the indicated tray differs from the setting made. #: tray number	Load {paper size and media type} paper into the tray, and then change the paper size and type with the operation panel.  Or press [Enter #], and then select the tray with the control panel.  Or press[Cancel] to cancel the
Punch-Hole Chips Are Full	The punch waste box is full of punch chips.	print job.  Remove the punch chips from the punch waste box.  See p.62 "Removing Punchhole Chips"
		When the message appears even if the punch waste box is not full, remove the Punchhole chips on the top of the punch waste box.
		See p.62 "When the message appears even after removing the Punch-hole chips"
Remove Misfeed A:Internal Path /See Instructions in Front Cover	There is a misfeed in the printer.	Remove the misfed paper following the instructions inside the front cover.  For more information, see
Cover		p.54 "When "Remove Misfeed A:Internal Path" Appears".
Remove Misfeed B: Fusing Unit /See Instructions in Front	There is a misfeed in the fusing unit.	Remove the misfed paper following the instructions inside the front cover.
Cover		For more information, see p.55 "When "Remove Misfeed B: Fusing Unit" Appears".
Remove Misfeed R: Finisher /Open Finisher Cover	There is a misfeed in the finisher.	Open the finisher cover and remove misfeed.  For more information, see p.56 "When "Remove Misfeed R: Finisher" Appears".

Messages/Second messages	Description	Solution
Remove Misfeed W: Mailbox /Open Mailbox Cover	There is a misfeed in the output 4-bin tray.	Open the mailbox cover and remove misfeed.
		For more information, see p.56 "When "Remove Misfeed W: Mailbox" Appears".
Remove Misfeed Y: Paper Tray /See Instructions in Front Cover	There is a misfeed in the specified input tray, or the printer is not feeding paper.	Remove the misfed paper following the instructions inside the front cover.
		For more information, see p.58 "When "Remove Misfeed Y: Paper Tray" Appears".
Remove Misfeed Z1: Duplex Unit /See Instructions in Front	There is a misfeed in the duplex unit.	Remove the misfed paper following the instructions inside the front cover.
Cover		For more information, see p.59 "When "Remove Misfeed :Duplex Unit " Appears".
Remove Misfeed Z2:	There is a misfeed in the du-	Remove the misfed paper.
Dup.Feed Unit /See Instructions in Front Cover	plex feed unit.	See p.96 "Removing Misfed Paper in the Duplex Feed Unit".
Remove Paper All Output Trays	All output trays are full.	Remove paper from all output trays.
Remove Paper Finisher Tray #	The indicated finisher shift tray is full. #:finisher shift tray number	Remove the paper from the indicated finisher shift tray.
Remove Paper Inside Finisher	There is still paper in the finisher.	Open the cover for the finisher and remove paper.
Remove Paper Mailbox Tray #	The output tray # of the optional 4-bin Mailbox is full. #:mailbox tray number	Remove paper from the indicated 4-bin Mailbox tray.
Remove Paper Standard Tray	The standard output tray is full	Remove paper from standard output trays.
Replace Black Dev. Unit(TypeD)	It is time to replace the black development unit.	Replace a new black development unit.
		Depending on your service contract, contact your sales or service representative.
		See p.63 "Replacing Consumables and Maintenance Kit".

Messages/Second messages	Description	Solution
Replace Black PCU (Type F)	It is time to replace the black PCU.	Replace a new black PCU.  Depending on your service contract, contact your sales or service representative.  See p.63 "Replacing Consumables and Maintenance Kit".
Replace Color Dev. Unit(TypeB)	It is time to replace the color development unit.	Replace a new color development unit.  Depending on your service contract, contact your sales or service representative.  See p.63 "Replacing Consumables and Maintenance Kit".
Replace Color PCU (Type A)	It is time to replace the color PCU.	Replace a new color PCU.  Depending on your service contract, contact your sales or service representative.  See p.63 "Replacing Consumables and Maintenance Kit".
Replace Feed Roller (Type H)	It is time to replace the paper feed roller.	Replace the paper feed rollers.  Depending on your service contract, contact your sales or service representative.  See p.87 "Replacing the Paper Feed Rollers".
Replace Fuser Oil Unit (TypeG)	It is time to replace the fuser oil unit.	Replace a new fuser oil unit.  Depending on your service contract, contact your sales or service representative.  See p.63 "Replacing Consumables and Maintenance Kit".
Replace FuserOil Unit soon (TypeG)	The fuser oil unit should be replaced soon.	Prepare a new fuser oil unit. Depending on your service contract, contact your sales or service representative. See p.63 "Replacing Consum- ables and Maintenance Kit".
Replace Fuser Unit (Type C)	It is time to replace the fusing unit.	Replace a new fusing unit.  Depending on your service contract, contact your sales or service representative.  See p.63 "Replacing Consumables and Maintenance Kit".

Messages/Second messages	Description	Solution
Replace Fusing Unit soon (TypeC)	The fusing unit should be replaced soon.	Prepare a new fusing unit. Depending on your service contract, contact your sales or service representative.
		See p.63 "Replacing Consumables and Maintenance Kit".
Replace Waste Toner (Type E)	It is time to replace the waste toner.	Replace a new fusing unit.  Depending on your service contract, contact your sales or service representative.  See p.63 "Replacing Consumables and Maintenance Kit".
Reset Develop. Unit Correctly /Yellow/Magenta Cyan/Black	The indicated development unit(s) is/are not set correctly, or is not set.	Set the indicated development unit(s) correctly. See p.63 "Re- placing Consumables and Maintenance Kit".
Reset Duplex Unit Correctly	The duplex paper feed unit is not set correctly or is not set.	Remove and reinstall the duplex paper feed unit. If the error continues, contact your sales or service representative.  See "Setting Up" in the Setup Guide.
Reset Finisher Correctly	Finisher is not set correctly, or is not set.	Set the finisher correctly. See "Setting Up" in the Setup Guide.
Reset Fuser Oil Unit Correctly	The fuser oil unit is not set correctly, or is not set.	Set the fuse oil unit correctly. See p.63 "Replacing Consumables and Maintenance Kit".
Reset Fusing Unit Correctly	There is no fusing unit, or the fusing unit is not installed correctly.	Set the fusing unit correctly. See p.63 "Replacing Consumables and Maintenance Kit".
Reset PCU Correctly /Yellow/Magenta Cyan/Black	The indicated Photoconductor Unit(s) is / are not set correctly, or is not set.	Set the indicated Photoconductor Unit(s) correctly. See p.63 "Replacing Consumables and Maintenance Kit".
Reset Toner Black	The indicated toner cartridge is not set correctly.	Set the indicated toner cartridge(s) correctly. See "Setting Up" in the Setup Guide.
Reset Toner Cyan	The indicated toner cartridge is not set correctly.	Set the indicated toner cartridge(s) correctly. See "Setting Up" in the Setup Guide.

Messages/Second messages	Description	Solution
Reset Toner Magenta	The indicated toner cartridge is not set correctly.	Set the indicated toner cartridge(s) correctly. See "Setting Up" in the Setup Guide.
Reset Toner Yellow	The indicated toner cartridge is not set correctly.	Set the indicated toner cartridge(s) correctly. See "Setting Up" in the Setup Guide.
Reset Tray # Correctly	The indicated paper input tray is not set correctly, or is not set. #: tray number	Set the indicated paper input tray correctly.
Reset Waste Toner Correctly	The waste toner bottle is not set correctly, or is not set.	Set the waste toner bottle correctly.
SC XXX-X Power Off On /If Error Reoccur Call Service	The Service Code or SC number indicates the problem.	Turn the power switch off and then on. If the message ap- pears again, contact your sales or service representative.
Toner is Almost Empty: Black	The printer is almost out of toner (K).	Prepare a new toner cartridge (K).
Toner is Almost Empty: Cyan	The printer is almost out of toner (C).	Prepare a new toner cartridge (C).
Toner is Almost Empty: Magenta	The printer is almost out of toner (M).	Prepare a new toner cartridge (M).
Toner is Almost Empty: Yellow	The printer is almost out of toner (Y).	Prepare a new toner cartridge (Y).
Tray Load /Paper Size Media Type	The paper size and media type set in the tray differs from the setting made.	Load {paper size and media type} paper with the selected feed direction into the tray, and then change the paper size and media type with the operation panel.  Or press [Enter #], and then select the tray with the control panel.
		Or press <b>[Cancel]</b> to cancel the print job.
Waste Toner Is Almost Full (E)	The waste toner bottle is almost full of toner dust.	Prepare a new waste toner bottle or contact your sales or service representative.
		See "Appendix" in the Setup Guide.

### **Printer Does Not Print**

Possible Cause	Solutions
Is the power on?	Confirm that the cable is securely plugged into the power outlet and the printer.
	Turn on the power switch.
Does the <b>Online</b> indicator stay on?	Press <b>(On Line)</b> so the indicator lights.
Does the <b>Error</b> indicator stay red?	Check the error message on the panel display and take the required action.
Is paper loaded?	Load paper into the paper tray or on the bypass tray.
	See p.15 "Load Paper in the Bypass Tray".
Can you print a configuration page?	If you cannot print a configuration page, it probably indicates a printer malfunction. You should contact your sales or service representative.
	See "Printing the Configuration Page" in Setup Guide.
Is the interface cable connecting the printer to the computer connected securely?	Connect the interface cable properly. If there are any connectors or screws, confirm that they are fastened securely.
Are you using the correct interface cable?	The type of interface cable you should use depends on the computer. Be sure to use the correct one.
	If the cable is damaged or worn, replace it with a new one.

Possible Cause	Solutions
Is the <b>Data In</b> indicator blinking or lit after starting	If not blinking or lit, the data is not being sent to the printer.
the print job?	♦ If the printer is connected to the computer using the in-
	terface cable
	Make sure the printer port settings are correct. For a parallel port connection, port LPT1 or LPT2 should be set.
	Windows 95/98/Me
	① Click [Start], point to [Settings], and then click [Printers].
	② Click to select the icon of the printer. Next, on the [File] menu, click [Properties].
	3 Click the [Details] tab.
	④ Check the [Print to the following port] box to confirm that the correct port is selected.
	• Windows 2000
	① Click [Start], point to [Settings], and then click [Printers].
	② Click to select the icon of the printer. Next, on the [File] menu, click [Properties].
	③ Click the [Port] tab.
	④ Check the [Print to the following port] box to confirm that the correct port is selected.
	Windows XP
	① Access the <b>[Printers and Faxes]</b> window from <b>[Start]</b> on the taskbar.
	② Click to select the icon of the printer. Next, on the [File] menu, click [Properties].
	③ Click the [Port] tab.
	④ Check the [Print to the following port(s).] box to confirm that the correct port is selected.
	Windows NT 4.0
	① Click [Start], point to [Settings], and then click [Printers].
	② Click to select the icon of the printer. Next, on the [File] menu, click [Properties].
	③ Click the [Port] tab.
	④ Check the [Print to the following port] box to confirm that the correct port is selected.
	❖ Network Connection
	Contact your network administrator.

### **Other Printing Problems**

Status	Possible Causes, Descriptions, and Solutions
Black gradation is not natural.	PCL 5c     Adjust [Color Setting] setting under the [Fiery Printing] tab in the printer driver.
	PostScript     Adjust [Color Wise] setting under the [Fiery Printing] tab in the printer driver.
Color documents are printed in black and white.	<ul> <li>The printer driver is not set up for color printing.</li> <li>PCL 5c     Select "Color" for the Color Setting under the printer driver's [Fiery Printing] tab.</li> <li>PostScript     Select "Standard Color" or "Expert Color" for the Color Wise under the printer driver's [Fiery Printing] tab.</li> </ul>
	Some applications normally print color text as black and white.
Fine dot pattern does not print.	<ul> <li>PCL 5c         Adjust [Color Setting] setting under the [Fiery Printing] tab         in the printer driver.</li> <li>PostScript         Adjust [Color Wise] setting under the [Fiery Printing] tab in         the printer driver.</li> </ul>
	For more information, see the Color Guide.
Images are cut off, or excess pages are printed.	You might be printing on paper smaller than the paper size selected in the application. Use paper the same size as that selected in the application. If you cannot load paper of the correct size, use the reduction function to reduce the image, and then print.
It takes too much time to complete the print job.	Photographs and other data intensive pages take a long time for the printer to process, so simply wait when printing such data.  Changing the following settings may help to speed up printing.  PCL 5c Reduce the size of data to be printed.
	PostScript     Select "600×600 dpi" for Resolution under the [Print Quality] tab in the printer driver's dialog box.     Select "Post Script(optimize for speed)" for PostScript output format under the [PostScript] tab in the printer driver's dialog box.
	The data is so large or complex that it takes time to process it. If the <b>Data In</b> indicator is blinking, the data processing is being done. Just wait until it resumes.

Status	Possible Causes, Descriptions, and Solutions
It takes too much time to complete the print job.	If "Warming Up" appears on the panel display, the printer is now warming up. Wait for a while.
	<ul> <li>✓ Note</li> <li>□ To maintain the best quality, color adjustment is executed regularly during printing or after printing. Even if printing is not specified, color adjustment is sometimes executed regularly when the power is on.</li> </ul>
It takes too much time to resume printing.	The data is so large or complex that it takes time to process it. If the <b>Data In</b> indicator is blinking, the data processing is being done. Just wait until it resumes.
	The printer might be warming up from the Energy Saver mode. It takes time until printing starts.
Multiple pages are fed through the printer at once.	Paper misfeeds easily when the Paper Feed Roller is dirty. Contact your sales or service representative to replace the Paper Feed Roller.
Output are not delivered to the selected tray you require.	When using the bypass tray, the size selected on the display panel might be different from actual paper size. Select the correct paper size.
	See p.1 "Paper and Other Media Supported by This Printer".
	When you are using a Windows operating system, the printer driver settings override those set using the control panel. Set the desired output tray using the printer driver.
Paper misfeeds occur frequently.	Check that the side guide of the Paper Tray is locked. See p.12 "Loading Paper".
	The paper size and feed direction of the paper in the Bypass Tray might not be the same as those you selected with the control panel. Check the settings on the control panel, and load paper of the correct paper size and feed direction.
	See p.15 "Load Paper in the Bypass Tray".
	Check that the paper guide of the Paper Tray is attached properly.
Solid areas, lines or text are shiny or glossy when created as a mixture of cyan, magenta, yellow.	PCL 5c     Adjust [Color Setting] setting under the [Fiery Printing] tab in the printer driver.
	PostScript     Adjust [Color Wise] setting under the [Fiery Printing] tab in the printer driver.
Solid lines are printed as broken lines.	PCL 5c     Adjust [Color Setting] setting under the [Fiery Printing] tab in the printer driver.
	<ul> <li>PostScript         Adjust [Color Wise] setting under the [Fiery Printing] tab in the printer driver.     </li> </ul>

Status	Possible Causes, Descriptions, and Solutions
Some parts of the print image are not clear.	Make the image density darker.  To adjust the image density, press [Menu] on the control panel, and select Image Density from the Maintenance menu.
The color of the printout is different from the color on the computer's display.	The toner based color settings with the printer driver causes a drastic change in printout color.
	Changing the color settings with the printer driver causes a drastic change in printout color.
The image is printed in the wrong orientation.	The feed direction you selected and the orientation selected in Layout of the printer driver might not be the same. Make the proper settings.
The control panel error message stays on after removing the misfed paper.	Open the front cover of the printer, and then close it.
The print image is not clear.	Due to a sudden change in temperature, condensation might appear inside the printer, reducing print quality. If this occurs, when you move the printer from a cold room to a warmer room, do not use the printer until it acclimatizes to the temperature.
The print side of the page is a hazy gray.	Adjust the image density.  To adjust the image density, press [Menu], and select Image Density from the Maintenance menu.  See p.19 "Cleaning and Adjusting the Printer".
	If paper is curled, correct it.  Curled or folded paper might cause a hazy gray print. Curling often occurs on postcards, so be sure to correct it before printing.
The printed image is different from the image on the computer.	When you use some functions, such as enlargement and reduction, the layout of the image might be different from that displayed in the computer display.
	You might have selected to replace True Type fonts with printer fonts in the printing process.  To print an image similar to the image on the computer, make the settings to print out True Type fonts as an image.
The printer does not print at 1200dpi, even if 1200dpi resolution is selected.	Printing at 1200dpi uses much memory. Therefore, depending on the memory capacity, you may not be able to print at 1200dpi. Either add memory to the printer, or reduce the size of data to be printed.
There are color differences in the color documents.	Press [Menu], and select "Color Regist." from the "Maintenance" menu.
	See p.19 "Cleaning and Adjusting the Printer".

### Ø Note

 $\hfill \square$  If the problem cannot be solved, contact your sales or service representative.


### **Removing Misfed Paper**

If a paper misfeed occurs, an error message appears indicating the location of the misfed paper on the panel display. This printer has the auto-recovery function, by which misfed paper is sent to the Standard Tray or Right Cover. Usually, you can remove the misfed paper easily with this function.

### **Detaching the 2 Tray Finisher**


There are times when you might have to detach the 2 Tray Finisher from the printer to remove misfed paper. This section describes how to detach the 2 Tray Finisher.

1 Hold the handle at the top of the 2 Tray Finisher firmly with one hand, pull the 2 Tray Finisher straight out, and let go when it stops.

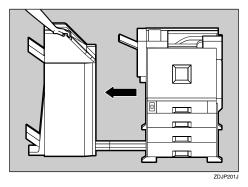

The 2 Tray Finisher is detached from the printer.

2 Use both hands to push it straight back in, and let go when it clicks into place.

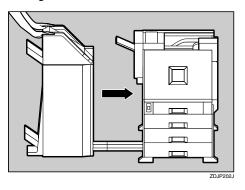

The 2 Tray Finisher is reattached to the printer.


### **#Important**

☐ Attach the 2 Tray Finisher to the printer after closing the Duplex Reversal Unit.


### Opening and Closing the Duplex Reversal Unit

There are times when you might have to detach the Duplex Reversal Unit to remove misfed paper. This section describes how to detach the Duplex Reversal Unit.

1 Push up the lock release button and keep it in place.

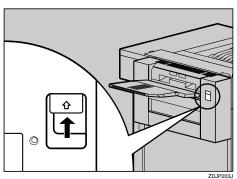

### 2 Lower the Duplex Reversal Unit slowly until it stops.

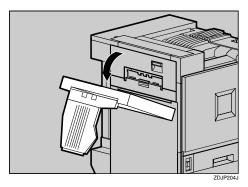

### **#Important**


☐ Open the Duplex Reversal Unit after detaching the 2 Tray Finisher from the printer.

#### 

☐ You do not have to remove the output tray even if the 2 Tray Finisher is attached.

The Duplex Reversal Unit is opened.

3 Raise the Duplex Reversal Unit slowly with both hands, and push it in until it clicks into place.

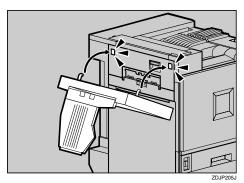


The Duplex Reversal Unit is closed.

### **#Important**


☐ Attach the Duplex Reversal Unit after closing the upper left cover for the printer.

### When "Remove Misfeed A:Internal Path" Appears


1 Open the right cover.

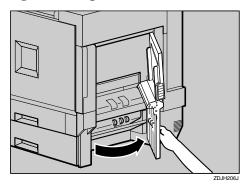

2 Move the blue lever up and down to feed the misfed paper, and then pull out the paper slowly.

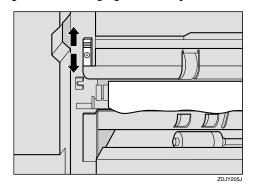

Close the right cover by pushing the area labeled "PUSH".

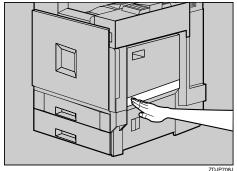

## When "Remove Misfeed B: Fusing Unit" Appears

#### **CAUTION:**

- The inside of the machine becomes very hot. Do not touch the parts with a label indicating a "hot surface". Touching a "hot surface" could result in a burn.
- If the 2 Tray Finisher is installed, detach it from the printer.


⇒ p.53 "Detaching the 2 Tray Finisher"

If the Duplex Unit is installed, open the Duplex Reversal Unit.


#### **₽** Reference

⇒ p.53 "Opening and Closing the Duplex Reversal Unit"


If the output tray is attached to the printer, raise it in the direction of the arrow (1), and remove it (2).

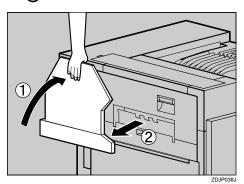


Pull out the upper left cover for the printer slowly.

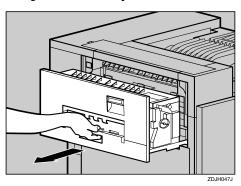

**5** Open the upper left cover.

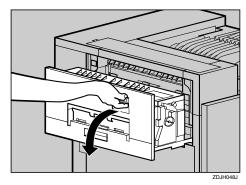


Turn the blue dial in the direction of the arrow to feed the misfed paper, and pull out the paper slowly.

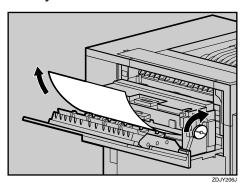


### **#Important**

- ☐ Always turn the blue dial in the direction of the arrow. If you turn it in the reverse direction, the paper feeds into the printer, making it difficult for you to take out the paper.
- ☐ Do not pull out the misfed paper. Use the blue dial to feed misfed paper.
- Close the upper left cover (1) and push the handle slowly to the back until it clicks into place (②).

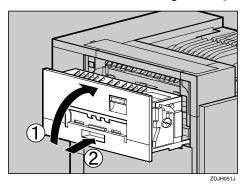

8 If you removed the output tray in step 3, reattach it to the printer. Insert the hooks of the output tray into the printer slits, and lower it toward you.

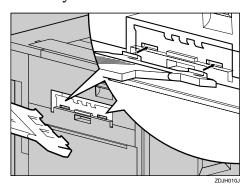

If the Duplex Unit is installed, close the Duplex Reversal Unit.

### 

 $\Rightarrow$  p.53 "Opening and Closing the Duplex Reversal Unit"


If the 2 Tray Finisher was installed, reattach the 2 Tray Finisher to the printer.

#### 

 $\Rightarrow$  p.53 "Detaching the 2 Tray Finisher"

### When "Remove Misfeed W: Mailbox" Appears


1 Open the Mailbox Cover slowly (1), pull out the misfed paper slowly (**2**).

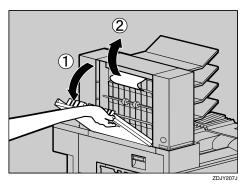

**2** Close the Mailbox Cover.


### When "Remove Misfeed R: Finisher" Appears

Open the top cover (1) and front cover (2) of the 2 Tray Finisher, and remove the misfed paper.

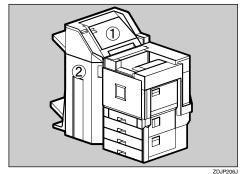


### **1** Fold the Output Tray.


• Raise it vertically.

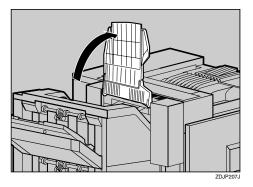

**2** Fold it along the printer body.

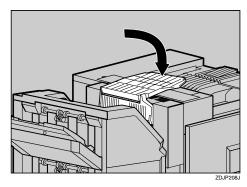


2 Open the top cover for the 2 Tray Finisher, and pull out the misfed paper slowly.

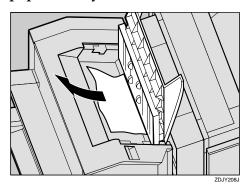


**3** Close the top cover slowly.

4 Open the front cover for the 2 Tray Finisher.


Check to see if there is a misfed paper in areas A, B, C, and D.

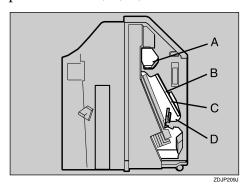


**5** Check area A of step **4**. Lift the lever (1), and while supporting it with your hand not to lower, pull out the misfed paper slowly.

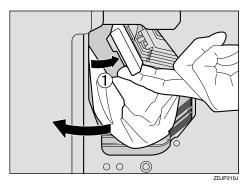

- 6 Lower the lever slowly to return it into place.
- **7** Check areas B and C of step **4**. Lower the lever in the direction of the arrows (1), and pull out the misfed paper slowly.

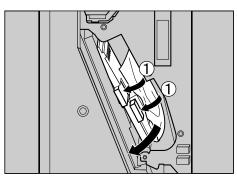

- E Lift the lever slowly to return it into place.
- Oheck area D of step 4. Lift the lever in the direction of the arrow (1), and pull out the misfed paper slowly.

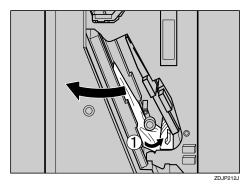


- Lower the lever slowly to return it into place.
- Close the front cover for the 2 Tray Finisher.

If the error message does not clear even after the misfed paper is removed, detach the 2 Tray Finisher from the printer to check for the misfed paper there.


### 

See p.53 "Detaching the 2 Tray Finisher" for details about how to detach/reattach the 2 Tray Finisher from/to the printer.

- Return the Output Tray back into place.
  - **1** Raise the tray.

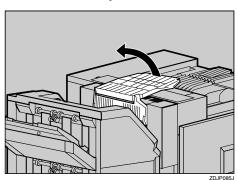


2 Lower it slowly.

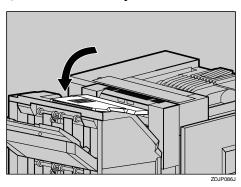

## When "Remove Misfeed Y: Paper Tray" Appears

1 Open the Lower Right cover for the Paper Feed Unit, and pull out the misfed paper.

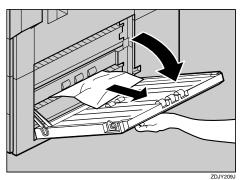

2 Close the Lower Right cover for the Paper Feed Unit.


## When "Remove Misfeed :Duplex Unit " Appears

#### **CAUTION:**

- The inside of the machine becomes very hot. Do not touch the parts with a label indicating a "hot surface". Touching a "hot surface" could result in a burn.
- 1 If the 2 Tray Finisher is installed, detach it from the printer.


⇒ p.53 "Detaching the 2 Tray Finisher"

2 Open the left cover for the Duplex Reversal Unit, and remove the misfed paper. Do not pull the paper out by force.

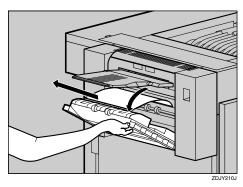


If you cannot remove the paper, proceed to step **3**.


Push up the lock release button for the Duplex Reversal Unit, and then hold it in place.

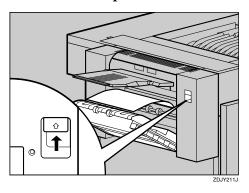

4 Lower the Duplex Reversal Unit slowly until it stops, and remove the misfed paper.

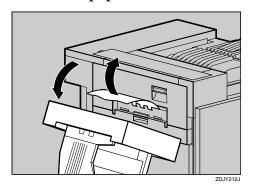

Raise the Duplex Reversal Unit slowly and insert until it clicks into place. Raise the left cover, and close it securely by pushing the area labeled "PUSH".

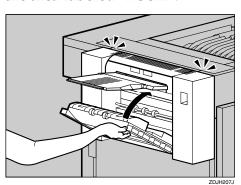


### **Removing Jammed Staples**

When "Add Staples " appears on the panel display, or when the printer does not staple even after it is instructed to, the staples might be jammed.


Add Staples

Open the front cover for the 2 Tray Finisher.


The stapler is attached to the position shown in the illustration.

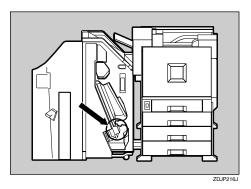


Remove the cartridge by pulling the green knob in the direction of the arrow.

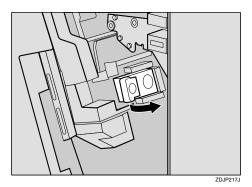


3 Open the face plate of the cartridge to unlock it.

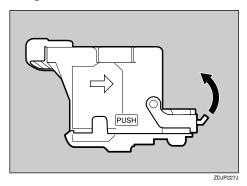

4 Remove the jammed staples.

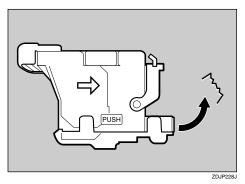


Close the face plate of the cartridge until it clicks into place.

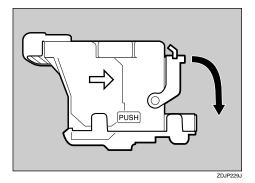

60

6 Slant and insert the cartridge (①), and push in until it clicks into place (②).

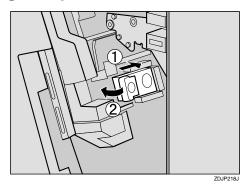

**7** Close the front cover for the 2 Tray Finisher.

### **Removing Punch-hole Chips**

When "Punch-hole Chips are Full" appears on the panel display, the punch waste box is full. Follow these steps to remove paper chips.


#### Note

☐ Same message appears when the punch waste box is not installed correctly.


Punch-hole Chips are Full

1 Open the front cover for the 2 Tray Finisher.

The punch waste box is attached to the position shown in the illustration.

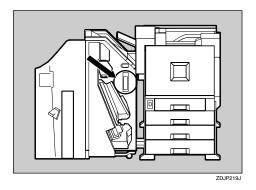

2 Pull out the punch waste box and remove the paper chips.

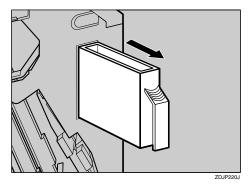


**3** Reinstall the punch waste box.

4 Close the front cover for the 2 Tray Finisher.

# When the message appears even after removing the Punch-hole chips

When the "Punch-hole Chips are Full" message appears on the control panel even the punch waste box is not full, punch-hole chips might be stuck around the punch waste box hole as shown in the illustration. Remove the punch-hole chips around the hole.

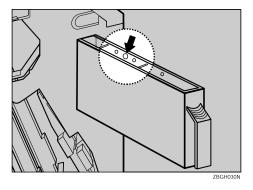


## Replacing Consumables and Maintenance Kit

## Detaching the SR770 (2 Tray Finisher)


There are times when you might have to detach the 2 Tray Finisher from the printer to remove misfed paper. This section describes how to detach the 2 Tray Finisher.

1 Hold the handle at the top of the 2 Tray Finisher firmly with one hand, pull the 2 Tray Finisher straight out, and let go when it stops.

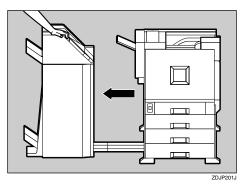

The 2 Tray Finisher is detached from the printer.

2 Use both hands to push it straight back in, and let go when it clicks into place.

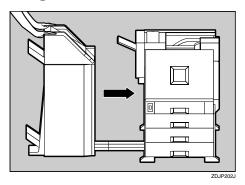

The 2 Tray Finisher is reattached to the printer.


#### **∰**Important

☐ Be sure to attach the 2 Tray Finisher to the printer after closing the Duplex Reversal Unit. See p.64 "Opening and Closing the Duplex Reversal Unit".


# Opening and Closing the Duplex Reversal Unit

There are times when you might have to detach the Duplex Reversal Unit to remove misfed paper. This section describes how to detach the Duplex Reversal Unit.

1 Push up the lock release button and keep it in place.

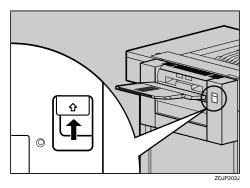

2 Lower the Duplex Reversal Unit slowly until it stops.

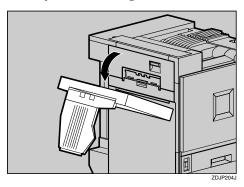

#### ∰Important


☐ Open the Duplex Reversal Unit after detaching the 2 Tray Finisher from the printer. See p.63 "Detaching the SR770 (2 Tray Finisher)".

#### Note

☐ You do not have to remove the External Tray even if the 2 Tray Finisher is attached.

The Duplex Reversal Unit is opened.

Raise the Duplex Reversal Unit slowly with both hands, and push it in until it clicks into place.

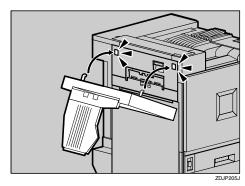

The Duplex Reversal Unit is closed.

#### **∰**Important

☐ Attach the Duplex Reversal Unit after closing the upper left cover of the printer.

## Replacing the Toner Cartridge

#### riangle WARNING:

 Do not incinerate spilled toner or used toner. Toner dust is flammable and might ignite when exposed to an open flame. Disposal should take place at an authorized dealer or an appropriate collection site. If you dispose of the used toner cartridges yourself, dispose of them according to local regulations.

#### A CAUTION:

- The inside of the machine becomes very hot. Do not touch the parts with a label indicating a "hot surface". Touching a "hot surface" could result in a burn.
- Keep toner (used or unused) and the toner cartridge out of reach of children.
- Our products are engineered to meet the highest standards of quality and functionality. When purchasing expendable supplies, we recommend using only those provided by an authorized dealer.

#### **𝚱** Note


☐ The actual number of printed pages will differ depending on the media type, paper size, contents and settings. For more information, see p.101 "Toner cartridge".

If "Add Toner" appears on the panel display, replace the toner cartridge.

Add Toner XXX


#### Note

- ☐ A combination of one to four colors, yellow, magenta, cyan, black, is displayed in "XXX".
- ☐ If cyan or magenta or yellow toner runs out, you can print in black and white mode using the black toner. Change the color mode setting to "Grayscale" from the printer driver.
- ☐ If black toner runs out, printing is not possible until the black toner cartridge is replaced.
- While pushing the lock button on the upper right cover of the printer (1), open the upper right cover (2).

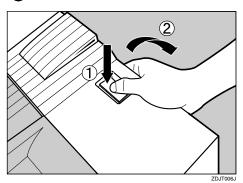


From the end, the toner cartridges are installed in the order of magenta (M), cyan (C), yellow (Y), and black (K).

- Remove the toner cartridge for the color you want to replace.
  - **1** Unhook the green hook on the toner cartridge with one hand.

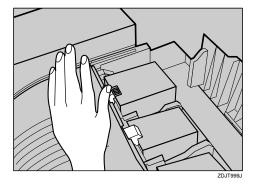

2 Holding the toner cartridge with the other hand, pull out the cartridge up slowly.

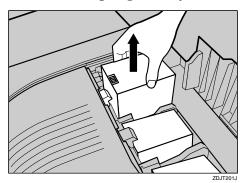


#### **#Important**

☐ Do not shake the removed toner cartridge. The remaining toner might scatter.


#### **𝒯** Note

☐ Depending on the setting up environment, toner might be left in a toner cartridge. In such case, reinstall the toner cartridge. Take out a new toner cartridge from the box.

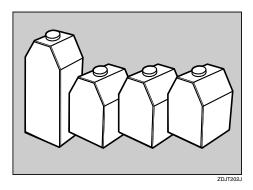


Note

- ☐ The black toner cartridge contains more than the other toner cartridges.
- **4** Shake the toner cartridge back and forth 5-6 times.

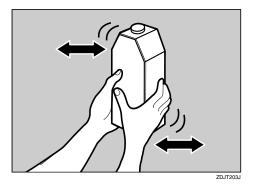


Holding the toner cartridge with the metal contact area in front, attach in the direction of the arrow.

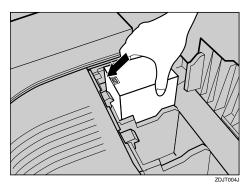

#### **∰**Important

☐ Do not touch the metal contact point with your fingers.


# Insert the toner cartridge slowly until the green hook snaps on the metal contact area.

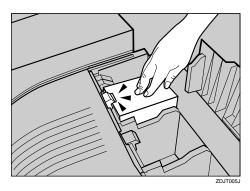

#### ∰Important

☐ Do not install and remove the toner cartridges over and over. This could result in a toner leak.

## **7** Close the upper right cover.

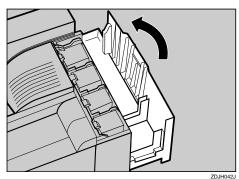

The following message appears on the panel display. Please wait a while.

Loading Toner...

#### ∰Important

☐ Do not turn off the power switch during "Loading Toner..." appears on the panel display to avoid a printer malfunction.

## Replacing the Fuser Oil Unit

#### A CAUTION:

 The Fusing Unit becomes very hot. When installing the new Fuser Oil Unit, turn off the printer and wait about an hour. After that, install the new Fusing Unit. Not waiting for the unit to cool down can result in a burn.

If "Replace Fuser Oil Unit (TypeG)" appears on the panel display, replace the Fuser Oil Unit.

Replace Fuser Oil Unit (TypeG)

1 Turn off the power switch and unplug the power cable.

#### **∰**Important

- ☐ Be sure to wait about an hour to prevent a burn.
- 2 If 2 Tray Finisher is installed, detach it from the printer.
  - **₽** Reference


See p.63 "Detaching the SR770 (2 Tray Finisher)"

If the Duplex Unit is installed, open the Duplex Reversal Unit.


#### 

See p.64 "Opening and Closing the Duplex Reversal Unit"


If the External Tray is attached to the printer, raise it in the direction of the arrow (1), and remove it (2).

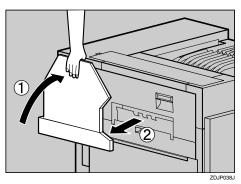


Pull out the left cover of the printer slowly.

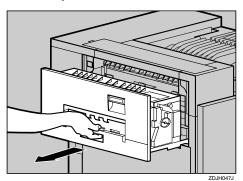

6 Open the upper left cover.

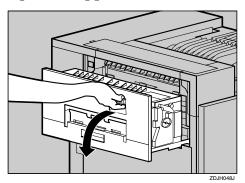


Holding the green handle, pull up the Fusing Unit slowly in the direction of the arrow.

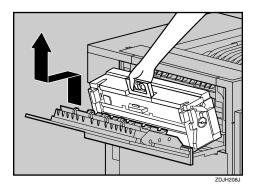

#### ∰Important


- ☐ Do not touch any areas other than the handle.
- Put the removed Fusing Unit in a stable and level place.
- Delift the Fuser Oil Unit in the direction of the arrow to remove it, and put it in a stable and level place.

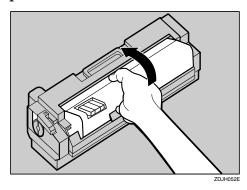

#### ∰Important

- ☐ Do not touch inside of the Fusing Unit.
- ☐ Be careful not to touch the area other than the shown in the illustration.

Take out the Fuser Oil Unit from the bag, and remove seal (①), and then remove seal (②) as shown in the illustration.

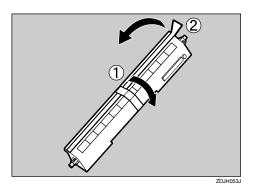


Note

☐ Be sure to remove seal (①), and then pull it out in a level manner.

#### **∰**Important


- ☐ Be sure to remove the seals to avoid printer malfunction.
- ☐ Be sure to remove seal (①) first, and then remove seal (②) to avoid oil leak.
- ☐ Be sure to put the Fuser Oil Unit in a stable and level place to avoid oil leak.
- ☐ There is oil on the removed seals and fuser oil roller. Be careful not to let them come in contact with your clothes.

Match (▲) on the front of the Fuser Oil Unit and the arrow on the Fusing Unit as shown in the illustration.

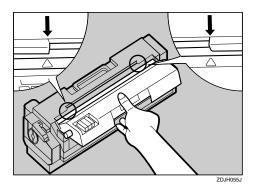


#### ∰Important

- Be careful not to get oil on the metal point of the left side of the Fuser Oil Unit.
- Insert the left and right protrusions of the Fuser Oil Unit into the white holders of the Fusing Unit (①), and then move the Fuser Oil Unit in the direction shown by the arrow (②) to attach the Fuser Oil Unit to the Fusing Unit.

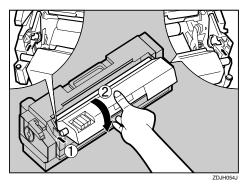

Holding the green handle with one hand, use your other hand to push the front area of the handle to create a slight slant, and push the Fusing Unit slowly to the back.

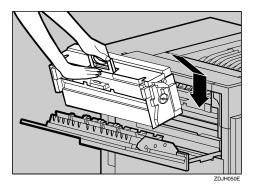


#### Note


☐ Confirm that the Fuser Oil Unit is facing the inside of the printer.

At this point, make sure the Fusing Unit is on the stand properly.

Close the upper left cover (1) and push the handle slowly (2) to the back until it clicks into place.

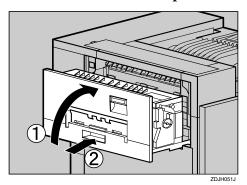

Place the old Fuser Oil Unit into the bag which contained the new Fuser Oil Unit, and seal the bag. If you removed the External Tray in step 4, reattach it to the printer. Insert the hooks of the External Tray into the printer slits, and lower it toward you.

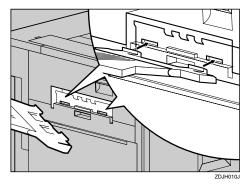

If the Duplex Unit is installed, close the Duplex Reversal Unit.

#### 

See p.64 "Opening and Closing the Duplex Reversal Unit"

If the 2 Tray Finisher was installed, reattach the 2 Tray Finisher to the printer.

#### 

See p.63 "Detaching the SR770 (2 Tray Finisher)"

Plug in the power cable and turn on the power switch.

#### **𝒯** Note

☐ If you dispose of the used toner cartridges by yourself, dispose of them according to local regulations.

## Replacing the Photoconductor Unit


If "Replace Black PCU (Type F)" appears on the panel display, replace the black Photoconductor Unit.

Replace Black PCU (Type F)

If "Replace Color PCU (Type A)" appears on the panel display, replace the three color Photoconductor Units.


Replace Color PCU (Type A)

- 1 Turn off the power switch and unplug the power cable.
- 2 Open the front cover slowly by pulling down from the two areas on the left and right.

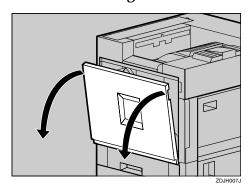


Take out the green screwdriver.


Use this screwdriver for all attachment and detachment of screws.

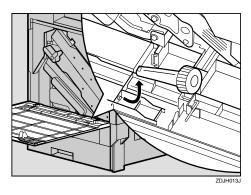

4 Turn the light brown lever counterclockwise.

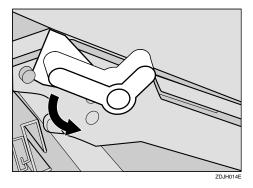


Loosen two screws that are fastening the inner cover using provided screwdriver.

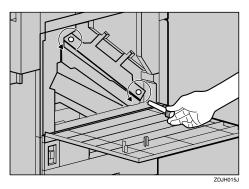


You cannot remove these two screws.

5

## 6 Lift the inner cover until it clicks into place and holds.

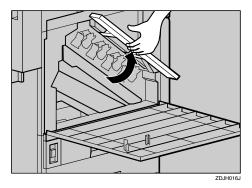


The Photoconductor Units are installed as shown in the illustration. The black Photoconductor Unit is at the upper left period. The other three are color Photoconductor Units.

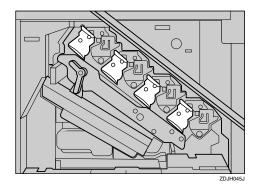


**7** Remove the Photoconductor Unit you want to replace.

For black, remove the upper left one, and for color, remove the three on the right.

• Move the green hook slowly to the right as shown in the illustration. The green hook is located on the upper right of the Photoconductor Unit.

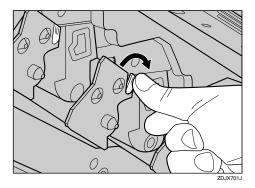


2 Grip the green areas at the top and bottom of the Photoconductor Unit, and pull slowly until you can see all of the green handle.

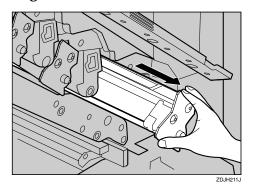

#### **#**Important

☐ Pulling out the Photoconductor Unit quickly might cause it to drop.


3 Lift and hold the green handle at the top (1), and pull out the unit slowly (2).

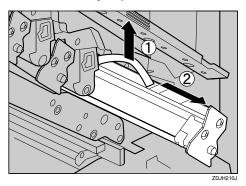

**8** Install a new Photoconductor Unit.


For black, install one, and for color, install three.

**1** Take the unit out from the bag.

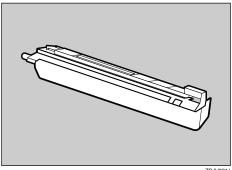


#### **∰**Important

- ☐ Do not remove the cover that is attached to the bottom of the Photoconductor Unit at this time.
- 2 Place the Photoconductor Unit, and remove the adhesive tape at the tip of the unit.

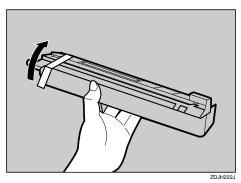

3 Match the green arrow at the tip of the Photoconductor Unit to the rail inside the printer.

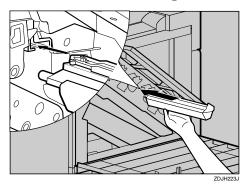

#### **∰**Important


- ☐ Make sure the green arrow fits securely on the rail before proceeding to the next step.
- **4** Push the front of the Photoconductor Unit slowly, slide the unit on the cover, and push in until it stops.




#### **#Important**

- ☐ If you do not attach the green arrow of the Photoconductor Unit securely to the rail, you might damage the Photoconductor Unit.
- ☐ Do not touch the light-sensitive area of the Photoconductor Unit.


# **6** Remove the cover and push in the Photoconductor Unit until it stops.

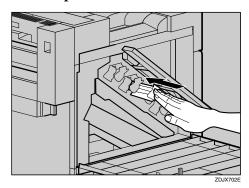

**9** Lower the inner cover slowly.

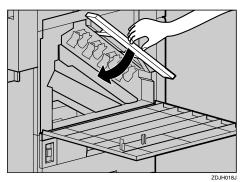


Tighten two screws using provided screwdriver.

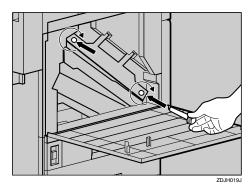


Note

☐ Be sure to return the provided screwdriver to its original position on the back of the front cover.

## Turn the light brown lever clockwise.

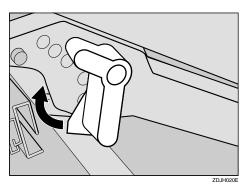

Close the front cover slowly by pushing the two areas on the left and right.

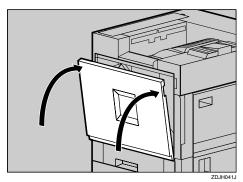

Plug in the power cable and turn on the power switch.

The following message appears on the panel display. The printer starts calibration. Please wait until it stops.

Calibrating...

#### ∰Important

☐ Do not turn off the power switch during calibration to avoid a printer malfunction.

#### 5

## Replacing the Development Unit

If "Replace Black Dev. Unit(TypeD)" appears on the panel display, replace the black Development Unit.


Replace Black Dev. Unit(TypeD)

If "Replace Color Dev. Unit(TypeB)" appears on the panel display, replace the three color (CMY) Development Units.

Replace Color Dev. Unit(TypeB)


#### Note

- ☐ A dustproof filter is attached to the black Development Unit. When replacing the black Development Unit, also replace the dustproof filter. See p.83 "Replacing the Dustproof Filter".
- ☐ When replacing the black Development Unit, clean the registration roller. See p.20 "Cleaning the Registration Roller".
- 1 Turn off the power switch and unplug the power cable.
- 2 Open the front cover slowly by pulling down from the two areas on the left and right.

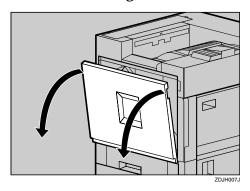


### **3** Take out the green screwdriver.


Use this screwdriver for all attachment and detachment of screws.

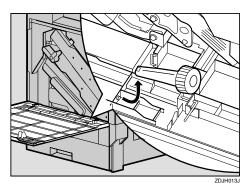

4 Turn the light brown lever counterclockwise.

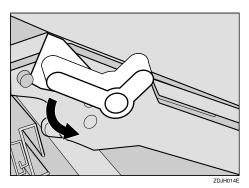


Loosen two screws that are fastening the inner cover using provided screwdriver.

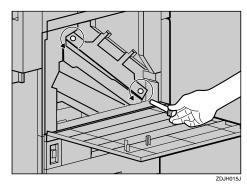


You cannot remove these two screws.

## 6 Lift the inner cover until it clicks into place and holds.

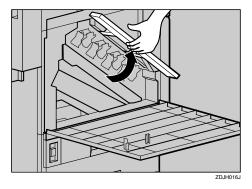


The Development Unit is installed shown in the illustration. Starting from the upper left, the units are attached in the order of black (K), yellow (Y), cyan (C), and magenta (M).

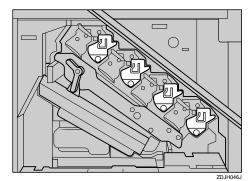

### **7** Remove the Development Unit.


The procedure for removing the unit is the same for all four colors.

1 Hook your finger on the green tab in front of the Development Unit you want to replace, and pull it out halfway.

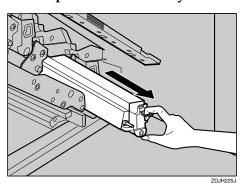

#### **∰**Important

- Pulling out the Development Unit quickly might cause it to drop.
- 2 Hold the right side of the Development Unit with your right hand, and pull out the unit slowly.

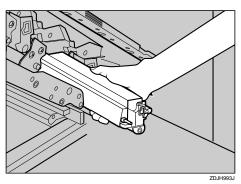


#### **#Important**

- ☐ Be careful not to touch the right side of the Photoconductor Unit.
- ☐ Be careful not to let it get in contact with your hands or clothes.

## 8 Install a new Development Unit.


The procedure for attaching the Development Unit is the same for all four colors.

**1** Take the unit out from the bag.

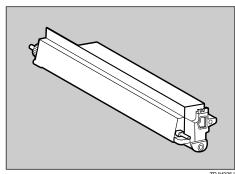


ZDJH226

2 Insert the Development Unit along the rail, and push in slowly until it stops.

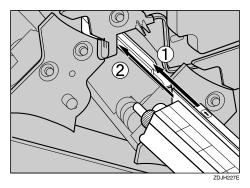


3 Holding the Development Unit, pull out the tape slowly in a level manner.

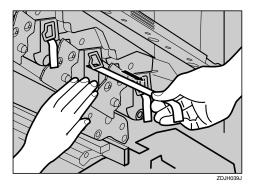


#### ∰Important

- ☐ Be sure to pull out the tape to avoid printer malfunction during operation.
- ☐ The removed tape is dirty. Be careful not to let it get in contact with your hands or clothes.

**9** Lower the inner cover slowly.

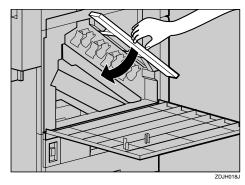


Tighten two screws using provided screwdriver.

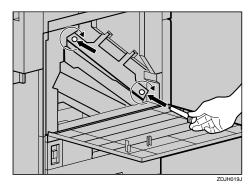


#### Note

- ☐ Be sure to return the provided screwdriver to its original position on the inside of the front cover.
- Turn the light brown lever clockwise.

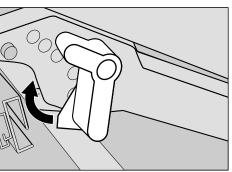

ZDJH020I

# Close the front cover slowly by pushing the two areas on the left and right.

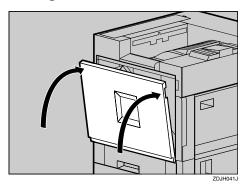

## Plug in the power cable and turn on the power switch.

"Please Wait" appears on the panel display, and initial adjustments begin. Please wait until it stops.

Please Wait

#### ∰Important

☐ Do not turn off the power switch during adjustments to avoid a printer malfunction.

## Replacing the Fusing Unit

#### A CAUTION:

 The Fusing Unit becomes very hot. When installing the new Fusing Unit, turn off the printer and wait about an hour. After that, install the new Fusing Unit. Not waiting for the unit to cool down can result in a burn.

If "Replace Fusing Unit (Type C)" appears on the panel display, replace the Fusing Unit.

Replace Fusins Unit (Type C)

1 Turn off the power switch and unplug the power cable.

#### ∰Important

- ☐ Be sure to wait about an hour to prevent a burn.
- If the 2 Tray Finisher is installed, detach it from the printer.
  - **₽** Reference


See p.63 "Detaching the SR770 (2 Tray Finisher)"

If the Duplex Unit is installed, open the Duplex Reversal Unit.


#### 

See p.64 "Opening and Closing the Duplex Reversal Unit"


If the External Tray is attached to the printer, raise it in the direction of the arrow (1), and remove it (2).

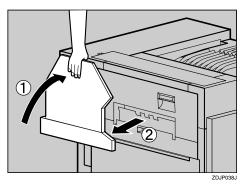

Pull out the left cover of the printer.

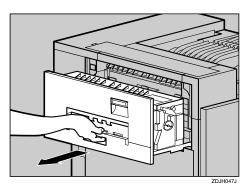


6 Open the upper left cover.

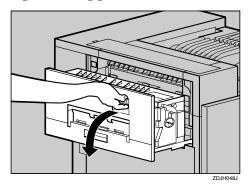

#### **#Important**

☐ Do not touch any areas other than the handle.


Holding the green handle, pull up the Fusing Unit slowly in the direction of the arrow, and then put it in a stable and level place.

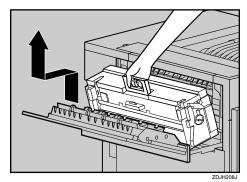

Take out the new Fusing Unit from the bag and put it in a stable and level place.

#### **#Important**


- ☐ The A3 paper which comes with the new Fusing Unit will be used in a later step, so be careful not to lose it.
- ☐ Do not turn the blue dial at the side of the new fusing unit when replacing it or before turning on the power switch.
- **9** Remove the Fuser Oil Unit in the direction of the arrow.

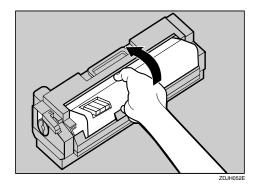

#### ∰Important


- ☐ Do not touch inside of the Fusing Unit.
- ☐ Be careful not to touch the oil.

Match (▲) on the front of the Fuser Oil Unit and the arrow on the Fusing Unit as shown in the illustration.

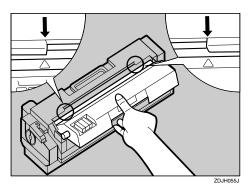


#### **#Important**

- ☐ Be careful not to get oil on the metal point of the left side of the Fuser Oil Unit.
- Insert the left and right protrusions of the Fuser Oil Unit into the white holders of the Fusing Unit (①), and then move the Fuser Oil Unit in the direction shown by the arrow (②) to attach the Fuser Oil Unit to the Fusing Unit.

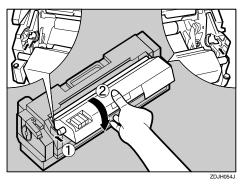


Put the removed Fuser Oil Unit in the bag that enclosed the new Fusing Unit, and then seal it. Holding the green handle of the new Fusing Unit, use your other hand to push the area right in front of the handle to create a slight slant, and then push the Fusing Unit slowly to the back.

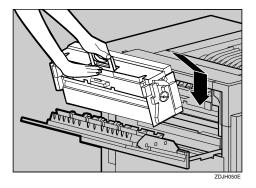


#### **∰**Important

- ☐ Confirm that the Fuser Oil Unit is facing the inside of the printer.
- ☐ Confirm that the Fusing Unit is properly positioned in the machine.
- Close the upper left cover (1) and push the handle (2) slowly to the back until it clicks into place.

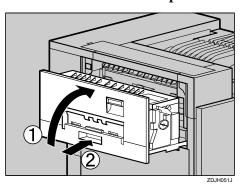

If you removed the External Tray in step [4], reattach it to the printer. Insert the hooks of the External Tray into the printer slits, and lower it toward you.

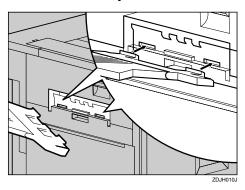

- If the Duplex Unit is installed, close the Duplex Reversal Unit.

See p.64 "Opening and Closing the Duplex Reversal Unit"

- If the 2 Tray Finisher was installed, reattach the 2 Tray Finisher to the printer.

See p.63 "Detaching the SR770 (2 Tray Finisher)"

- Plug in the power cable and turn on the power.
- 19 Perform fuser adjust.

After replacing the fusing unit, the following message appears on the panel display.


Adjust Fuser in Maintenance Menu

you need to perform fuser adjust. For more information, see p.23 "When replacing the fusing unit".


## Replacing the Dustproof Filter

The dustproof filter is attached to the black Development Unit. When replacing the black Development Unit, also replace the dustproof filter.

The dustproof filter is attached to the left side of the printer shown in the illustration.

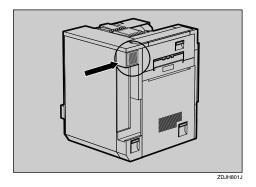


- 1 Turn off the power switch and unplug the power cable.
- **2** Push in the grips on both sides of the dustproof filter cover to pull it off.

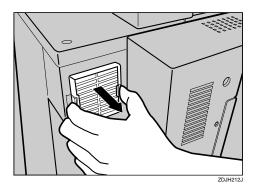


- **𝚱** Note
- ☐ Be sure to put the removed dustproof filter cover in a stable and level place.


From the box which contained the black Development Unit, take out the new dustproof filter and glove.

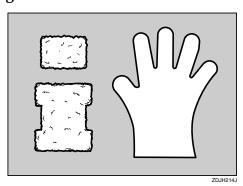

4 Wear the glove on either hand.

With the hand wearing the glove, take out the dustproof filter that is attached to the dustproof filter cover slowly, one by one, and put them into the box which contained the black Development Unit.

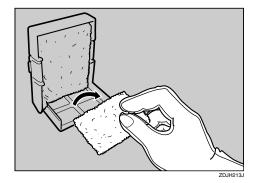


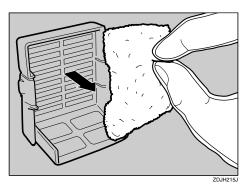


#### **∰**Important

- ☐ Handle the removed dustproof filters with care. If you shake them, the attached dust might scatter.
- ☐ Be sure to remove the gloves to attach the new dustproof filter.


- 6 Attach the new dustproof filters to the dustproof filter cover one by one.
  - 1 Attach the large filter.

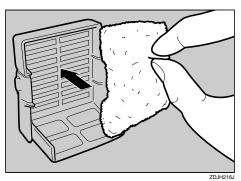

2 Attach the small filter.

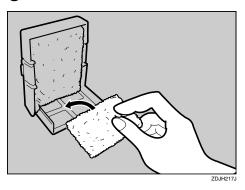

Insert the dustproof filter cover into the upper left area of the printer.

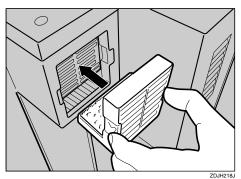

Plug in the power cable and turn on the power switch.


#### 5

## Replacing the Waste Toner Bottle


If "Replace Waste Toner (Type E)" appears on the panel display, replace the waste toner bottle.

Replace Waste Toner (Type E)


- 1 Turn off the power switch and unplug the power cable.
- 2 Open the front cover slowly by pulling down from the two areas on the left and right.

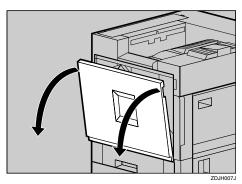

Take out a new waste toner bottle from the bag.

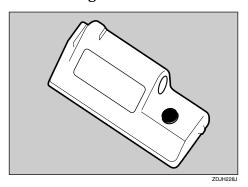


**A** Remove the used waste toner bottle slowly from inside the printer.

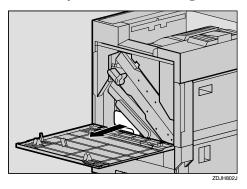

#### **∰**Important


- ☐ Be sure to remove the waste toner bottle in a level manner.
- Remove the lid (1), and then put it on the position shown in the illustration (2).

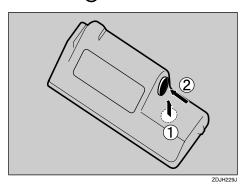

Put the used waste toner bottle into the bag that contained the new waste toner bottle, and then seal the bag.


#### **∰**Important

☐ Be sure to handle the bottle carefully so the waste toner does not spill.

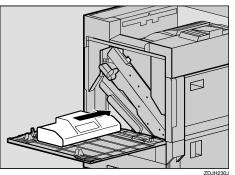


Plug in the power cable and turn on the power switch.

8 Push it in until it stops.

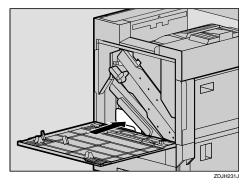

#### ∰Important

- ☐ Be sure to insert the waste toner bottle firmly to avoid the toner from leaking inside the printer.
- 2 Close the front cover slowly by pushing the two areas on the left and right.

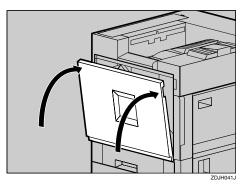

5

## Replacing the Paper Feed Rollers

#### Ø Note

- ☐ The following illustrations are the examples of replacing the paper feed rollers of Tray 1. The same procedure is followed with the other trays.
- **1** Check the contents of the box.
  - Paper Feed Roller A



Paper Feed Roller B



Paper Feed Roller C



Two Stoppers






2 Turn off the power switch and unplug the power cable and interface cable.


#### **#Important**

☐ If you replace the paper feed rollers of the optional 2000sheet Large Capacity Tray, remove all paper from the tray.


Pull out all trays slowly while lifting them up a little.

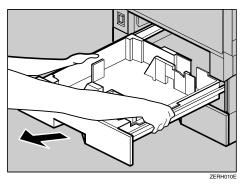


- ☐ If you replace the paper feed rollers of the optional Paper Feed Unit, or 2000-sheet Large Capacity Tray, pull out all the paper trays from each unit.
- 4 Confirm the position of the paper feed rollers.

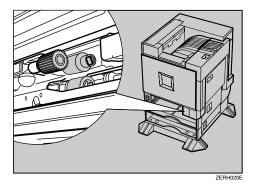


Confirm the positions and names of each roller.

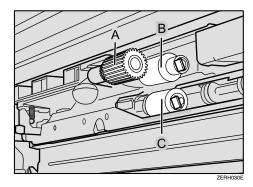


While pushing the pin of the paper feed roller A outwards (①), remove the paper feed roller (②).

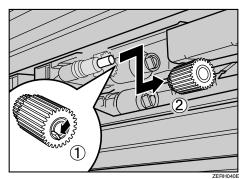


Remove the stopper from the paper feed roller B (1), and remove the paper feed roller (2).

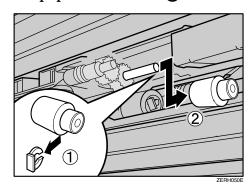


Remove the stopper from the paper feed roller C (1), and remove the paper feed roller (2).

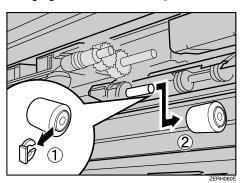


Hold the new paper feed roller C with its gear towards the shaft. Insert it into the rear shaft so that the roller gear is meshed with the shaft gear (1). Lock the roller with the stopper (2).

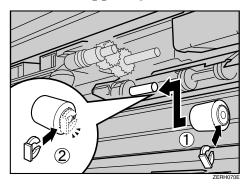

Hold the new paper feed roller B with its gear towards the shaft. Insert it into the rear shaft so that the roller gear is meshed with the shaft gear (1). Lock the roller with the stopper (2).

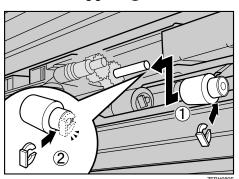

Hold the new paper feed roller A with its pin towards you (1). Insert the roller onto the front shaft until it clicks into place (2).

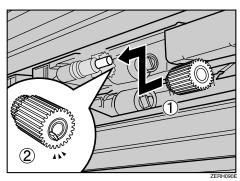

Slide all trays back into the printer slowly until they stop.

#### **Ø** Note

☐ If you replaced the paper feed rollers of the optional 2000-sheet Large Capacity Tray, load stocks that you removed at step ☐ in the tray.


## **Adding Staples**

When "Add Staples " appears on the panel display, add a new staple refill.


Add Staples

1 Open the front cover for the 2 Tray Finisher.


The stapler is attached to the position shown in the illustration.

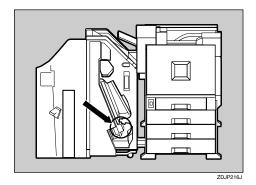

Remove the cartridge by pulling the green knob in the direction of the arrow.

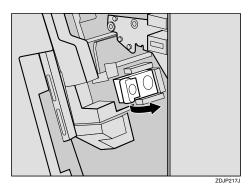


3 Push the areas labeled "PUSH", located on both sides of the stapler.

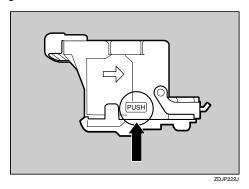


The case cover at top floats up.


4 Pull the case cover up.

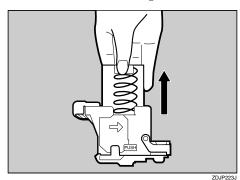


5 Hook your finger in the hole of the empty refill case to pull it out.

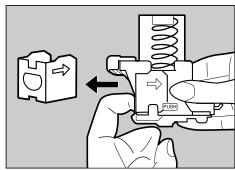


Push in until the arrow on the refill case lines up with the arrow on the refill case cover.

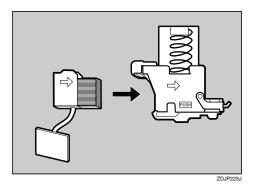

**7** Push the case cover down until it clicks into place.

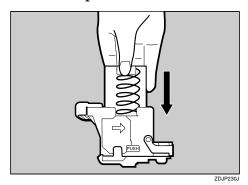


8 Pull out the ribbon used for bundling the staples.

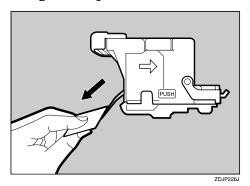

**𝒯** Note

☐ Remove the entire length of the ribbon.

9 Slant and insert the cartridge (1), and push in until it clicks into place (2).

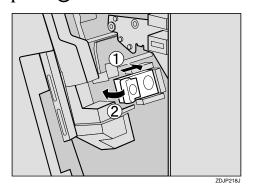

Close the front cover for the 2 Tray Finisher.

## 6. Appendix

### **Staple and Punch Position**

#### **Stapling**

By installing the 2 Tray Finisher, you can staple one printing at a time when printing multiple copies. See the Help files of the printer driver for details on the print methods.

#### Limitation

- ☐ The printer cannot staple paper that is fed from the Bypass Tray.
- ☐ The printer cannot sort "Thick", "Labels", or "OHP" media types in the Paper Tray.

#### Ø Note

- ☐ If you cannot make the settings for stapling even when the 2 Tray Finisher is connected, the optional devices might not have been attached properly. Make the proper settings for the optional devices in the printer driver's dialog box.
- ☐ Outputs of staple depend on the print direction and feed direction. The following table shows the staple positions.

#### Staple Position

Feed Direction	Print direction	Staple Position
	Portrait	AAA
	Landscape	AAA
+	Portrait	AAAA
	Landscape	A A A

O

- ☐ When double-sided printing is selected, adjust the staple position to the binding direction.
- ☐ If you are punching at the same time, specify the same side.
- ☐ The paper sizes and number of pages that can be stapled are displayed below.

Paper Size	Staple Capacity
A3, 11 × 17, B4, Legal, F/GL, Foolscap, Folio, 8K	30
A4, B5, Letter, Executive, 16K	50

#### **Punching**

Used to punch holes in the printing.

#### Limitation

- ☐ The printer cannot punch paper that is fed from the Bypass Tray.
- ☐ To use this function, the 2 Tray Finisher must be installed on the printer.
- ☐ The printer cannot sort "Thick", "Labels", or "OHP" media types in the Paper Tray.

#### **𝒯** Note

☐ Outputs of punch depend on the print direction and feed direction. The following table shows the punch positions.

#### Punch Position

Feed	Print	Punch Position		
Direction direction	2 holes	3 holes	4 holes	
	Portrait	A	A A	A
	Landscape	* <b>A</b> *	Ä	Ä
<b>—</b>	Portrait	A	A	<b>A</b>
	Landscape	A.	A A	A A

- ☐ If you cannot make the settings for punching even when the 2 Tray Finisher is connected, the optional devices might not have been attached properly. Make the proper settings for the optional devices in the printer driver's dialog box.
- ☐ When Duplex Print is selected, adjust the punch position to the binding direction.
- ☐ The paper sizes that can be punched are displayed below.

Туре	Feed Direction	Paper Size
	Ū	A4, B5, A5, 16K, Letter
	←	
2 holes	D	A3, 11×17, B4, A4, B5, Legal,
	←	Letter, Executive, F/GL, Foolscap, Folio, 8K, 16K
	Ū	A4, B5, 16K, Letter
NA 3 holes	<b>←</b>	
	D	A3, B4, 8K, 11×17
	←	
	D	A4, 16K, Letter
EU 4 holes	←	
EU 4 holes	D	A3, 8K, 11×17
	←	
Northern EU 4 holes	Ū	A4, B5, A5, 16K, Letter
	<b>←</b>	
	□	A3, B4, A4, B5, 8K, 16K,
	<b>←</b>	11×17, Legal, Foolscap, Folio, F/GL, Letter, Executive

# Removing Misfed Paper in the Duplex Feed Unit


You can remove misfed paper from the Duplex Feed Unit following the procedure below.

#### Note

☐ When a paper misfeed occurs in the Duplex Feed Unit, the printer usually sends the misfed paper to the right cover and there is no need to execute following procedure. See p.54 "When "Remove Misfeed A:Internal Path" Appears".


#### ∰Important

- ☐ Be sure to remove a misfed paper following the procedure below, only when "Remove Misfeed: Dup. Feed Unit" appears on the panel display.
- 1 Turn off the power switch and unplug the power cable.
- 2 Open the front cover slowly by pulling down from the two areas on the left and right.

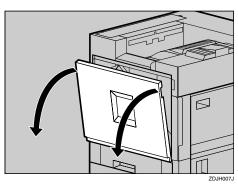


### Take out the green screwdriver.

Use this screwdriver for all attachment and detachment of screws.

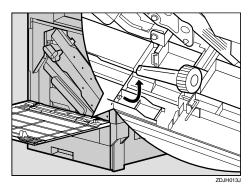


A Remove the screw that is fastening the Duplex Feed Unit using provided screwdriver.

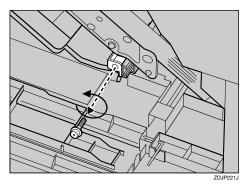


You will use this screw to refasten the Duplex Feed Unit later.


Pinch the upper left area of the Duplex Feed Unit, and pull it out slowly halfway.

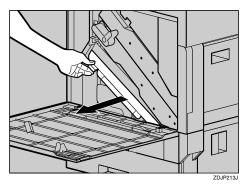

6 Holding the Duplex Feed Unit firmly with both hands, pull it straight out.

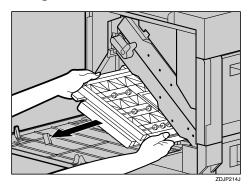


Place the Duplex Feed Unit on the floor slowly. Open it slowly, and remove the misfed paper.

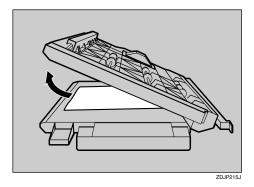


#### ∰Important

☐ Do not open the Duplex Feed Unit by force. It might damage the unit.

- 8 Close the Duplex Feed Unit.
- 9 Holding the Duplex Feed Unit with both hands, insert it along the rails slowly until it stops.

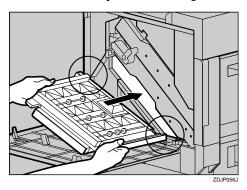


The top and bottom rails are located in the position shown in the illustration.

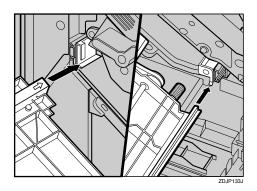


There are two arrows located on the left and right sides of the Duplex Feed Unit.

Refasten the Duplex Feed Unit using provided screwdriver. Use the screw that was removed in step 4.

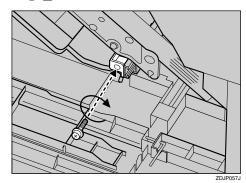

#### Note

- ☐ Be sure to return the provided screwdriver to its original position on the inside of the front cover.
- Close the front cover slowly by pushing the two areas on the left and right.

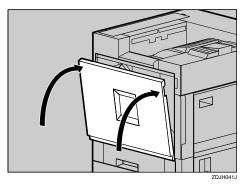

Plug in the power cable and turn on the power switch.


#### When the Front Cover Does Not Close

When "Close Front Cover" appears on the panel display, even if the cover seems to be closed properly, it is not.


> Close Front Cover

When the front cover does not close, confirm that the Transfer Unit is attached firmly.


The Transfer Unit is attached to the position shown in the illustration.

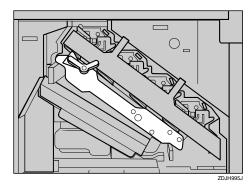


- 1 Turn off the power switch and unplug the power cable.
- 2 If the light brown lever is in the position shown in the illustration, turn it counterclockwise.

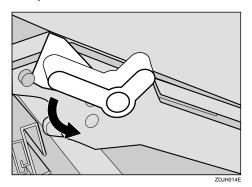


Push in the Transfer Unit until it stops.

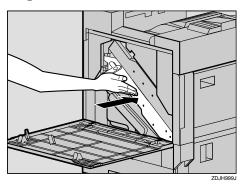

Confirm that the protrusion inside the printer is in the upper left hole of the Transfer Unit.

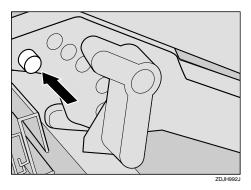


Turn the light brown lever clockwise.

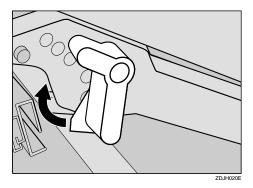

99

Close the front cover slowly by pushing the two areas on the left and right.

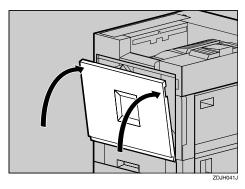

6 Plug in the power cable and turn on the power switch.

### **Consumables**

#### riangle CAUTION:

 Our products are engineered to meet the highest standards of quality and functionality. When purchasing expendable supplies, we recommend using only those specified by an authorized dealer.

#### Toner cartridge

Toner cartridge	Average printable number of pages per cartridge *1
Cyan	10,000 pages
Magenta	10,000 pages
Yellow	10,000 pages
Black	20,000 pages

<sup>\*1</sup> A4 5% test chart, 5 pages/job

#### Note

- ☐ The actual number of printed pages you get from a particular toner cartridge depends on the type and size of paper you are using, the contents of your print images, and printing environment conditions. All this means that a toner cartridge might require replacement sooner than the normal life described above.
- ☐ Toner cartridges that come with the printer are for setup purposes, and will not provide the number of pages described above. The average number of printable pages that can be expected from the toner cartridges included in the printer are as follows:
  - Black toner cartridge: about 10,000 pages
  - Cyan, magenta and yellow toner cartridges: about 5,000 pages for each cartridge.

#### Staple Cartridge

Cartridge type	Number of shots	
Staple cartridge	5000 shots $\times$ 1 with cartridge	
Staple Refill cartridge	Refill 5000 shots × 3	

#### Other consumables

#### **𝚱** Note

☐ Actual life of consumables depends on the type and size of paper you are using, the contents of your print images, and printing environment conditions. All that means that consumables might require replacement sooner than the life indicated. Furthermore, the life of color consumables may considerably shorten as mixed printing of black & white pages and color pages frequently occurs.

Name	Consumables	Average printable number of pages *1
Printer Maintenance Kit Type 3800A	Color Photoconductor Unit × 3	50,000 pages *2
Printer Maintenance Kit Type 3800B	Color Development Unit × 3	100,000 pages *2
Printer Maintenance Kit Type 3800C	Fusing Unit × 1	100,000 pages *2
Printer Maintenance Kit Type 3800D	Black Development Unit × 1	100,000 pages *2
Printer Maintenance Kit Type 3800E	Waste Toner Bottle × 1	50,000 pages
Printer Maintenance Kit Type 3800F	Black Photoconductor Unit × 1	50,000 pages *2
Printer Maintenance Kit Type 3800G	Fuser Oil Unit × 1	20,000 pages *2
Printer Maintenance Kit Type 3800H	Paper Feed Rollers × 1	150,000 pages

<sup>\*1</sup> A4 5% test chart, 5 pages/job

<sup>\*2</sup> When printing each page as a single job, the unit needs extra idling, thus reducing the unit's print life by half.

## **INDEX**

<u>A</u>	IVI
Adding Staples, 90 Adjusting the Color Registration, 22 Auto Adjust, 22	messages, 41
Manual Adjust, 26 Adjusting the Image Density, 30 Adjusting the Registration of the Trays, 31 Appendix, 93	OHP transparencies, 8 Online indicator, 48 Online key, 48 Onening and Clasing
c	Opening and Closing the Duplex Reversal Unit, 53, 64 Other Printing Problems, 50
Caution, ii Cleaning the DustProof Glass, 21	<u>P</u>
Cleaning the Registration Roller, 20 Clearing and Adjusting the Printer, 19 Color Adjustment  Checking the Test Sheet, 28 Consumables, 101	Paper and Other Media, 1 Paper Size, 1 Plain Paper, 8 Printable Area, 11 Printer Does Not Print, 48
<u>D</u>	Punching, 94
Data In indicator, 49 Detaching the 2 Tray Finisher, 53 Detaching the SR770 (2 Tray Finisher), 63 Displaying the Status of Printer, 38 SmartNetMonitor for Admin, 38 SmartNetMonitor for Client, 38 Display panel, messages, 41	Remove Misfed Paper  Duplex Unit, 59  Finisher, 56  Fusing Unit, 55  Internal Path, 54  Mailbox, 56  Paper Tray, 58  Removing Jammed Staples, 60
Energy Star, iv Envelopes, 9 Error, 41 Error indicator, 48	Removing Misfed Paper, 53 Removing Misfed Paper into the Duplex Feed Unit, 96 Removing Punch-hole Chips, 62 Replacing Consumables and
<u> </u>	Maintenance Kit, 63 Replacing the Development Unit, 76
install SmartNetMonitor for Admin, 33	Replacing the Dustproof Filter, 83 Replacing the Fuser Oil Unit, 68
<u>L</u>	Replacing the Fusing Unit, 80 Replacing the Photoconductor Unit, 72
Loading Paper, 7, 12  Optional Paper Feed Unit, 13  Tray 1, 12  Tray 2, 13  Loading paper  Bypass Tray, 15  Paper Bank PS470, 14	Replacing the Toner Cartridge, 65 Replacing the Waste Toner Bottle, 85

#### S

SmartNetMonitor for Admin, 33 install, 33 SmartNetMonitor for Client, 35 Stapling, 93 Storing Paper, 7

#### Т

Thick Paper, 8 Toner Cartridge, 101 Troubleshooting, 41

#### W

Warning, ii When the Front Cover Does Not Close, 99