Printer Maintenance Kit Type 3800H

(Code: G776)

MAINTENANCE GUIDE

A CAUTION:

 The inside of the machine becomes very hot. Do not touch the parts with a label indicating a "hot surface". Touching a "hot surface" could result in a burn.

Note

- ☐ The following illustrations are examples of replacing the paper feed rollers of Tray 1. The same procedure applies to other trays.
- 1 Check the contents of the box for the following items:

Description	Q'ty
Paper Feed Roller A	1
Paper Feed Roller B	1
Paper Feed Roller C	1
Stoppers	2
49 49	
Maintenance Guide (This manual)	1

Note


☐ The two stoppers enclosed in the kit are spares. When replacing rollers B and C in steps ⑤ to ⑤, use the roller stoppers attached in the machine. If you should drop or misplace either of these, use the stoppers in the kit.

Be sure to check the following points:

- The power is turned off.
- The power cord is unplugged from the wall outlet.
- The interface cable is unplugged from the printer.


∰Important

- ☐ If you are replacing the paper feed rollers of the optional 2000-sheet Large Capacity Tray, remove all paper from the tray.
- Slowly pull out all trays while lifting up a little.

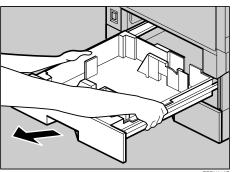


ZERH010E


- Note
- ☐ If you are replacing the paper feed rollers of the optional paper feed unit, or 2000-sheet Large Capacity Tray, pull out all paper trays from each unit.
- Check the position of the paper feed rollers.

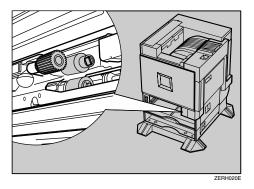


Confirm the positions and names of each roller.

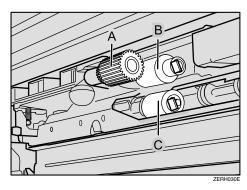


While pushing the pin of the paper feed roller A outwards (1), remove the paper feed roller (2).

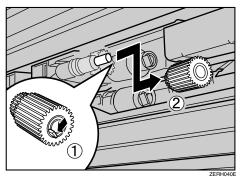


Remove the stopper from the paper feed roller B (1), and then remove the roller (2).

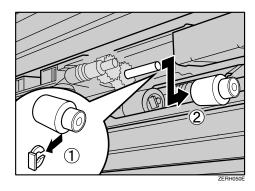


Remove the stopper from the paper feed roller C (1), and then remove the roller (2).

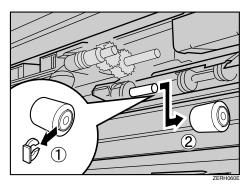


Hold the new paper feed roller C with its gear towards the shaft. Insert it into the rear shaft so that the roller gear interlocks with the shaft gear (1). Lock the roller with the stopper (2).

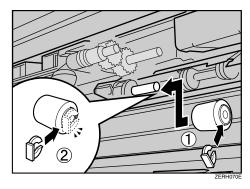

Hold the new paper feed roller B with its gear towards the shaft. Insert it into the rear shaft so that the roller gear interlocks with the shaft gear (1). Lock the roller with the stopper (2).

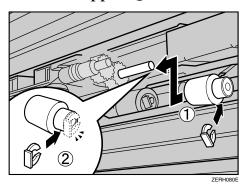

Hold the new paper feed roller A with its pin towards you (1). Insert the roller onto the front shaft until it clicks into place (2).

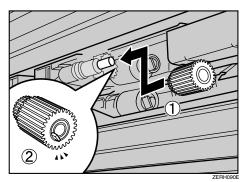

Slowly slide all trays back into the printer until they stop.

Note

☐ If you are replacing the paper feed rollers of the optional 2000-sheet Large Capacity Tray, load the stocks removed in step ② into the tray.