


Operating Instructions

Printer Reference

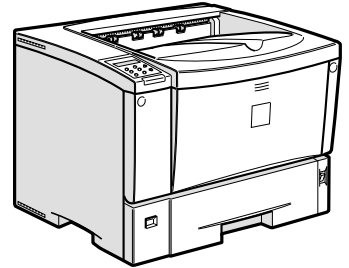

-
- 1** Setting Up the Printer Driver and Canceling a Print Job
 - 2** Uninstalling the Printer Driver and Software
 - 3** Paper and Other Media
 - 4** Sample Print/Locked Print
 - 5** Troubleshooting
 - 6** Making Printer Settings with the Control Panel
 - 7** Appendix

Introduction

This manual gives detailed instructions and notes on the operation and maintenance of this machine. To get maximum versatility from this machine all operators are requested to read this manual carefully and follow its instructions. Please keep this manual in a handy place near the machine.

Please read the Safety Information before using this machine. It contains important information related to USER SAFETY and PREVENTING EQUIPMENT PROBLEMS.

Important

Contents of this manual are subject to change without prior notice. In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

Caution:

Use of controls, adjustments or performance of procedures other than those specified in this manual might result in exposure to hazardous radiation .

Do not attempt any Maintenance or troubleshooting other than that mentioned in this manual. This printer contains a laser beam generator and direct exposure to laser beams can cause permanent eye damage.

For good copy quality, supplier recommends that you use manufacturer-original toner.

The supplier shall not be responsible for any damage or expense that might result from the use of parts other than genuine supplier's office product.

TABLE OF CONTENTS

Trademarks	1
Manuals for This Printer	3
Manuals for This Printer	3
How to Read This Manual	4

1. Setting Up the Printer Driver and Canceling a Print Job

PCL 6/5e - Accessing the Printer Properties	5
Windows 95/98/Me - Accessing the Printer Properties	5
Windows 2000/Windows XP/Server 2003 - Accessing the Printer Properties	6
Windows NT 4.0 - Accessing the Printer Properties	9
RPCS - Accessing the Printer Properties	11
Windows 95/98/Me - Accessing the Printer Properties	11
Windows 2000/Windows XP/Server 2003 - Accessing the Printer Properties	13
Windows NT 4.0 - Accessing the Printer Properties	16
PostScript - Setting Up for Printing	18
Windows 95/98/Me - Accessing the Printer Properties	18
Windows 2000/Windows XP/Server 2003 - Accessing the Printer Properties	19
Windows NT 4.0 - Accessing the Printer Properties	22
Macintosh - Setting Up for Printing	24
Canceling a Print Job	25
Windows 95/98/Me, Windows 2000, Windows XP/Server 2003, Windows NT 4.0 - Canceling a Print Job	25
Macintosh - Canceling a Print Job	26

2. Uninstalling the Printer Driver and Software

Uninstalling the PCL 6/5e Printer Driver	29
Windows 95/98/Me - Uninstalling the PCL 6/5e Printer Driver.....	29
Windows 2000/Windows XP/Server 2003 - Uninstalling the PCL 6/5e Printer Driver ...	29
Windows NT 4.0 - Uninstalling the PCL 6/5e Printer Driver.....	30
Uninstalling the RPCS Printer Driver	31
Windows 95/98/Me - Uninstalling the RPCS Printer Driver.....	31
Windows 2000/Windows XP/Server 2003 - Uninstalling the RPCS Printer Driver...	31
Windows NT 4.0 - Uninstalling the RPCS Printer Driver.....	32
Uninstalling the PostScript Printer Driver	33
Windows 95/98/Me - Uninstalling the PostScript Printer Driver	33
Windows 2000/Windows XP/Server 2003 - Uninstalling the PostScript Printer Driver ...	33
Windows NT 4.0 - Uninstalling the PostScript Printer Driver	34
Macintosh - Uninstalling the PostScript Printer Driver	34

3. Paper and Other Media

Paper and Other Media Supported by This Printer.....	35
Paper Types and Sizes	35
Paper Recommendations.....	42
Printable Area	45
Loading Paper and Other Media.....	47
Loading Paper in the Paper Tray	47
Loading Paper in the Bypass Tray	50
Loading Envelopes.....	55

4. Sample Print/Locked Print

Sample Print	61
Printing a Sample Print File.....	62
Deleting a Sample Print File.....	63
Checking the Error Log	65
Locked Print	66
Printing a Locked Print File	66
Deleting the Locked Print File	68
Checking the Error Log	70

5. Troubleshooting

Error & Status Messages on the Control Panel	73
Getting Printer Information over the Network	83
Printer Does Not Print	89
Other Printing Problems	93
Removing Misfed Paper	97
When "Remove Misfeed Paper Tray" Appears	97
When "Remove Misfeed Internal Path/Open Front Cover" Appears.....	98
When "Remove Misfeed Paper Exit Cover" Appears.....	99
When "Remove Misfeed Duplex Unit" Appears	104
Replacing the Toner Cartridge	107
Cleaning and Adjusting the Printer.....	110
Cleaning the Friction Pad	110
Cleaning the Paper Feed Roller	111
Cleaning the Registration Roller	113
Adjusting the Image Density	114
Adjusting the Registration of the Trays	116

6. Making Printer Settings with the Control Panel

Menu Chart	119
Accessing the Main Menu	122
Paper Input Menu.....	124
Paper Input Parameters	124
Changing the Paper Input Menu	126
List/Test Print Menu.....	128
List/Test Print Parameters.....	128
Printing the Configuration Page and Error Log	129
Printing a Configuration Page	130
Interpreting the Configuration Page	132
Maintenance Menu	134
Maintenance Menu Parameters	135
Changing the Maintenance Menu	137
System Menu.....	146
System Parameters.....	146
Changing the System Menu.....	151
Host Interface Menu.....	154
Host Interface Parameters	154
Changing the Host Interface Menu	160
PCL Menu	162
PCL Parameters.....	162
Changing the PCL Menu.....	164
PS Menu.....	166
PS Parameters.....	166
Changing the PS Menu	167
PDF Menu	169
PDF Parameters	169
Changing the PDF Menu.....	169
Language Menu.....	172
Changing the Language Menu.....	172

7. Appendix

Replacing Parts	175
MAINTENANCE KIT Type 400	175
Replacing the Friction Pad	177
Replacing the Paper Feed Rollers	178
Replacing the Transfer Roller	179
Replacing the Fusing Unit	182
Collate	184
Spool Printing	185
Precautions when using Windows Server 2003	186
Precautions when using the Terminal Server mode	186
Memory Capacity and Paper Size	187
Setting of the “Frame Priority”	187
Setting of the “Font Priority”	188
Moving and Transporting the Printer	189
Moving the Printer	189
Specifications	191
Mainframe	191
Options	194
Consumables	198
Information about Installed Software	199
expat	199
JPEG LIBRARY	199
NetBSD	200
INDEX	202

Trademarks

AppleTalk, EtherTalk, LaserWriter, Macintosh are registered trademarks of Apple Computer, Inc.

Ethernet is a registered trademark of Xerox Corporation.

Microsoft, Windows, Windows NT are registered trademarks of Microsoft Corporation in the United States and/or other countries.

Novell, NetWare are registered trademarks of Novell, Inc.

PostScript is a registered trademark of Adobe Systems, Incorporated.

PowerPC is a registered trademark of International Business Machines Corporation.

PCL is a registered trademark of Hewlett-Packard Company.

Bluetooth is a Trademark of the Bluetooth SIG, Inc. (Special Interest Group) and licensed to RICOH Company Limited.

Copyright © 2001 Bluetooth SIG, Inc.

The Bluetooth Trademarks are owned by Bluetooth SIG, Inc. USA

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights to those marks.

The proper names of the Windows operating systems are as follows:

- The product name of Windows® 95 is Microsoft® Windows 95.
- The product name of Windows® 98 is Microsoft® Windows 98.
- The product name of Windows® Me is Microsoft® Windows Millennium Edition (Windows Me).
- The product names of Windows® 2000 are as follows:
 - Microsoft® Windows® 2000 Advanced Server
 - Microsoft® Windows® 2000 Server
 - Microsoft® Windows® 2000 Professional
- The product names of Windows® XP are as follows:
 - Microsoft® Windows® XP Professional
 - Microsoft® Windows® XP Home Edition
- The product names of Windows Server™ 2003 are as follows:
 - Microsoft® Windows Server™ 2003 Standard Edition
 - Microsoft® Windows Server™ 2003 Enterprise Edition
 - Microsoft® Windows Server™ 2003 Web Edition
- The product names of Windows NT® 4.0 are as follows:
 - Microsoft® Windows NT® Server 4.0
- Microsoft® Windows NT® Workstation 4.0

Notes:

Some illustrations in this manual might be slightly different from the machine. Certain options might not be available in some countries. For details, please contact your local dealer.

Manuals for This Printer

Manuals for This Printer

The following manuals describe the operational procedures and Maintenance of this machine.

To enhance safe and efficient operation of this printer, all users should read and follow the instructions carefully.

❖ **Quick Installation Guide**

Describes how to install the printer.

❖ **Setup Guide**

Provides information about setting up the printer and its options. This manual is provided as a printed manual, and also on the CD-ROM labeled "Operating Instructions".

❖ **Printer Reference (this manual)**

Provides information about using the printer and its options. This manual provided on the CD-ROM labeled "Operating Instructions".

❖ **Network Printing Guide**

Provides information about setting up and using the printer in a network environment. This manual provided on the CD-ROM labeled "Operating Instructions".

❖ **PostScript 3 Operating Instructions Supplement**

Describes the menus and features for the PostScript 3 printer driver. This manual provided on the CD-ROM labeled "Operating Instructions".

 Note

- ❑ There are three CD-ROMs that come with this printer. "Operating Instructions", "Printer Drivers and Utilities", and "Document Management Utility".
- ❑ Concerning UNIX information, please visit our Web site or consult your authorized reseller.

How to Read This Manual

Symbols

In this manual, the following symbols are used:

WARNING:

This symbol indicates a potentially hazardous situation which, if instructions are not followed, could result in death or serious injury.

CAUTION:

This symbol indicates a potentially hazardous situation which, if instructions are not followed, may result in minor or moderate injury or damage to property.

* The statements above are notes for your safety.

Important

If this instruction is not followed, paper might be misfed, originals might be damaged, or data might be lost. Be sure to read this.

Preparation

This symbol indicates the prior knowledge or preparations required before operating.

Note

This symbol indicates precautions for operation, or actions to take after misoperation.

Limitation

This symbol indicates numerical limits, functions that cannot be used together, or conditions in which a particular function cannot be used.

Reference

This symbol indicates a reference.

[]

Keys that appear on the machine's panel display.

Keys and buttons that appear on the computer's display.

【 】

Keys built into the machine's control panel.

Keys on the computer's keyboard.

1. Setting Up the Printer Driver and Canceling a Print Job

PCL 6/5e - Accessing the Printer Properties

Windows 95/98/Me - Accessing the Printer Properties

There are two methods you can use to open the printer properties dialog box.

Changing the default printer settings

Note

- ☐ With some applications, the printer driver's settings are not used, and the application's own default settings are applied.

1 Click **[Start]** on the taskbar, point to **[Settings]**, and then click **[Printers]**.

The **[Printers]** window appears.

2 Click to select the icon of the printer whose default settings you want to change.

3 On the **[File]** menu, click **[Properties]**.

The Printer Properties appear.

4 Make any settings you require and click **[Apply]**.

5 Click **[OK]**.

If a message is displayed during printer driver installation

When there is a driver in the computer that is newer than the one currently being installed, a message dialog box appears.

If this happens, you cannot install using the Auto Run program. Use the driver displayed in the message, and reinstall using **[Add Printer]**.

① Click **[Start]**, point to **[Settings]**, and then click **[Printers]**.

② Double-click the **[Add Printer]** icon.

③ Follow the wizard to install the driver.

If the printer driver is stored on a CD-ROM, the source for installation is as follows: (If the installer starts up, click **[Cancel]** to quit it.)

- PCL 6
DRIVERS\PCL6\WIN9X_ME\ (Language) \DISK1
 - PCL 5e
DRIVERS\PCL5e\WIN9X_ME\ (Language) \DISK1
-

Making printer settings from an application

To make the printer settings for a specific application, open the **[Printer Properties]** dialog box from that application. The following example describes how to make settings for the WordPad application that comes with Windows 95/98/Me.

Note

- ☐ The actual procedure you should follow to open the **[Printer Properties]** dialog box may differ depending on the application. For more information, see the documentation that comes with the application you are using.
- ☐ With some applications, the printer driver's settings are not used, and the application's own default settings are applied.
- ☐ Any settings you make in the following procedure are valid for the current application Only.

1 On the **[File]** menu, click **[Print]**.

The **[Print]** dialog box appears.

2 Select the printer you want to use in the **[Name]** list box, and then click **[Properties]**.

The **[Printer Properties]** dialog box appears.

3 Make any settings you require and click **[OK]**.

4 Click **[OK]** to start printing.

Windows 2000/Windows XP/Server 2003 - Accessing the Printer Properties

Changing the default printer settings - Printer Properties

Limitation

- ☐ Changing the setting of the printer requires Manage Printers permission. Members of the Administrators and Power Users groups have Manage Printers permission by default. When you set up options, log on using an account that has Manage Printers permission.

1 Click **[Start]** on the taskbar, point to **[Settings]**, and then click **[Printers]**.

The **[Printers]** window appears.

Note

- ☐ With Windows XP Professional/Windows Server 2003, access the **[Printers and Faxes]** window from **[Start]** on the taskbar.
- ☐ With Windows XP Home Edition, open **[Control panel]** from **[Start]**, click **[Printers and Other Hardware]**, and then click **[Printers and Faxes]** on the screen that appears.

2 Click to select the icon of the printer whose default setting you want to change.

3 On the **[File]** menu, click **[Properties]**.

The Printer Properties appear.

 Note

- ☐ When you open the printer properties dialog box for the first time after installing the RPCS printer driver, a confirmation window appears. After that, the initial display of the printer properties dialog box appears.

4 Make any settings you require and click **[OK]**.

 Note

- ☐ Settings you make here are used as the default settings for all applications.

5 Click **[OK]**.

 If a message is displayed during printer driver installation

When there is a driver in the computer that is newer than the one currently being installed, a message dialog box appears.

If this happens, you cannot install using the Auto Run program. Use the driver displayed in the message, and reinstall using **[Add Printer]**.

① Click **[Start]**, point to **[Settings]**, and then click **[Printers]**.

② Double-click the **[Add Printer]** icon.

③ Follow the wizard to install the driver.

If the printer driver is stored on a CD-ROM, the source for installation is as follows: (If the installer starts up, click **[Cancel]** to quit it.)

- PCL 6
DRIVERS\PCL6\WIN2K_XP\ (Language) \DISK1
- PCL 5e
DRIVERS\PCL5e\WIN2K_XP\ (Language) \DISK1

Changing the default printer settings – Printing Preferences Properties

 Limitation

- ☐ Changing the setting of the printer requires Manage Printers permission. Members of the Administrators and Power Users groups have Manage Printers permission by default. When you set up options, log on using an account that has Manage Printers permission.

1 Click **[Start]** on the taskbar, point to **[Settings]**, and then click **[Printers]**.

The **[Printers]** window appears.

2 Click to select the icon of the printer whose default settings you want to change.

3 On the **[File]** menu, click **[Printing Preferences...]**.

The Printing Preferences Properties appears.

4 Make any settings you require and click **[Apply]**.

 Note

☐ Settings you make here are used as the default settings for all applications.

5 Click **[OK]**.

Making printer settings from an application

To make the printer settings for a specific application, open the **[Print]** dialog box from that application. The following example describes how to make settings for the WordPad application that comes with Windows 2000/Windows XP/Server 2003.

 Note

- ☐ The actual procedures you should follow to open the **[Print]** dialog box may differ depending on the application. For more information, see the documentation that comes with the application you are using.
- ☐ Any settings you make in the following procedure are valid for the current application Only.

1 On the **[File]** menu, click **[Print...]**.

The **[Print]** dialog box appears.

2 Select the printer you want to use in the **[Select Printer]** box.

Click the tab that you want to change its print setting.

 Note

☐ With Windows XP/Server 2003, click **[Preference]** to open the Printer Preference window.

3 Make any settings you require and click **[Apply]**.

 Note

☐ With Windows XP/Server 2003, make any settings you require and click **[OK]**.

4 Click **[Print]** to start printing.

Windows NT 4.0 - Accessing the Printer Properties

Changing the default printer settings - Printer Properties

1

Limitation

- ☐ Changing the setting of the printer requires Full Control access permission. Members of Administrators, Server Operators, Print Operators, and Power Users groups have Full Control permission by default. When you set up options, log on using an account that has Full Control permission.

1 Click **[Start]** on the taskbar, point to **[Settings]**, and then click **[Printers]**.

The **[Printers]** window appears.

Note

- ☐ When you open the printer properties dialog box for the first time after installing the RPCS printer driver, a confirmation window appears. After that, the initial display of the printer properties dialog box appears.

2 Click to select the icon of the printer whose default settings you want to change.

3 On the **[File]** menu, click **[Properties]**.

The Printer Properties appears.

4 Make any settings you require and click **[OK]**.

Note

- ☐ Settings you make here are used as the default settings for all applications.

If a message is displayed during printer driver installation

When there is a driver in the computer that is newer than the one currently being installed, a message dialog box appears.

If this happens, you cannot install using the Auto Run program. Use the driver displayed in the message, and reinstall using **[Add Printer]**.

① Click **[Start]**, point to **[Settings]**, and then click **[Printers]**.

② Double-click the **[Add Printer]** icon.

③ Follow the wizard to install the driver.

If the printer driver is stored on a CD-ROM, the source for installation is as follows: (If the installer starts up, click **[Cancel]** to quit it.)

- PCL 6
DRIVERS\PCL6\NT4\ (Language) \DISK1
- PCL 5e
DRIVERS\PCL5e\NT4\ (Language) \DISK1

Changing the default printer settings – Default Document Properties

Limitation

- ☐ Changing the setting of the printer requires Full Control access permission. Members of the Administrators, Server Operators, Print Operators, and Power Users groups have Full Control permission by default. When you set up options, log on using an account that has Full Control permission.

1 Click **[Start]** on the taskbar, point to **[Settings]**, and then click **[Printers]**.

The **[Printers]** window appears.

2 Click to select the icon of the printer whose default settings you want to change.

3 On the **[File]** menu, click **[Document Defaults]**.

The Default Document Properties appear.

4 Make any settings you require and click **[OK]**.

Note

- ☐ Settings you make here are used as the default settings for all applications.

Making printer settings from an application

To make the printer settings for a specific application, open the **[Printer Properties]** dialog box from that application. The following example describes how to make settings for the WordPad application that comes with Windows NT 4.0.

Note

- ☐ The actual procedure you should follow to open the **[Printer Properties]** dialog box may differ depending on the application. For more information, see the documentation that comes with the application you are using.
- ☐ Any settings you make in the following procedure are valid for the current application Only.

1 On the **[File]** menu, click **[Print]**.

The **[Print]** dialog box appears.

2 Select the printer you want to use in the **[Name]** list box, and then click **[Properties]**.

The Printer Properties appears.

3 Make any settings you require and click **[OK]**.

Click **[OK]** to start printing.

RPCS - Accessing the Printer Properties

Windows 95/98/Me - Accessing the Printer Properties

1

There are two windows types you can use to open the printer properties dialog box.

“Multi-tab” is used as an example in this manual. See Help for information about changing the windows types.

❖ Multi-tab

This is the window type for users who often change print settings in order to make various kinds of prints.

❖ Custom Setting

This is the window type for users who rarely change print settings when making prints. The Custom Setting display may vary depending on the installed options.

Changing the default printer settings

To make default printer settings, first open the printer properties dialog box from the **[Printers]** window.

Note

- ☐ With some applications, printer driver settings are not used, and the application's own default settings are applied.

1 Click **[Start]** on the taskbar, point to **[Settings]**, and then click **[Printers]**.

The **[Printers]** window appears.

2 Click to select the icon of the printer whose default settings you want to change.

3 On the **[File]** menu, click **[Properties]**.

The printer properties appear.

Note

- ☐ When you open the printer properties dialog box for the first time after installing the RPCS printer driver, a confirmation window appears. After that, the initial display of the printer properties dialog box appears.

4 Make any settings you require and click **[Apply]**.

Note

- ☐ With some applications, the printer driver's settings are not used, and the application's own default settings are applied.

5 Click **[OK]**.



If a message is displayed during printer driver installation

When there is a driver in the computer that is newer than the one currently being installed, a message dialog box appears.

If this happens, you cannot install using the Auto Run program. Use the driver displayed in the message, and reinstall using **[Add Printer]**.

- ① Click **[Start]**, point to **[Settings]**, and then click **[Printers]**.
- ② Double-click the **[Add Printer]** icon.

- ③ Follow the wizard to install the driver.

If the printer driver is stored on a CD-ROM, the source for installation is as follows: (If the installer starts up, click **[Cancel]** to quit it.)

- RPCS
DRIVERS\RPCS\WIN9X_ME\ (Language) \DISK1

Making printer settings from an application

To make the printer settings for a specific application, open the **[Printer Properties]** dialog box from that application. The following example describes how to make settings for the WordPad application that comes with Windows 95/98/Me.

Note

- ☐ The actual procedure you should follow to open the **[Printer Properties]** dialog box may differ depending on the application. For more information, see the documentation that comes with the application you are using.
- ☐ With some applications, printer driver settings are not used, and the application's own default settings are applied.
- ☐ Any settings you make in the following procedure are valid for the current application Only.

- 1** On the **[File]** menu, click **[Print]**.

The **[Print]** dialog box appears.

- 2** Select the printer you want to use in the **[Name]** list box, and then click **[Properties]**.

The **[Printer Properties]** dialog box appears.

- 3** Make any settings you require and click **[OK]**.

- 4** Click **[OK]** to start printing.

Windows 2000/Windows XP/Server 2003 - Accessing the Printer Properties

Changing the default printer settings - Printer Properties

1

Limitation

- ☐ Changing the setting of the printer requires Manage Printers permission. Members of the Administrators and Power Users groups have Manage Printers permission by default. When you set up options, log on using an account that has Manage Printers permission.

1 Click **[Start]** on the taskbar, point to **[Settings]**, and then click **[Printers]**.

The **[Printers]** window appears.

Note

- ☐ With Windows XP Professional/Windows Server 2003, access the **[Printers and Faxes]** window from **[Start]** on the taskbar.
- ☐ With Windows XP Home Edition, open **[Control panel]** from **[Start]**, click **[Printers and Other Hardware]**, and then click **[Printers and Faxes]** on the screen that appears.

2 Click to select the icon of the printer whose default settings you want to change.

3 On the **[File]** menu, click **[Properties]**.

The Printer Properties appears.

Note

- ☐ When you open the printer properties dialog box for the first time after installing the RPCS printer driver, a confirmation window appears. After that, the initial display of the printer properties dialog box appears.

4 Make any settings you require and click **[Apply]**.

Note

- ☐ Settings you make here are used as the default settings for all applications.

5 Click **[OK]**.

 If a message is displayed during printer driver installation

When there is a driver in the computer that is newer than the one currently being installed, a message dialog box appears.

If this happens, you cannot install using the Auto Run program. Use the driver displayed in the message, and reinstall using **[Add Printer]**.

① Click **[Start]**, point to **[Settings]**, and then click **[Printers]**.

② Double-click the **[Add Printer]** icon.

③ Follow the wizard to install the driver.

If the printer driver is stored on a CD-ROM, the source for installation is as follows: (If the installer starts up, click **[Cancel]** to quit it.)

- RPCS

DRIVERS\RPCS\WIN2K_XP\ (Language) \DISK1

Changing the default printer settings - Printing Preferences Properties

 Limitation

- ☐ Changing the setting of the printer requires Manage Printers permission. Members of the Administrators and Power Users groups have Manage Printers permission by default. When you set up options, log on using an account that has Manage Printers permission.

1 Click **[Start]** on the taskbar, point to **[Settings]**, and then click **[Printers]**.

The **[Printers]** window appears.

2 Click to select the icon of the printer whose default settings you want to change.

3 On the **[File]** menu, click **[Printing Preferences...]**.

The Printing Preferences Properties appear.

4 Make any settings you require and click **[Apply]**.

 Note

- ☐ Settings you make here are used as the default settings for all applications.

5 Click **[OK]**.

Making printer settings from an application

To make the printer settings for a specific application, open the **[Print]** dialog box from that application. The following example describes how to make settings for the WordPad application that comes with Windows 2000.

 Note

- ☐ The actual procedures you should follow to open the **[Print]** dialog box may differ depending on the application. For more information, see the documentation that comes with the application you are using.
- ☐ Any settings you make in the following procedure are valid for the current application Only.

1 On the **[File]** menu, click **[Print...]**.

The **[Print]** dialog box appears.

2 Select the printer you want to use in the **[Select Printer]** box.

Click the tab that you want to change its print setting.

 Note

- ☐ With Windows XP/Server 2003, click **[Preference]** to open the Printer Preference window.

3 Make any settings you require and click **[Apply]**.

 Note

- ☐ With Windows XP/Server 2003, make any settings you require and click **[OK]**.

4 Click **[Print]** to start printing.

Windows NT 4.0 - Accessing the Printer Properties

Changing the default printer settings - Printer Properties

Limitation

- ☐ Changing the setting of the printer requires Full Control access permission. Members of Administrators, Server Operators, Print Operators, and Power Users groups have Full Control permission by default. When you set up options, log on using an account that has Full Control permission.

1 Click **[Start]** on the taskbar, point to **[Settings]**, and then click **[Printers]**.

The **[Printers]** window appears.

2 Click to select the icon of the printer you want to use.

3 On the **[File]** menu, click **[Properties]**.

The **[Printer Properties]** dialog box appears.

Note

- ☐ When you open the printer properties dialog box for the first time after installing the RPCS printer driver, a confirmation window appears. After that, the initial display of the printer properties dialog box appears.

4 Make any settings you require and click **[OK]**.

Note

- ☐ Settings you make here are used as the default settings for all applications.

If a message is displayed during printer driver installation

When there is a driver in the computer that is newer than the one currently being installed, a message dialog box appears.

If this happens, you cannot install using the Auto Run program. Use the driver displayed in the message, and reinstall using **[Add Printer]**.

① Click **[Start]**, point to **[Settings]**, and then click **[Printers]**.

② Double-click the **[Add Printer]** icon.

③ Follow the wizard to install the driver.

If the printer driver is stored on a CD-ROM, the source for installation is as follows: (If the installer starts up, click **[Cancel]** to quit it.)

- RPCS
`DRIVERS\RPCS\NT4\ (Language) \DISK1`

Changing the default printer settings – Default Document Properties

Limitation

- ☐ Changing the setting of the printer requires Full Control access permission. Members of the Administrators, Server Operators, Print Operators, and Power Users groups have Full Control permission by default. When you set up options, log on using an account that has Full Control permission.

1 Click **[Start]** on the taskbar, point to **[Settings]**, and then click **[Printers]**.

The **[Printers]** window appears.

2 Click to select the icon of the printer you want to use.

3 On the **[File]** menu, click **[Document Defaults]**.

The Default Document Properties appear.

4 Make any settings you require and click **[OK]**.

Note

- ☐ Settings you make here are used as the default settings for all applications.

Making printer settings from an application

To make the printer settings for a specific application, open the **[Printer Properties]** dialog box from that application. The following example describes how to make settings for the WordPad application that comes with Windows NT 4.0.

Note

- ☐ The actual procedure you should follow to open the **[Printer Properties]** dialog box may differ depending on the application. For more information, see the documentation that comes with the application you are using.
- ☐ With some applications, printer driver settings are not used, and the application's own default settings are applied.
- ☐ Any settings you make in the following procedure are valid for the current application Only.

1 On the **[File]** menu, click **[Print]**.

The **[Print]** dialog box appears.

2 Select the printer you want to use in the **[Name]** list box, and then click **[Properties]**.

The **[Printer Properties]** dialog box appears.

3 Make any settings you require and click **[OK]**.

4 Click **[OK]** to start printing.

PostScript - Setting Up for Printing

1

Windows 95/98/Me - Accessing the Printer Properties

There are two methods you can use to open the printer properties dialog box.

Changing the default printer settings

To make default printer settings, first open the printer properties dialog box from the **[Printers]** window.

Note

- ☐ With some applications, the printer driver's settings are not used, and the application's own default settings are applied.

1 Click **[Start]** on the taskbar, point to **[Settings]**, and then click **[Printers]**.

The **[Printers]** window appears.

2 Click to select the icon of the printer whose default settings you want to change.

3 On the **[File]** menu, click **[Properties]**.

The **[Printer Properties]** dialog box appears.

4 Make any settings you require and click **[Apply]**.

5 Click **[OK]**.



If a message is displayed during printer driver installation

When there is a driver in the computer that is newer than the one currently being installed, a message dialog box appears.

If this happens, you cannot install using the Auto Run program. Use the driver displayed in the message, and reinstall using **[Add Printer]**.

① Click **[Start]**, point to **[Settings]**, and then click **[Printers]**.

② Double-click the **[Add Printer]** icon.

③ Follow the wizard to install the driver.

If the printer driver is stored on a CD-ROM, the source for installation is as follows: (If the installer starts up, click **[Cancel]** to quit it.)

- PostScript 3
DRIVERS\PS\WIN9X_ME\ (Language) \DISK1

Making printer settings from an application

To make the printer settings for a specific application, open the **[Printer Properties]** dialog box from that application. The following example describes how to make settings for the WordPad application that comes with Windows 95/98/Me.

Note

- ☐ The actual procedure you should follow to open the **[Printer Properties]** dialog box may differ depending on the application. For more information, see the documentation that comes with the application you are using.
- ☐ With some applications, printer driver settings are not used, and the application's own default settings are applied.
- ☐ Any settings you make in the following procedure are valid for the current application Only.

1 On the **[File]** menu, click **[Print]**.

The **[Print]** dialog box appears.

2 Select the printer you want to use in the Name list box, and then click **[Properties]**.

The **[Printer Properties]** dialog box appears.

3 Make any settings you require and click **[Apply]**.

4 Click **[OK]** to start printing.

Windows 2000/Windows XP/Server 2003 - Accessing the Printer Properties

Changing the default printer settings - Printer Properties

Limitation

- ☐ Changing the setting of the printer requires Manage Printers permission. Members of the Administrators and Power Users groups have Manage Printers permission by default. When you set up options, log on using an account that has Manage Printers permission.

1 Click **[Start]** on the taskbar, point to **[Settings]**, and then click **[Printers]**.

The **[Printers]** window appears.

Note

- ☐ With Windows XP Professional/Windows Server 2003, access the **[Printers and Faxes]** window from **[Start]** on the taskbar.
- ☐ With Windows XP Home Edition, open **[Control panel]** from **[Start]**, click **[Printers and Other Hardware]**, and then click **[Printers and Faxes]** on the screen that appears.

2 Click to select the icon of the printer whose default settings you want to change.

3 On the **[File]** menu, click **[Properties]**.

The Printer Properties appear.

On the **[File]** menu, click **[Properties]**.

The **[Printer Properties]** dialog box appears.

4 Make any settings you require and click **[Apply]**.

 Note

☐ Settings you make here are used as the default settings for all applications.

5 Click **[OK]**.



 If a message is displayed during printer driver installation

When there is a driver in the computer that is newer than the one currently being installed, a message dialog box appears.

If this happens, you cannot install using the Auto Run program. Use the driver displayed in the message, and reinstall using **[Add Printer]**.

① Click **[Start]**, point to **[Settings]**, and then click **[Printers]**.

② Double-click the **[Add Printer]** icon.

③ Follow the wizard to install the driver.

If the printer driver is stored on a CD-ROM, the source for installation is as follows: (If the installer starts up, click **[Cancel]** to quit it.)

- PostScript 3
DRIVERS\PS\WIN2K_XP (Language) \DISK1



Changing the default printer settings – Printing Preferences Properties

Limitation

- ☐ Changing the setting of the printer requires Manage Printers permission. Members of the Administrators and Power Users groups have Manage Printers permission by default. When you set up options, log on using an account that has Manage Printers permission.

1 Click **[Start]** on the taskbar, point to **[Settings]**, and then click **[Printers]**.

The **[Printers]** window appears.

2 Click to select the icon of the printer whose default settings you want to change.

3 On the **[File]** menu, click **[Printing Preferences...]**.

The **[Printing Preferences Properties]** appears.

4 Make any settings you require and click **[Apply]**.

Note

- ☐ Settings you make here are used as the default settings for all applications.

5 Click **[OK]**.

Making printer settings from an application

To make the printer settings for a specific application, open the **[Print]** dialog box from that application. The following example describes how to make settings for the WordPad application that comes with Windows 2000/Windows XP/Server 2003.

Note

- ☐ The actual procedures you should follow to open the **[Print]** dialog box may differ depending on the application. For more information, see the documentation that comes with the application you are using.
- ☐ Any settings you make in the following procedure are valid for the current application Only.

1 On the **[File]** menu, click **[Print...]**.

The **[Print]** dialog box appears.

2 Select the printer you want to use in the **[Select Printer]** box.

Click the tab that you want to change its print setting.

Note

- ☐ With Windows XP/Server 2003, click **[Preference]** to open the Printer Preference window.

3 Make any settings you require and click **[Apply]**.

4 Click **[OK]** to start printing.

Windows NT 4.0 - Accessing the Printer Properties

1

Changing the default printer settings - Printer Properties

🔔 Limitation

- ☐ Changing the setting of the printer requires Full Control access permission. Members of Administrators, Server Operators, Print Operators, and Power Users groups have Full Control permission by default. When you set up options, log on using an account that has Full Control permission.

1 Click **[Start]** on the taskbar, point to **[Settings]**, and then click **[Printers]**.

The **[Printers]** window appears .

2 Click to select the icon of the printer whose default settings you want to change.

3 On the **[File]** menu, click **[Properties]**.

The **[Printer Properties]** dialog box appears.

4 Make any settings you require and click **[OK]**.

📝 Note

- ☐ Setting you make here are used as the default settings for all applications.

💡 If a message is displayed during printer driver installation

When there is a driver in the computer that is newer than the one currently being installed, a message dialog box appears.

If this happens, you cannot install using the Auto Run program. Use the driver displayed in the message, and reinstall using **[Add Printer]**.

① Click **[Start]**, point to **[Settings]**, and then click **[Printers]**.

② Double-click the **[Add Printer]** icon.

③ Follow the wizard to install the driver.

If the printer driver is stored on a CD-ROM, the source for installation is as follows: (If the installer starts up, click **[Cancel]** to quit it.)

- PostScript 3
DRIVERS\PS\NT4\ (Language) \DISK1

Changing the default printer settings - Default Document Properties

Limitation

- ☐ Changing the setting of the printer requires Full Control access permission. Members of the Administrators, Server Operators, Print Operators, and Power Users groups have Full Control permission by default. When you set up options, log on using an account that has Full Control permission.

1 Click **[Start]** on the taskbar, point to **[Settings]**, and then click **[Printers]**.

The **[Printers]** window appears.

2 Click to select the icon of the printer you want to use.

3 On the **[File]** menu, click **[Document Defaults]**.

The Default Document Properties appear.

4 Make any settings you require and click **[OK]**.

Note

- ☐ Settings you make here are used as the default settings for all applications.

Making printer settings from an application

To make the printer settings for a specific application, open the **[Printer Properties]** dialog box from that application. The following example describes how to make settings for the WordPad application that comes with Windows NT 4.0.

Note

- ☐ The actual procedure you should follow to open the **[Printer Properties]** dialog box may differ depending on the application. For more information, see the documentation that comes with the application you are using.
- ☐ With some applications, printer driver settings are not used, and the application's own default settings are applied.
- ☐ Any settings you make in the following procedure are valid for the current application Only.

1 On the **[File]** menu, click **[Print]**.

The **[Print]** dialog box appears.

2 Select the printer you want to use in the **[Name]** list box, and then click **[Properties]**.

The **[Printer Properties]** dialog box appears.

3 Make any settings you require and click **[OK]**.

4 Click **[OK]** to start printing.

Macintosh - Setting Up for Printing

1

Making paper settings from an application

1 Open the file you want to print.

2 On the [File] menu, click [Page Setup].

The [AdobePS Page Setup] dialog box appears.

3 Confirm that the printer you want to use is shown in the [Format for:] box.

 Note

- ☐ If the printer is not shown in the [Format for:] box, use the pop-up menu to display a list of available printers.

 Reference

The actual appearance of the Page Setup depends on the application you are using. See the documentation that comes with the Macintosh for more information.

4 From the [Paper:] ^{*1} box, select the paper size.

^{*1} Under Mac OS X, this is called [Paper Size].

5 Make any settings you require and then click [OK].

Setting up for printing from an application

1 Open the file you want to print.

2 On the [File] menu, click [Print].

The Printer Settings appears.

3 Confirm that the printer is selected in the [Printer :] box.

4 Make any settings you require and click [Print] to start printing.

Canceling a Print Job

Windows 95/98/Me, Windows 2000, Windows XP/Server 2003, Windows NT 4.0 - Canceling a Print Job

1

- 1** Double-click the printer icon on the Windows taskbar.

A window appears, showing all the print jobs that are currently queuing to be printed. Check the current status of the job you want to cancel.

- 2** Select the name of the job you want to cancel.

- 3** On the [Document] menu, click [Cancel].

 Note

 
- ☐ You can also open the print job queue window by double-clicking the printer icon in the [Printer] window.

- 4** Press [Job Reset] on the control panel.

"Job Reset?" appears on the panel display.


- 5** Select between canceling the job currently printing and canceling all jobs (including the job currently printing) using [▲] or [▼].

- When canceling only the current job



A rectangular dialog box with a thin black border. Inside, the text "Job Reset?" is on the top line and "Current Job" is on the bottom line, both in a monospaced font.

 - When canceling all jobs including the current job




A rectangular dialog box with a thin black border. Inside, the text "Job Reset?" is on the top line and "All Jobs" is on the bottom line, both in a monospaced font.

 Note

- ☐ It is also possible to annul the cancellation. Resume printing is resumed by selecting "Resume Print", and then pressing [Enter].

6 Press **[Enter #]**.

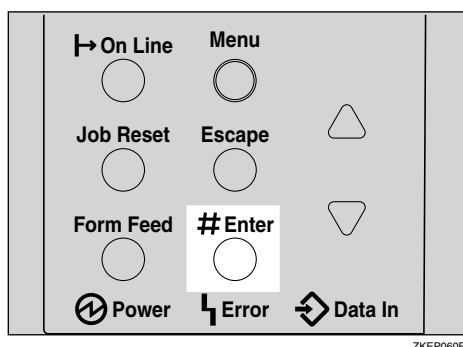

A confirmation message appears.

Note

- ☐ Printing resumes if you press **[Escape]** at this point.

7 Press **[Enter #]**.

The job is canceled. When the cancellation procedure is complete, the message appears.

Important

- ☐ When the printer is being shared by multiple computers, be careful not to accidentally cancel someone else's print job.

Note

- ☐ A print job that contains a large volume of data may take considerable time to stop.

Macintosh - Canceling a Print Job

1 Double-click the printer's icon on the desktop.

A window appears, showing all the print jobs that are currently queuing to be printed. Check the current status of the job you want to cancel.

Note

- ☐ Under Mac OS X, start Print Center.

2 Select the name of the job you want to cancel.

3 Click the pause icon, and then click the trash icon.

4 Press **[Job Reset]** on the control panel.

"Job Reset?" appears on the panel display.

- 5** Select between canceling the job currently printing and canceling all jobs (including the job currently printing) using **[▲]** or **[▼]**.

- When canceling only the current job

```
Job Reset?
Current Job
```


- When canceling all jobs including the current job

```
Job Reset?
All Jobs
```

 Note

- ☐ It is also possible to annul the cancellation. Resume printing is resumed by selecting "Resume Print", and then pressing **[Enter]**.

- 6** Press **[Enter #]**.

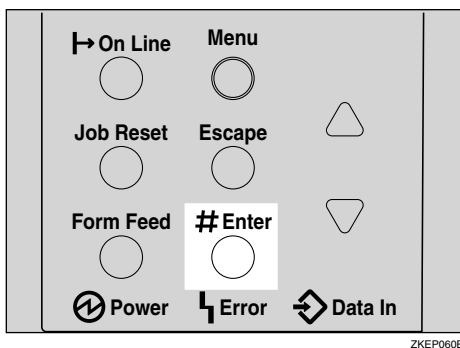

A confirmation message appears.

 Note

- ☐ Printing resumes if you press **[Escape]** at this point.

- 7** Press **[Enter #]**.

The job is canceled. When the cancellation procedure is complete, the message appears.

 Important

- ☐ When the printer is being shared by multiple computers, be careful not to accidentally cancel someone else's print job.

 Note

- ☐ A print job that contains a large volume of data may take considerable time to stop.

2. Uninstalling the Printer Driver and Software

Uninstalling the PCL 6/5e Printer Driver

This section describes how to uninstall the printer driver. The actual procedure may differ depending on the operating system.

Follow one of the appropriate procedures below.

Windows 95/98/Me - Uninstalling the PCL 6/5e Printer Driver

- 1** Close all applications that are currently running.
- 2** Click **[Start]** on the taskbar, point to **[Settings]**, and then click **[Printers]**.
The **[Printers]** window appears.
- 3** Click to select the icon of the printer you want to remove.
- 4** On the **[File]** menu, click **[Delete]**.
A confirmation dialog box appears.
- 5** Click **[Yes]** to uninstall the printer driver.

Windows 2000/Windows XP/Server 2003 - Uninstalling the PCL 6/5e Printer Driver

Limitation

- ☐ Uninstalling a printer driver requires Manage Printers permission. Members of the Administrators and Power Users groups have Manage Printers permission by default. When you uninstall a printer driver, log on using an account that has Manage Printers permission.

- 1** Close all applications that are currently running.
- 2** Click **[Start]** on the taskbar, point to **[Settings]**, and then click **[Printers]**.
The **[Printers]** window appears.

Note

- ☐ With Windows XP Professional/Windows Server 2003, access the **[Printers and Faxes]** window from **[Start]** on the taskbar.
- ☐ With Windows XP Home Edition, open **[Control panel]** from **[Start]**, click **[Printers and Other Hardware]**, and then click **[Printers and Faxes]** on the screen that appears.

3 Click to select the icon of the printer you want to remove.

4 On the [File] menu, click [Delete].

A confirmation dialog box appears.

5 Click [Yes] to uninstall the printer driver.

 Note

- ☐ Before upgrading the printer driver, restart your computer after uninstalling the old version of the printer driver.

Windows NT 4.0 - Uninstalling the PCL 6/5e Printer Driver

 Limitation

- ☐ Uninstalling a printer driver requires Full Control access permission. Members of the Administrators, Server Operators, Print Operators, and Power Users groups have Full Control Permission by default. When you install a printer driver, log on using an account that has Full Control permission.

1 Close all applications that are currently running.

2 Click [Start] on the taskbar, point to [Settings], and then click [Printers].

The [Printers] window appears.

3 Click to select the icon of the printer you want to remove.

4 On the [File] menu, click [Delete].

A confirmation dialog box appears.

5 Click [Yes] to uninstall the printer driver.

 Note

- ☐ Before upgrading the printer driver, restart your computer after uninstalling the old version of the printer driver.

Uninstalling the RPCS Printer Driver

This section describes how to uninstall the printer driver. The actual procedure may differ depending on the operating system.

Follow one of the appropriate procedures below.

Windows 95/98/Me - Uninstalling the RPCS Printer Driver

2

- 1** Close all applications that are currently running.
- 2** Click **[Start]** on the taskbar, point to **[Settings]**, and then click **[Printers]**.
The **[Printers]** window appears.
- 3** Click to select the icon of the printer you want to remove.
- 4** On the **[File]** menu, click **[Delete]**.
A confirmation dialog box appears.
- 5** Click **[Yes]** to uninstall the printer driver.

Windows 2000/Windows XP/Server 2003 - Uninstalling the RPCS Printer Driver

Limitation

- ☐ Uninstalling a printer driver requires Manage Printers permission. Members of the Administrators and Power Users groups have Manage Printers permission by default. When you uninstall a printer driver, log on using an account that has Manage Printers permission.

- 1** Close all applications that are currently running.
- 2** Click **[Start]** on the taskbar, point to **[Settings]**, and then click **[Printers]**.
The **[Printers]** window appears.

Note

- ☐ With Windows XP Professional/Windows Server 2003, access the **[Printers and Faxes]** window from **[Start]** on the taskbar.
 - ☐ With Windows XP Home Edition, open **[Control panel]** from **[Start]**, click **[Printers and Other Hardware]**, and then click **[Printers and Faxes]** on the screen that appears.
- 3** Click to select the icon of the printer you want to remove.
 - 4** On the **[File]** menu, click **[Delete]**.
A confirmation dialog box appears.

5 Click **[Yes]** to uninstall the printer driver.

 Note

- ☐ Before upgrading the printer driver, restart your computer after uninstalling the old version of the printer driver.

2

Windows NT 4.0 - Uninstalling the RPCS Printer Driver

 Limitation

- ☐ Uninstalling a printer driver requires Full Control access permission. Members of the Administrators, Server Operators, Print Operators, and Power Users groups have Full Control Permission by default. When you install a printer driver, log on using an account that has Full Control permission.

1 Close all applications that are currently running.

2 Click **[Start]** on the taskbar, point to **[Settings]**, and then click **[Printers]**.

The **[Printers]** window appears.

3 Click to select the icon of the printer you want to remove.

4 On the **[File]** menu, click **[Delete]**.

A confirmation dialog box appears.

5 Click **[Yes]** to uninstall the printer driver.

 Note

- ☐ Before upgrading the printer driver, restart your computer after uninstalling the old version of the printer driver.

Uninstalling the PostScript Printer Driver

This section describes how to uninstall the PostScript printer driver. The actual procedure may differ depending on the operating system. Follow one of the appropriate procedures below.

Windows 95/98/Me - Uninstalling the PostScript Printer Driver

2

- 1** Close all applications that are currently running.
- 2** Click **[Start]** on the taskbar, point to **[Settings]**, and then click **[Printers]**.
The **[Printers]** window appears.
- 3** Click to select the icon of the printer you want to remove.
- 4** On the **[File]** menu, click **[Delete]**.
A confirmation dialog box appears.
- 5** Click **[Yes]** to uninstall the printer driver.

Windows 2000/Windows XP/Server 2003 - Uninstalling the PostScript Printer Driver

Limitation

- ☐ Uninstalling a printer driver requires Manage Printers permission. Members of the Administrators and Power Users groups have Manage Printers permission by default. When you uninstall a printer driver, log on using an account that has Manage Printers permission.

- 1** Close all applications that are currently running.
- 2** Click **[Start]** on the taskbar, point to **[Settings]**, and then click **[Printers]**.
The **[Printers]** window appears.

Note

- ☐ With Windows XP Professional/Windows Server 2003, access the **[Printers and Faxes]** window from **[Start]** on the taskbar.
 - ☐ With Windows XP Home Edition, open **[Control panel]** from **[Start]**, click **[Printers and Other Hardware]**, and then click **[Printers and Faxes]** on the screen that appears.
- 3** Click to select the icon of the printer you want to remove.
 - 4** On the **[File]** menu, click **[Delete]**.
A confirmation dialog box appears.

5 Click **[Yes]** to uninstall the printer driver.

 Note

- ☐ Before upgrading the printer driver, restart your computer after uninstalling the old version of the printer driver.

2

Windows NT 4.0 - Uninstalling the PostScript Printer Driver

 Limitation

- ☐ Uninstalling a printer driver requires Full Control access permission. Members of the Administrators, Server Operators, Print Operators, and Power Users groups have Full Control Permission by default. When you uninstall a printer driver, log on using an account that has Full Control permission.

1 Close all applications that are currently running.

2 Click **[Start]** on the taskbar, point to **[Settings]**, and then click **[Printers]**.

The **[Printers]** window appears.

3 Click to select the icon of the printer you want to remove.

4 On the **[File]** menu, click **[Delete]**.

A confirmation dialog box appears.

5 Click **[Yes]** to uninstall the printer driver.

 Note

- ☐ Before upgrading the printer driver, restart your computer after uninstalling the old version of the printer driver.

Macintosh - Uninstalling the PostScript Printer Driver

1 Drag the “AdobePS” file from the **[Extensions]** folder in **[System Folder]** to **[Trash]**.

2 Drag the PPD file and plug-in file from the **[Printer Descriptions]** folder in the **[Extensions]** folder in **[System Folder]** to **[Trash]**.

3. Paper and Other Media

Paper and Other Media Supported by This Printer

Paper Types and Sizes

This section describes the type, size, feed direction, and maximum amount of paper that can be loaded into each paper tray in this printer.

Important

- ❑ If you use damp or curled paper, a misfeed might occur. In this case, try turning over the paper stack in the paper tray. If there is no improvement, change to paper with non curl.

Note

- ❑ The following symbols and terminology are used to represent the feed direction.

In this manual	On the panel display	Paper feed direction
 ↑ (Feed direction)	A4 (210 × 297) Letter (8 ¹ / ₂ × 11)	Short-edge feed direction
 ↑ (Feed direction)	A5 (210 × 148) (8 ¹ / ₂ × 5 ¹ / ₂)	Long-edge feed direction

- ❑ It is recommended that you load paper of the size and direction you frequently use in the tray selected with “Tray Priority”. For more information about Tray Priority, see p.124 “Paper Input Menu”.
- ❑ When loading paper of the same size in more than one tray, it is recommended that you load paper in the same direction in each tray.

Reference

For more information about loading each type of paper, see p.47 “Loading Paper and Other Media”.

Important

- ❑ Be sure to set the paper size dial to match the actual paper size loaded in the tray. When the actual paper size is not shown on the dial, set the dial to “✖” and select the paper size using the control panel.
- ❑ For Tray 1, 2 and 3, the dial setting overrides the setting made with the control panel.
- ❑ The optional Envelope Feeder Unit requires installation of the optional Paper Feed Unit. Up to two Paper Feed Units can be installed at the same time. The Envelope Feeder Unit can be used in Tray 2 or Tray 3.

Note

- ❑ The printable paper size depends on the memory size of the printer and print data, see p.187 “Memory Capacity and Paper Size”.
- ❑ For more information about the meanings of the abbreviations, see the notes at the bottom of each table.

◆ Input Paper Sizes (Metric version)

	Feed direction	Size (mm)	Bypass Tray	Paper Tray (Tray1)	Paper Feed Unit (Tray 2/3)	Envelope Feeder Unit
A4		210 × 297	○	☆	☆	X
B5 JIS		182 × 257	○	☆	☆	X
A5		148 × 210	○	☆	☆	X
		210 × 148	○	★	X	X
A6		105 × 148	○	X	X	X
Legal (LG, 8 ¹ / ₂ × 14)		216 × 356	○	☆	☆	X
Letter (LT, 8 ¹ / ₂ × 11)		216 × 279	○	☆	☆	X
5 ¹ / ₂ × 8 ¹ / ₂		140 × 216	○	☆	☆	X
		216 × 140	○	★	X	X
Executive (Exec., 7 ¹ / ₄ × 10 ¹ / ₂)		184 × 276	○	X	★	X
Folio (8 ¹ / ₄ × 13)		210 × 330	○	★	★	X
Foolscap (F4, 8 ¹ / ₂ × 13)		216 × 330	○	★	★	X
F/GL (8 × 13)		203 × 330	○	★	★	X
Com#10 Env (4 ¹ / ₈ × 9 ¹ / ₂)		104.8 × 241.3	○	X	X	○
C5 Env (6.38 × 9.02)		162 × 229	○	X	X	○
C6 Env (4.49 × 6.38)		114 × 162	○	X	X	○
DL Env (4.33 × 8.66)		110 × 220	○	X	X	○
Monarch Env (3 ⁷ / ₈ × 7 ¹ / ₂)		98.4 × 190.5	○	X	X	○
Custom Size	—	—	○*	★**	★**	X
16K (7.68 × 10 ¹ / ₂)		195 × 267	○	★	★	X

- ○

Means that the size is supported but the paper size should be set with the control panel. There is no dial on the tray.

See p.50 “Loading Paper in the Bypass Tray”

See p.57 “Loading envelopes into the Envelope Feeder Unit”

- ☆
Means that the size is supported and indicated on the tray dial. Be sure to set the paper size dial to match the actual paper size loaded in the tray.
- ★
Means that the size is supported but not indicated on the tray dial. You should set the tray dial to “✱”, and select the paper size with the control panel.
- ○*
Means that the supported size is approximately 90.0 - 216.0 mm in width, and approximately 139.7 - 432.0 mm in length. The supported size may differ depending on the printer language you use. Use the printer driver to set custom sizes. Set custom sizes with the control panel.
- ★**
Means that the supported size is approximately 139.7 - 216.0 mm in width, and approximately 139.7 - 356 mm in length. The supported size may differ depending on the printer language you use. Use the printer driver to set custom sizes. Set custom sizes with the control panel.
- X
Means that the size is not supported.

◆ Input Paper Sizes (Inch version)

	Feed direction	Size (inch)	Bypass Tray	Paper Tray (Tray1)	Paper Feed Unit (Tray 2/3)	Envelope Feeder Unit
Legal (LG)		8 ¹ / ₂ × 14	○	☆	☆	X
Letter (LT)		8 ¹ / ₂ × 11	○	☆	☆	X
5 ¹ / ₂ × 8 ¹ / ₂		5 ¹ / ₂ × 8 ¹ / ₂	○	☆	☆	X
		8 ¹ / ₂ × 5 ¹ / ₂	○	★	X	X
Executive (Exec.)		7 ¹ / ₄ × 10 ¹ / ₂	○	X	★	X
A4		8.26 × 5.83	○	☆	☆	X
B5 JIS		7.17 × 10.12	○	☆	☆	X
A5		5.83 × 8.26	○	☆	☆	X
		8.26 × 5.83	○	★	X	X
A6		4.13 × 5.63	○	X	X	X
Folio		8 ¹ / ₄ × 13	○	★	★	X
Foolscap F4		8 ¹ / ₂ × 13	○	★	★	X
F/GL		8 × 13	○	★	★	X
Com#10 Env		4 ¹ / ₈ × 9 ¹ / ₂	○	X	X	○
C5 Env		6.38 × 9.02	○	X	X	○
C6 Env		4.49 × 6.38	○	X	X	○
DL Env		4.33 × 8.66	○	X	X	○
Monarch Env		3 ⁷ / ₈ × 7 ¹ / ₂	○	X	X	○
Custom Size	—	—	○*	★**	★**	X
16K		7.68 × 10 ¹ / ₂	○	★	★	X

-

Means that the size is supported but the paper size should be set with the control panel. There is no dial on the tray.

See p.50 “Loading Paper in the Bypass Tray”

See p.57 “Loading envelopes into the Envelope Feeder Unit”

- ☆

Means that the size is supported and indicated on the tray dial. Be sure to set the paper size dial to match the actual paper size loaded in the tray.

- ★

Means that the size is supported but not indicated on the tray dial. You should set the tray dial to “✱”, and select the paper size with the control panel.

- ○*
Means that the supported size is approximately 3.55 - 8.50 inches in width, and approximately 5.50 - 17.00 inches in length. The supported size may differ depending on the printer language you use. Use the printer driver to set custom sizes. Set custom sizes with the control panel.
- ★**
Means that the supported size is approximately 5.51 - 8.50 inches in width, and approximately 5.51 - 14.02 inches in length. The supported size may differ depending on the printer language you use. Use the printer driver to set custom sizes. Set custom sizes with the control panel.
- X
means that the size is not supported.

❖ Paper weight and number of sheets to be set

	Supported paper weight	Maximum number of sheets (Plain Paper) * ¹
Paper Tray	60 - 105 g/m ² (16 - 28 lb. bond)	500 (80 g/m ² , 20 lb. bond)
Paper Feed Unit Type 400 (option)	60 - 105 g/m ² (16 - 28 lb. bond)	500 (80 g/m ² , 20 lb. bond)
Bypass Tray	52 - 162 g/m ² (14 - 43 lb. bond)	100 (80 g/m ² , 20 lb. bond) For other kind of papers, see p.42 "Types of Paper and Other Media".
Envelope Feeder Type 400 * ²	p.42 "Types of Paper and Other Media".	

*¹ Confirm that the top of the stack is not higher than the limit mark indicated on the side fence of the tray.

*² The Envelope Feeder Unit requires the installation of the optional Paper Feed Unit.

❖ Output Paper Sizes (Metric version)

	Feed direction	Size (mm)	Output Tray (Standard Tray)	Duplex Unit
A4		210 × 297	○	○
B5 JIS		182 × 257	○	○
A5		148 × 210	○	○
		210 × 148	○	○
A6		105 × 148	○	X
Legal (LG, 8 ¹ / ₂ × 14)		216 × 356	○	○
Letter (LT, 8 ¹ / ₂ × 11)		216 × 279	○	○
5 ¹ / ₂ × 8 ¹ / ₂		140 × 216	○	○
		216 × 140	○	○
Executive (Exec., 7 ¹ / ₄ × 10 ¹ / ₂)		184 × 276	○	X
Folio (8 ¹ / ₄ × 13)		210 × 330	○	○
Foolscap (F4, 8 ¹ / ₂ × 13)		216 × 330	○	○
F/GL (8 × 13)		203 × 330	○	○
Com#10 Env (4 ¹ / ₈ × 9 ¹ / ₂)		104.8 × 241.3	○	X
C5 Env (6.38 × 9.02)		162 × 229	○	X
C6 Env (4.49 × 6.38)		114 × 162	○	X
DL Env (4.33 × 8.66)		110 × 220	○	X
Monarch Env (3 ⁷ / ₈ × 7 ¹ / ₂)		98.4 × 190.5	○	X
Custom Size	—	—	○	X
16K (7.68 × 10 ¹ / ₂)		195 × 267	○	○

- Means that the size is supported.
- X
Means that the size is not supported.

◆ Output Paper Sizes (Inch version)

	Feed direction	Size (inch)	Output Tray (Standard Tray)	Duplex Unit
Legal (LG)		$8\frac{1}{2} \times 14$	○	○
Letter (LT)		$8\frac{1}{2} \times 11$	○	○
$5\frac{1}{2} \times 8\frac{1}{2}$		$5\frac{1}{2} \times 8\frac{1}{2}$	○	○
		$8\frac{1}{2} \times 5\frac{1}{2}$	○	○
Executive (Exec.)		$7\frac{1}{4} \times 10\frac{1}{2}$	○	X
A4		8.26×5.83	○	○
B5 JIS		7.17×10.12	○	○
A5		5.83×8.26	○	○
		8.26×5.83	○	○
A6		4.13×5.63	○	X
Folio		$8\frac{1}{4} \times 13$	○	○
Foolscap F4		$8\frac{1}{2} \times 13$	○	○
F/GL		8×13	○	○
Com#10 Env		$4\frac{1}{8} \times 9\frac{1}{2}$	○	X
C6 Env		4.49×6.38	○	X
C5 Env		6.38×9.02	○	X
DL Env		4.33×8.66	○	X
Monarch Env		$3\frac{7}{8} \times 7\frac{1}{2}$	○	X
Custom Size	—	—	○	X
16K		$7.68 \times 10\frac{1}{2}$	○	○

-

Means that the size is supported and that the paper size should be set with the control panel. There is no dial on the tray.

- X

Means that the size is not supported.

Paper Recommendations

Note the following suggestions when handling or selecting paper used with this printer.

Loading Paper

- Confirm the paper types of the printer. For more information, see p.42 “Types of Paper and Other Media”. Print quality cannot be guaranteed if other paper types are used.
 - Do not use paper that is already printed on.
 - If you load paper into the paper tray, be sure not to stack over the limit mark.
 - If you load paper onto the Bypass Tray, be sure that paper fits under the side guide.
 - If you load paper into the paper tray, confirm that the print side is facing *down*.
 - If you load paper onto the Bypass Tray, confirm that the print side is facing *up*.
 - It is necessary to set the paper size on the control panel when the set paper size is not shown on the paper size dial.
-

Storing Paper

Paper should always be stored properly. Improperly stored paper might result in poor print quality, paper misfeeds or printer damage.

Recommendations are as follows:

- Avoid storing paper in humid areas.
 - Avoid exposing paper to direct sunlight.
 - Store on a flat surface.
 - Keep open reams of paper in the package in which the paper came.
-

Types of Paper and Other Media

❖ Plain Paper

- If you print on paper heavier than 105 g/m² (28 lb. bond), use the Bypass Tray. The Bypass Tray can hold paper up to 162 g/m² (43 lb. bond) in weight.
- If you load paper heavier than 155 g/m² (41 lb. bond) onto the Bypass Tray, set the printer to Thick Paper mode using the control panel.
- If paper is curled or bent, correct it before loading.

❖ OHP transparencies

- Load Only one OHP Transparency at the same time onto the Bypass Tray.
- When loading an OHP Transparency onto the Bypass Tray, set the printer to Transparency mode with the control panel.
- Be careful not to touch the print side of the OHP transparencies, otherwise the print side gets dirty or damaged, and results in poor print quality.
- When printing on an OHP Transparency that has a print side, load it facing down onto the Bypass Tray.

❖ Adhesive Labels

- Load Only one adhesive label at the same time onto the Bypass Tray.
- Use adhesive Labels in which the whole side can be printed on.
- Do not use adhesive Labels having exposed glue.
- If the print side is coated, print quality might be reduced, as the toner might not fuse well.

❖ Envelopes

- When printing on envelopes, use the Bypass Tray or the Envelope Feeder Unit.
- Even if the optional Envelope Feeder is not installed, you can select envelope sizes for Tray 2 and Tray 3 using the control panel. However, you cannot load envelopes until the optional Envelope Feeder Unit is installed. To use the Envelope Feeder Unit, installation of the optional Paper Feed Unit is required. See “Envelope Feeder Type 400” in the Setup Guide.
- Specifications of envelopes are as follows:

	Metric version	Inch version
Weight	72 – 90 g/m ²	19 – 24 lb. bond
Recommended weight and size	72 g/m ² , 114 × 162 mm (C6 Env)	24 lb. bond, 3 ⁷ / ₈ × 7 ¹ / ₂ inches (Monarch)

- You can load up to 10 envelopes (72 – 90 g/m², 19 – 24 lb. bond) onto the Bypass Tray at the same time, without forcibly pressing them. Confirm that the envelopes are not damp, and that the top of the stack is not higher than the limit mark on the side guide. See p.55 “Loading envelopes onto the Bypass Tray”.
- You can load up to 60 envelopes (72 – 90 g/m², 19 – 24 lb. bond) into optional Envelope Feeder Unit at the same time, without forcibly pressing them. Confirm that the envelopes are not damp, and that the top of the stack is not higher than the limit mark on the side guide. See p.57 “Loading envelopes into the Envelope Feeder Unit”.
- Confirm that the print side is facing up when loading onto the Bypass Tray, and facing down when loading into the optional Envelope Feeder Unit.

- Load the envelopes with the flaps aligned to the left side fence. The flaps should be securely folded up.
- Confirm that there is no air in the envelopes before loading.
- To get better print quality, it is recommended that you set the right, left, top, and bottom print margin, to at least 15 mm (0.6 inches) each.
- Do not print on both sides of envelopes.
- Load Only one size and type of envelopes at the same time.
- Before loading envelopes, flatten the leading edges (the side being fed into the printer) of them by running a pencil or ruler across them.
- Before loading envelopes, confirm that they are rectangular in shape.
- Do not use the non-supported envelopes listed on p.39 "Paper weight and number of sheets to be set".

Paper not supported by this printer

Avoid using the following types of paper that are not supported by this printer:

- Paper whose weight is heavier or lighter than the limitation. See p.35 "Paper Types and Sizes".
- Bent, folded or creased paper
- Curled or twisted paper
- Torn paper
- Wrinkled paper
- Damp paper
- Paper stuck together
- Paper that is dry enough to emit static electricity
- Paper that has already been printed on, with the exception of Preprinted Letterhead

 Note


- ☐ Ink on paper from an earlier print job, another copier, an inkjet printer or other device could damage the fusing unit of this printer due to a difference in fusing temperatures.

- Coated paper
- Special Paper like thermal paper, aluminum foil, carbon paper and conductive paper
- Heavily textured paper
- Glued paper
- Label paper on which glue or base paper is exposed
- Paper with clips or stapled
- Paper with tape or ribbons attached

- Envelopes in the following conditions:
 - damp
 - excessively curled or twisted
 - stuck together
 - damaged in any way
 - with stamps attached
 - with windows, holes, perforations, cutouts or embossing
 - with metal clasps, string ties or metal folding bars
 - designed to be interlocked
 - with nicked edges or bent corners
 - with rough, wrinkled or laid finishes
 - with any exposed adhesive, when the flap is in the sealed or closed position

Printable Area

The following shows the printable area for this printer. Be sure to set the print margins correctly by the application.

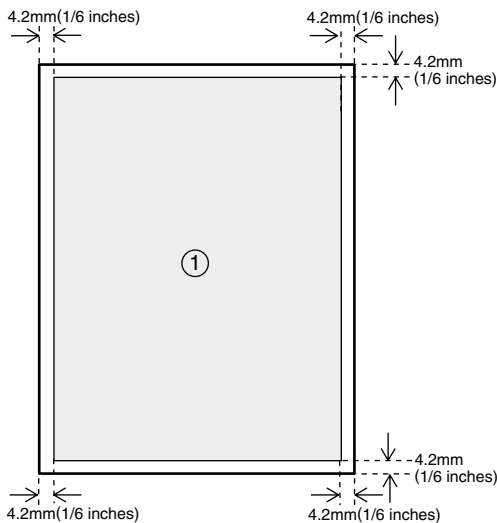

① : printable area

Important

- ❑ The maximum printable length is 432 mm (17 inches) in the paper feed direction.

 Note

- ☐ Although the entire surface of the paper can be printed on, depending on the printer driver and settings, print quality is reduced if all margins are set to 5 mm.
- ☐ When loading oversized paper into the Bypass Tray, support it by hand so it feeds in properly. Also, since the paper feeding and the paper printed may differ, depending on thickness and width, check print results in advance.

Loading Paper and Other Media

Loading Paper in the Paper Tray


Load paper in the optional Paper Feed Unit by following the procedures below.

Reference

Up to 500 sheets of paper can be loaded in the paper tray. Up to 500 sheets of paper can be loaded in the Paper Feed Unit. This means a maximum of 1,600 sheets can be simultaneously loaded when two additional Paper Feed Units are installed. For more information about type, size and feed direction of paper that can be loaded in the tray, see p.35 "Paper Types and Sizes".


When you change the paper size see p.48 "Changing the paper size".

- 1** Pull out the paper tray until it stops.

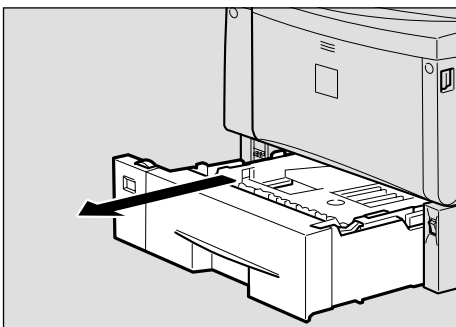


ZKDX270J

- 2** While lifting the front side of the tray, pull it out of the printer.

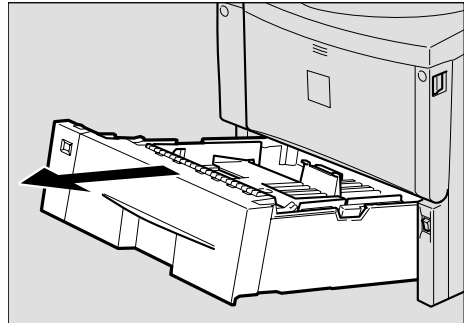

ZKEY140E

- 3** Load paper into the tray with the print side down.

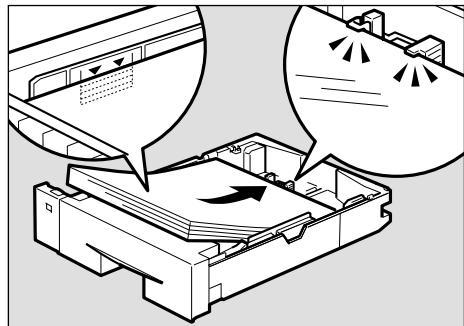


ZKEY130E

Important

- ☐ Confirm that the top of the stack is not higher than the limit mark inside the tray.
- ☐ Confirm that paper fits under the rear guide.

- 4** Lift the front of the tray, and slide it carefully into the printer until it stops.

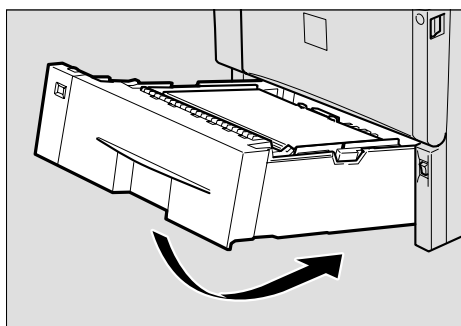

ZKDY150J

Important

- ❑ Do not slide the paper tray in with force. If you do, the front and side guides might move.

Changing the paper size

Important

- ❑ Confirm that the setting of the paper size dial matches the paper size and feed direction of the paper in the tray, otherwise the printer might be damaged, or printing problems might occur.

The following explanation uses the example of "Tray 1" for the paper tray.

- 1** Pull out the paper tray until it stops. Adjust the paper size dial to match the size and feed direction of paper in the paper tray.




ZKEX280E

Important

- ❑ If you want to use the paper size and feed direction that are not indicated on the paper size dial, set the dial to "✱". In this case, you should set the paper size using the control panel. See p.124 "Paper Input Menu".

- 2** While lifting the front side of the tray, pull it out of the printer.

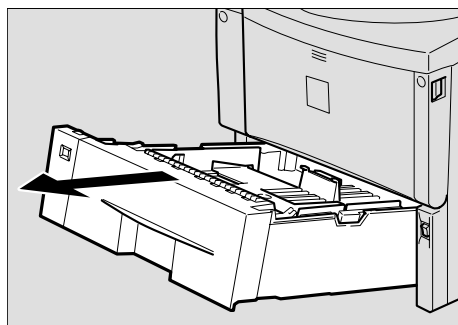


ZKEY140E

- 3** If you load paper larger than A4 or 8 1/2 x 11, you should extend the tray as follows:

Note


- ❑ You cannot load paper smaller than A4 or 8 1/2 x 11, if the tray is extended. In this case, return the tray to its standard length.

- 1** Slide the catches inwards to unlock the tray.

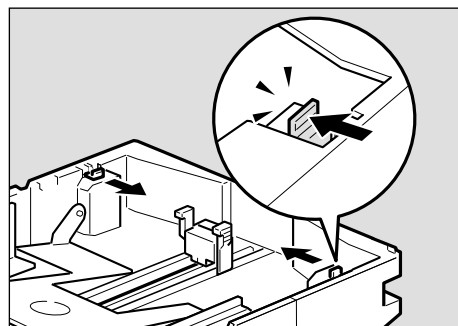


ZKEY160E

- 2** Slide the tray until it stops.

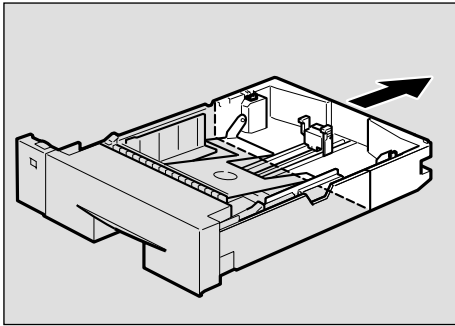

ZKEY170E

- 3** Return the catches to their original positions.

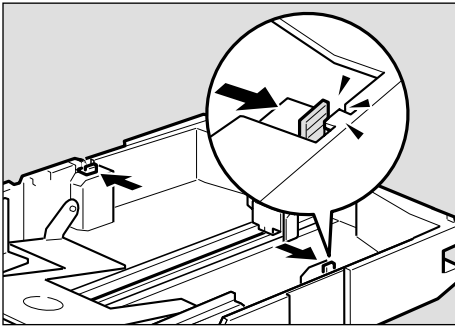


ZKEY180E

Important

- ☐ Confirm that the catches return to their original positions securely. If they are not locked securely, paper mis-feeds might occur.

- 4** Adjust the rear and side guides to the paper size you want to load.

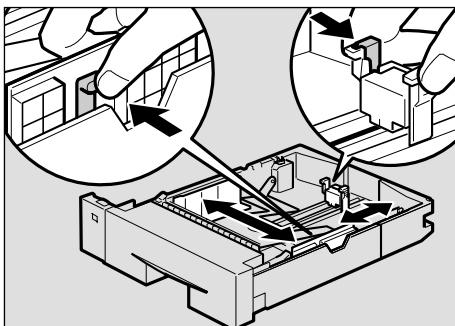


ZKEY610E

Important

- ☐ To avoid damage, pinch the paper guides when moving them.

- 5** Load paper into the tray with the print side down.

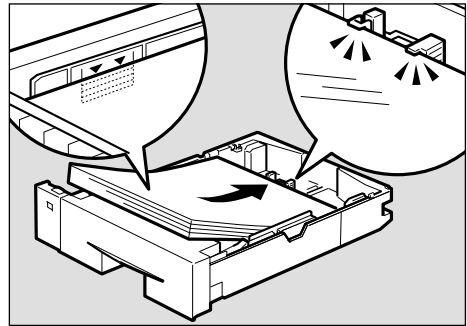


ZKEY130E

Important


- ☐ Confirm that the top of the stack is not higher than the limit mark inside the tray.
- ☐ Confirm that paper fits under the rear guide.

- 6** If you extend the tray in Step 3, pull the bottom of the paper tray cover (①) up slowly, and then remove the paper tray cover (②), in the order shown in the illustration.

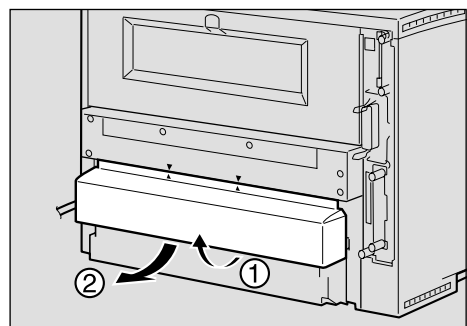

ZKDX780J

- 7** While lifting the front side of the tray, place into the printer. Then carefully slide it into the printer until it stops.

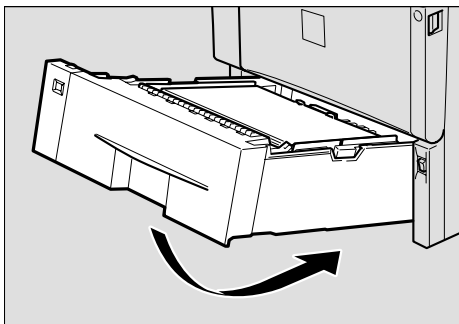

ZKDY150J

Important


- ☐ Do not slide the paper tray in with force. If you do, the front and side guides might move.

Loading Paper in the Bypass Tray

Opening and Closing the Bypass Tray


Open the Bypass Tray

- 1** Press the mark in the center of the Bypass Tray.

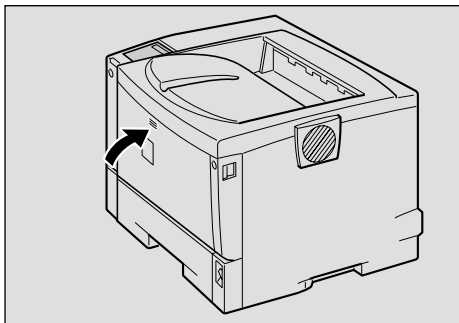

ZKEX790E

Open the Bypass Tray.

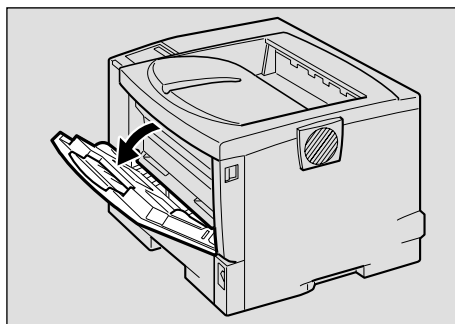


ZKEY190E

Close the Bypass Tray

When you have finished using the Bypass Tray, close it as shown in the next step.

- 1** Close by pressing the mark in the center of the Bypass Tray.

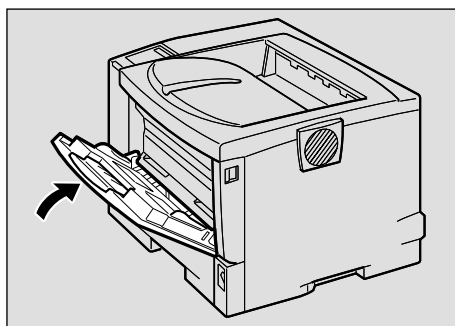

ZKEX800E

Loading paper in the Bypass Tray


Reference

With the Bypass Tray, you can load up to 100 pages at the same time. For more information about the type, size and feed direction of paper that can be loaded in the tray, see p.35 “Paper Types and Sizes”.

Note

- ☐ If you set custom size paper, you should set the paper size using the printer driver. Also, use the control panel to set the custom size setting.


- 1** Slide the side guides outward, and load paper until it stops with the print side up.

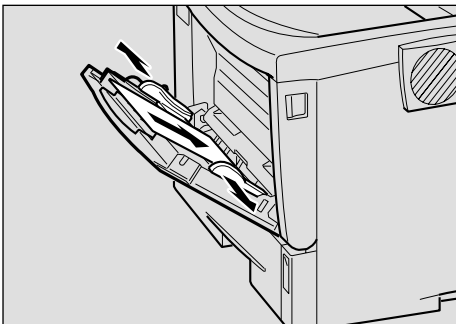

ZKEY200E


Note

- ☐ If you load A4 or larger, or 8 1/2 x 11 or larger, slide out the Bypass Tray extension (1) and then flip it open (2).

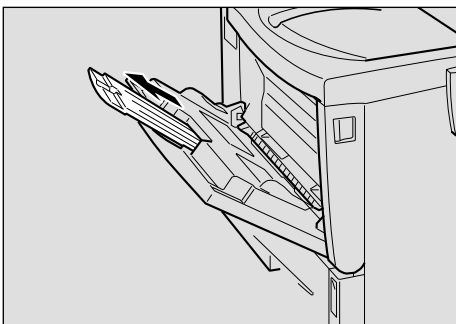

ZKEY210E

- 2** Adjust the side guides to the paper width.

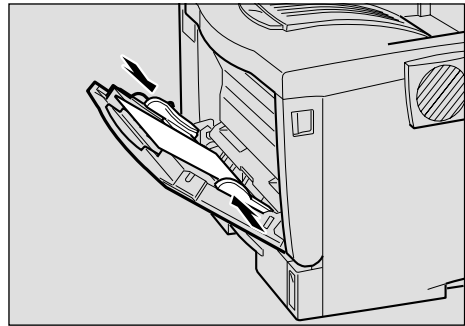

ZKEY220E

Important


- ☐ Confirm that paper fits under the side guides.
- ☐ Sheets of A4 or 8 1/2 x 11 length or longer must be loaded one at a time. Support the paper by hand so it feeds in properly. Additionally, since paper feeding and image quality may differ depending on paper thickness and width, check print results in advance using paper you intend to print on.

Note

- ☐ 45 kg paper or paper of A4 or 8 1/2 x 11 or longer may not feed in properly unless it is cut at right angles.


- 3** Set the paper size and feed direction using the control panel as follows:

- 1** Press **[Menu]**.

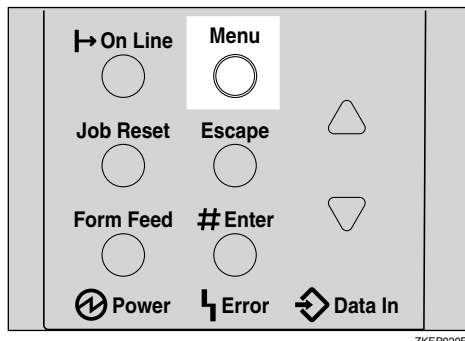


"Menu" appears on the panel display.

 
- 2** Press **[▼]** or **[▲]** to "Paper Input" menu.




- 3** Press **[Enter #]**.

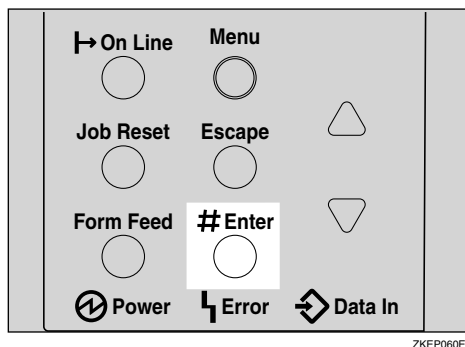

 
The following message appears on the panel display.




- 4** Press **[Enter #]**.

 

 - 5** Press **[▼]** or **[▲]** to select the paper size you want to use.




 - 6** Press **[Enter #]** to apply the setting. Wait for a while.



The screen returns to step **3** in a few seconds.

- 7** After the panel display changes, press **[On Line]**.

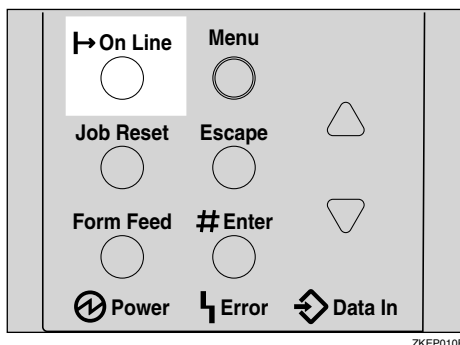

"Ready" appears on the panel display.



- 4** Start printing with the computer.

Loading custom sized paper in the Bypass Tray


Important

- ❑ The settings of custom sized paper that take effect are not the settings made on the control panel but the settings made in the printer driver. There is no need to change the settings on the control panel. However, when using a printer driver other than RPCS, you will need to change the settings on the control panel.
- ❑ Applications that do not allow a custom paper size to be set cannot print on custom sized paper.

Note

- ❑ Prints may blur if you use paper of A4  or 8 1/2 x 11  length or longer.

1 Press [Menu].

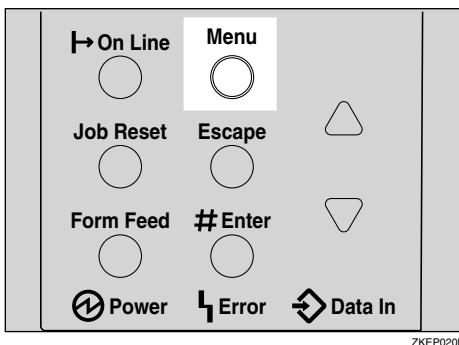

"Menu" appears on the panel display.

2 Press [▼] or [▲] to display "Paper Input" menu.

```
Menu:
Paper Input
```

3 Press [Enter #].

```
Paper Input:
Bypass Size
```

The following message appears on the panel display.

4 Press [▼] or [▲] to display "Custom Size".

```
Bypass Size:
Custom Size
```

5 Press [Enter #].

The following message appears on the panel display.

6 Press [▼] or [▲] to display the length in the feed direction, and then press [Enter #].

Note

- ❑ Pressing [▼] or [▲] scrolls the value in increments of 1 mm. Pressing [▼] or [▲] scrolls the value in increments of 10 mm.

```
Bypass Size:
Horiz.216.0 mm
```

The screen to enter the size along the length appears.

7 Press [▼] or [▲] to display the size along the length of the feed direction, and then press [Enter #].

Note

- ❑ Pressing [▼] or [▲] scrolls the value in increments of 1 mm. Pressing [▼] or [▲] scrolls the value in increments of 10 mm.

```
Custom Size:
Vert. 432.0 mm
```

The screen returns to step 4 in a few seconds.

8 Press **[On Line]**.

"Ready" appears on the panel display.


Setting the Bypass Tray Paper Type**3**

To make sure printing is done correctly, you must specify one of the following for the type of sheets loaded in the tray:


- Plain Paper, Recycled Paper, Special Paper, Color Paper, Letterhead, Preprinted, Transparencies, Thick Paper

Important


- When you load Thick Paper or transparencies in the Bypass Tray, always specify the type of paper. Duplex printing is not possible on paper in a tray for which Thick Paper or Transparency has been set.

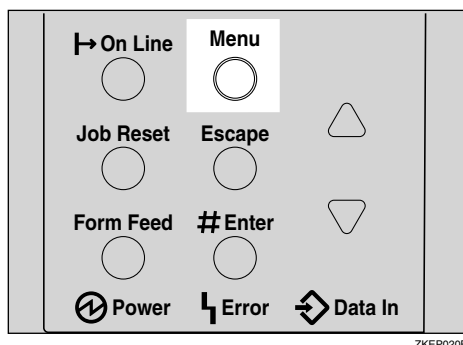1 Press **[Menu]**.

 "Menu" appears on the panel display.

2 Press **[▼]** or **[▲]** to display "Paper Input" menu.**3** Press **[Enter #]**.

 
The following message appears on the panel display.

4 Press **[▼]** or **[▲]** to display "Paper Type".**5** Press **[Enter #]**.


The following message appears on the panel display.

6 Press **[▼]** or **[▲]** to display "Bypass Tray", and then press **[Enter #]**.

 The screen to select the paper type appears.

7 Press **[▼]** or **[▲]** to display the type of paper you have loaded, and then press **[Enter #]**.

 The screen returns to step **6** in a few seconds.

8 Press **[On Line]**.

"Ready" appears on the panel display.

Loading Envelopes

As there are many kinds of envelopes, be sure to check if those to be used are supported by this printer.

Reference

For more information about envelopes, see p.42 “Types of Paper and Other Media”.

Important

- ☐ Even if the optional Envelope Feeder is not installed, you can select envelope sizes for Tray 2 and Tray 3 using the control panel. However, you cannot load envelopes until the optional Envelope Feeder Unit is installed.
- ☐ To install the Envelope Feeder Unit, the optional Paper Feed Unit must be installed. See “Envelope Feeder Type 400” in the Setup Guide.


Loading envelopes onto the Bypass Tray

Reference

With the Bypass Tray, you can load up to 10 envelopes at the same time. For more information about envelopes, see p.42 “Types of Paper and Other Media”.

To open and close the Bypass Tray, see p.50 “Opening and Closing the Bypass Tray”

- 1** Load envelopes until they stop, with the print side up and the sides of the flaps on the left as shown below.

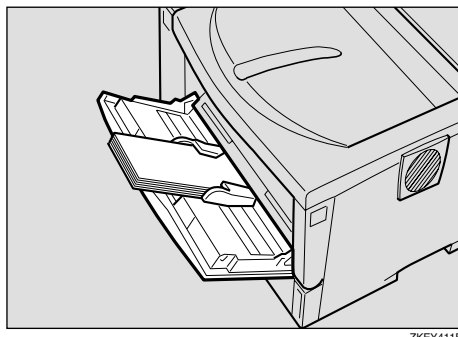

Important

- ☐ Confirm that the envelope flaps are securely folded down, and that there is no air inside the envelopes.

Note

- ☐ Confirm that the top of the stack is not higher than the limit mark on the side guides.
- ☐ Do not push the stack of envelopes with too much force.


- 2** Slide the side guides against the edge of the envelope stack.

Note

- ☐ Confirm that the edges of envelopes fit under the side guides.


- 3** Set the envelope size and feed direction using the control panel as follows:

- 1** Press **[Menu]**.

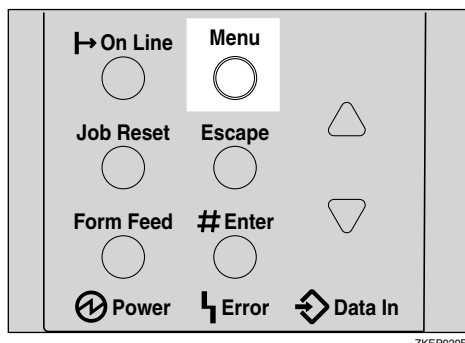


"Menu" appears on the panel display.

 
- 2** Press **[▲]** or **[▼]** to display "Paper Input" menu.



- 3** Press **[Enter #]**.

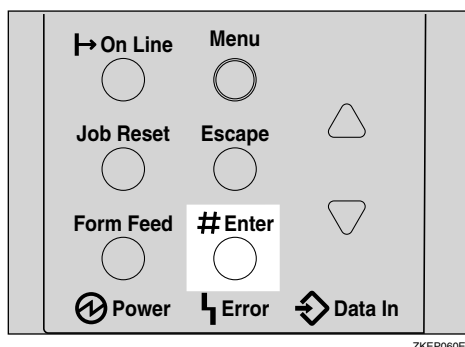

The following message appears.

 


- 4** Press **[Enter #]**.
- 5** Press **[▲]** or **[▼]** to select the envelope type you want to use.

Reference

For information about types of envelopes you can select, see p.35 "Paper and Other Media Supported by This Printer".

- 6** Press **[Enter #]** to apply the settings. Wait for a while.
- 7** After the panel display changes, press **[On Line]**.

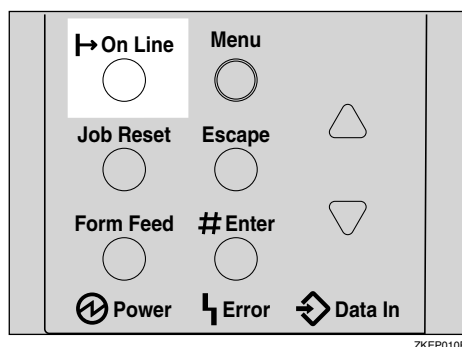

"Ready" appears on the panel display.



- 4** Start printing with the computer.


Loading envelopes into the Envelope Feeder Unit

Important

- ❑ With the optional Envelope Feeder Unit, you can load up to 60 envelopes at the same time. For more information about envelopes, see p.42 "Types of Paper and Other Media".

The following explanation uses the example of installing the Envelope Feeder Unit in "Tray 2".

- 1** Slide the optional Paper Feed Unit (Tray 2) out until it stops. Next, lift it slightly, then slide it out.

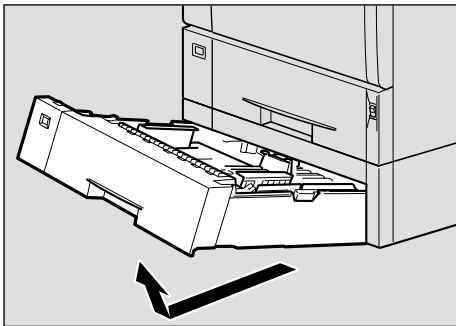


ZKEP330E

Note

- ❑ Keep the paper tray with paper in a cool and dry place.


- 2** Prepare the Envelope Feeder Unit.

- 3** While pinching the side guides, slide them outward until they stop. While pinching the rear guide, slide it toward the back.

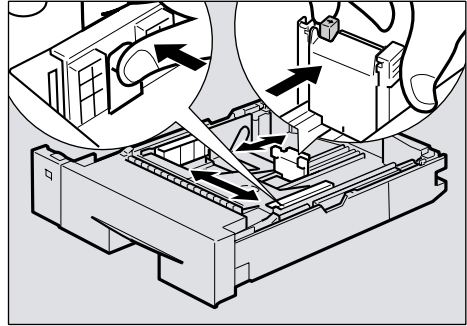


ZGDY260E

- 4** Push the bottom plate down until it locks into place.

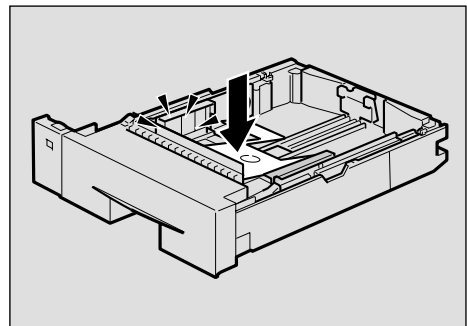

ZDDP360E

- 5** Load envelopes into the Envelope Feeder Unit, with the print side down and the flap on the left as shown in the illustration.

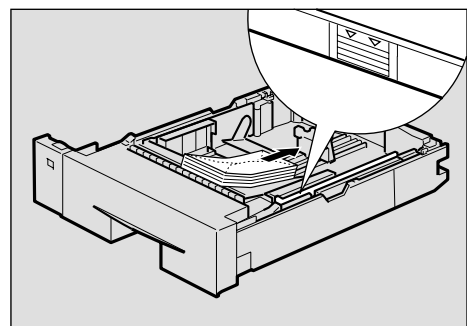

ZDDP380E

3


Important

- ❑ Confirm that the envelope flaps are securely folded down, and that there is no air inside the envelopes.

Note


- ❑ Confirm that the top of the stack is not higher than the limit mark on the side guides.
- ❑ Confirm that the envelopes fit under the side guides.
- ❑ Do not push the stack of envelopes with too much force.

- 6** While pinching the side guides, slide them along the edge of the envelope stack.

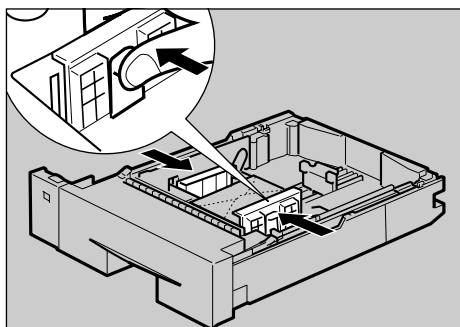

ZGDY370E

- 7** While pinching the rear guide, slide it along the edge of the envelope stack.

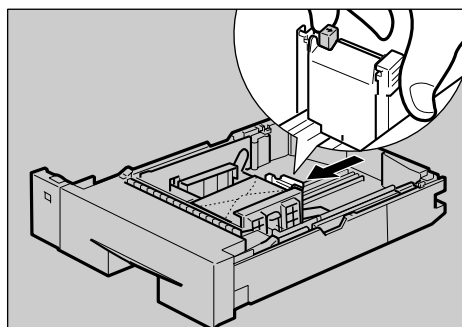

ZGDY390E


- 8** Lift the front of the tray, and slide it carefully into the printer until it stops.

Important

- ❑ Do not slide the paper tray in with force. If you do, the front and side guides might move.

- 9** Set the envelope size and feed direction using the control panel as follows:

- 1** Press **[Menu]**.

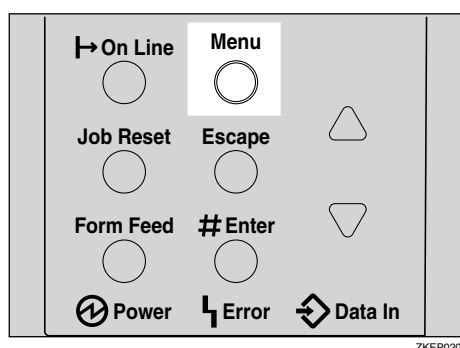


ZKEP020E

"Menu" appears on the panel display.

- 2** Press **[▲]** or **[▼]** to display "Paper Input" menu.



- 3** Press **[Enter #]**.

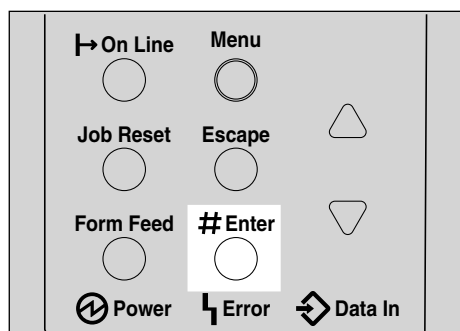

ZKEP060E

The following message appears on the panel display.

Paper Input
Bypass Size

- ④ Press **[▲]** or **[▼]** to display "Tray Paper Size".

Paper Input:
Tray Paper Size

- ⑤ Press **[Enter #]**.

The following message appears on the panel display.

Tray Paper Size:
Tray 1 (*)

- ⑥ Press **[▲]** or **[▼]** to display "Tray 2".

Tray Paper Size:
Tray 2 (*)

- ⑦ Press **[Enter #]**.


- ⑧ Press **[▲]** or **[▼]** to select the envelope type you want to use.

Reference

For more information about types of envelopes you can select, see p.35 "Paper and Other Media Supported by This Printer".

- ⑨ Press **[Enter #]**. Wait for a while.

- ⑩ After the panel display changes, press **[On Line]**.

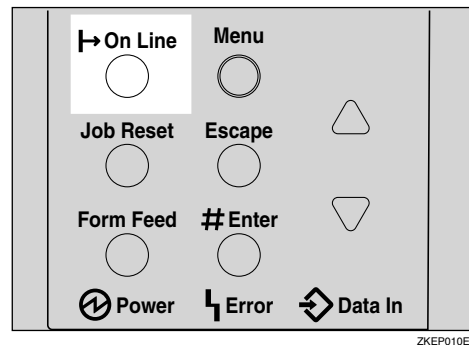

"Ready" message appears on the control panel.

Ready

- ⑩ Start printing with the computer.

4. Sample Print/Locked Print

Sample Print

Use this function to print Only the first set of a multiple-set print jobs. The remaining sets are saved on the optional Hard Disk Drive in the printer. The saved job can be printed or canceled from the printer's control panel.

Also, files specified for Sample Print can be printed or deleted using the Web browser. For details, see *Network Printing Guide*.

Important

- ☐ Turning the printer off deletes any documents or error logs stored on the optional hard disk drive.
- ☐ The files printed or deleted using the Web browser are not listed in the Sample Print files displayed from the control panel.
- ☐ If Sample Print is executed from the Web browser when the list of Sample Print files is displayed from the control panel, although they appear on the control panel, they cannot be printed or deleted from it.

Limitation

- ☐ To use this function, the optional Hard Disk Drive must be installed on the printer.

Reference

For more information about settings for printer driver, see the printer driver Help.

Note

- ☐ If the application has a collate option, confirm that it is not selected before sending a print job. By default, sample print jobs are automatically collated by the printer driver. If the collate option is selected from the application print dialog box, more pages than intended may be printed.
- ☐ You can identify the file you want to print by the User ID and the time when the job was stored.
- ☐ The actual number of pages the printer can save depends on the contents of the print images. For example, the printer can save up to 30 jobs or 1,000 pages. It depends on the data volume.
- ☐ If the first set of the sample print file is not as you expected and you do not want to print the remaining sets, delete the sample print file using the control panel. If you print the remaining sets of the sample print file, the job in the printer is deleted automatically.

Printing a Sample Print File

The following procedure describes how to print a sample print file with the PCL printer driver. For information about how to print a sample print file with the PostScript printer driver, see the PostScript 3 Operating Instructions Supplement included on the CD-ROM. For more information about RPCS printer driver, see Help.

- 1** From an application, select the menu command to print.

The print dialog box appears.

- 2** Open the Printer Properties.

- 3** From the [Job Type:] box on the [Setup] tab, select [Sample Print].

- 4** Click the [Details...] button.

- 5** In the [User ID:] box, type a User ID of up to eight alphanumeric characters.

Note

- ☐ This is used to identify the user associated with a job.
- ☐ The User ID can consist of up to eight alphanumeric (a-z, A-Z, 0-9) characters.

- 6** Click [OK].

- 7** After making all desired settings, click [OK].

- 8** Start printing from the application's print dialog box.

The sample print job is sent to the printer and the first set is printed.

- 9** Check the print job to confirm whether the settings are acceptable.

If the settings are fine, go to step 10 to print the rest of the print job.


If not, you can delete the saved job. See p.63 "Deleting a Sample Print File"

Limitation

- ☐ Documents are not stored on the optional hard disk drive in the following cases (any documents not stored can be confirmed in the error log):

- A Sample Print or Locked Print document is the 31st document sent when a total of 30 documents have already been stored on the optional hard disk drive.
- The last sent document causes the total number of document pages stored on the optional hard disk drive to exceed 1,000.

- 10** On the printer's control panel, press [Menu].

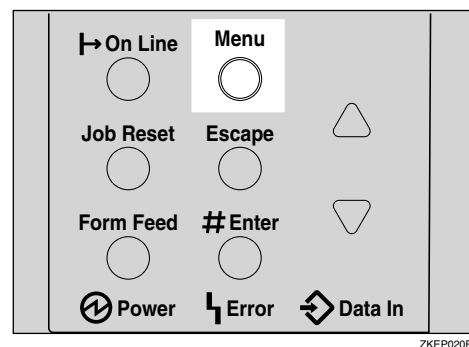


"Menu" appears on the panel display.

- 11** Press **[▼]** or **[▲]** to display the "Sample Print" menu.

```
Menu:
Sample Print
```

- 12** Press **[Enter #]**.

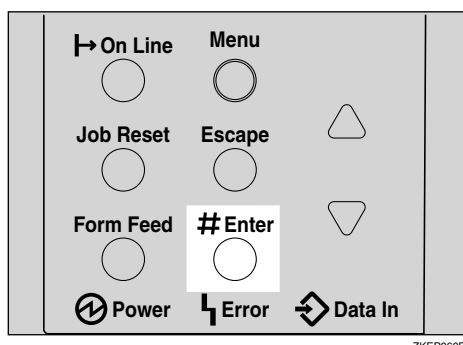

The following message appears on the panel display.

```
Sample Print:
08:56 01234567
```

- 13** Press **[▼]** or **[▲]** to display the file you want to print, and then press **[Enter #]**.

```
Select Action:
Print File
```

Note

- ☐ If you want to cancel the sample print file, press **[Escape]**.

- 14** Press **[Enter #]**.

The following message appears on the panel display.

```
Qty: 1(1-999)
Press Enter (#)
```

- 15** Press **[▲]** or **[▼]** to enter the number of sets.

Note

- ☐ You can enter up to 999 sets.

```
Qty: 6(1-999)
Press Enter (#)
```

- 16** Press **[Enter #]** to print the file.

The following message appears on the panel display.

```
Processing...
```


Note

- ☐ If you are not satisfied with the first printout of the sample print file and do not want to print the remainder, the job in the printer is deleted automatically.

Deleting a Sample Print File

If you are not satisfied with the printout, delete the sample print file. Then revise it and print again until the settings are fine.

- 1** Press **[Menu]**.

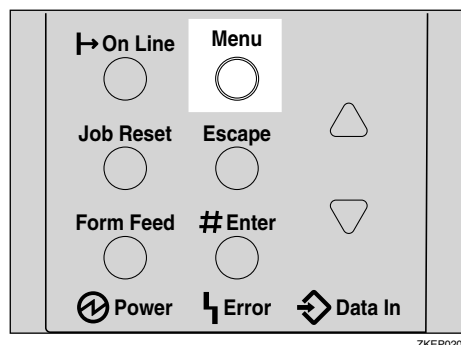


"Menu" appears on the panel display.

- 2** Press **[▼]** or **[▲]** to display the "Sample Print" menu .

```
Menu:
Sample Print
```

- 3** Press **[Enter #]**.

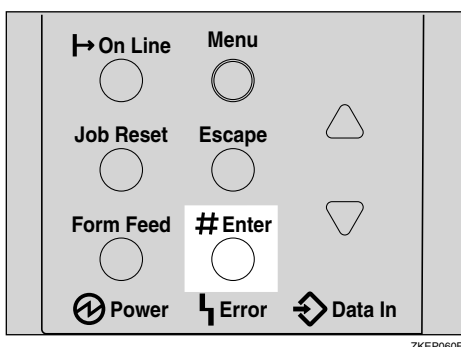

The following message appears on the panel display.

```
Sample Print:
08:56 01234567
```

- 4** Press **[▼]** or **[▲]** to display the file you want to delete, and then press **[Enter #]**.

The following message appears on the panel display.

```
Select Action:
Delete File
```

Note

- ☐ If you want to cancel the deletion of a sample print file, press **[Escape]**.

- 5** Press **[▼]** or **[▲]** to display "Delete File", and then press **[Enter #]**.


```
08:56 1234567
Delete? Yes=#
```

- 6** Press **[Enter #]** to delete the file.

The following message appears on the panel display.

```
Deleted
```

- 7** Press **[On Line]**.

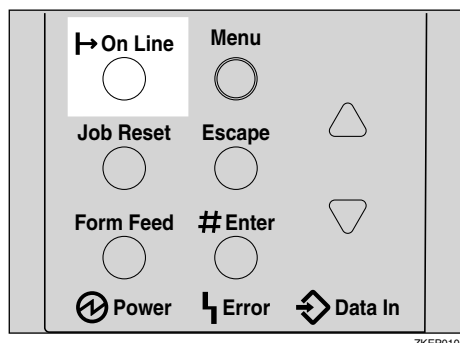

"Ready" appears on the panel display.

```
Ready
```

Checking the Error Log

When a print job is not saved on the hard disk, it remains in the error log and can be checked using the control panel.

! Limitation

- ☐ You can view Only the latest 20 error logs of all.


1 Press [Menu].

"Menu" appears on the panel display.

2 Press [▼] or [▲] to display the "Sample Print" menu.

```
Menu:
Sample Print
```

3 Press [Enter #].

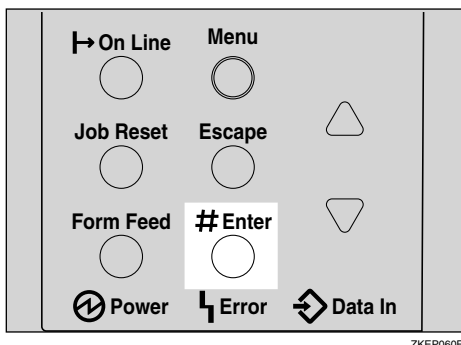

The following message appears on the panel display.

```
Sample Print:
08:56 1234567
```

4 Press [▼] or [▲] to display "Error File(s)".

```
Sample Print:
Error File(s)
```

5 Press [Enter #].

The following message appears on the panel display.

```
Error File(s):
06:52 ABCD1234
```

Note


- ☐ You can check the other error logs by using [▼] or [▲].

6 Press [▼] or [▲] to check "Error File(s)", and then press [Enter #].

The following message appears on the panel display.

```
Sample Print:
Error File(s)
```

7 Press [On Line].

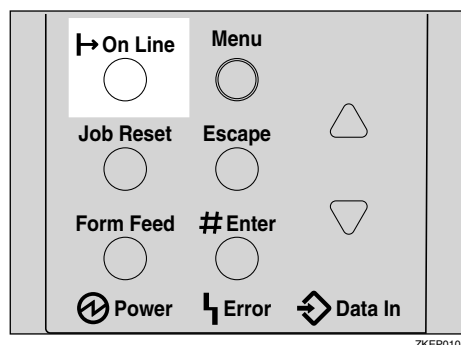

"Ready" appears on the panel display.

```
Ready
```

Locked Print

Use this function to maintain privacy when printing confidential documents. Documents will not be printed out automatically, unless a password is entered, using the control panel after sending the print job.

Also, files specified for Locked Print can be printed or deleted using the Web browser. For details, see *Network Printing Guide*.

4

Important

- ☐ Turning the printer off deletes any documents or error logs stored on the optional hard disk drive.
- ☐ The files printed or deleted using the Web browser are not listed in the Locked Print files displayed from the control panel.
- ☐ If Locked Print is executed from the Web browser when the list of Locked Print files is displayed from the control panel, although they appear on the control panel, they cannot be printed or deleted from it.

Limitation

- ☐ To use this function, the optional Hard Disk Drive must be installed on the printer.

Note

- ☐ If the application has a collate option, confirm that it is not selected before sending a print job. By default, locked print jobs are automatically collated by the printer driver. If the collate option is selected from the application print dialog box, more pages than intended may be printed.
- ☐ You can identify the file you want to print by the User ID and the time when the job was stored.

- ☐ The actual number of pages the printer can save depends on the contents of the print images. For example, the printer can save up to 30 jobs or 1,000 pages. It depends on the data volume.
- ☐ After the locked print file is printed, the job in the printer is deleted automatically.

Printing a Locked Print File

The following procedure describes how to print a locked print file with the PCL printer driver. For information about how to print a locked print file with the PostScript printer driver, see the PostScript 3 Operating Instructions Supplement included on the CD-ROM. For more information about RPCS printer driver, see Help.

1 From an application, select the menu command to print.

The print dialog box appears.

2 Open the Printer Properties.

3 From the [Job Type:] box on the [Setup] tab, select [Locked Print].

4 Click the [Details:] button.

5 In the [User ID:] box, type a User ID of up to eight alphanumeric characters.

Note

- ☐ This is used to identify the user associated with a job.
- ☐ The User ID can consist of up to eight alphanumeric (a-z, A-Z, 0-9) characters.

- 6** In the [Password:] box, type a password of four digits.

 Note

- ☐ The password must be four digits (0-9).

- 7** Click [OK].

- 8** After making all desired settings, click [OK].

- 9** Start printing from the application's print dialog box.


The locked print job is sent to the printer.

 Limitation

- ☐ If Locked Print is executed from the Web Image Monitor while the list of Locked Print files is displayed from the control panel, although they appear on the control panel, they cannot be printed or deleted from it.


- A Sample Print or Locked Print document is the 31st document sent when a total of 30 documents have already been stored on the optional hard disk drive.
- The last sent document causes the total number of document pages stored on the optional hard disk drive to exceed 1,000.

- 10** On the printer's control panel, press [Menu].

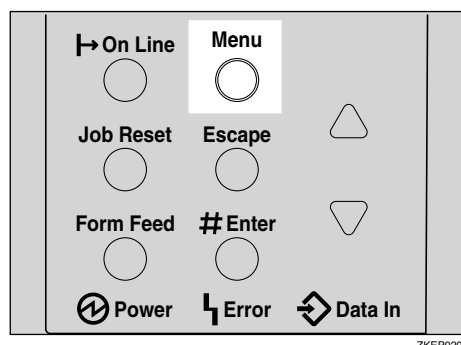


"Menu" appears on the panel display.

 
- 11** Press [▼] or [▲] to display "Locked Print" menu.



- 12** Press [Enter #].

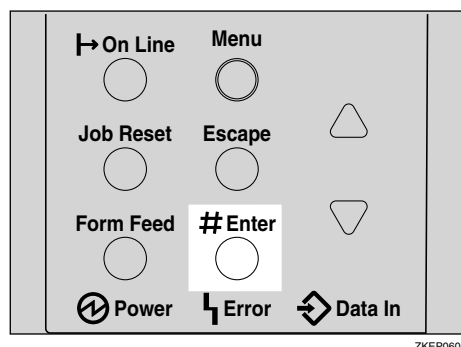

 The following message appears on the panel display.



- 13** Press **[▼]** or **[▲]** to display a file you want to print, and then press **[Enter #]**.

The following message appears on the panel display.

```
Password:
[0----]
```

- 14** Enter the password you entered in step **6**.

- 1** Press **[▲]** or **[▼]** to enter the leftmost digit of the password.

```
Password:
[1----]
```

- 2** Press **[Enter #]**.

The next digit appears.

```
Password:
[*2----]
```

Note

- ☐ If you want to change the locked print file, press **[Escape]**.

- 3** Repeat steps **1** and **2** to enter the remaining digit of the password, and then press **[Enter #]**.

If the password is not correct, the following message appears and the panel display returns to the password menu. Reset or reenter the password.

```
Invalid Password
Try Again
```

- 15** Press **[▼]** or **[▲]** to display "Print File", and then press **[Enter #]**.

```
Select Action:
Print File
```

Note

- ☐ If you want to change the locked print file, press **[Escape]**.

- 16** Press **[Enter #]**.

The following message appears on the panel display.


```
08:56 1234567
Press # to Print
```

- 17** Press **[Enter #]** to print the file.

```
Processing...
```

Deleting the Locked Print File

- 1** Press **[Menu]**.

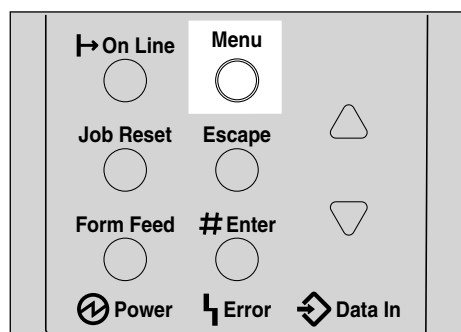


ZKEP020E

"Menu" appears on the panel display.

- 2** Press **[▼]** or **[▲]** to display the "Locked Print" menu.

```
Menu:
Locked Print
```

3 Press **[Enter #]**.

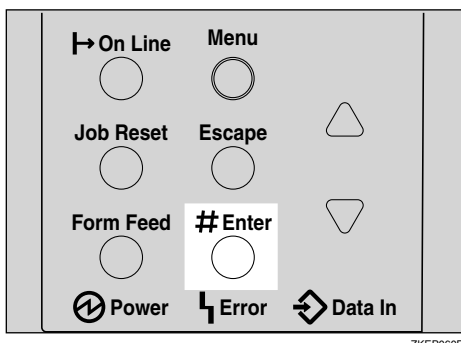

Locked Print:
08:56 1234567

4 Press **[▼]** or **[▲]** to display the file you want delete, and then press **[Enter #]**.

Password:
[0----]

5 Enter the password of the locked print file.

1 Press **[▲]** or **[▼]** to enter the leftmost digit of the password.

Password:
[1----]

2 Press **[Enter #]**.

The next digit appears.

Password:
[*2----]

Note

- ☐ If you want to change the locked print file, press **[Escape]**.

3 Repeat steps **1** and **2** to enter the remaining password digits, and then press **[Enter #]**.

If the password is not correct, the following message appears and the panel display returns to the password menu. Reenter the password.

Invalid Password
Try Again

6 Press **[▼]** or **[▲]** to display “Delete File”.

Select Action:
Delete File

7 Press **[Enter #]**.

The following message appears on the panel display.

08:56 ABCD1234
Press # To Del


Note

- ☐ If you want to change the locked print file, press **[Escape]**.

8 Press **[Enter #]**.


The following message appears on the panel display.

Deleted

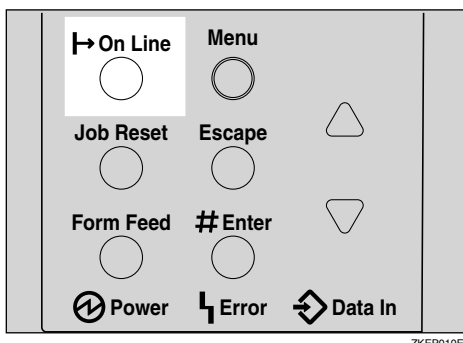9 Press **[On Line]**.


ZKEP010E

"Ready" appears on the panel display.

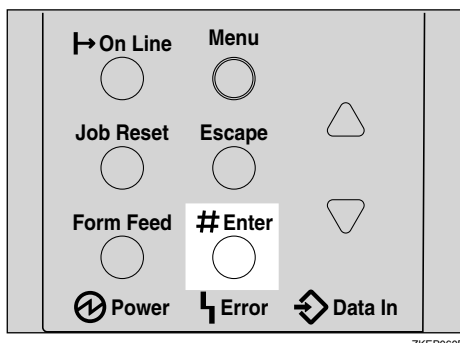**3** Press **[Enter #]**.

ZKEP060E

 
The following message appears on the panel display.



Checking the Error Log



! Limitation

- ☐ You can view Only the latest 20 error logs of all.

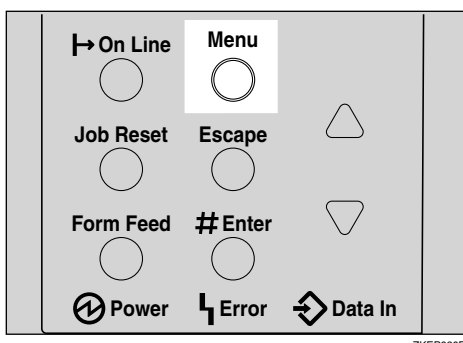
1 Press **[Menu]**.

ZKEP020E

  
"Menu" appears on the panel display.

2 Press **[▼]** or **[▲]** to display the "Locked Print" menu.**4** Press **[▼]** or **[▲]** to display "Error File(s)".**5** Press **[Enter #]**.

 The following message appears on the panel display.



- 6** Press **[▼]** or **[▲]** to check "Error File(s)", and then press **[Escape]**.

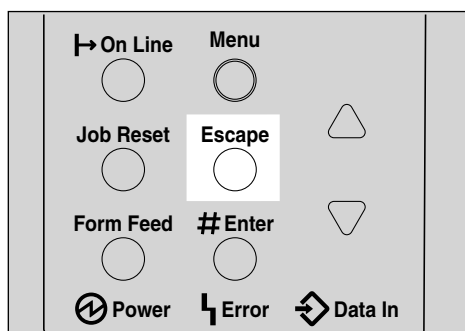

ZKEP040E


The following message appears on the panel display.

Locked Print:
Error File(s)

Note

- ☐ Press **[Escape]** to return to the previous menu.

- 7** Press **[On Line]**.

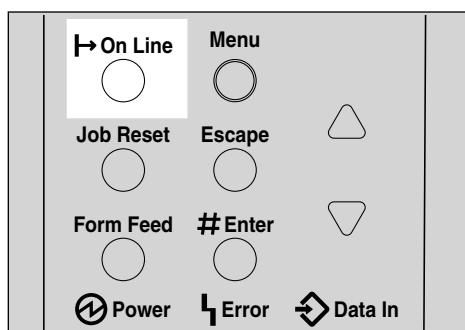

ZKEP010E

"Ready" appears on the panel display.

Ready

5. Troubleshooting

Error & Status Messages on the Control Panel

Messages/Second messages	Description	Solution
Call Service: EC Power Off On /If Error Reoccur Call Service	An error has occurred in the printer.	First, turn the power switch off and then on. If the message appears again, call your sales or service representative.
Change Setting Tray # /Paper Size: Paper type:	The paper type and size setting on the tray differs from the setting on the driver.	Load { paper size and type } paper with the selected feed direction into tray. Printing will not automatically resume if the paper type, size and direction setting is incorrect. Make sure that the paper size, feed directions and paper type set in the printer driver and on the control panel are the same. There are two methods to resume printing. ① Use the control panel to set the correct paper type, size and direction of the paper in tray. ② Press [Form Feed] and select the tray with the control panel. You can make to setting to print disregarding the error message.  Reference See "Ppr.Size Errors" in p.135 "Maintenance Menu Parameters".
Cannot check Signal in Ad hoc	The signal strength for the wireless LAN cannot be checked because "802.11 Ad hoc" or "Ad hoc" is selected in Comm. Mode for IEEE 802.11b on the Host Interface menu. The signal strength for wireless LAN cannot be checked because "Ad hoc" is selected in "Comm. Mode" for "IEEE 802.11b" in the Host Interface menu.	Signal strength cannot be checked with "802.11b Ad hoc" or "Ad hoc". Change the Transmission mode to [Infrastructure] in the Host Interface settings.

Messages/Second messages	Description	Solution
Close Duplex Unit Cover	The cover of the optional Duplex Unit is open.	Close the cover of the optional Duplex Unit.
Close Front Cover	The front cover is open.	Close the front cover.
Close Rear/Paper Exit Cover	The paper exit cover or the rear cover is open.	Close the paper exit cover or the rear cover.
Collate Cancelled	The Collate feature has been cancelled.	Increase the RAM Capacity.
DHCP assigned Cannot change	The following address have already been assigned by DHCP: IP Address, Gateway Address, Subnet Mask.	Disable the default DHCP setting in Network in order to enter the addresses manually.
Driver Setting Error (Memory)	The printer identified a download error. This error may occur when the installed memory amount is less than the driver setting.	Verify that the proper memory size is specified via the driver setting.
Duplex Cancelled	Duplex printing specifications canceled due to insufficient memory or selection of a paper size not compatible with duplex printing.	Install additional memory units or reduce the amount of data sent.
Energy Save Mode	The printer is in Energy Saver mode.	Wait for a while.
Error: Enter 10 or 26 Characters	WEP Key setting error, the number of alphanumerical numbers should be either 10 or 26.	Enter the correct value.
Exceeded Max. Pages (Collate)	The printer identified a collation table overflow error.	Install additional memory units or reduce the amount of data sent.
Exceeded Max. Stored Pages	The maximum number of pages has been exceeded during Sample Print or Locked Print.	Reduce the number of pages to print.
Exceeded Max. Stored Files	The maximum number of stored files has been exceeded during Sample Print or Locked Print.	Delete the stored files.
Hardware Problem DIMM	An error has occurred in the printer.	First, turn the power switch off and then on. If the message appears again, call your sales or service representative.

Messages/Second messages	Description	Solution
Hardware Problem Ethernet	An error has occurred in the optional Network Interface Board.	First, turn off the power switch and then on. If the message appears again, call your sales or service representative.
		Turn off the power switch . Replace the Network Interface Board and turn on the power switch. See " <i>Network Interface Board Type 2610</i> " in the Setup Guide.
		Turn off the power switch, remove the Network Interface Board and turn on the power switch.  Note ☐ If you remove the Network Interface Board, you cannot print over the network. You can send a print jobs to the printer Only via a parallel cable connection.
Hardware Problem HDD	An error has occurred in the optional Hard Disk Drive.	First, turn the power switch off and then on, If the message appears again, call your sales or service representative.
		Turn off the power switch. Replace the Hard Disk Drive and turn on the power switch. See " <i>Hard Disk Drive Type 2600</i> " in the Setup Guide.
		Turn off the power switch. Remove the Hard Disk Drive and turn on the power switch.  Note ☐ If the Hard Disk Drive is not installed, you cannot send the sample print job, locked print job and download the font to Hard Disk Drive using the PS Utility for Mac.

Messages/Second messages	Description	Solution
Hardware Problem IEEE1394	An error has occurred in the optional 1394 Interface Unit.	First, turn the power switch off and then on, If the message appears again, call your sales or service representative.
		Turn off the power switch. Replace the 1394 Interface Unit and turn on the power switch. See "1394 Interface Unit Type 4510" in the Setup Guide.
		Turn off the power switch, remove the 1394 Interface Unit and turn on the power switch.  Note ☐ If you remove the 1394 Interface Unit, you cannot send print jobs via the 1394 Interface Unit. You can Only send print jobs to the printer via the parallel cable connection.
Hardware Problem IEEE 802.11b	An error has occurred in the optional 802.11b Interface Unit.	Replace the IEEE 802.11b board.
Hardware Problem NV-RAM	An error has occurred in the printer.	First, turn the power switch off and then on. If the message appears again, call your sales or service representative.

Messages/Second messages	Description	Solution
Hardware Problem Option RAM	An error has occurred in the optional Memory Unit.	First, turn the power switch off and then on. If the message appears again, call your sales or service representative.
		Turn off the power switch, Replace the Memory Unit, and then turn on the power switch. See " <i>Memory Unit Type C (SDRAM Module)</i> " in the Setup Guide.
		Turn off the power switch, remove the Memory Unit, and then turn on the power switch.  Note ☐ If you remove the Memory Unit, you must set up the option with the printer driver. If you are using Windows 95/98/Me, Windows 2000/Windows XP/Server 2003 and Windows NT 4.0, see " <i>Installing the Printer Driver and Software</i> " in the Setup Guide. ☐ In this case, you might not be able to print complex print jobs.
Hardware Problem Parallel I/F	An error has occurred in the parallel I/F.	If you use the parallel I/F, replace the interface cable that caused the error. If the message appears again, contact your sales or service representative.
Hardware Problem USB	There is a problem related to the Universal Serial Bus Connection and Hardware.	First, turn the power switch off and then on, If the message appears again, call your sales or service representative.
Hardware Problem Wireless Board	An error has occurred in the 802.11b Interface Unit.	Reset the 802.11b Interface Unit if the same message appears after turning the power off and then back on again. If the same message still appears, contact your sales or service representative.

Messages/Second messages	Description	Solution
Hardware Problem Wireless Card	An error has occurred in the 802.11b Interface Unit.	Reset the 802.11b Interface Unit if the same message appears after turning the power off and then back on again. If the same message still appears, contact your sales or service representative.
HDD Full	The maximum HDD area size for form/font has been exceeded.	Delete the disused form/font types.
HDD Full	The optional Hard Disk Drive is full. The sample print job or locked print job to be sent from the computer is too large to store.	Delete any unnecessary stored files.
HDD Not Installed	You cannot print the sample print and the locked print jobs, because the optional Hard Disk Drive is not installed.	Install the Hard Disk Drive. See "Hard Disk Drive Type 2600" in the Setup Guide.
Hex Dump Mode	The printer is in Hex Dump Mode.	Wait for a while. If the "Hex Dump Mode" message does not change, on the panel display press [On Line] to return to the "Ready" condition.
I/O Buffer Overflow	There is too much data for the I/O Buffer to handle.	Make sure the interface cable is inserted into the printer and your computer securely.
		Make sure the interface cable is not damaged or broken.
		Increase the size of the I/O buffer.
Invalid Password Try Again	The password was not entered correctly.	Wait for two seconds until the previous display appears. Then enter the password correctly.
Invalid Password File Protected	An incorrect password has been entered more than 10 times, the file is now protected until an administrator can unlock it.	The file is now protected until an administrator can unlock it.

Messages/Second messages	Description	Solution
Load Correct Size Paper /Press # to Continue	The paper size setting on the tray differs from that of actual paper size in the tray.	Load { paper size } paper of the selected feed direction and paper size into the tray. Printing will not automatically resume if the paper size and direction setting is incorrect. Make sure that the paper feed directions set in the printer driver and on the control panel are the same. There are two methods to resume printing. ① Use the control panel to set the correct paper size and direction of the paper in tray. Then press [Enter #] . ② Press [Form Feed] and select the tray with the control panel.
Load Paper /Max. Size Over /(Paper type)	This message will appear as an alternating message in conjunction with [Load Paper], (A4 Recycle), when a size selected at the driver (PC) side is larger than the maximum available size setting on the machine side, this message will be displayed.	Reset the job or print on the available paper as is.
Load Paper /Paper Size: Paper type:	The paper type and size settings for this tray do not match the size and type of paper actually loaded.	Load paper into the tray indicated, then press [Enter #] to resume printing. Or press [Form Feed] and select the tray that holds a different type of paper. To cancel printing, press [Job Reset] . Then press [Enter #] .
Load Paper Tray # /Paper Size: Paper type:	There is no paper left in this tray.	Load paper into the tray indicated.
Menu Protected Cannot Change	The menu is protected and the settings cannot be changed.	Wait for two seconds until the previous display appears.
No Files Exist	There are no files available for the sample print job or the locked print job.	Wait for two seconds until the previous display appears.

Messages/Second messages	Description	Solution
No Log Exists	The user has selected to print the error log in the List/Test Print mode, however no errors have been detected and so a log has not been created.	
Offline	The printer is offline.	If you want to bring the printer online. Press 【On Line】 .
P=XX I= XXXXXXXX Power Off On /If Error Reoccur Call Service	A controller error. The SC number indicates the problem.	First, turn the power switch off and then on. If the message appears again, call your sales or service representative.
Paper Invalid for Duplex:Tray # /Change Setting or Form Feed	A paper setting for the selected tray is not supported for Duplex printing. #: tray number	Change the paper setting with the control panel. Or press 【Form Feed】 several times until a tray with supported paper settings appears on the panel display. Or press 【Job Reset】 to cancel the print job.
Please wait...	WEP settings are being changed and updated in this status message. The printer device keys are unoperational during this period.	
	The user is urged to wait while emulation is switching.	
Print Overrun	A Print overrun occurred on a file being printed. Only a part of the data on the page will be printed, and the print job is suspended, or the current print job has been canceled.	To print the image correctly, add memory to the printer or reduce the Resolution of the image.
Printing...	———	Wait for a while.
Processing...	The printer is processing internally.	Wait for a while.
Ready	The printer is online and ready to make prints.	If you want to take the printer offline, press 【On Line】 .
Remove Misfeed Duplex Unit /Open Duplex Unit Cover	There is misfeed in the Duplex Unit.	Remove the misfed paper.

Messages/Second messages	Description	Solution
Remove Misfeed Internal Path /Open Front Cover	There is a misfeed in the printer.	Remove the misfed paper. See p.97 "Removing Misfed Paper".
Remove Misfeed Paper Exit Cover /Open Paper Exit Cover	There is a misfeed in the paper exit cover.	Remove the misfed paper.
Remove Misfeed Paper Tray /Remove Misfeed Paper Tray	There is a misfeed in the printer.	Remove the misfed paper. See p.97 "Removing Misfed Paper".
Remove Paper Standard Tray	The standard tray is full, and the print job is suspended.	Remove paper from the standard tray, and the print job will be resumed automatically.
Replace Maintenance Kit	It is time to replace parts included in the Maintenance Kit.	Replace parts. See p.175 "MAINTENANCE KIT Type 400".
Replace Toner Cartridge	The toner cartridge is not set correctly or toner is almost run out.	Set the toner cartridge correctly. See p.107 "Replacing the Toner Cartridge".
	The toner dust is full.	Prepare a new toner cartridge. If the Image Density gets too light, replace the toner cartridge with a new one. See p.107 "Replacing the Toner Cartridge".
Reset Fusing Unit Correctly	The fusing unit is not set correctly.	Set the fusing unit correctly, or set the proper fusing unit.
Reset Toner Cartridge	The toner cartridge is not set correctly.	Set the toner cartridge correctly. See p.107 "Replacing the Toner Cartridge".
	The toner cartridge is not set installed.	If the cartridge is installed, close the front cover and turn the off power switch and then on. If the message appears again, contact your sales or service representative.
Reset Tray # Correctly	The input paper tray is not set correctly.	Set the input paper tray correctly.
Resetting Job...	The print job is being reset.	Wait for a while.

Messages/Second messages	Description	Solution
RPCS Graphic Error	The graphics is not initialized because the graphics memory was not reserved. This error rarely occurs unless the printer detects the memory failure. Please note that "RPCS" (RICOH printer language) is the same worldwide and does not need to be translated.	Replace the installed memory.
RPCS Syntax Error	The printer identified a syntax error. This error results from; data transmogrification caused by the transmission path problem, data interruption, data transmission from other drivers, etc.	Be sure to use the correct driver.
RPCS Memory Overflow	The printer memory is not initialized because the CDC memory was not reserved via the system call. This error rarely occurs.	Replace the installed memory.
SC XXX-X /Power Off On If Error Reoccur Call Service	An error has occurred.	First, turn the power switch off and then on. If the message appears again, call your sales or service representative.
SC2001	An error has occurred in the resident font RAM.	First, turn the power switch off and then on. If the message appears again, call your sales or service representative.
Toner is Almost Empty	The toner is almost run out.	Prepare a new toner cartridge. If the Image Density gets too light, replace the toner cartridge with a new one. See p.107 "Replacing the Toner Cartridge".
Waiting...	The printer is waiting for the next print job.	Wait for a while.
Warming Up...	The printer is warming up or toner is being supplied.	Wait until the panel display change the "Ready".

Getting Printer Information over the Network

Printer current status

You can check the printer's status using the telnet command.

❖ telnet

Use the status command.

❖ UNIX

Use the lpq or lpstat command or stat parameter of rsh, rcp, or ftp.



Reference

For more information, see *“Remote Maintenance by Telnet (mshell)”* in the Network Printing Guide is provided on the CD-ROM labeled *“Operating Instructions”*.

Messages	Description	Comments
Call Service Center	There is a malfunction in the printer.	Turn the printer off and on.
Cover Open: Duplex Unit	The cover of the optional Duplex Unit is open.	Close the cover of the optional Duplex Unit.
Cover Open: Front Cover	Close the front cover.	Close the front cover.
Cover Open: Paper Exit/Rear	The paper exit cover or the rear cover is open.	Close the paper exit cover or the rear cover.
Empty: Toner	The toner cartridge is empty.	Replace the new toner cartridge.
Energy Saver Mode	The printer is in Energy Save Mode.	Wait for a while.
Energy Saver Mode 1		
Error: HDD Board	An error has occurred in the optional Hard Disk Drive.	First, turn the power switch off and then on. If the message appears again, call your sales or service representative.
Error: IEEE 1394 Board	An error has occurred in the optional 1394 Interface Unit.	First, turn the power switch off and then on. If the message appears again, call your sales or service representative.
Error: Memory Switch	An error has occurred in printer.	First, turn the power switch off and then on. If the message appears again, call your sales or service representative.
Error: Optional RAM	An error has occurred in the optional Memory Unit.	First, turn the power switch off and then on. If the message appears again, call your sales or service representative.

Messages	Description	Comments
Error: Parallel I/F Board	An error has occurred in the parallel interface board.	First, turn the power switch off and then on. If the message appears again, call your sales or service representative.
Error: USB I/F	An error has occurred in the USB interface.	First, turn the power switch off and then on. If the message appears again, call your sales or service representative.
IEEE 802.11b Card Error	The optional IEEE 802.11b board or the optional IEEE 802.11b card is not installed.	Install the optional IEEE 802.11b board or the optional IEEE 802.11b card.
IEEE 802.11b Card or Board Error	An error has occurred in the optional IEEE 802.11b board or the optional IEEE 802.11b card	First, turn the power switch off and then on. If the message appears again, set the optional IEEE 802.11b board. If the message still appears, call your sales or service representative.
Low: Toner	The toner cartridge is not set correctly or toner is almost running out.	Set the toner cartridge correctly.
Mismatch: Paper Size	The paper size setting of the tray differs from that of actual paper size in the tray.	Load paper of the indicated paper size into the paper tray being used. See p.35 "Paper and Other Media Supported by This Printer".
Mismatch: Paper Size and Type	The paper type setting of the tray differs from that of actual paper type in the tray.	Load paper of the indicated paper size and type into the paper tray being used. See p.35 "Paper and Other Media Supported by This Printer".
Mismatch: Paper Type	The paper type setting of the tray differs from that of actual paper type in the tray.	Load paper of the indicated paper type into the paper tray being used. See p.35 "Paper and Other Media Supported by This Printer".
No Paper: Input Tray(s)	There is no paper of the indicated paper size in the paper tray.	Load paper into the paper tray. See p.47 "Loading Paper in the Paper Tray".
Not Detected: Fusing Unit	The fusing unit is not set correctly.	Set the fusing unit correctly. If the message appears again, call your sales or service representative.
Not Detected: Input Tray(s)	The input tray is not set correctly.	Set the input tray correctly. If the message appears again, call your sales or service representative.

Messages	Description	Comments
Not Detected: Toner Cartridge	The toner cartridge is not set correctly.	Set the toner cartridge correctly. If the message appears again, call your sales or service representative.
NVRAM Error	An error has occurred in the printer.	First, turn the power switch off and then on. If the message appears again, call your sales or service representative.
Paper Misfeed: Duplex Unit	There is misfeed in the Duplex Unit.	Remove the misfed paper. See p.104 "When "Remove Misfeed Duplex Unit" Appears".
Paper Misfeed: Front Cover	There is misfeed in the printer.	Remove the misfed paper. See p.98 "When "Remove Misfeed Internal Path/Open Front Cover" Appears".
Paper Misfeed: Input Tray	There is misfeed in the printer.	Remove the misfed paper. See p.97 "When "Remove Misfeed Paper Tray" Appears".
Paper Misfeed: Output Tray	There is misfeed in Output Tray.	Remove the misfed paper. See p.99 "When "Remove Misfeed Paper Exit Cover" Appears".
Ready	The printer is on line and ready to make prints.	———
Remove Paper Standard Tray	The Output Tray is full.	Remove paper from Output Trays.
Replace Maintenance Kit	It is time to replace parts included in the Maintenance Kit.	Replace parts. See p.175 "MAINTENANCE KIT Type 400".
Size Media Mismatch	The paper size setting of the tray differs from that of actual paper type in the tray.	Load paper of the indicated paper size and type into the paper tray being used. See p.35 "Paper and Other Media Supported by This Printer".
Size Mismatch	The paper size setting of the tray differs from that of actual paper type in the tray.	Load paper of the indicated paper size and type into the paper tray being used. See p.35 "Paper and Other Media Supported by This Printer".
Warming Up/Adjusting...	The printer is warming up or toner is being supplied.	Wait until the panel display change the "Ready".

Printer configuration

You can check the printer configuration using telnet.

❖ telnet

Use the info command.

❖ UNIX

Use the info parameter of rsh, rcp, or ftp.

🔍 Reference

For more information, see “*Remote Maintenance by Telnet (mshell)*” in the Network Printing Guide is provided on the CD-ROM labeled “Operating Instructions”.

📌 Note

❑ “*” (asterisk) is displayed with the current setting.

❑ Regarding *1–*6, see below table.

Item	Description
Printer System	Version of the printer
Network Board	Version of the network board
Input Tray No. Name PaperSize Status	ID number of the paper tray Name of the paper tray* ¹ Paper size loaded in the paper tray* ² Current status of the paper tray* ³
Output Tray No. Name Status	ID number of the Output Tray Name of the Output Tray* ⁴ Current status of the Output Tray* ⁵
Emulation No. Name Version	ID number of the emulation used by the printer Name of the emulation used in the printer Version of the emulation
Program No. Name	ID number of the program Name of the program

❖ *1 Input Tray: Name

Name	Description
Tray X	Name of installed paper tray. (X is the number of tray.)
Bypass Tray	Bypass Tray

❖ *2 Input Tray: Paper Size

Paper Size	Description
A4 (210 × 297 mm)	A4
B5JIS (182 × 257 mm)	B5
A5 (210 × 148 mm)	A5
A5 (148 × 210 mm)	A5
A6 (105 × 148 mm)	A6
8 ¹ / ₂ × 14"	LG/216 × 356
8 ¹ / ₂ × 11"	LT/216 × 279
5 ¹ / ₂ × 8 ¹ / ₂ "	140 × 216
custom (210 × 297 mm)	Custom Size
7 ¹ / ₄ × 10 ¹ / ₂ "	7 ¹ / ₄ × 10 ¹ / ₂
8 ¹ / ₄ × 13"	8 ¹ / ₄ × 13
8 ¹ / ₂ × 13"	8 ¹ / ₂ × 13
4 ¹ / ₈ × 9 ¹ / ₂ "	4 ¹ / ₈ × 9 ¹ / ₂
3 ⁷ / ₈ × 7 ¹ / ₂ "	3 ⁷ / ₈ × 7 ¹ / ₂
110 × 220 mm	4 ¹ / ₃ × 8 ³ / ₄
C5 Env(162 × 229 mm)	C5 Env
8 × 13"	203 × 330
C6 Env(114 × 162 mm)	C6 Env
16K (195 × 267 mm)	16K
NCS	There is no tray.
**	The paper size is not selected.

❖ *3 Input Tray: Status

Status	Description
Normal	—
NoTray	There is no paper tray
PaperEnd	There is no paper in the paper tray

❖ ***4 Output Tray: Name**

Name	Description
Standard Tray	Output Tray

❖ ***5 Output Tray: Status**

Status	Description
Normal	----
PaperExist	There is paper in the output tray
OverFlow	Output Tray is full of paper
Error	Other error

Printer Does Not Print

Possible Cause	Solutions
Is the power on?	Confirm that the cable is securely plugged into the power outlet and the printer. Turn on the power switch.
Does the On Line indicator stay on?	Press [On Line] so the indicator lights.
Does the Error indicator stay red?	Check the error message on the panel display and take the required action.
Is paper loaded?	Load paper into the paper tray or on the Bypass Tray. See p.47 "Loading Paper and Other Media".
Can you print a configuration page?	If you cannot print a test page, it probably indicates a printer malfunction. You should contact your sales or service representative. See p.128 "List/Test Print Menu". If you can print a test page but cannot get the printer to print when you issue a print command from the computer, it probably means there is a problem with the computer. Note that large or complex data might take a long time to be printed.
Is the interface cable connecting the printer to the computer connected securely?	Connect the interface cable properly. If there are any connectors or screws, confirm that they are fastened securely.
Are you using the correct interface cable?	The type of interface cable you should use depends on the computer. Be sure to use the correct one. If the cable is damaged or worn, replace it with a new one.
Is the paper feed roller clean?	Clean the paper feed roller if it is dirty. See p.111 "Cleaning the Paper Feed Roller".

Possible Cause	Solutions
Is the Data In indicator blinking or lit after starting the print job?	If not blinking or lit, the data is not being sent to the printer. ❖ If the printer is connected to the computer using the interface cable Make sure the following printer port settings are correct: • For a parallel port connection, port LPT1 or LPT2 should be set. • For a USB port connection, port USB00 (n) ^{*1} should be set. • For a IEEE 1394 (SCSI print) port connection, port 1394_00(n) ^{*1} should be set. ^{*1} (n) is the number of printers connected. • Windows 95/98/Me ① Click [Start], point to [Settings] and then click [Printers]. ② Click to select the icon of the printer. Next, on the [File] menu, click [Properties]. ③ Click the [Details] tab. ④ Check the [Print to the following port] box to confirm that the correct port is selected. • Windows 2000 ① Click [Start], point to [Settings] and then click [Printers]. ② Click to select the icon of the printer. Next, on the [File] menu, click [Properties]. ③ Click the [Port] tab. ④ Check the [Print to the following port] box to confirm that the correct port is selected. • Windows XP/Server 2003 ① With Windows XP Professional/Windows Server 2003, access the [Printers and Faxes] window from [Start] on the taskbar.  Note ❑ With Windows XP Home Edition, open [Control panel] from [Start], click [Printers and Other Hardware], and then click [Printers and Faxes] on the screen that appears. ② Click to select the icon of the printer. Next, on the [File] menu, click [Properties]. ③ Click the [Port] tab. ④ Check the [Print to the following port(s).] box to confirm that the correct port is selected. • Windows NT 4.0 ① Click [Start], point to [Settings] and then click [Printers]. ② Click to select the icon of the printer. Next, on the [File] menu, click [Properties]. ③ Click the [Port] tab. ④ Check the [Print to the following port] box to confirm that the correct port is selected.

Possible Cause	Solutions
Is the Data In indicator blinking or lit after starting the print job?	❖ Network Connection Contact your network administrator.
Do you print via a network?	Confirm that the "Ethernet " setting is correct from the control panel. See p.154 "Host Interface Menu". The setting governs the data transfer speed used by the Network Interface Board. Three options are available: • Auto (default) • 100 Mbps • 10 Mbps 📝 Note ☐ For more information about the appropriate setting to use on your network, contact your network administrator.
If you use IEEE 1394, check for the followings.	① Make sure the 1394 Interface Unit is installed properly. ② Make sure the IEEE 1394 cable is connected properly. ③ Restart the computer. If the problem still exists when SCSI print is used with Windows 2000 and Windows XP/Server 2003, go to step ④. ④ Disconnect all the IEEE 1394 cables from the computer. ⑤ If you uninstall the printer driver when the printer is connected to a computer with "SCSI print", the printer driver may not be uninstalled properly. To uninstall the driver properly, use the IEEE 1394 Printer Removal Utility on the CD-ROM that comes with the printer. Stored in: CD-ROM labeled "Operating Instructions"DRIVERSUTILITY1394 📝 Note ☐ For more information about the IEEE 1394 Printer Removal Utility, see the README file in the same folder as the program. ⑥ Restart the computer.
How is the signal strength when using the wireless LAN?	❖ Ad Hoc Mode or 802.11 Ad Hoc Mode Either move to a location where the signal is good, or remove obstructions. ❖ Infrastructure Mode Check the signal status from the "Maintenance" menu on the control panel. See p.141 "Displaying the Signal Strength". If the signal is poor, either move to a location where it is good, or remove obstructions.

Possible Cause	Solutions
How is the signal strength when using Bluetooth™?	Try the following: • Check the Wireless Interface Unit and Bluetooth module are installed properly. • Check there are no obstructions between computer and printer. • Change the location of the computer. • Change the location of the printer.
PDF Direct Print is not executed (PDF file is not printed).	You must install an optional hard disk drive or set the value of the [RAM Disk] in the [System Menu] to 2 MB or higher.  Reference See "Hard Disk Drive Type 2600", Setup Guide for optional hard disk drive installation.
	When printing a PDF with a password set, set the password of the PDF file using the [PDF: Change PW] menu in [PDF Menu] or Web Image Monitor.  Reference For [PDF: Change PW], see the p.169 "PDF Menu". For Web Image Monitor, see Help.
	Due to the security setting of the PDF file, when [Printing] under [Do not Allow] of a PDF file is checked, the file cannot be printed. Perform printing after unchecking the [Printing] of [Do not Allow].
As a result of printing using PDF Direct Printing, characters are missing or misshapen.	Before printing, embed the font in the PDF file to be printed.

 Note

- ☐ If you cannot solve the problem by taking the preceding actions, contact your sales or service representative.

Other Printing Problems

Status	Possible Causes, Descriptions, and Solutions
The print side of the page is a hazy gray.	Adjust the Image Density. See p.119 "Making Printer Settings with the Control Panel".
	If paper is curled, correct it.
	If you continuously print data that contains extremely small amount of words or images in the printable area, the printed side of the page could be a hazy gray. Adjust the Image Density. See p.119 "Making Printer Settings with the Control Panel".
	Shaking the toner cartridge after pulling out the toner seal can cause dirt on paper surfaces, toner spillage, or printer failure. If you have accidentally shaken the toner cartridge, print some pages (about 50 pages) until the dirt disappear.
The paper's reverse side is dirty.	Paper loaded in the Paper Tray or Paper Feed Unit may not match the paper size dial setting. Set the paper size dial so it matches the size and feed direction of the paper in the tray. See p.47 "Loading Paper in the Paper Tray". The size and feed direction of paper in the Bypass Tray may not match the control panel settings. Check the control panel settings so they match the size and feed direction of the paper in the tray. See p.50 "Loading Paper in the Bypass Tray".
	The next sheet of paper printed may have a dirtied reverse side if the data size is larger than the paper being printed onto, such as A4 data onto B5 paper.
Image quality varies when printing on Thick Paper or on OHP transparencies.	Switch to Thick Paper mode. - When toner is not fused enough, set it to "On". - When the image is blurred, set it to "----". See p.119 "Making Printer Settings with the Control Panel".
Some parts of the print image are not clear.	Make the Image Density darker. See p.119 "Making Printer Settings with the Control Panel".
	If Toner Saving mode is selected using the control panel, the whole image gets lighter.
The print image is not clear.	Due to a sudden change in temperature, condensation might appear inside the printer, reducing print quality. If this occurs, when you move the printer from a cold room to a warmer room, do not use the printer until it acclimatizes to the temperature.

Status	Possible Causes, Descriptions, and Solutions
Nothing is printed on the paper.	Check if the tape of the toner cartridge is completely removed. Be sure to remove the tape completely when replacing the toner cartridge. See p.107 "Replacing the Toner Cartridge".  Note ☐ If the power switch is turned on with the tape still attached to the toner cartridge, the printer might be damaged.
Multiple pages are fed through the printer at once.	Clean the friction pad if it is dirty. See p.110 "Cleaning the Friction Pad".
	Remove all paper from the tray and fan it gently to get air between the sheets. After that, load it back into the tray.
The image is printed on the reverse side of the paper.	Set the paper the other way up.
Paper misfeeds occur frequently.	Check the paper size settings. The size set with the paper size dial might be different from the actual paper size. Make the correct dial setting. See p.47 "Loading Paper and Other Media".
	Use the recommended paper. Avoid using curled, folded, wrinkled, perforated or glossy paper. See p.44 "Paper not supported by this printer".
	Clean the paper feed roller, friction pad and/or Registration roller, if they are dirty. See p.111 "Cleaning the Paper Feed Roller".
	Thin paper, if printed on both sides, may curl up at the corners and get wrinkled and clogged. Select [Curl Prevention] [ON] from the [Maintenance] menu.
The control panel error message stays on after removing the misfed paper.	Open the front cover of the printer and then close it. See p.97 "Removing Misfed Paper".
Output are not delivered to the selected tray you require.	Check the paper size settings. The size selected with the paper size dial might be different from the actual paper size. Make the correct dial setting. See p.47 "Loading Paper and Other Media".
	When using the Bypass Tray, set the paper size using the control panel. See p.47 "Loading Paper and Other Media".
	When you are using a Windows operating system, the printer driver settings override those set using the control panel. Set the desired Output Tray using the printer driver. See the driver's online Help file.
The printed image is different from the image on the computer.	When you use some functions, such as enlargement and reduction, the layout of the image might be different from that shown in the computer display.

Status	Possible Causes, Descriptions, and Solutions
It takes too much time to resume printing.	The data is so large or complex that it takes time to process it. If the Data In indicator is blinking, the data processing is being done. Just wait until it resumes.
	Changing the paper feed direction may sometimes reduce the time to resume printing.
The image is printed in the wrong Orientation.	Set the correct Orientation under the "PCL Menu" with the control panel. See p.162 "PCL Menu".
	Confirm that the setting of Orientation has been set in the application you use.
	Set the correct paper size and feed direction that matches tray settings on the RPCS printer driver.
Part of the image cannot be printed.	A paper size which is smaller than that selected in the application is used for printing. Load the correct size of paper.
Network configurations you have made do not become effective.	Print a configuration page and check the network settings.
No e-mail is received when an Alert occurs, and after resolving an Alert.	Confirm [Notify by E-Mail] is [On] using the System Menu on the Control Panel. See p.146 "System Menu".
	Access the printer through the Web Browser, log on as an Administrator on the Web Image Monitor, and then confirm the following settings in [Notification] : • Device E-mail Address • Groups to Notify • Select Groups/Items to Notify See Web Image Monitor Help for details about the settings.
	Access the printer through the Web Browser, log on as an Administrator on the Web Image Monitor, and then confirm the settings of the SMTP server in [E-mail] . See Web Image Monitor Help for details about the settings.
	When the power is turned off before the e-mail is transmitted, the e-mail will not be received.
	Check the e-mail address set for the destination. Confirm the printer's operation history using the Web Image Monitor's System Log menu in [Network] . If the e-mail was sent but not received, it is possible the destination was incorrect. Also check the information concerning error mail from the e-mail server.
The setting for [Notify by E-Mail] on the System Menu was changed from [Off] to [On] , but e-mail is not arriving.	After changing the setting, turn the main unit's power off and then back on again.

Status	Possible Causes, Descriptions, and Solutions
Error notification e-mail was received, but no error-solved e-mail is received.	Check e-mail is set for sending using the Web Image Monitor's [Notification] at the time the error was fixed. You must click the [Edit] button of [Detailed Settings of Each Item] in [Notification] , and set [Notify when Error] to [Occurs & Fixed] on the displayed screen. See of the Web Image Monitor Help for details about the settings.
Alert Resolving is set for sending e-mail, but no Alert-resolved e-mail is sent.	If the power of the main unit is turned off after an Alert occurs, the Alert is resolved during the time the power is off: no Alert-resolved e-mail is sent.
Alert Occurrence and Alert Resolving are set for sending e-mail, but while no Alert Occurrence mail is received, Alert-resolved e-mail is received.s	Alert-notification e-mail is not sent if the problem is resolved before sending. However, an Alert-resolved e-mail is sent.
Alert-notification level was changed, and e-mail stopped arriving.	If an Alert-notification e-mail, set with the easlier notification level, arrives, later e-mail will not be sent, even if the notification level is changed after. For example: the toner remaining notification level is 30% and e-mail arrives accordingly, if it is changed to 20%, no e-mail arrives when the toner remaining level reaches 20%. However, once the toner is changed, the new notification level is applied.
When no date information is included in sen e-mail, the mail server has a malfunction.	Make the setting for obtaining time information from the SNTP server. Refer to the Web Image Monitor's Help to the settings.
	When there is no timeserver, set [E-mail Date] to [On] using the Control Panel's [System Menu] s.

 Note

- ☐ If the problem cannot be solved, contact your sales or service representative.

Removing Misfed Paper

When a paper misfeed occurs, an error message appears on the panel display. The procedure you should follow to remove misfed paper depends on the location of the misfeed, which is indicated on the panel display.

⚠ CAUTION:

- *When removing misfed paper, do not touch the fusing section because it becomes very hot.*

⚠ Important


- ☐ Check the following points if paper continues to misfeed.
 - Confirm that the setting of the paper size dial matches the size and feed direction of the paper loaded in the paper tray.
 - If the friction pad or the paper feed roller is dirty, clean it. For more information, see p.110 “Cleaning the Friction Pad”.
 - Confirm that the toner cartridge is set correctly.
- ☐ If a paper misfeed still occurs, contact your sales or service representative.
- ☐ Forcefully removing misfed paper may cause paper to tear and leave scraps of paper in the printer.
- ☐ Do not leave any scraps of paper in the printer.

When “Remove Misfeed Paper Tray” Appears

⚠ Important


- ☐ Forcefully removing misfed paper may cause paper to tear and leave scraps of paper in the printer. This might cause a misfeed and damage the printer.

- 1** Pull out the paper tray until it stops, and then remove misfed paper.

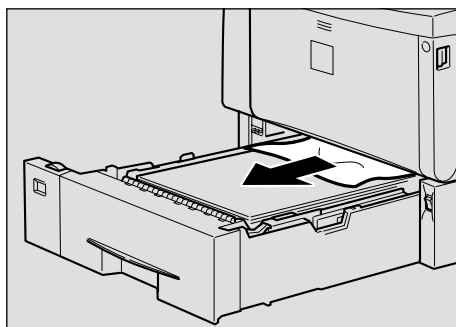


ZKEY280E

- 2 Carefully slide the paper tray into the printer until it stops.

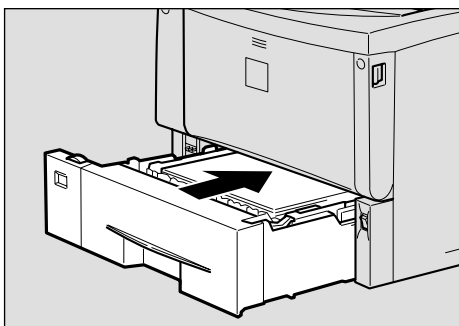

ZKEY290E

- 3 While holding the front cover with both hands on the left and right sides, press the release button to open it. Then clear the misfeed condition by closing it, pressing the left and right side indentations.

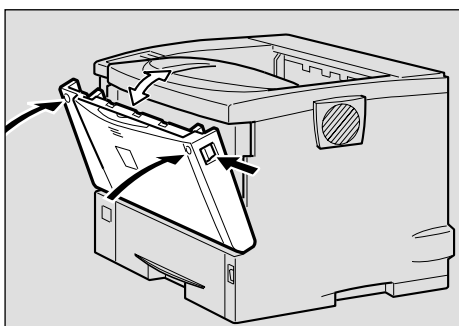

ZKEY300E

Note


- ☐ You can apply this procedure for both the paper tray and the optional Paper Feed Unit.
- ☐ To reset the misfeed condition, open and close the front cover, then the indicator will be off.

When "Remove Misfeed Internal Path/Open Front Cover" Appears

Important

- ☐ Forcefully removing misfed paper may cause paper to tear and leave scraps of paper in the printer. This might cause a misfeed and damage the printer.

- 1 While holding the front cover with both hands on the left and right sides, press the release button to open it.

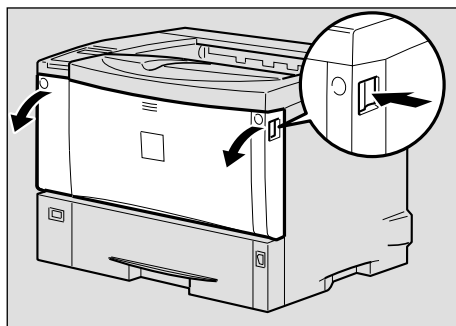


ZKEH120E

- 2 While lifting the front side of the toner cartridge, pull it out of the printer.


Important

- ☐ Be sure to put the toner cartridge on a stable, flat surface.
- ☐ Do not hold the toner cartridge upside down or stand it vertically.

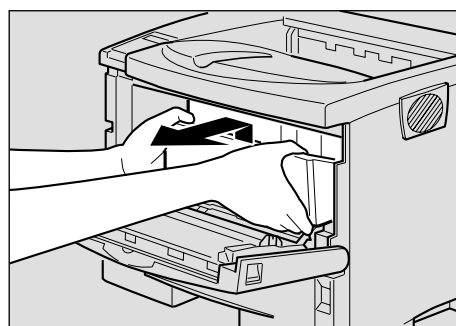


ZKET110E


- 3** Pull out the misfed paper by holding both sides of paper. Be careful not to get toner dust on your hands or clothes.

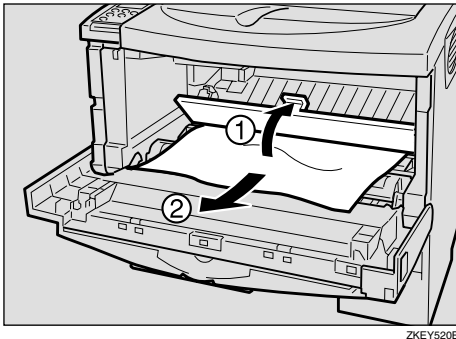


- 4** Holding the grips of the toner cartridge, insert it into the printer until it stops.

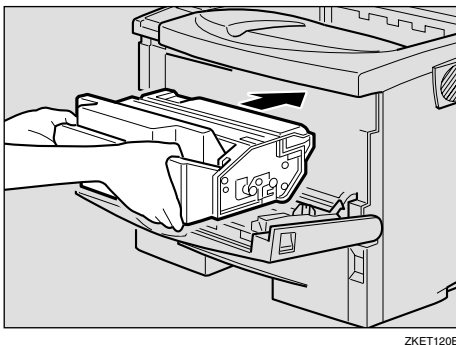

- 5** Lower the toner cartridge when it makes contact in the back.

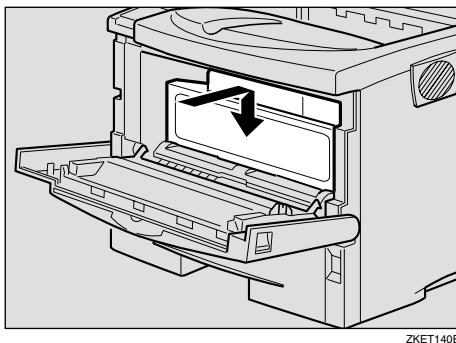

- 6** Close the front cover by pressing the left and right side indentations.

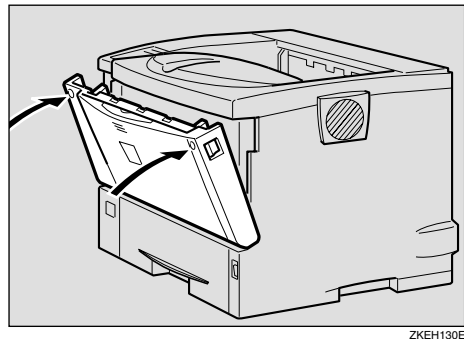

Important

- ❑ If paper is fed from the Bypass Tray, be sure to remove all the paper from the Bypass Tray and close it before opening the front cover.

When "Remove Misfeed Paper Exit Cover" Appears


CAUTION:

- When removing misfed paper, do not touch the fusing section because it becomes very hot.
- The fusing unit becomes very hot. When installing the new fusing unit, turn off the printer and wait about an hour. After that, install the new fusing unit. Not waiting for the unit to cool down can result in a burn.

Important


- ❑ Forcefully removing misfed paper may cause paper to tear and leave scraps of paper in the printer. This might cause a misfeed and damage the printer.

- 1** While holding the front cover with both hands on the left and right sides, press the release button to open it.

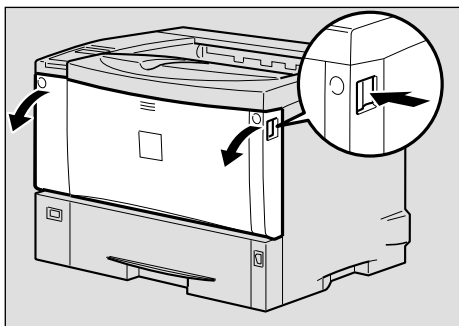

ZKEH120E

- 3** Pull out the misfed paper by holding both sides of paper. Be careful not to get toner dust on your hands or clothes.

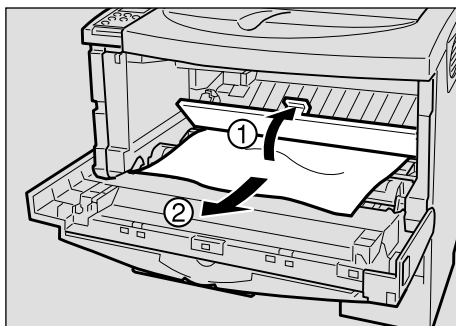


ZKEY520E

- 2** While lifting the front side of the toner cartridge, pull it out of the printer.

5


Important

- ☐ Be sure to put the toner cartridge on a stable, flat surface.
- ☐ Do not hold the toner cartridge upside down or stand it vertically.

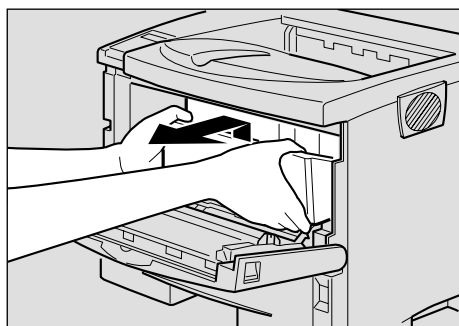


ZKET110E

- 4** Holding the grips of the toner cartridge, insert it into the printer until it stops.

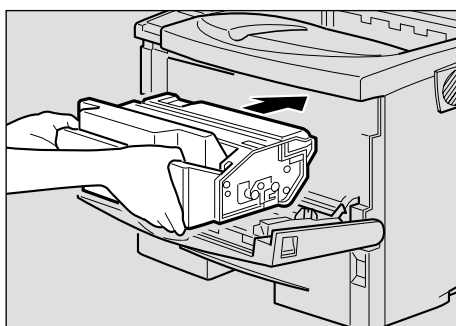


ZKET120E

- 5** Lower the toner cartridge when it makes contact in the back.

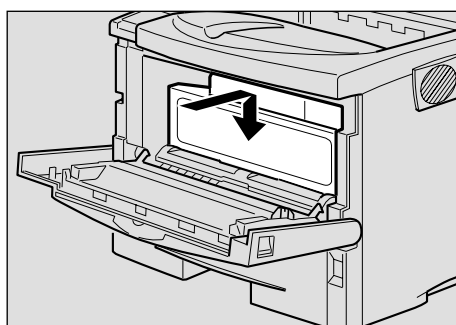

ZKET140E

- 6** Close the front cover by pressing the left and right side indentations.

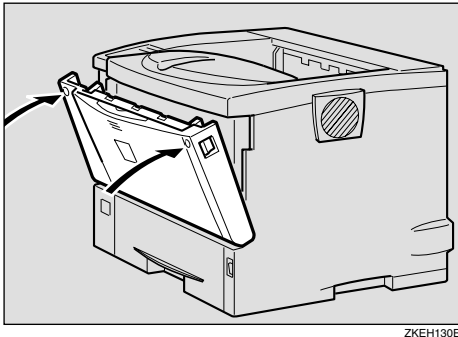


Important


- ❑ If paper is fed from the Bypass Tray, be sure to remove all the paper from the Bypass Tray and close it before opening the front cover.

- 7** If you cannot see the misfed paper, open the paper exit cover.


Place your finger under the indentation in the exit cover, raise it (①) and pull it backward to open it (②).

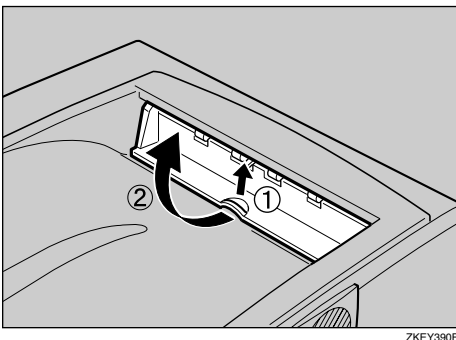


- 8** Remove the misfed paper.

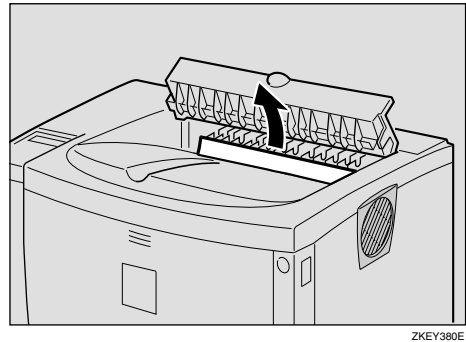


- 9** Close the paper exit cover until it clicks.

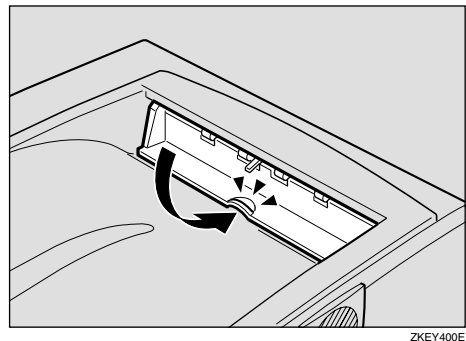

- 10** While holding the front cover with both hands on the left and right sides, press the release button to open it.

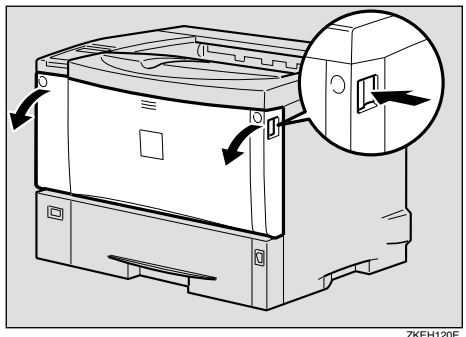

- 11** Close the front cover by pressing the left and right side indentations.

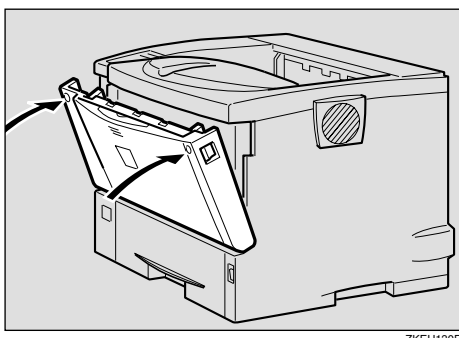

ZKEH130E

Note


- ☐ Once all misfed paper is removed, the error message will disappear and printing will continue.
- ☐ Proceed to step 12 if the error message fails to disappear.

- 12** If the error message is still displayed, check the inside of the fusing unit and remove any paper inside. Turn off the power and wait for about an hour before turning it back on.

Note


- ☐ Proceed to step 3 if the optional Duplex Unit is installed.

- 1** Place a finger in the printer's rear cover finger hole (upper center) and pull it open.

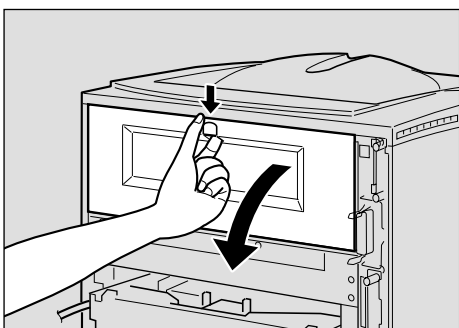


ZKEX670E

- 2** Remove the rear cover horizontally. Proceed to step 13.

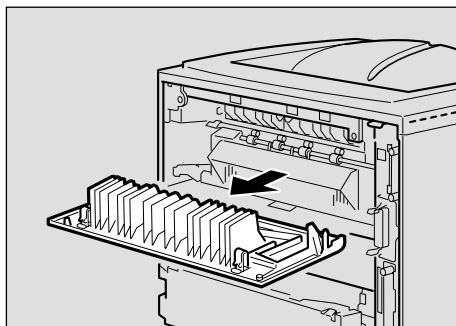


ZKEX680E

- 3** Push down the lever on right side of the Duplex Unit (1) and pull it out until it stops (2).

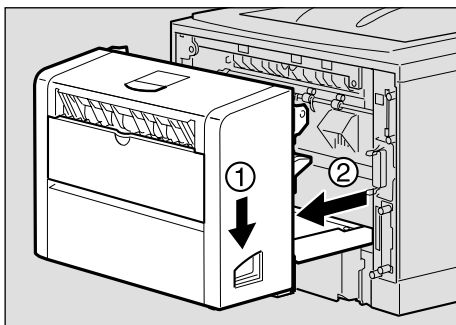


ZKEX760E

- 4** Push the under board levers (1) and pull the Duplex Unit out of the printer (2).

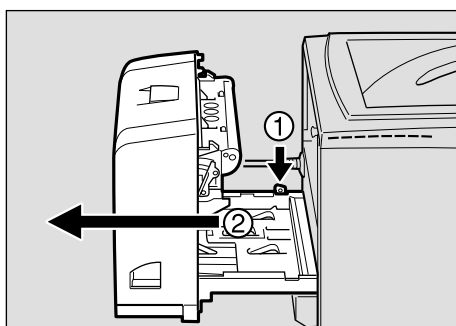


ZKEY450E

- 13** Lift the lock levers of the fusing unit as shown in the illustration.

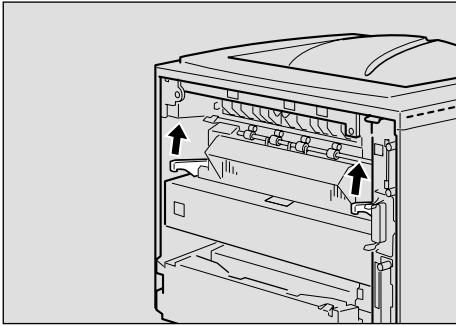


ZKEX222E

- 16** Insert the fusing unit until it stops.

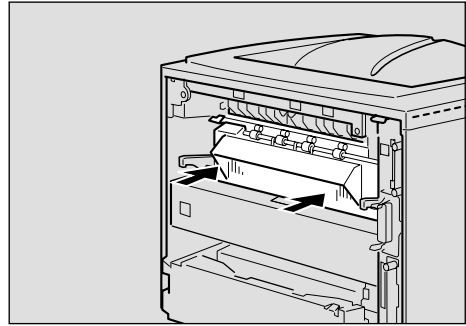


ZKEX224E

- 14** Pull the fusing unit out.

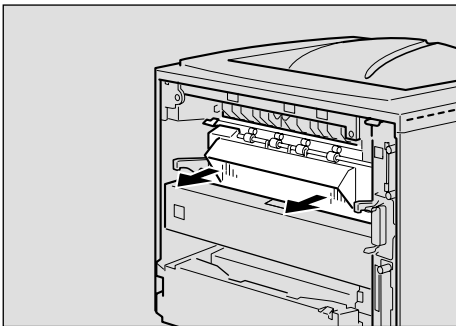


ZKEX223E

- 17** Push the lock levers of the fusing unit down until it clicks.

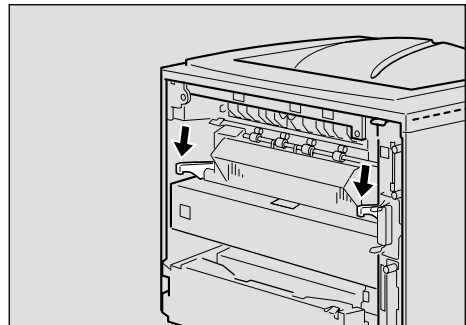

ZKEX225E

- 15** While holding the tab, remove the misfed paper.

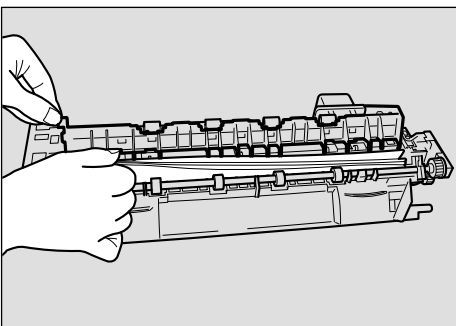


ZKEY410E

Note

- ☐ Proceed to step 20 if the optional Duplex Unit is installed.

- 18** Insert the rear cover to the inside grooves on both sides of the printer in a horizontal direction.

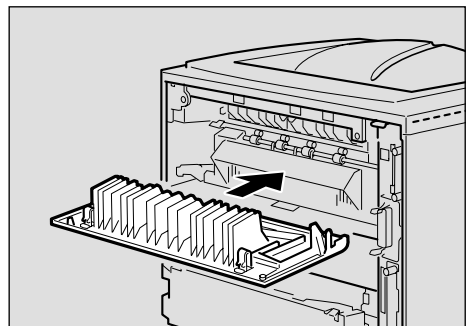


ZKEX221E

Important


- ☐ Do not touch the metal part of the fusing unit. It becomes very hot. Touching it could result in a burn.

- 19** Close the rear cover. Proceed to step **22**.

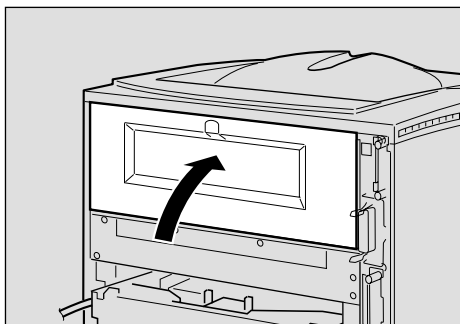


ZKEX211E

- 20** Push in the Duplex Unit along the rails in the back of the printer.

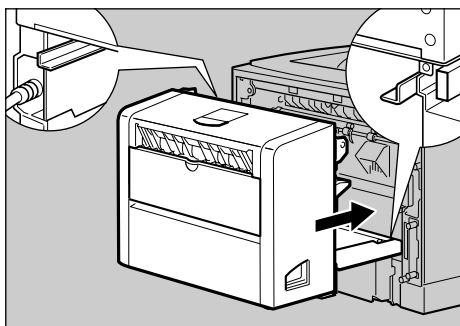

ZKEX231E

- 21** Securely push the Duplex Unit into the printer.

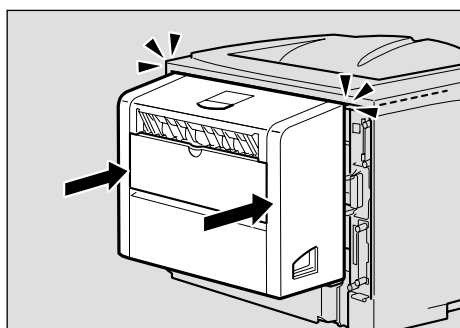

ZKEX690E

- 22** Turn the power on.

When "Remove Misfeed Duplex Unit" Appears

⚠ CAUTION:


- When removing misfed paper, do not touch the fusing section because it becomes very hot.

❗ Important

- Forcefully removing misfed paper may cause paper to tear and leave scraps of paper in the Duplex Unit. This might cause a misfeed and damage the printer.


- 1** Remove the misfed paper inside of the cover.

- ①** Open the rear cover of the Duplex Unit.

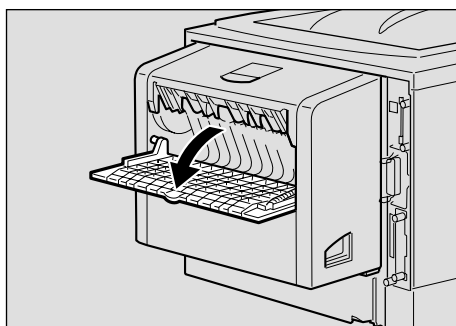


ZKEY310E

- ②** Remove the misfed paper.

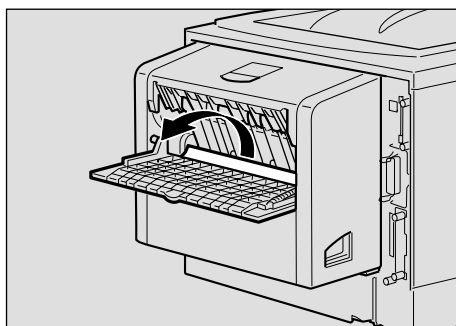


ZKEY320E

- 3** Close the rear cover of the Duplex Unit.

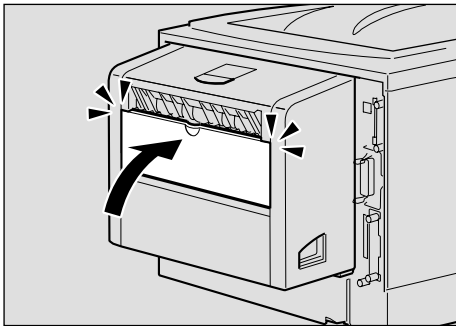


ZKEY330E

- 4** While lifting the lever (①), open the cover of the Duplex Unit (②).

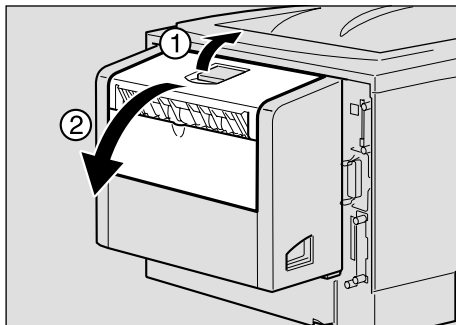

ZKEY340E


- 5** Remove the misfed paper.

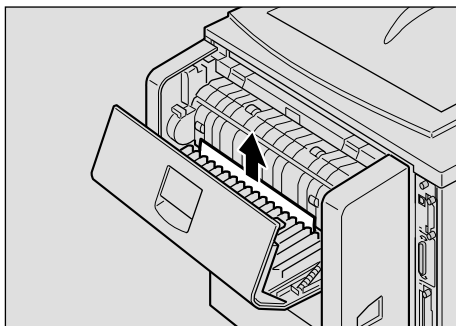

ZKEY350E

- 6** Close the cover of the Duplex Unit.


If the error message appears again, go to step 2.

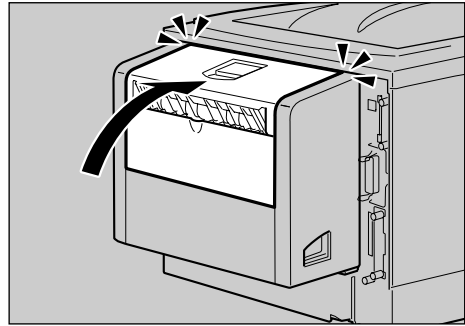

ZKEY360E


- 2** Pull the Duplex Unit out of the printer until it stops, and remove the misfed paper.

- 1** Push down the lever on the right side of the Duplex Unit (①) and pull it out until it stops (②).

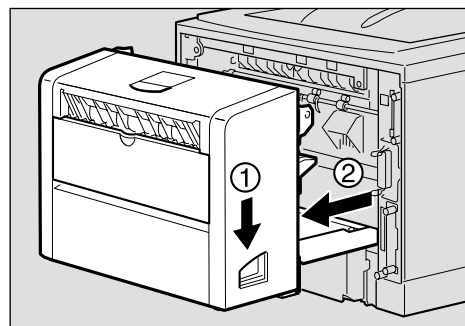

ZKEY60E

- 2** Lift the guide board inside the Duplex Unit, and remove the misfed paper.

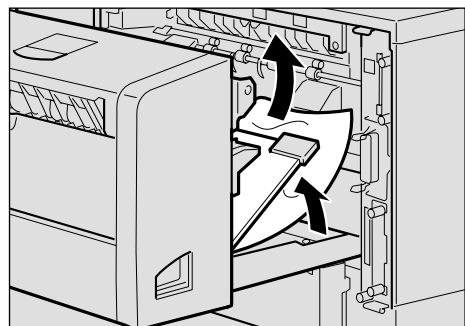


ZKEY440E

Important

- ❑ When A5 paper misfeeds, you might not be able to remove it by pulling the Duplex Unit out. In this case, pull the paper tray out and remove the paper.

- ③ While aligning the power cord with the groove of the left slide of the Duplex Unit, insert the Duplex Unit into back of the printer aligning the rails inside of the printer until it is connected.

If the error message appears again, the misfed paper might be left in the printer. Confirm that any torn paper scraps are not in the inside of the printer. For more information, see p.98 "When "Remove Misfeed Internal Path/Open Front Cover" Appears".

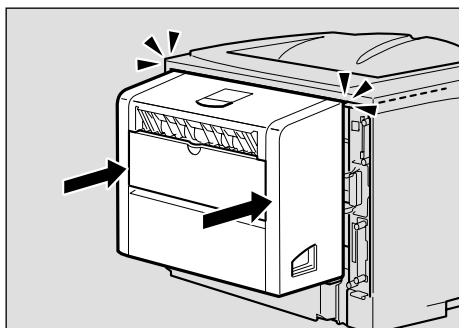

ZKEX690E

Replacing the Toner Cartridge

⚠ WARNING:

- **Do not incinerate spilled toner or used toner. Toner dust might ignite when exposed to an open flame.**
- **Disposal can take place at our authorized dealer or at appropriate collection sites.**
- **If you dispose the used toner cartridges yourself, dispose of them according to your local regulations.**

⚠ CAUTION:

- *The inside of the machine could be very hot. Do not touch the parts with a label indicating "⚠" (means hot surface). Touching "⚠" (means hot surface) could result in a burn.*
- *Do not eat or swallow toner.*
- *Keep toner (used or unused) and toner cartridges out of reach of children.*
- *Our products are engineered to meet the highest standards of quality and functionality. When purchasing expendable supplies, we recommend using Only those specified by an authorized dealer.*

When "Replace Toner Cartridge" appears on the panel display, the toner is almost empty. Prepare a new toner cartridge. If the Image Density gets too light, replace the toner cartridge with a new one.


⚠ Important

- ❑ Do not expose the toner cartridge to light for a long time. Do not leave the front cover open for a long time. If the toner cartridge is exposed to a light for a long time, the toner cartridge might be damaged and print quality might be reduced.

📌 Note

- ❑ Do not stand or place the toner cartridge upside-down.
- ❑ The actual number of printed pages you get from a particular toner cartridge depends on the type and size of paper you are using, the contents of the print images, and printing environment conditions. All this means that a toner cartridge might require replacement sooner than the normal life described on p.198 "Consumables".

- 1** While holding the front cover with both hands on the left and right sides, press the release button to open it.

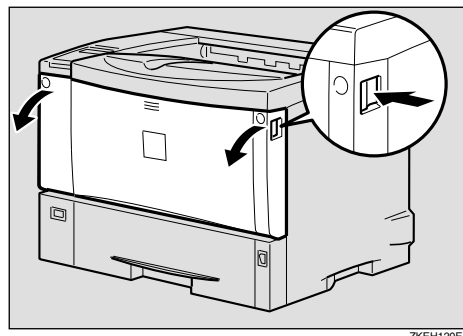


ZKEH120E

- 2** Be sure to put the toner cartridge on a stable, flat surface.


Note

- ☐ Do not put the toner cartridge on an unstable or tilted surface.

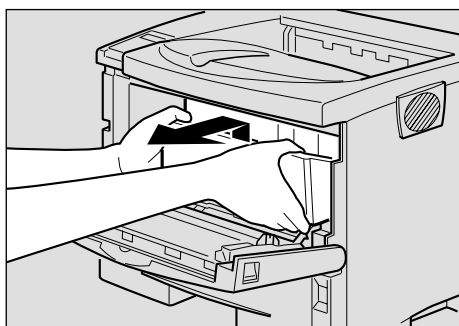

ZKET110E


- 5** Place the toner cartridge on a flat surface. Pull out the tape inside the unit horizontally while holding the cartridge with one hand as shown in the illustration.

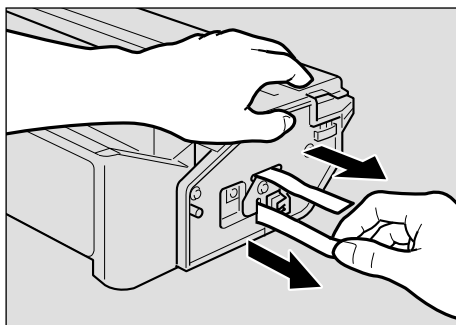

ZKET151E

5

- 3** Wipe around the metallic Registration roller by turning with a soft damp cloth.

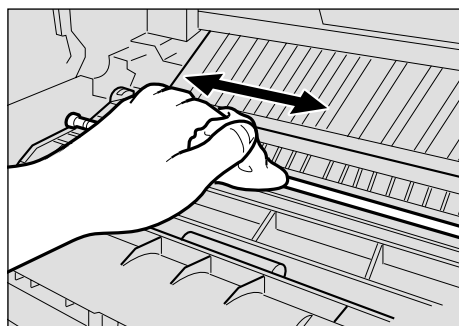

ZKEX461E

Important


- ☐ Do not use chemical cleaner or organic solvent such as thinner or benzene.

- 4** Take the new toner cartridge from the box.

Note


- ☐ Be sure to remove the tape completely before installing the new toner cartridge, otherwise the printer might be damaged.
- ☐ Keep the toner cartridge horizontal when pulling out the toner seal. Pulling out the toner seal with the cartridge upright or tilted can cause printer failure.
- ☐ Be careful not to get toner dust on your hands or clothes.
- ☐ Do not shake or shock the toner cartridge after pulling out the toner seal to avoid dirt on paper surfaces, toner spillage, or printer failure.

- 6** Holding the grips of the cartridge, insert it into the printer until it stops.

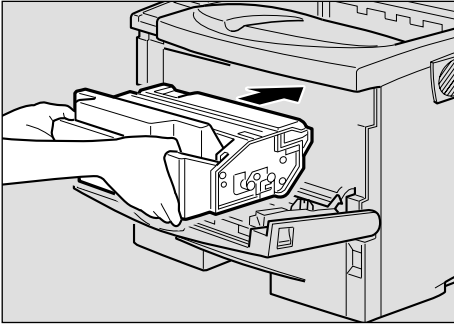


ZKET120E

- 7** Lower the toner cartridge when it touches in the back.

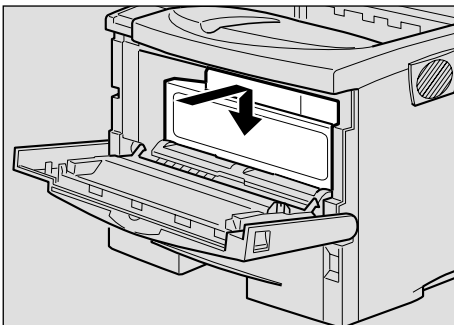

ZKET140E

- 8** Close the front cover by pressing the left and right side indentations.

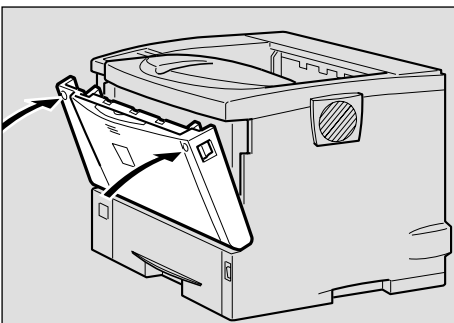

ZKEH130E

Important


- ❑ Do not close the front cover with force. If you cannot close the cover easily, pull out the toner cartridge from the printer and insert it again. After that, close the front cover again.

Cleaning and Adjusting the Printer

Cleaning the Friction Pad


If the friction pad is dirty, a multi-feed or a misfeed might occur. In this case, clean the pad as follows:

- 1** Pull out the paper tray until it stops.

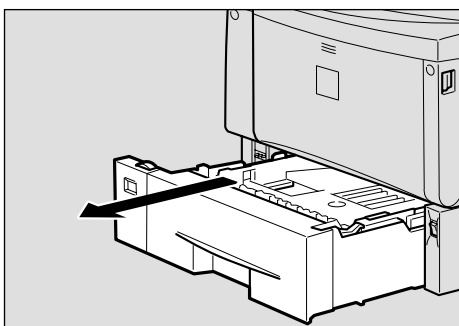

ZKDX270J


- 2** While lifting the front side of the tray, pull it out of the printer.

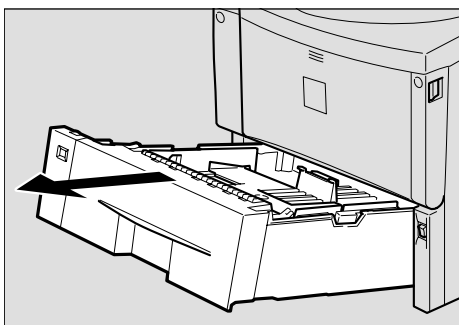

ZKEY140E

- 3** Place the tray on a flat surface. When there is paper in the tray, remove paper.

- 4** Wipe the friction pad with a soft damp cloth. After that, wipe it with a dry cloth to remove the water.

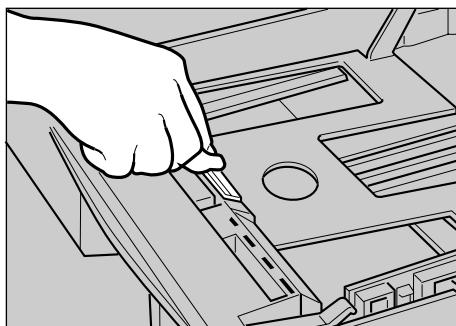


ZKEY700E

Important

- ☐ Do not use chemical cleaner or organic solvent such as thinner or benzene.

- 5** Lift the front of the tray, and slide it carefully into the printer until it stops.

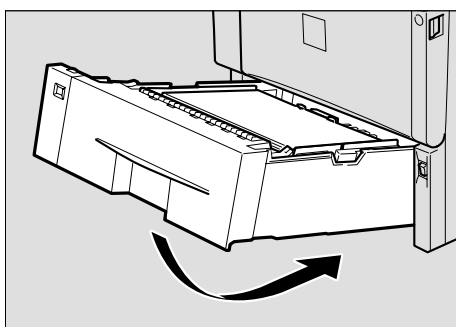

ZKDY150J

Important

- ☐ Do not slide the paper tray in with force. If you do, the front and side guides might move.

Note

- ☐ If misfeeds or multi-feeds of paper occur after cleaning the friction pad, contact your sales or service representative.
- ☐ Follow the same procedure to clean the friction pad of the optional Paper Feed Unit and the Envelope Feeder Unit.

Cleaning the Paper Feed Roller


If the paper feed roller is dirty, a mis-feed might occur. In this case, clean the roller as follows:

CAUTION:

- When lifting the printer, use the grips on both sides of the printer, otherwise the printer might fall and cause personal injury.
- When you move the printer, unplug the power cord from the wall outlet to avoid a fire or an electric shock.
- When you pull out the plug from the socket, grip the plug to avoid damaging the cord and causing a fire or an electric shock.

Note

- ☐ The Paper Feed Unit's Paper Feed Roller can be cleaned in the same manner.

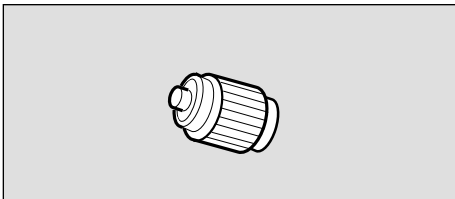


ZKEM200E

- 1** Turn off the power switch.


- 2** Pull out the plug from the socket. Remove all the cables from the printer.

- 3** Pull out the paper tray until it stops.

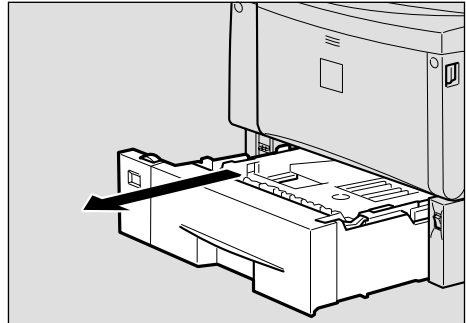


ZKDX270J

- 4** While lifting the front side of the tray, pull it out of the printer.

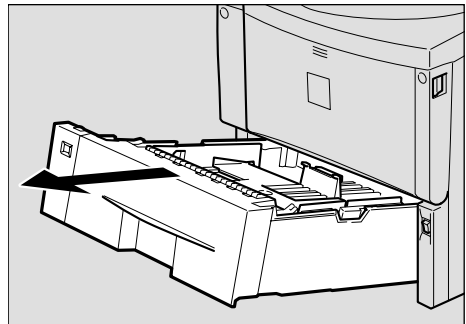

ZKEY140E

- 5** Move the printer to the edge of a stable table or desk.

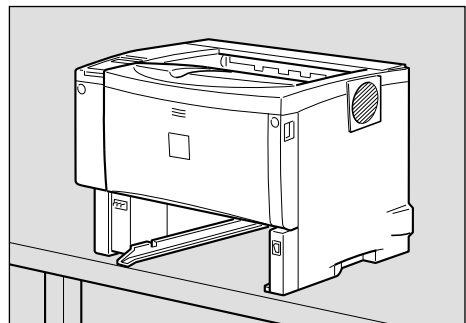


ZKEM110E

❗ Important

- ❑ Do not put the printer on an unstable or tilted surface.
- ❑ If the printer is equipped with the optional Paper Feed Unit, do not move the printer and unit together as they are not securely attached.
- ❑ When lifting the printer, confirm that the optional Paper Feed Unit is not attached to the printer.

- 6** Slide the green lock lever to the left (①), so that the paper feed roller can be released (②).

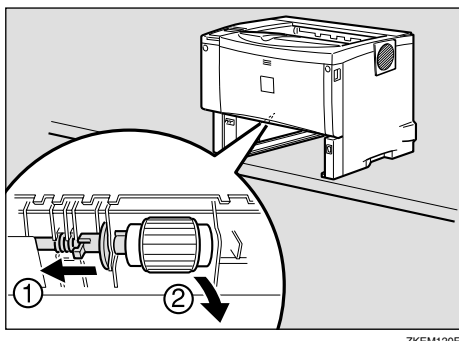


ZKEM120E

- 7** Wipe the rubber part of the roller with a soft damp cloth. After that, wipe it with a dry cloth to remove the water.

❗ Important

- ❑ Do not use chemical cleaner or organic solvent such as thinner or benzene.

- 8** While sliding the green lock lever to the left (①), set the paper feed roller to its original position (②). After that, return the green lock lever to its original position (③).

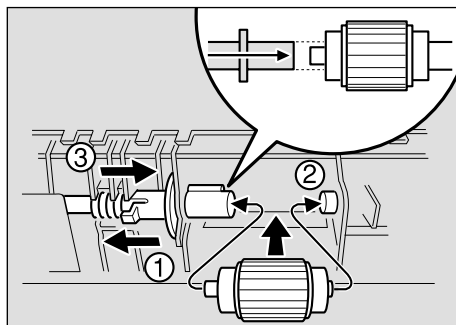


ZKEM130E

📌 Note

- ❑ Confirm that the green lock lever secures the roller correctly by confirming that the roller rotates smoothly.

- 9** Move the printer back to its original position. Lift the front of the tray, and slide it carefully into the printer until it stops.

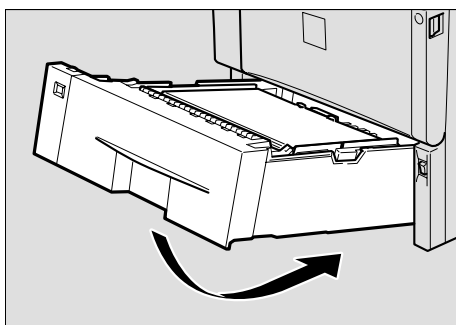

ZKDY150J

❗ Important

- ❑ Do not slide the paper tray in with force. If you do, the front and side guides might move.

- 10** Insert the plug of the power cord into the wall socket securely. Connect all the cables that were removed in step 2.

1 Turn on the power switch.

Note

- ❑ Follow the same procedure to clean the paper feed roller of the optional Paper Feed Unit.

Cleaning the Registration Roller

If the Registration roller is dirty, a misfeed might occur. In this case, clean the roller as follows:

⚠ WARNING:


- **Be sure to turn off the power switch and wait for about 15 minutes before cleaning the Registration roller. Not waiting for the printer to cool down can result in a burn.**

⚠ CAUTION:

- The inside of the machine could be very hot. Do not touch the parts with a label indicating "⚠" (means hot surface). Touching "⚠" (means hot surface) could result in a burn.

1 Turn off the power switch.


2 While holding the front cover with both hands on the left and right sides, press the release button to open it.

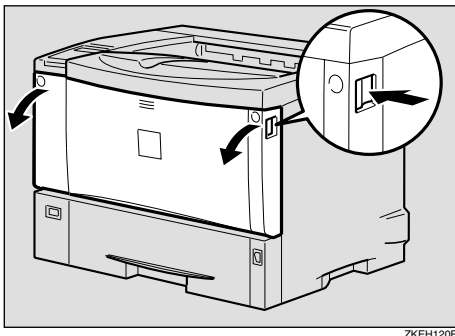


3 Pull the toner cartridge out of the printer by holding the grips of the cartridge.

Note

- ❑ Do not hold the toner cartridge upside down or stand it vertically.
- ❑ Do not put the toner cartridge on an unstable or tilted surface.

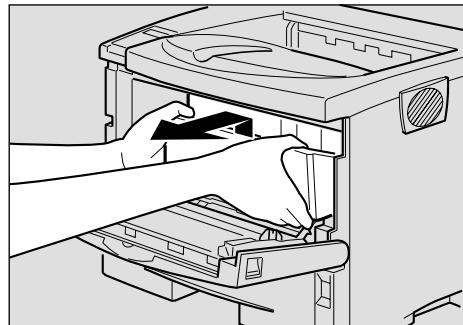


4 Wipe around the metallic Registration roller by turning with a soft damp cloth.

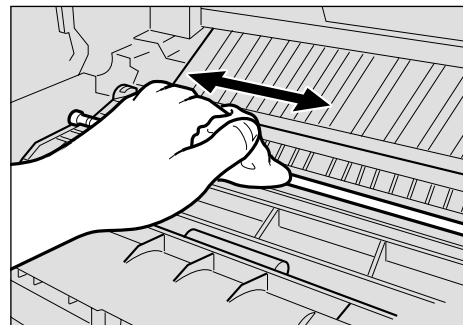

⚠ Important


- ❑ Do not use chemical cleaner or organic solvent such as thinner or benzene.

- 5** Holding the grips of the toner cartridge, insert it into the printer until it stops.

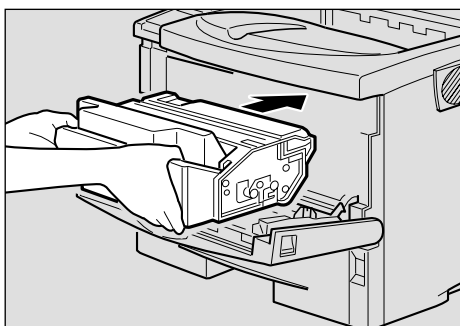


ZKET120E

- 6** Push down the toner cartridge to settle it in appropriate position.

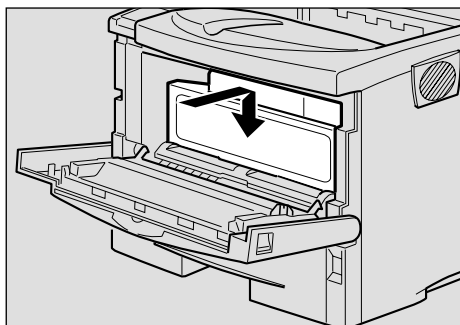

ZKET140E

- 7** Close the front cover by pressing the left and right side indentations.

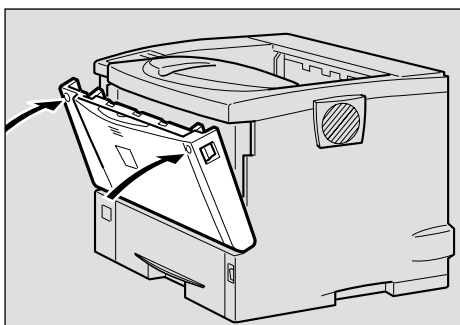

ZKEH130E

Important

- ☐ Carefully close the front cover. If you cannot close the cover easily, pull the toner cartridge out of the printer and insert it again. After that, close the front cover again.

- 8** Turn on the power switch.


Adjusting the Image Density

You can adjust the Image Density when the print side of the page is a shaded or print image is too light.

Important

- ☐ Extreme settings may create print-outs that appear dirty.
- ☐ Image Density settings should be made from the application or the printer driver whenever possible.


- 1** Press [Menu].

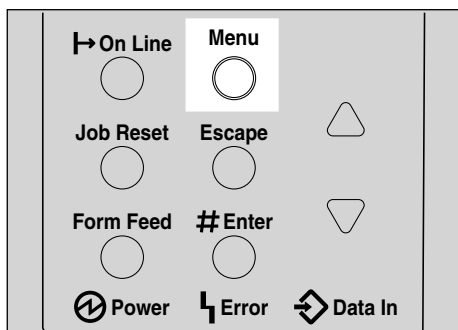

ZKEP020E

"Menu" appears on the panel display.

- 2** Press **[▲]** or **[▼]** to display the "Maintenance" menu, and then press **[Enter #]**.

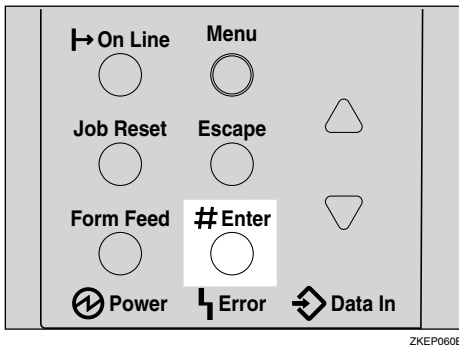

The following message appears on the panel display.

```
Maintenance:
Image Density
```

- 3** Press **[Enter #]**.

```
Image Density:
(-3 +3)      0
```


- 4** Press **[▲]** or **[▼]** to set the Image Density value.

Note

- ☐ To maintain a darker image under high volume printing conditions, we highly recommended that you select 3 from the control panel.
- ☐ You can adjust the Image Density in seven steps from -3 to +3. Increasing the value makes the printouts darker and decreasing the value makes the printouts lighter.

- 5** Press **[Enter #]**.

- 6** Press **[On Line]**.

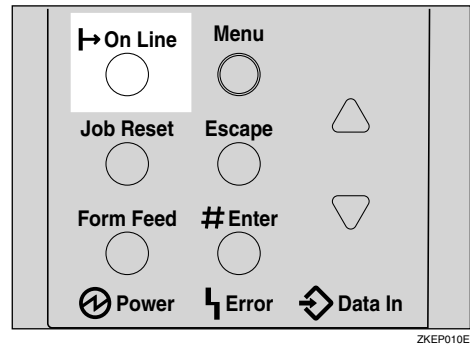

"Ready" appears on the panel display.


```
Ready
```

Adjusting the Registration of the Trays

You can adjust the Registration of each tray. The vertical adjustment is used for all trays. Normally, you need not update the Registration. But when the optional Paper Feed Unit or the Duplex Unit is installed, updating the Registration is useful in some case.


The following procedure describes how to adjust Tray 1. You can use the same procedure to adjust the other tray as well.

- 1** Press **[Menu]**.

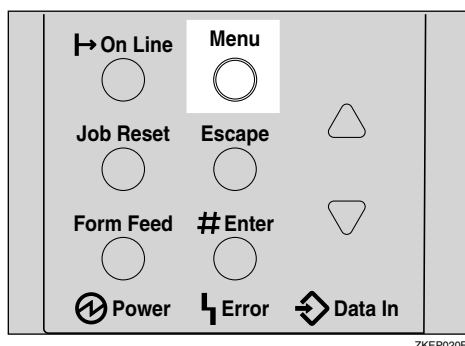


"Menu" appears on the panel display.

- 2** Press **[▲]** or **[▼]** to display the "Maintenance" menu, and then press **[Enter #]**.

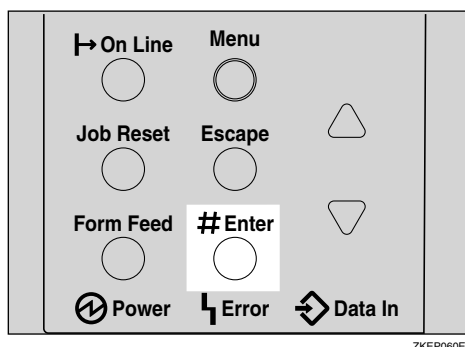


- 3** Press **[▲]** or **[▼]** to display "Registration", and then press **[Enter #]**.

 The following message appears on the panel display.




- 4** Print the test sheet to preview the settings you have made.

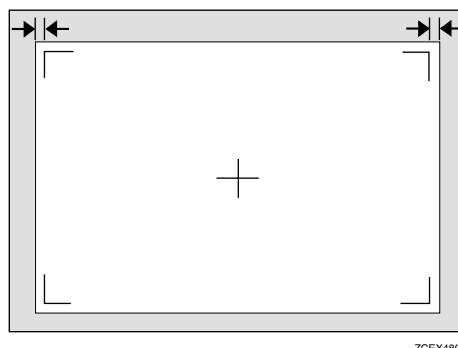


- 1** After confirming that "Prt. Test Sheet" is on the panel display, press **[Enter #]**.

 The following message appears on the panel display.



- 2** Press **[▲]** or **[▼]** to display the tray you want to adjust, and then press **[Enter #]** to print the test sheet. Wait for a few seconds.

 The following message appears on the panel display.



- 5** Adjust the Registration by confirming the position of the printed image of the test sheet.

The following is an example of adjusting the margin on the test sheet equally.

- 1** Press **[▲]** or **[▼]** to display "Adjustment", and then press **[Enter #]**.

The following message appears on the panel display.


```
Adjustment:
  Horiz.: Tray 1
```

- 2** Press **[▲]** or **[▼]** to display the tray you want to adjust, and then press **[Enter #]**.

The following message appears on the panel display.

```
Horiz.: Tray 1
(-4.0 +4.0) 0.0
```

- 3** Press **[▲]** or **[▼]** to set the digit of the Registration value (mm).

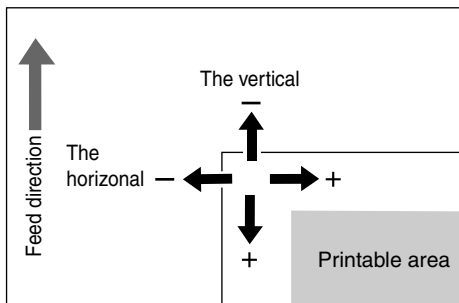

TS3X001N

Note


- ☐ Increase the value to shift the print area to the positive direction, and decrease to shift to the negative direction.
- ☐ Pressing **[▲]** or **[▼]** makes the value increase or decrease by 0.5 mm step.

- 4** Press **[OK]**.

- 6** Print the test sheet to check the settings you have made.

- 7** Repeat steps **3** and **4** to adjust the Registration if necessary.

- 8** Press **[On Line]**.

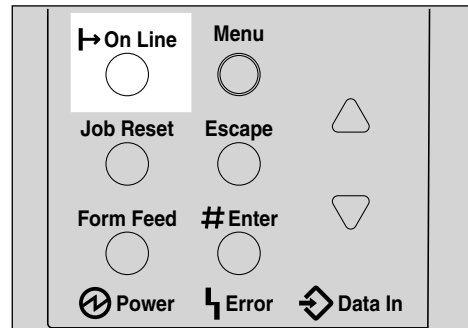

ZKEP010E

"Ready" appears on the panel display.

```
Ready
```


6. Making Printer Settings with the Control Panel

Menu Chart

This section describes how to change the default settings of the printer and provides information on the parameters included in each menu. Some items in the menu appear Only when certain options are installed.

Category	Function menu
Sample Print *1 ⇒ p.61	Select Action / Error File(s)
Locked Print *1 ⇒ p.66	Select Action / Error File(s)
Paper Input⇒ p.124	Bypass Size
	Tray Paper Size
	Paper Type
	Tray Locking
	Tray Priority
List/Test Print⇒ p.128	Config.P/Er.log
	Config. Page
	Error Log
	Menu List
	PS Font List
	PCL Config.Page
	PDF Config.Page
	Hex Dump
Maintenance⇒ p.134	Image Density
	Registration
	Curl Prevention
	HDD Format
	WL.LAN Signal *2
	WL.LAN Defaults *2
	Key Repeat
	Menu Protect *3
	Ppr.Size Errors *3


Category	Function menu
System⇒ p.146	Prt. Err Report
	Auto Continue
	Memory Overflow
	Copies
	Printer Lang.
	Sub Paper Size
	Page Size
	Edge-Edge Print
	Def.Print Lang.
	Duplex ^{*4}
	Energy Saver
	Memory Usage
	Unit of Measure
	Edge Smoothing
	Toner Saving
	Spool Printing
	Letterhead Mode
	RAM Disk
	Notify by E-Mail
	E-Mail Date ^{*3}
Host Interface⇒ p.154	I/O Buffer
	I/O Timeout
	Network Setup
	IEEE 1394 Setup ^{*5}
	IEEE 802.11b ^{*6}
	USB Setting ^{*3}
	Bluetooth ^{*7}

Category	Function menu
PCL Menu⇒ p.162	Orientation
	Form Lines
	Font Source
	Font Number
	Point Size
	Font Pitch
	Symbol Set
	Courier Font
	Ext. A4 Width
	Append CR to LF
	Resolution
PS Menu	Data Format
	Resolution
PDF Menu	PDF: Change PW
	Resolution
Language⇒ p.172	

- *1 The "Sample Print" menu and the "Locked Print" menu appear Only when the optional Hard Disk Drive is installed.
- *2 The "WL.LAN Signal" menu appears Only when "IEEE 802.11b" is selected in "LAN Type" in the Host Interface menu.
- *3 While the printer is **On Line**, press **[Enter #]**, and then press **[Escape]**. Finally, press **[Menu]**. You can access the "Menu Protect", "Series Prnt.Job", "Ppr.Size Errors", "E-Mail Date", and "USB Setting" on the panel display.
- *4 The "Duplex" menu appears Only when the optional Duplex Unit is installed.
- *5 The "IEEE 1394 Setup" menu appears Only when the optional 1394 Interface Unit is installed.
- *6 The "IEEE 802.11b" menu appears Only when the optional 802.11b Interface Unit is installed.
- *7 The "Bluetooth" menu appears Only when the optional Bluetooth Interface Unit is installed.

Accessing the Main Menu

Press **[Menu]**, and “Menu” appears on the panel display.

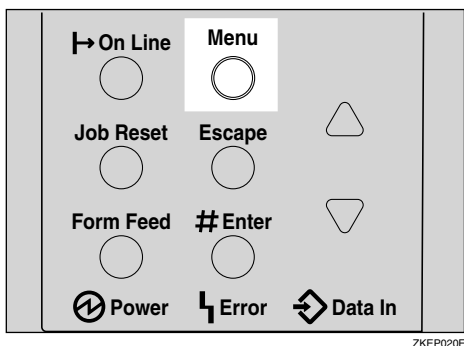


This menu shows the following nine items which can be displayed one by one pressing **[▲]** or **[▼]**.

- Sample Print
- Locked Print
- Paper Input
- List/Test Print
- Maintenance
- System
- Host Interface
- PCL Menu
- PS Menu
- PDF Menu
- Language


Note

- ☐ "Sample Print" and "Locked Print" appear Only when the optional Hard Disk Drive is installed.
- ☐ **[▼]**: Press to go to the next page.
- ☐ **[▲]**: Press to go back to the previous page.

- ❑ After making the printer settings, be sure to return to the previous menu by pressing **[Escape]**.

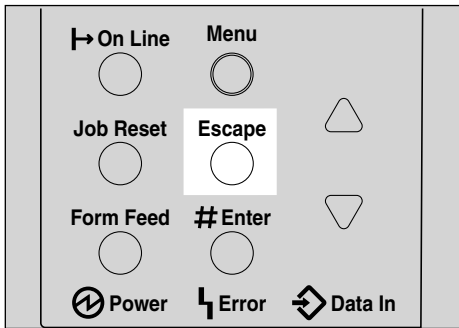

- ❑ After making the printer settings, press **[On Line]** to return to the “Ready” condition.

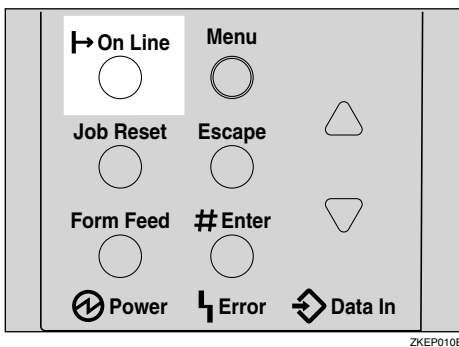

- ❑ The revised settings are not canceled even if the power switch is turned off.

Paper Input Menu

There are five menu items in the “Paper Input” menu.

- Bypass Size
- Tray Paper Size
- Paper Type
- Tray Locking
- Tray Priority

Reference

For more information about loading paper in the tray, see p.47 “Loading Paper and Other Media”.


Paper Input Parameters

Menu	Description
Bypass Size	The paper size for the Bypass Tray. For more information about paper sizes that can be set in the Bypass Tray, see p.35 “Paper and Other Media Supported by This Printer”.
Tray Paper Size	The paper size for each tray. When you select sizes that are not indicated on the paper size dial of Tray 1, Tray 2 or Tray 3, you should set the dial to “✱” and then select the paper size here. ❖ Tray 1 For more information about paper sizes that can be set in the Tray 1, see p.35 “Paper and Other Media Supported by This Printer”. ❖ Tray 2 For more information about paper sizes that can be set in the Tray 2, see p.35 “Paper and Other Media Supported by This Printer”. ❖ Tray 3 For more information about paper sizes that can be set in the Tray 3, see p.35 “Paper and Other Media Supported by This Printer”.  Note ☐ Only the installed trays appear on the panel display.

Menu	Description
Paper Type	If you use different kinds of paper, you set the paper type for Tray 1, Tray 2, Tray 3 or Bypass Tray. ❖ Tray 1, Tray 2, Tray 3 Plain Paper, Recycled Paper, Special Paper, Color Paper, Letterhead, Preprinted, Prepunched, Bond Paper, Cardstock ❖ Bypass Tray Plain Paper, Recycled Paper, Special Paper, Color Paper, Letterhead, Preprinted, Prepunched, Labels, Bond Paper, Cardstock, Transparency, Thick Paper  Note ☐ Default : Plain Paper ☐ Only the installed trays appear on the panel display.
Tray Locking	If you use different kinds of paper, you can lock a tray to prevent printing on wrong paper such as Letterhead or colored paper. When "Auto Tray Select" is selected in the Paper Source selections from the printer driver, the locked tray will not be used. Tray 1, Tray 2, Tray 3, Bypass Tray  Note ☐ Only the installed trays appear on the panel display. ☐ You cannot lock multiple trays. ☐ If you want to use the locked tray, you must select the tray from the printer driver. ☐ When a locked tray is selected from the printer driver, the printer does not search for another tray.
Tray Priority	You can set priority tray for paper feed when "Auto Tray Select" is selected in the Paper Source selections from the printer driver. When printing from DOS, the tray selected here is used when no tray is selected for a print job. Tray 1, Tray 2, Tray 3, Bypass Tray  Note ☐ Default : Tray 1 ☐ Only the installed trays appear on the panel display. ☐ It is recommended that you load paper of the size and direction you most frequently use in the tray selected with "Tray Priority".


Changing the Paper Input Menu

- 1** Press **[Menu]**.

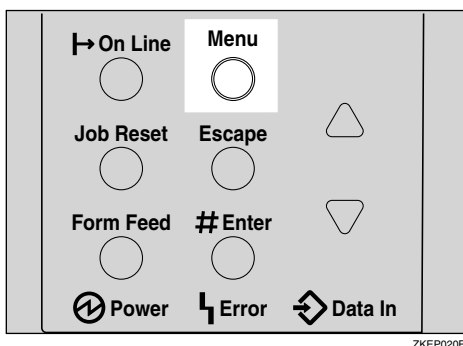


“Menu” appears on the panel display.

 - 2** Press **[▲]** or **[▼]** to display the “Paper Input” menu.



- 3** Press **[Enter #]**.

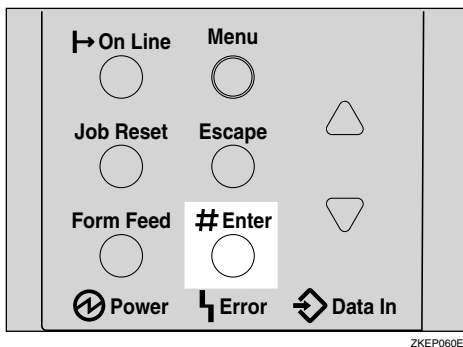


- 4** Press **[▲]** or **[▼]** to display “Tray Priority”.



- 5** Press **[Enter #]**.

 
The following message appears on the panel display.



6 Press **[▲]** or **[▼]** to select the tray type you want to use.

7 Press **[Enter #]**. Wait for a few seconds.

8 Press **[On Line]**.

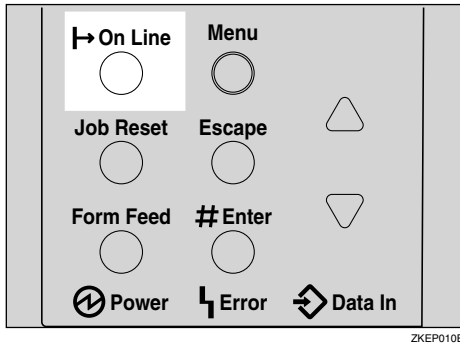

“Ready” appears on the panel display.



List/Test Print Menu

There are eight menu items in the “List/Test Print” menu.


- Config.P/Er.log
- Config. Page
- Error Log
- Menu List
- PS Font List
- PCL Config.Page
- PDF Config.Page
- Hex Dump

List/Test Print Parameters

Menu	Description
Config.P/Er.log	You can print the configuration page and error log.
Config. Page	You can print the current configuration of the printer. See p.130 “Printing a Configuration Page”.
Error Log	You can print an error report.
Menu List	You can print the Menu List which shows the function menus of this printer.
PS Font List	You can print the current configuration and installed PS Font List of PostScript.
PCL Config.Page	You can print the current configuration of PCL.
PDF Config.Page	You can print the Adobe® PDF Reference, Memory/HDD status, Printing Configuration, and Resident Fonts.
Hex Dump	You can print the data sent by the computer using the Hex Dump mode.


Printing the Configuration Page and Error Log

- 1 Press **[Menu]**.

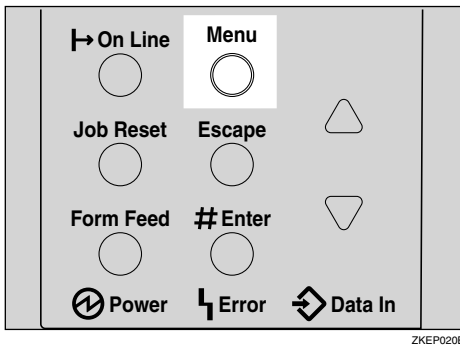


“Menu” appears on the panel display.

 - 2 Press **[▼]** or **[▲]** to display the “List/Test Print” menu.



- 3 Press **[Enter #]**.

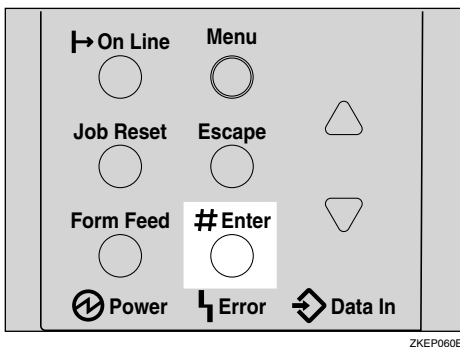


The following message appears on the panel display.



- 4 Press **[Enter #]**.

 The following message appears on the panel display.




You can print the configuration page and error log.

Important

- ❑ If you cannot print a configuration page correctly, check for an error message on the panel display. For more information about error messages, see p.73 “Error & Status Messages on the Control Panel”.

5 Press **[On Line]**.

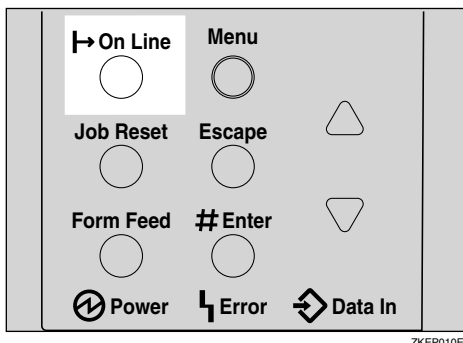

“Ready” appears on the panel display.




6

Printing a Configuration Page

Reference


For more information, see p.132 “Interpreting the Configuration Page”.


1 Press **[Menu]**.

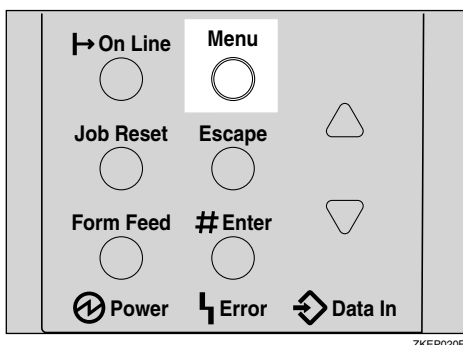

“Menu” appears on the panel display.

 2 Press **[▼]** or **[▲]** to display the “List/Test Print” menu.



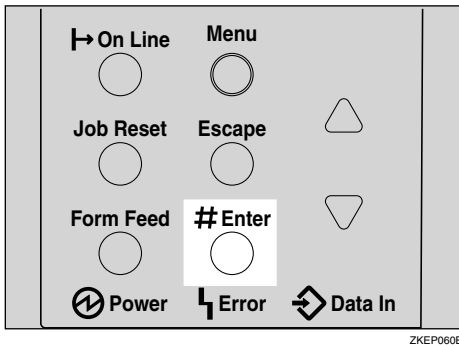3 Press **[Enter #]**.

The following message appears on the panel display.

```
List/Test Print:
Config.P/Er.lo$
```

4 Press **[▼]** or **[▲]** to display the “Config.Page” menu.

```
List/Test Print:
Config.Pa$e
```

5 Press **[Enter #]**.

The following message appears on the panel display.


```
Printin$...
```

The configuration page will be printed in a short time.

⚠ Important

- ☐ If you cannot print a configuration page correctly, check for an error message on the panel display. For more information about error messages, see p.73 “Error & Status Messages on the Control Panel”.

6 Press **[On Line]**.

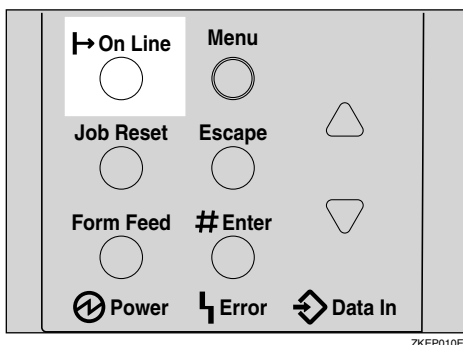

"Ready" appears on the panel display.



Interpreting the Configuration Page

6

System Reference

❖ **Printer ID**

Shows the serial number assigned to the board by its manufacturer.

❖ **Firmware Version**

- **Firmware**
Shows the version number of the printer firmware.
- **Engine**
Shows the version number of the printer engine.
- **NCS**
Shows the version number of the Network interface.

❖ **Pages Printed**

Shows the total number of pages printed by the printer to date.

❖ **Total Memory**

Shows the total amount of memory (SDRAM) installed on the printer.

❖ **Printer Language**

Shows the version number of the printer driver language.

❖ **Controller Option**

The item(s) appears when the controller option(s) is installed.

❖ **Options**

Shows the optional trays that you installed.

Paper Input

Shows the settings made under the “Paper Input” menu.

Reference

For more information, see p.124 “Paper Input Menu”.

Maintenance

Shows the settings made under the “Maintenance” menu.

Reference

For more information, see p.134 “Maintenance Menu”.

System

Shows the settings made under the “System” menu.

Reference

For more information, see p.146 “System Menu”.

PCL Menu

Shows the settings you made under the “PCL Menu”.

Reference

For more information, see p.162 “PCL Menu”.

Host Interface

Shows the settings you made under the “Host Interface” menu.

When DHCP is Active on the network, the actual IP Address, Subnet Mask and Gateway Address appear in parentheses on the configuration page.

Reference

For more information about “Host Interface” menu, see p.154 “Host Interface Menu”.

Interface Information

Shows the interface information.

Error Log

Shows the log of printer errors.

Maintenance Menu

There are 10 menu items in the “Maintenance” menu.

- Image Density
- Registration
- Curl Prevention
- HDD Format
- WL.LAN Signal
- WL.LAN Defaults
- Key Repeat
- Menu Protect
- Ppr.Size Errors

Note

- ☐ “HDD Format” appears Only when the optional Hard Disk Drive is installed.
For more information, see “*Hard Disk Drive Type 2600*” in the Setup Guide.

Maintenance Menu Parameters

Menu	Description
Image Density	You can select the print Image Density. -3 to 3  Reference For more information, see p.114 “Adjusting the Image Density”.
Registration	◆ Prt. Test Sheet You can print the Registration test sheet. Tray 1, Tray 2, Tray 3, Bypass Tray, Duplex backside  Note ☐ Default : Tray 1 ☐ Only the installed trays appear on the panel display. ◆ Adjustment You can select the start position for printing on a page. Horiz.: Tray 1, Horiz.: Tray 2, Horiz.: Tray 3, Horiz.: Bypass, Horiz.: Dup.Back, Vert.: All Trays, Vert.: Dup.Back -4 to 4  Note ☐ Default : Horiz.: Tray 1 ☐ The Registration value is not a default. ☐ Only the installed trays appear on the panel display.  Reference For more information, see p.116 “Adjusting the Registration of the Trays”.
Curl Prevention	You can control the fuser temperature to prevent paper from curling.  Note ☐ Default: Off ☐ Use this mode Only when paper misfeed occurs frequently during Duplex printing.
HDD Format	After installing the Hard Disk Drive, format it.  Note ☐ This menu appears Only when the optional Hard Disk Drive is installed.  Reference For more information about formatting the Hard Disk Drive, see p.140 “Formatting Hard Disk Drive Type 2600”.

Menu	Description
WL.LAN Signal	You can check the signal strength when using the wireless LAN.  Note ☐ This menu appears Only when the optional Wireless Interface Unit is installed.  Reference For more information about displaying the signal strength, see p.141 "Displaying the Signal Strength".
WL.LAN Defaults	You can reset the wireless LAN settings to the default.  Note ☐ This menu appears Only when the optional Wireless Interface Unit is installed.
Key Repeat	You can scroll through the menu by holding this key down.  Note ☐ Default: On
Menu Protect ^{*1}	This procedure lets you protect menu settings against accidental changes. It makes it impossible to change the menu settings you make with the normal procedure unless you perform the required key operation. In a network environment, protecting settings restricts who can change menu settings to network administrators. • Level 1 • Level 2 • Off  Note ☐ Default: Off ☐ While the printer is On Line, press the [Enter #] key, and then press the [Escape] key, finally press the [Menu] key. You can access the "Menu Protect" menu on the panel display. ☐ You can protect the "Maintenance", "System", "Host Interface" and "Language" menu on Level 1. ☐ You can protect the "Paper Input", "Maintenance", "System", "Host Interface" and "Language" menu on Level 2.
Ppr.Size Errors ^{*1}	You can select whether to have an error report printed when the paper size setting for the tray differs from the actual size of the paper in the tray. You can also select whether to have an error message displayed when feeding paper from the tray.  Note ☐ Default: Detect ☐ When it is "Detect", it prints with the paper size that was set when the error message appeared.

^{*1} While the printer is Online, press **[Enter #]**, and then press **[Escape]**. Finally, press **[Menu]**. You can access the "Menu Protect" and "Ppr.Size Errors " menu on the panel display.


Changing the Maintenance Menu

Setting and canceling the menu protection

Explains the method of setting and canceling menu protection.

Locking the panel with Menu Protect

- 1** Check if the On Line indicator is on. If not, press **[On Line]** to enter the "Ready" condition.
- 2** Press **[Enter #]**, then **[Escape]**, and then **[Menu]**.

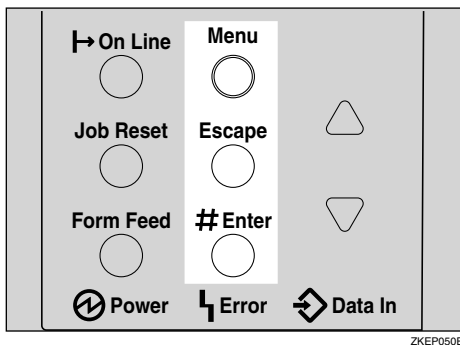

"Menu" appears on the panel display.

- 3** Press **[▲]** or **[▼]** to display the "Maintenance" menu, and then press **[Enter #]**.

The following message appears on the panel display.

```
Maintenance:
  Image Density
```

- 4** Press **[▲]** or **[▼]** to display "Menu Protect".

```
Maintenance:
  Menu Protect
```

- 5** Press **[Enter #]**.


The following message appears on the panel display.

```
Menu Protect:
  *Off
```

- 6** Press **[▲]** or **[▼]** to select the levels desired, and then press **[Enter #]**. Wait for a few seconds.

```
Menu Protect:
*Level 1
```

- 7** Press **[On Line]**.

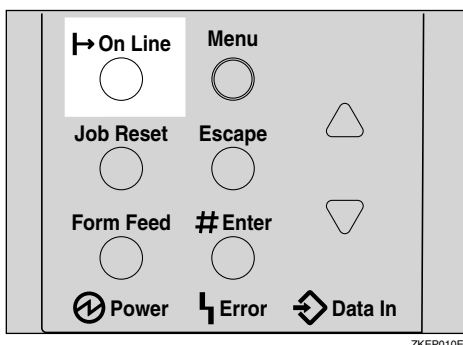


"Ready" appears on the panel display.

6

```
Ready
```

Canceling the protection

- 1** Check the On Line indicator is on. If it is not, press **[On Line]** to enter the "Ready" condition.
- 2** Press **[Enter #]**, then **[Escape]**, and then **[Menu]**.

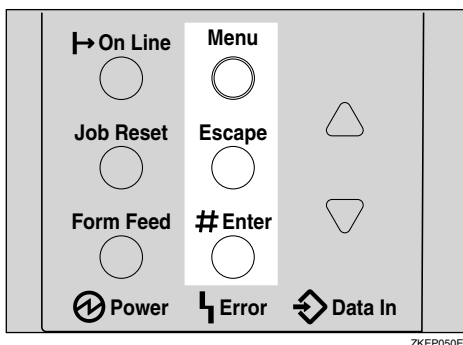

"Menu" appears on the panel display.

- 3** Press **[▲]** or **[▼]** to display “Maintenance” menu, and then press **[Enter #]**.

The following message appears on the panel display.

```
Maintenance:
Image Density
```

- 4** Press **[▲]** or **[▼]** to display “Menu Protect”, and then press **[Enter #]**.

```
Maintenance:
Menu Protect
```

- 5** Press **[Enter #]**.

The following message appears on the panel display.

```
Menu Protect:
*Level 1
```

- 6** Press **[▲]** or **[▼]** to display “Off”, and then press **[Enter #]**. Wait for a few seconds.

```
Menu Protect:
*Off
```

- 7** Press **[On Line]**.

“Ready” appears on the panel display.

Formatting Hard Disk Drive Type 2600

If you are formatting the Hard Disk Drive for the first time, follow the procedures below using the control panel.

1 Press **[Menu]**.

“Menu” appears on the panel display.

2 Press **[▲]** or **[▼]** to display “Maintenance” menu.

```
Menu:
Maintenance
```

3 Press **[Enter #]**.

The following message appears on the panel display.

```
Maintenance:
Image Density
```

4 Press **[▲]** or **[▼]** to display “HDD Format”.

```
Maintenance:
HDD Format
```

5 Press **[Enter #]**.

The following message appears on the panel display.

```
HDD Format:
Press# to Start
```

6 Press **[Enter #]**.

Important

- ☐ Do not turn off the printer while formatting the Hard Disk Drive. Turning off the printer while formatting the Hard Disk Drive can damage the Hard Disk Drive.

If you successfully format the Hard Disk Drive, the following message appears on the panel display.


```
Completed
Restart Printer
```

7 Turn off the power switch, and then turn it back on.

Displaying the Signal Strength

If you need to check the IEEE 802.11b (Wireless LAN) signal, select "WL.LAN Signal" in the "Maintenance" menu.

1 Press **[Menu]**.

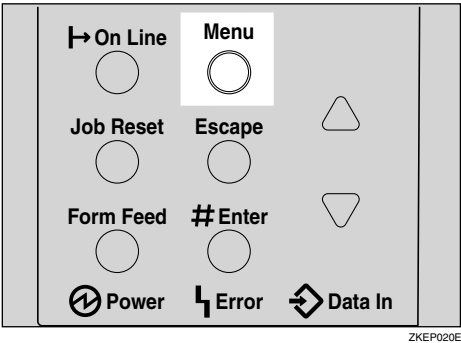


"Menu" appears on the panel display.

2 Press **[▼]** or **[▲]** to display the "Maintenance" menu.



3 Press **[Enter #]**.

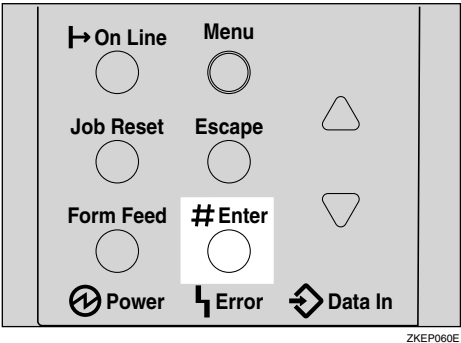

The following message appears on the panel display.



4 Press **[▼]** or **[▲]** to display "WL.LAN Signal".



5 Press **[Enter #]**.

One of the following messages appears on the panel display.

WL.LAN Signal
Good 100%

WL.LAN Signal
Fair 70%

WL.LAN Signal
Poor 40%


WL.LAN Signal
Unavailable 18%

Note

- ☐ If "WL.LAN Signal" is not displayed, "IEEE 802.11b" has not been selected for "LAN Type" in "Network Setup" of the Host Interface menu. Select "IEEE 802.11b" for "LAN Type", and then check the "WL.LAN Signal" in the Maintenance menu again.
- ☐ If "Ad hoc" in "Comm. Mode" of "IEEE 802.11b" in the Host Interface menu is selected, you cannot check the signal. Select "Infrastructure" and then check it again.
- ☐ Every time you press **[Enter #]**, the signal is updated.
- ☐ The signal is indicated as "Good" if the signal strength is 86-100%, "Fair" if the strength is 61-85%, "Poor" if the strength is 31-60%, and "Unavailable" if the strength is 0-30%. If the signal is unstable or unavailable, remove obstacles or move the printer to a place where the signal can be received.
- ☐ Using wireless devices or microwave sources near the printer might affect the signal.

6 Press **[Escape]**.

7 Press **[On Line]**.

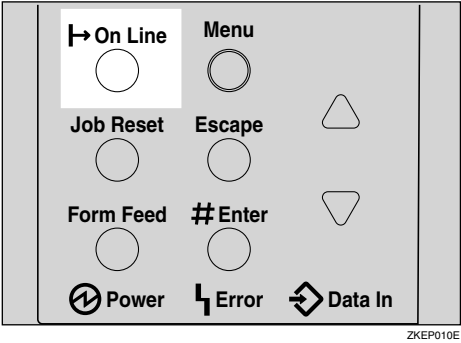

“Ready” appears on the panel display.




Resetting the IEEE 802.11b (Wireless LAN) Settings

If you need to reset the wireless LAN setting, select "WL.LAN Defaults" in the Maintenance menu.

Note


- ❑ The four items that can be reset in "IEEE 802.11b" of the Host Interface menu are "Comm. Mode", "Channel", "Trans. Speed", and "WEP Setting". Other items that can be reset are the SSID settings, the WEP key settings, and the wireless LAN settings that can be made with telnet.

1 Press **[Menu]**.

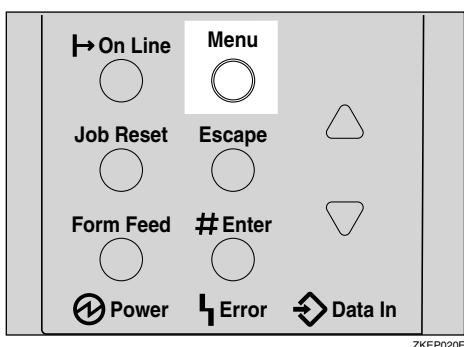


"Menu" appears on the panel display.

 
2 Press **[▼]** or **[▲]** to display the "Maintenance" menu.



3 Press **[Enter #]**.

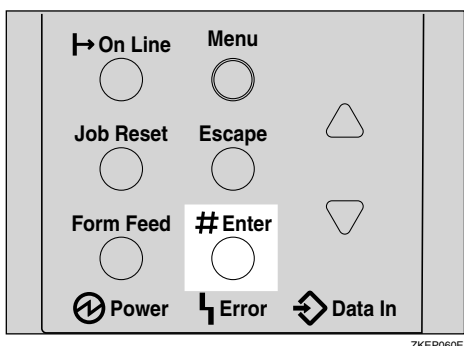

 The following message appears on the panel display.



- 4** Press [▼] or [▲] to display "WL.LAN Defaults".

```
Maintenance:
WL.LAN Defaults
```

- 5** Press [Enter #].

```
WL.LAN Defaults
Reset→Defaults?
```

- 6** Press [Enter #].

The following message appears on the panel display.

```
Defaults reset
Press # to exit
```

- 7** Press [Enter #].

The following message appears on the panel display.

```
Setting change
in process
```

The wireless LAN setting value is reset.

"Ready" appears on the panel display.

```
Ready
```

System Menu

There are 19 menu items in the “System” menu.

- Prt. Err Report
- Auto Continue
- Memory Overflow
- Copies
- Printer Lang.
- Sub Paper Size
- Page Size
- Edge-Edge Print
- Def.Print Lang.
- Duplex
- Energy Saver
- Memory Usage
- Unit of Measure
- Edge Smoothing
- Toner Saving
- Spool Printing
- Letterhead Mode
- RAM Disk
- Nortify by E-Mail
- E-Mail Date

6

System Parameters

Menu	Description
Prt. Err Report	You can select whether or not to have an error report printed when a printer error or memory error occurs. • On • Off  Note ☐ Default: Off

Menu	Description
Auto Continue	You can set whether Auto Continue is enabled. When it is on, printing continues after a system error occurs. • Off • 0 minutes • 1 minute • 5 minutes • 10 minutes • 15 minutes  Note ☐ Default: Off ☐ When it is on and certain types of error occur, the current job might be canceled, and the next job started automatically.
Memory Overflow	You can select whether the memory overflow error report is printed when the data is too large and cannot be processed. • Not Print • Error List  Note ☐ Default: Not Print
Copies	You can specify how many pages to print. This setting is disabled if the number of pages to print is already specified with the printer driver or a command. • 1-999
Printer Lang.	You can specify the printer language. • Auto Detect • PCL • PS • PDF • XPDL_0 • XPDL_1  Note ☐ Default: Auto Detect
Sub Paper Size	You can select whether the printer automatically selects the paper tray containing paper of the specified size. • Off • Auto  Note ☐ Default: Off

Menu	Description
Page Size	You can specify the default paper size. 8 1/2 x 14, 8 1/2 x 11, 5 1/2 x 8 1/2, 8 x 13, 8 1/2 x 13. 8 1/4 x 13, A4(210x297), B5 JIS(182x257), A5(148x210), A6(105x148), 16K(195x267), 4 1/8 x 9 1/2, 3 7/8 x 7 1/2, C5 Env.(162x229), C6 Env.(114x162), DL Env.(110x220), CustomSize  Note ☐ Default: 8 1/2 x 11
Edge-Edge Print	You can print on the complete area of an A4 sheet leaving no border on any edge.  Important ☐ When printing again after changing the setting to “On”, the paper’s reverse side may be dirtied.  Note ☐ Default: Off
Def.Print Lang.	You can specify the default printer language. • PCL • PS • PDF • XPDL_0 • XPDL_1  Note ☐ Default: PCL
Duplex	You can select whether you want to print on both sides of each page. • Off • Short Edge Bind • Long Edge Bind  Note ☐ Default: Off ☐ This menu appears Only when the optional Duplex Unit is installed.


Menu	Description
Energy Saver	You can set how many minutes the printer waits before switching to Energy Saver mode. Energy Saver mode reduces electric power consumption. On, Off 1 minute, 5 minutes, 15 minutes, 30 minutes, 45 minutes, 60 minutes  Note ☐ Default: On ☐ Default: 30 minutes ☐ If there is an error with the printer, the printer will not switch to Energy Saver mode. ☐ When the printer switches to Energy Saver mode, the Power indicator turns off while the On Line indicator stays on.
Memory Usage	You can select memory to be used from "Font Priority" or "Frame Priority" according to the paper size, Resolution or printer language. • Font Priority This setting uses memory for registering fonts. • Frame Priority This setting uses memory for high speed printing.  Note ☐ Default: Frame Priority  Reference For more information, see p.187 "Memory Capacity and Paper Size".
Unit of Measure	You can select "mm" or "inch" for the custom paper sizes.  Note ☐ Default: mm
Edge Smoothing	You can set whether Edge Smoothing is enabled. When it is on, jagged lines appear more smoothly. Set it to off when the print image contains fine gradation in tone. • On • Off  Note ☐ Default: On ☐ If "Toner Saving" is "On", "Edge Smoothing" is ignored even if it is "On".

Menu	Description
Toner Saving	You can select whether or not Toner Saving is enabled. • On • Off  Note ☐ Default: Off ☐ If "Toner Saving" is "On", "Edge Smoothing" is ignored even if it is "On".
Spool Printing	You can select whether all of the print data is spooled to the Hard Disk Drive before printing. • On • Off  Note ☐ Default: Off ☐ Spooling stores the print job sent by a computer temporarily in the printer, transfers the print job, and then prints it. ☐ This menu appears Only when the optional Hard Disk Drive is installed.
Letterhead Mode	You can select whether or not to do letterhead printing. If you select letterhead printing and duplex printing, the last sheet of a print job with an odd number of pages is printed on both sides. • Off • Auto Detect • On (Always)  Note ☐ Default: Off ☐ Duplex printing is canceled if the paper size does not allow it. ☐ If printing changes from single-sided to duplex during printing, the second and later copies with collate will all be duplex. If you want the second and later copies to be single-sided, select a paper size that does not allow duplex printing. ☐ When using letterheads, be careful how you orient the paper.
RAM Disk	If the optional hard disk drive is not installed, when executing PDF Direct Print set a value of 2 MB or higher. • 0MB • 2MB • 4MB • 8MB • 16MB  Note ☐ Default: 4MB

Menu	Description
Notify by E-Mail	You can have error details sent to a preset e-mail address when an error occurs in the printer. • Off • On Important ☐ After changing the setting, turn off the power of the main unit briefly, and then back on again. Note ☐ Default: On
E-Mail Date	If there is no timeserver, set to "On" if mail without date information causes problems for the mail server. Through its software, e-mail sent by this device includes a date and time (based on a provisional date and time using January 1st of the year of manufacture as the initial date). • Off • On Note ☐ Default: Off ☐ While the printer is On Line, press the [Enter #] key, and then press the [Escape] key, finally press the [Menu] key. You can access the "Menu Protect" menu on the panel display.

Changing the System Menu

1 Press **[Menu]**.

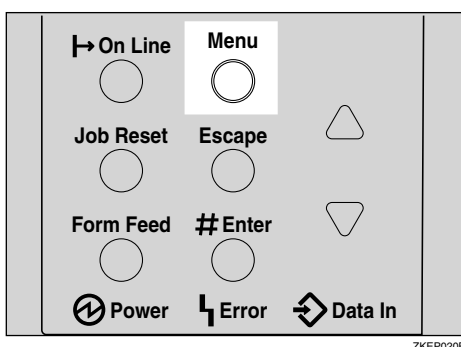


"Menu" appears on the panel display.

2 Press **[▲]** or **[▼]** to display the "System" menu.

```
Menu:
System
```

3 Press **[Enter #]**.

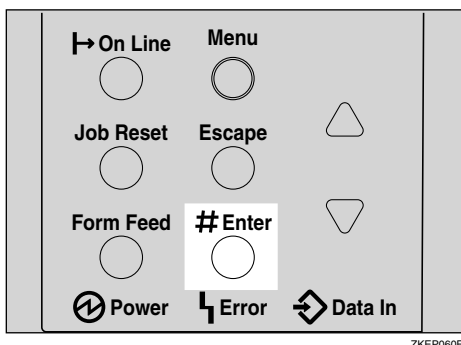

The following message appears on the panel display.

```
System:
Prt.Err Report
```

4 Press **[▲]** or **[▼]** to display "Energy Saver ".

```
System:
Energy Saver
```

5 Press **[Enter #]**.

The following message appears on the panel display.

```
Energy Saver :
E.Saver On/Off
```

6 Press **[▲]** or **[▼]** to display "E. Saver Timer".

```
Energy Saver :
E. Saver Timer
```

7 Press **[Enter #]**.

The following message appears on the panel display.


```
E. Saver Timer
*15 minutes
```

8 Press **[▲]** or **[▼]** to select how many minutes the printer waits before switching to Energy Saver mode.

9 Press **[Enter #]**.

The screen returns to step **6** in a few seconds.

10 Press **[On Line]**.

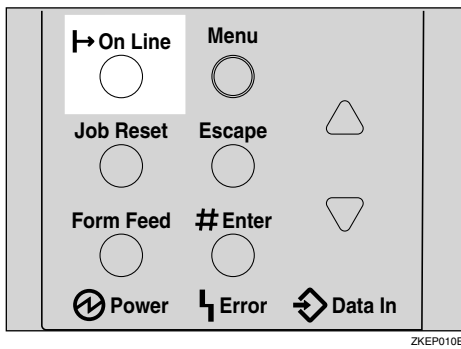

"Ready" appears on the panel display.



Host Interface Menu

There are seven menu items in the “Host Interface” menu.

- I/O Buffer
- I/O Timeout
- Network Setup
- IEEE 1394 Setup
- IEEE 802.11b
- USB Setting
- Bluetooth

Host Interface Parameters

Menu	Description
I/O Buffer	You can set the size of the I/O Buffer. Normally it is not necessary to change this setting. 128 KB, 256 KB, 512 KB  Note ☐ Default: 128 KB
I/O Timeout	You can set how many seconds the printer waits before ending a print job if more data is not received when using parallel interface and USB. If data from another port often appears in the middle of a print job, you should increase the timeout value. 10 seconds, 15 seconds, 20 seconds, 25 seconds, 60 seconds  Note ☐ Default: 15 seconds

Menu	Description
Network Setup	Items Only appear in the Network Setup when the related options are installed.  Reference For more information about the "Network Setup", see "Configuring the Printer for the Network" in the Setup Guide. ❖ DHCP You can set how the network interface board acquires TCP/IP settings.  Note ☐ Default: On ❖ IP Address You can set the IP Address. ⚠ Limitation ☐ When DHCP is On, its setting cannot be changed. If you want to change the setting, make the setting for DHCP Off. Consult the network administrator for information about how to make the setting for the network.  Note ☐ Default: 011.022.033.044 ❖ Subnet Mask You can set the Subnet Mask. ⚠ Limitation ☐ When DHCP is On, its setting cannot be changed. If you want to change the setting, make the setting for DHCP Off. Consult the network administrator for information about how to make the setting for the network.  Note ☐ Default: All zero ❖ Gateway Address You can set the Gateway Address. ⚠ Limitation ☐ When DHCP is On, its setting cannot be changed. If you want to change the setting, make the setting for DHCP Off. Consult the network administrator for information about how to make the setting for the network.  Note ☐ Default: All zero

Menu	Description
Network Setup	❖ Frame Type (NW) You can set the Frame Type for NetWare.  Note ☐ Default: Auto ❖ Active Protocol You can set the Active protocol. TCP/IP, NetWare, NetBEUI, AppleTalk  Note ☐ Default: All Active ❖ Ethernet You can select the speed of the network to which the printer is connected. Auto, 10 Mbps, 100Mbps  Note ☐ Default: Auto ❖ LAN Type You can select Ethernet or IEEE 802.11b for the LAN Type.  Note ☐ Default: Ethernet ☐ Appears Only when the optional 802.11b Interface Unit is installed in the Network standard model.

Menu	Description
IEEE 1394 Setup ^{*1}	You can make settings for using IEEE 1394. This menu appears Only when the optional IEEE 1394 Interface Unit is installed.  Reference For more information about the "IEEE 1394 Setup", see "Configuring the Printer for the Network" in the Setup Guide. ❖ DHCP You can set the method the IEEE 1394 Interface Unit uses to acquire TCP/IP settings.  Note ☐ Default: On ❖ IP Address1394 You can set the IP address for IEEE 1394 (IP over 1394).  Note ☐ Default: All zero ❖ Subnet Mask1394 You can set the Subnet Mask for IEEE 1394 (IP over 1394).  Note ☐ Default: All zero ❖ IP over 1394 You can activate IP over 1394.  Note ☐ Default: Active ❖ SCSI print You can activate SCSI print.  Note ☐ Default: Active ❖ Bidi-SCSI print You can activate bidirectional transmission for SCSI print.  Note ☐ Default: On

Menu	Description
IEEE 802.11b *2	You can make settings for using the wireless LAN. This menu appears Only when the optional IEEE 802.11b board is installed.  Reference For more information about the "IEEE 802.11b", see "Configuring the Printer for the Network" in the Setup Guide. ◆ Comm. Mode You can set the transmission mode for IEEE 802.11b. 802.11b Ad hoc, Infrastructure, Ad hoc  Note ☐ Default: 802.11b Ad hoc ◆ Channel The selectable channels are 1-11 (Inch version) and 1-13 (Metric version).  Note ☐ Default: 11 ◆ Trans. Speed You can set the transmission speed for IEEE 802.11b. Auto, 11Mbps, 5.5Mbps, 2Mbps, 1Mbps  Note ☐ Default: Auto ◆ SSID You can make settings for SSID in Infrastructure mode and 802.11 Ad hoc mode. ! Limitation ☐ Select "¥" if you want to enter "/" in the SSID. Also, "¥" appears when printing the configuration page, read it as "/".  Note ☐ Up to 32 ASCII characters in the range 0x20-0x7e can be used. The SSID setting is case-sensitive. ☐ An SSID value is automatically set to the nearest access point if the setting has not been made. ☐ If the setting has not been made for 802.11 Ad hoc mode, the same value for Infrastructure mode or an "ASSID" value is automatically set.

Menu	Description
IEEE 802.11b ^{*2}	◆ WEP Setting You can set the code for IEEE 802.11b.  Note ☐ Default: Not Active ☐ You need to set the WEP code key from the network before making this setting. Without the key, transmission cannot be performed. ☐ Be sure to set the key before setting the code to "Active".
USB Setting ^{*3}	You can set the transmission speed for USB.  Note ☐ Default: Auto
Bluetooth ^{*4}	You can make settings for using Bluetooth. This menu appears Only when the optional Bluetooth Interface Unit is installed. Public, Private  Note ☐ Default: Public

^{*1} Appears Only when the 1394 Interface Unit board is installed.


^{*2} Appears Only when the 802.11b Interface Unit board is installed.

^{*3} While the printer is Online, press **[Enter #]**, and then press **[Escape]**. Finally, press **[Menu]**. You can access the "USB Setting" menu on the panel display.

^{*4} While the printer is Online, press **[Enter #]**, and then press **[Escape]**. Finally, press **[Menu]**. You can access the "Bluetooth" menu on the panel display.


Changing the Host Interface Menu

- 1** Press **[Menu]**.

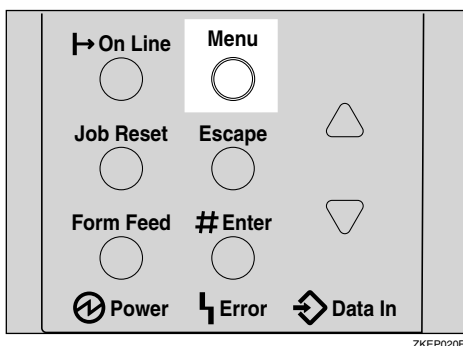


“Menu” appears on the panel display.

 
- 2** Press **[▲]** or **[▼]** to display the “Host Interface” menu.




- 3** Press **[Enter #]**.

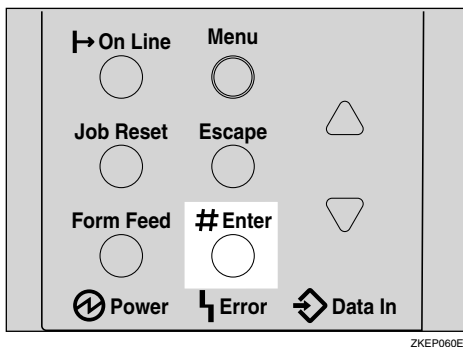

 The following message appears on the panel display.



 - 4** Press **[▲]** or **[▼]** to display “I/O Timeout”.




5 Press **[Enter #]**.

The following message appears on the panel display.

```
I/O Timeout:
*15 seconds
```

6 Press **[▲]** or **[▼]** to select how many minutes the printer waits before ending a print job.**7** Press **[Enter #]**.

The screen returns to step **4** in a few seconds.

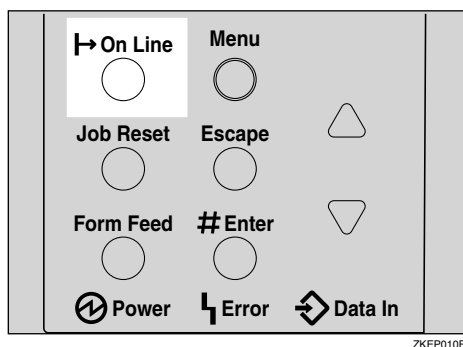8 Press **[On Line]**.

“Ready” appears on the panel display.

```
Ready
```

PCL Menu

There are 11 menu items in the “PCL Menu” .

- Orientation
- Form Lines
- Font Source
- Font Number
- Point Size
- Font Pitch
- Symbol Set
- Courier Font
- Ext. A4 Width
- Append CR to LF
- Resolution

6

PCL Parameters


Menu	Description
Orientation	You can set the page Orientation. • Portrait • Landscape  Note ☐ Default: Portrait
Form Lines	You can set the number of lines per page. 5-128  Note ☐ Default: 64 (Metric version), 60 (Inch version)
Font Source	You can set the location of the default font. • Resident • Internal • Download • HDD  Note ☐ Default: Resident ☐ When you select "Download", you can select Only fonts downloaded to printer RAM.

Menu	Description
Font Number	You can set the ID of the default font you want to use. • 0 to 50 (for Internal) • 1 to downloaded number  Note ☐ Default: Internal ☐ Default: 0
Point Size	You can set the Point Size you want to use for the default font. 4 to 999.75 by 0.25  Note ☐ Default: 12.00 ☐ This setting is effective Only for a variable-space font.
Font Pitch	You can set the number of characters per inch you want to use for the default font. 0.44 to 99.99 by 0.01  Note ☐ Default: 10.00 ☐ This setting is effective Only for a fixed-space font.
Symbol Set	You can specify the set of print characters for the default font. The available options are as follows. Roman-8, ISO L1, ISO L2, ISO L5, PC-8, PC-8 D/N, PC-850, PC-852, PC8-TK, Win L1, Win L2, Win L5, Desktop, PS Text, VN Intl, VN US, MS Publ, Math-8, PS Math, VN Math, Pifont, Legal, ISO 4, ISO 6, ISO 11, ISO 15, ISO 17, ISO 21, ISO 60, ISO 69, Win 3.0  Note ☐ Default: Roman-8
Courier Font	You can select a courier font type. • Regular • Dark  Note ☐ Default: Regular
Ext. A4 Width	You can extend the width of the printable area for an A4 sheet leaving a narrow margin on the sides.  Note ☐ Default: Off

Menu	Description
Append CR to LF	By adding a CR code to each LF code, you can print text data clearly. • On • Off Note ☐ Default: Off
Resolution	You can set the print resolution in dots per inch. • 300 dpi • 600 dpi Note ☐ Default: 600 dpi


Changing the PCL Menu

1 Press **[Menu]**.

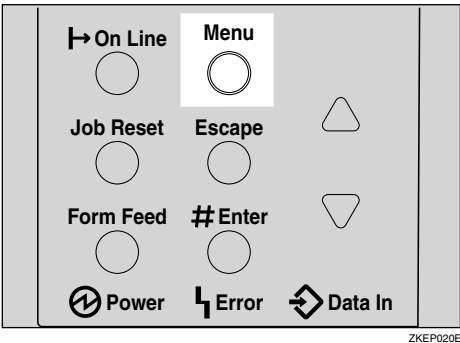

"Menu" appears on the panel display.

2 Press **[▲]** or **[▼]** to display "PCL Menu", and then press **[Enter #]**.

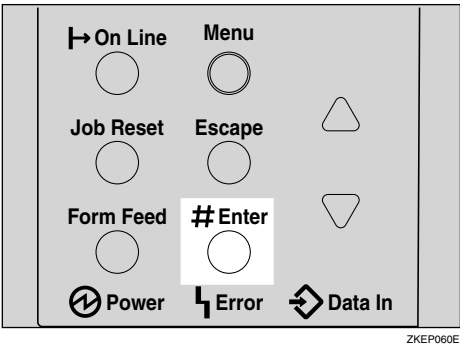

The following message appears on the panel display.

PCL Menu:
Orientation


3 Press **[Enter #]**.

Orientation:
*Portrait

4 Press **[▲]** or **[▼]** to select the Orientation desired, and then press **[Enter #]**.
Wait for a few seconds.

The screen returns to step **2** in a few seconds.

5 Press **[On Line]**.

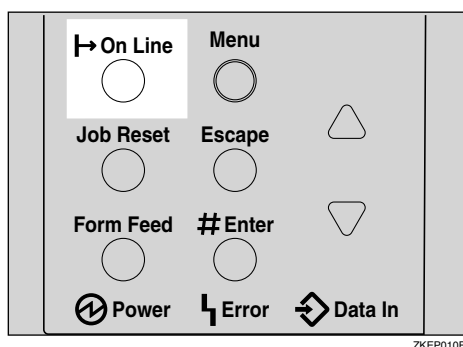

"Ready" appears on the panel display.

Ready

PS Menu

There are two menu items in the “PS Menu” .

- Data Format
- Resolution


PS Parameters

Menu	Description
Data Format	You can select the data format. • Binary Data • TBCP  Limitation ☐ This setting is effective when operating the machine with a parallel, USB or EtherTalk connection. ☐ When operating the machine with a parallel or USB connection, if binary data is sent from the printer driver, the print job is canceled. ☐ When operating the machine with an Ethernet connection, the print job is canceled under the following conditions; • The printer driver data format is TBCP and the data format selected on the control panel is Binary Data. • The printer driver data format is binary and the data format selected on the control panel is TBCP.  Note ☐ Default: Binary Data
Resolution	You can select the resolution. • 300 dpi • 600 dpi • 1200 dpi  Note ☐ Default: 600 dpi

Changing the PS Menu


The following example describes how to change the setting for “TBCP”:

- 1 Press the **[Menu]** key.

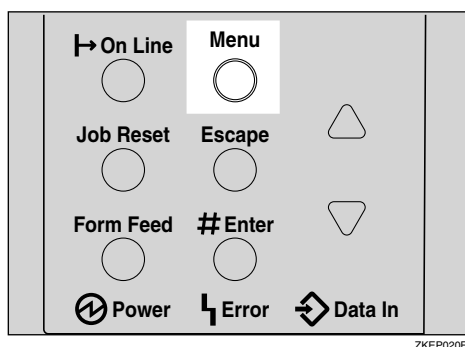

“Menu” appears on the display.

- 2 Press the **[▲]** or **[▼]** key to display “PS Menu”, and then press the **[Enter #]** key.

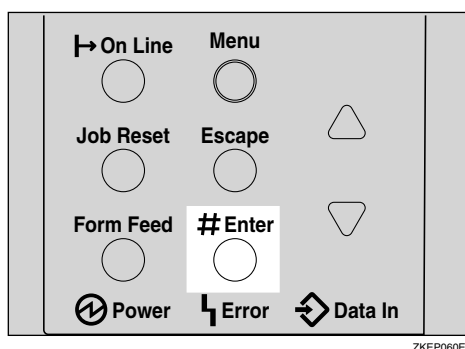

The following message appears on the display:

```
PS Menu:
Data Format
```


- 3 Press the **[Enter #]** key.

```
Data Format:
*Binary Data
```

- 4 Press the **[▲]** or **[▼]** key to select the TBCP desired, and then press the **[Enter #]** key. Wait for two seconds.

“PS Menu” appears on the display.

5 Press the **[On Line]** key.

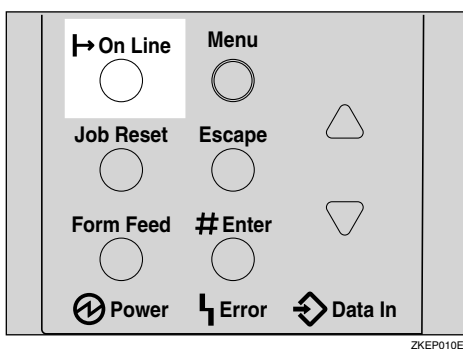

“Ready” appears on the display.



6

PDF Menu

There are two menu items in the “PDF Menu” .

- PDF: Change PW
- Resolution


PDF Parameters

Menu	Description
PDF: Change PW	Set [Password to Open the Text File] for the PDF file executing PDF Direct Print. • PDF Current PW • Enter new PW Important ☐ A password can be set using on the Web Image Monitor, but in this case the password information is sent through the network. If security is a priority, set the password using this menu from the Control Panel. Note ☐ Default: no password set.
Resolution	You can select the resolution. • 300dpi • 600dpi • 1200dpi Note ☐ Default: 600dpi

6

Changing the PDF Menu


1 Press **[Menu]**.

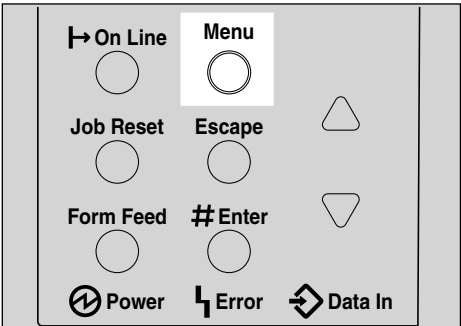


ZKEP020E

"Menu" appears on the panel display.

- 2** Press **[▲]** or **[▼]** to display "PDF Menu", and then press **[Enter #]**.

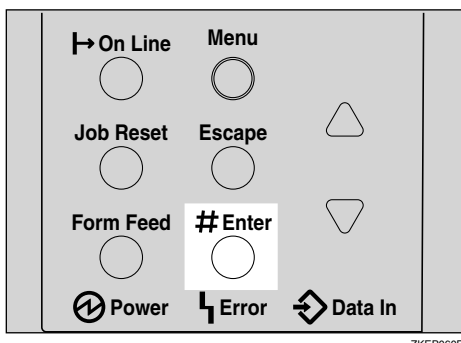


 The following message appears on the panel display.




- 3** Press **[▲]** or **[▼]** to display "Resolution", and then press **[Enter #]**.


6

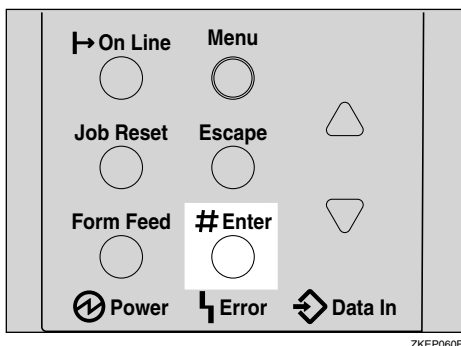

 The following message appears on the panel display.




- 4** Press **[Enter #]**.

 

- 5** Press **[▲]** or **[▼]** to select the resolution desired, and then press **[Enter #]**.
Wait for a few seconds.

The screen returns to step **2** in a few seconds.

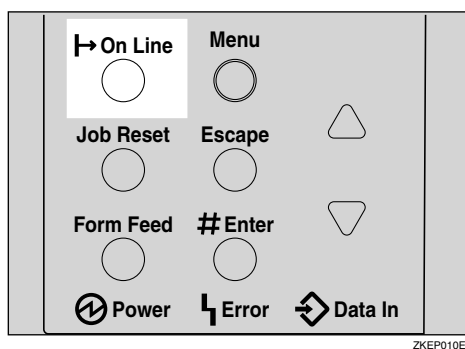6 Press **[On Line]**.

"Ready" appears on the panel display.



Language Menu

You can select the language you use. Available language as are follows:

English, French, German, Italian, Spanish, Dutch, Swedish, Norwegian, Danish, Finnish, Portuguese, Czech, Polish, Hungarian


Note

□ Default: English

Changing the Language Menu


You can change the language by the following procedures below.

1 Press **[Menu]**.

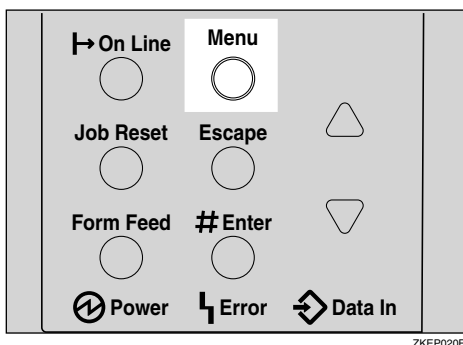


"Menu" appears on the panel display.

 
2 Press **[▲]** or **[▼]** to display "Language" menu.



3 Press **[Enter #]**.

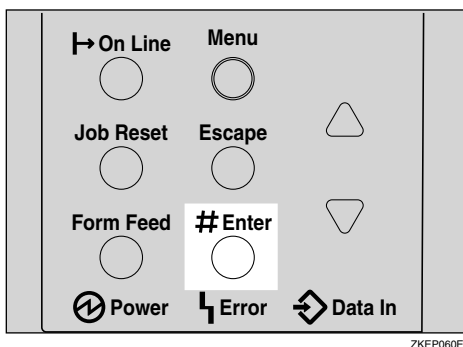

 The following message appears on the panel display.




4 Press **[▲]** or **[▼]** until the language you want to select appears on the panel display.

5 Press **[Enter #]**. Wait for a few seconds.

The screen returns to step **2** in a few seconds.

6 Press **[On Line]**.

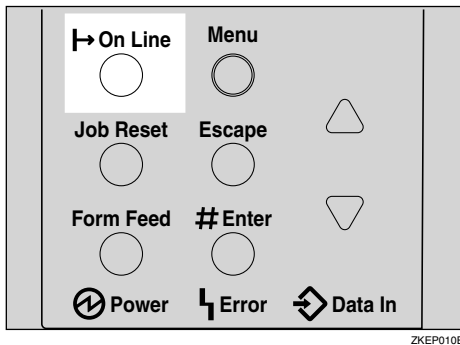

"Ready" appears on the panel display.



Replacing Parts

The Maintenance Kit contains parts necessary for maintaining the printer. When “Replace Maintenance Kit” appears on the panel display, install the replacement parts included in the Maintenance Kit.

WARNING:

- ***It is dangerous to handle the plug with wet hands. An electric shock might occur.***

CAUTION:

- *The inside of the machine could be very hot. Do not touch the parts with a label indicating "⚠" (means hot surface). Touching "⚠" (means hot surface) could result in a burn.*
- *When you pull the plug out of the socket, grip the plug to avoid damaging the cord and causing a fire or an electric shock.*
- *Be sure to turn off the printer and wait for about an hour before replacing parts. Not waiting for the printer to cool down can result in a burn.*

 
Note



- ☐ If you dispose of the used parts yourself, dispose of them according to local regulations.

MAINTENANCE KIT Type 400

Checking the contents of the box

Check the contents of the box according to the following list. If one or more items are missing, contact your sales or service representative.

Description	Quantity		
Friction pad	3 pcs		See p.177 “Replacing the Friction Pad”.
Paper feed roller	3 pcs		See p.178 “Replacing the Paper Feed Rollers”.

 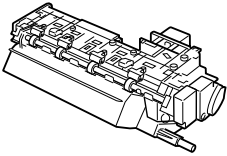Description	Quantity		
Transfer roller	1 pc		See p.179 "Replacing the Transfer Roller".
Gloves	1 pair		
Fusing Unit	1 pc		See p.182 "Replacing the Fusing Unit".

Preparing to replace the parts

You should replace all the parts included in Maintenance Kit at the same time. Be sure to replace them in the following order:

1 Check the contents of the box for the following items:

- Friction pad
- Paper feed roller
- Transfer roller
- Fusing Unit
- Gloves

2 Confirm that the followings are true:

- The power switch is turned off.
- The power cord is unplugged from the wall outlet.
- The interface cable is unplugged from the printer.


Important

- ☐ Wait about an hour after the printer is turned off to allow internal parts to cool down before replacing the Maintenance Kit.

Replacing the Friction Pad


Replace all the friction pads in the tray. The following procedure shows how to replace the paper tray's friction pad (Tray 1).

- 1** Pull out the paper tray until it stops.

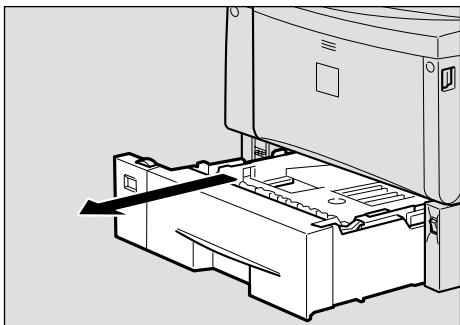


ZKDX270J

- 2** While lifting the front side of the tray, pull it out of the printer.

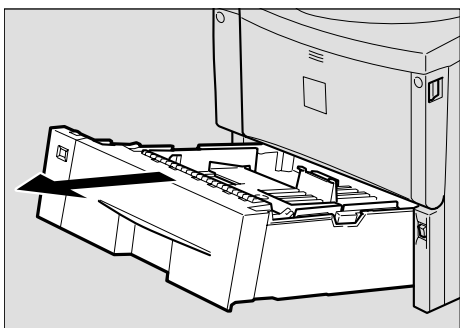

ZKEY140E

- 3** Remove paper from the paper tray. Place the tray upside down on a flat surface.

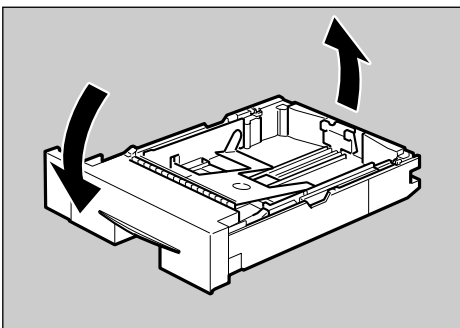


ZKDM160J

- 4** Use a sharp-pointed item like a ball-point pen, to release the two catches that lock the friction pad.

Note

- ☐ The friction pad may fall off when the catches are released. Place your hand over the friction pad while releasing the catches.
- ☐ The friction pad spring may come off. Be careful the spring does not fall off and become lost.

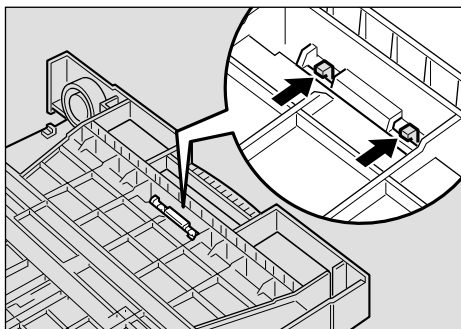


ZKEM170E

- 5** Return the paper tray to its original position, and remove the friction pad from the tray.

Note


- ☐ The friction pad spring may come off. Be careful the spring does not fall off and become lost.

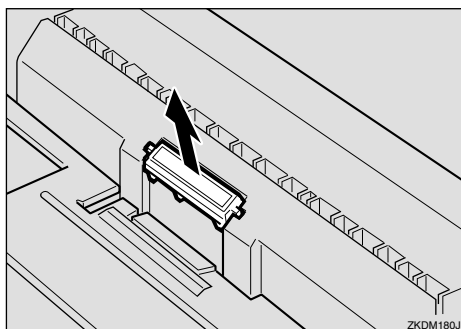

ZKDM180J

6 Insert the new friction pad in the paper tray.

Attach the center projection of the new friction pad to the spring and align the projection of both sides of the friction pad to the holes of the paper tray. Then push the friction pad as shown in the illustration until it clicks.

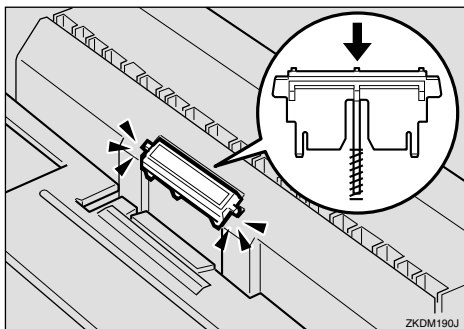

After pushing in the friction pad, try pushing it several times to check it is properly installed. If it jumps back into position due to the force of the spring, it is properly installed.

7 If your printer is equipped with the optional Paper Feed Unit(s), follow the same procedure when replacing the friction pad.

Replacing the Paper Feed Rollers

Replace all feed rollers including the printer and the optional Paper Feed Unit(s). The following procedure shows how to replacing the paper feed rollers of the printer.

⚠ CAUTION:


- When lifting the machine, use the inset grips on both sides. Otherwise the printer could break or cause injury if dropped.

1 Remove the optional Duplex Unit from the printer if it is installed.

🔍 Reference

See "Moving and Transporting the Printer" in the Printer Reference on the CD-ROM labeled "Operating Instructions".

2 Move the printer to the edge of a sturdy and stable table or desk.

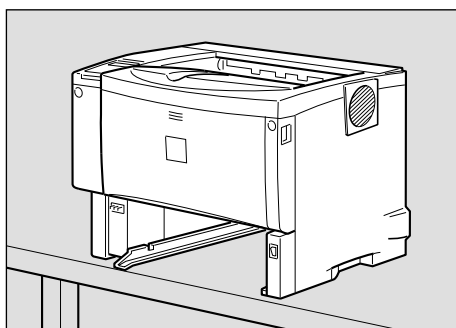

⚠ Important


- ☐ Be sure to move the printer horizontally. Moving the printer facing up on down may cause the toner to scatter.
- ☐ Do not put the printer on an unstable or tilted surface.

Note

- ❑ If the printer is equipped with the optional Paper Feed Unit, do not move the printer and the unit together, they are not securely attached.


- 3** Slide the green lock lever to the right (①), remove the paper feed roller (②).

The illustration shows an example of the paper feed roller as installed in the printer.

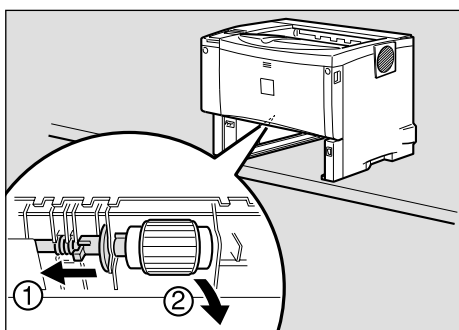

ZKEM120E

- 4** While sliding the green lock lever to the right (①), set the new roller (②). After that, return the green lock lever to its original position (③).

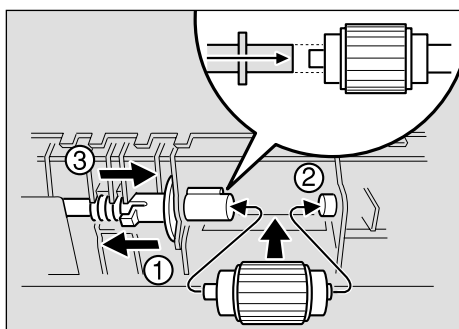

ZKEM130E


Note

- ❑ Confirm that the green lock lever secures the roller correctly by checking if the new roller rotates smoothly.

- 5** If the printer is equipped with the optional Paper Feed Unit(s), follow the same procedure when replacing the paper feed roller.

If you installed two Paper Feed Units, also replace both paper feed rollers.

- 6** Place paper in the paper trays and additional removed paper trays. Lift the front of the tray, and slide it carefully into the printer until it stops.

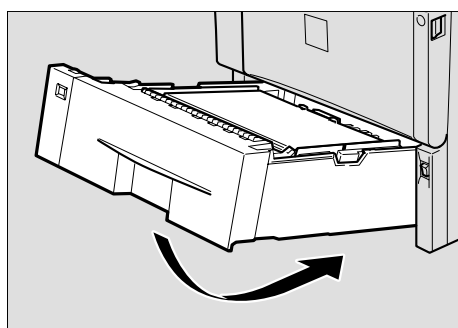


ZKDY150J

7

Replacing the Transfer Roller

- 1** While holding the front cover with both hands on the left and right sides, press the release button to open it.

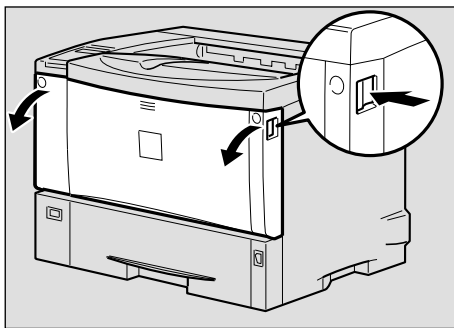


ZKEH120E

- 2** Pull the toner cartridge out of the printer, while lifting the front side.

 Note


- ☐ Be sure to place the used cartridge on the level place.

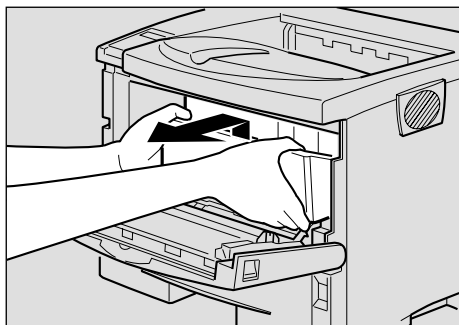

ZKET110E


- 3** To avoid making your hands dirty with toner from the transfer roller, wear the gloves included in the Maintenance Kit.

- 4** Hold the lock levers ("●" parts), and pull them.

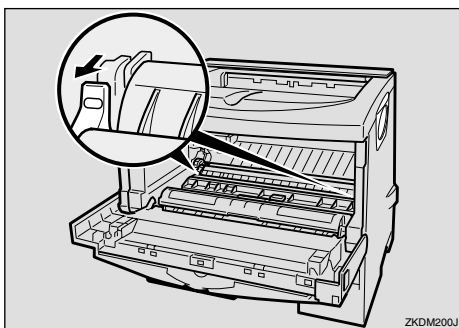


ZKDM200J

- 5** Hold the green parts of the roller on both sides, and remove the roller from the printer as shown in the illustration.

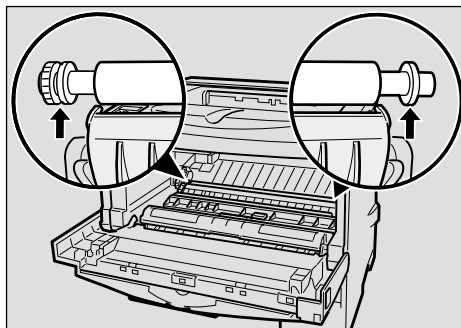

ZKEM210E

- 6** Insert the new transfer roller on the socket with the gear of the roller positioned on the left.

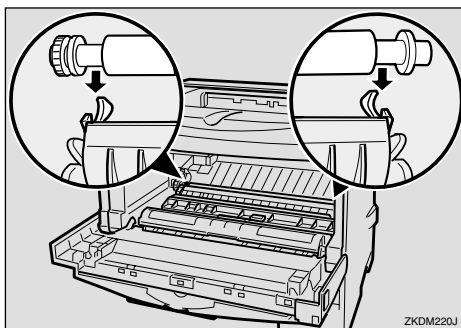


ZKDM220J

 Important

- ☐ Do not insert the roller on the back of the socket, or the printer might be damaged.
- ☐ Insert the metallic part of the roller on the socket. If you insert the sponge part of the roller, the roller might be damaged.

- 7** Push down the green parts of both sides of the printer until it clicks as shown in the illustration.

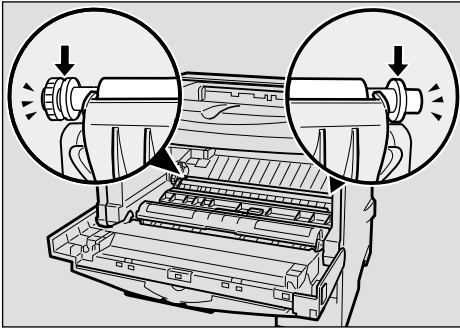


ZKEM221E

 Note


- ☐ When the transfer roller is set, the transfer roller cover will return to its original position automatically.

- 8** Holding the grips of the toner cartridge, insert it into the printer until it stops.

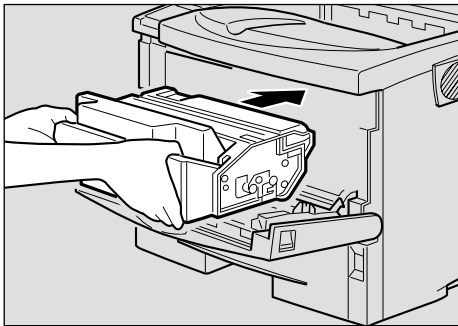


ZKET120E

- 9** Lower the toner cartridge when it touches the back.

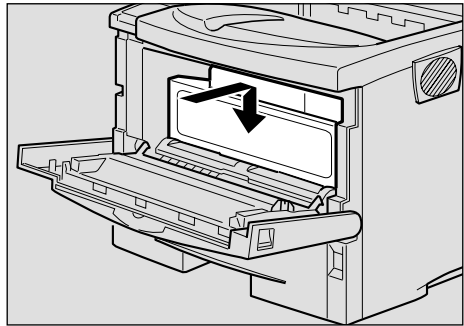

ZKET140E

- 10** Close the front cover by pressing the left and right side indentations.

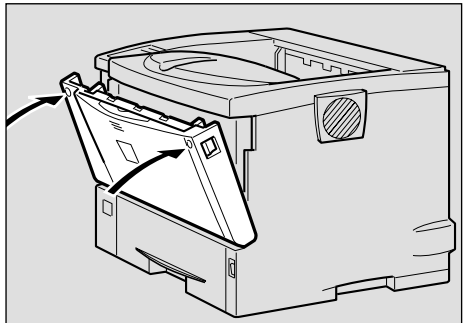

ZKEH130E

- 11** Take the gloves off and go to p.182 "Replacing the Fusing Unit".

Replacing the Fusing Unit

⚠ CAUTION:


- The fusing unit becomes very hot. When installing the new fusing unit, turn off the printer and wait about an hour. After that, install the new fusing unit. Not waiting for the unit to cool down can result in a burn.

- 1 If the rear cover is attached to the printer, remove it.


🔧 Note

- ☐ Proceed to step 2 if the optional Duplex Unit was removed in step 1, "Replacing the Paper Feed Rollers".


- 1 Place a finger in the printer's rear cover finger hole (upper center) and pull it open.

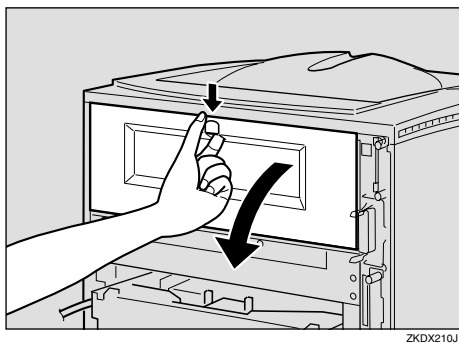


- 2 Remove the rear cover in a horizontal direction.

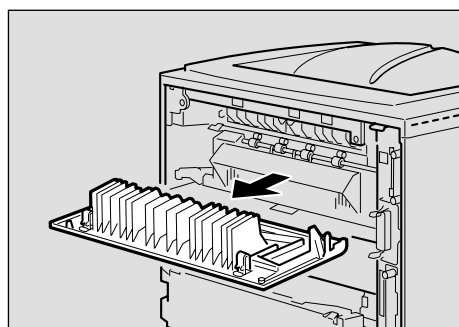


- 2 Lift the lock levers of the fusing unit as shown in the illustration.

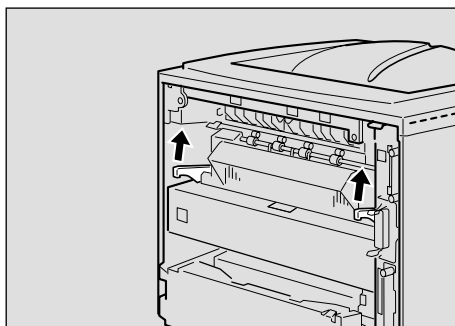


- 3 Pull the fusing unit out.

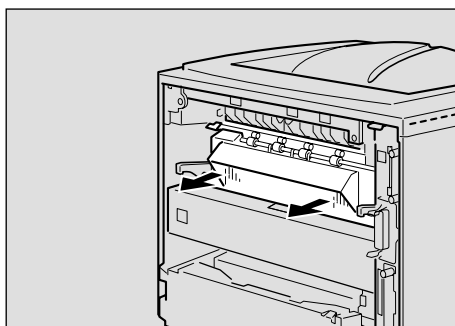

- 4 Pull out the pins on both sides of the new fusing unit.

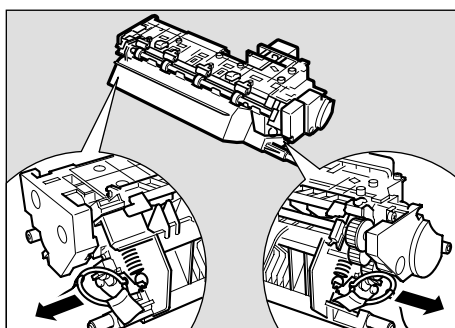


- 5** Replace the new fusing unit into the printer.

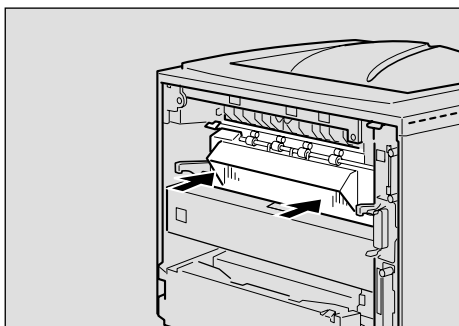

ZKEX224E

- 6** Push the lock levers of the fusing unit down until it clicks.

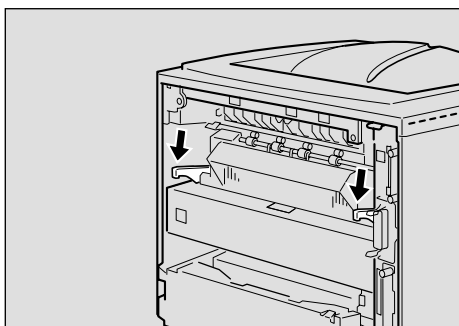


ZKEX225E

- 7** Reinstall the rear cover removed in step 1.

Note


- ☐ Proceed to step 8 if the optional Duplex Unit was removed in step 1, "Replacing the Paper Feed Rollers".

- 1** Insert the rear cover to the inside grooves on both sides of the printer in a horizontal direction.

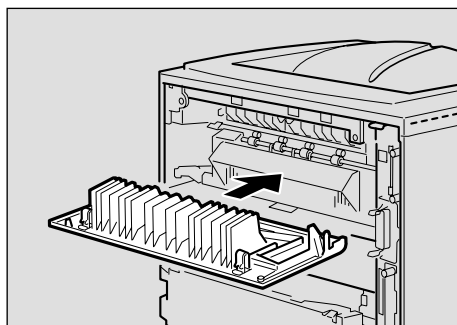

ZKEX221E

- 2** Close the rear cover.
Proceed to step 9.

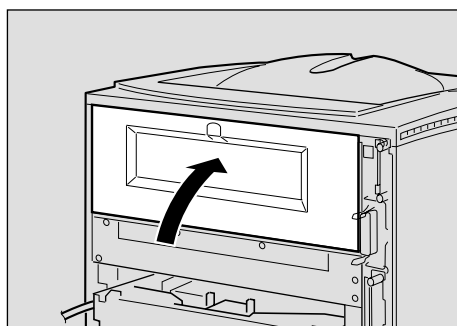

ZKEX211E

- 8** Reinstall the optional Duplex Unit if it was removed in step 1, "Replacing the Paper Feed Rollers".

Reference

See p.189 "Moving and Transporting the Printer".

- 9** Print a configuration page to confirm that the printer works properly.

Reference

For more information about printing the configuration page, see p.128 "List/Test Print Menu".


Collate

Reference

For more information about collate, see the printer driver's Help file.

Collate

Outputs can be assembled as sets in sequential order.

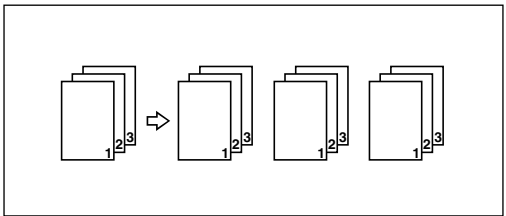

Limitation

- ☐ You must install an additional Memory Unit or the optional hard disk drive to use the collate function.
- ☐ The numbers of pages that can be collated after installing an additional Memory Unit are indicated below.

Total Memory Size	Approximate Number of Pages ^{*1}
128 MB (additional of 64 MB)	200 pages
192 MB (additional of 128 MB)	1,000 pages
320 MB (additional of 256 MB)	

^{*1} Based on A4 , 5% chart and 600 dpi. Page numbers vary according to resolution and data.

- ☐ When the optional hard disk drive installed, maximum number of pages that can be collated is about 1,000, including Sample Print and Locked Print pages.

Spool Printing

With Spool Printing, the whole data of a print job is saved in the Printer Hard Disk before printing. To use this function, set it from the menu. See p.146 "System Menu".

Important

- ☐ Do not turn off the printer or the computer when a print job is being spooled and the **Data In** indicator is blinking. If you do, the print job will remain in the Printer Hard Disk and be printed when the printer is turned on.

Limitation

- ☐ Spool Printing does not appear unless the optional Hard Disk Drive is installed.
- ☐ Data that has been received in the protocol other than LPD or IPP cannot be spooled.
- ☐ Up to 50 jobs (approximately 500 MB) can be spooled at a time.
- ☐ When Spool Printing is on, the size of a single print job cannot exceed 500 MB.
- ☐ When sending spooled print jobs from more than one computer at the same time, up to five LPR jobs and one IPP job can be spooled. Jobs exceeding the maximum number cannot be spooled. Wait until the number of spooled print jobs falls below the maximum.

Note

- ☐ When "On" is selected, the first print will take time.

❖ Confirm or delete the spooled job from a Web browser.

The spooled job can be seen or deleted from a Web browser. Start a Web browser, and then input the IP address of the printer for URL to show the top page. Click **[Admin Info.]**, and then click **[Spool Printing]**. Select the file, check for delete, input the password, and then click the delete button. (The default password is "password".)

Precautions when using Windows Server 2003

Precautions when using the Terminal Server mode

Certain printer driver functions are disabled. Disabled functions are displayed in gray. When using all printer driver functions, use Windows Server 2003 in normal mode.

Memory Capacity and Paper Size

The following tables show the typical memory requirements of the RPCS printer language. Memory requirements depend on your print data and printing environment, such as the "Memory Priority" setting or total memory size that the printer has available. The print mode also effects whether the print job will equally completed.

Setting of the "Frame Priority"

Paper Size	Memory Capacity	Resolution (dpi)		
		300 x 300	600 x 600	1,200 x 1,200
A5	64MB	○	○	○
	128MB	○	○	○
	192MB	○	○	○
	320MB	○	○	○
B5	64MB	○	○	○
	128MB	○	○	○
	192MB	○	○	○
	320MB	○	○	○
A4 Letter (8 1/2x11)	64MB	○	○	○
	128MB	○	○	○
	192MB	○	○	○
	320MB	○	○	○
Legal (8 1/2x14)	64MB	○	○	○
	128MB	○	○	○
	192MB	○	○	○
	320MB	○	○	○
Maximum custom size (216 x 432 mm)	64MB	●	●	●*
	128MB	●	●	●
	192MB	●	●	●
	320MB	●	●	●
16K (195x267mm)	64MB	○	○	○
	128MB	○	○	○
	192MB	○	○	○
	320MB	○	○	○

○

Means that the print job is supported by simplex and Duplex printing.

●

Means the print job is supported only by simplex printing.

●*

Means it might be impossible to print images complex data with printing. Even with simple data, the number of pages printed with printing might be limited.

Setting of the “Font Priority”

Paper Size	Memory Capacity	Resolution (dpi)		
		300 x 300	600 x 600	1,200 x 1,200
A5	64MB	○	○	○
	128MB	○	○	○
	192MB	○	○	○
	320MB	○	○	○
B5	64MB	○	○	○
	128MB	○	○	○
	192MB	○	○	○
	320MB	○	○	○
A4 Letter (8 1/2x11)	64MB	○	○	○*
	128MB	○	○	○
	192MB	○	○	○
	320MB	○	○	○
Legal (8 1/2x14)	64MB	○	○	○*
	128MB	○	○	○
	192MB	○	○	○
	320MB	○	○	○
Maximum custom size (216 x 432 mm)	64MB	●	●	●*
	128MB	●	●	●
	192MB	●	●	●
	320MB	●	●	●
16K (195x267mm)	64MB	○	○	○
	128MB	○	○	○
	192MB	○	○	○
	320MB	○	○	○

○

Means that the print job is supported by simplex and Duplex printing.

○*

Means it might be impossible to print images complex data with Duplex printing. Even with simple data, the number of pages printed with Duplex printing might be limited.

●

Means the print job is supported only by simplex printing.

●*

Means it might be impossible to print images complex data with printing. Even with simple data, the number of pages printed with printing might be limited.

Moving and Transporting the Printer

⚠ CAUTION:

- When lifting the machine, use the inset grips on both sides. Otherwise the printer could break or cause injury if dropped.
- When you move the printer, remember to unplug the power cord from the wall outlet to avoid a fire or an electric shock.
- When you pull out the plug from the socket, grip the plug to avoid damaging the cord and causing a fire or an electric shock.

Repack the printer in its original packing materials for transporting.

⚠ Important

- ❑ Be sure to disconnect all cables from the printer before transporting it.
- ❑ The printer is a precision piece of machinery. Take care to avoid damage during shipment.

Moving the Printer

⚠ CAUTION:

- The machine weight is approximately 17 kg (37.5 lb. bond).
- When lifting the machine, use the inset grips on both sides. Otherwise the printer could break or cause injury if dropped.
- Before moving the machine, unplug the power cord from the outlet. If the cord is unplugged abruptly, it could become damaged. Damaged plugs or cords can cause an electrical or fire hazard.

Moving the printer in the short distance


1 Confirm that the followings are true:

- The power switch is turned off.
- The power cord is unplugged from the wall outlet.
- The interface cable is unplugged from the printer.

2 If you installed external options, remove them.


Removing the Duplex Unit

1 Push down the lever on right side of the Duplex Unit (①) and pull it out until it stops (②).

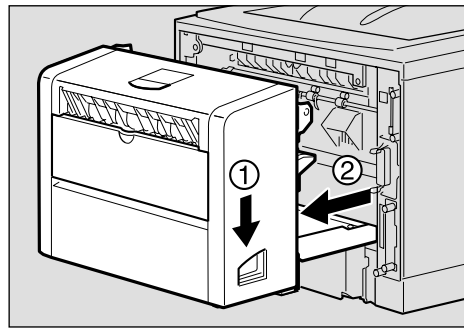

ZKEX660E

2 Push the under board levers (①) and pull the Duplex Unit out of the printer (②).

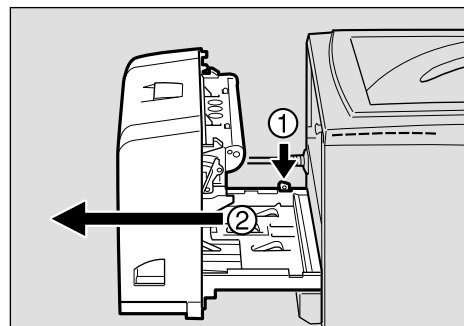


ZKEY450E

3 Be sure to close the Bypass Tray and the front cover.

4 Lift the printer and move it to the place where you want to install it.

⚠ CAUTION:

- *When lifting the machine, use the inset grips on both sides. Otherwise the printer could break or cause injury if dropped.*

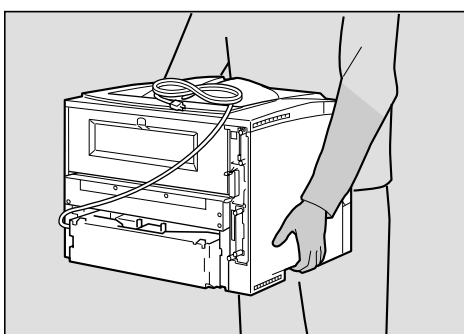

ZKEH221E

7

⚠ Important

- ☐ Be sure to move the printer horizontally. Moving the printer facing up or down may cause the toner to scatter.
- ☐ If the Paper Feed Unit(s) is installed, detach and move the printer separately. Never move the printer with the Paper Feed Unit(s) attached.

Specifications

Mainframe

❖ Configuration:

Desktop

❖ Print Process:

Laser beam scanning & Electrophotographic printing
Dual component toner development

❖ Printing Speed:

- Basic model
 - Network standard model
- Maximum 25 pages per minute (A4 , 8 1/2 × 11 )

Note

- ☐ Continuous printing on sheets with a width of 170 mm or smaller may decrease the printing speed depending on the temperature control of the fusing unit.

❖ Interface:

Standard 36-pin printer cable and a parallel port on the host computer
IEEE 1284 I/F (Compatible, ECP, Nibble)

- Do not use a cable more than 2.5 meters (8.2 feet) long.
- USB2.0
- Bidirectional IEEE1284
- 10/100Base-TX(std.for AP400N)

❖ Resolution:

1,200 × 1,200 dpi (PCL 6, RPCS, PS, PDF)
600 × 600 dpi (PCL 6, PCL 5e, RPCS, PS, PDF)
300 × 300 dpi (PCL 5e, PDF)

❖ Printer Language:

PCL 6 (XL) , PCL 5e, RPCS, Adobe PostScript 3

❖ Fonts:

PCL 6, PCL 5e

Agfa Font Manager 35 Intellifonts, 10 TrueType fonts, and 1 bitmap font
Font Manager available, plus 31 additional fonts.

PostScript, PDF

136 fonts(Type 2:24, Type 14:112)

❖ Paper size:

See p.35 “Paper and Other Media Supported by This Printer”

❖ **Paper Weight:**

See p.35 “Paper and Other Media Supported by This Printer”

❖ **Power Source:**

220 - 240 V, 50/60 Hz, 4.1 A or more

❖ **Power Consumption:**

Maximum	820 W or less
Printing	760 W or less
Energy Saver	7.5 W or less

❖ **Noise Emission ^{*1}:****Sound Power Level**

	Mainframe Only
During Printing	63 dB (A)
Stand-by	39 dB (A)

Sound Pressure level ^{*2}

	Mainframe Only
During Printing	53 dB (A)

^{*1} The following measurements are actual values made in accordance with ISO7779.

^{*2} Measured at the position of a bystander.

❖ **Dimensions: ^{*1}**

	Width	Depth	Height
Printer Only (tray not extended)	388 mm (14.9 inches)	450 mm (17.7 inches)	345 mm (13.6 inches)
Printer Only (tray extended)	388 mm (14.9 inches)	508 mm (20.0 inches)	345 mm (13.6 inches)
With one optional feed unit	388 mm (14.9 inches)	450 mm (17.7 inches)	479.5mm (18.9 inches)
With two optional feed units	388 mm (14.9 inches)	450 mm (17.7 inches)	614 mm (24.1 inches)

^{*1} Measurement conditions: With paper tray and Bypass Tray extension closed.

❖ **Weight:**

Approximately 17 kg (37.5 lb. bond) (toner cartridge and power cord included)

❖ **Warm-up Time:**

Less than 12 seconds (23°C, 73F)

❖ Paper Capacity:

Standard paper tray	500 sheets ^{*1} (80g/m ² , 20 lb.bond)
Bypass Tray ^{*2}	100 sheets ^{*1} (80g/m ² , 20 lb.bond)
Optional Paper Feed Unit × 2	500 sheets × 2 ^{*1} (80g/m ² , 20 lb.bond)
Optional Envelope Feeder ^{*3}	60 envelopes ^{*4}

^{*1} Paper weight: 60 – 105 g/m² (16 – 28 lb. bond)

^{*2} You can load up to 10 envelopes (55 – 157 g/m², 14 – 42 lb. bond) at the same time.

^{*3} To use the Envelope Feeder Unit, the optional Paper Feed Unit is required. The paper tray of the feed unit can be replaced with the Envelope Feeder Unit.

^{*4} For more information about envelopes, see p.42 “Types of Paper and Other Media”.

❖ Paper Output Capacity:

250 sheets (80 g/m², 20 lb. bond)

❖ Memory:

Standard 64MB, up to 320MB (with the optional Memory Unit)

❖ Network (Basic model printer requires the optional Network Interface Board):

Topology: Ethernet (10BaseT/100BaseTX)

Protocol: TCP/IP, NetBEUI, IPX/SPX, AppleTalk

❖ Optional Equipment:

Common for the Basic model printer and the Network standard model printer

- Paper Feed Unit Type 400
- Envelope Feeder Type 400
- AD450 (Duplex Unit)
- Memory Unit Type C 64MB
- Memory Unit Type C 128MB
- Memory Unit Type C 256MB
- Hard Disk Drive Type 2600
- 1394 Interface Unit Type 4510
- 802.11b Interface Unit Type A
- Bluetooth Interface Unit Type 2045

Unique for the Basic model printer

- Network Interface Board Type 2610

Options

Paper Feed Unit Type 400

- ❖ **Dimensions (W×D×H):**
388 × 496 × 135 mm (15.3 × 17.9 × 5.3 inches)
(without pins on the unit)
- ❖ **Paper Weight:**
60 – 105 g/m² (16 – 28 lb. bond)
- ❖ **Paper Size:**
See p.35 “Paper and Other Media Supported by This Printer”.

Envelope Feeder Type 400

- ❖ **Dimensions (W×D×H):**
388 × 440 × 96 mm (15.3 × 15.9 × 3.8 inches)
- ❖ **Paper Weight:**
72 – 90 g/m² (19 – 24 lb. bond)
- ❖ **Paper Size:**
See p.35 “Paper and Other Media Supported by This Printer”.

AD450 (Duplex Unit)

- ❖ **Dimensions (W×D×H):**
340 × 380 × 250 mm (13.4 × 15.0 × 7.7 inches)
- ❖ **Paper Size:**
See p.35 “Paper and Other Media Supported by This Printer”.
- ❖ **Paper Weight:**
60 – 105 g/m² (17 – 28 lb. bond)
- ❖ **Weight:**
5 kg (11.0 lb. bond)

Hard Disk Drive Type 2600

- ❖ **Storage Capacity (Formatted):**
6 GB
You can install PostScript fonts with this optional Hard Disk Drive. With a Macintosh, types of fonts supported are PostScript Type 1 and PostScript Type 2. To download them, use PS Utility for Mac.

Memory Unit Type C (64MB/128MB/256MB)

- ❖ **Module Type:**
SO-DIMM (Small Outline Dual-in-line Memory Module)
- ❖ **Memory Type:**
SDRAM (Synchronous Dynamic RAM)
- ❖ **Number of Pins:**
144 pins

Network Interface Board Type 2610

- ❖ **Topology:**
Ethernet (10BaseT/100BaseTX)
- ❖ **Protocols:**
TCP/IP, NetBEUI, IPX/SPX, AppleTalk
- ❖ **Interface Connector:**
RJ45
- ❖ **Required Cable:**
STP (Shielded Twisted-Pair) cable
Category / Type5 or better

1394 Interface Unit Type 4510

- ❖ **Transmission Spec.:**
IEEE 1394
- ❖ **Device Class:**
SCSI print, IP over 1394
- ❖ **Interface Connector:**
IEEE 1394 (6 pins × 2)
- ❖ **Required cable:**
1394 interface cable (6 pins × 4 pins, 6 pins × 6 pins)

** Important**

- ☐ You cannot plug devices together to create loops.
- ☐ Do not use a cable more than 4.5 meters (14.8 feet) long.

- ❖ **Connectable number of device in a bus:**
Maximum 63

❖ **Allowed cable hops in a bus:**

Maximum 16

❖ **Power supply:**

Nonpower supply

Cable Power repeated (IEEE 1394a-2000 compliant)

802.11b Interface Unit TypeA (R-WL11)

❖ **Transmission Spec.:**

Based on IEEE 802.11b (Wireless LAN)

❖ **Protocol:**

TCP/IP, NetBEUI, IPX/SPX, AppleTalk

 Note

☐ SmartNetMonitor and Web Image Monitor are supported.

❖ **Data Transfer Speed:**

Auto select from below speed

1Mbps, 2Mbps, 5.5Mbps, 11Mbps

❖ **Frequency Range:**

- Inch version:
2412-2464 Mhz (1-11 channels)
- Metric version:
2412-2472 Mhz (1-13 channels)

❖ **Transmittable Distance:**

1Mbps 400m ^{*1}

2Mbps 270m ^{*1}

5.5Mbps 200m ^{*1}

11Mbps 140m ^{*1}

^{*1} These figures are a guideline for outdoor use. In general, the transmittable distance indoors is 10-100 m, depending on the environment.

❖ **Transmission Mode:**

ad hoc mode and infrastructure mode

Bluetooth Interface Unit Type 2045

❖ **Supported Profiles:**

SPP (Serial Port Profile)

HCRP (Hardcopy Cable Replacement Profile)

BIP (Basic Imaging Profile)

❖ **Frequency Range:**

2GHz ISM band

❖ **Data Transmission Speed:**

732 kbps

 Note

- ☐ The transmission speed is adjusted according to factors such as the distance and obstacles between the devices, radio signal condition and Bluetooth™ adaptor.

❖ **Maximum Range:**

10m

Consumables

CAUTION:

- *Our products are engineered to meet the highest standards of quality and functionality. When purchasing expendable supplies, we recommend using Only those specified by an authorized dealer.*

❖ **Toner Cartridge**

	Printable number of pages per cartridge ^{*1}
Toner Cartridge	25,000 pages

^{*1} A4, 3% test chart

Note

- ☐ The actual number of printed pages you get from a particular toner cartridge depends on the type and size of paper you are using, the contents of your print images, and printing environment conditions. All this means that a toner cartridge might require replacement sooner than the normal life described above.
- ☐ The number of printable pages that can be expected from the starter toner cartridge included in the printer is about 10,000 pages (A4, 3% chart).

7

❖ **Maintenance Kit**

MAINTENANCE KIT Type 400

It is required to change the Maintenance Kit after every 90,000 pages have been printed. However, it may be necessary to change the parts earlier depending on their operating period.

Information about Installed Software

expat

Expat(Version 1.1). Copyright 1998, 1999 James Clark. All rights reserved.

- The software installed on this product includes the expat application software Version 1.1 (hereinafter "expat 1.1").
- The product manufacturer has not made any modification to the source code of the expat 1.1.
- The product manufacturer provides warranty and support to the software of the product including the expat 1.1 and the product manufacturer makes Mr. James Clark, the initial developer of the expat 1.1, free from these obligations.
- The expat 1.1 is made available under Mozilla Public License Version 1.1 (hereinafter "MPL 1.1"), and controller software of the product equals the Larger Work as defined in MPL 1.1. The software of this product except the expat 1.1 is licensed to the product manufacturer under separate agreement(s).
- The source code of the expat 1.1 is available at:
ftp://ftp.jclark.com/pub/xml/expat1_1.zip
- MPL 1.1 is also available at:
<http://www.mozilla.org/MPL/MPL-1.1.html>
- Information relating to the expat 1.1 is available at:
<http://www.jclark.com/xml/expat.html>

JPEG LIBRARY

- The software installed on this product is based in part on the work of the Independent JPEG Group.

NetBSD

Copyright Notice of NetBSD

For all users to use this product:

This product contains NetBSD operating system:

For the most part, the software constituting the NetBSD operating system is not in the public domain; its authors retain their copyright.

The following text shows the copyright notice used for many of the NetBSD source code. For exact copyright notice applicable for each of the files/binaries, the source code tree must be consulted.

A full source code can be found at <http://www.netbsd.org/>.

Copyright © 1999, 2000 The NetBSD Foundation, Inc.

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- ① Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- ② Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- ③ All advertising materials mentioning features or use of this software must display the following acknowledgment:
This product includes software developed by the NetBSD Foundation, Inc. and its contributors.
- ④ Neither the name of The NetBSD Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE NETBSD FOUNDATION, INC. AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Authors Name List

All product names mentioned herein are trademarks of their respective owners. The following notices are required to satisfy the license terms of the software that we have mentioned in this document:

- This product includes software developed by the University of California, Berkeley and its contributors.
- This product includes software developed by Jonathan R. Stone for the NetBSD Project.
- This product includes software developed by the NetBSD Foundation, Inc. and its contributors.
- This product includes software developed by Manuel Bouyer.
- This product includes software developed by Charles Hannum.
- This product includes software developed by Charles M. Hannum.
- This product includes software developed by Christopher G. Demetriou.
- This product includes software developed by TooLs GmbH.
- This product includes software developed by Terrence R. Lambert.
- This product includes software developed by Adam Glass and Charles Hannum.
- This product includes software developed by Theo de Raadt.
- This product includes software developed by Jonathan Stone and Jason R. Thorpe for the NetBSD Project.
- This product includes software developed by the University of California, Lawrence Berkeley Laboratory and its contributors.
- This product includes software developed by Christos Zoulas.
- This product includes software developed by Christopher G. Demetriou for the NetBSD Project.
- This product includes software developed by Paul Kranenburg.
- This product includes software developed by Adam Glass.
- This product includes software developed by Jonathan Stone.
- This product includes software developed by Jonathan Stone for the NetBSD Project.
- This product includes software developed by Winning Strategies, Inc.
- This product includes software developed by Frank van der Linden for the NetBSD Project.
- This product includes software developed for the NetBSD Project by Frank van der Linden
- This product includes software developed for the NetBSD Project by Jason R. Thorpe.
- The software was developed by the University of California, Berkeley.
- This product includes software developed by Chris Provenzano, the University of California, Berkeley, and contributors.

INDEX

1394 interface cable, 195
1394 Interface Unit Type 4510, 195
802.11b Interface Unit TypeA (R-WL11), 196

A

AD450, 194
adhesive Labels, 43
Adjusting the Image Density, 114
Adjusting the Registration, 116
Append CR to LF, 162
Auto Continue, 146

B

Bluetooth, 154
Bluetooth Interface Unit Type 2045, 197
Bypass Size, 124

C

Collate, 184
Config. Page, 128, 130
Config.P/Er.log, 128
Control Panel Lock
 Locking the Panel, 137
Copies, 146
Courier Font, 162
Curl Prevention, 134

D

Data In indicator, 90, 91
Def.Print Lang., 146
Duplex, 146

E

Edge-Edge Print, 146
Edge Smoothing, 146
E-Mail Date, 146
Energy Saver, 146
Envelope Feeder Type 400, 194
envelopes, 43
envelopes, loading, 55
error, 73
Error indicator, 89
Error Log, 128
Escape key, 123
Ethernet cable, 195
Ext. A4 Width, 162

F

Font Number, 162
Font Pitch, 162
fonts, 191
Font Source, 162
Form Lines, 162
friction pad, 177
friction pad, cleaning, 110
fusing unit, 182

H

Hard Disk Drive Type 2600, 194
HDD Format, 134
Hex Dump, 128
Host Interface, 122, 154

I

IEEE 1394 Setup, 154
IEEE 802.11b, 154
Image Density, 134
I/O Buffer, 154
I/O Timeout, 154

K

Key Repeat, 134

L

Language, 122, 172
Letterhead Mode, 146
List/Test Print, 122, 128
List/Test Print Parameters, 128
Locked Print, 66, 122

M

Macintosh
 uninstall, PostScript, 34
Maintenance, 122, 134, 135
MAINTENANCE KIT Type 400, 175
media, 35
memory, 187, 193
Memory Overflow, 146
Memory Unit Type C
 (64MB/128MB/256MB), 195
Memory Usage, 146
menu, accessing, 122
menu, changing, 172
Menu Chart, 119

Menu key, 122
Menu List, 128
Menu Protect, 134, 137
messages, 73
misfeed, 97

N

Network Interface Board, 193, 195
Network Printing Guide, 3
Network Setup, 154
NIB, 193
Nortify by E-Mail, 146

O

OHP transparencies, 43
On Line indicator, 89
On Line key, 89, 123
options, 193, 194
Orientation, 162

P

Page Size, 146
panel display, messages, 73
Panel Lock, 137
Panel Protect
 Locking the Panel, 137
paper, 35
paper feed roller, 178
paper feed roller, cleaning, 111
Paper Feed Unit Type 400, 194
Paper Input, 122, 124
paper, loading, 47
paper, sizes, types, 35
Paper Type, 124
Parallel cable, 191
PCL, 162
PCL 5e
 Windows 2000, uninstalling, 29
 Windows 95/98/Me, uninstalling, 29
 Windows NT 4.0, uninstalling, 30
 Windows XP/Server 2003, uninstalling, 29
PCL 6
 Windows 2000, uninstalling, 29
 Windows 95/98/Me, uninstalling, 29
 Windows NT 4.0, uninstalling, 30
 Windows XP/Server 2003, uninstalling, 29
PCL Config.Page, 128
PCL Menu, 122
PDF Config.Page, 128
PDF Menu, 122

Plain Paper, 42
Point Size, 162
PostScript
 Macintosh, uninstall, 34
 Windows 2000, uninstalling, 33
 Windows 95/98/Me, uninstalling, 33
 Windows NT 4.0, uninstalling, 34
 Windows XP/Server 2003, uninstalling, 33

Ppr.Size Errors, 134
Precautions when using the Terminal
 Server mode
 Windows Server 2003, 186
Precautions when using Windows Server 2003
 Windows Server 2003, 186
Printer Reference, 3
Print Lang., 146
Prt. Err Report, 146
PS Font List, 128
PS Menu, 122

Q

Quick Installation Guide, 3

R

RAM Disk, 146
Registration, 134
Registration roller, cleaning, 113
Resolution, 162
RPCS
 Windows 2000, uninstalling, 31
 Windows 95/98/Me, uninstalling, 31
 Windows NT 4.0, uninstalling, 32
 Windows XP/Server 2003, uninstalling, 31

S

Sample Print, 61, 122
SDRAM, 193, 195
Setup Guide, 3
specifications, 191
Spool Printing, 146
Sub Paper Size, 146
Symbol Set, 162
System, 122, 146

T

toner cartridge, replacing, 107
Toner Saving, 146
transfer roller, 179
Tray Locking, 124
Tray Paper Size, 124
Tray Priority, 124
troubleshooting, 73

U

Unit of Measure, 146
USB Setting, 154

W

Windows 2000
 PCL 5e, uninstalling, 29
 PCL 6, uninstalling, 29
 PostScript, uninstalling, 33
 printer properties, PCL, 6
 printer properties, PostScript, 19
 printer properties, RPCS, 13
 RPCS, uninstalling, 31
Windows 95/98/Me
 PCL 5e, uninstalling, 29
 PCL 6, uninstalling, 29
 PostScript, uninstalling, 33
 printer properties, PCL, 5
 printer properties, PostScript, 18
 printer properties, RPCS, 11
 RPCS, uninstalling, 31
Windows 95/98/Me, Windows 2000,
 Windows XP/Server 2003, Windows NT 4.0
 canceling a job, 25
Windows NT 4.0
 PCL 5e, uninstalling, 30
 PCL 6, uninstalling, 30
 PostScript, uninstalling, 34
 printer properties, PCL, 9
 printer properties, PostScript, 22
 printer properties, RPCS, 16
 RPCS, uninstalling, 32
Windows XP/Server 2003
 PCL 5e, uninstalling, 29
 PCL 6, uninstalling, 29
 PostScript, uninstalling, 33
 printer properties, PCL, 6
 printer properties, PostScript, 19
 printer properties, RPCS, 13
 RPCS, uninstalling, 31
WL.LAN Defaults, 134
WL.LAN Signal, 134

