

Notes for Users

This is a note for Printer Reference and Network Printing Guide supplement.

PDF Direct Print

PDFs are sent directly to the machine for printing, without using PDF viewers, such as Adobe Acrobat Reader. This reduces computer work load and network traffic load.

If problems occur, see "Troubleshooting", Printer Reference.

Limitation

- ☐ Possible only with genuine Adobe PDF files.
 - ☐ PDF versions 1.3, 1.4, and 1.5 are compatible.
 - ☐ Transparency and JBIG2, which are intrinsic functions of PDF version 1.4 are not supported.
 - ☐ Intrinsic functions of PDF version 1.5 are not supported.
 - ☐ Paper sizes larger than those supported by the machine cannot be printed.
-

Printing method

❖ **Using DeskTopBinder V2 (Lite)**

By registering PDF files with DeskTopBinder V2 (Lite), you can send PDF files directly to this machine for printing.

Note

- ☐ The RPCS printer driver must be installed.
- ☐ Depending on the version of DeskTopBinder V2 (Lite), direct PDF printing may not be possible. Use DeskTopBinder V2 (Lite) on the CD that comes with this machine.
- ☐ Print settings can be made using PDF Direct Print properties.
- ☐ To print password-protected PDF files, one of the following settings is required:
 - On this machine's control panel press **[PDF: Change PW]** on the **[PDF]** menu to set the PDF password.
 - Enter the PDF password using Web Image Monitor. This will not change the password already set on the machine.

Reference

For details about operation, see DeskTopBinder V2 (Lite) Help.

❖ Using commands

Under UNIX and Windows, you can perform PDF Direct Print by using commands such as “ftp” and “lpr”.

Reference

- For details about printing using commands under UNIX, see “Printing Method”, UNIX Supplement. For Windows, also see Help for the respective command from the Command prompt (MS-DOS prompt) of your Windows operating system.

New functions Added to Web Image Monitor

Web Image Monitor lets you make settings remotely via Web browser. It is the equivalent of using the machine's control panel.

The new functions allow job deletion and e-mail notification.

E-mail Notification

When alerts, such as when paper running out or jams, occur, machine status notices can be sent using the E-mail Notification function.

The e-mail giving status notice is transmitted to the e-mail address set beforehand.

The timing of alert and status notification e-mail can be also set.

❖ Mandatory settings

Web Image Monitor

- **[E-mail]** on the **[Configuration]** menu
Set the administrator e-mail address, SMTP server address, and make any other necessary settings.
- **[Notification]** on the **[Configuration]** menu
Set the destination e-mail address for notification, notification items, timing of notification, and make any other necessary settings.

Reference

For details about settings, see Web Image Monitor Help.

Note

- ☐ Access the machine using the Web browser. Log on to Web Image Monitor's administrator mode.
- ☐ On the machine **[Notify by E-mail]** on the **[System]** menu must be **[On]** (default is **[On]**). To change this, see “System Menu”, Printer Reference.

Copyright © 2003

Printed in China

G091-8715