

# Notes for Users



These notes address mistakes and omissions in the operating manual.

## About the ENERGY STAR Program

Instead of "ENERGY STAR Program" in "Setup Guide", read the following.

### ENERGY STAR Program

ENERGY STAR® Program

The ENERGY STAR® Program encourages energy conservation by promoting energy efficient computers and other office equipment.

The program backs the development and dissemination of products that feature energy saving functions.

It is an open program in which manufacturers participate voluntarily.

Targeted products are computers, monitors, printers, facsimiles, copiers, scanners, and multi-function devices. Energy Star standards and logos are internationally uniform.

❖ **Low-power Mode (Energy Saver mode)**

This printer automatically lowers its power consumption 1 minute after the last operation has been completed. To exit Low-power (Energy Saver) mode, press any key on the control panel. For more information about how to configure Energy Saver mode, see “Making Printer Settings Using the Control Panel”, Software Guide as a HTML file on the CD-ROM.

❖ **Specifications**

Energy Saver mode	Power Consumption	With Options: 10.5 W or less Printer Only: 6.5 W
	Default Time	1 minute



**Note**

- The following information covers recent changes made to the Energy Star Program. Please read this information also.

Topic	Error	Corrections
"Software Guide" Making Printer Settings Using the Control Panel > System Menu > System Menu Parameters Energy Saver	<ul style="list-style-type: none"><li>E. Saver Timer Default: <u>30</u> minutes</li></ul>	<ul style="list-style-type: none"><li>E. Saver Timer Default: <u>1</u> minute</li></ul>

Copyright © 2007-2009

Printed in China

EN **USA** G116-8685A



G1168685A