PostScript 3

OPERATING INSTRUCTIONS SUPPPLEMENT



Read this manual carefully before you use this product and keep it handy for future reference.

For safety, please follow the instructions in this manual.

Introduction

This manual contains detailed instructions on the operation and maintenance of this machine. To get maximum versatility from this machine all operators should carefully read and follow the instructions in this manual.

Please read the Safety Information in the "Operating Instructions" before using this machine. It contains important information related to USER SAFETY and PREVENTING EQUIPMENT PROBLEMS.

Important

Parts of this manual are subject to change without prior notice. In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

Trademarks

Microsoft®, Windows®, and MS-DOS® are registered trademarks of Microsoft Corporation in the United States and/or other countries.

Adobe® and PostScript® are registered trademarks of Adobe Systems Incorporated.

Macintosh is registered trademark of Apple Computer, Incorporated.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights in those marks.

Notes:

Some illustrations might be slightly different from your machine.

Certain options might not be available in some countries. For details, please contact your local dealer.

TABLE OF CONTENTS

1. Printer Specific Functions

Installable Options	
Setting Up Options	
Printer Features	Ę

1. Printer Specific Functions

Installable Options

The following items are installable options.

❖ Paper Bank

500-sheet Input Tray. It consists of 2 trays.

♦ Large Capacity Tray

1500-sheet Large Capacity Tray.

Output Paper Device

- Type 1000 1000–sheet finisher.
- Type 3000 3000–sheet finisher.
- Type 3000 with Punch 3000–sheet finisher with punch kit.

❖ Mailbox

9-bin mailbox

❖ Job Separation Unit

Enables job separation feature.

Printer Memory

Up to 64 megabytes of optional memory can be installed in this machine. (Setting the total memory to 72 megabytes.)

Setting Up Options

To use the installed options correctly, you must set up the printer driver. If the options are not recognized, you can't use options even if they are physically installed on your printer. The method of setting up the printer driver differs depending on your operating system.

Windows

You can set up any of the options in the following tabs.

Windows 95/98	[Device Options]
Windows 3.1x	[Features]
Windows NT4.0	[Device Settings]

Note

☐ You must access the printer driver from Windows to set up the options. You cannot set up options when accessing the printer driver from an application.

Limitation

- ☐ If you use Windows NT4.0, you can change printer settings only if you have Full Control access permissions. Members of the Administrators, Server Operators, Print Operators, or Power Users group have Full Control permission by default.
- ☐ If you use Adobe Page Maker 6.0 or 6.5 under Windows 95/98 or Windows NT4.0, you must set up options in the Adobe PageMaker's print dialog box.

Macintosh

You can set up any of the options from the [Chooser] dialog box.

For more information on setting up options, see the "Operating Instructions" that comes with your printer.

Printer Features

This section describes how to print a document using printer specific functions.

Paper Source

Use this to select the input tray you want to use.

The following table shows the tabs or menus where you can select this function.

Windows 95/98	[Paper] tab
Windows 3.1x	[Paper] tab
Windows NT4.0	[Page Setup] tab
Macintosh	[General] in the [Print] dialog box

Duplex Printing

Use this to select duplex printing.

The following table shows the tabs or menus where you can select this function.

Windows 95/98	[More Options] in the [Paper] tab
Windows 3.1x	[Features] tab
Windows NT4.0	[Page Setup] tab
Macintosh	[General] in the [Print] dialog box

Output Bin

Use this to select the output tray you want to use.

The following table shows the tabs or menus where you can select this function.

Windows 95/98	[More Options] in the [Paper] tab
Windows 3.1x	[Features] tab
Windows NT4.0	[Printer Features] in [Document Options] in the [Advanced] tab
Macintosh	[Printer Specific Options] in the [Print] dialog box

Resolution

Use this to set the resolution in dots per inch. The available options are 400dpi and 600dpi.

Windows 95/98	[Graphics] tab
Windows 3.1x	[Features] tab
Windows NT4.0	[Graphic] in the [Advanced] tab
Macintosh	[Printer Specific Options] in the [Print] dialog box

Job Separation

Use this to place the printout shifted in each job.

The following table shows the tabs or menus where you can select this function.

Windows 95/98	[Printer Features] in the [Device Options] tab
Windows 3.1x	[Features] tab
Windows NT 4.0	[Printer Features] in [Document Options] in the [Advanced] tab
Macintosh	[Printer Specific Options] in the [Print] dialog box

Note

- ☐ If you use job separation function in the following case, the printed output appears to have been collated by rotate separation.
- The printer is not equipped with a finisher, and paper identical in size but different in direction is loaded in the paper trays.

 In this case, the printer chooses the paper trays automatically, and the paper tray that was specified with the printer driver might not be used.

Automatic Tray Switching

Use this to specify whether the Automatic Tray Switching feature is on. When paper runs out in the currently selected tray, you can specify whether or not the printer chooses another tray that has the same paper in size, media type and feed direction.

The following table shows the tabs or menus where you can select this function.

Windows 95/98	[Printer Features] in the [Device Options] tab
Windows 3.1x	[Features] tab
Windows NT 4.0	[Printer Features] in [Document Options] in the [Advanced] tab
Macintosh	[Printer Specific Options] in the [Print] dialog box

Staple

Use this to specify whether you want your output stapled. When you turn Staple on, the printed document is collated automatically. You should switch off collation from the Print window of your application to avoid the entire job from being stapled together.

Limitation

□ To use this function, the optional finisher must be installed on your printer. The available options differ depending on the type of finisher. When you are using type 10000–finisher you cannot select the follows: "Top Left Horizontal Portrait", "Top Left Horizontal Landscape", "Top Left Vertical Portrait", "Top Left Vertical Landscape", "Top 2 Portrait", "Top 2 Landscape", "Left 2 Portrait", "Left 2 Landscape".

Off Disables stapling.

• Top Left Slant Portrait

Places a staple on the top left side of the document when "Orientation" is Portrait. The staple is placed at a 45 degree angle to the left side.

• Top Left Slant Landscape

Places a staple on the top left side of the document when "Orientation" is Landscape. The staple is placed at a 45 degree angle to the left side.

• Top Left Horizontal Portrait

Places a staple on the top left side of the document when "Orientation" is Portrait. The staple is placed parallel to the top side.

• Top Left Horizontal Landscape

Places a staple on the top left side of the document when "Orientation" is Landscape. The staple is placed parallel to the top side.

• Top Left Vertical Portrait

Places a staple on the top left side of the document when "Orientation" is Portrait. The staple is placed parallel to the left side.

• Top Left Vertical Landscape

Places a staple on the top left side of the document when "Orientation" is Landscape. The staple is placed parallel to the left side.

Top 2 Portrait

Places 2 staples at the top of the document parallel to the top when "Orientation" is Portrait.

Top 2 Landscape

Places 2 staples at the top of the document parallel to the top when "Orientation" is Landscape.

• Left 2 Portrait

Places 2 staples at the left of the document parallel to the left side when "Orientation" is Portrait.

Left 2 Landscape

Places 2 staples at the left of the document parallel to the left side when "Orientation" is Landscape.

Windows 95/98	[Printer Features] in the [Device Options] tab
Windows 3.1x	[Features] tab
Windows NT 4.0	[Printer Features] in [Document Options] in the [Advanced] tab
Macintosh	[Printer Specific Options] in the print dialog

Punch

Use this selection to have holes punched on the Left or Top sides of your documents.

Limitation

☐ To use this function, the optional 3000–sheet finisher with punch unit must be installed on your printer

Off

Disables punch.

• Left Portrait

Places 2 holes at the left of the document parallel to the left side. Select this when "Orientation" is Portrait.

• Left Landscape

Places holes at the left of the document parallel to the left side. Select this when "Orientation" is Landscape.

• Top Portrait

Places holes at the top of the document parallel to the top side. Select this when "Orientation" is Portrait.

• Top Landscape

Places holes at the top of the document parallel to the top side. Select this when "Orientation" is Landscape.

The following table shows the tabs or menus where you can select this function.

Windows 95/98	[Printer Features] in the [Device Options] tab
Windows 3.1x	[Features] tab
Windows NT 4.0	[Printer Features] in [Document Options] in the [Advanced] tab
Macintosh	[Printer Specific Options] in the [Print] dialog box

Toner Saver

Use this function to reduce the amount of toner used when printing.

Note

☐ While this will increase the life of the toner, the output will appear slightly lighter.

Windows 95/98	[Printer Features] in the [Device Options] tab
Windows 3.1x	[Features] tab
Windows NT 4.0	[Printer Features] in [Document Options] in the [Advanced] tab
Macintosh	[Printer Specific Options] in the [Print] dialog box

Edge Smoothing

Use this function to improve the print quality of text and graphics when printing. Indentations in curved lines are automatically smoothed to produce a cleaner appearance.

The following table shows the tabs or menus where you can select this function.

Windows 95/98	[Printer Features] in the [Device Options] tab
Windows 3.1x	[Features] tab
Windows NT 4.0	[Printer Features] in [Document Options] in the [Advanced] tab
Macintosh	[Printer Specific Options] in the [Print] dialog box

Collate

Use this function to enable the collation feature. With this feature, the printer can efficiently print collated sets of a multiple-page document.

The following table shows the tabs or menus where you can select this function.

Windows 95/98	[Printer Features] in the [Device Options] tab
Windows 3.1x	[Features] tab
Windows NT4.0	[Collate Copies] in the [Page Setup] tab
Macintosh	[Printer Specific Options] in the [Print] dialog box

❖ Idiom Recognition

Windows 95/98	[Printer Features] in the [Device Options] tab
Windows 3.1x	[Features] tab
Windows NT 4.0	[Printer Features] in [Document Options] in the [Advanced] tab
Macintosh	[Printer Specific Options] in the [Print] dialog box

4

UE (USA) G035-8630 EE (GB)