

UNIX Supplement





Introduction

This manual describes detailed instructions on the operation and notes about the use of this machine. To get maximum versatility from this machine all operators are requested to read this manual carefully and follow the instructions. Please keep this manual in a handy place near the machine.

Important

Contents of this manual are subject to change without prior notice. In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

Notes

For use with the following machines.

- RICOH Aficio CL7100
- SAVIN CLP35
- Gestetner C7435n
- nashuatec C7435n
- Rex-Rotary C7435n
- infotec IPC 3535
- LANIER LP235c

Trademarks

UNIX is a registered trademark in the United States and other countries, licensed exclusively through X/Open Company Limited.

PostScript and Acrobat are registered trademarks of Adobe Systems, Incorporated.

Sun, SunOS and Solaris are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries.

HP-UX is a registered trademark of Hewlett-Packard Company.

LINUX is a trademark of Linus Torvalds.

RED HAT is a registered trademark of Red Hat, Inc.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights to those marks.

TABLE OF CONTENTS

How to Read This Manual1	
1. UNIX Configuration	
Before Setup	3
Using the lp / lpr commands	3
Using the rsh / rcp / ftp commands	3
Using the Installation Shell Script	4
Assigning the IP Address	4
Executing the Installation Shell Script	5
After Executing the Installation Shell Script	8
Printing Method	13
Printing with lpr, lp	
Printing with rsh, rcp, ftp	
Printer Status	
Viewing the Print Job Status with lpq and lpstat	
Viewing the Printer Status with rsh and ftp	
Copying Information to a File	17
Specifying the Device Option	
Configuring the Device Option	
Printer Language	20
Text Printing	21
Input Tray	
Paper Size	
Paper Type	
Output Tray	
Copies	
Collating	
Duplex Printing	
Binding	
Orientation	
Resolution	
Staple Punch, Punchhole	
Symbol Set	
INDEX	

How to Read This Manual

Symbols

The following set of symbols is used in this manual.

A WARNING:

This symbol indicates a potentially hazardous situation that might result in death or serious injury when you misuse the machine without following the instructions under this symbol. Be sure to read the instructions, all of which are described in the Safety Information section.

A CAUTION:

This symbol indicates a potentially hazardous situation that might result in minor or moderate injury or property damage that does not involve personal injury when you misuse the machine without following the instructions under this symbol. Be sure to read the instructions, all of which are described in the Safety Information section.

* The statements above are notes for your safety.

∰Important

If this instruction is not followed, paper might be misfed, originals might be damaged, or data might be lost. Be sure to read this.

Preparation

This symbol indicates information or preparations required prior to operating.

🖉 Note

This symbol indicates precautions for operation, or actions to take after abnormal operation.

Limitation

This symbol indicates numerical limits, functions that cannot be used together, or conditions in which a particular function cannot be used.

✓ Reference

This symbol indicates a reference.

[

Keys that appear on the machine's display panel.

[

1

Keys and buttons that appear on the computer's display.

[]

Keys built into the machine's control panel.

[]

Keys on the computer's keyboard.

1. UNIX Configuration

This section explains how to set up a network printer and check print status using UNIX.

Limitation

D To print from a UNIX workstation, use a file that the printer supports.

Before Setup

Setting up varies depending on the printing commands. Make sure to make settings accordingly.

Using the lp / lpr commands

1 Use the installation shell script to register the device option, as well as the printer host name and the IP address.

See p.4 "Using the Installation Shell Script".

2 Start printing.

See p.13 "Printing Method".

Using the rsh / rcp / ftp commands

1 Edit the host file to register the printer host name and the IP address.

2 Start printing.

See p.13 "Printing Method".

Reference

See p.8 "After Executing the Installation Shell Script" for host file editing.

🖉 Note

If you cannot edit the host file, use the install shell script to register the host name.

Using the Installation Shell Script

The installation shell script helps with the setup process. The installation shell script automates some of the tasks in configuring /etc/hosts, /etc/printcap; creating the spool directory for BSD UNIX; and running the lpadmin command for System V UNIX.

Preparation

The installation shell script can be used on the following workstations: (it cannot be used with other types of workstations.)

- SunOS 4.1.4
- Solaris 2.6, 7, 8, 9
- HP-UX 11.x
- Redhat Linux 6.2, 7.0, 7.1, 7.2, 8
- OpenServer 5.06
- UnixWare 7.1.1

Depending on security settings when installed, rsh / rcp / telnet may not be usable with Red Hat 7.1 or later. Change the security level to allows use of rsh / rcp / telnet. For more information about how to change the setting, see the operating instructions for Red Hat.

When you use NIS (Network Information Service) or DNS, you should configure the server before running the installation shell script.

For more information about the configuration utility of your operating system, see the manual that came with the utility.

Assigning the IP Address

Preparation

Configure the machine to use TCP/IP.

- Make sure that TCP/IP on the machine is set to active. (Default is active.)
- Assign an IP address to the machine and configure the other settings required for TCP/IP.

Reference

For more information about how to make the above settings, see *Administrator Reference*.

Checking the IP address configuration

Follow the procedure below to make sure that the IP address has been configured correctly.

• The following procedure uses the sample IP address: 192.168.15.16.

U Enter the following:

ping 192.168.15.16

If the address has been configured correctly, the following message appears:

```
192.168.15.16 is alive
```

If the address has been configured incorrectly, the following message appears:

no answer from 192.168.15.16

🖉 Note

When you use NIS, the IP address and host name are written to /etc/hosts on the master server. When you use DNS, the information is written to a data file on the name server. After writing the host name and IP address to the file, make sure that the configuration is correct by pinging the host.

ping host name

□ If the host name is registered with an IP address, the server can access the printer using its host name instead of its IP address.

Executing the Installation Shell Script

Having configured the printer IP address, follow the procedure below to execute the installation shell script and set up the workstation printing environment.

Preparation

Before executing the installation shell script, the IP address, host name and printer name are required.

The following procedures use the sample IP address: 192.168.15.16; sample host name: nphost; and sample printer name: np.

🖉 Note

□ Use ftp to get the installation shell script from the printer.

U Log on to the workstation as root.

🖉 Note

□ If you do not log on as root, the installation shell script will not run.

2 Get the installation shell script from the printer.

• Move to the directory you want to copy the installation shell script to.

2 Use ftp to connect to the printer with the IP address that you just configured.

```
# ftp 192.168.15.16
Connected to 192.168.15.16
220 printer FTP server ready.
name (192.168.15.16:root:)
```

3 When a user name is requested, leave the user name field blank and press the [RETURN] ([ENTER]) key.

```
331 Password required for root. Password:
```

When a password is requested, leave the password field blank and press the [RETURN] ([ENTER]) key.

```
230 User root logged in. ftp>
```

5 Enter the following to get the installation shell script:

```
ftp> get install
```

6 Close the ftp session.

```
ftp> bye
221 Goodbye.
#
```

3 Run the installation shell script.

```
# sh ./install
```

Note

□ Insert a period and slash before the current directory.

4 Enter a number to select the workstation operating system that you are using.

```
Network printer install shell
Copyright RICOH CO.,LTD. 1994-2004
Select your workstation OS type
1.SunOS 4.x.x
2.Solaris 2.x, Solaris 7-8 (SunOS5.x)
3.HP-UX
4.UnixWare
5.Linux
6.OpenServer
7.Quit
Enter <1-7>:
2
```

🖉 Note

- □ SunOS, UnixWare, and OpenServer appear on the screen, but they are not supported. Use Solaris, HP-UX, or Linux.
- □ If you select "7", the installation shell script ends.

5 Enter the printer's IP address.

Enter Printer host IP address <xxx.xxx.xxx.xxx> [return=skip]:
192.168.15.16

🖉 Note

- □ The IP address will be added to the /etc/hosts file.
- □ If the host name of the printer has already been configured, press the **[RE-TURN]** (**[ENTER]**) key. Nothing will be added to the /etc/hosts file.

6 Enter the printer's host name.

Enter Printer host name : nphost

🖉 Note

- □ The host name will be added to the /etc/hosts file.
- □ If no IP address was entered in step **⑤**, nothing is added to the /etc/hosts file.

Configure the printer name.

Enter logical printer name [default nphost_prn]

If you want to use the default name, press the **[RETURN]** (**[ENTER]**) key. Enter a new name, if you want to use a different one.

🖉 Note

□ The host name entered in step 6 followed by "_prn " appears in " default ".

8 Set the print option.

Enter remote printer name [default lp]:

- Press the **[RETURN]** (**[ENTER]**) key, and printing with PCL or PostScript is enabled.
- If you want to set the device option, enter the option parameter.

Enter remote printer name [default lp]:*tray=tray1* For more information about the device option, see p.18 "Specifying the Device Option".

• If you enter " text ", text printing is enabled. If you enter " text ", printing with PCL and PostScript is disabled.

Enter remote printer name [default lp]:text

Limitation

- You can enter up to 14 characters for HP-UX 11.0, 256 for Solaris 8 and Red Hat Linux 7.0, and 51 for Red Hat Linux 6.2.
- □ When printing with the lp command, use (_) instead of (=) and (;) instead of (,) for operating systems that cannot use (=) and (,) such as Solaris 2.5 or later.

After setup with the installation shell script is complete, and if you entered the IP address in step **5**, the following message appears:

9 Perform a test print to make sure that the settings are correct.

- # lpr -Pnp file_name
- # lp -d np file_name

For more information about lpr and lp, see p.13 "Printing Method".

Deleting the printer

To print using the lp or lpr command, the option specified when the installation shell script is executed is used. Change the option in accordance with the work-station you are using.

BSD UNIX workstation, Linux

Delete the printer entry from /etc/printcap, and then execute the installation shell script again. Select options during the setup process.

Alternatively, search the printer entry from /etc/printcap, and change its rp capability to option setting.

Solaris, HP-UX

Delete the printer entry, and then execute the installation shell script again. Select options during the setup process. To delete the printer entry, follow the procedure below:

1) Stop the scheduler.

/usr/sbin/lpshut

② Delete the printer.

```
# /usr/sbin/lpadmin -x printer_name
```

- ③ Restart the scheduler.
 - # /usr/lib/lpsched

After Executing the Installation Shell Script

The printing environment is set up automatically when the installation shell script is executed.

This section describes setup contents when the installation shell script is executed under Red Hat Linux, Solaris, and HP-UX.

Linux

Adding the IP address and host name to the /etc/hosts file

The following line is added to the /etc/hosts file. The IP address and printer host name which you previously entered in the installation script will be used:

192.168.15.16 nphost # Network Printer

• **192.168.15.16** is the IP address, **nphost** is the host name, from # to the end of the line is the comment.

🔗 Note

- □ The /etc/hosts file contains a list of the IP addresses and host names of all hosts communicating on the network. Each entry is delimited with a space or a tab, and each line is separated with a return.
- If you do not use NIS or DNS, you must manually enter the IP address and host name of each workstation using the network printer in the /etc/hosts file.

Adding an entry to the /etc/printcap file

The following entry is added to the /etc/printcap file, which is the configuration for printing with the lpr command. In order to use the lpr command to print, you need to edit the /etc/hosts file, add an entry for the network printer to the /etc/printcap file and create a spool directory:

```
##PRINTTOOL3## REMOTE
```

```
np Network Printer: np Network Printer: \
```

```
:rm=nphost:\
:rp=option:\
:sd=/var/spool/lpd/npd:\
:lf=/var/log/npd-errs:\
:sh:\
:mx#0:
```

🖉 Note

- □ The /etc/printcap file is used to register the name and attributes of a printer. You must make an entry for the network printer in the /etc/printcap file of all workstations using the network printer.
- □ You must make an entry for each printer option when using the same printer.
- Each entry is separated with colons into several fields. The syntax is to begin each entry with a colon, followed by the entry, and then end with a colon, a back slash, and then a return.
- The first line of the field is the name of the printer. You use this name when logging on to a network printer from a workstation. You can define several different names by separating each name with the "|" character.
- The second and following lines contain the printer's attributes. Attributes are represented by two-character names referred to as capabilities. For more information about capabilities, see the following table:

Capability	Explanation	Value required for the network printer.
rm	Host name of the printer.	The host name that was registered with the /etc/hosts file.
rp	Optional specification. "lp" will be assigned, if the option is not used.	Select options for printing. For more information about available options, see p.18 "Specifying the Device Option".
sd	Path name of the spool directory.	Path name of the spool directory that is to be created.
lf	Path name of the log file.	Path name of the log file. For example /var/log/lpd-errs.
mx	Maximum file size which the di- rectory can copy. When set to 0, the size is unlimited. If nothing is en- tered, the size is set to 1024 k.	None, or something suitable.

Making the spool directory

Create a spool directory under /var/spool/lpd. The name of the spool directory should be the name of the printer followed by a "d".

🖉 Note

- The spool directory is used to control data used for print jobs. For example, when a print job is created, a temporary copy of the data used is created in the spool directory. All workstations accessing the network printer need to have a spool directory for the network printer.
- A spool directory should be made for every network printer entry listed in the /etc/printcap file.
- The spool directory should normally be made under /var/spool/lpd and the name should match that listed under the sd capability in /etc/printcap. Change the owner and group of the directory to root and lp. The following examples show how to make a /var/spool/lpd/npd spool directory:

```
# cd /var/spool/lpd
# mkdir npd
# chown root npd
# chgrp lp npd
```

Making the log file

Error messages are logged to a file created in the /var/log directory. The log file name is the printer name followed by "d-errs".

🖉 Note

- □ The log file is used for logging errors or warning messages by the UNIX workstation.
- □ The log file should be made for every network printer entry listed in the /etc/printcap file.

□ The log file should normally be made under /var/log directory and the name should match that listed under the lf capability in /etc/printcap. Change the owner and group of the log file to root and lp. The following examples show how to make a /var/log/npd-errs file:

```
# cd /var/log
# touch npd-errs
# chown root npd-errs
# chgrp lp npd-errs
```

Solaris

Adding the IP address and host name to the /etc/hosts file

The following line is added to the /etc/hosts file. The IP address and printer host name previously entered in the installation script will be used.

192.168.15.16 nphost # Network Printer

• **192.168.15.16** is the IP address, **nphost** is the host name, from # to the end of the line is the comment.

🖉 Note

- The /etc/hosts file contains a list of IP addresses and host names of all hosts communicating on the network. Each entry is delimited with a space or a tab, and each line is separated with a return.
- If you do not use NIS or DNS, you must manually enter the IP address and host name of each workstation using the network printer in the /etc/hosts file.

Registering the printer

The installation shell script registers the printer as a remote printer following the procedure below:

① If your workstation is Solaris 2.5.1, register the print server and print client to the print service.

```
# lpsystem -t bsd -R 0 -y Network Printer nphost
```

- ② Register the printer as a remote printer.
 - # lpadmin -p np -s nphost!option -T dump -I any
 - np is the printer name, nphost is the host name. For more information about "option", see p.18 "Specifying the Device Option".
 " lp " will be assigned, if the option is not used.
 When printing with the lp command, use (_) instead of (=) and (;) instead of (,) for operating systems that cannot use (=) and (,) such as

Solaris 2.5 or later.

③ If your workstation is Solaris 2.5.1, set the print job to active so it can be accepted by the print queue.

/usr/lib/accept np

④ If your workstation is Solaris 2.5.1, set the print job to active to print.

/usr/lib/enable np

HP-UX

Adding the IP address and host name to the /etc/hosts file

The following line is added to the /etc/hosts file. The IP address and printer host name previously entered in the installation script will be used:

192.168.15.16 np # Network Printer

• **192.168.15.16** is the IP address, **np** is the host name, from **#** to the end of the line is the comment.

🖉 Note

- The /etc/hosts file contains a list of IP addresses and host names of all hosts communicating on the network. Each entry is delimited with a space or a tab, and each line is separated with a return.
- If you do not use NIS or DNS, you must manually enter the IP address and host name of each workstation using the network printer in the /etc/hosts file.

Registering the printer

The installation shell script registers the printer as a remote printer following the procedure below:

① Stop the scheduler.

/usr/lib/lpshut

② Register the printer.

```
/usr/lib/lpadmin -Pnp -v/dev/null -mrmodel
```

```
-ormnphost -orpoption -ob3
```

- **np** is the printer name, **nphost** is the host name. For more information about "option", see p.18 "Specifying the Device Option".
 - " Îp " will be assigned, if the option is not used.
- ③ Set the printer so the print job is listed in the print queue.

/usr/lib/accept np

④ Set the printer to perform the print job.

/usr/lib/enable np

(5) Restart the scheduler.

/usr/lib/lpsched

Printing Method

Printing with lpr, lp

Execute one of the following commands according to type of workstation used:

BSD UNIX workstation, Linux

% lpr -Pprinter_name file_name [file_name...]
For example:

The printer name is np, file names are file1 and file2

% lpr -Pnp file1 file2

Solaris, HP-UX

```
% lp -d printer_name file_name [file_name...]
For example:
```

The printer name is np, file names are file1 and file2

% lp -d np file1 file2

🖉 Note

- "printer_name" is the name entered when executing the installation shell script.
- □ You can use wild cards (* or ?) for the file name.
- □ The message "print session full" appears when the maximum number of print requests has been reached (max. 5 sessions —Job Spool setting available). You should try to print again when the number of requests is less than five. You can check the number of print requests using telnet. For more information about using telnet, see *Administrator Reference*.
- The number of print sessions does not change, whether you increase or reduce the machine's total memory size.

Printing with rsh, rcp, ftp

You can also print using the rsh, rcp and ftp commands.

🖉 Note

- **D** Print using a format the printer supports.
- □ You should try to print again when the number of requests is zero.
- □ The message "print session full" appears when the maximum number of print requests is reached.
- The maximum number of print sessions varies depending on the command. When using the rsh, rcp command, the maximum number of print sessions is 5; when using the ftp command, the number is 3.

rsh

```
% rsh host_name print < file_name
For example:</pre>
```

host name is nphost, file name is file1

```
% rsh nphost print < file1
```

Note 🖉

- " host_name " is the name entered when executing the installation shell script.
- □ If you are using HP-UX, use the remsh command instead of rsh.

rcp

```
To specify and print the file
```

```
% rcp file_name [file_name...] host_name:
For example:
host name is nphost, file names are file1 and file2
% rcp file1 file2 nphost:
```

To print all of the files in a directory

```
% rcp -r directory_name host_name:
For example:
host name is nphost, directory name is directory
% rcp -r directory1 nphost:
```

Note 🖉

" *is the name entered when executing the installation shell script.*

 \Box You can use wild cards (* or ?) for the file name.

ftp

Use the put or mput commands depending on the number of files to be printed.

Limitation

 \Box File names cannot contain "=" or ",".

To print one file

ftp> put file_name

To print several files

```
ftp> mput file_name [file_name...]
```

🖉 Note

□ You can use wild cards (* or ?) for the file name with the mput command.

The following procedure shows an example of how to print a file using ftp. It is not possible to set options with the mput command:

1 Start ftp using the IP address or host name of the printer.

% ftp IP_address

2 Enter the user name. Skip the password, and then press the [RETURN] ([EN-TER]) key.

Name: Password:

3 Set the file transfer mode to binary.

ftp> bin

🖉 Note

□ If the file transfer mode is not set to binary, the image may not be printed correctly.

4 Print the file.

🖉 Note

□ For example, to print the file named file1:

ftp> put file1

□ For example, to print the two files named file1 and file2:

ftp> mput file1 file2

5 Exit ftp.

ftp> bye

Printer Status

You can use the following commands to have information and printer status displayed or copied to a file.

Use the lpq or lpstat command to display the status of the printer or information about print jobs.

Use the rsh, rcp or ftp commands to get more detailed information from the printer.

Viewing the Print Job Status with Ipq and Ipstat

```
BSD UNIX workstation, Linux
```

```
% lpq -Pprinter_name
For example: Printer name is np
```

```
% lpq -Pnp
```

```
System V UNIX, Solaris, HP-UX
```

% lpstat -o printer_name
For example: Printer name is np

```
% lpstat -o np
```

🖉 Note

□ If you are using HP-UX, do not put a space between "-o" and "printer name".

Viewing the Printer Status with rsh and ftp

Use the rsh or ftp command to display printer status or information about print jobs using specified parameters.

You can use these commands for BSD and System V UNIX.

🖉 Note

□ If your workstation is HP-UX, use the remsh command instead of rsh.

```
% rsh host_name parameter
```

```
% ftp host_name
User user_name
password:
ftp> get parameter -
```

🖉 Note

- □ Leave the user name and password blank, and then press the **[RETURN]**(**[ENTER]**) key.
- "-" indicates standard output. Display will be displayed on screen if standard output has not been specified.

Parameters that can be used with rsh, rcp and ftp :

Parameter	Information returned
stat	Status of the printer.
Stat	Information about print jobs.
info	Information about the paper tray, output tray and printer language.
prnlog	Record of the last 10 jobs printed.
syslog	Record of messages about the network interface board.

Copying Information to a File

Use the rcp or ftp command to copy information about specified parameters to a file.

You can use these commands for BSD and System V UNIX.

Note

□ The same parameters are used as those above.

```
% rcp host_name:parameter file_name
% ftp host_name
User: user_name
password:
ftp> get parameter file_name
```

🖉 Note

Leave the user name and password blank, and then press the [RETURN] ([EN-TER]) key.

Specifying the Device Option

With the following options, you can print with specific printer functions.

Configuring the Device Option

The configuration of the print option varies, depending on printing commands.

rsh

```
% rsh host_name print option1=value1,... < file_name
```

• rcp

```
% rcp file name host name:option1=value1, ...
```

• ftp

```
ftp> put file_name option1=value1,...
```

Host_name is the printer host name. *File_name* is the file name you want to print. The device option is specified in the form of "*option=value*". For more information about types of device options and values, see the following explanations.

For example, the following settings are for printing with rsh, rcp, and ftp : switch to PostScript, feed paper from paper feed tray 1, set the printing amount to 3 sets, and print with the resolution set to 600 dpi (host_name : nphost, file_name : file1).

• rsh

```
% rsh nphost print filetype=postscript,tray=tray1,cop-
ies=3,resolution=600 < file1</pre>
```

• rcp

```
% rcp file1 nphost:filetype=postscript,tray=tray1,cop-
ies=3,resolution=600
```

 ftp
 ftp> put file1 filetype=postscript,tray=tray1,copies=3,resolution=600

Limitation

- □ The optional character strings the printer can recognize contain a maximum of 512 bytes.
- □ The number of available characters used as options is limited, depending on operating systems.

🖉 Note

- □ Multiple options must be separated by commas (,). Do not use spaces.
- When the printing file contains the PCL, PJL, PostScript commands control of the option, the command takes priority.

- Enter the option using the lp or lpr command, when the shell script is implemented. The option settings made here are configured as default. You must create another printer if you want to change printer option settings. For more information about changing the configured option, see p.8 "Deleting the printer".
- □ When printing with the lp command, use (_) instead of (=) and (;) instead of (,) for operating systems that cannot use (=) and (,) such as Solaris 2.5 or later.

\overline{igvee} Using the cd command with ftp

For printing with ftp, if the option is specified using the cd command, it becomes available whenever the put or mput command is used.

ftp> cd option

Note 🖉

□ The pwd command shows the current option settings.

ftp> pwd

Device option	Value	Function summary.
filetype	pcl, postscript (ps)	Specifies the printer language for printing.
filter	text	Specifies the text printing.
tray	tray1~tray4, lct, bypass, all	Specifies the input tray.
paper	a3~a6, a3wide, jisb4, jisb5, ledger, letter, halfletter, legal, executive, fgl, foolscap, folio, com10, C5, C6, dl, monarch, k8, k16, custom	Specifies the paper size.
papertype	plainorrecycled, plain, plain- duplexbackside, preprinted, letterhead, recycled, color, special, thick, thickduplex- backside, transparency	Specifies the paper type.
outbin	upper, lower, finisherproof, finishershift, finisherbooklet	Specifies the output tray.
copies	Number of copies (1–999)	Specifies the number of copies.
qty	Number of collated sets (1–999)	Specifies the number to collate.
duplex	on, off	Specifies whether duplex printing is on or off.
binding	longedge, shortedge, left, right, top	Specifies the binding direction for duplex printing.

List of the device options

Device option	Value	Function summary.
orientation	portrait, landscape	Specifies the feed direction of the paper.
resolution	value of resolution (300, 600, 1200)	Specifies the resolution for printing.
staple	off, lefttop, righttop, left- topslantland, lefttopslantl- port, righttopslantland, righttopslantport, left2land, left2port, right2land, right2port, top2land, top2port	Specifies the staple position.
punch	off, leftport, leftland, right- port, rightland, topport, top- land	Specifies the punch position.
symbol set	desktop, iso4, iso6, iso11, iso15, iso17, iso21, iso60, iso69, iso11, iso12, iso15, legal, math8, mspubl, pc8, pc850, pc852, pc8dn, pc8tk, pifont, psmath, pstext, roman8, vn- intl, vnmath, vnus, win30, win11, win12, win15	Specify the set of print charac- ters.

Printer Language

Select a printer language to print in.

filetype=printer language

fil=printer language

Printer language	Value
PCL 5c	pcl
PostScript 3	postscript or ps

The following sample shows how to print with PostScript 3(host name: nphost, file name: file1):

```
• rsh
```

```
% rsh nphost print filetype=postscript < file1
```

• rcp

```
% rcp file1 nphost:filetype=postscript
```

• ftp

```
ftp> put file1 filetype=postscript
```

Text Printing

Set this function when printing text files directly.

filter=text

The following sample shows how to print text files directly.

```
• rsh
```

% rsh nphost print filter=text < file1

• rcp

% rcp file1 nphost:filter=text

• ftp

ftp> put file1 filter=text

Input Tray

Select a default input tray.

Limitation

□ Only installed input trays are available.

```
tray=value of input tray
```

Input tray	Value
Tray 1	tray1
Tray 2	tray2
Tray 3	tray3
Tray 4	tray4
Large Capacity Tray (LCT)	lct
Bypass tray	bypass
Auto Tray Select	all

The following sample shows how to print from tray 2 (host name: nphost, file name: file1):

• rsh

% rsh nphost print tray=tray2 < file1

• rcp

% rcp file1 nphost:tray=tray2

• ftp

ftp> put file1 tray=tray2

Paper Size

Select the paper size.

Limitation

□ Only the loaded paper sizes are available.

paper=value of paper size

Paper size	Value
A3	a3
12×18	a3wide
A4	a4
A5	a5
A6	a6
B4JIS (Japanese Industrial Standard)	jisb4
B5JIS	jisb5
11 × 17	ledger
$8^{1}/_{2} \times 11$	letter
$5^{1}/_{2} \times 8^{1}/_{2}$	halfletter
$8^{1}/_{2} \times 14$	legal
$7^{1}/_{4} \times 10^{1}/_{2}$	executive
8×13	fgl
8 ¹ / ₂ ×13	foolscap
8 ¹ / ₄ ×13	folio
4 ¹ / ₈ "×9 ¹ / ₂ "	com10
6.38"×9.02"	C5
4.49" × 6.38"	C6
4.33"×8.66"	dl
3 ⁷ / ₈ "×7 ¹ / ₂ "	monarch
10 ¹ / ₂ "×15.35"	k8
7.68" × 10 ¹ / ₂ "	k16
Custom size	custom

The following sample shows how to print using A4 paper (host name: nphost, file name: file1):

• rsh

```
% rsh nphost print paper=a4 < file1
```

rcp
 % rcp file1 nphost:paper=a4

ftp
 ftp> put file1 paper=a4

Paper Type

Select the paper type.

Limitation

□ This function is only for PostScript 3.

□ Only the loaded paper types are available.

mediatype=value of paper type

Paper type	Value
Plain paper/recycled paper	plainorrecycled
Plain paper	plain
Plain Paper (Duplex Backside)	plainduplexbackside
Preprinted paper	preprinted
Letterhead	letterhead
Recycled paper	recycled
Color paper	color
Special paper	special
Thick paper	thick
Thick Paper (Duplex Backside)	thickduplexbackside
OHP transparency	transparency

The following sample shows how to print using recycled paper (host name: nphost, file name: file1):

• rsh

% rsh nphost print mediatype=recycled < file1

• rcp

% rcp file1 nphost:mediatype=recycled

• ftp

% ftp> put file1 mediatype=recycled

Output Tray

Select the output tray.

outbin=value of output tray

Limitation

Only installed output trays are available.

🖉 Note

- □ The output tray value corresponds to the ID number of the output tray obtained from the printer information (for example, info command in ftp, info command in telnet. For more information about telnet, see *Administrator Reference*).
- □ You can select an output tray using alphabet letters instead of the ID number of the output tray. For more printer information, see *Administrator Reference*.

Output tray	Value
Standard Tray	upper
External Tray	lower
Finisher Tray 1	finisherproof
Finisher Tray 2	finishershift
Finisher Booklet Tray	finisherbooklet

The following sample shows how to print from the standard tray (host name: nphost, file name: file1):

```
• rsh
```

```
% rsh nphost print outbin=upper < file1
```

• rcp

```
% rcp file1 nphost:outbin=upper
```

• ftp

ftp> put file1 outbin=upper

Copies

Specify the number of copies.

copies=number of copies (1 to 999)

Limitation

 \Box Do not specify "copies" and "qty ^{*1}" commands at the same time.

^{*1} " qty " specifies the number of collated sets.

The following sample shows how to print 10 copies (host name: nphost, file name: file1):

• rsh

% rsh nphost print copies=10 < file1

```
rcp
% rcp file1 nphost:copies=10
ftp
```

```
ftp> put file1 copies=10
```

Collating

Specify the number of collated sets.

```
qty=number of collated sets (1 to 999)
```

Limitation

```
□ This function is only for PostScript 3.
```

□ Do not specify " qty " and " copies " commands at the same time.

The following sample shows how to print 10 copies using the collate function (host name: nphost, file name: file1):

rsh % rsh nphost print qty=10 < file1</p>

• rcp

% rcp file1 nphost:qty=10

• ftp

ftp> put file1 qty=10

Duplex Printing

This option enables duplex printing.

Limitation

□ The duplex unit is required.

🖉 Note

□ Before selecting duplex, the binding option must be set to on.

D Data and paper volume affect the completion of the print job.

duplex=value of duplex printing

Duplex printing	Value
enable	on
disable	off

✓ Reference

For more information about available paper size for duplex printing, see *Administrator Reference*.

The following sample shows how to set duplex printing (host name: nphost, file name: file1):

• rsh

```
% rsh nphost print duplex=on, binding=longedge < file1
```

• rcp

```
% rcp file1 nphost:duplex=on,binding=longedge
```

ftp

ftp> put file1 duplex=on,binding=longedge

Binding

Select the binding direction for duplex printing.

Limitation

 \Box The duplex unit is required.

Note 🖉

□ Before selecting the binding option, the duplex option must be set to on.

D Data and paper volume affect completion of the print job.

binding=value of binding

Binding direction	Value
Longedge	longedge
Shortedge	shortedge
Left	left
Right	right
Тор	top

The following sample shows how to set duplex printing and long-edge binding (host name: nphost, file name: file1):

• rsh

```
% rsh nphost print duplex=on,binding=longedge < file1</pre>
```

• rcp

% rcp file1 nphost:duplex=on,binding=longedge

• ftp

ftp> put file1 duplex=on,binding=longedge

Orientation

Select the paper feed orientation.

Limitation

O Only the selected PCL 5c from the printer language option is available.

orientation=feed direction (portrait or landscape)

Orientation	value
Portrait	portrait
Landscape	landscape

The following sample shows how to print the paper vertically using the orientation function (host name : nphost, file name : file1):

• rsh

```
% rsh nphost print orientation=portrait < file1
```

• rcp

% rcp file1 nphost:orientation=portrait

• ftp

ftp> put file1 orientation=portrait

Resolution

Select the printing resolution.

Limitation

□ This function is only for PostScript 3.

🖉 Note

□ Monochrome printing takes effect when pcl is selected from filetype option and 300 dpi is selected from resolution option.

resolution=value of resolution

Resolution	Value
1200 dpi	1200
600 dpi	600
300 dpi	300

The following sample shows how to print with 600 dpi and better quality. (host name: nphost, file name: file1):

• rsh

% rsh nphost print resolution=600 < file1

• rcp

```
% rcp file1 nphost:resolution=600
```

• ftp

ftp> put file1 resolution=600

Staple

Select the staple position for the output.

Limitation

- Before executing the staple command, make sure the number of collated sets and the output tray for staple are specified.
- **D** When using this option, the optional finisher unit is required.
- □ When printing with this option, be sure to specify the optional finisher using the value of "finisherproof" or "finishershift", for example "outbin=finisherproof". For more information about the optional finisher unit, see p.24 "Output Tray".

🖉 Note

□ Available staple positions vary depending on type of installed output tray. For more information about staple, see *Printer Client Reference*.

staple=value of staple position

Position	Value
Off	off
Left top	lefttop
Right top	righttop
Left top slant	lefttopslantlport
	lefttopslantland
Right top slant	righttopslantport
	righttopslantland
Left 2	left2port
	left2land
Right 2	right2port
	right2land
Top 2	top2port
	top2land

The following sample shows how to print with the staple on the upper left using finisher shift tray (host name : nphost, file name : file1):

rsh

```
% rsh nphost print staple=lefttop,outbin=finisherproof <
file1</pre>
```

rcp
% rcp file1 nphost:staple=lefttop,outbin=finisherproof

• ftp

ftp> put file1 staple=lefttop,outbin=finisherproof

Punch, Punchhole

Select the punch position for the output and the number of punch holes.

Limitation

- Before executing punch, make sure the number of collated set, the output tray for punch and the number of punch holes are specified.
- □ When using this option, the optional finisher unit is required.
- When printing with this option, be sure to specify the optional finisher using the value of "finisherproof" or "finishershift", for example "outbin=finisherproof". For more information about the optional finisher unit, see p.24 "Output Tray".

🖉 Note

- □ Available punch positions may vary depending the type of installed output tray. For more information about punch, see *Printer Client Reference*.
- When " punchhole " is not specified, the machine executes the punch function by the default number of punch holes. The default number of punch holes is marked with * in the table below.
- □ When " punchhole " is not specified correctly, the machine does not execute the function.

Position	Value
Off	off
Left	leftport
	leftland
Right	rightport rightland
	rightland
Тор	topport
	topport topland

punch=value of punch position

punchhole=value of punchhole

Available numbers of punch holes may vary depending the type of installed Punch Kit. Specify an appropriate value referring to the table below.

Number of punch holes	Name of Punch Kit	Value
3	Punch Kit Type 1045 NA	us3
4	Punch Kit Type 1045 EU	eu4
4	Punch Kit Type 1045 SC	neu4
3	Punch Kit Type 2238 US	us3
2	Punch Kit Type 2238 EU2	jp2
4	Punch Kit Type 2238 EU4	eu4
4	Punch Kit Type 2238 SC	neu4

The following sample shows how to print with four punch holes on the left using Tray Finisher 1 (host name : nphost, file name : file1).

• rsh

```
% rsh nphost print punch=leftport,punchhole=eu4,out-
bin=finisherproof < file1</pre>
```

• rcp

```
% rcp file1 nphost:punch=leftport,punchhole=eu4,out-
bin=finisherproof
```

• ftp

```
ftp > put file1 punch=leftport,punchhole=eu4,outbin=fin-
isherproof
```

Symbol Set

Select the set of print characters for the chosen font.

Limitation

□ Only the selected PCL 5c from the printer language option is available.

Font	Value
Desktop	desktop
ISO 4	iso4
ISO 6	iso6
ISO 11	iso11
ISO 15	iso15
ISO 17	iso17
ISO 21	iso21
ISO 60	iso60

symset=value of font

Font	Value
ISO 69	iso69
ISO L1	isol1
ISO L2	isol2
ISO L5	isol5
Legal	legal
Math-8	math8
MS Publ	mspubl
PC-8	pc8
PC-850	pc850
PC-852	pc852
PC-8 D/N	pc8dn
PC8-TK	pc8tk
Pifont	pifont
PS Math	psmath
PS Text	pstext
Roman-8	roman8
VN Intl	vnintl
VN Math	vnmath
VN US	vnus
Win 3.0	win30
Win L1	winl1
Win L2	winl2
Win L5	winl5

The following sample shows how to print the ISO 4 character set (host name : nphost, file name : file1):

• rsh

% rsh nphost print symset=iso4 < file1

• rcp

% rcp file1 nphost:symset=iso4

• ftp

ftp> put file1 symset=iso4

INDEX

В

Binding Option, 26 BSD UNIX workstation Deleting the printer, 8 Printer Status, 16 Printing Method, 13

С

Collating Option, 25 configuration UNIX, 3 Copies Option, 24

D

Deleting the printer, 8 Device Option, 18 **Duplex Printing** Option, 25

F

ftp

Printing, 14

н

HP-UX Deleting the printer, 8 Printer Status, 16 Printing Method, 13

L

Input Tray Option, 21 Installation Shell Script, 4, 5, 8 IP Address, 4

Linux Deleting the printer, 8 Printer Status, 16 Printing Method, 13 lp Printing, 13 lpr Printing, 13

0

Orientation Option, 27 **Output Tray** Option, 24

Ρ

Paper Size Option, 22 Paper Type Option, 23 Printer Language Option, 20 Printer Status, 16 ftp, 16 rsh, 16 Printing Method, 13 Printing with rsh, rcp, ftp, 13 Punch, Punchhole Option, 29

R

rcp Printing, 14 Resolution Option, 27 rsh Printing, 14

S

Solaris Deleting the printer, 8 Printer Status, 16 Printing Method, 13 Staple Option, 28 Symbol Set Option, 30 System V UNIX Printer Status, 16

т

Text Printing Option, 21

EN

UNIX, 3 (USA) GB (GB) AE (AE)G106



