

Overseas Affiliates

U.S.A.

RICOH CORPORATION 5 Dedrick Place West Caldwell, New Jersey 07006 Phone: +1-973-882-2000

The Netherlands

RICOH EUROPE B.V. Groenelaan 3, 1186 AA, Amstelveen Phone: +31-(0)20-5474111

United Kingdom

RICOH UK LTD. Ricoh House, 1 Plane Tree Crescent, Feltham, Middlesex, TW13 7HG Phone: +44-(0)181-261-4000

Germany

RICOH DEUTSCHLAND GmbH Mergenthalerallee 38-40, 65760 Eschborn Phone: +49-(0)6196-9060

France

RICOH FRANCE S.A. 383, Avenue du Général de Gaulle BP 307-92143 Clamart Cedex Phone: +33-(0)1-40-94-38-38 Spain

RICOH ESPAÑA S.A. Avda. Litoral Mar, 12-14, 08005 Barcelona Phone: +34-(0)93-295-7600

Italy

RICOH ITALIA SpA Via della Metallurgia 12, 37139 Verona Phone: +39-(0)45-8181500

Hong Kong

RICOH HONG KONG LTD. 23/F., China Overseas Building, 139, Hennessy Road, Wan Chai, Hong Kong Phone: +852-2862-2888

Singapore

RICOH ASIA PACIFIC PTE.LTD. 260 Orchard Road, #15-01/02 The Heeren, Singapore 238855 Phone: +65-830-5888

SUPPLIES MODEL NAME

The correct model name of supplies for your Bizworks is: RICOH TONER CASSETTE TYPE 1120D BLACK

RICOH CO., LTD.

15-5, 1 chome, Minami-Aoyama, Minato-ku, Tokyo, Phone: Tokyo 3479-3111

Printed in China


UE G026-8547





Operation Manual

Read this manual carefully before you use this product and keep it handy for future reference. For safety, please follow the instructions in this manual.

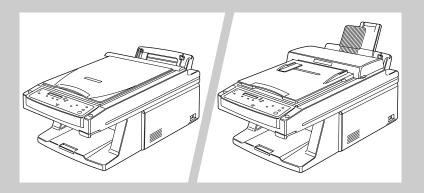

RICOH CORPORATION CALLING FOR SERVICE

For service in the United States, call: 1-800-RICOH38 (1-800-742-6438)

Introduction

This manual contains detailed instructions on the operation and maintenance of this machine. To get maximum versatility from this machine, all operators should carefully read and follow the instructions in this manual. Please keep this manual in a handy place near the machine.

Please read the safety information on pages i - iii of this manual. It contains Important Information related to user safety and preventing equipment problems.

Laser Safety:

The optical housing unit can only be repaired in a factory or at a location with the requisite equipment. The laser subsystem is replaceable in the field by a qualified Customer Engineer. The laser chassis is not repairable in the field. Customer engineers are therefore directed to return all chassis and laser subsystems to the factory or service depot when replacement of the optical subsystem is required.

Notes:

Model names for the machines do not appear in the following pages. Check the type of your machine before reading this manual.

Type 1 Bizworks 406e

Type 2 Bizworks 406eDF

- · Some illustrations may be slightly different from your machine.
- · Certain types may not be available in some countries. For details, contact your local dealer.

Two kinds of size notation are employed in this manual. With this machine refer to the metric version.

For good print quality, Ricoh recommends that you use genuine Ricoh toner.

Ricoh shall not be responsible for any damage or expense that may result from the use of parts other than genuine Ricoh parts in your Ricoh office product.

Power Source: 120 V, 60 Hz, 4.2 A

Please make sure to connect the power cord to a power source as above. For details about power connection, refer to page 8.

Trademarks

Microsoft-, Windows-, and MS-DOS- are registered trademarks of Microsoft Corporation in the United States and/or other countries.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights in those marks.

In accordance with ISO Standard 7001, this machine uses the following symbols for the main switch:

means POWER ON.

O means POWER OFF.

© Copyright 1999, RICOH CO., LTD.

INFORMATION TO THE USER

USA FCC Part 15 Class B

NOTE

This equipment has been tested and found to comply with the limits for a Crass B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Properly shielded and grounded cables and connectors must be used for connections to host computer in order to meet FCC emission limits.

WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

COMPLIANCE INFORMATION STATEMENT

Declaration of Conformity
RICOH Bizworks
406/406DF
RICOH CORPORATION
5 Dedrick Place West Caldwell, New Jersey 07006
973-882-2000

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CANADA Class B

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Safety Information

When using your machine, the following safety precautions should always be followed.

Types of warnings used in this manual



∧ **WARNING**

Ignoring this warning could cause serious injury or even death.



↑ CAUTION

Ignoring this caution could cause injury or damage to property.

Symbol examples



 $\stackrel{?}{\square}$ The \triangle symbol means a situation that requires you take care.



 $^{igstyle{\mathbb{N}}}$ The igotimes symbol means you MUST NOT carry out this operation. This example means "Do not take apart."



The symbol means you MUST perform this operation. This example means "You must remove the wall plug."

Microsoft®, Windows®, and MS-DOS® are registered trademarks of Microsoft Corporation in the United States and/or other countries.

Other product names used here in are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights in those marks.

MARNING:

<u> </u>	Use of controls or adjustment or performance of procedures other than tho specified in this manual may result in hazardous radiation exposure.		
\Diamond	 Only connect the machine to the power source described on the inside of the front cover. Avoid multi-wiring. Do not damage, break or make any modifications to the power cord. Do not place heavy objects on it, pull it hard or bend it more than necessary. These actions could cause an electric shock or fire. Do not plug or unplug the power cord with your hands wet. Otherwise, an electric shock might occur. 		
0	Make sure the wall outlet is near the machine and freely accessible so that in event of an emergency it can be unplugged easily.		
	 Do not remove any covers or screws other than those specified in this manual. Some parts of the machine are at a high voltage and could give you an electric shock. Also, reflected eye contact with the leser beam may cause serious eye damage. When the machine needs to be checked, adjusted, or repaired, contact your service representative. Do not take apart or attempt any modifications to this machine. There is a risk of fire, electric shock, explosion or loss of sight. 		
8:6	 If the machine looks damaged or breaks down, smoke is coming out, there is a strange smell or anything looks unusual, immediately turn off the power switch then unplug the power cord from the wall. Do not continue using the machine in this condition. Contact your service representative. If metal, liquid or foreign matter falls into the machine, turn off the power switch, and unplug the power cord. Contact your service representative. Do not keep using the machine with a fault or defect. 		
\Diamond	Do not put any metal objects or containers holding water (e.g. vases, flower-pots, glasses) on the machine. If the contents fall inside the machine, a fire or electric shock could occur.		
	Do not incinerate used toner or toner cassettes. Toner dust might ignite when exposed to an open flame. Dispose of the used toner cassettes according to local regulations for plastics.		

A CAUTION:

\bigcirc	 Keep the machine away from humidity and dust. A fire or an electric shock might occur. Do not place the machine on an unstable or tilted surface. If it topples over, it could cause injury.
B =C	 When you move the machine, unplug the power cord from the wall outlet to avoid fire or electric shock. When the machine is not be used for a long time, unplug the power cord.
When you pull out the plug from the socket, grip the plug to avoid dathe cord and causing fire or electric shock.	
0	If you use the machine in a confined space, make sure there is a continuous air turnover.
\Diamond	Do not reuse stapled paper. Do not use aluminium foil, paper containing carbon or any other conductive paper. Otherwise, a fire might occur.
	When removing misfed paper, or replacing the toner cassette and the cleaning pad, do not touch the fusing section because it could be very hot.
<u> </u>	This machine has been tested for safety using this supplier's parts and consumables. We recommend you only use these specified supplies.

Energy Star program





As an Energy Star partner, we have determined that this machine model meets the Energy Star Guidelines for energy efficiency.

The Energy Star Guidelines intend to establish an international energy- saving system for developing and introducing energy-efficient office equipment to deal with environmental issues, such as global warning.

When a product meets the Energy Star Guidelines for energy efficiency, the Partner shall place the Energy Star logo onto the machine model.

This product was designed to reduce the environmental impact associated with printing equipment by means of energy-saving features such as Low Power mode.

· Low Power Mode

This machine automatically lowers its power consumption 15 minutes after the last printing job has been completed. To exit Low Power mode, press any key on the operation panel.

The machine returns to the ready condition in about 22 seconds. To change the low Power delay, see page 60.

Specification

	Type 1, 2		
	Power consumption	15 W	
Low Power Mode (Economy Mode)	Default delay	15 min.	
(Zeonomy mode)	Recovery time	22 sec.	

Recycled paper

Please contact your sales or service representative for recommended recycled paper types that may be used in this machine.

Contents

	Safety Information	i
	Energy Star program	iv
	Part Names	viii
	Operation Panel	X
1.	SETTING UP	
	Package Contents	1
	Location	1
	Installing the Starter Toner Cassette	2
	Unlocking the Scanner Lock	3
	Installing the Upper Paper Tray	4
	Other Settings for Type 2	5
	To remove the protective sheet	5
	To install the document output tray	5
	To pull out the output tray extension	6
	Connecting to a computer	7
	Turning On the Machine	8
2.	GETTING ACQUAINTED	
	Paper and Other Media	9
	Loading Paper	10
	To load plain paper into the upper paper tray	10
	To load small size paper	12
	Loading Other Media	14
	To load envelopes	14
	To load transparencies	14
	To load label paper	14
	Connecting a Second Printer (Additional Printer)	15
	To connect to a second printer	15
	Installing the Paper Feed Unit (Option)	16
	Paper Feed Unit Part Names	16
	To install the Paper Feed Unit	16
	To load paper into the paper feed unit	18
	To change the paper size	19
	To specify the paper size	19
	To install the paper size indicator	20

	To select the paper source	20
	Upgrading Memory	21
2	DDINITING AND COANINING	
ა.	PRINTING AND SCANNING	22
	Setting up	
	Installing the Software Drivers	
	Features You Can Access From the Printer Driver	
	Using the Second Printer (Additional Printer)	
	To print to the second printer	26
4.	COPYING	
	Making a Copy	27
	Making Multiple Copies	
	Making a Book Copy	
	Reduction and Enlargement	
	To set the reduction factor	
	To set the enlargement factor	31
	Zoom (In 1% Increments)	32
	To use zoom	32
	Adjusting the Copy Image	33
	To select the resolution/photo setting	33
	To adjust the image density	33
	Setting an Original on the ADF (Type 2 only)	35
	Sorting Output (Type 2 only)	37
	To turn sorting on and off	37
5	TROUBLESHOOTING	
•	General problems (printing, copying, scanning and Error massages)	39
	Clearing a Paper Misfeed	44
	Paper feed unit	48
	When paper will not feed	49
6.	USER MAINTENANCE	
•	Daily Maintenance	51
	Replacing the Toner Cassette And the Cleaning Pad	52
	Storage	55
	Paper	55
	Toner Cassette	55


7.	TECHNICAL REFERENCE	
	Printing the Help List	56
	Selecting the Language	57
	Selecting 300 dpi or 600 dpi	58
	Economy Mode	60
	Changing the Economy Mode	60
	Selecting Toner Save Mode	61
8.	SPECIFICATIONS	62


Index 65

Part Names


Type 1


The following describes the Type 1 machine. This information also applies to the Type 2 machine, except where specifically noted in the next page.

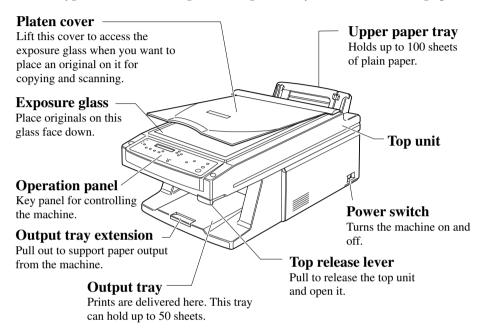

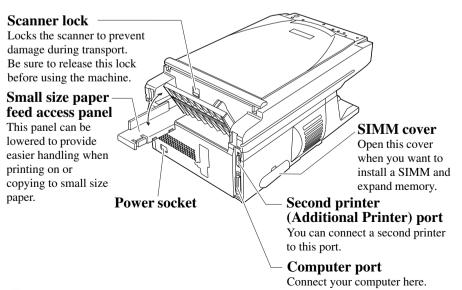


Type 2
The following describes the Type 2 machine.

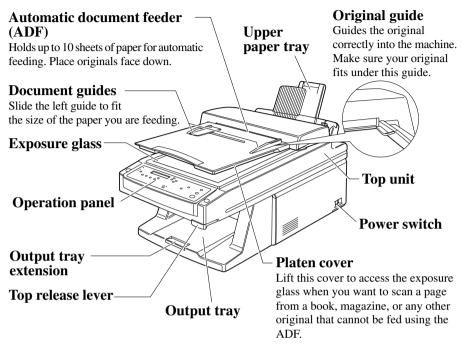

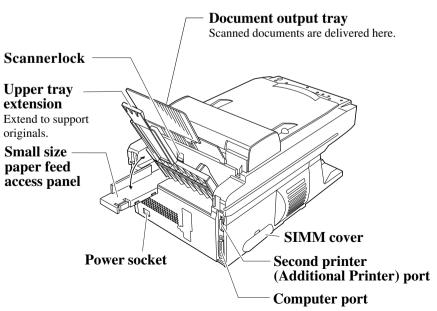

Operation Panel

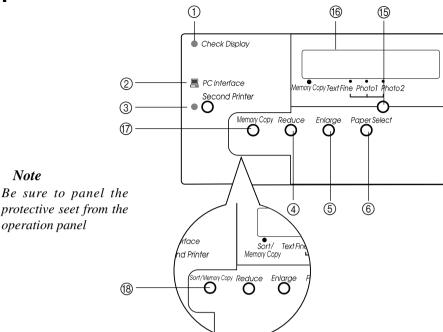

(1) Check Display

Note

operation panel

This indicator lights up to alert you to read the message on the display.

② PC Interface

This indicator lights while the machine is receiving data from a connected computer.

(3) Second Printer

Pressing this key switches between printing on the machine (Second Printer indicator off) and printing on a second printer connected to the machine (Second Printer indicator on).

(4) **Reduce**

Press this key to reduce an image during copying. Available reduction ratios are: 50%, 65%, 77%, 93% and LGL ▶ LTR.

(5) Enlarge

Press this key to enlarge an image during copying. Available enlargement ratios are: 121%,129%, 155%, 200% and LTR ▶ LGL.

(6) Paper Select

Press this key to specify the paper size. When the paper feed unit (option) is installed, press this key to switch between paper sources.

(7) Density key


Press this key to select the image density settings: Darker, Auto, Lighter.

(8) Quantity keys

Press these keys to specify the number of copies or to change numeric values on the display.

(9) Start

Press this key to start an operation.

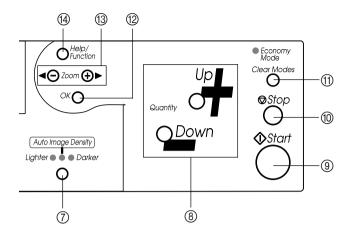

(10) **Stop**

Press this key to interrupt the current ongoing procedure and return to the stand by state. This key operates as a kind of escape key.

Holding down this key for 3 seconds resets the printer mode.

① Economy Mode/ Clear Modes key

Pressing this key cancels the ongoing operation and clears the settings of the current mode to their initial defaults.

Holding down this key for about one second switches the Economy Mode on and off.

Refer to "Economy Mode" on page 58.

(12) OK

Press this key to execute an operation that is prompted by a message on the display.

(13) Zoom

In copy mode, press these keys to fine-tune the preset reduction and enlargement ratios. Also use to select function settings and navigate the function menus.

(4) Help/Function

Press this key and then input a function number to perform various settings and help list printing functions.

(5) Copy Mode key

Press this key to specify the Copy Mode. A pointer (▼) appears on the display to indicate the current Text Fine/Photo1/Photo2 setting.

(6) Display

Displays messages and prompts during operation.

Memory Copy (Type 1 only)

Press this key to select Memory Copy. (Your original will be scanned only once when making multiple copies.)

(8) Sort/Memory Copy (Type 2 only)

Press this key to turn Sorting and Memory Copy on and off. Sorting is activated when the pointer is visible on the display above Sort/ Memory Copy.

1. SETTING UP

Package Contents

Make sure that all of the items shown in the Package Contents sheet that comes with the machine are included.

\triangle	WARNING			
•	Make sure the wall outlet is near the machine and freely accessible so that in event of an emergency it can be unplugged easily.			
0	Do not put any metal objects or containers holding water (e.g. vases, flowerpots, glasses) on the machine. If the contents fall inside the machine, a fire or electric shock could occur.			
\triangle	CAUTION			
6	Keep the machine away from humidity and dust. A fire or an electric shock might occur.			
	Do not place the machine on an unstable or tilted surface. If it topples over, it could cause injury.			
0	If you use the machine in a confined space, make sure there is a continuous air turnover.			

Location

Environment

	Acceptable	Recommended
Temperature	10 to 35°C (50 to 95°F)	15 to 25°C (59 to 77°F)
Humidity	15 to 80%	30 to 70%


• The machine must be level within 3mm (0.11") both front to rear and left to right.

Locations to Avoid

- Avoid exposed to direct sunlight or strong light (more than 2,000 lux.).
- Avoid directly exposed to cool air from air conditioner's or heated air from heater's.
 Sudden temperature changes can cause condensation to form inside the machine.
- Avoid where the machine mi,ght be subjected to frequent strong vibration.
- Places higher than 2,500m (8,221ft.) above sea level.


Machine Clearance

Place the machine near the wall outlet, providing minimum clearance as shown.

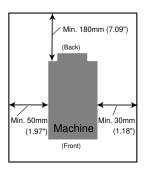

Installing the Starter Toner Cassette

 Pull the top release lever (1) and open the top unit (2).



Hold the starter toner cassette by its handle, and remove it from its vinyl bag.

A CAUTION

Keep all plastic bags out of the reach of children.



Be sure to hold the starter toner cassette by its handle.



Keep the vinyl bag for later repackaging when necessary.

 
Holding the starter toner cassette by its handle, gently shake it side to side 5 or 6 times to evenly distribute the toner inside.


🏨 Important!


Be sure to hold the starter toner cassette by its handle.

Look inside the machine and note the locations of the arrows that indicate the toner cassette guides on either side.






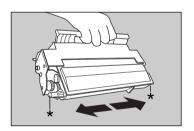

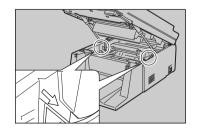


Make sure the plastic pins (marked with "*" in the illustration next to step 3) on either side of the starter toner cassette slide along the guides inside the machine.

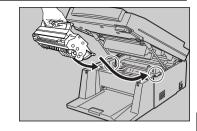



Be sure to hold the starter toner cassette by its handle.

To close the top unit, press down firmly but gently on both sides of it until the top unit closes and clicks securely into place.

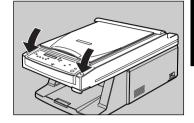

Note


Background gray cast is sometimes evident just after installing a new toner cassette.

Unlocking the Scanner Lock




Be sure to unlock the scanner lock before using the machine. The machine will not operate correctly if the scanner lock is not unlocked.

Unlock the scanner lock which is located at the back of the machine.

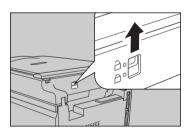

Installing the Upper Paper Tray


Look at the rear of the machine and note the locations of the slots for insertion of the upper paper tray on both sides.

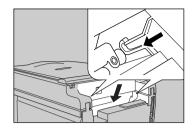

To install the upper paper tray, press down on both sides of the tray, making sure that it is inserted as far as it will go.




Paper will not be fed correctly into the machine if the upper paper tray is not inserted all the way in.

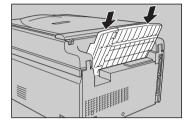


Other Settings for Type 2

To remove the protective sheet

Open the ADF cover (1) and then remove the protective sheet (2).

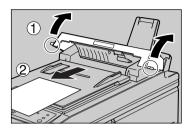


 Close the ADF cover and make sure it locks securely into place.




To install the document output tray

Look at the rear of the machine to confirm where the document output tray should fit.

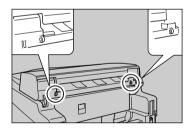


Insert the pin at one side of the tray by gently bending the document tray until it fits in the insert hole.

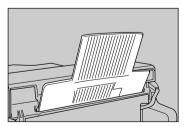

Make sure the small pieces of plastic film curl upwards as shown.




The original will not be delivered properly, if the films are not set as shown.

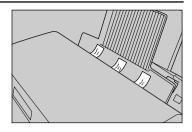

To pull out the output tray extension

To pull out the output tray extension as shown.

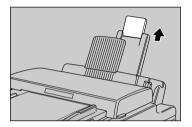

Connecting to a computer

Important!

 
Make sure that the power of both the machine and your computer is turned off before making the connection.


Plug one end of the your parallel cable into the lower port on the side of the machine, and secure it in place as shown in the illustration.



printer port.

- The machine must be connected to a computer for printing.
- Use the cable that comes with the machine to connect to your computer.



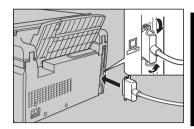

Turning On the Machine

⚠ WARNING

- Only connect the machine to the power source described on the inside of the front cover.
- · Avoid multi-wiring.




- Do not damage, break or make any modifications to the power cable. Do not place heavy objects on it, pull it hard or bend it more than necessary. These actions could cause an electric shock or fire.
- Do not plug or unplug the power cord with your hands wet. Otherwise, an electric shock might occur.


Important!

When you turn on the machine for the first time after the installation, make sure that no paper is loaded beforehand.


Attach the power cable to the machine and plug the other end into a outlet.

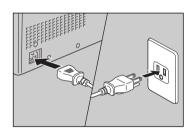

Turn on the machine.

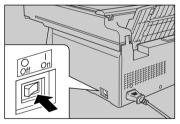

 2. GETTING ACQUAINTED



The default display language is English. For how to change to your preferred language, see page 57.

Paper and Other Media

The machine supports printing on the following types of paper/media from the upper paper tray.

Refer to the following pages for details.

	Paper/Media type (Paper size)	Display	Page
	Letter (81/2" × 11")	Letter (81/2 × 11)	p.11
Je.	Half Letter	5 ¹ / ₂ × 8 ¹ / ₂	p.11
Plain paper	Legal (81/2" × 14")	Legal (81/2 × 14)	p.11
lain	A4 (210mm × 297mm)	A4	p.11
Ь	A5 (148mm × 210mm)	A5[]	p.11
	F4 (8 ¹ / ₄ " × 13")	81/4 × 13	p.11
oes	Executive	Exec (7 ¹ / ₄ x 10 ¹ / ₂)	p.13, 15
Envelopes	COM 10	Com 10 (4 ¹ / ₈ x 9 ¹ / ₂)	p.13, 15
En	Monarch	Mon. (3 ⁷ / ₈ x 7 ¹ / ₂)	p.13, 15
	Transparencies		p.15
	Label paper		p.15



Do not attempt to use the following types of paper: wrinkled or creased paper, curled or rolled paper, paper containing carbon, carbon-backed paper, coated paper, onion skin or other very thin paper.

↑ CAUTION



Do not reuse stapled paper. Do not use aluminium foil, paper containing carbon or other conductive paper. Otherwise, a fire might occur.

Loading Paper


After you have set up the machine you nee to load paper then specify the paper size using the procedure below.

🏨 Important!


When loading paper into the upper paper tray, do not load more than 100 sheets of plain paper (80 g/m 2 or 20 lb). Overloading the upper paper tray can cause misfeeds.

To load plain paper into the upper paper tray


Fan the stack of paper to make sure that all pages are free and are not sticking together. The upper paper tray holds up to 100 sheets of plain paper (80 g/m² or 20 lb).

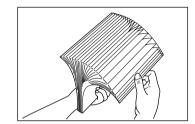


2 Straighten up all four sides of the stack, by tapping them on a desk or table top.

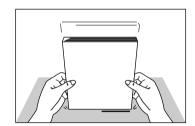

Set paper into the upper paper tray. Make sure that the top of the stack is not higher than the limit mark on the tray guide.

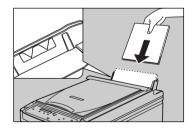

Squeeze the tray guide and slide it against the edge of the stack.

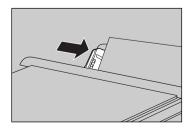

Press OFunction

Prt Help List

Press Zoom ⊕►.

1 Tray Pap. Size ▶



If the paper feed unit (option) is installed, refer to page 19 for details on how to specify the paper size.

7 Press OK O.

Tray guide OK? OK

After pressing OK O, press Zoom ⊕► or ✓ O Zoom until the desired size appears.

Letter $(8^1/_2 \times 11)$?

When the correct paper size is on the display, press OK . If the paper feed unit (option) (page 17) is installed, you can also select its paper size at this time.

Registered




Do not carry out any operations while "Registered" appears on the display.



Tip

If the paper feed unit (option) is not installed, you can press Paper Select in place of Function in step 5. Next, skip step 6 and 7, and jump directly to step 8.

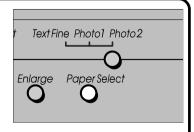


To load small size paper


∅ Note

We recommend that you always feed small size paper vertically, with one of its shorter edges feeding into the machine.


Remove all paper before loading small size paper in the upper paper tray.

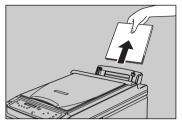


Open the small panel on the back of the machine by unlatching it as shown in the illustration. Opening the small panel makes it easy to handle small size paper.

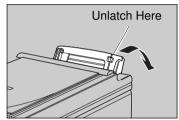

Set paper into the upper paper tray. Make sure that the top of the stack is not higher than the limit mark on the tray guide.

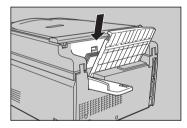

After setting the paper into the tray, raise the small panel until it snaps securely into place.

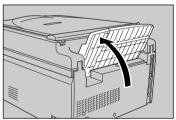

Help/ Press 🦳

Prt Help List

 
Press Zoom (+) ▶.

1 Tray Pap. Size

Note

If the paper feed unit (option) is installed, refer to page 19 for details on how to specify the paper size.

- Press OK
- After pressing OK , press Zoom (+) or ◀♠ Zoom until the desired size appears.



- $5^{1}/_{2} \times 8^{1}/_{2}$?
- When the correct paper size is on the display, press OK


Registered



Do not carry out any operations while "Registered" appears on the display.



If the paper feed unit (option) is not Paper Select in installed, you can press place of OFFunction in step 5. Next, skip step 6 and 7, and jump directly to step 8.

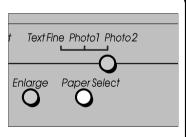



• Be sure to specify the paper size before printing on A4 or Letter paper again.


Loading Other Media

Use the following procedures to load envelopes, transparencies, and label paper.

To load envelopes

Load up to 5 envelopes at a time, using the same procedure for loading small size paper on page 12.

• Insert envelopes print side up with the stamp position as shown.

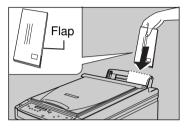

• Envelope flaps should be securely folded down, so the envelope is "closed". This is especially important when printing on envelopes with adhesive on the flaps, because heat generated during the printing process can cause the adhesive to melt and get on rollers.



Refer to the paper select operation on page 14.

To load transparencies

Load only one transparency at a time, using the plain paper loading procedure on page 10 for large transparencies, and the small paper loading procedure on page 12 for small transparencies.



Refer to the paper select operation on page 11 for large transparencies or page 13 for small ones.

To load label paper

Load only 10 sheets of label paper at a time, using the plain paper loading procedure on page 10.



Refer to the paper select operation on page 11.

Connecting a Second Printer (Additional Printer)


The machine features a port that you can use to connect your current printer as a second printer (additional printer). Once you do, you have a selection of this machine or the second printer at the touch of Second Printer key.




Make sure that the power of your computer is turned off before making the connection.

To connect to a second printer

Turn off both the machine and your second printer.

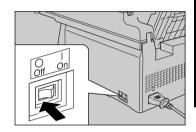

- Connect one end of a parallel interface cable to your second printer.
- Connect the other end of the cable to the second printer port, securing it in place with the screws.
 - **∅** Note
 - It requires a standard 36-pin parallel cable compliant with IEEE 1284.
 - Refer to page 26 for details on using the second printer.

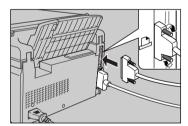

Installing the Paper Feed Unit (Option)


This section describes how to install the paper feed unit (option) and how to load paper in it. Addition of a paper feed unit provides you with a second paper source that holds up to 250 sheets of A4 or Letter size paper.



Make sure that machine power is turned off and that the power cord is unplugged from the power socket before installing the paper feed unit.


Paper Feed Unit Part Names

- (1) Front guide
- ② Side guide
- (3) Limit mark
- (4) Paper size indicator
- (5) Connector
- ⑥ Corner guides
- 7 Metal plate

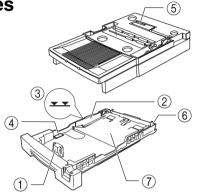

To install the Paper Feed Unit


Remove all the packing tapes from the paper feed unit and pull the paper tray out of the unit.

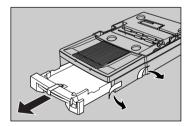


After removing all tapes and cardboard from inside of the paper tray, insert the tray back into the machine until it locks into place. Locate the paper feed unit where you plan to use the machine.




Be sure to place the paper feed unit on a level surface.

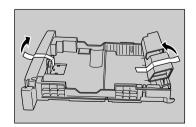


The machine has handhold at the locations shown in the illustration. Note that the illustration shows the machine as viewed from above.

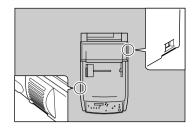


• This illustration shows the handhold location on the right side of the machine.

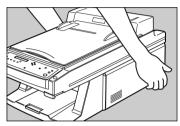

• This is the handhold location on the left side of the machine.

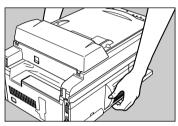

Carefully lower the machine onto the paper feed unit, making sure that the dowels on the paper feed unit fit into holes in the bottom of the machine properly.

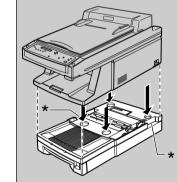

⚠ CAUTION

When lifting the machine, make sure your hands are at the locations indicated by "*" in the illustration. This protects against pinching your fingers between the machine and paper feed unit.




After the above installation, attach the power cord to the machine, and plug the other end into an outlet. Refer to page 8 for details.


To load paper into the paper feed unit

You can load either A4 or Letter size paper into the paper feed unit. Refer to page 19 for details on how to change the positions of the paper guides inside of the tray to match the type of paper you are using.


Pull out the paper tray and remove it from the paper feed unit.

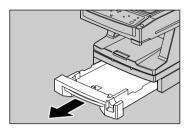

 Press down on the metal plate in the bottom of the paper tray until the plate locks into place with a "click".




Up to 250 sheets of plain paper (80 g/m² or 20 lb) can be inserted into the paper tray as shown in the illustration. Make sure that the top of the stack is not higher than the limit mark on the side fence.

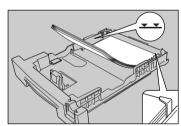

ℳ Note

Make sure the leading corners of the paper fit under the corner guides.


Slide the paper tray back into the paper feed unit until it locks into place.

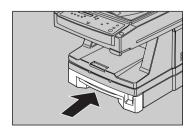


To change the paper size

Use the following procedure to set the positions of the paper guides inside the paper tray for either A4 or Letter paper.

Squeezing in on both sides of the front guide, slide it to the correct position for the desired paper size.

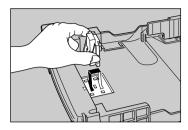

Squeezing in on both sides of the side guide, slide it to the correct position for the desired paper size.

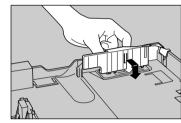

🏰 Important!

 
Whenever you change the paper size, be sure to also specify the paper size using the operation panel.

To specify the paper size

After you install the paper feed unit (option), you can select between the upper paper tray and the paper feed unit as the paper source, and specify the size of paper in the paper feed unit.







1 Tray Pap. Size ▶

3 Press OK

Lower Tray? OK



The actual message that appears on the machine's display depends on the paper source you last used. If "Upper Tray?" appears, press $ZOOM \rightarrow O$ Toom to display the "Lower Tray?" message before proceeding with step 4.

After pressing OK ○, press Zoom ⊕ ► or ◆ ○ Zoom until the desired size appears.

Letter $(8^1/_2 \times 11)$?

When the correct size is on the display, press OK .

Registered


ℱ Note

Do not carry out any operations while "Registered" appears on the display.

100% L 01

To install the paper size indicator

Break off the paper size indicator (1). Positioning the indicator so the side that shows the paper size you are using (A4 or Letter) is facing outwards, insert it into the front of the paper tray (2).

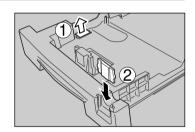

To select the paper source

Press O until the desired paper source appears.

100%	U 01
------	------

The upper paper tray is selected when "U" is on the display, and the paper feed unit is selected when "L" is on the display.

100%	L	01

ℱ Note

Refer to page 10 for details on using the upper paper tray.

Upgrading Memory

You can install Single Inline Memory Module (SIMM) to upgrade the onboard memory of the machine.

The machine is shipped from the factory with a 4MB SIMM, which can be replaced with an 8MB, 16MB or 32MB SIMM.

Use the following procedure to install 8MB, 16MB or 32MB SIMM.




The following are the required specifications for a SIMM used with this machine: 72-pin, 60ns, Extend Date Out (EDO), parity/non-parity.


i Important!

Make sure you touch some grounded metal object with your hand to discharge any electrostatic charge from your body before handling the SIMM.


Turn off the machine.

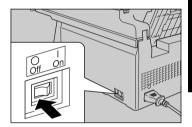


Remove the SIMM cover located on the left side of the machine.

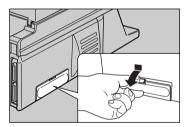


Pull apart the hooks on the both sides of the SIMM board that hold it in place.

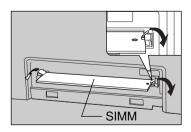

Carefully lift out the SIMM board currently installed on your printer.

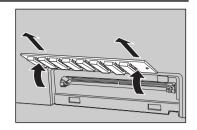


Angle the new SIMM board as shown in the illustration, and insert it down into the slot. Gently rock it back and forth until you hear it snap into place.

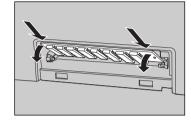


Important!

Make sure the SIMM board is oriented correctly when you insert it into the slot.

Make sure the hooks on the sides of the SIMM board snap securely into place.

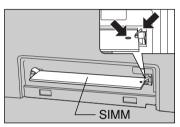

Replace the cover by inserting its tabs into the holes provided, as shown in the illustration.

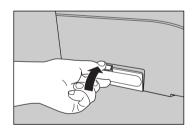

3. PRINTING AND SCANNING

When connected to a compatible PC, you can use this machine as a high performance laser printer and black and white scanner.

#Important!

• Make sure that your PC parallel port is set to ECP. If it is not, please consult your PC manual on how to change it.



- For information on PC hardware and software requirements, please read the README file on the CD.
- Printer drivers are provided for both Windows® 95/98 and Windows® 3.1, but the scanning feature requires Windows® 95/98.

Setting up

Before you can start printing and scanning you need to the following if you have not done so already:

- Connect the machine to your PC
- Install the software drivers on your PC

Installing the Software Drivers

Follow the steps below to install the printer/scanner drivers on your PC.

- Make sure the machine is connected to your PC and paper is loaded in the upper paper tray.
 - Connecting to a computer, See page 7
 - Loading Paper, See page 10
- 2 Switch the machine on.
- 3 Insert the provided software CD into your CD-ROM drive.



Do one of the following according to your operating system:

Windows[®] 95/98

Run the setup application. For example, if your CD-ROM is assigned to D, run "D:\Scan-in\Setup.exe".

• Windows® 3.1

First copy the disk images under the directory named "3.1" on the CD-ROM to floppy disks. Then insert the first floppy disk into your floppy disk drive and run "install.exe".

Note

- You cannot install from CD-ROM under Windows 3.1.
- Only the printer driver will be installed under Windows 3.1.
- Follow the instructions that appear on the display.

For detailed information on how to print and scan from your PC, please refer to the online help provided.

Features You Can Access From the Printer Driver

Printer Driver Contents

■ Paper Defaults

Paper size : Size, Measurement Unit Page orientation : Portrait, Landscape

Output : Copies, Print in reverse order

Paper source : Source

About

■ N-Up Printing

Select a Layout Option : Normal, Reduce for N-up printing

(Print page borders; 2 pages up/sheet; 4 pages up/sheet)

■ Document

Document Type Settings

	Automatic	Photo (Grayscale)	Desktop Publishing	High Speed Draft	Business Graphics
Graphics Mode	Raster	Raster	GL/2	Raster	Raster
Font Resolution(dpi)	600	600	600	300	600
Graphics Resolution	High	High	High	High	High
Halftone	Screening	Screening	Screening	Screening	Dithering

Job Settings : True Type Mode, Name

■ Configuration

Device Configuration : Feeder ; Toner Save Mode ; Time-out

■ Fonts

Font Manager (To add printer fonts)

Overlays

Overlay Assignments : None, All pages, Odd/Even pages, First/Other pages

Cover/Divider page Overlays

Create New Overlay

Manage Overlays : Get files from other sources to use as overlays, Send created overlays

to other sources, Rename overlays, Remove overlays

🏨 Important!

After printing a large number of pages, wait a few minutes befor turning off the machine.



Be sure to use online help and Read me file of the printer driver to get the most out of all the printer features and functions.

Using the Second Printer (Additional Printer)

Use the following procedure to switch between this machine and a second printer when a second printer is connected.

∰ Important!

If the second printer has a bi-directional mode, make sure you turn it off.



Connecting a second printer, see page 15.

To print to the second printer

Press . The Second Printer indicator lights.


🏰 Important!

Whenever you change printers, be sure to also change to the appropriate printer driver on your computer.



While the Second Printer Indicator is lit, print data from your computer passes through the machine to the second printer.

Perform the required print operation with the application you are using.

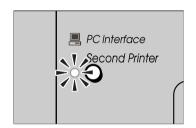

4. COPYING


Making a Copy

Lift the platen cover (1). Place the original face down at the arrow mark on the scale (2). Close the platen cover (3).



Press tion.

to perform the copy opera-

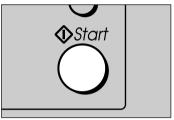

🏰 Important!

After copying a large number of pages, wait a couple of minutes before attempting to turn off the machine.

 


When printing to label paper, envelopes, transparencies, or thin paper (60 g/m² or 16 lb), remove each printout as it comes out of the machine. If you don't, printed output can fall out of the output tray, and become curled.

Alignment of Originals

Align the original with the scale of the exposure glass.

- When the original is a standard size such as A4 or Letter, align it to the indexes on the scale.
- When your original is not standard size, align the upper left edge of the original to the arrow mark on the scale.



For Type 2 Users


• When the original is smaller than the paper you are copying to, place a second sheet of paper that is larger than the paper you are copying to on top of the original when you place the original onto the exposure glass.

Making Multiple Copies

You can specify the number of copies to be printed by pressing increase the number) or Opown (to reduce the number).



Lift the platen cover (1). Place the original face down at the arrow mark on the scale (2). Close the platen cover (3).

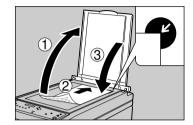

Press or ODOWN until the desired number of copies appears.



 
Note

You can specify the number of copies in the range of 01 to 99.

Press to perform the copy opera-



During the copy operation, the display shows the number of copies printed so far and that to be printed. For example, 02/10 appears while the second copy of a run of 10 copies is being printed.



Number of copies to be printed



• Press Clear Modes to clear the setting after the copying has been finished.

Memory Copy
(Type 1) or (Type 2) produces copies at a faster speed,


but it can also result in a loss of printout quality.

• With a Type 2 machine, using Sort/Memory Copy also activates the Sort feature automatically.


Making a Book Copy

When copying from a book, the thickness of the book should be no more than 30mm (1.18").


Lift the platen cover.

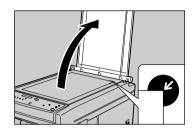


Open to the page you want to copy and lay the page face down on the exposure glass. Be sure to align one of the corners of the page with the arrow mark on the scale.

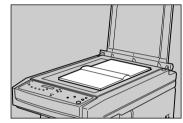

3 Lower the platen cover.

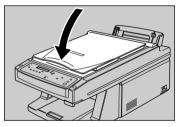

Press to perform the copy operation.

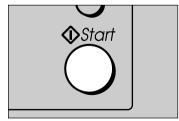


Reduction and Enlargement

Press or or consideration or enlargement factors for the copy operation.

To set the reduction factor

Lift the platen cover (①). Place the original face down at the arrow mark on the scale (②). Close the platen cover (③).

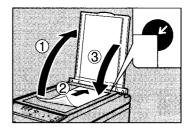


Press until the desired size ratio appears. The sizes change in the following order.




100% ↑	·	70.0	·			
	LG	L ▶ LT	R 4	(50%	

- Press to perform the copy operation.
 - Press Clear Modes to clear the setting after copying.

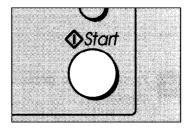



To set the enlargement factor

Lift the platen cover (①). Place the original face down at the arrow mark on the scale (②). Close the platen cover (③).

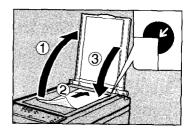


  
Press ountil the desired size ratio appears. The sizes change in the following order.





Press to perform the copy operation.

 

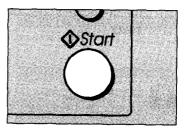


Zoom (In 1% Increments)


Zoom allows you to tune the preset reduction and enlargement factors to exactly the value you want. You can change the zoom factor in increments of 1%.

To use zoom

Setting Range

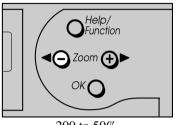


200 to 50%

 



50 to 200%

   
Lift the platen cover (1). Place the original face down at the arrow mark on the scale (2). Close the platen cover (3).





 




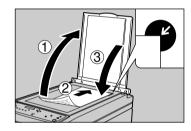









Adjusting the Copy Image

To select the resolution/photo setting

Lift the platen cover (1). Place the original face down at the arrow mark on the scale (2). Close the platen cover (3).

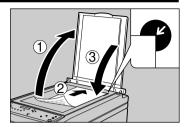


Press the Copy Mode key to specify the resolution or halftoning method for the copy operation.

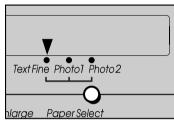

A pointer (**▼**) moves on the display to indicate the current setting.

The following describes when you should use each setting.


Setting	Use for:
[Text Fine]	Copying text
[Photo1]	Copying photographs
[Photo2]	Copying mixed text and photographs

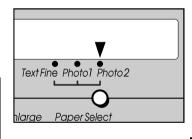





If the memory size of your machine is 4MB, the machine automatically switches from Photo2 to Photo1 in the following cases.

  - when the $\bigcap_{i=1}^{Memory Copy} (Type 1) or \bigcap_{i=1}^{Sort/Memory Copy} (Type 2) key is or$
- when you make multiple copies using the ADF (Type 2 only)






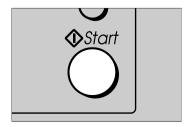


To adjust the image density


Lift the platen cover (1). Place the original face down at the arrow mark on the scale (2). Close the platen cover (3).

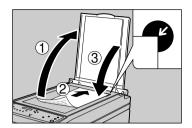


Press the Density key to select the image density.

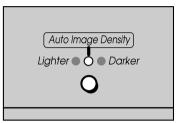


· Select [Lighter] to make the image lighter.

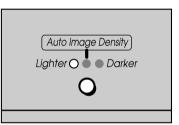

· Select [Darker] to make the image darker.

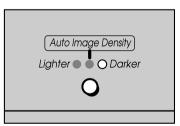

Press to perform the copy operation.

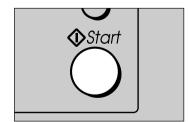

∅ Note


Press Clear Modes to clear the setting after copying.

Setting an Original on the ADF (Type 2 only)


You can load up to 10 sheets of plain paper (80 g/m² or 20 lb) at a time into the Automatic Document Feeder (ADF).

🇱 Important!


Check to make sure that the ADF cover is securely closed before using it.

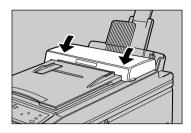

 Fan the stack of originals. Never try to place more than 10 sheets of plain paper onto the ADF.



2 Straighten up all four sides of the stack, by tapping them on a desk or table top.

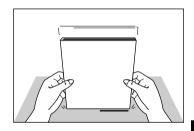

- Place the stack of originals face down on the ADF and slide the document guide against the side of the stack.
 - **∅** Note

The side of the original to be copied should be face down.




- Insert the stack of originals along the document guide into the ADF.
 - Note


Insert your stack of originals into the ADF until it stops. If you do not push it right in, the machine will not detect the stack.



Stretch the extend tray that supports the originals.

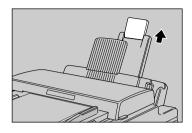

Press to perform the copy operation.

 

Note

- If an original becomes misfed during feeding by the ADF, press to stop the operation. Refer to "Clearing a Paper Misfeed" on page 47.
- We recommend you use text mode when copying with the ADF.
- We recommend you copy photo originals from the exposure glass for best results.

Originals that do not meet the following requirements can cause paper misfeeds, and even damage the machine.

■ Requirements

• Thickness 0.05mm to 0.2mm (0.002" to 0.08")

• Weight $60 \text{ to } 90 \text{ g/m}^2 \text{ (16lb to 24lb)}$

Clear markings Markings on the originals must be clear to be read

correctly.

• Uniform page size All pages should be the same size.


Page condition Avoid using originals that are bent, curled, damaged,

or stapled, and originals printed on coated paper,

carbon paper, or photographic paper.

Sorting Output (Type 2 only)

The following example shows how output is affected by turning sorting on and off.

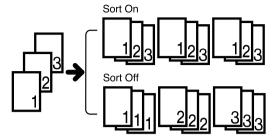

🏰 Important!

The sort operation requires scanning of all your originals into memory before starting the copy operation. The number of originals that can be scanned at one time depends on how much memory you have installed.

Upgrading Memory, see page 21

To turn sorting on and off


Set the originals on the ADF.




- Setting an originals on the ADF, see page 35.
- Sorting is activated when the ▼ pointer is visible on the display above Sort/Memory

 Sort/Memory Copy


 Copy. Press to select sorting on and off (no pointer).

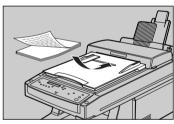

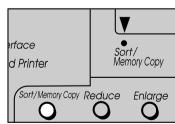

When you press to start the copy operation, all of the originals on the ADF are scanned into memory before they are printed.

♦Start

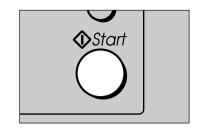

Press Clear Modes to clear the setting after copying.

5. TROUBLESHOOTING

General

Status	Cause	Remedy	Page
Nothing happens when the machine is turned on.	Power cord is not connected.	Correctly connect the power cord to the machine and plug it into a outlet.	p.8
	SIMM is not installed correctly.	Install the SIMM correctly.	p.21
	SIMM does not meet the required specifications.	Use a SIMM with the required specifications.	p.21
Paper misfeeds when the machine is turned on for the first time after the installation.	Paper was loaded in the machine before the machine was turned on.	Remove the paper, turn the machine off and then back on. After machine initialization is complete, load the paper back into the machine.	p.8
After installing a SIMM board, the memory value that appears on the machine's display does not match the amount of memory installed.	SIMM does not meet the required specifications.	Use a SIMM with the required specifications.	P.21

Printing and Copying (1/2)

Status	Cause	Remedy	Page
Frequent paper misfeeds.	The upper paper tray is not set correctly	Set the upper paper tray correctly.	p.4
	Improper paper.	Use paper of the correct size and thickness.	p.9
	Paper is not set correctly in the upper paper tray.	Realign the paper with the paper guide, and if necessary, fan the paper stack.	p.10
	Paper is curled or damp.	Uncurl the paper.	p.10,12,18
		Insert paper into the upper paper tray from the least-curled side.	p.10,12
		Set paper face down if necessary.	p.10,12,18
		Avoid using damp paper.	_
	Too much paper is loaded in the machine.	Remove some of the paper.	p.10,14
	Paper is loaded incorrectly.	Check the paper and realign it if necessary.	p.10,18

Printing and Copying (2/2)

Status	Cause	Remedy	Page
Frequent paper misfeeds.	Attempting to print on both sides of the paper.	Print on only one side. Two-side printing is not supported by this machine.	p.10,18
	Printing onto loosely stacked envelopes	Flatten the envelopes to expel all air.	p.14
	Misfeeding of the envelope flap.	Make sure that envelope flaps are closed (folded down).	p.14
Part of the image is unclear.	Toner is distributed unevenly in the toner cassette.	Remove the toner cassette, gently rock it left and right a few times, and replace it into the machine.	p.52
Black lines on the printout.	Heat damage to the toner cassette caused by turning off the machine too soon after copying a large number of pages.	Replace the toner cassette.	p.52
Dark areas along the sides of the printout.	Turning off the machine too soon after printing or copying a large number of pages.	Replace the toner cassette.	p.52

Printing

Status	Cause	Remedy	Page
Abnormal or unexpected printing results.	Use of wrong cable.	Use the cable that comes with this machine.	p.7
	Wrong printer driver settings.	Change to the correct printer driver settings.	p.23
	Attempting to print from a DOS application at 600 dpi.	Change to 300 dpi.	p.58
Parts of the image are not printed out.	The correct paper size is not specified.	Specify the paper size using the operation panel.	p.19
Cannot print from a second printer.	Second printer is not connected correctly.	Check connections and make corrections, if necessary.	p.15
	Second printer is not selected.	Second Printer Press o so the indicator above it is lit.	p.26
	Incorrect settings of the second printer driver.	Use the printer driver of the second printer to turn off bi-directional printing.	p.26

Copying

Status	Cause	Remedy	Page
"Error 90" appears on the display, and the copy operation is aborted when copying from the exposure glass.	Locked scanner.	Unlock the scanner lock, turn the machine off and then back on.	p.3
Frequent original mis-	Original is not set correctly.	Set the original correctly.	p.35
feeds with ADF.	Curled original(s).	Straighten out the original(s).	p.35
		Insert the original(s) from the least-curled side.	p.35
	Incorrect original specifications.	Use originals of the correct size, thickness, and quantity.	p.36
Original is not fed from the ADF.	ADF cover is open.	Close the ADF cover.	p.35
Original is not fed out properly.	The document output tray is not set correctly.	Set the document output tray and the small pieces of plastic film correctly.	p.6
Periodic black marks on printed output.	Cleaning pad is not installed.	Correctly install the cleaning pad.	p.51
Black lines and marks on printed output	Copying to small-size paper with the Type 2 machine.	Place a sheet of the same size as the paper you are printing onto	p.27
when copying from the exposure glass.	Different size original and copy paper.	behind the original.	
	Non-white original back-ground.	Adjust the print density.	p.34
	Dirty platen cover or exposure glass.	Clean the platen cover and exposure glass.	p.51
Black and white lines on printed output when using the ADF.	Dirty ADF transport path.	Clean the ADF transport path.	p.51
Output too light.	Low contrast original.	Adjust the print density.	p.34
Unclear photographic images.	Copying in Text Fine Mode.	Use the Copy Mode key to select the Photo1 or Photo2 Mode.	p.33
Parts of the original image are not copied.	The correct paper size is not specified	Specify the paper size using the operation panel.	p.19

Scanning

Status	Cause	Remedy	Page
PC scanning does not	The PC parallel port is not	Consult your PC manual on how	p.23
function properly.	set to ECP.	to set your parallel port to ECP.	

Error Messages (1/2)

The table below explains the error messages that may appear on the display and the appropriate action to take.

Message	Cause	Remedy	Page
"Close cover"	Top unit is open.	Close the top unit. If a copy job is in progress, set the copy quantity again.	p.3
"Add paper"	Machine is out of paper.	Load paper. If a copy job is in progress, set the copy quantity again.	p.10,18
"Toner near end"	Machine is almost out of toner.	Prepare a toner cassette for replacement.	_
"Add Toner"	Toner cassette is not loaded correctly.	Correctly load the toner cassette into the machine.	p.2
	Machine is out of toner.	Replace the toner cassette, and set the copy quantity again during a copy job.	p.52
"Clear paper"	Paper misfeed, or paper will not feed at all.	Remove the misfed paper. If a copy job is in progress, set the copy quantity again. If paper persistently msifeeds, carry out the procedure on page 49.	p.44,49
"Memory overflow"	Not enough memory capacity (PC printing only).	Either lower the printer driver's "Resolution" setting or increase memory capacity by installing a larger SIMM. Press any opera- tion panel key to clear the error message from the display.	p.21,25
"Remove original" (when original is set in ADF)	Original misfeed, or paper will not feed at all.	Remove the original from the ADF, and set the copy quantity again.	p.48
"Original left" and "on glass"	An original may be under the platen cover.	Remove the original. If there is no original, open the platen cover and close it again.	_
"Memoly full" and "Press Stop"	Too much sort copy data.	Press ot cancel sort copy, and perform the copy operation without sorting. If you need to print big sort copy jobs, increase memory capacity.	p.21,37

Error Messages (2/2)

Message	Cause	Remedy	Page
"Memory full" and "Press Start"	Too many sort copy pages.	Press to print pages already stored in memory to cancel the job, press to print big sort copyjobs, increase memory capacity.	p.21,37
"Error 90"	Locked scanner.	Unlock the scanner lock, turn the machine off and then back on.	p.3
"Error XX"	Possible machine defect.	Turn power off and then back on again.	p.8

If you have a problem with the machine and you can not resolve it by referring to the information in this chapter, contact your service representative.


In case of "Error XX" messages, be sure to turn off the machine before calling.

Clearing a Paper Misfeed

This section describes how to clear a paper misfeed when one occurs.

CAUTION


When removing misfed paper, do not touch the fusing section because it could be very hot.

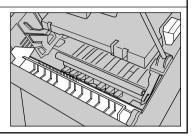


i Important!

Hold a misfed sheet with both hands and slowly pull it out. Do not use a tool, such as a screwdriver or tweezers. as this may damage the unit.

Type 1

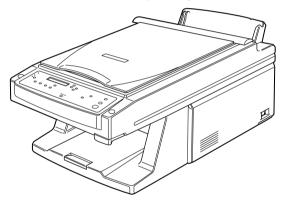

 
Pull the top release lever (1) and open the top unit (2).




2 Pull out the toner cassette.




- Be sure to hold the toner cassette by its handle.
- Keep the toner cassette horizontal to avoid spilling the toner.

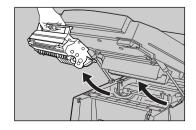

Pressing down on the paper release lever (blue) on the right side, pull out the misfed paper.

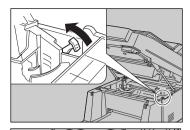

 Pull out the misfed paper in the directions indicated by the arrows in the illustrations.




∅ Note

- If you are using the paper feed unit (option) and cannot clear the misfeed using this procedure, use the procedure on page 47 instead.
- Sometimes toner may get on your hands.




 Install the toner cassette into the machine.



Note

 
- Be sure to hold the toner cassette by its handle.
- Keep the toner cassette horizontal to avoid spilling the toner.
- **☞** *Install the starter toner cassette, see page 2.*








 If "Clear Paper" is still displayed after you clear the jam, there may be paper jammed in another part of the machine. Check all areas described in this section.

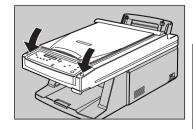

Important!


If a paper misfeed occurs during a copy job, be sure to specify the desired copy quantity again.

Type 2

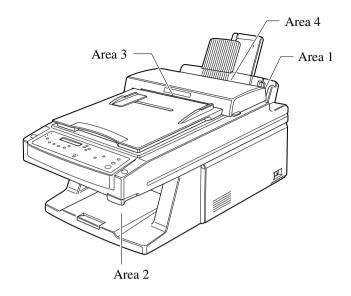

Area 1 or 2


Pull the top release lever (1) and open the top unit (2).

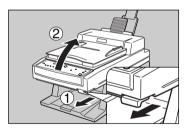

Pull out the toner cassette.



 - Be sure to hold the toner cassette by its handle.
- Keep the toner cassette horizontal to avoid spilling the toner.



Push back the blue paper release lever located on the right.


Note

 
The lever releases pressure on the paper. If you do not push it back, you could damage the machine when removing paper.

Pull out the misfed paper in the directions indicated by the arrows in the illustrations.



- If you are using the paper feed unit (option) and cannot clear the misfeed using this procedure, use the procedure on page 47 instead.
- Sometimes toner may get on your hands.

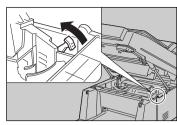







Install the toner cassette into the machine.

Note

 
- Be sure to hold the toner cassette by its handle.
- Keep the toner cassette horizontal to avoid spilling the toner.
- **☞** *Install the starter toner cassette, see page 2.*

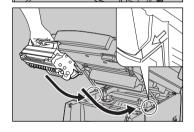



Note

• If "Clear Paper" is still displayed after you clear the jam, there may be paper jammed in another part of the machine. Check all areas described in this section.

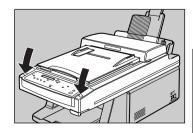

Important!

If a paper misfeed occurs during a copy job, make sure to specify the desired copy quantity again.


Area 3 or 4

 
Open the ADF cover.




Be sure to open the ADF cover before pulling out the misfed original. Failure to do so can result in damage to the original.


Pull out the misfed original.

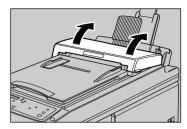



 Close the ADF cover, and make sure it locks securely into place.

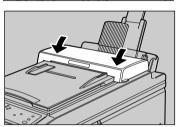




If copying was in progress, be sure to specify the desired copy quantity again.


Paper feed unit

Use the following procedure when the misfed paper cannot be removed using the procedure on page 43 (for Type 1) or page 45 (for Type 2).

Pull out the paper tray.

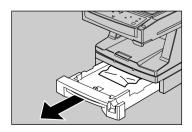


Pull out the misfed paper.

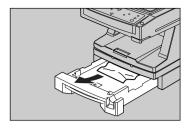

- Slide the paper tray back into the paper feed unit until it locks into place.
 - Note

 For how to set paper in the optional paper feed unit, see page 16.






Tip

If you cannot find a remedy for unexpected printout results here, check the printer driver's online help for other useful information.


When paper will not feed

If paper has completely stopped feeding, check using the following procedure. Please keep this sheet in a secure place together with the Operation Manual.


Remove all paper.

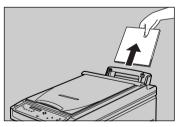


Pull the top release lever ① and open the top unit ②.

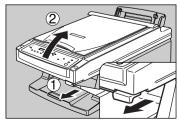


Pull out the toner cassette.

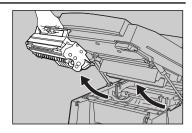

 Pull the blue key-shaped pawl located deep inside on the right where the toner cassette was set forward.




Install the toner cassette into the machine.

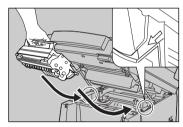

Close the top unit.

When the top unit is closed, the motor will start running. When the sound of the motor stops, set paper in the original position and continue with normal operation.

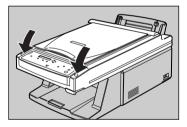


6. USER MAINTENANCE


Daily Maintenance

Clean with a damp cloth and wipe dry.



Turn off the machine before cleaning

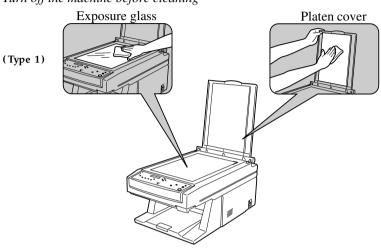

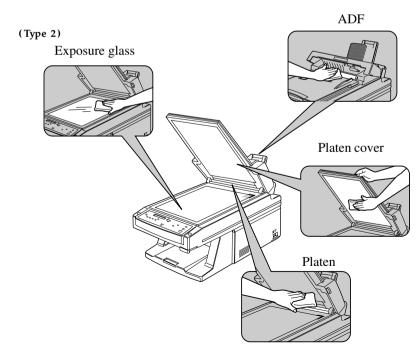

Replacing the Toner Cassette And the Cleaning Pad

Printing on A4 size paper under the recommended temperature and humidity conditions noted in the table under "Environment" on page 1, you can expect a toner cassette to print approximately 3,000 pages when you are printing typical business letters that have text covering 5% of the total surface. The starter cassette that comes with the machine can print approximately 1,000 pages. Pages that contain graphics use more toner and shorten the life of a toner cassette.

⚠ WARNING



Do not incinerate used toner or toner containers. Toner dust might ignite when exposed to an open flame. Dispose of the used toner cassettes according to local regulations for plastics.

 


Æ

This machine has been tested for safety using this supplier's parts and consumables. We recommend you only use these specified supplies.

⚠ CAUTION

When replacing the toner cassette and cleaning pad, do not touch the fusing section because it could be very hot.





Open the box of the new toner cassette and check to make sure it contains a toner cassette and cleaning pad.



Be sure to hold the toner cassette by its handle.

Pull the top release lever (1) and open the top unit (2).

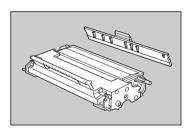

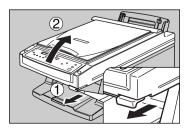

Hold the toner cassette by its handle and pull it out.

 


 
Keep the toner cassette horizontal to avoid spilling the toner.

Remove the old cleaning pad.




Be sure to grasp the green handle when removing the cleaning pad.






 Do not forget to install the cleaning pad whenever you install a new toner cassette.








Be sure to hold the toner cassette by its handle.

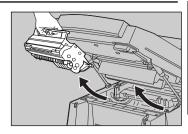




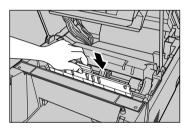

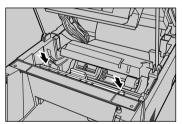


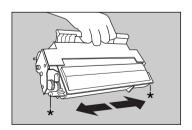

Look inside the machine and note the locations of the arrows that indicate the toner cassette guides on either side.

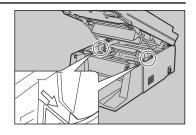


Make sure the plastic pins (marked with "*" in the illustration next to step above) on either side of the toner cassette slide along the guides inside the machine.

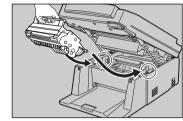

Note

Be sure to hold the toner cassette by its handle.

To close the top unit, press down firmly but gently on both sides of it until the top unit closes and clicks securely into place.

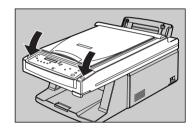

ℳ Note

Background gray cast is sometimes evident just after installing a new toner cassette.

Storage

Paper

Paper should always be stored properly. Improperly stored paper might result in poor image reproduction, creased copies, or paper misfeeds. Generally, avoid paper curling and absorption of moisture.

- Avoid storing paper in humid areas. In high-temperature and high-humidity, or low-temperature and low-humidity conditions, store paper in a vinyl bag.
- · Do not store paper where it will be exposed to heat.
- Store on a flat surface.
- · Use older stock first.
- Do not lay heavy objects on paper.
- · Keep open reams of paper in the package, and store as you would unopened paper.

Toner Cassette

- Keep the toner cassette inside the packaging that it comes packed in whenever it is removed from the machine.
- Store horizontally in a cool, dark place.
- Never store a toner cassette where it will be exposed to heat.
- Do not lay heavy objects on the toner cassette.

⚠ CAUTION

Keep toner cassettes out of children's reach.

7. TECHNICAL REFERENCE

Printing the Help List

You can print out the help list.

While the machine is not performing any other operation, press Help/Function. The message "Prt Help List" appears.

Prt Help List OK


Press Start

2 Press OK O

Press to print the Help List.

Print on A4, Letter, or Legal paper.

₩ Note

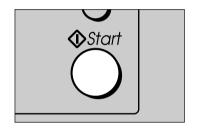

Selecting the Language

The language for the display can be selected from the following:

 


- Press Zoom → or ◆ ☐ Zoom until "2 Language" appears.
- Prt Help List °K

 2 Language ▶
- Press OK and press Zoom ⊕ ror ✓ Zoom until the desired language appears.
- 4 Press OK O.



- Do not carry out any operations while "Registered" appears on the display.
- The setting is not registered, if OK is not pressed.




Selecting 300 dpi or 600 dpi

Set the printer to 300 dpi if the designated output is not obtained when printing using a DOS application compatible with the 300 dpi PCL printer.



 Press Zoom \bigoplus or \bigoplus Zoom until "3 User Param." appears. The messages change in the following order.



Press OK and press Zoom → to move the flashing block cursor until it appears in the position shown in the illustration to the right.



Press to change the setting to 1 or 0, as desired.

Display	Heater status
02:0010 0000	600 dpi (default setting)
02:0010 1000	300 dpi



The bits other than the one highlighted in the illustration are unrelated to this setting.





- To cancel this change, press or Of Help/
 Function instead of OK O. "Please wait" and "Not Registered" appear on the display.
- Do not carry out any operations while "Registered" appears on the display.

Please wait

Registered

100% 01

Economy Mode

The Economy mode can be selected to save power. If no operation is performed for 5 minutes, the display becomes blank and all the indicators go out. If no operation is performed in the next 10 minutes or 235 minutes (according to the setting), the heater turns off.

The economy mode is on as the default setting.

Economy mode	Operation panel off	Heater off
ON (default setting)	5 minutes	15 minutes (including time when operation panel is off)
OFF	5 minutes	240 minutes (including time when operation panel is off)




- During the Economy Mode, the heater turns back on in the following cases.
 - when any key on the operation panel is pressed
 - when the platen cover is opened
 - when paper is set in or removed from the upper paper tray (Type 2)
 - when the tray of the paper feed unit (option) is pulled out or pushed back into the machine
 - When the top unit is opened.
 - When an original is set in or removed from the ADF.
 - *On initiation of PC printing.*
- When a key on the operation panel is pressed to turn the heater on, the key does not perform its normal function.
- After the heater is turned back on, the previous %, quantity, and Sort On settings are cleared.

Changing the Economy Mode

Hold down the Clear modes key for approximately 1 second until the Economy mode indicator lights or goes out, as required.

Economy Mode ON

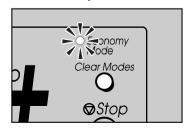

Economy Mode OFF



 
Selecting Toner Saving Mode

The toner saving mode status has two settings.

Press O Help List" appears.

Prt Help List OK

Press Zoom → or ← Zoom until "3 User Param." appears. The messages change in the following order.



Press OK and press Zoom to to move the flashing block cursor until it appears in one of the positions shown in the illustration to the right.





The bits other than the one highlighted in the illustration are unrelated to this setting.

Press to change the bit setting to 1 or 0, as desired.

Display	Heater status		
02:0010 0000	Off (Default)		
02:0010 0100	On (Density will be lighter)		

5 Press OK O.

Please wait

∅ Note

- To cancel this change, press or OFFUNCTION instead of OK O. "Please wait" and "Not Registered" appear on the display.
- Registered
- Do not carry out any operations while "Registered" appears on the display.
- 100% 01

8. SPECIFICATIONS

General Specifications

Type 1	Type 1, Type 2	
Paper Capacity	Power Supply	
Upper tray	AC 120 V	
plain paper (80 g/m ² : 20 lb.) 100 sheets	60 Hz	
Option paper unit		
plain paper (80 g/m ² : 20 lb.) 250 sheets	Power Consumption	
Output tray Capacity	Max 480 W	
plain paper (80 g/m ² : 20 lb.) 50 sheets	Printing (Average) 215 W	
	Copying (Average) 240 W	
Memory	Stand-by (Average) 75 W	
4 MB (Expandable to 8 MB, 16 MB or	PC-Scan (Average) 75W	
32 MB)	Economy Mode 15 W	
EDO SIMM, 60 ns, 72 pin	Operating Environment	
Dimensions		
	Temperature /Humidity	
249 mm × 352 mm × 576 mm (H×W×D)	10°C(50°F) to 35°C(95°F)	
$9.81" \times 13.87" \times 22.69" (H \times W \times D)$	15% to 80%	
Weight		
15.0 kg (33.08 lb)	Machine Life	
,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	30,000 sheets/5 years	
Type 2	Printer Duty	
Paper Capacity	6,000 sheets/1 month	
Upper tray		
plain paper (80 g/m ² : 20 lb.) 100 sheets	Scanner Duty	
Option paper unit	2,000 sheets/1 month	
plain paper (80 g/m ² : 20 lb.) 250 sheets		
ADF (Auto Document Feeder) Capacity	Paper Sizes	
plain paper:	Plain paper	
A4, LT · LG (80 g/m²: 20 lb) 10 sheets	Letter (LT) = $8^{1}/2$ " × 11"	
Output tray Capacity	Legal (LG) = $8^{1}/2" \times 14"$	
plain paper (80 g/m ² : 20 lb.) 50 sheets	Half Letter = $5^1/2$ " $\times 8^1/2$ "	
1 - 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1 -	$A4 = 210 \text{ mm} \times 297 \text{ mm}$	
Memory	$A5 = 148 \text{ mm} \times 210 \text{ mm}$	
4 MB (Expandable to 8 MB, 16MB or 32MB)	$F4 = 8^1/4" \times 13"$	
EDO SIMM, 60 ns, 72 pin	Envelopes	
D	Executive = $7^{1}/4$ " $\times 10^{1}/2$ "	
Dimensions	$Com 10 = 4^{1}/s" \times 9^{1}/2"$	
297mm × 352mm × 576mm (H× W× D)	Monarch = $3^8/7" \times 7^1/2"$	
11.70" X13.87"X 22.69" (HX WX D)	Other	
Weight	Transparencies	
15.5 kg (34.18 lb)	Label Paper	
10.0 kg (04.10 lb)		

Printing Specifications

Printer Language

PCL 5e compatible

Print Resolution

600 dpi × 600 dpi

1200 dpi × 600 dpi (enhanced)

Print Speed

6 ppm (pages per minute)

Paper/Media Types

Plain paper

Envelopes

Transparencies

Label paper

Paper Weight

60 to 90 g/m² (16 to 24 lb)

Interface

IEEE 1284

Resident Font

- Dutch 801 SWC
- Dutch 801 Italic SWC
- Dutch 801 Bold SWC
- Dutch 801 Bold Italic SWC
- Swiss 742 SWC
- Swiss 742 Italic SWC
- Swiss 742 Bold SWC
- Swiss 742 Bold Italic SWC
- Swiss 742 Condensed SWC
- Swiss 742 Condensed Italic SWC
- Swiss 742 Condensed Bold SWC
 Swiss 742 Condensed Bold Italic SWC
- Incised 901 SWC
- Incised 901 Italic SWC.
- · Incised 901 Bold SWC
- Fixed Pitch 810 Courier Roman SWC
- Fixed Pitch 810 Courier Bold SWC
- Fixed Pitch 810 Courier Italic SWC
- · Fixed Pitch 810 Courier Bold Italic SWC
- Fixed Pitch 850 Letter Gothic 12 pitch/text SWC
- Fixed Pitch 850 Letter Gothic Bold 12 pitch /text SWC
- Fixed Pitch 850 Letter Gothic Italic 12 pitch/text SWC
- Flareserif 821 SWC
- Flareserif 821 Extra Bold SWC
- · Ribbon 131 SWC
- · Wingbats SWM

Scanner Specifications

Configuration

Flatbed / ADF

Document Size

LG. LT. HLT.A4. A5. B5

Optical Resolution

300dpi

Scanning Resolution

1bit

 $100 \times 100, 150 \times 150,$ $200 \times 200, 300 \times 300,$

400 × 400, 600 × 600 dpi

8bit

300 × 300 dpi

Grey scale

256 levels (8-bit)

Interface

IEEE 1284 ECP mode

Compatibility

TWAIN

ADF

Up to 10 pages of 80g /m2(20lb), Plain paper

Maximum scanning size

212 × 351.6 mm

OS

Windws 95/98 only

Copying Specifications

Copy Speed

6 cpm (copy per minute)

Warm-up Time

30 seconds or less

First copy

17 seconds or less

Mulitiple Copies

Up to 99 copies

Copy Reduction and Enlargement

121%, 129%, 155%, 200%, LTR ▶ LGL

50%, 65%, 77%, 93%, LGL ► LTR

Paper/Media Types

Plain paper

Envelopes

Transparencies

Label paper

Paper Weight

60 to 90 g/m² (16 to 24 lb)

Original Types

Exposure glass (Type 1/Type 2)

Sheet/Book

ADF (Type 2)

Up to 10 pages of 80 g/m^2 (20 lb),

Plain paper

Maximum Original Size

Legal (LG) = $8^{1}/2$ " $\times 14$ "

Copy Resolution

600 dpi × 600 dpi

INDEX

0	•	
1 to 1 Copy	Front guide	16, 19
A	Front paper support	16
Additional Printer	•	
Auto image density	Help List	56
Automatic Document Feeder (ADF) ix	Help/Function	x
Setting an original	•	
₿	image density	34
Book Copy	Installing	
	Document output tray	6
G	Toner cassette	2
Check Displayx	Upper paper Tray	4
Clearing a Paper Misfeed	•	
cleaning pad52	G	
Computer port viii, ix	label paper	
Connecting a Second Printer	Language	57
(Additional Printer)	Limit mark	10, 16, 18
Connecting to a computer	Loading Paper	10
Connector	Loading	
Copy Mode key xi	plain paper	10
Corner guides	small size paper	12
D	other media	14
Daily Maintenance51	Location	1
Density keyx	M	
Display xi	Memory Copy (Type 1 only)	vi 28
Document guides ix	Metal plate	
Document output tray ix	Multiple Copies	
Installing	матири сориз	Δ(
nistaning	•	
(3	OK	x
Economy Mode	Operation Panel	viii, ix,
Economy Mode/Clear Modes key xi	Original	
Enlargex	Setting (Exposure glass)	27
Enlargement	Setting (ADF)	35
envelopes14	Requirements (ADF)	36
Exposure glass viii, ix	Original Guide	ix
Extend tray viii, ix	Output tray	viii, i

P	Second Printer (Additional Printer)
Paper and Other Media9	Connecting15
Paper Selectx	Using26
paper size	Side guide16, 19
Changing19	SIMM cover viii, is
Specifying (upper)11, 13	SIMM21
Specifying (lower)19	Small size paper feed access panel viii, is
Paper size indicator16, 19	small size paper12
Paper Feed Unit16	sort35
PC Interfacex	Sort/Memory Copy (Type 2 only) xi, 28, 33
Photo1	SPECIFICATIONS62
Photo2	Start
Platen cover viii, ix	Stop x
Power socket viii, ix	Storage
Power switch viii, ix	
printer driver	Ū
Windows 9523	Text Fine
Windows 3.1	Toner cassette
	Installing
@	Replacing52
Quantity keysx	Top release lever viii, is
B	Top unit viii, is
Reduce x	transparencies
Reduction	TROUBLESHOOTING
Replacing	Type 1 vii
Toner cassette	Type 2 is
cleaning pad	•
	Lingua din a Mamanu
resolution/photo setting	Upgrading Memory
S	Upper paper tray viii, ix, 4, 10
Safety Informationi	User Parameter
Scanner lock viii, ix	Using the Second Printer (Additional Printer)26
Unlocking3	2
Second Printer (Additional Printer) port viii, ix	Zoom xi, 32