

Toscana-P1/Piemonte-P1 (J007/J010/J011) PARTS CATALOG

First edition, February 2006

Ricoh Company, LTD.

Toscana-P1/Piemonte-P1 (J007/J010/J011)

PARTS CATALOG

This catalog gives the numbers and names of parts on this machine.

Toscana-P1/Piemonte-P1	(J007/J010/J011)
Paper Feed Unit Type TK1000	(J506)
Multi Bypass Tray Type 1000	(J507)

Toscana-P1/Piemonte-P1
(J007/J010/J011)

Toscana-P1/Piemonte-P1 (J007/J010/J011)


PARTS CATALOG

This catalog gives the numbers and names of parts on this machine.

1.Exterior (J007/J010/J011)	2
2.Paper Tray (J007/J010/J011)	4
3.Duplex Unit (J007/J010/J011)	6
4.Main Parts 1 (J007/J010/J011).....	8
5.Main Parts 2 (J007/J010/J011).....	10
6.Main Parts 3 (J007/J010/J011).....	12
Parts Index	15

February ,25 ' 2006

1.Exterior (J007/J010/J011)

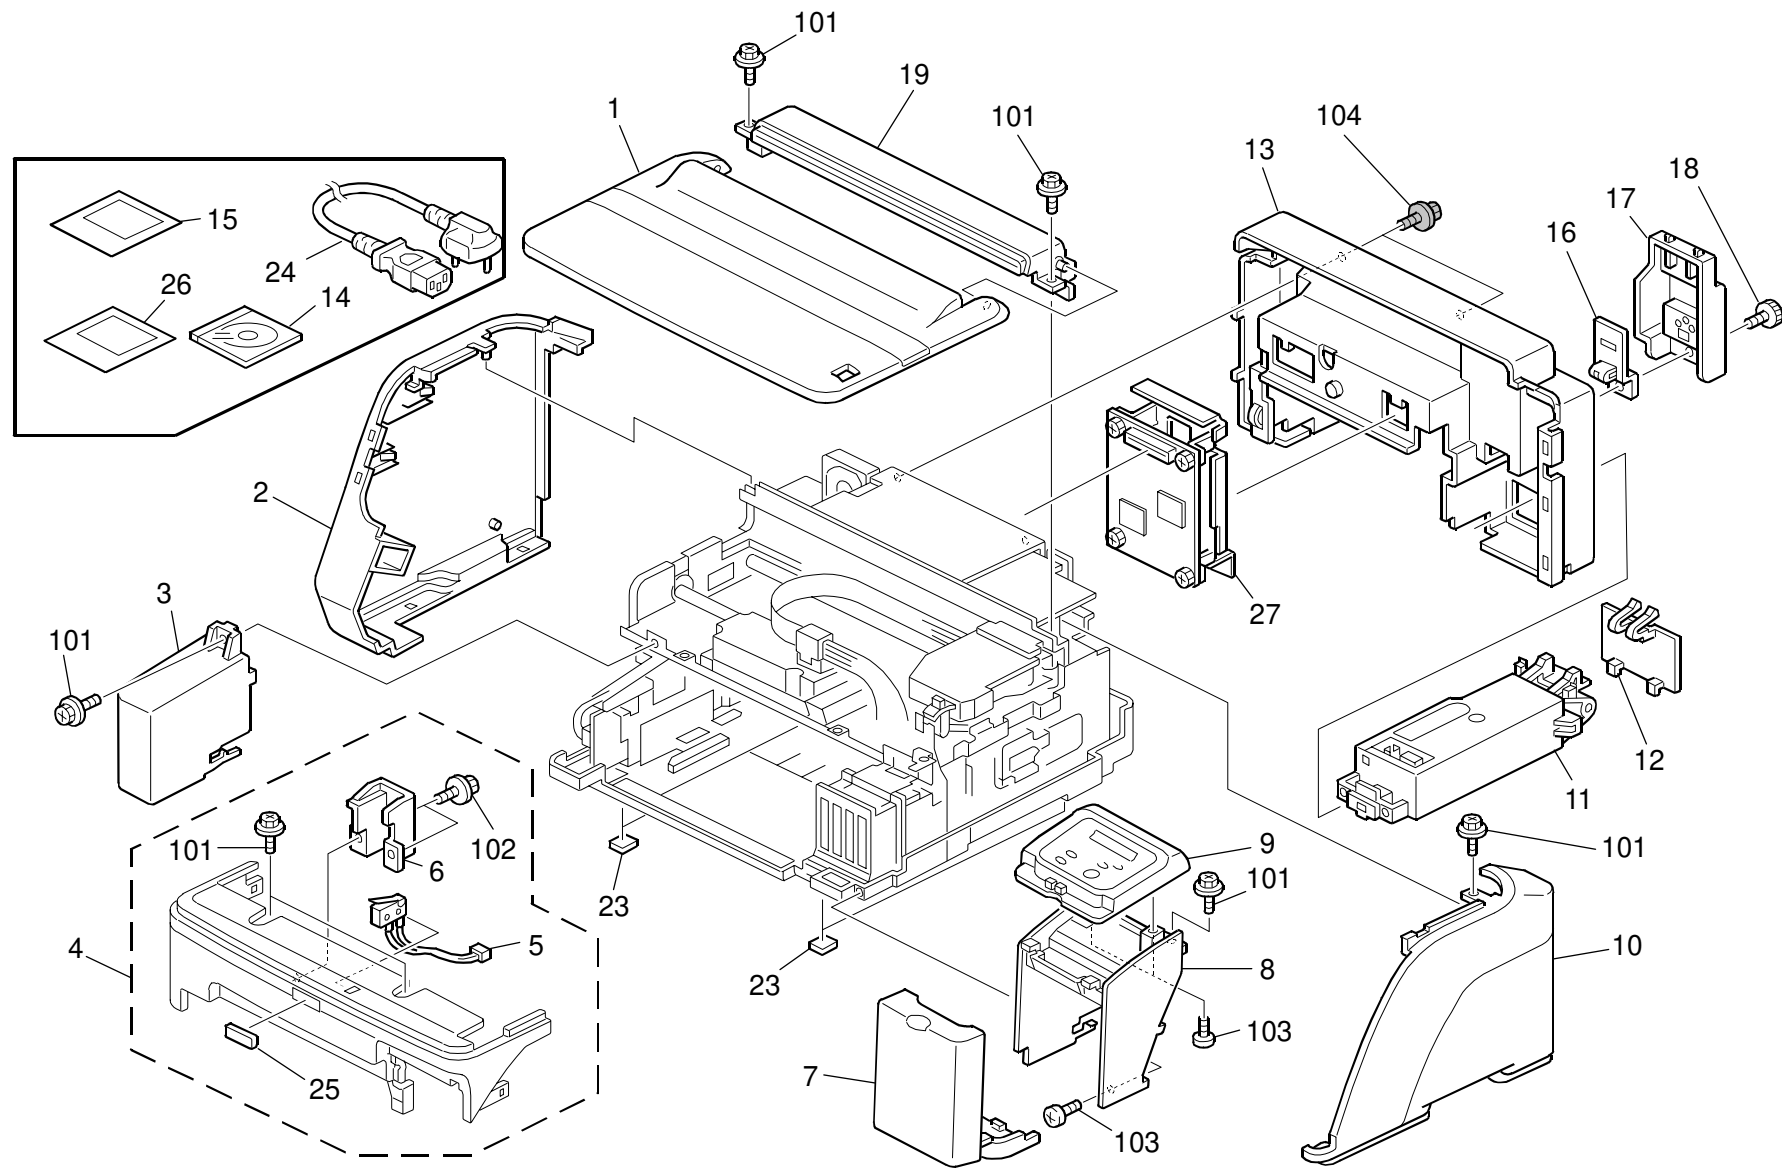


1.Exterior (J007/J010/J011)

Index No.	Part No.	Description	Q'ty Per Assembly
1	J007 0152	Cover - Upper (J007 LT)	1
1	J007 0172	Cover - Upper (J007 A4)	1
1	J008 0152	Cover - Upper (J011)	1
1	J008 0172	Cover - Upper (J011)	1
2	J007 1500	Cover - Left (LT)	1
2	J007 1550	Cover - Left (A4)	1
2	J008 1500	Cover - Left (J011 LT)	1
2	J008 1550	Cover - Left (J011 A4)	1
3	J007 1541	Cover - Power Supply Unit (LT)	1
3	J007 1561	Cover - Power Supply Unit (A4)	1
4	J007 0176	Cover - Front NA	1
4	J007 0174	Cover - Front EU	1
4	J008 0176	Cover - Front (J011 LT)	1
4	J008 0174	Cover - Front EU (J011)	1
5	J007 5440	Harness:Safety Switch:Front:TOS	1
6	J007 1544	Cover:Safety Switch:TP	1
7	J007 1524	Cover - Ink Cartridge (J007/J010)	1
7	J008 1524	Cover - Ink Cartridge (J011)	1
8	J007 1506	Cover - Ink Cartridge (LT)	1
8	J007 1556	Cover - Ink Cartridge (A4)	1
8	J008 1556	Cover - Ink Cartridge (J011 A4)	1
9	J007 0175	Operation Panel Unit NA	1
9	J007 0173	Operation Panel Unit EU	1
9	J008 0175	Operation Panel Unit NA (J011)	1
9	J008 0173	Operation Panel Unit EU (J011)	1
10	J007 1501	Cover - Right (LT)	1
10	J007 1551	Cover - Right (A4)	1
10	J008 1501	Cover - Right (J011 LT)	1
10	J008 1551	Cover - Right (J011 A4)	1
11	J007 0432	Tank:Used Developer:TOS:Ass'y (J007/J010)	1
11	J008 0432	Tank:Used Developer:PIE:Ass'y (J011)	1
12	J007 1542	Cover - Tank (LT)	1
12	J007 1562	Cover - Tank (A4)	1
12	J008 1542	Cover - Tank (J011 LT)	1
12	J008 1562	Cover - Tank (J011 A4)	1

Index No.	Part No.	Description	Q'ty Per Assembly
13	J007 1503	Cover - Rear (LT)	1
13	J007 1553	Cover - Rear (A4)	1
13	J008 1503	Cover - Rear (J011 LT)	1
13	J008 1553	Cover - Rear (J011 A4)	1
14	J007 6605	IC:Driver:Manual:TP-P1:English (J007)	1
14	J010 6605	IC:Driver:Manual:T-P1N:English (J010)	1
14	J011 6601	IC:Driver:Manual:P-P1N:English (J011)	1
15	J007 6603	Installation Procedure:English (J007)	1
15	J010 6603	Installation Procedure:English (J010/J011)	1
16	J007 1545	Spacer - NIC	1
17	J007 1543	Cover - NIC (LT)	1
17	J007 1563	Cover - NIC (A4)	1
18	J008 1010	Screw - M3X9	1
19	J008 1540	Cover - Upper Rear (J011 LT)	1
19	J008 1560	Cover - Upper Rear (J011 A4)	1
23	J001 1008	Rubber Foot	4
24	J001 5493	Power Supply Cord:EU	1
25	J007 1510	Logotype:Ricoh:TP-P1	1
26	J007 6604	Set up Procedure:English :TP-P (J070)	1
26	J010 6604	Set up Procedure:English :TP-P (J010/J01)	1
27	J508 0517	PCB:NIC:TN:Ass'y	1
101	0451 3006N	Tapping Screw - 3x6	
102	0452 3008N	Tapping Screw - M3x8	
103	0452 3008N	Tapping Screw - M3x8	
104	0454 3006Q	Tapping Screw - M3x6	


2.Paper Tray (J007/J010/J011)

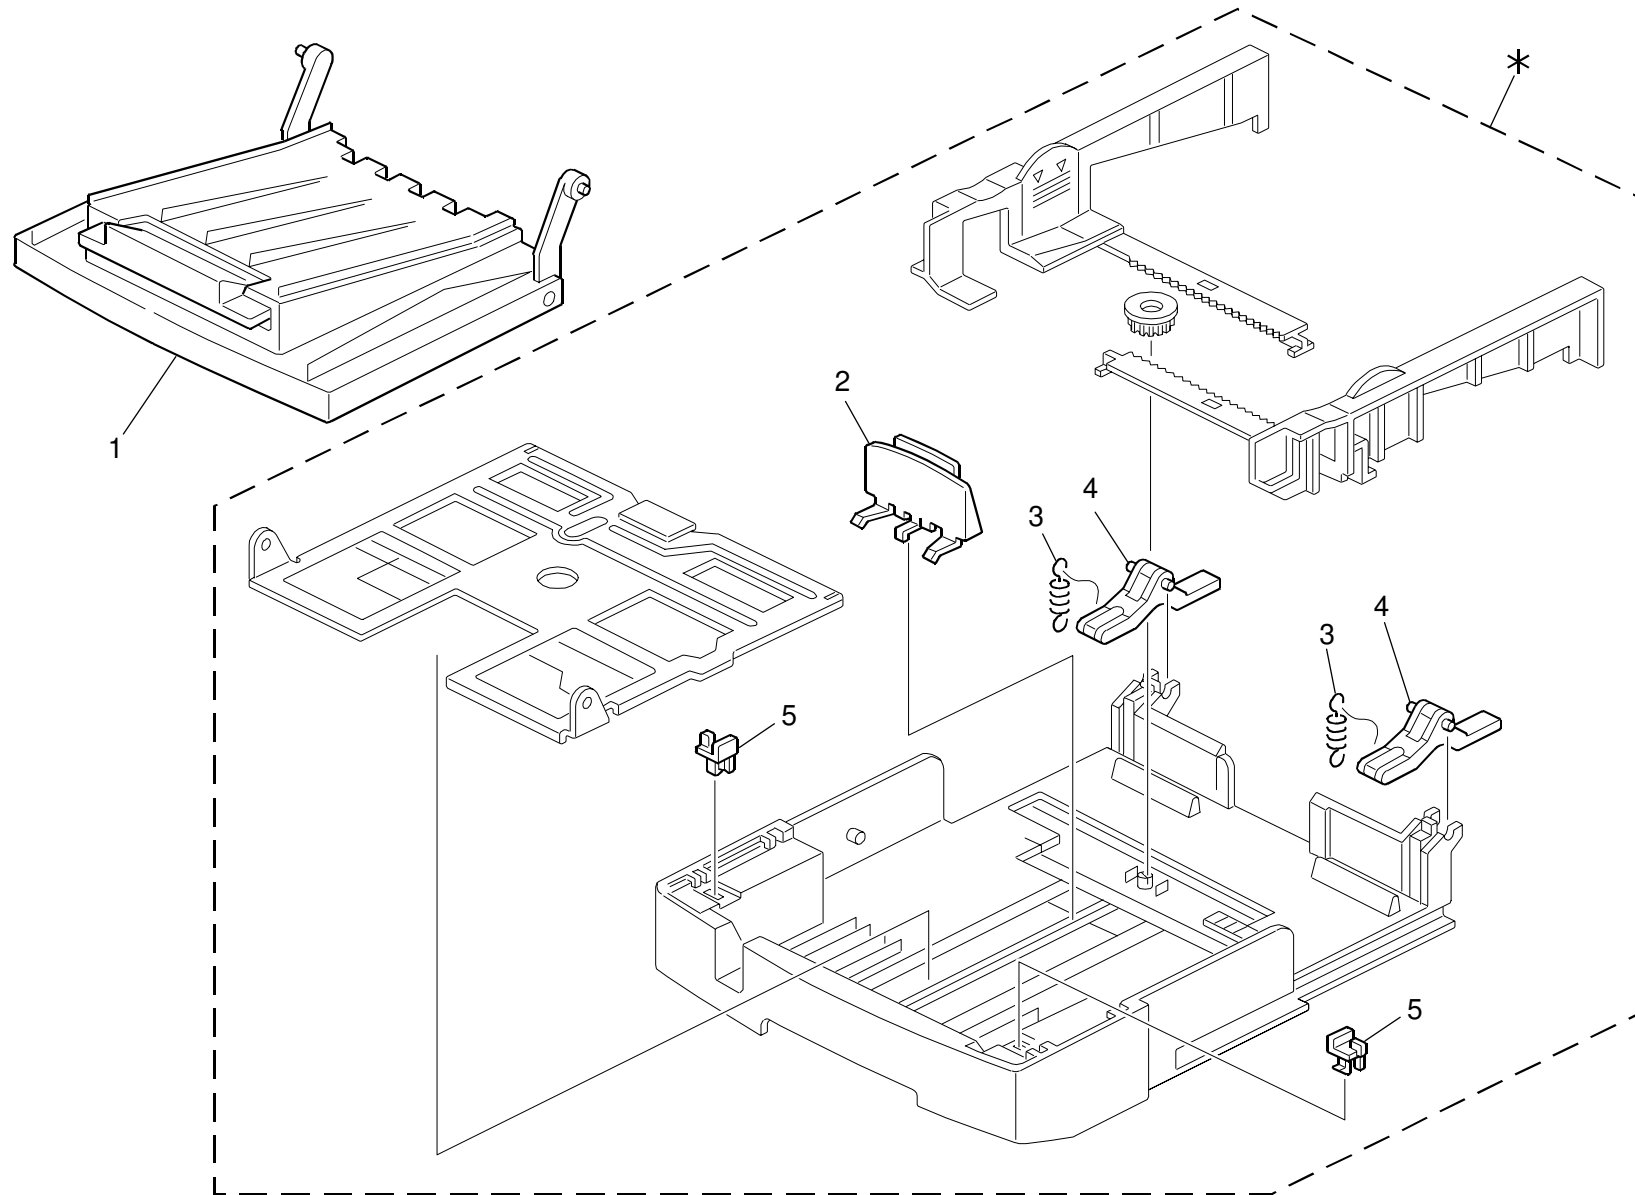



Index No.	Part No.	Description	Q'ty Per Assembly

3. Duplex Unit (J007/J010/J011)

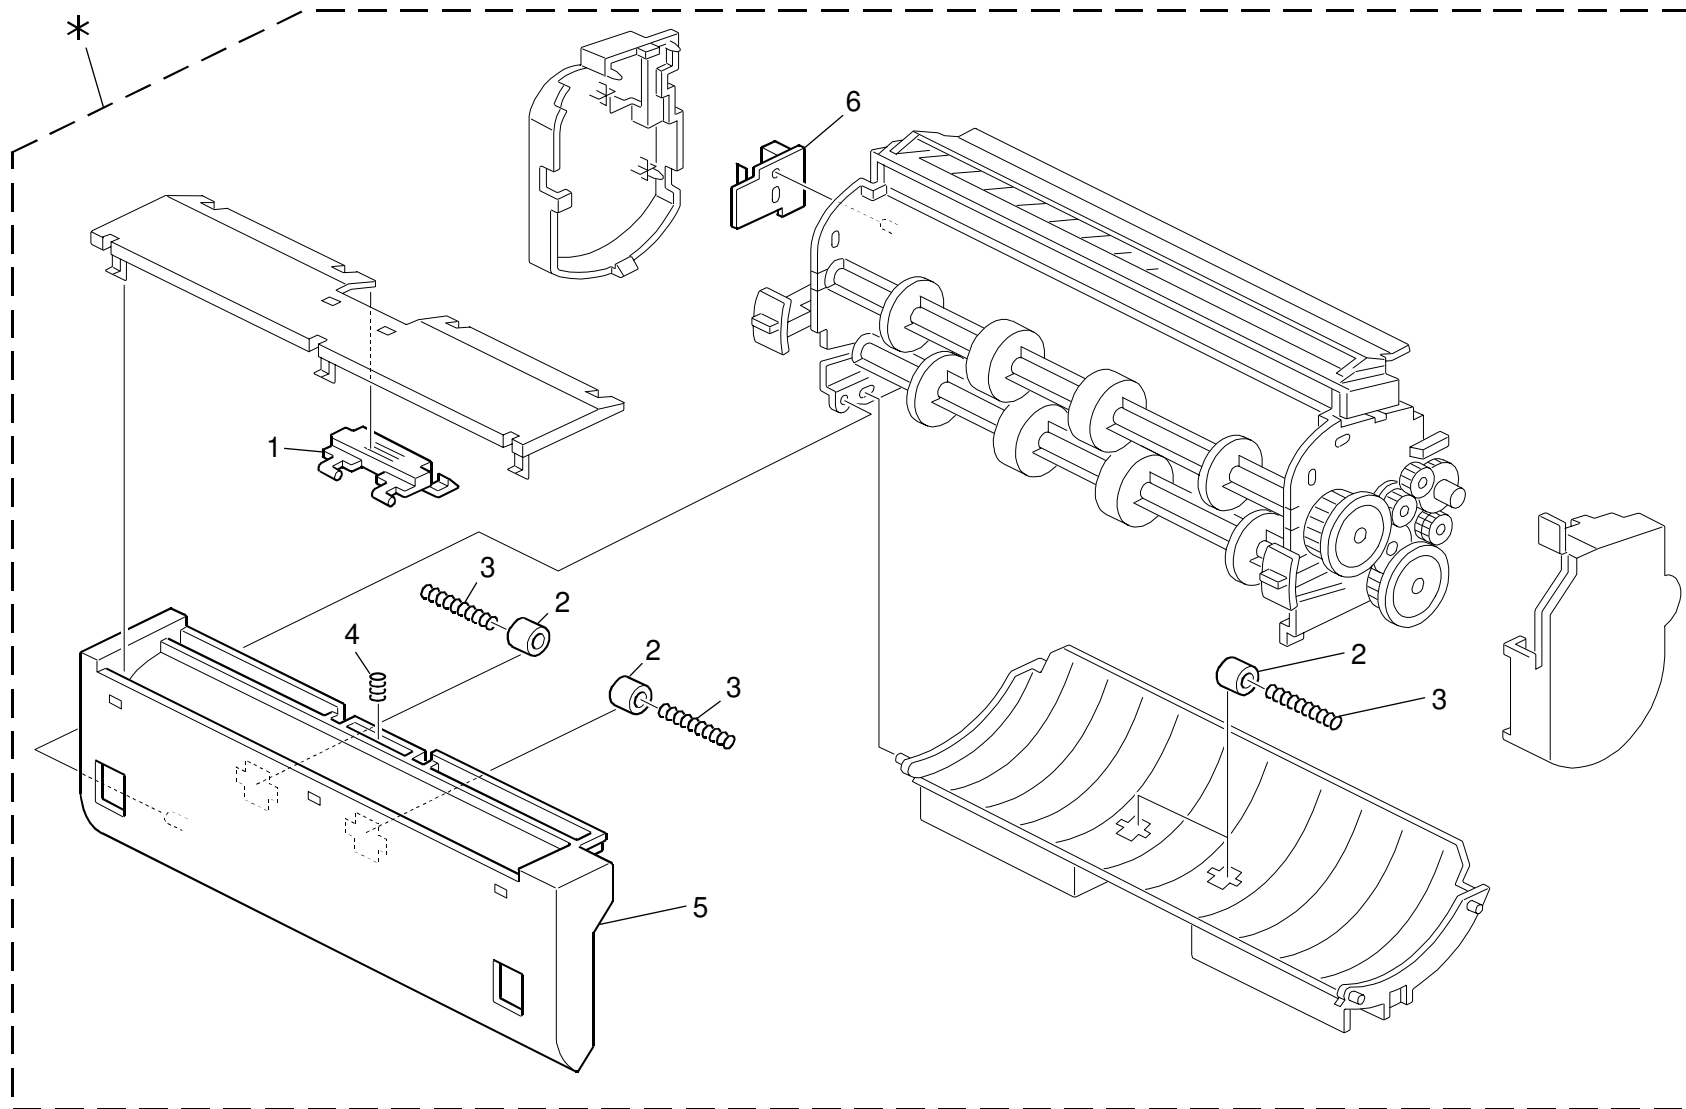


3.Duplex Unit (J007/J010/J011)

Index No.	Part No.	Description	Q'ty Per Assembly
*	J008 0068	Duplex Unit	1
1	J003 6877	Lever:Open And Close	1
2	J003 6866	Roller:Opposed:Transport Roller	4
3	J003 6867	Spring:Pressure Roller	4
4	J003 6878	Spring:Lever:Open And Close	1
5	J007 6857	Guide Plate:Open And Close:A4	1
6	J003 6832	PCB:Duplex Unit	1

Index No.	Part No.	Description	Q'ty Per Assembly

4.Main Parts 1 (J007/J010/J011)

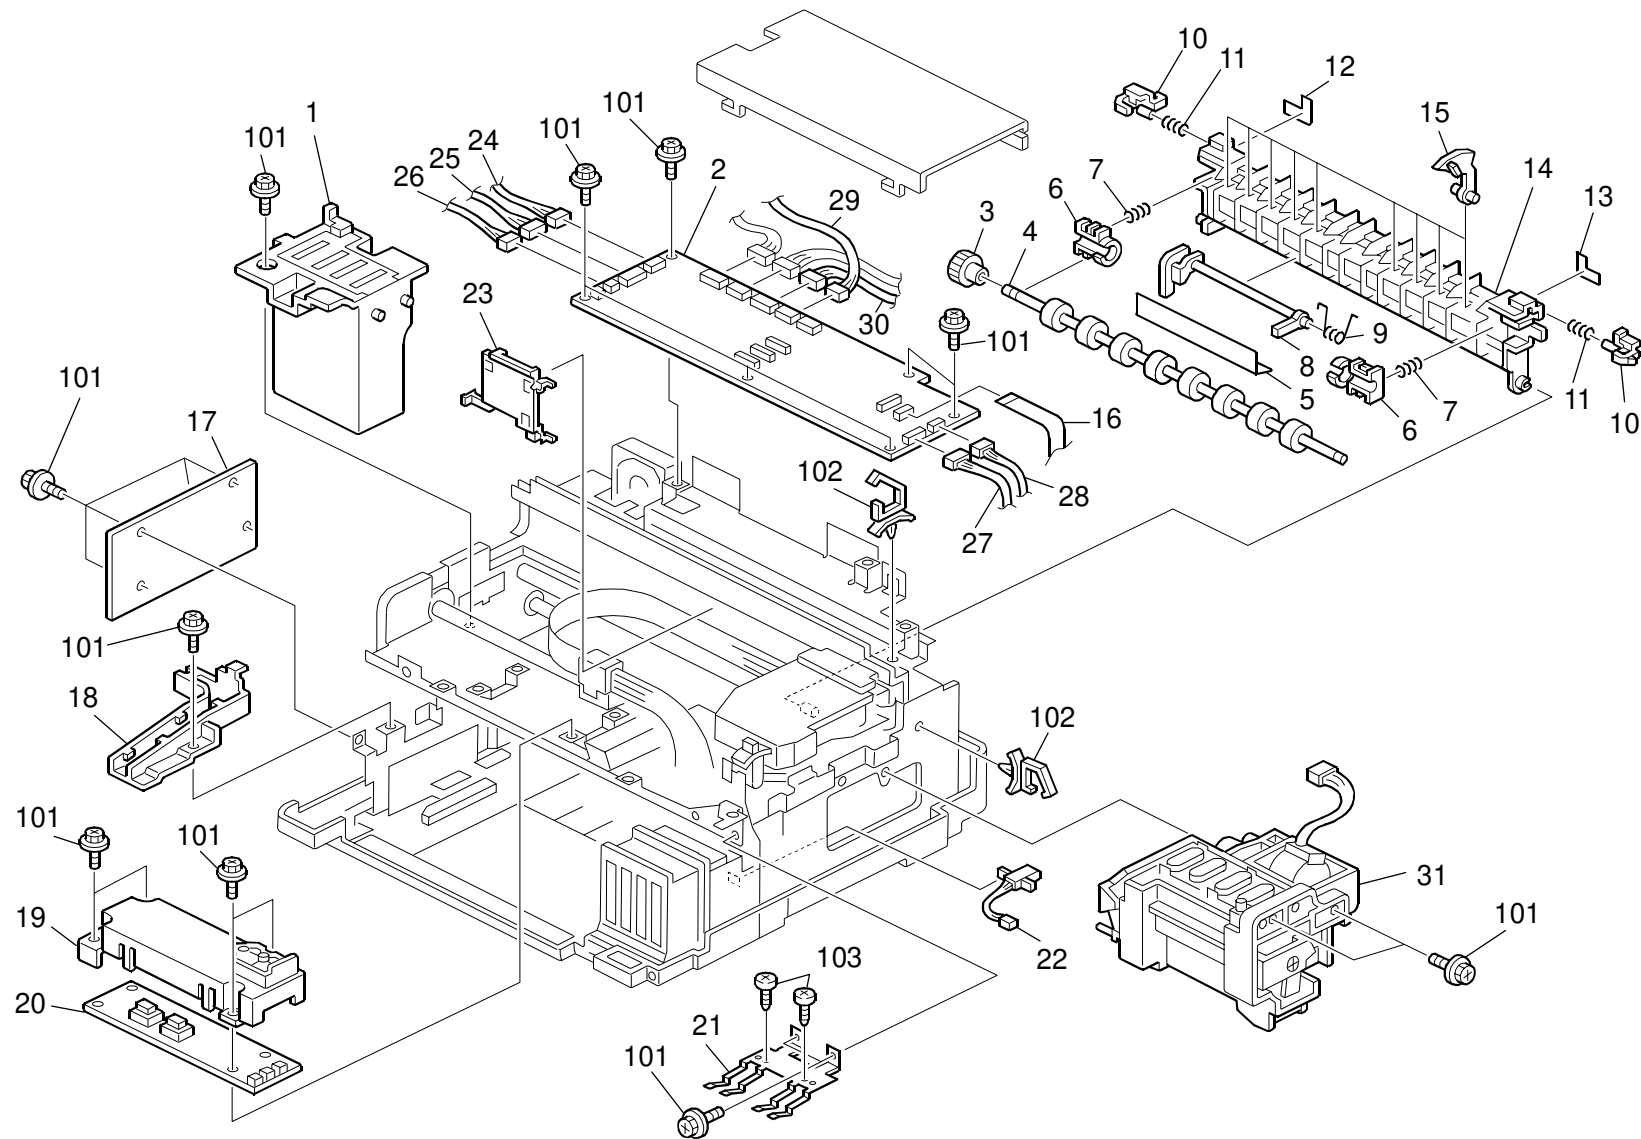


4.Main Parts 1 (J007/J010/J011)

Index No.	Part No.	Description	Q'ty Per Assembly
1	J007 4200	Holder - Left (J007/J010)	1
1	J008 4200	Holder - Left (J011)	1
2	J007 5664	PCB:CTL:Tos-P1 (J007)	1
2	J010 5104	PCB:CTL:Tos-P1N (J010)	1
2	J011 5104	PCB:CTL:Pie-P1N (J011)	1
3	J001 2804	Gear:Transport Roller:Pressure	1
4	J001 2808	Roller:No.1	1
5	J001 2989	Guide:Sheet:Reverse	1
6	J001 2810	Bushing:Roller:No.1	2
7	J001 2814	Spring:Roller:No.1	2
8	J007 2806	Feeler:Registration Sensor	1
9	J001 2807	Spring:Feeler:Registration Sensor	1
10	J001 2811	Pawl:Guide:Reverse	2
11	J001 2813	Spring:Pawl:Guide	2
12	J007 2302	Decal:Reverse:Left	1
13	J007 2303	Decal:Reverse:Right	1
14	J007 2990	Guide:Reverse	1
15	J001 2991	Pickoff Pawl	8
16	J007 5390	Harness:OPU:TOS (J007/J010)	1
16	J008 5390	Harness:OPU:PIE (J011)	1
17	J007 5330	Power Supply Unit(100V)	1
17	J007 5331	Power Supply Unit(220V)	1
18	J007 1056	Cover:Stay:Front:TP-P1	1
19	J007 1055	Cover - Power Pack	1
20	J007 5360	Power Pack	1
21	J007 4696	Positioning Plate:Cartridge:TOS (J007/J010)	1
21	J008 4696	Positioning Plate:Cartridge:PIE (J011)	1
22	J007 5472	Harness:Trailing Edge:Connecting	1
23	J007 3510	Holder:Harness:Carriage	1
24	J007 5432	Harness:Motor:TOS (J007/J010)	1
25	J007 5411	Harness:Power Supply Unit:Power Sou (J007/J010)	1
25	J008 5411	Harness:Power Supply Unit:Power Sou (J011)	1
26	J007 5430	Harness:Power Supply Unit:TOS (J007/J010)	1
26	J008 5430	Harness:Power Supply Unit:PIE (J011)	1

Index No.	Part No.	Description	Q'ty Per Assembly
27	J007 5437	Harness:CCB:TOS (J007/J010)	1
27	J008 5437	Harness:CCB:PIE (J011)	1
28	J007 5446	Harness:Sensor:Front:TOS (J007/J010)	1
28	J008 5446	Harness:Sensor:Front:PIE (J011)	1
29	J007 5435	Harness:Sensor:Rear:TOS (J007/J010)	1
30	J007 5434	Harness:HVP:TOS (J007/J010)	1
30	J008 5434	Harness:HVP:PIE (J011)	1
31	J007 0411	Maintenance Unit (J007/J010)	1
31	J008 0411	Maintenance Unit (J011)	1
101	0451 3006N	Tapping Screw - 3x6	
102	1105 0508	Harness Clamp - LWS-0711	
103	0452 3008N	Tapping Screw - M3x8	

5.Main Parts 2 (J007/J010/J011)

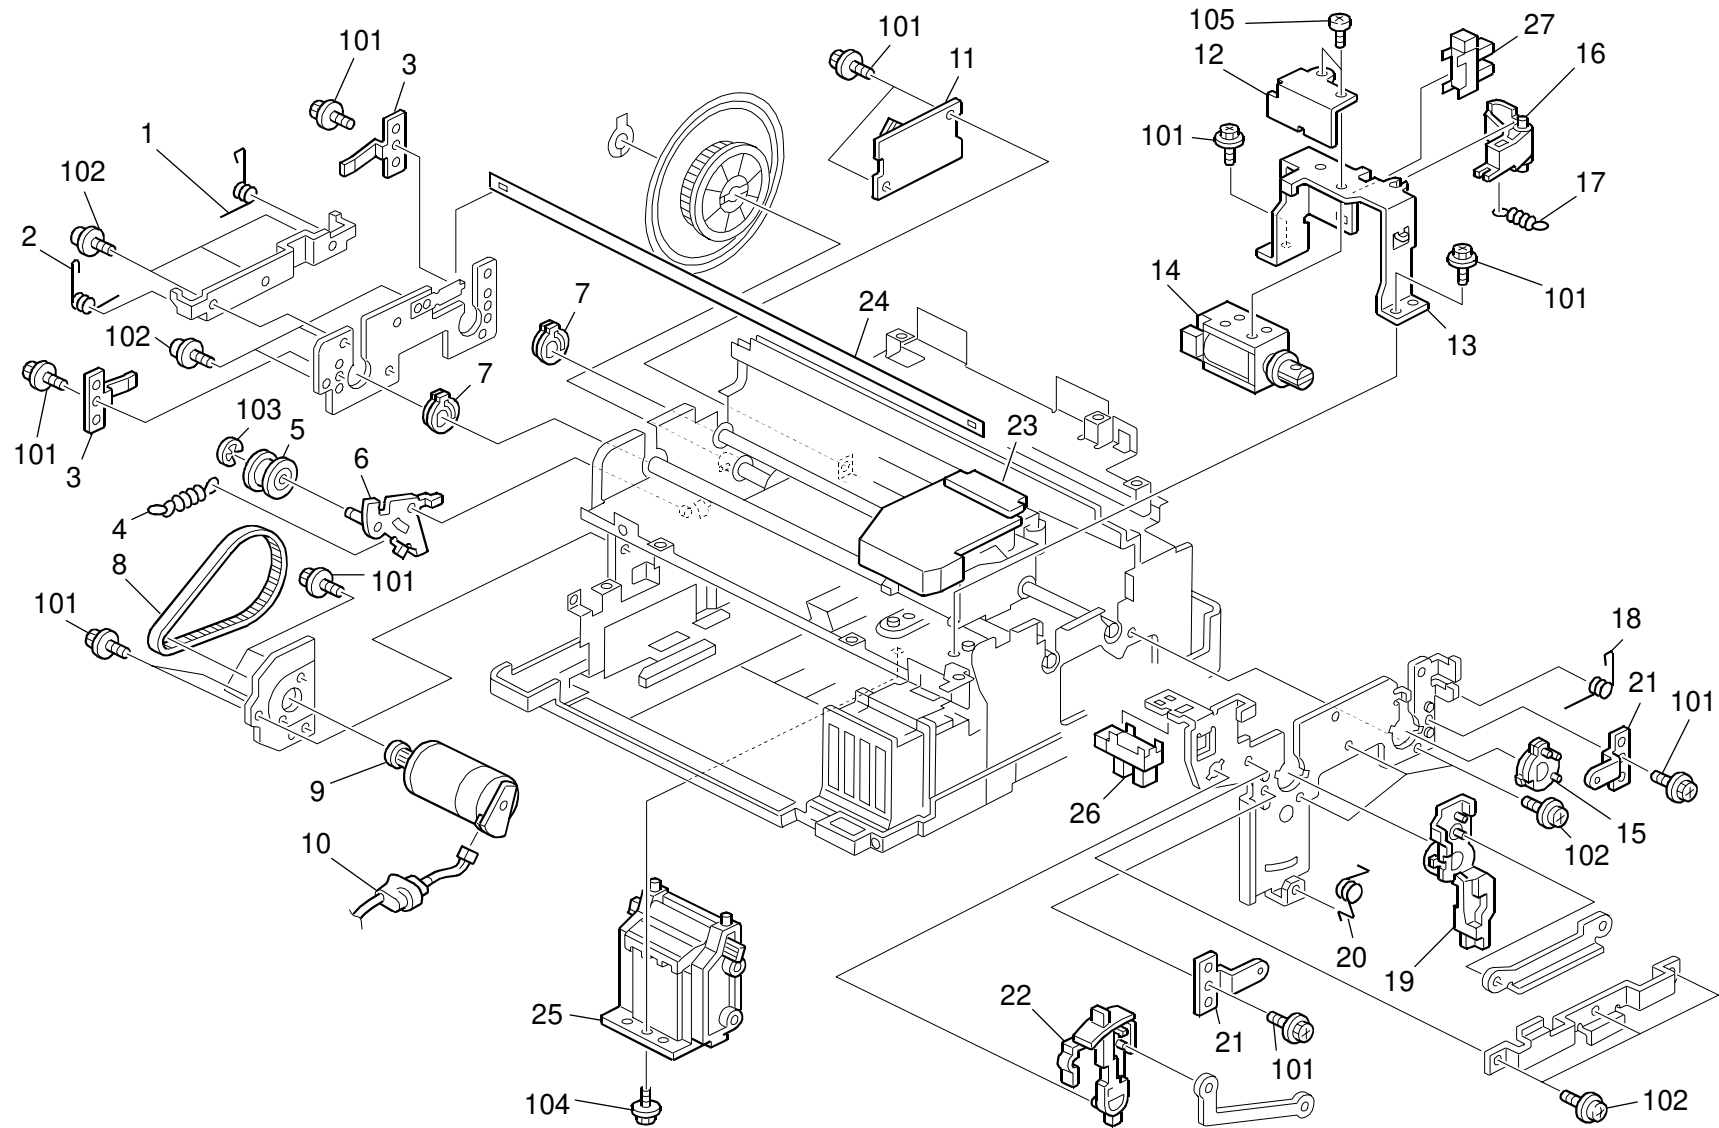


5.Main Parts 2 (J007/J010/J011)

Index No.	Part No.	Description	Q'ty Per Assembly
1	J007 3517	Spring:Guide Rod:1	1
2	J007 3518	Spring:Guide Rod:2	1
3	J007 3519	Ground Plate:Guide Rod:Left	2
4	J006 1148	Spring:Tightener:Drive	1
5	J007 1130	Pulley:Tightener:Drive	1
6	J007 1118	Bracket:Tightener:Ass'y	1
7	J007 3514	Cam:Guide Rod:Left	2
8	J006 2927	Timing Belt:B30S2M88	1
9	J007 3502	DC Motor:Carriage:Ass'y	1
10	J007 5432	Harness:Motor:TOS (J007/J010)	1
11	J007 5655	PCB:Senc:TOS/PIE	1
12	J007 4062	Guide Plate:Dcsol	1
13	J007 4060	Bracket:Actuator:Valve	1
14	AX11 0125	DC Solenoid:Valve	1
15	J007 3513	Cam:Guide Rod:Right	1
16	J007 4061	Lever:Actuator:Valve	1
17	J001 4604	Tension Spring:Lever	1
18	J007 3517	Spring:Guide Rod:1	1
19	J007 3524	Cam:Guide Rod:Right Front	1
20	J007 3534	Spring:Lever:3n	1
21	J007 3512	Spring Plate:Guide Rod	2
22	J007 3504	Lever:Guide Rod:TOS (J007/J010)	1
22	J008 3504	Lever:Guide Rod (J011)	1
23	J007 3410	Cover:Carriage:TOS (J007/J010)	1
23	J008 3410	Cover:Carriage:PIE (J011)	1
24	J007 3503	Sheet:Encoder:TOS (J007/J010)	1
24	J008 3503	Sheet:Encoder:PIE (J011)	1
25	J007 3018	Friction Pad Unit	1
26	GW02 0020	Photointerruptor:LG248NL1	1
27	AW02 0150	Photointerruptor:FLAT:7MM	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0951 3005N	Screw:Polished Round:M3x5	
103	0720 0025E	Retaining Rings-E:2.5	
104	0450 3010N	Tapping Screw:3x10	
105	0353 0040N	Screw:M3x4	

6.Main Parts 3 (J007/J010/J011)

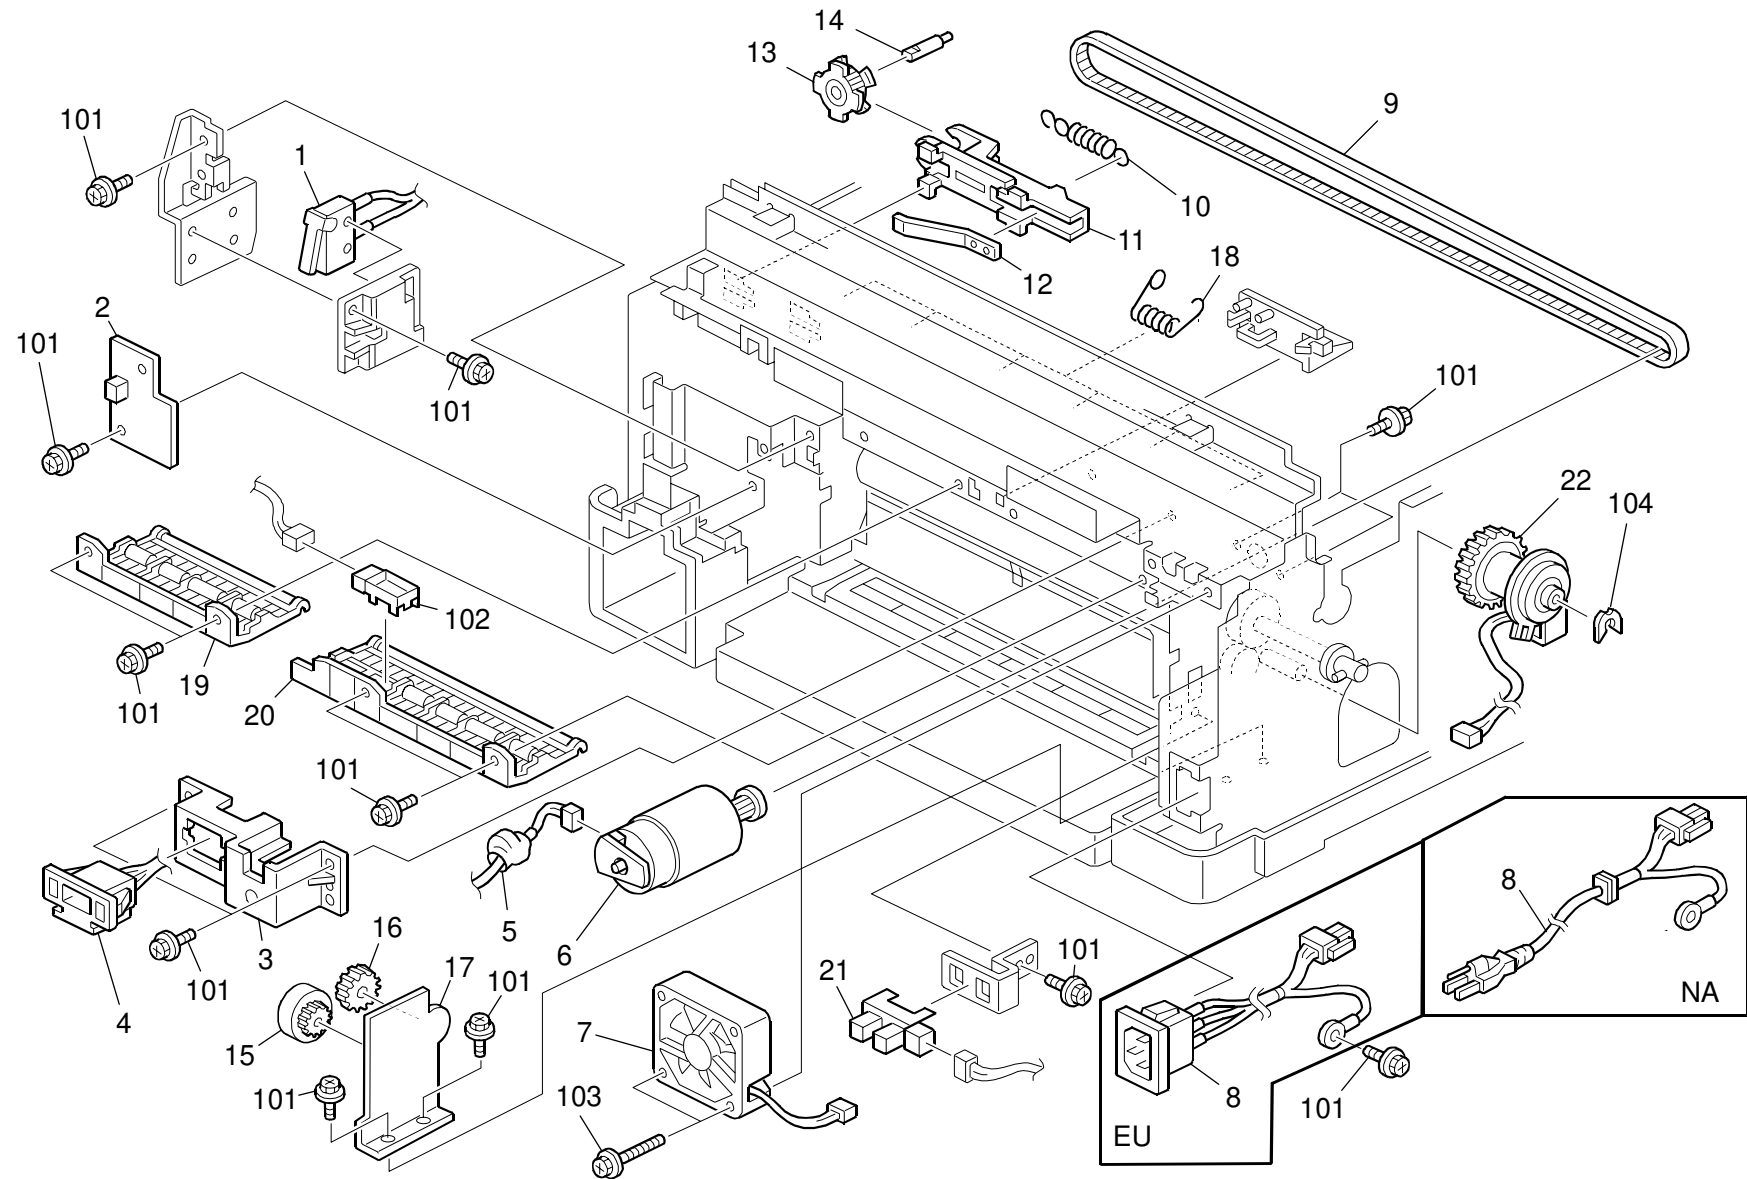

6.Main Parts 3 (J007/J010/J011)

Index No.	Part No.	Description	Q'ty Per Assembly
1	J007 5439	Harness:Safety Switch:Rear	1
2	J007 5223	PCB:DIB:TOS/PIE	1
3	J008 1034	Bracket:Drawer:Machine Or Copier	1
4	J007 5422	Harness:Multi	1
5	J007 5470	Harness:Main:Motor	1
6	J007 5205	DC Motor:Sub Scanning:Ass'y	1
7	J007 5621	Fan:Mm60:15mm:37V	1
8	J007 5480	Harness:Inlet:Ass'y	1
8	J007 5511	Power Supply Cord:Stopper:NA:Pie	1
9	J007 3525	Timing Belt:524ST55-6.0 (J007/J010)	1
9	J003 3513	Timing Belt:P (J011)	1
10	J007 3533	Spring:Pressure Roller:30n	1
11	J006 3405	Holder:Pressure Roller:P-P2W	1
12	J006 3406	Spring Plate:Holder:Pressure Roller	1
13	J007 3535	Pressure Roller:Press Fit	1
14	J007 3528	Shaft:Pressure Roller	1
15	J001 1014	Gear:Drive:Dial	1
16	J001 1015	Gear:Idler:Dial	1
17	J007 1017	Bracket:Dial:TOS-P1:Ass'y (J007/J010)	1
17	J008 1017	Bracket:Dial:PIE-P1:Ass'y (J011)	1
18	J006 2992	Spring:Roller:Leading Edge	6
19	J007 2700	Pressure Plate:Roller:Leading Edge:Ass'y	1
20	J007 2701	Pressure Plate:Roller:Leading Edge:Right	1
21	GW02 0020	Photointerruptor:LG248NL1	1
22	J007 3016	Spring Clutch:Feed	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	1403 1384	Registration Sensor:No.2	
103	0451 3020N	Tapping Screw:3x20	
104	0805 0088	Retaining Rings-E:Silencer:Dia6	

Parts Index

Parts Index

Part No.	Description	Page and Index No.
J007 0152	Cover - Upper (J007 LT)	3 - 1
J007 0172	Cover - Upper (J007 A4)	3 - 1
J007 0173	Operation Panel Unit EU	3 - 9
J007 0174	Cover - Front EU	3 - 4
J007 0175	Operation Panel Unit NA	3 - 9
J007 0176	Cover - Front NA	3 - 4
J007 0411	Maintenance Unit (J007/J010)	9 - 31
J007 0432	Tank:Used Developer:TOS:Ass'y (J007/J010)	3 - 11
J007 1017	Bracket:Dial:TOS-P1:Ass'y (J007/J010)	13 - 17
J007 1055	Cover - Power Pack	9 - 19
J007 1056	Cover:Stay:Front:TP-P1	9 - 18
J007 1118	Bracket:Tightener:Ass'y	11 - 6
J007 1130	Pulley:Tightener:Drive	11 - 5
J007 1500	Cover - Left (LT)	3 - 2
J007 1501	Cover - Right (LT)	3 - 10
J007 1503	Cover - Rear (LT)	3 - 13
J007 1506	Cover - Ink Cartridge (LT)	3 - 8
J007 1510	Logotype:Ricoh:TP-P1	3 - 25
J007 1524	Cover - Ink Cartridge (J007/J010)	3 - 7
J007 1541	Cover - Power Supply Unit (LT)	3 - 3
J007 1542	Cover - Tank (LT)	3 - 12
J007 1543	Cover - NIC (LT)	3 - 17
J007 1544	Cover:Safety Switch:TP	3 - 6
J007 1545	Spacer - NIC	3 - 16
J007 1550	Cover - Left (A4)	3 - 2
J007 1551	Cover - Right (A4)	3 - 10
J007 1553	Cover - Rear (A4)	3 - 13
J007 1556	Cover - Ink Cartridge (A4)	3 - 8
J007 1561	Cover - Power Supply Unit (A4)	3 - 3
J007 1562	Cover - Tank (A4)	3 - 12
J007 1563	Cover - NIC (A4)	3 - 17
J007 2302	Decal:Reverse:Left	9 - 12
J007 2303	Decal:Reverse:Right	9 - 13
J007 2700	Pressure Plate:Roller:Leading Edge:Ass'y	13 - 19
J007 2701	Pressure Plate:Roller:Leading Edge:Right	13 - 20

Part No.	Description	Page and Index No.
J007 2806	Feeler:Registration Sensor	9 - 8
J007 2990	Guide:Reverse	9 - 14
J007 3003	End Fence	5 - 2
J007 3016	Spring Clutch:Feed	13 - 22
J007 3018	Friction Pad Unit	11 - 25
J007 3410	Cover:Carriage:TOS (J007/J010)	11 - 23
J007 3502	DC Motor:Carriage:Ass'y	11 - 9
J007 3503	Sheet:Encoder:TOS (J007/J010)	11 - 24
J007 3504	Lever:Guide Rod:TOS (J007/J010)	11 - 22
J007 3510	Holder:Harness:Carriage	9 - 23
J007 3512	Spring Plate:Guide Rod	11 - 21
J007 3513	Cam:Guide Rod:Right	11 - 15
J007 3514	Cam:Guide Rod:Left	11 - 7
J007 3517	Spring:Guide Rod:1	11 - 18
J007 3517	Spring:Guide Rod:1	11 - 1
J007 3518	Spring:Guide Rod:2	11 - 2
J007 3519	Ground Plate:Guide Rod:Left	11 - 3
J007 3524	Cam:Guide Rod:Right Front	11 - 19
J007 3525	Timing Belt:524ST55-6.0 (J007/J010)	13 - 9
J007 3528	Shaft:Pressure Roller	13 - 14
J007 3533	Spring:Pressure Roller:30n	13 - 10
J007 3534	Spring:Lever:3n	11 - 20
J007 3535	Pressure Roller:Press Fit	13 - 13
J007 4060	Bracket:Actuator:Valve	11 - 13
J007 4061	Lever:Actuator:Valve	11 - 16
J007 4062	Guide Plate:Dcsol	11 - 12
J007 4200	Holder - Left (J007/J010)	9 - 1
J007 4696	Positioning Plate:Cartridge:TOS (J007/J010)	9 - 21
J007 5205	DC Motor:Sub Scanning:Ass'y	13 - 6
J007 5223	PCB:DIB:TOS/PIE	13 - 2
J007 5330	Power Supply Unit(100V)	9 - 17
J007 5331	Power Supply Unit(220V)	9 - 17
J007 5360	Power Pack	9 - 20
J007 5390	Harness:OPU:TOS (J007/J010)	9 - 16
J007 5411	Harness:Power Supply Unit:Power Sou	9 - 25

Part No.	Description	Page and Index No.
J007 5422	Harness:Multi	13 - 4
J007 5430	Harness:Power Supply Unit:TOS (J007/J010)	9 - 26
J007 5432	Harness:Motor:TOS (J007/J010)	11 - 10
J007 5432	Harness:Motor:TOS (J007/J010)	9 - 24
J007 5434	Harness:HVP:TOS (J007/J010)	9 - 30
J007 5435	Harness:Sensor:Rear:TOS (J007/J010)	9 - 29
J007 5437	Harness:CCB:TOS (J007/J010)	9 - 27
J007 5439	Harness:Safety Switch:Rear	13 - 1
J007 5440	Harness:Safety Switch:Front:TOS	3 - 5
J007 5446	Harness:Sensor:Front:TOS (J007/J010)	9 - 28
J007 5470	Harness:Main:Motor	13 - 5
J007 5472	Harness:Trailing Edge:Connecting	9 - 22
J007 5480	Harness:Inlet:Ass'y	13 - 8
J007 5511	Power Supply Cord:Stopper:NA:Pie	13 - 8
J007 5621	Fan:Mm60:15mm:37V	13 - 7
J007 5655	PCB:Senc:TOS/PIE	11 - 11
J007 5664	PCB:CTL:Tos-P1 (J007)	9 - 2
J007 6603	Installation Procedure:English (J007)	3 - 15
J007 6604	Set up Procedure:English :TP-P (J070)	3 - 26
J007 6605	IC:Driver:Manual:TP-P1:English (J007)	3 - 14
J007 6857	Guide Plate:Open And Close:A4	7 - 5
J010 5104	PCB:CTL:Tos-P1N (J010)	9 - 2
J010 6603	Installation Procedure:English (J010/J011)	3 - 15
J010 6604	Set up Procedure:English :TP-P (J010/J01)	3 - 26
J010 6605	IC:Driver:Manual:T-P1N:English (J010)	3 - 14
J011 5104	PCB:CTL:Pie-P1N (J011)	9 - 2
J011 6601	IC:Driver:Manual:P-P1N:English (J011)	3 - 14

Part No.	Description	Page and Index No.
J001 1008	Rubber Foot	3 - 23
J001 1014	Gear:Drive:Dial	13 - 15
J001 1015	Gear:Idler:Dial	13 - 16
J001 2804	Gear:Transport Roller:Pressure	9 - 3
J001 2807	Spring:Feeler:Registration Sensor	9 - 9
J001 2808	Roller:No.1	9 - 4
J001 2810	Bushing:Roller:No.1	9 - 6
J001 2811	Pawl:Guide:Reverse	9 - 10
J001 2813	Spring:Pawl:Guide	9 - 11
J001 2814	Spring:Roller:No.1	9 - 7
J001 2989	Guide:Sheet:Reverse	9 - 5
J001 2991	Pickoff Pawl	9 - 15
J001 3057	Tension Spring:Base:P1	5 - 3
J001 4604	Tension Spring:Lever	11 - 17
J001 5493	Power Supply Cord:EU	3 - 24
J003 3513	Timing Belt:P (J011)	13 - 9
J003 6832	PCB:Duplex Unit	7 - 6
J003 6866	Roller:Opposed:Transport Roller	7 - 2
J003 6867	Spring:Pressure Roller	7 - 3
J003 6877	Lever:Open And Close	7 - 1
J003 6878	Spring:Lever:Open And Close	7 - 4
J006 1148	Spring:Tightener:Drive	11 - 4
J006 2927	Timing Belt:B30S2M88	11 - 8
J006 2992	Spring:Roller:Leading Edge	13 - 18
J006 3019	Arm:Cassette	5 - 4
J006 3020	Protection:Cassette	5 - 5
J006 3405	Holder:Pressure Roller:P-P2W	13 - 11
J006 3406	Spring Plate:Holder:Pressure Roller	13 - 12
J008 0031	Paper Feed Cassette Unit	5 - *
J008 0068	Duplex Unit	7 - *
J008 0152	Cover - Upper (J011)	3 - 1
J008 0172	Cover - Upper (J011)	3 - 1
J008 0173	Operation Panel Unit EU (J011)	3 - 9
J008 0174	Cover - Front EU (J011)	3 - 4
J008 0175	Operation Panel Unit NA (J011)	3 - 9

Part No.	Description	Page and Index No.
J008 0176	Cover - Front (J011 LT)	3 - 4
J008 0411	Maintenance Unit (J011)	9 - 31
J008 0432	Tank:Used Developer:PIE:Ass'y (J011)	3 - 11
J008 0494	Exit Tray Unit	5 - 1
J008 1010	Screw - M3X9	3 - 18
J008 1017	Bracket:Dial:PIE-P1:Ass'y (J011)	13 - 17
J008 1034	Bracket:Drawer:Machine Or Copier	13 - 3
J008 1500	Cover - Left (J011 LT)	3 - 2
J008 1501	Cover - Right (J011 LT)	3 - 10
J008 1503	Cover - Rear (J011 LT)	3 - 13
J008 1524	Cover - Ink Cartridge (J011)	3 - 7
J008 1540	Cover - Upper Rear (J011 LT)	3 - 19
J008 1542	Cover - Tank (J011 LT)	3 - 12
J008 1550	Cover - Left (J011 A4)	3 - 2
J008 1551	Cover - Right (J011 A4)	3 - 10
J008 1553	Cover - Rear (J011 A4)	3 - 13
J008 1556	Cover - Ink Cartridge (J011 A4)	3 - 8
J008 1560	Cover - Upper Rear (J011 A4)	3 - 19
J008 1562	Cover - Tank (J011 A4)	3 - 12
J008 3410	Cover:Carriage:PIE (J011)	11 - 23
J008 3503	Sheet:Encoder:PIE (J011)	11 - 24
J008 3504	Lever:Guide Rod (J011)	11 - 22
J008 4200	Holder - Left (J011)	9 - 1
J008 4696	Positioning Plate:Cartridge:PIE (J011)	9 - 21
J008 5390	Harness:OPU:PIE (J011)	9 - 16
J008 5411	Harness:Power Supply Unit:Power Sou (J011)	9 - 25
J008 5430	Harness:Power Supply Unit:PIE (J011)	9 - 26
J008 5434	Harness:HVP:PIE (J011)	9 - 30
J008 5437	Harness:CCB:PIE (J011)	9 - 27
J008 5446	Harness:Sensor:Front:PIE (J011)	9 - 28
J508 0517	PCB:NIC:TN:Ass'y	3 - 27

Part No.	Description	Page and Index No.
AW02 0150	Photointerruptor:FLAT:7MM	11 - 27
AX11 0125	DC Solenoid:Valve	11 - 14
GW02 0020	Photointerruptor:LG248NL1	11 - 26
GW02 0020	Photointerruptor:LG248NL1	13 - 21

Part No.	Description	Page and Index No.
0353 0040N	Screw:M3x4	11 -105
0450 3010N	Tapping Screw:3x10	11 -104
0451 3006N	Tapping Screw - 3x6	11 -101
0451 3006N	Tapping Screw - 3x6	13 -101
0451 3006N	Tapping Screw - 3x6	3 - 101
0451 3006N	Tapping Screw - 3x6	9 - 101
0451 3020N	Tapping Screw:3x20	13 -103
0452 3008N	Tapping Screw - M3x8	9 - 103
0452 3008N	Tapping Screw - M3x8	3 - 103
0452 3008N	Tapping Screw - M3x8	3 - 102
0454 3006Q	Tapping Screw - M3x6	3 - 104
0720 0025E	Retaining Rings-E:2.5	11 -103
0805 0088	Retaining Rings-E:Silencer:Dia6	13 -104
0951 3005N	Screw:Polished Round:M3x5	11 -102
1105 0508	Harness Clamp - LWS-0711	9 - 102
1403 1384	Registration Sensor:No.2	13 -102

Part No.	Description	Page and Index No.