



Notes for Color Controller E-43/E-83

■ Connecting to the Interfaces


<Pro C9100/C9110>

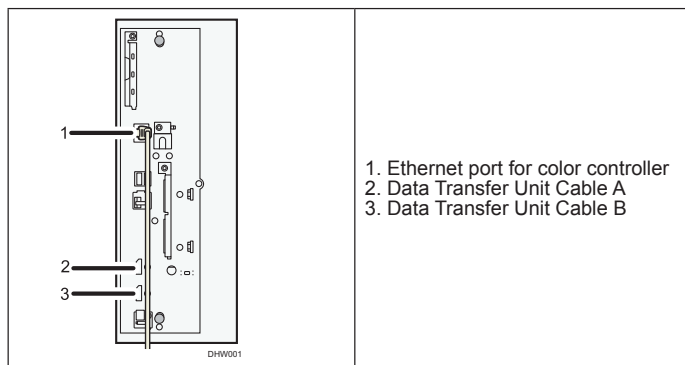

<Color Controller E-43>

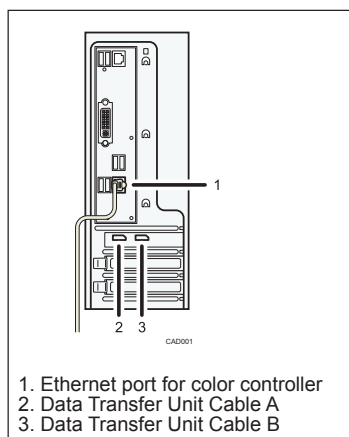

<Color Controller E-83>

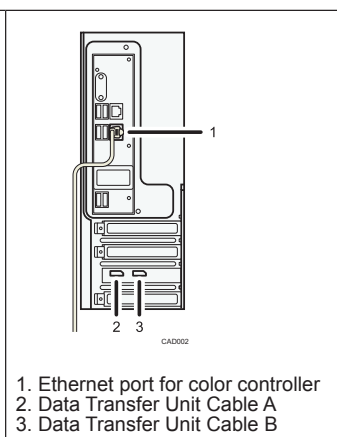


■ How to Connect the Data Transfer Unit Cable

- When connecting RICOH Pro C9110/C9100 or "printer" in this document to the Color Controller E-43/E-83 by using the Cable, connect the Data Transfer Unit Cable A and B of the printer with those of the Color Controller E-43/E-83 respectively. For details, refer to the "Connecting to the Interfaces" illustration.
- Remove the cable after turning the main power switch to "OFF". Failure to do so can result in malfunction.

■ How to Gather the Data Transfer Unit Cable

- After connection, do not bend or fold the cable. It could be damaged and a malfunction during the sending of data may result.
- When gathering the cable, coil the cable with a radius of over 10 cm as shown in the below illustration.



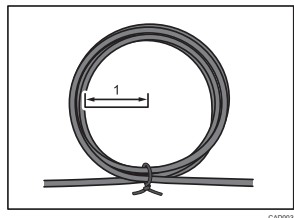

■ Interlocking the main power of Color Controller E-43/E-83

Color Controller E-43/E-83 has a function to interlock the main power with the printer (Pro C9100/C9110).


By turning this function on in Color Controller E-43/E-83, the color controller's power goes off when the printer is turned off.

Turning the interlock function on and off is done via a switch above the printer interface board at the rear of Color Controller E-43/E-83. When the switch is set to OFF, the interlock function is turned off, and when the switch is turned to ON, the interlock function is turned on.


Color Controller E-43/E-83 has the Low Power Mode function. In order to receive the print job data all times, the default setting is OFF.

■ Switch for interlocking the main power of Color Controller E-43/E-83

<ON>

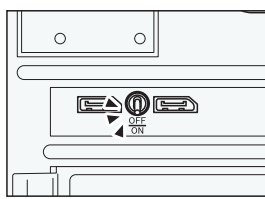

<OFF>

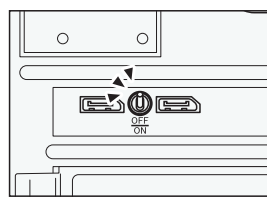

<Important>

- Use the selector switch while the Color Controller E-43/E-83 is turned off.

 
■ Turning Off the Main Power

<Important>

- Do not turn off the main power switch on the backside of the Color Controller E-43/E-83 when the operation switch indicator on the upper side of the controller is lit or flashing. Doing so may result in damage to the hard disk or memory.
- Make sure to turn off the main power switch before pulling out the power plug on the backside of the Color Controller E-43/E-83. Not doing so may result in damage to the hard disk or memory, leading to malfunctions.
- After turning off the main power switch of the printer, wait for two minutes or more before turning it on again.

■ <When interlocking function is set to ON>

1. Shut down the main power of printer.
2. The main power of Color Controller E-43/E-83 is shut down in synchronization.
*Do not use the key on control panel of the printer.



■ <When interlocking function is set to OFF>


1. Press the [Fiery] key on the control panel of the printer.
2. Press the [Fiery] tab on the control panel of the printer.
3. Press [Restart Fiery], and then press [Shut Down] on the control panel of the printer.
4. Press [OK].
5. Press the operation switch to turn off the operation switch indicator.
6. Make sure the operation switch indicator is unlit.
7. Open the cover of the main power switch on the front left of the printer.
8. Turn off the main power switch.
9. Close the front left cover.

■ Control panel of the printer

1. [Fiery] key

The [Fiery] key is assigned to a key located in an easy-to-use position on the control panel. Press the assigned [Fiery] key to change screens.


<Pro C9100/C9110>


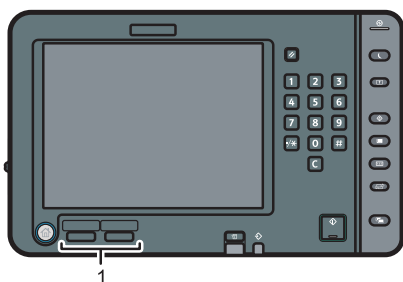


■ Notes when interlocking function is OFF

<Important>

   - When shutting down the printer, be sure to shut down the main power of Color Controller E-43/E-83.
- Be sure to turn the main power of Color Controller E-43/E-83 on within one hour of turning on the main power of the printer.
- When turning the main power ON, turn on the printer first, then turn on Color Controller E-43/E-83.





© 2016
Printed in Japan
EN^{GB} EN^{US} EN^{AU}
M238-1061

