


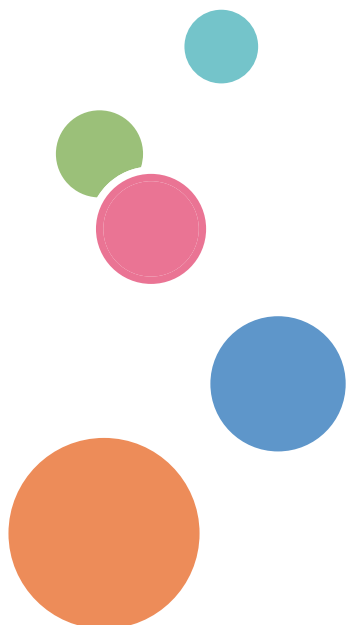

Operating Instructions

Paper Fundamentals



For safe and correct use, be sure to read Safety Information before using the machine.

TABLE OF CONTENTS

Introduction.....	3
1. Characteristics and Conditions of Paper	
Characteristics of Paper.....	5
Composition of Paper.....	5
Friction Characteristics.....	5
Surface Smoothness.....	5
Resistance to Heat.....	6
Moisture Content.....	6
Flexibility of Paper (Stiffness).....	7
Surface Resistivity.....	7
Paper Specifications.....	7
Condition of Paper.....	10
Rips, Wrinkles, and Folds.....	10
Curls.....	11
Cut Edge.....	12
Grain Direction.....	13
2. Handling Paper	
Loading Paper.....	15
How to Hold Paper.....	17
How to Place Paper.....	18
Storing Paper.....	20
Precautions during Transport.....	21
Using Special Types of Paper.....	22
Recycled Paper.....	22
Preprinted Paper.....	22
Colored Paper, Black Paper.....	23
Prepunched Paper.....	24
Transparencies.....	24
Label Paper, Pressure-sensitive Paper.....	24
Carbonless Paper.....	25
Envelopes.....	25
Metallic Paper, Pearl Paper.....	25
Synthetic Paper.....	25

Magnet Paper.....	26
3. Appendix	
Paper Weight Conversion Table.....	27
Prepunched Paper That Can Be Used.....	29
INDEX	31

Introduction

This manual explains paper characteristics and methods for handling paper to get favorable print quality and consistent performance from the machine. For more information about paper types, weights, and sizes that are supported by the machine, see the manuals supplied with the machine.

The machine supports regular and coated paper, as well as a variety of other types of paper. However, the characteristics and conditions of certain types of paper may result in low print quality. In addition, the characteristics and conditions of the paper may vary even with the same product. Therefore, we recommend evaluating paper before using the paper with the machine. For details, consult your sales representative or service representative.

1. Characteristics and Conditions of Paper

This chapter describes the characteristics and conditions of paper.

Characteristics of Paper

This section describes how the characteristics of paper affect the quality of printing and the movement of paper in the machine.

Composition of Paper

★ Important

- Do not use acidic paper because it accelerates the deterioration of the photoconductor unit and surrounding parts.

Many types of paper used for printing contain calcium carbonate (CaCO_3) and other natural impurities. Paper whose calcium carbonate ratio is high may reduce the life of machine components such as the OPC drum and fusing unit.

Friction Characteristics

The friction characteristics of paper are important to transfer the paper correctly from the paper tray through the inside of the machine.

If the force of the friction (coefficient of friction) acting on stacked paper is too large or too small, the paper may not be fed correctly through the machine. If coefficients of friction are not uniform, it is possible to feed multiple sheets at one time.

Use printing paper with uniform friction characteristics to print from the machine.

Surface Smoothness

The smoothness of the surface of the paper is important to get high print quality and also stable paper feeds.

If an area has solid printing, it may not be uniform when using paper with a rough surface. On the other hand, the toner may not fuse to the paper properly if the surface of the paper is too smooth. In addition, if paper has a smooth surface, each of the sheets is likely to stick together, and therefore the paper may not feed correctly inside the machine.

Printing on embossed paper may produce irregularities in print quality or deterioration in the ability to fuse toner. However, the machine's print settings may improve print quality. For details about print settings, see the manuals supplied with the machine.

Resistance to Heat

Paper is exposed to high temperatures inside the machine when toner is fused to the paper. Because of this, it is necessary for the paper to maintain the same qualities even when exposed to high temperatures.

Use a paper that does not dissolve, vaporize, change color, or cause set-off printing when exposed to high temperatures during the fusing process. Do not use coated paper that contains components that dissolve or vaporize when exposed to high temperatures. Also, do not use paper that peels off in layers.

Moisture Content


The moisture content of paper affects the condition of the paper and print quality.

If the moisture content ratio is too high, the edge of the paper may warp and become wavy. In addition, the paper may wrinkle during printing and reduce print quality, such as decreasing print density.

Wavy paper

If the humidity is high in the place where the paper is stored, paper that is exposed to air may absorb moisture and the edges may become wavy. The paper may not feed through the machine, or feed at an angle because the heights of the edge and the center part of wavy paper are different. Also, wrinkling, and curling may occur during printing.

Use paper that has a difference of 2 mm (0.08 inches) or less between the top sheet's highest and lowest point when the maximum number of sheets of paper is loaded in the paper.

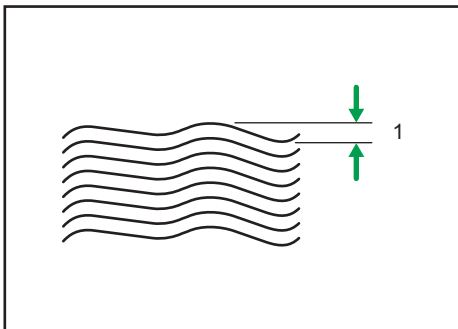


CEL001

1. 2 mm (0.08 inches) or less

Warped paper

If the humidity is low in the place where paper is stored, paper that is exposed to air may lose moisture and the edges may shrink. Paper with wavy edges feeds at an angle and may cause paper jams.

Use paper that has a difference of 6 mm (0.24 inches) or less between the stack's central area and the edge when the maximum number of sheets of paper is loaded in the paper.

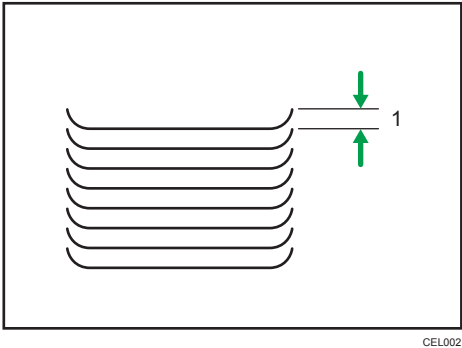

1. 6 mm (0.24 inches) or less

Flexibility of Paper (Stiffness)

If the flexibility of paper is high, then it bends easily. It is also susceptible to moisture content and heat, so paper that has high flexibility may shrink at its edges or curl during printing. In addition, soft paper is likely to twine around the paper rollers or belts, which may cause paper jams.

If the flexibility of paper is low, it is difficult to bend through the paper rollers and the pathways inside the machine and may cause paper jams.

The flexibility of paper differs depending on the direction of the paper's grain. Therefore, paper has different stiffness in the landscape orientation and in the portrait orientation.

Surface Resistivity

Represents the electrical resistance on the paper's surface.

It may affect the quality of printing and the movement of paper in the machine.

For the values for the surface resistivity of paper, see page 7 "Paper Specifications".

Paper Specifications

Use the following tables as a guide when you select paper.

Uncoated paper

Item	Specifications
Ash content (%) ^{*1}	15% or less
Calcium carbonate (CaCO ₃) ratio (%)	15% or less
Cut edge	Height of burrs: 0.05 mm (0.002 inches) or less
Cutting tolerance	Length: ±0.5 mm (0.02 inches) Angle: 90° ± 0.1° ^{*2}
Clark stiffness	40 or more
Bending stiffness	Less than 1800
Smoothness (s)	80 or more
Static friction coefficient	0.35 to 0.67
Moisture content (%)	3.7 to 5.5%
Surface resistivity (Ω)	5×10 ⁹ to 1×10 ¹²

*1 Measured by combustion at 900°C (1652°F)

*2 If you want to improve the image position accuracy, applying "90°±0.02°" is recommended.

Coated paper

Item	Specifications
Ash content (%) ^{*1}	22% or less
Calcium carbonate (CaCO ₃) ratio (%)	20% or less
Cut edge	Height of burrs: 0.05 mm (0.002 inches) or less
Cutting tolerance	Length: ±0.5 mm (0.02 inches) Angle: 90° ± 0.1° ^{*2}
Clark stiffness	40 or more
Bending stiffness	Less than 1800
Air permeability (s)	5000 or less
Static friction coefficient	0.35 to 0.67

Item	Specifications
Moisture content (%)	3.7 to 5.5%
Surface resistivity (Ω)	5×10^9 to 1×10^{12}

1

- *1 Measured by combustion at 900°C (1652°F)
- *2 If you want to improve the image position accuracy, applying "90°±0.02°" is recommended.

Condition of Paper

In addition to the characteristics of paper, the condition of the paper greatly affects the print results.


Rips, Wrinkles, and Folds

Use clean paper in good condition that has no folds, rips, or wrinkles.

Check the condition of the paper before placing it in the paper tray, and remove any sheets that are not in good condition.

Rips, Wrinkles, and Folded Corners

Use paper that has no rips, wrinkles, or folded corners. If sheets of paper have rips, wrinkles or the like, a paper jam in the paper rollers or surrounding mechanisms may occur or paper may be fed at an angle.

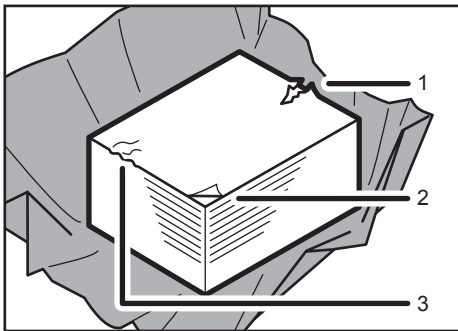


CEL003

1. Rip
2. Folded corner
3. Wrinkles

Rounded Edges

When paper is placed in storage, the edge of the paper on the top or the bottom may become rounded from being stacked. This is called rounded edges. Using paper like this may cause a paper jam inside the machine or to be fed at an angle.

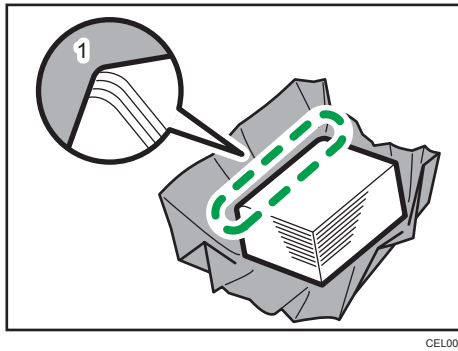

1. Rounded edges

Curls

Curled paper has a major effect on the print quality and end result.

Curled paper can cause such things as paper jams and wrinkles. Also, paper that is output may not stack evenly in the output tray.

If heat is applied to the paper during the printing process, the entire sheet of paper may curl. Be sure to pay special attention to preprinted paper because it is likely to curl. Paper may also partially curl after printing if the moisture content is not evenly distributed.


If the machine you are using has a function to compensate for curled paper, you can specify curl compensation in the machine's settings. Specify the curl compensation settings when paper does not stack evenly in the output tray due to curls. For details about how to configure the curl compensation settings, see the manuals supplied with the machine.

Also, the extent of the curl may vary depending on the printing surface of the paper. If the paper curls after printing, turn over the paper in the paper tray and try again.

How to Measure Curled Paper

You need to measure the extent of the curl of your paper before printing on it.

Use paper that has a maximum curl of not greater than 10 mm (0.39 inches).

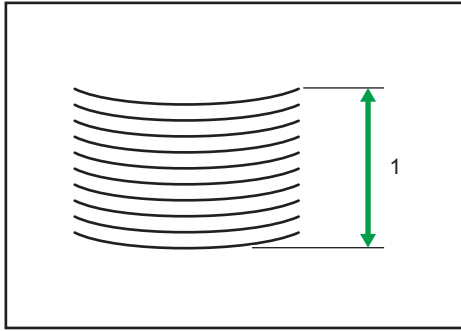

CEL006

1. 10 mm (0.39 inches) or less

1. Print on paper under the following printing conditions:

- One-sided printing
- Print 10 sheets
- Output the paper with the printed side face down

2. Place the curled paper on a table or flat surface with the curl facing up.

3. Measure the height of the tip of the curl at each corner of the stack of paper.

Do this measurement within one minute after printing.


Note

- If the weight of the paper is 221 g/m^2 or more, measure one sheet of paper.

Cut Edge

The condition of the cut edge of the paper affects print performance.

Cut paper is made by stacking many sheets together and cutting them. The cut edge of paper cut with a sharp cutter is straight, but if the cutter is dull, then the cut edge is uneven and has thin protrusions on the edge of the paper. These are called burrs.

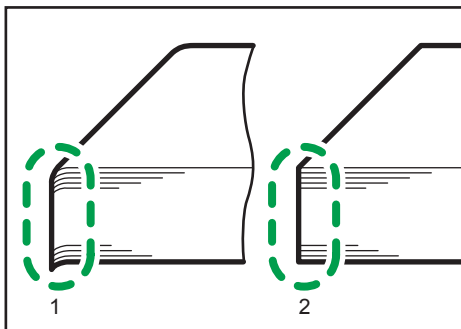

CEL007

1. Cut edge from a dull cutter (burrs)

2. Cut edge from a sharp cutter

Burrs may cause the paper to feed at an angle, feed multiple sheets at one time, or result in misfeeds through the machine. They may also cause paper jams in the machine and shorten the life of the fusing unit.

If a paper jam occurs, turn over the paper in the paper tray. Changing paper orientations will make burrs less likely to occur.

Remove as much of the paper dust particles caused by the burrs as possible. These particles may reduce the print quality.





1

Grain Direction

Paper used for printing is produced with the grain of the paper in one direction. The paper's grain direction affects how paper curls or changes shape, as well as the movement of the paper in the machine.

Paper can be loaded in paper trays regardless of grain direction. If the paper curls or changes shape, or a paper jam occurs, change the direction of grain in relation to the paper feed direction by reloading the paper. This should help resolve the problem.

Tear a sheet of paper to check the direction of the grain. The tear in the paper is straight if it is in the same direction as the paper's grain direction. The tear in the paper is not straight if it is not in the same direction as the paper's grain direction.

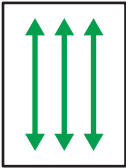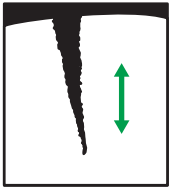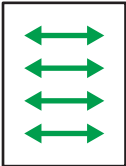Grain direction	Tear in paper
	
	

2. Handling Paper

This chapter describes precautions regarding loading and storing paper, and important points about how to use special types of paper.

Loading Paper


2

★ Important


- For coated paper, label paper, film paper, and plain paper, fan the stack of paper before loading it in the paper tray.

Note the following points for preventing problems related to paper, such as paper feeding at an angle or paper jams.

- Open the package and take out the paper immediately before using it. Do not store the paper in an open package for a long time. The package is moisture proof to prevent the paper from absorbing moisture.
- If you load paper when only a few sheets of paper remain in the tray, multiple sheet feeding may occur. Remove any remaining paper, stack it with the new sheets of paper, and then fan the entire stack before loading it into the tray.
- When loading curled paper, if the top and bottom edges of the paper are curled, load it so they curl down. If the left and right edges of the paper are curled, load it so they curl up.
 - The top and bottom edges of the paper are curled.

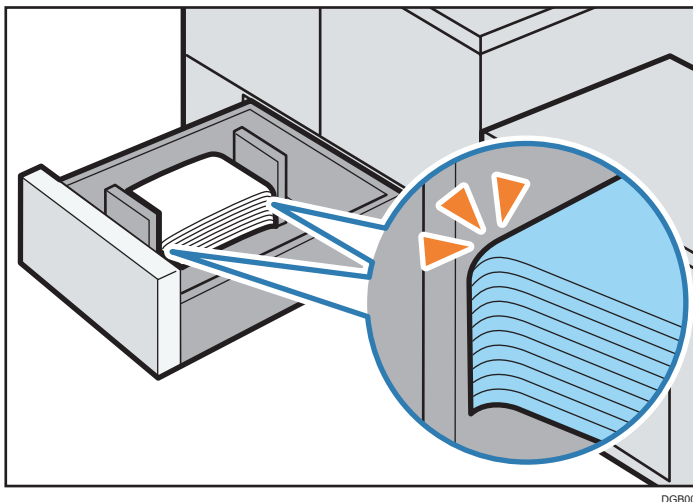

- The left and right edges of the paper are curled.

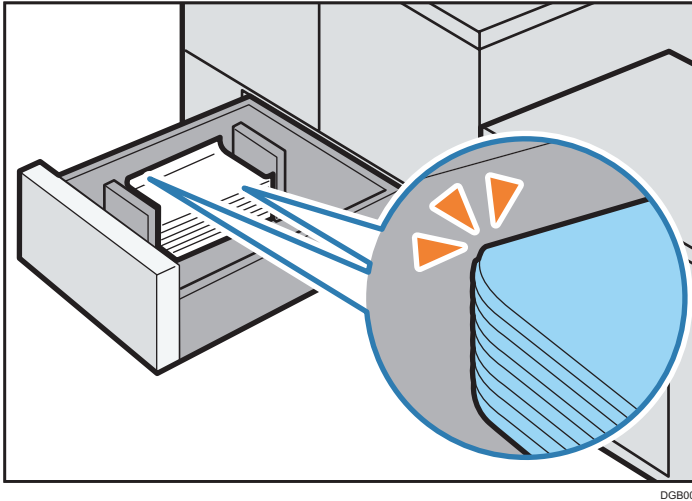


- If printed sheets are curled, turn over the paper that is in the paper tray being used. By doing this, the amount of curl may be reduced.
- The paper in the paper tray may change shape if the air conditioner is turned off for a long period, such as at nighttime or on weekends. Check the condition of the paper in the paper tray before using the machine. If the paper has curled or become wavy, reload it correctly or remove the paper that has changed shape.
- Keep the temperature and humidity of the room in which the machine is located as constant as possible.
- If the machine you are using has a function to compensate for curled paper, you can specify curl compensation in the machine's settings. See the manuals supplied with the machine for details about how to configure this setting. When there is no function to compensate for curled paper, either place the curled side facing down or flatten the curled paper, and then set it in the tray.

Even though the height of paper curls is within the specifications when the paper is loaded in the paper tray, the height of the curled paper exceeds the specification height because of the surrounding airflow while the paper is fed through the machine, and a paper jam may occur.


How to Fan a Stack of Paper

If coefficients of friction are not uniform, multiple sheets are likely to be fed at one time. Fan the stack of paper to equalize the coefficients of friction, and then load it in the paper tray.

Hold the stack of paper in both hands, shuffle the sheets of paper. Otherwise, place the stack of paper on a flat surface, place one hand on the side of the paper and shuffle the other side with your other hand.

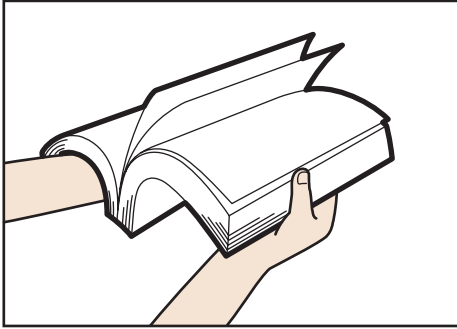

CEL011

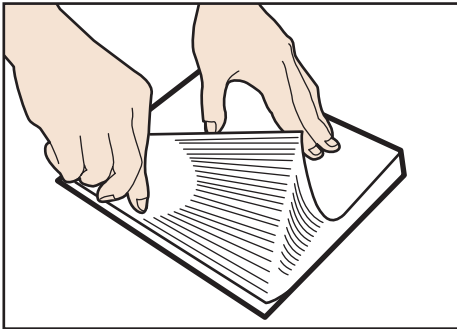

CEL012

Refer to the above methods, and select the easiest method for the type and size of paper that you are loading.

When fanning thin paper, handle it with care so you do not crease it.


Note

- See the manuals supplied with the machine for the procedure to load paper in the paper tray.

How to Hold Paper

When holding a large amount of paper, split it up into stacks of 100 to 200 sheets each.

The stack of paper may become uneven or parts may stick out if you pick up a large amount of paper at one time. Paper that sticks out will be folded when it is placed in the paper tray and may cause paper jams.

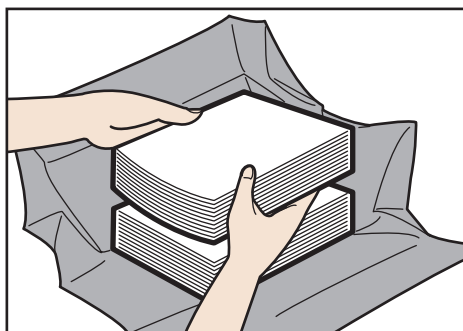


CEL013

How to Place Paper


To load paper into the tray, face the paper directly downward and slowly put it into the paper tray.

Do not put paper into the tray by placing a large amount at one time and sliding it along the side of the tray. Some sheets may fold and cause a paper jam.

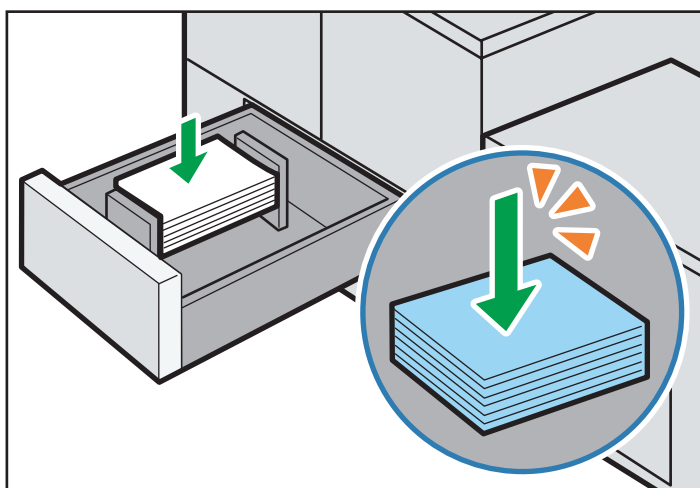

DGB005

After placing the paper in the paper tray, make sure it is loaded correctly. Remove any paper that is torn or folded. Make sure that no paper is sticking out of the stack. If any paper is sticking out, remove it.

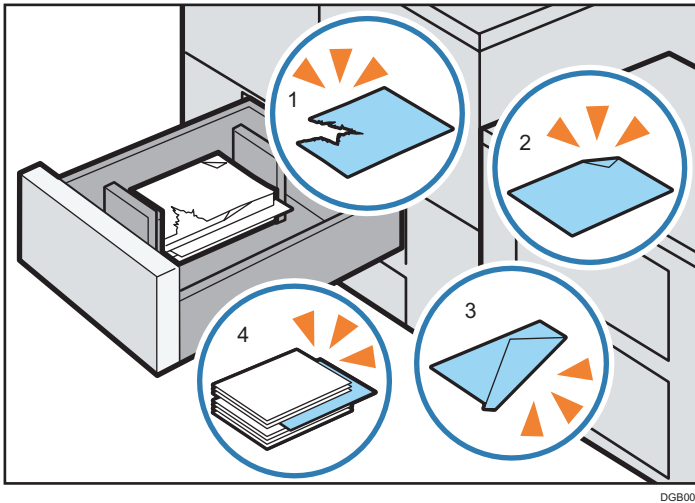

DGB006

1. Rip
2. Folded corner
3. Inside fold
4. Sticking out

Storing Paper

Temperature, humidity, other environmental factors, and the method of paper storage all greatly affect the paper's condition.

The moisture content of paper changes as the temperature changes, causing the paper to curl and become wavy. The changes in the paper's conditions may cause paper jams and wrinkles generated during printing. Pay attention to the following points when storing paper:

- The temperature of the storage area must be between 20 and 25°C (68 and 77°F) and the humidity must be between 30 and 65%.
- If there is a large temperature difference between the storage area and the area near the machine, keep some paper near the machine for a few days before you use it, so it can adjust to the temperature near the machine.
- Once a package of paper is open, seal it completely in a plastic bag or moisture-proof paper to prevent it from absorbing moisture from the air.
- Do not expose the paper to direct sunlight.
- If stacking directions are indicated on paper boxes, stack the boxes according to the directions. Do not stack paper on end, even if it is still in the box.
- Do not place paper on the floor. Keep paper on a surface such as a palette, table, or cabinet in a temperature and humidity controlled room.

Precautions during Transport

Note the following points when transporting paper:

- Use a palette if you are transporting many boxes. Do not throw or hit boxes while transporting them. Stacking many boxes may reduce the condition of the paper in the boxes, either because the shape of the lower boxes may change or the upper boxes may fall and become damaged. Therefore, do not stack boxes higher than necessary.
- If you wrap the paper in paper, use wrapping paper that is strong enough to not rip during transport. We recommend using wrapping paper that is moisture proof.

Using Special Types of Paper

While this machine supports coated and special types of paper, the characteristics and conditions of certain types of paper may result in low print quality.

We recommend evaluating special types of paper before using them in the machine. It is impossible to confirm the consistency of feeding, and the effect on consumable parts and components without long-term testing, but you can determine the basic characteristics, such as print quality and toner adhesion, by printing around 500 sheets.

Before printing on special types of paper, be sure to check the side of the paper that is for printing.

When you perform one-sided printing, check the direction and side of the paper that is for printing in the manuals supplied with the machine, and then correctly load the paper in the paper trays. If the auto duplex function is activated, cancel it so as not to print on the both sides of the paper.

When you print on paper whose characteristics on the front side and back side are different, disable the auto duplex function so as not to print on both sides of the paper. Specify the print settings that are suitable for the characteristics of the front side, and then print on the front side of the paper. After printing on the front side, specify the print settings for the back side of the paper, and then print on the back side.

If you specify print settings that are not suitable for the paper for printing, or if you print on the side that is not for printing, print quality may decrease. In addition, it may dirty the inside of the machine and cause malfunctions.

Note

- The special types of paper that you can use with the machine depend on the machine. For details, see the manuals supplied with the machine.

Recycled Paper

Recycled paper is made from a mixture of new pulp and pulp made from old paper, such as newspapers and magazines. Because of this, the characteristics of recycled paper vary greatly depending on the brand and manufacturer. We recommend evaluating recycled paper before you use it.

Preprinted Paper

If you want to print on preprinted paper on which a frame or company name is printed, consult your sales representative or service representative.

When printing on preprinted paper, note the following:

- Toner may not adhere to preprinted images as well as it does to plain white paper. Check the print quality in advance.

- Before using preprinted paper, check that the ink is completely dry. Also, make sure that the ink does not transfer to the rollers and make the inside of the machine dirty.
- Before using preprinted paper, check that the inside of the machine is not smeared with powder, which is used to prevent ink set-off or blocking.
- The machine does not support preprinted paper on which images and/or text are printed using toner. However, you can use paper preprinted by a machine that uses the same toner.
- To print on paper on which a frame is printed, print in an area 2.5 mm (0.10 inches) or more from the frame.
- If the sheets stick together, fan the stack of sheets, and then load it in the paper tray. For details about how to fan paper, see page 15 "Loading Paper".

Major precautions about ink used for preprinted paper are as follows:

- Use a non-volatile oil based and heat resistant ink for preprinted paper. Do not use ink that melts, vaporizes, dissolves, or delaminates when exposed to heat. For details, see page 6 "Resistance to Heat".
- Use the minimum amount of ink on preprinted paper. Use screen printing to print on large areas.
- Do not use powders, such as corn starch, rosin, or talc, to dry ink on preprinted paper.
- Do not use the following types of ink on preprinted paper:
 - Rapid binding ink
 - Evaporative drying ink
 - Low-temperature fixing ink
 - Precipitation drying ink
 - Penetration drying ink
 - Soy ink

Colored Paper, Black Paper

Colored paper is paper that is treated with colorant throughout.

When printing on colored paper, note the following:


- Depending on the machine you are using, adjustments to the print settings are required. For details about print settings, see the manuals supplied with the machine.
- Due to carbon components in black paper, electrical resistance on the surface of black paper may be low. Therefore, the machine may not print on black paper properly. We recommend evaluating black paper before you use it.
- Some colors of paper cannot be used. For details, contact your sales representative or service representative.

Prepunched Paper

Prepunched paper must be smooth and flat to be used in the machine. Prepunched paper that is warped or torn cannot be used. Before printing on prepunched paper, remove any dust or trimmings that were produced during the punching process.

To print on prepunched paper, print in an area 3 mm (0.12 inches) or more from the edge of the hole.

The holes in the paper must be within the following conditions:

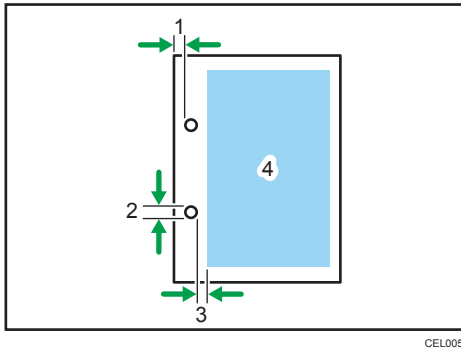

1. 5 mm (0.20 inches) or more
2. 8 mm (0.31 inches) or less
3. 3 mm (0.12 inches) or more
4. Acceptable print area

The conditions for using prepunched paper depend on the machine and its configurations. For some typical conditions for prepunched paper, see page 29 "Prepunched Paper That Can Be Used".

Transparencies

Due to static electricity, sheets may stick together. Fan the stack of sheets before loading it in the paper tray. For details about how to fan paper, see page 15 "Loading Paper".

Depending on the machine you are using, adjustments to the print settings are required. For details about the print settings, see the manuals supplied with the machine.

Label Paper, Pressure-sensitive Paper

Some labels and pressure-sensitive paper have use-by dates. Purchase only as much as you can use within the time limit. Contact your paper retailer regarding use-by dates and storage methods.

Adhesives on label paper or pressure-sensitive paper may dissolve inside the machine and affect print quality. We recommend evaluating label paper and pressure-sensitive paper before you use it.

Carbonless Paper

When using carbonless paper, note the following:

- When using carbonless paper, you can attach only the high capacity stacker between the machine and Finisher SR5050 or Booklet Finisher SR5060.
- Duplex printing cannot be performed.
- Some types of carbonless paper have expiration dates. Purchase the amount you can use within the time limit. Contact your paper retailer regarding the expiration dates and storage methods.

Pro C7200/C7200e/C7200X/C7210/C7210X, Pro C7200S/C7200SL/C7200SX/C7210S/C7210SX

Carbonless paper can be used only when Two-tray Wide LCT is used along with Finisher SR5050 or Booklet Finisher SR5060 for post-processing.

Pro C9200/C9210

Carbonless paper can be used only with Finisher SR5050 or Booklet Finisher SR5060 for post-processing.

Envelopes

The orientation of envelopes when loaded in the paper tray differs depending on the machine you are using and the envelopes for printing. For details, see the manuals supplied with the machine.

Print quality may decrease when printing is performed on seams of the envelope where the paper overlaps.

Metallic Paper, Pearl Paper

The toner may not fuse to the paper properly if the surface of the paper is too smooth. If the electrical resistance on the paper's surface is low, the machine may not print on the paper properly. We recommend evaluating metallic paper and pearl paper before you use it.

Synthetic Paper

Static electricity may cause the sheets of synthetic paper to stick together. Fan the stack of sheets before loading it in the paper tray. For details about how to fan paper, see page 15 "Loading Paper".

If synthetic paper has low heat resistance, it may dissolve inside the machine. We recommend evaluating synthetic paper before you use it.

Magnet Paper

The last several sheets of the magnet paper in the paper tray may not be fed properly because the magnet sheet sticks to the metallic parts of the paper tray. If this is the case, load sheets of magnet paper you want to print in the paper tray by adding 10 sheets or more to them.

3. Appendix

The chapter describes the specifications for prepunched paper and provides a paper weight conversion table.

Paper Weight Conversion Table

The weight of paper is measured as basis weight or ream weight.

Basis weight is the weight of one square meter of a sheet of paper, measured in units of g/m². Ream weight is the weight in pounds of 500 sheets of the paper. The basic size varies depending on the type (grade) of paper.

The basic sizes for each grade are as follow:

- Bond, Ledger: 17" × 22"
- Offset, Text: 25" × 38"
- Cover: 20" × 26"
- Index: 25¹/₂" × 30¹/₂"

Ream weight can be calculated using the following equation:

Ream weight (lb) = basis weight (g/m²) × dimension of paper (m²/sheet) × 500 (sheets)

The following table shows the relationship between basis weight and ream weight:

	Ream weight			
Basis weight (g/m ²)	Bond / Ledger (lb.)	Offset / Text (lb. text)	Cover (lb. cover)	Index (lb. index)
52	14	36	20	29
60	16 *	40 *	22	33
75	20 *	50 *	28	42
90	24 *	60 *	33	50
105	28 *	70 *	39	58
108	29	73	40 *	60
118	31	80 *	44	65
120	32 *	81	45	67
135	36	90	50 *	75

	Ream weight			
Basis weight (g/m ²)	Bond / Ledger (lb.)	Offset / Text (lb. text)	Cover (lb. cover)	Index (lb. index)
148	39	100 *	55	82
162	43	110	60 *	90 *
176	47	120	65 *	97
199	53	135	74	110 *
216	58	146	80 *	120
244	65	165	90 *	135
253	67	171	94	140 *
256	68	173	95	142
270	72	183	100 *	150
297	79	201	110 *	165
307	82	208	114	170 *
325	87	220	120	180 *
351	94	237	130 *	194
398	106	269	147	220 *
405	108	274	150	224


Asterisks (*) indicate the most common weights for that category.

Prepunched Paper That Can Be Used

The following are typical conditions for using prepunched paper in the machine.


Contact your service representative if you want to use prepunched paper not described below.

Europe (2/4 holes) and Northern Europe (4 holes)

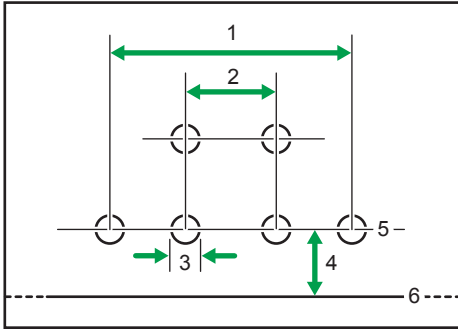

1. Europe: 240 mm (9.45 inches) / Northern Europe: 112 mm (4.41 inches)
2. Europe: 80 mm (3.15 inches) / Northern Europe: 70 mm (2.76 inches)
3. Europe: 6 mm (0.24 inches) / Northern Europe: 6.5 mm (0.26 inches)
4. 12 mm (0.47 inches)
5. Punch hole
6. Paper edge

North America (2/3/7 holes)

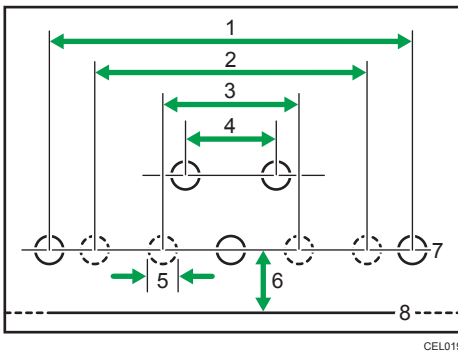

1. 216 mm (8.50 inches)
2. 178 mm (7.01 inches)
3. 108 mm (4.25 inches)
4. 70 mm (2.76 inches)
5. 8 mm (0.31 inches)

6. 2 holes: 12 mm (0.47 inches) / 3 and 7 holes: 9.5 mm (0.37 inches)

7. Punch hole

8. Paper edge

INDEX

B

Basis weight.....	27
Black paper.....	23
Burrs.....	12

C

Calcium carbonate.....	5
Carbonless Paper.....	25
Characteristics of paper.....	5
Coated paper.....	7
Colored paper.....	23
Composition of paper.....	5
Condition of paper.....	10
Curled paper.....	11
Curls.....	11
Cut edge.....	12

E

Envelopes.....	25
----------------	----

F

Fanning paper.....	15
Flexibility of paper.....	7
Folds.....	10
Friction characteristics.....	5

G

Grain.....	13
Grain direction.....	13

H

Heat resistance.....	6
Holding paper.....	17

I

Introduction.....	3
-------------------	---

L

Label paper.....	24
Loading paper.....	15

M

Magnet paper.....	26
Metallic paper.....	25
Moisture content.....	6

P

Paper specifications.....	7
Paper weight conversion table.....	27
Pearl paper.....	25
Placing paper.....	18
Precautions during transport.....	21
Preprinted paper.....	22
Prepunched paper.....	24, 29
Pressure-sensitive paper.....	24

R

Ream weight.....	27
Recycled paper.....	22
Resistance to heat.....	6
Rips.....	10
Rounded edges.....	10

S

Special paper.....	22
Specifications.....	7
Stiffness.....	7
Storing paper.....	20
Surface resistivity.....	7
Surface smoothness.....	5
Synthetic paper.....	25

T

Transparencies.....	24
Transporting paper.....	21

U

Uncoated paper.....	7
---------------------	---

W

Warped paper.....	6
Wavy paper.....	6
Wrinkles.....	10

MEMO

