


RICOH

Precautions when cleaning

To clean the top cover and the area around the top cover, moisten a cloth with water or cleaning liquid and wring it firmly for wiping. Unless you can remove the dirt, wipe the machine with a cleaning alcohol (ethanol).

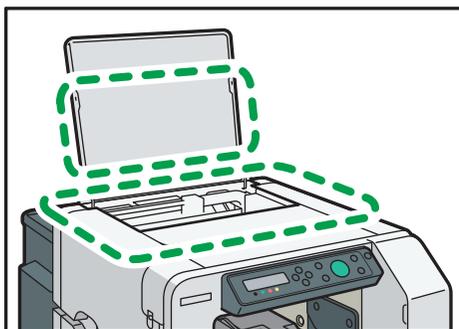

DSA075

© 2017 Ricoh Co., Ltd.

Printed in China

EN (GB) EN (US) EN (AU) J089-6611



J0896611