



Quick Guide

This guide describes the basic printing procedures using the printer and this machine. In the next pages, the procedures for each step and particular cautions are explained. For safe and correct use, be sure to read Safety Information before using the machine.

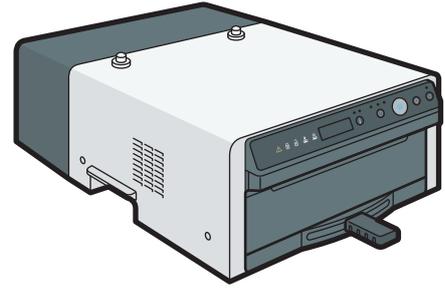


DSA121

Guide to Components of the Finisher

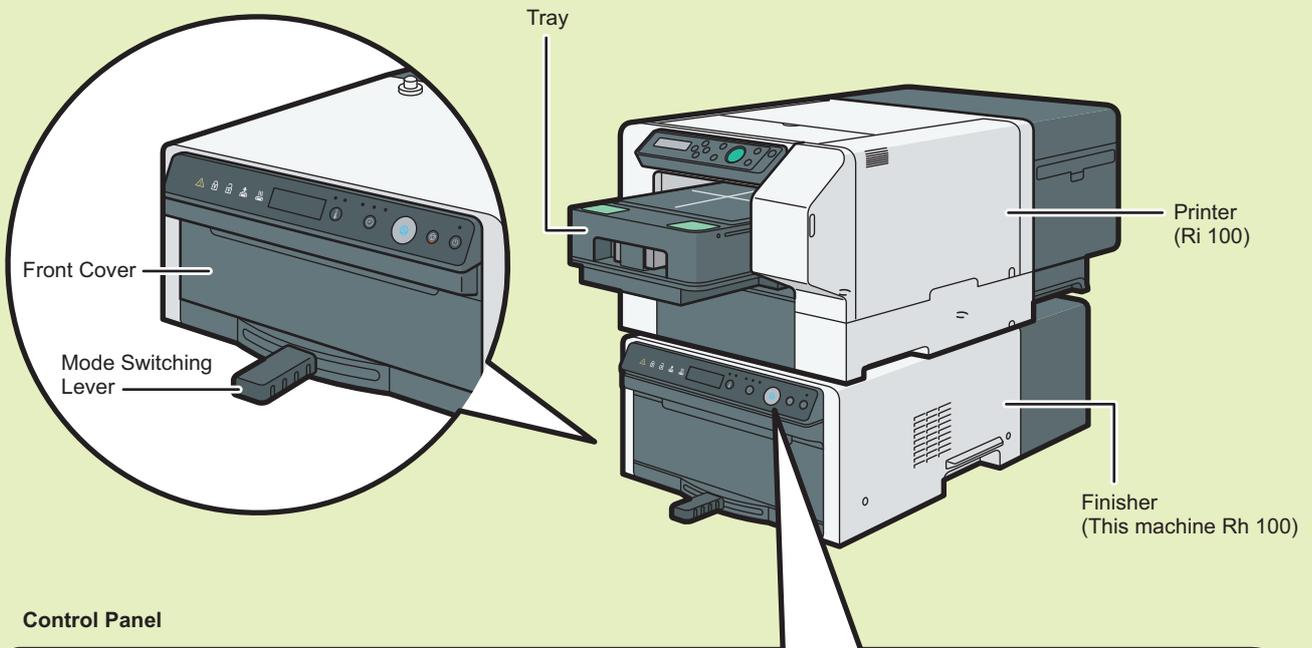

Control Panel

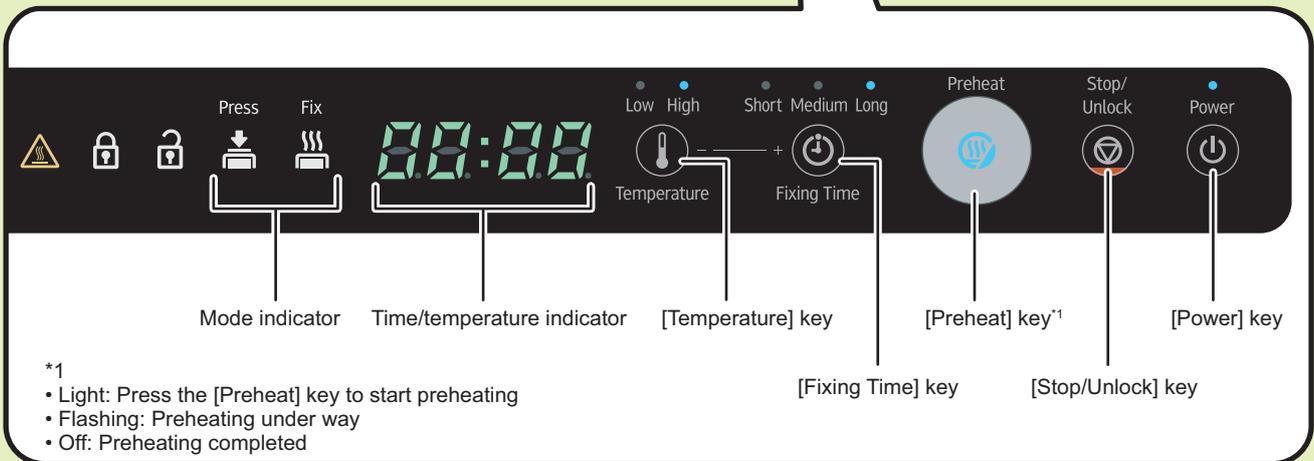

DYX302

1

Loading the fabric in the tray

For details, refer to User's Guide provided with the printer Ri 100.

You can shorten the processing time by putting a garment in the tray while preheating the finisher.

2

Smoothing wrinkles/flattening fibers (Press)



Power

Press the [Power] key to turn on the power.



2

Make sure the mode switching lever is set in the center.



Low High

Temperature


Set the temperature of the heater.
Set the temperature according to the fabric on which you are printing. The default setting is "High".



4


Preheat

When the [Preheat] key is lit, press the [Preheat] key to start preheating.
When the [Preheat] key is unlit, no operation is necessary because preheating is completed.

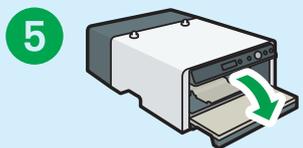


5

Press the [Stop/Unlock] key for 1 second or more to open the cover. When set to the professional mode, it is not necessary to hold down the [Stop/Unlock] key.

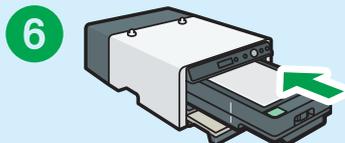

6

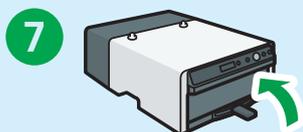

7



8

When you move the mode switching lever to the left, processing starts. An alarm sounds after preheating is completed.




9




10

Confirm that the mode indicator light is off.

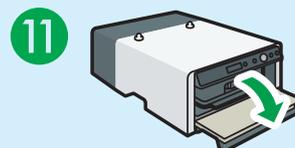


11

Press the [Stop/Unlock] key for 1 second or more to open the cover. When set to the professional mode, it is not necessary to hold down the [Stop/Unlock] key.

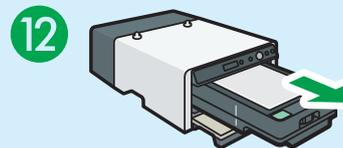

12

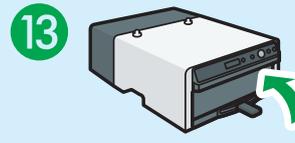

13

3 Printing

For details, refer to User's Guide provided with the printer Ri 100.

4 Fixing ink (Fix)



1 Make sure the mode switching lever is set in the center.




2 Set the temperature of the heater. Set the temperature according to the fabric on which you are printing. The default setting is "High".





3 Set the amount of time that the heater is on. Set the time according to the fabric on which you are printing. The default setting is "Medium".



4 When the [Preheat] key is lit, press the [Preheat] key to start preheating. When the [Preheat] key is unlit, no operation is necessary because preheating is completed.

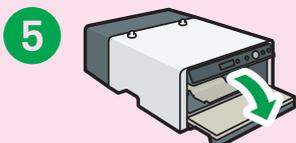

5 Press the [Stop/Unlock] key for 1 second or more to open the cover. When set to the professional mode, it is not necessary to hold down the [Stop/Unlock] key.

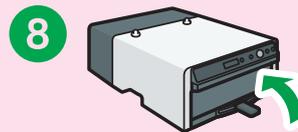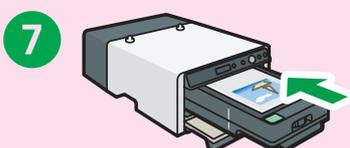




8 When you move the mode switching lever to the right, processing starts. An alarm sounds after preheating is completed.



9 When you move the mode switching lever to the right, processing starts. An alarm sounds after preheating is completed.

10

11 Confirm that the mode indicator light is off.

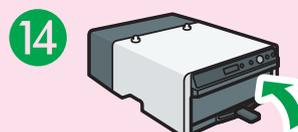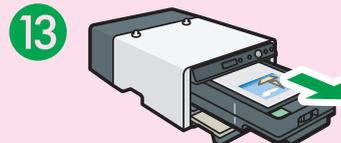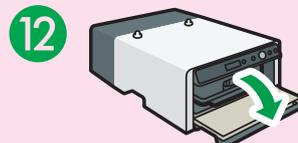

12 Press the [Stop/Unlock] key for 1 second or more to open the cover. When set to the professional mode, it is not necessary to hold down the [Stop/Unlock] key.

13

14

Basic Usage of the Finisher

⚠ CAUTION:

- A parent or guardian must be present if infants, children, or people who need assistance use the machine, and they should be very careful when using it. Otherwise, injury or burns may result.

The finisher has “Standard mode” and “Professional mode”.

◆ Standard mode

The factory-default setting is standard mode. The finisher has the following functions to prevent children from touching the inside of the finisher accidentally when it is very hot.

- When the inside of the finisher exceeds 70 °C (158 °F), the front cover locks. To open the front cover, press the [Stop/ Unlock] key for at least 1 second.

◆ Professional mode


To use this mode, switch from standard mode.

As this mode is for users who are accustomed to using the finisher, the front cover does not lock even when the temperature of the inside of the finisher exceeds 70 °C (158 °F).

However, during press processing and fixing processing, the front cover locks regardless of whatever mode is used to prevent erroneous operations.


◆ How to Switch Between Standard Mode and Professional Mode

Press the [Temperature] key and [Fixing Time] key simultaneously for at least 2 seconds.

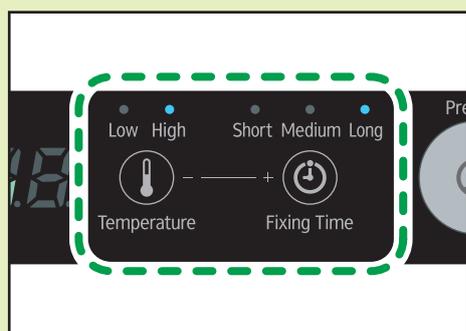

◆ Unlock Cover

When set to standard mode, press the [Stop/ Unlock] key for at least 1 second.

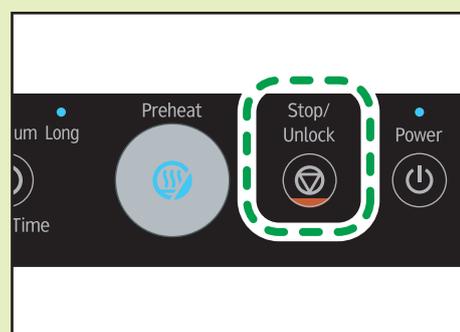

When set to the professional mode, it is not necessary to hold down the [Stop/Unlock] key.