

## Notes for Users

This supplement provides notes and corrections for the manuals provided with this machine.

User Guide > 4. Using the Copier Function > Specifying the Scan Settings > Adjusting Image Density

Error	Correction
You can change the machine's default [ADS Background] in [Copier Features] to always make copies with a specific density level. For details, see page nnn "Copier Features". ("n" indicates a number)	This correction does not apply to this machine.

User Guide > 7. Machine Setup Menus > Copier Features > Copier Features Menu

Error	Correction
ADS Background Specify the density level of auto image density. Use auto image density to copy a document with its background image density automatically reduced.	ADS Background Specify the density level of auto image density. The machine automatically adjusts the image density by scanning the densities of originals. Dark texture originals (such as newspaper or recycled paper) will be copied so that background will not be reproduced.

User Guide > 7. Machine Setup Menus > User Code

Error	Correction
<ul style="list-style-type: none"><li>Simple Authentication is applied to print jobs with user code data. Only print jobs with authenticated user codes and print jobs without user codes can be printed.</li></ul>	<ul style="list-style-type: none"><li>Simple PCL driver: Authentication is applied to print jobs with user code data. Only print jobs with authenticated user codes and print jobs without user codes can be printed.  RPCS driver: If "Simple" is selected, authentication is applied in the same way as "Entire". It is recommended to select "Entire".</li></ul>

Error	Correction
However, you can print in black-and-white as long as there is K (black) ink in the print cartridge. To resume printing, press the [FormFeed], and then the [OK] key. If you continue this type of printing, the amount of ink consumed for the next print cartridge replacement will be greater than usual.	This function is not available with this machine.