

# Notes for Users

Please note the following corrections to this manual:

## Operating Instructions errors

### Relevant pages

SG 3110DN/SG 3110DNw Safety Information : ENERGY STAR Program

### Corrections

Correct

The following Energy Saver mode is available on this machine. The machine recovers from Energy Saver mode when it receives a print job, or when any key is pressed.

#### Energy Saver mode

This machine automatically enters Energy Saver mode 5 minutes after the last operation is completed. For more information about how to configure Energy Saver mode, see "Using the [System] Menu", User Guide as a HTML file on the CD-ROM.

#### Specifications

Energy Saver mode	Power Consumption	SG 3110DN: 0.73 W SG 3110DNw: 2.5 W
	Default Interval	5 minutes
	Recovery Time	2 seconds or less

Wrong

#### Low-power Mode (Energy Saver mode)

This printer automatically lowers its power consumption 60 minutes after the last operation has been completed. To exit Low-power (Energy Saver) mode, press any key on the control panel. For more information about how to configure Energy Saver mode, see "Using the [System] Menu", User Guide as a HTML file on the CD-ROM.

#### Specifications

Energy Saver mode	Power Consumption	SG 3110DN: 0.73 W or less SG 3110DNw: 2.5 W or less
	Default Interval	5 minutes
	Recovery Time	2 seconds or less

© 2012

Printed in China

EN  J028-6620



J0286620