

Model CV-P1a/CV-P1b (M009/M000) PARTS CATALOG

Model CV-P1a/CV-P1b (M009/M000)

PARTS CATALOG

This catalog gives the numbers and names of parts on this machine.

Model CV-P1a/CV-P1b	(M009/M000)
Paper Feed Unit TK1070	(M347)

Model CV-P1a/CV-P1b
(M009/M000)

Model CV-P1a/CV-P1b (M009/M000)

 
PARTS CATALOG

This catalog gives the numbers and names of parts on this machine.

1.Exterior 1 (M009/M000)	2
2.Exterior 2 (M009/M000)	4
3.Exterior 3 (M009/M000)	6
4.Exterior 4 (M009/M000)	8
5.Exterior 5 (M009/M000)	10
6.Frame Section 1 (M009/M000)	12
7.Frame Section 2 (M009/M000)	14
8.Drive Section (M009/M000)	16
9.Paper Exit Section (M009/M000)	18
10.Fusing Unit (M009/M000)	20
11.Duplex Unit (M009/M000)	22
12.Cassette Unit (M009/M000)	24
Parts Index	28

February ,29 ' 2008

1.Exterior 1 (M009/M000)

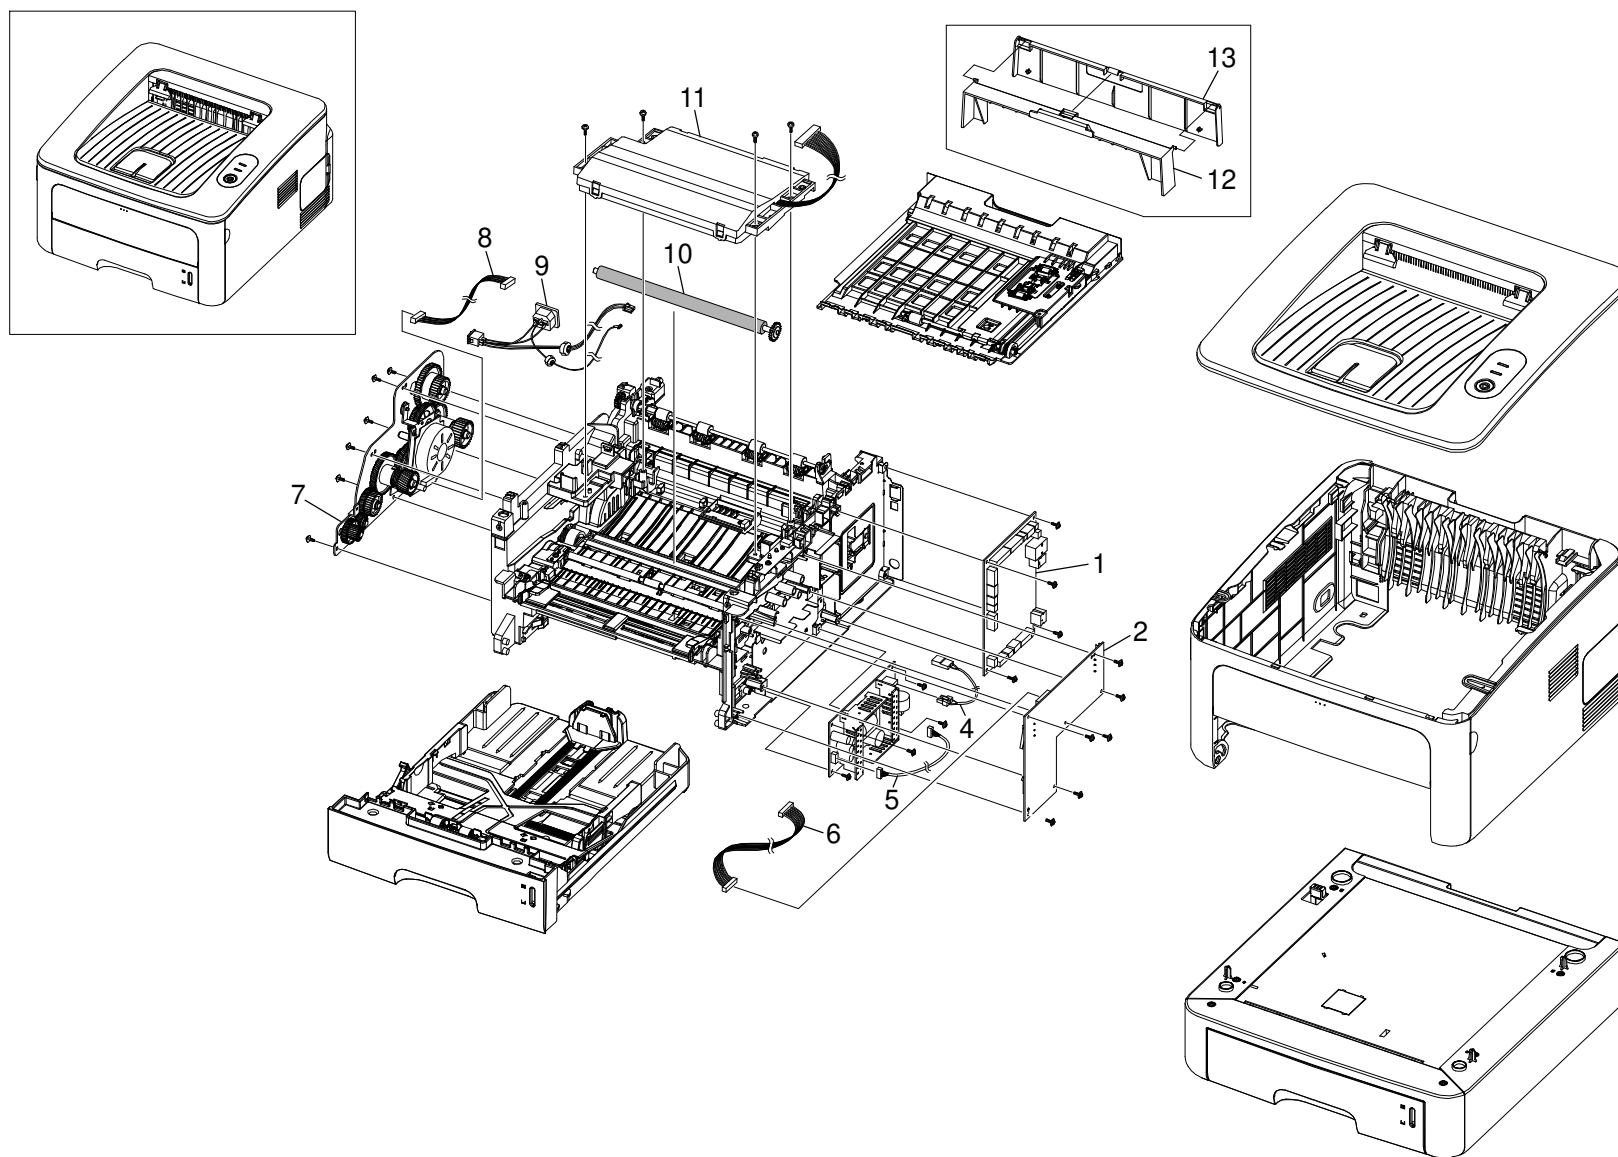


1.Exterior 1 (M009/M000)

Index No.	Part No.	Description	Q'ty Per Assembly
1	M000 1194	Main Board	1
1	M009 1001	Main Board	1
2	M000 1035	Power Pack	1
3	M000 1034	Power Supply Unit	1
3	M000 1502	Power Supply Unit	1
4	M000 1029	Harness:Fuser AC	1
5	M000 1033	Harness	1
6	M000 1031	Harness:Power Pack	1
7	M000 1170	Drive Unit	1
8	M000 1030	Harness:Motor/SOL	1
9	M000 1028	Harness:AC Inlet	1
10	M000 1115	Transfer Roller	1
11	M000 1172	Writing Unit	1
12	M000 1189	Cover - Duplex	1
13	M000 1190	Cover - Rear - Duplex	1

Index No.	Part No.	Description	Q'ty Per Assembly

 2.Exterior 2 (M009/M000)

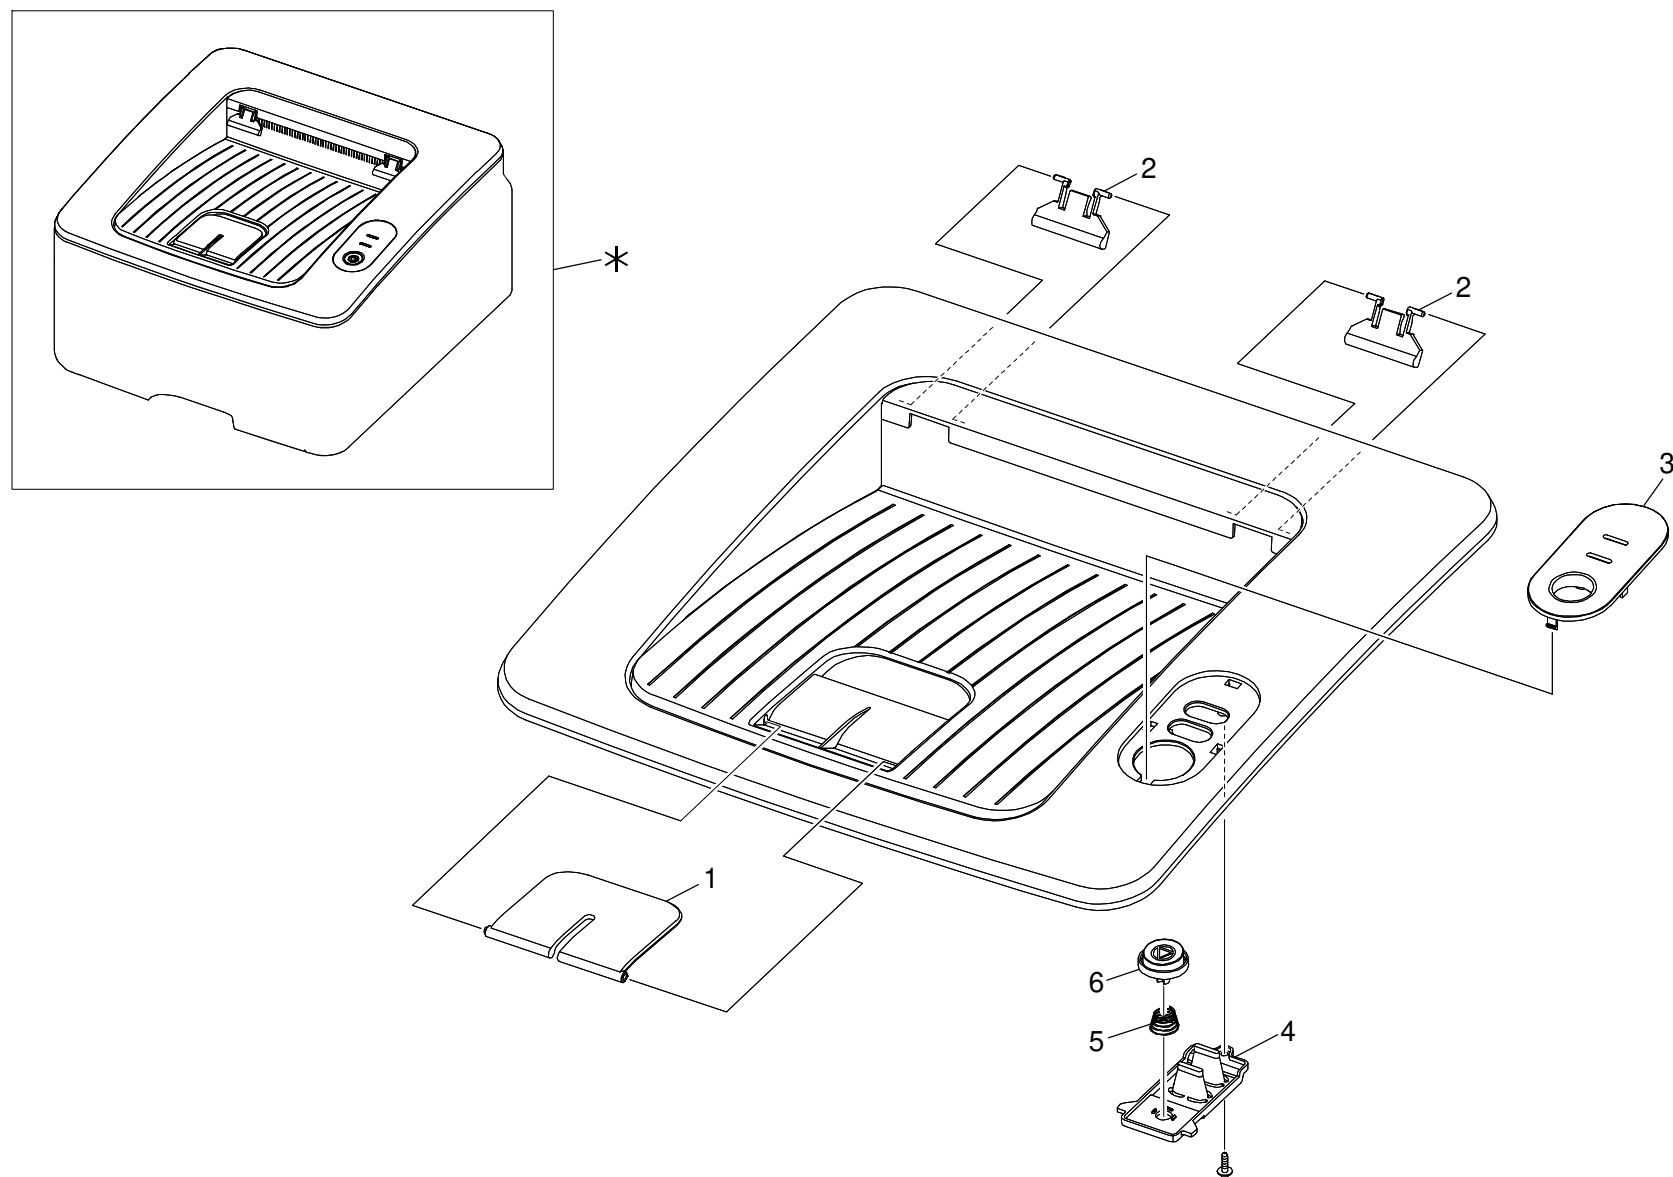


2.Exterior 2 (M009/M000)

Index No.	Part No.	Description	Q'ty Per Assembly
*	M000 1197	MEA Unit-Cover_Top	1
1	M000 1056	Stacker-RX	1
2	M000 1165	Sub Stacker	2
3	M000 1203	Sheet-Overlay	1
4	M000 1158	Lens Led	1
5	G144 9653	OP- Spring	1
6	M000 1105	Key:On_line	1

Index No.	Part No.	Description	Q'ty Per Assembly

 3.Exterior 3 (M009/M000)

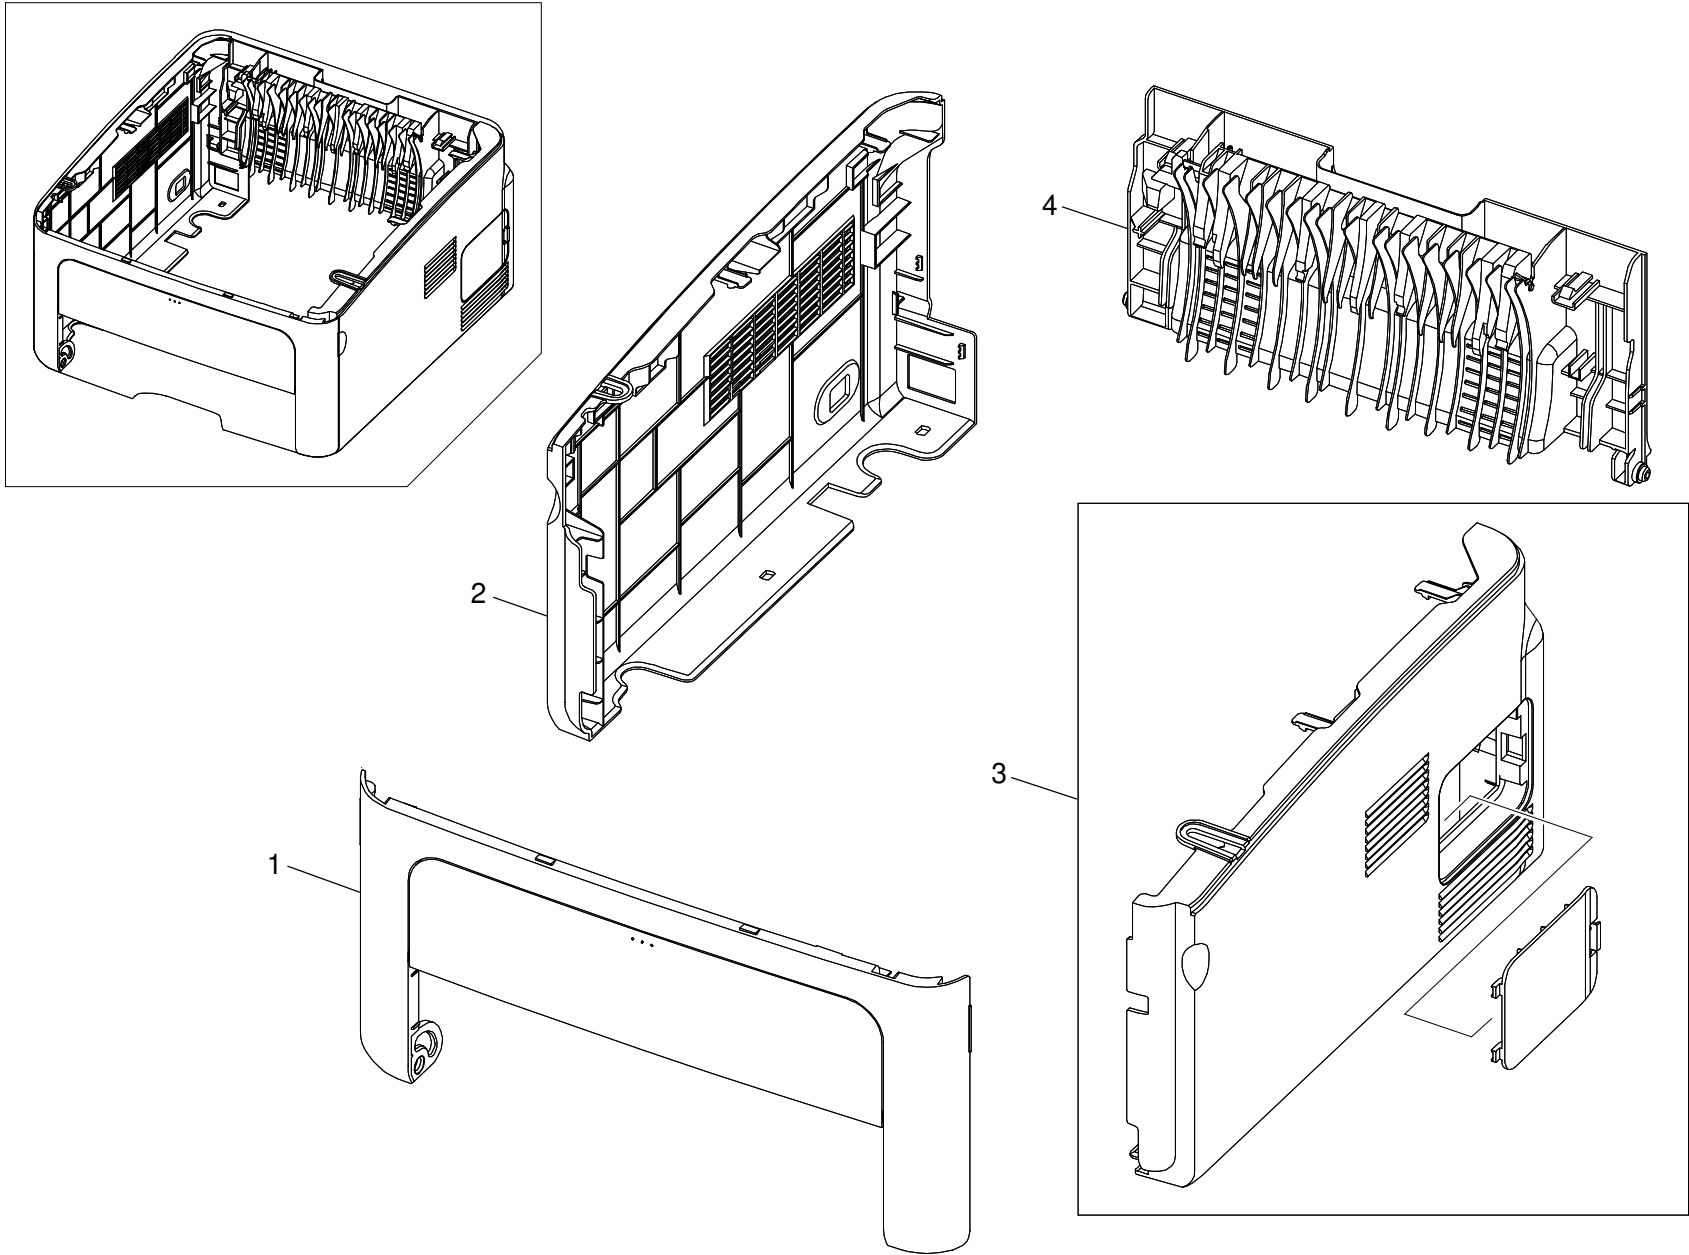


3.Exterior 3 (M009/M000)

Index No.	Part No.	Description	Q'ty Per Assembly
1	M000 1201	MEA Unit-Cover_Front	1
2	M000 1198	MEA Unit-Cover_Left	1
3	M000 1199	MEA Unit-Cover_Right	1
3	M009 1003	MEA Unit-Cover_Right	1
4	M000 1200	MEA Unit-Cover_Rear	1



Index No.	Part No.	Description	Q'ty Per Assembly

 4.Exterior 4 (M009/M000)

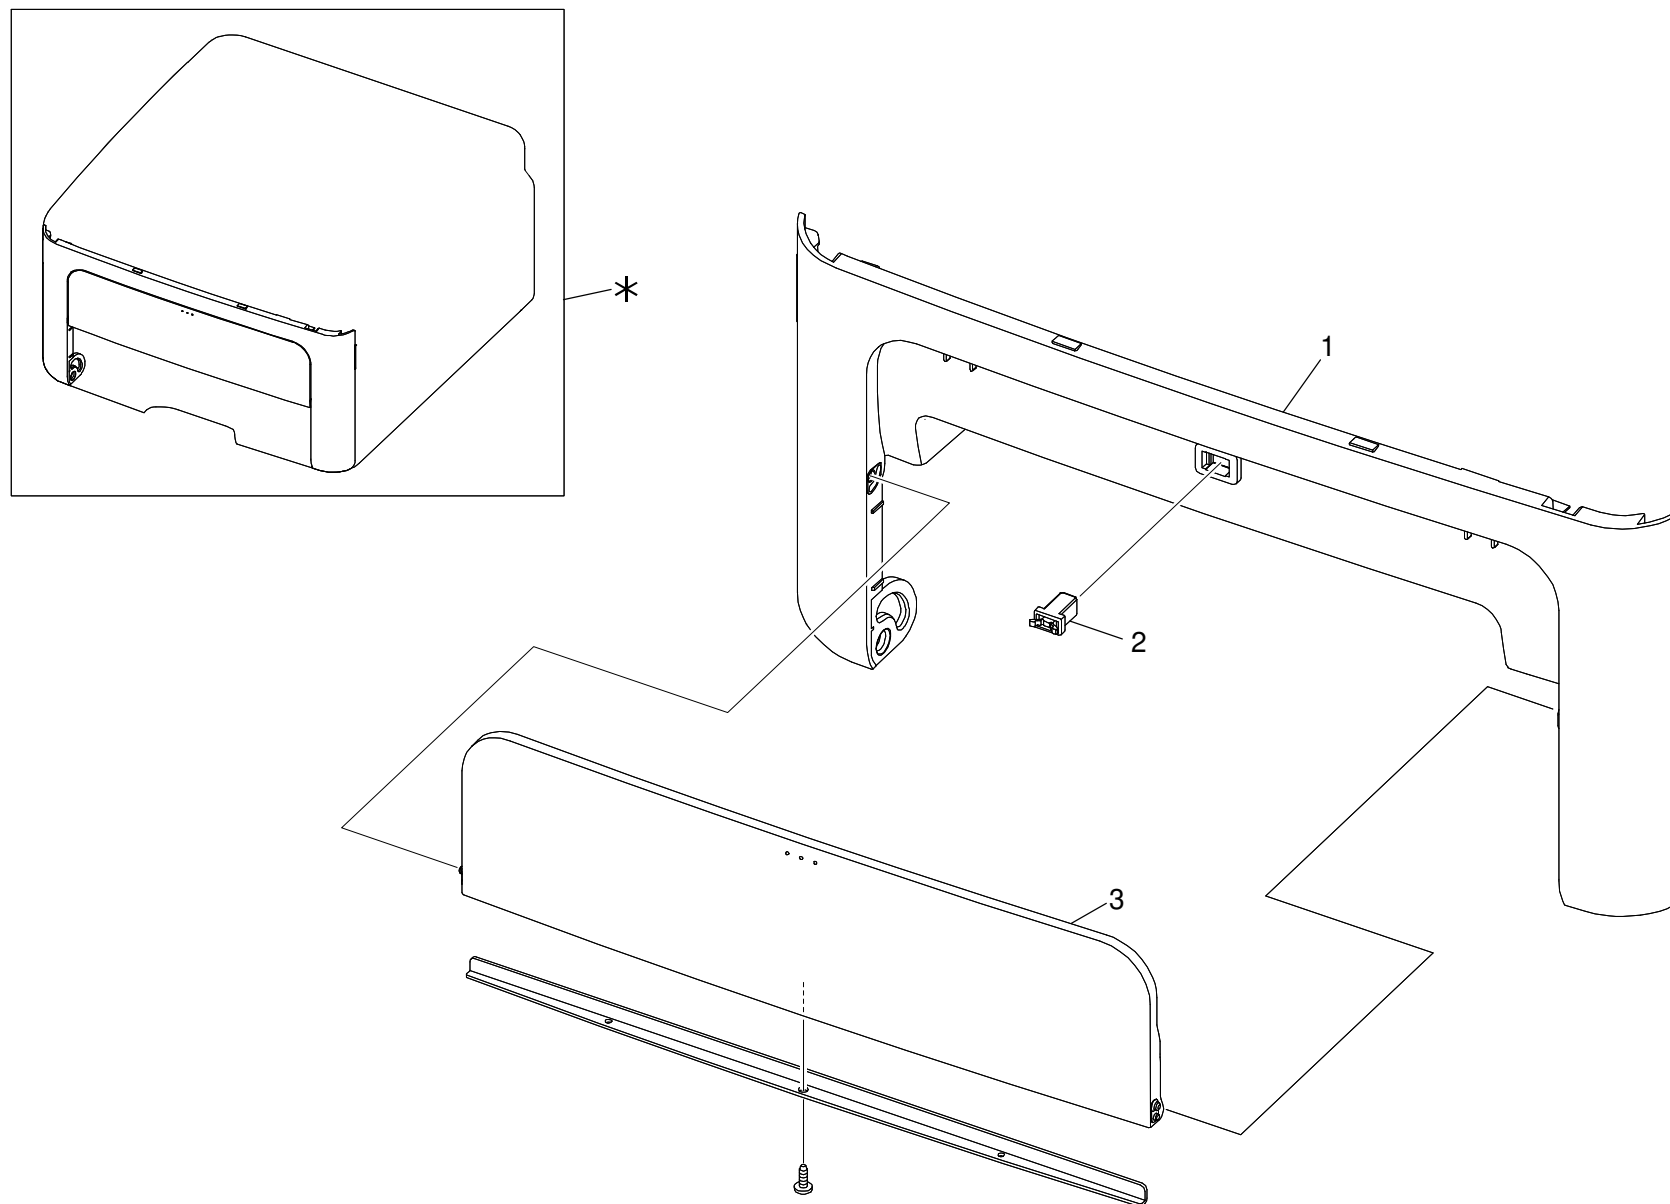

9

  
5.Exterior 5 (M009/M000)

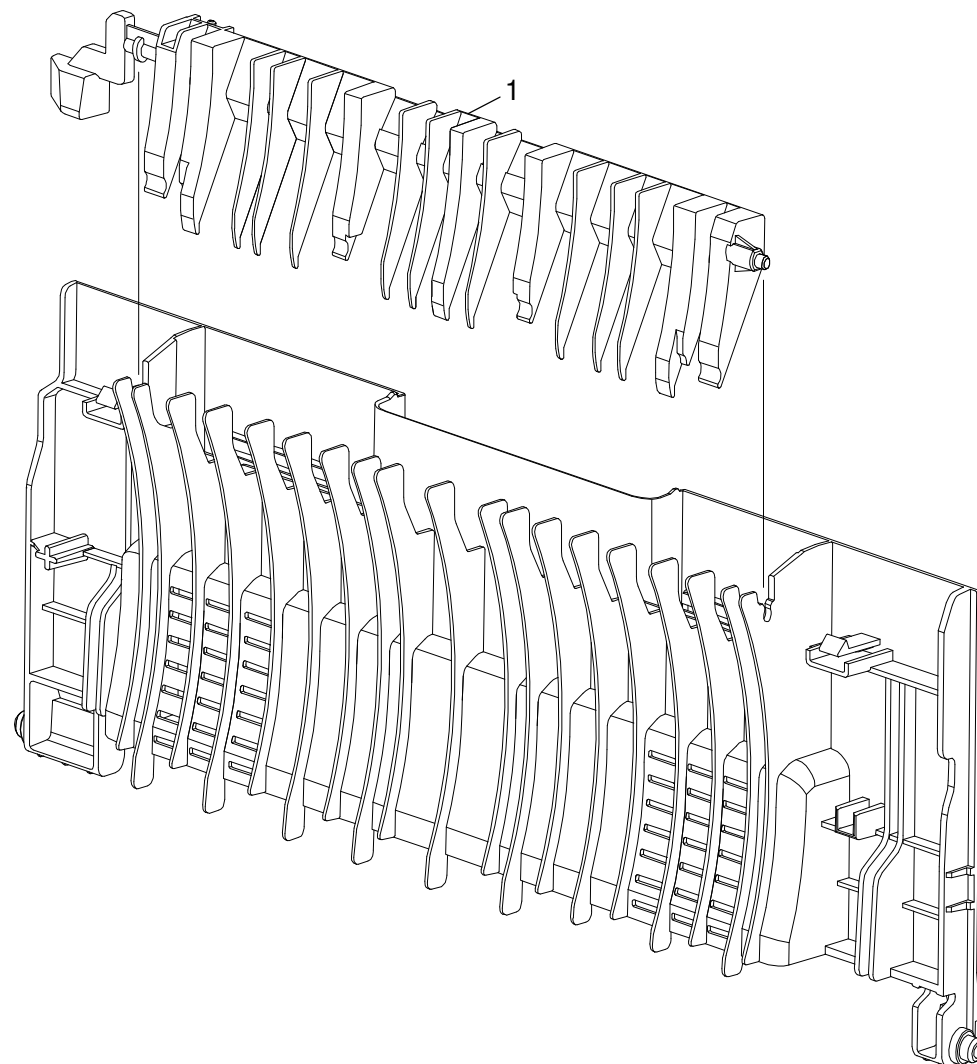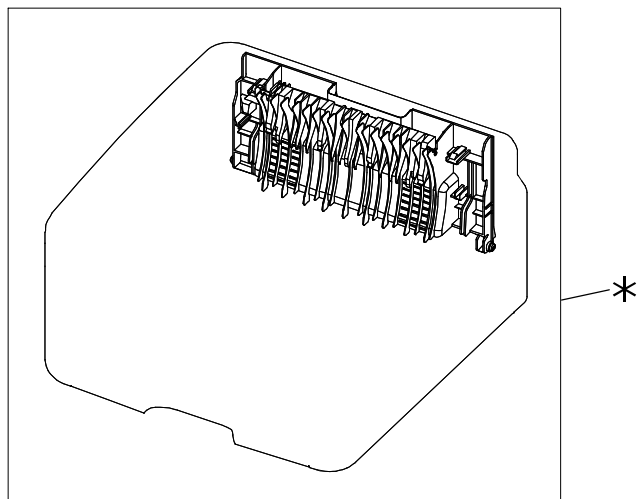

Index No.	Part No.	Description	Q'ty Per Assembly
*	M000 1200	MEA Unit-Cover_Rear	1
1	M000 1081	Guide-Change_DUP	1

Index No.	Part No.	Description	Q'ty Per Assembly

 6.Frame Section 1 (M009/M000)

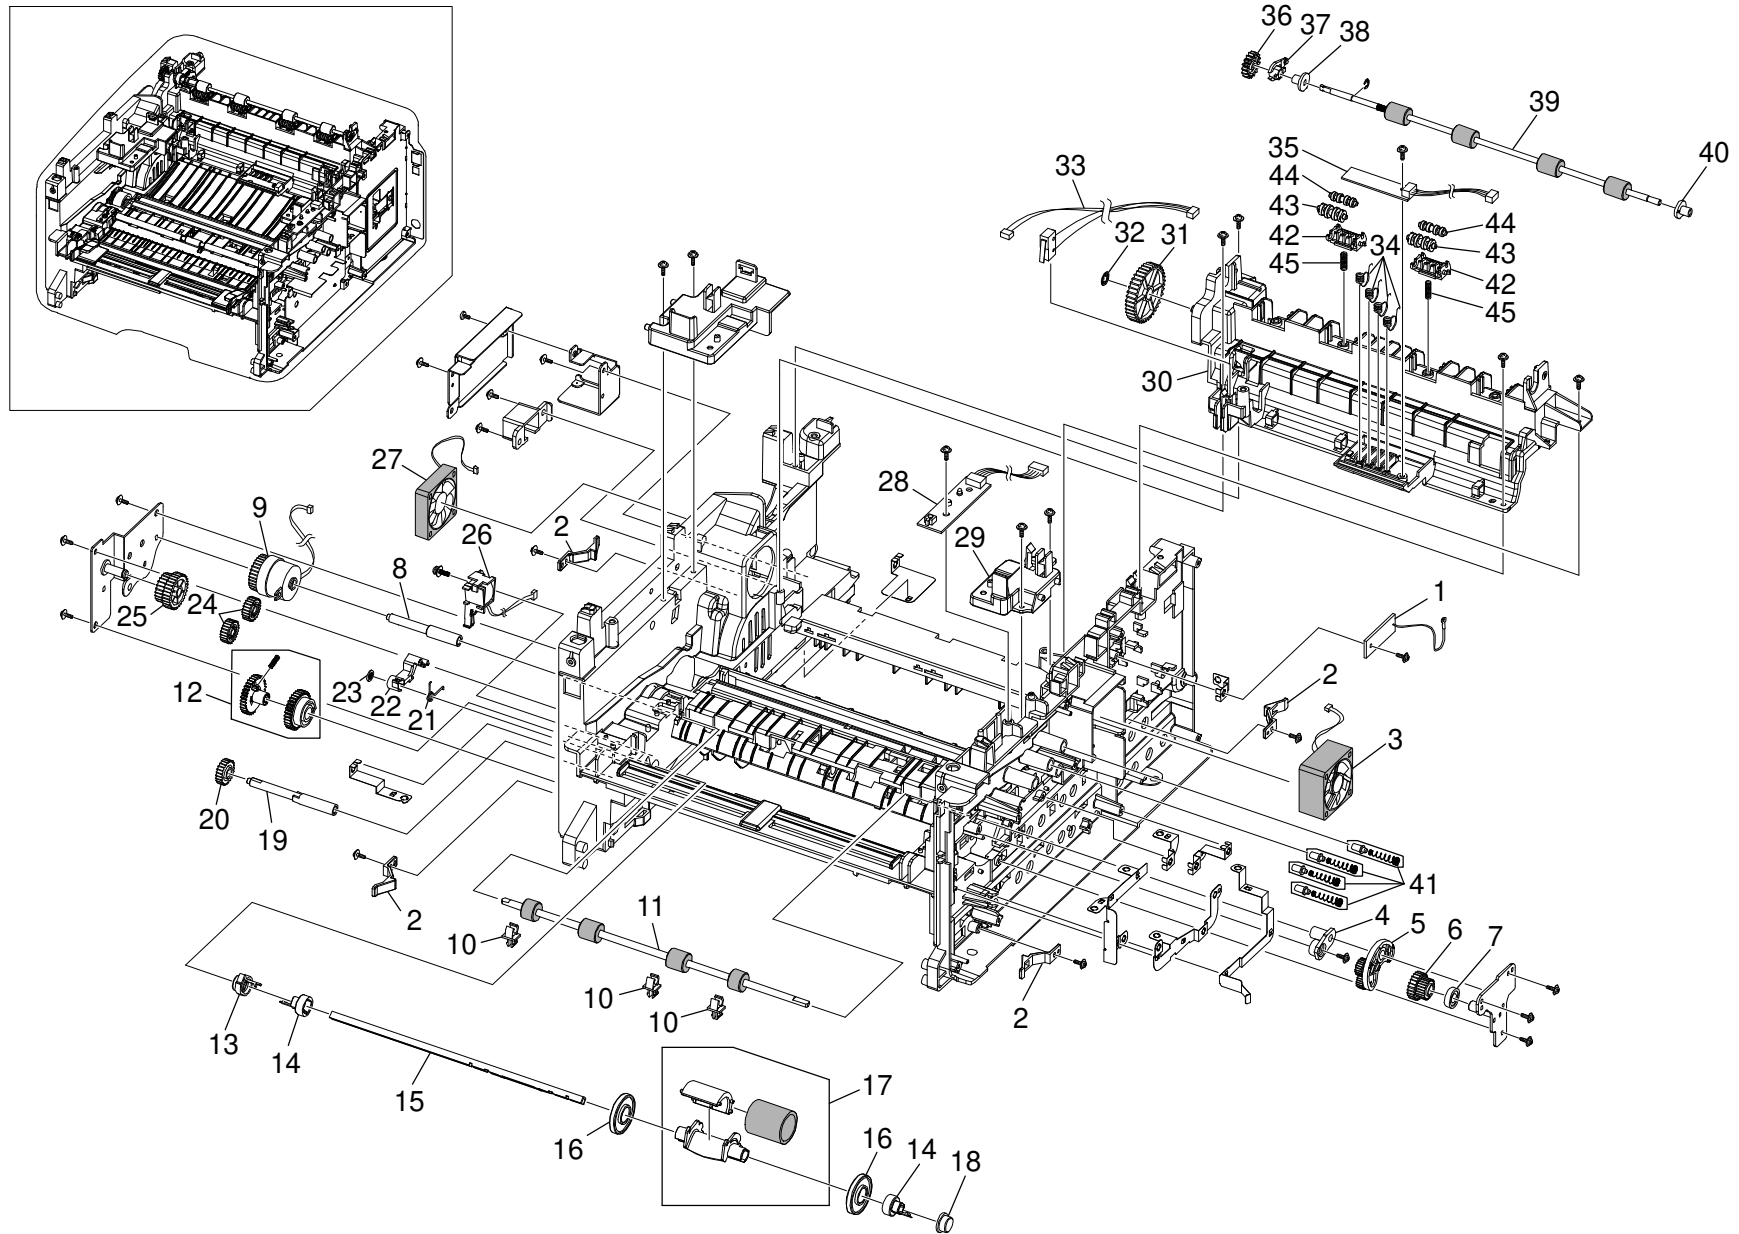


6.Frame Section 1 (M009/M000)

Index No.	Part No.	Description	Q'ty Per Assembly
1	M000 1168	PCB:Main-Zener	1
2	G960 1141	Lock Plate	4
3	M000 1025	Fan:DC	1
4	M000 1059	Holder-REGI	1
5	M000 1171	MEA Unit Swing	1
6	M000 1140	Gear:Duplex	1
7	M000 1052	Collar Swing	1
8	M000 1142	Shaft-Feed REGI	1
9	M000 1153	Magnetic Clutch	1
10	G186 1183	Bushing	3
11	M000 1143	Roller-Feed REGI	1
12	M000 1179	MEA Unit-Gear Pick Up	1
13	M000 1154	Cam-Pick Up	1
14	G960 1140	Idler - Pick-up	2
15	M000 1150	Shaft-P-Pick_up	1
16	G960 1070	Stopper - Pick-up RO	2
17	M000 1177	Pick-up Roller	1
18	G960 1059	Bushing - Pickup Roller	1
19	M000 1145	Shaft-Feed	1
20	M000 1130	Gear:Feed_Drive	1
21	M000 1017	Spring	1
22	G960 1099	Cam - Pick-up	1
23	M000 1012	Ring-CS;ID3,OD3,T0.25,Black,SU	1
24	M000 1155	Gear:Exit:Z17	2
25	M000 1126	Gear:Feed	1
26	M000 1027	Solenoi:Pick-up	1
27	M000 1025	Fan:DC	1
28	G144 9674	OP - Board	1
29	M000 1075	Frame-LSU-Holder-R	1
30	M000 1073	Frame-Exit_High	1
31	M000 1113	Gear-M-Fuser Idle 1	1
32	M000 1013	Ring-CS	1
33	M000 1032	Harness:LSU_SW/Fan	1
34	G960 1096	Terminal	4
35	G960 1161	Terminal Board	1

Index No.	Part No.	Description	Q'ty Per Assembly
36	G960 1126	Gear - Exit Roller	1
37	G186 1141	Exit Roller Bushing	2
38	M000 1071	Support-Roller	1
39	M000 1147	Roller:Exit F/Down	1
40	M000 1037	Bush	1
41	M000 1600	Unit - Terminal	4
42	M000 1041	Holder - M - Exit	2
43	M000 1111	Roller - Exit Main	2
44	M000 1112	Roller - Exit FR	2
45	M000 1115	Spring CS	2

 7.Frame Section 2 (M009/M000)

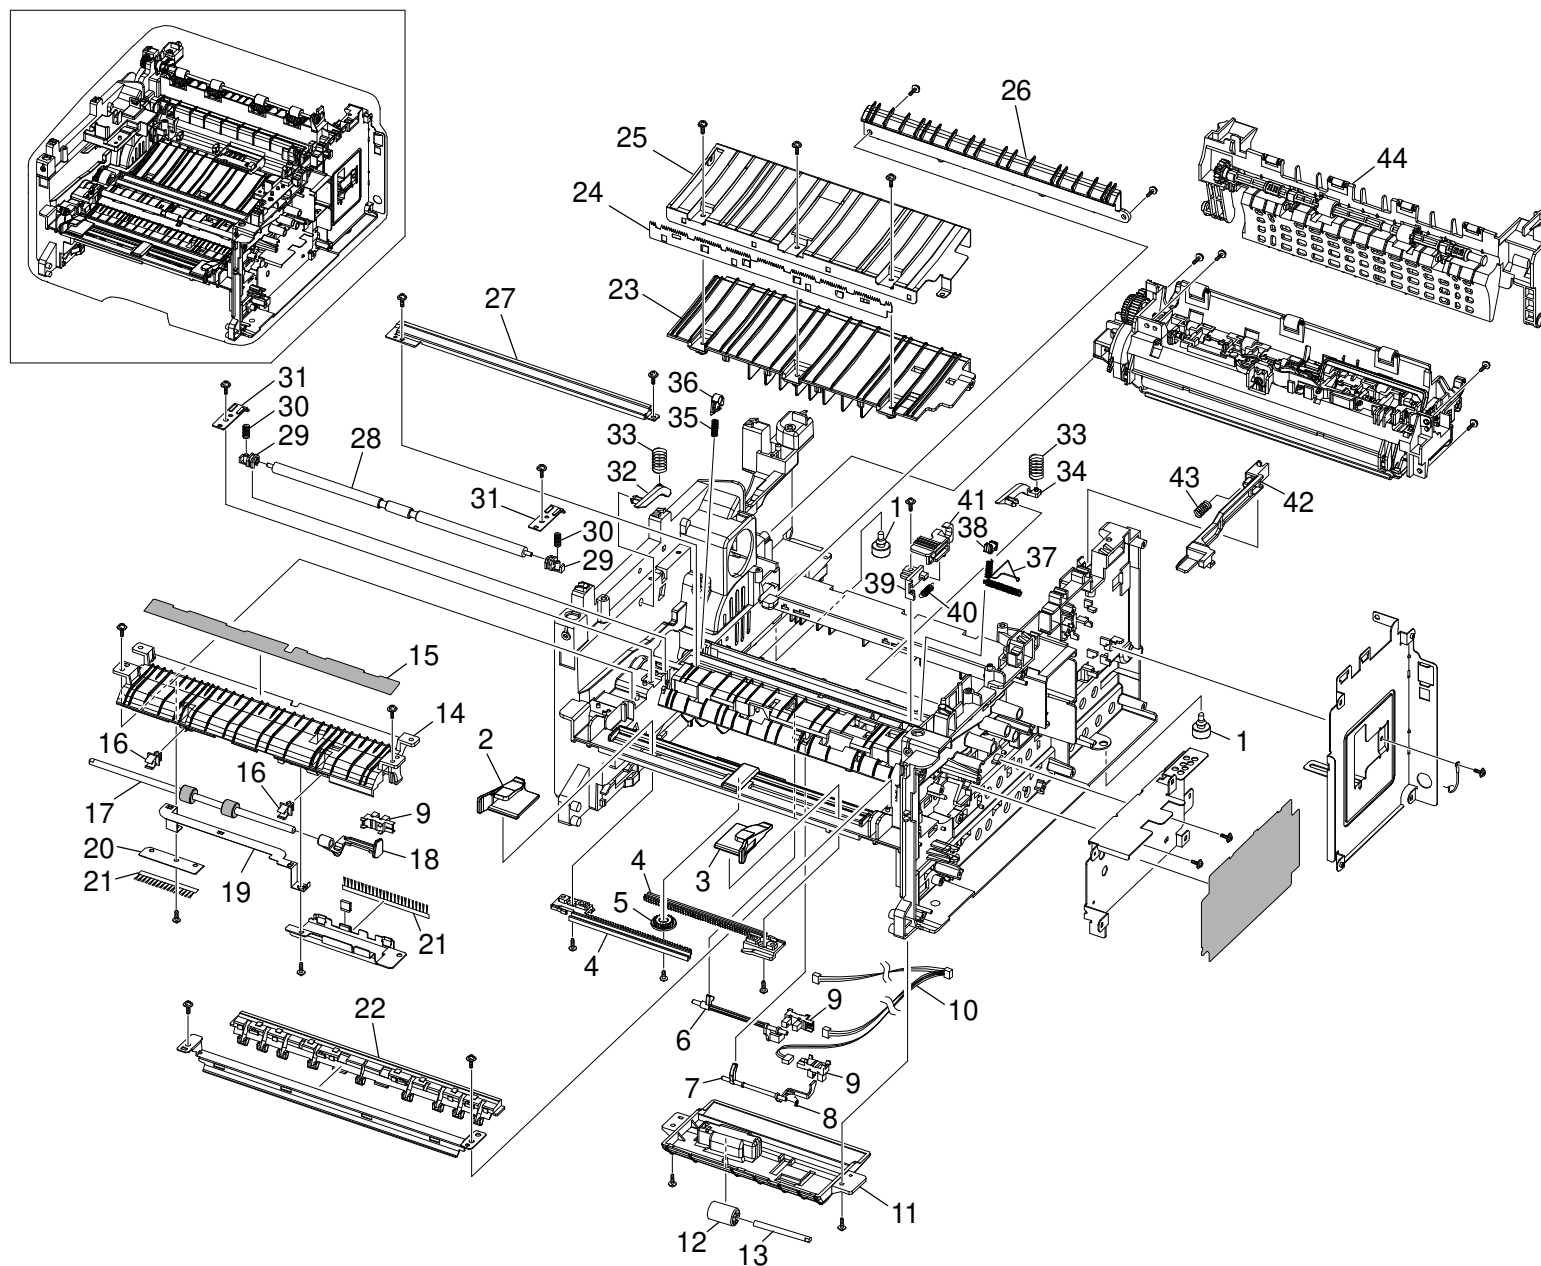


7.Frame Section 2 (M009/M000)

Index No.	Part No.	Description	Q'ty Per Assembly
1	G186 1139	Foot-ML80	2
2	M000 1161	Left Guide:Table	1
3	M000 1162	Right Guide:Table	1
4	M000 1160	Rack:Table	2
5	M000 1110	Gear-Rack_Pinion	1
6	M000 1136	Actuator:Feed	1
7	M000 1135	Actuator-Duplex	1
8	G960 1015	Spring	2
9	G186 1102	Photointerrupter	3
10	M000 1031	Harness:Power Pack	1
11	M000 1072	Frame-Duplex_Path	1
12	M000 1114	Roller-M-Idle SCF	1
13	M000 1152	Shaft-DUP_Roller	1
14	M000 1066	Guide-Frame_Duplex	1
15	M000 1104	Sheet-Guide_DUP_Path	1
16	G186 1183	Bushing	2
17	H914 9709	Feed Roller	1
18	M000 1137	Actuator:Empty	1
19	M000 1095	Ground-Pick_up	1
20	G964 1030	Sheet - Brush	1
21	G186 1344	Antistatic Brush	1
22	M000 1082	Guide Front Paper	1
23	M000 1068	Guide-TR_RIB	1
24	G960 1061	Plate	1
25	M000 1070	Guide-TR	1
26	M000 1049	Guide-INPUT	1
27	M000 1061	Plate Earth Transfer	1
28	M000 1141	Shaft-Feed Idle	1
29	G960 1058	Bushing - Idle Roller	2
30	G960 1080	Pressure Spring	2
31	G960 1236	Holder Plate	2
32	G960 1142	Left Guide Plate	1
33	G186 1203	Spring - Guide	2
34	G960 1143	Right Guide Plate	1
35	M000 1020	Spring:T Roller	1

Index No.	Part No.	Description	Q'ty Per Assembly
36	M000 1083	Bush-TR_L	1
37	M000 1106	Terminal Spring	1
38	G960 1060	Left Bushing	1
39	M000 1067	Guide-Holder_TR	1
40	M000 1038	Spring ETC-ES (Guide Holder TR)	1
41	M000 1057	Holder-Transfer	1
42	M000 1138	Link-Cover_Rear	1
43	G186 1234	Spring	1
44	M000 1178	Rear Guide Unit	1

 8. Drive Section (M009/M000)

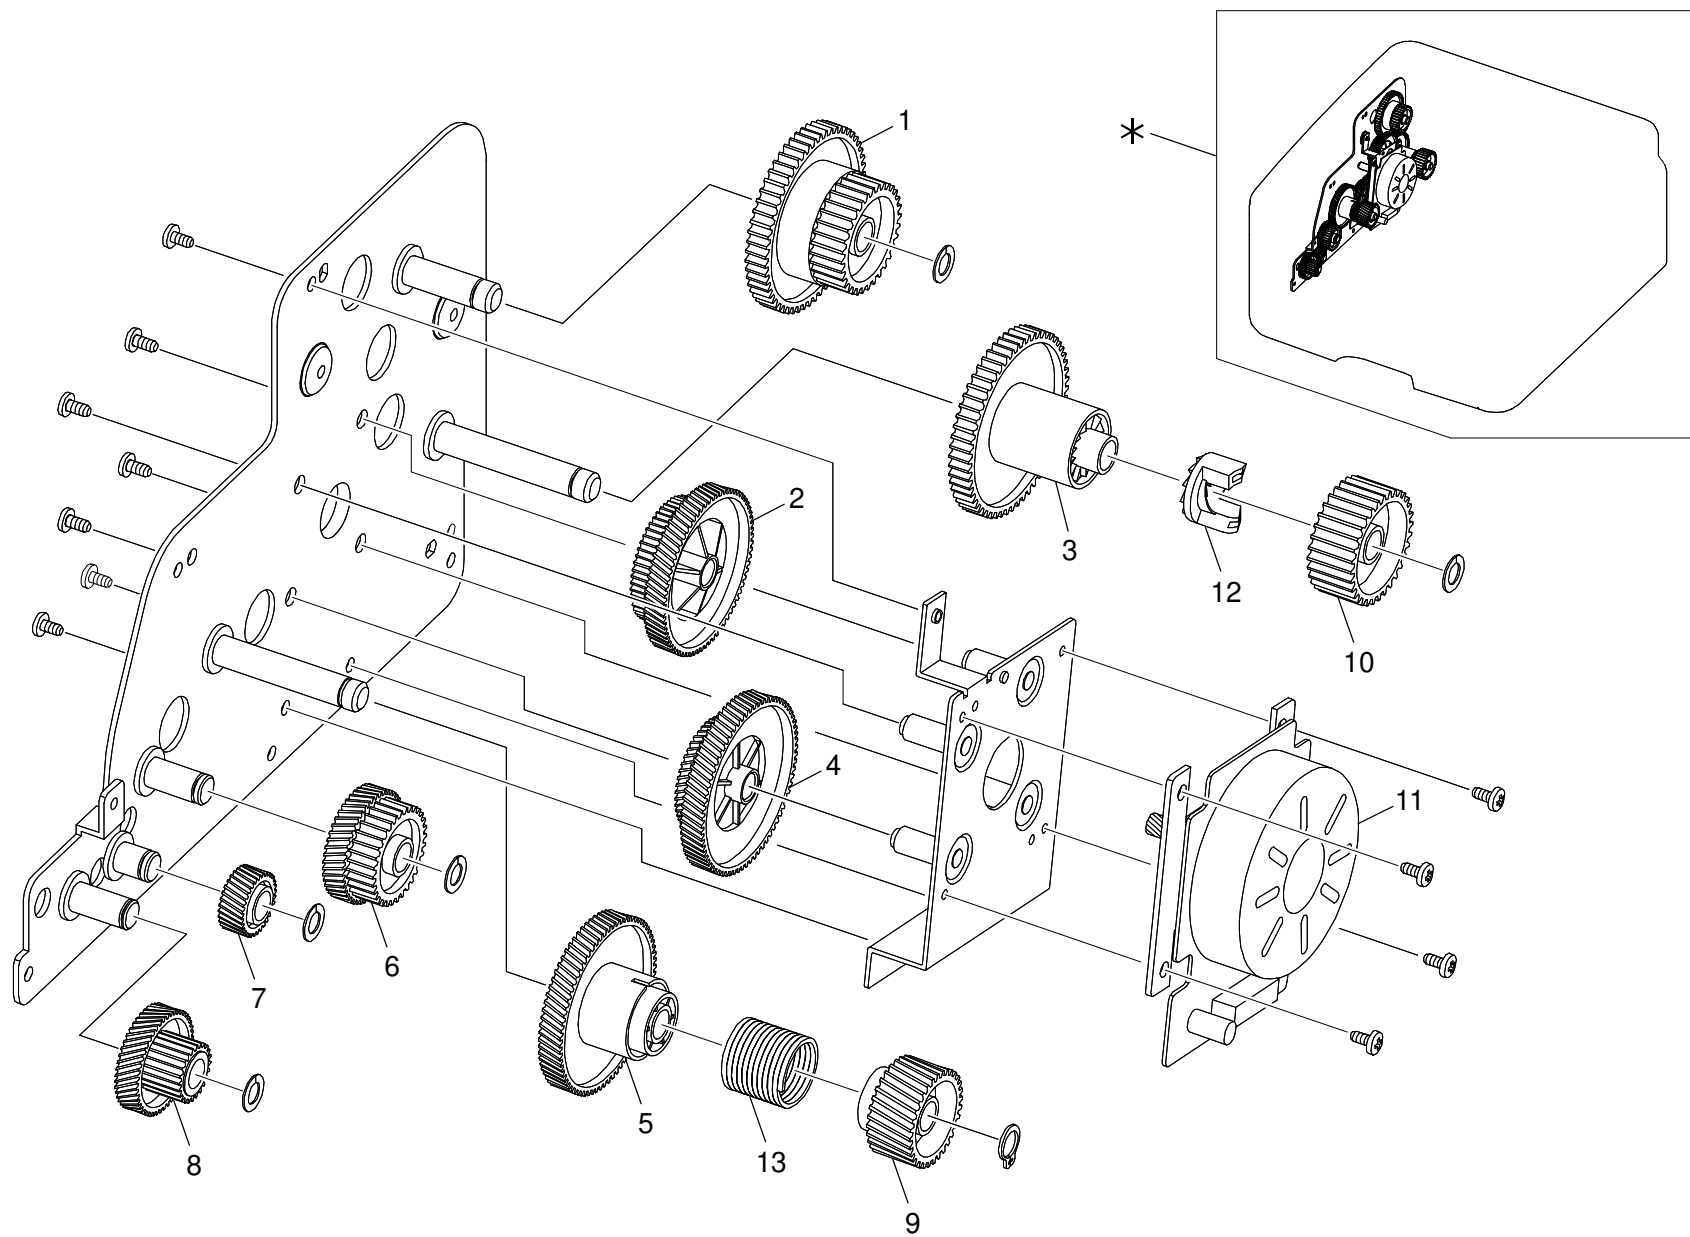


8. Drive Section (M009/M000)

Index No.	Part No.	Description	Q'ty Per Assembly
*	M000 1170	Drive Unit	1
1	M000 1134	Gear:Exit:61/28	1
2	M000 1127	Gear:83/40	1
3	M000 1128	Gear:Fuser:61	1
4	M000 1125	Gear:89/55	1
5	M000 1129	Gear:OPC:89	1
6	M000 1124	Gear:Feed:56/25	1
7	M000 1133	Gear:Pick-up:31	1
8	M000 1139	Gear:52/18	1
9	M000 1151	Gear:OPC Clutch:29	1
10	M000 1131	Gear:Fuser:31	1
11	M000 1026	Motor:Main	1
12	M000 1163	Hub-Clutch	1
13	M000 1021	Spring Clutch	1

Index No.	Part No.	Description	Q'ty Per Assembly

 9. Paper Exit Section (M009/M000)

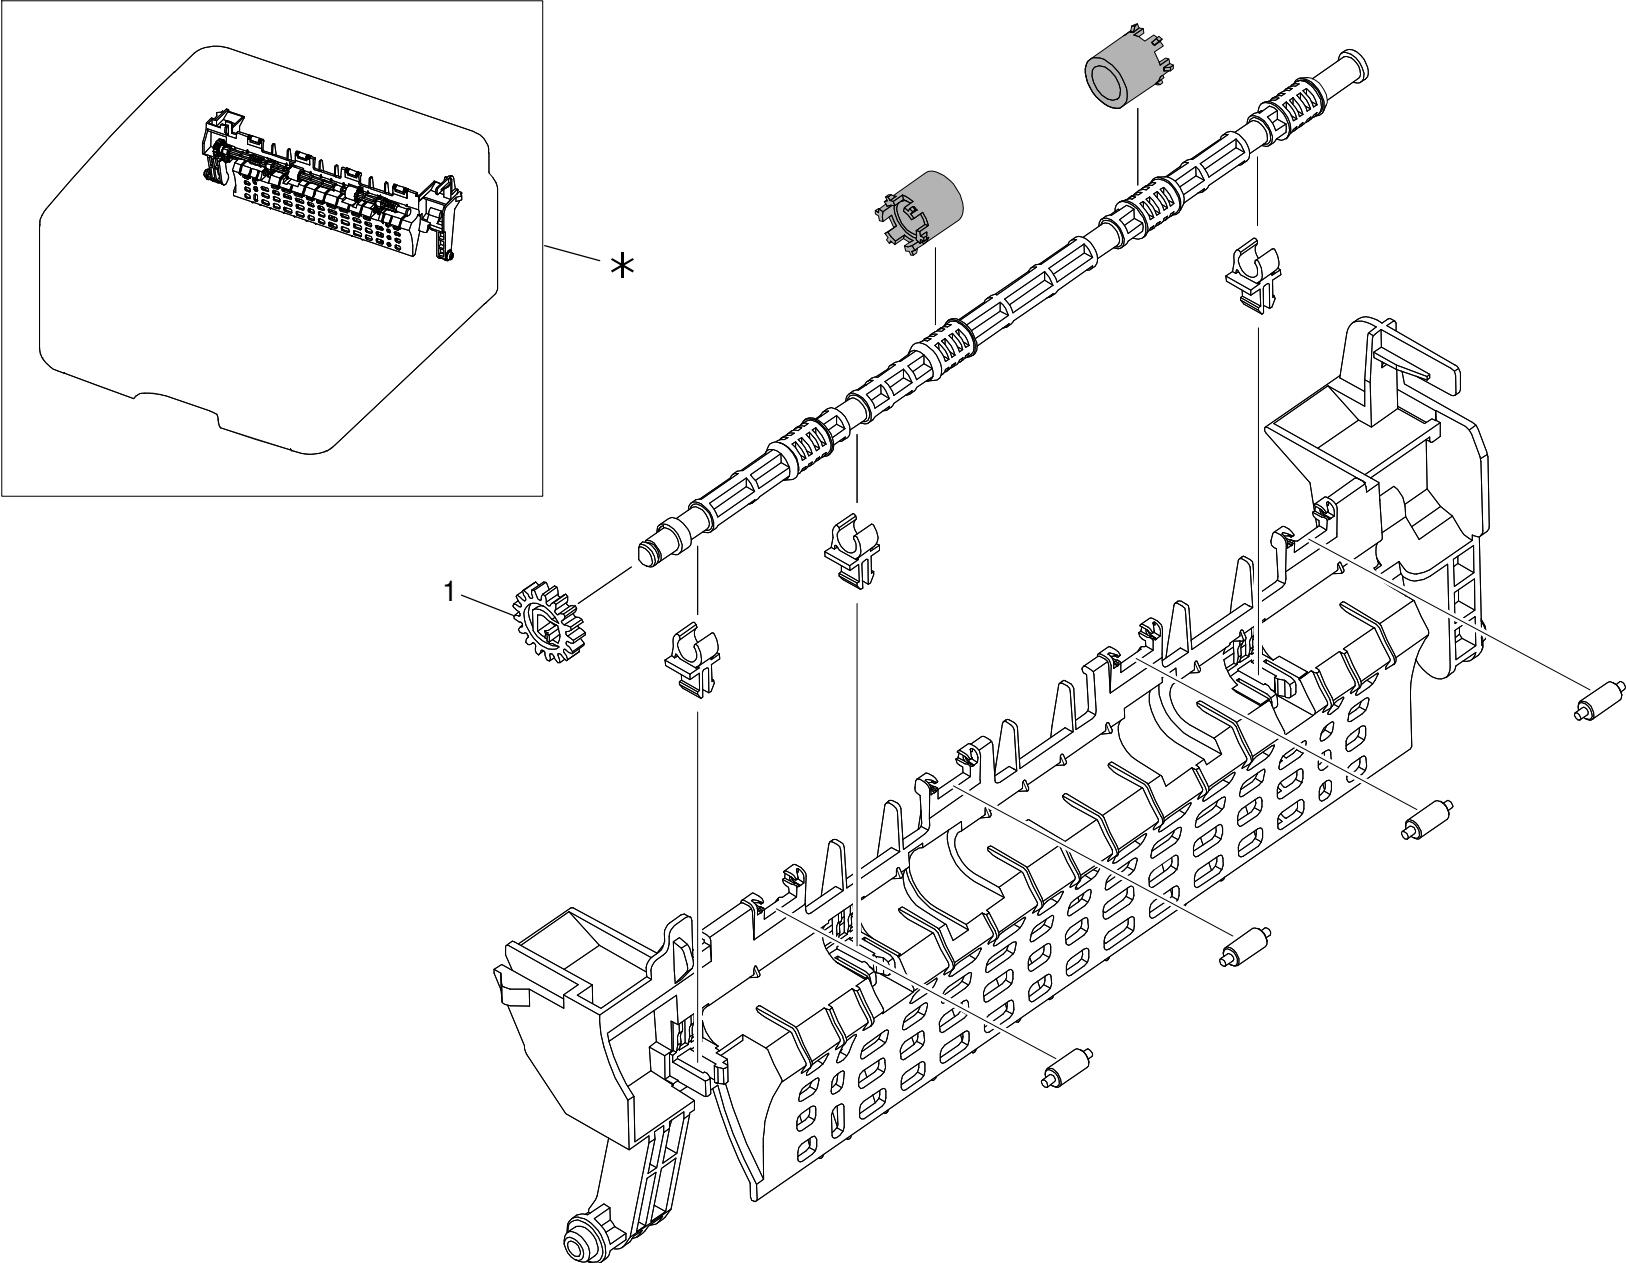


9. Paper Exit Section (M009/M000)

Index No.	Part No.	Description	Q'ty Per Assembly
*	M000 1178	Rear Guide Unit	1
1	M000 1119	Gear:Exit	1

Index No.	Part No.	Description	Q'ty Per Assembly

 10.Fusing Unit (M009/M000)

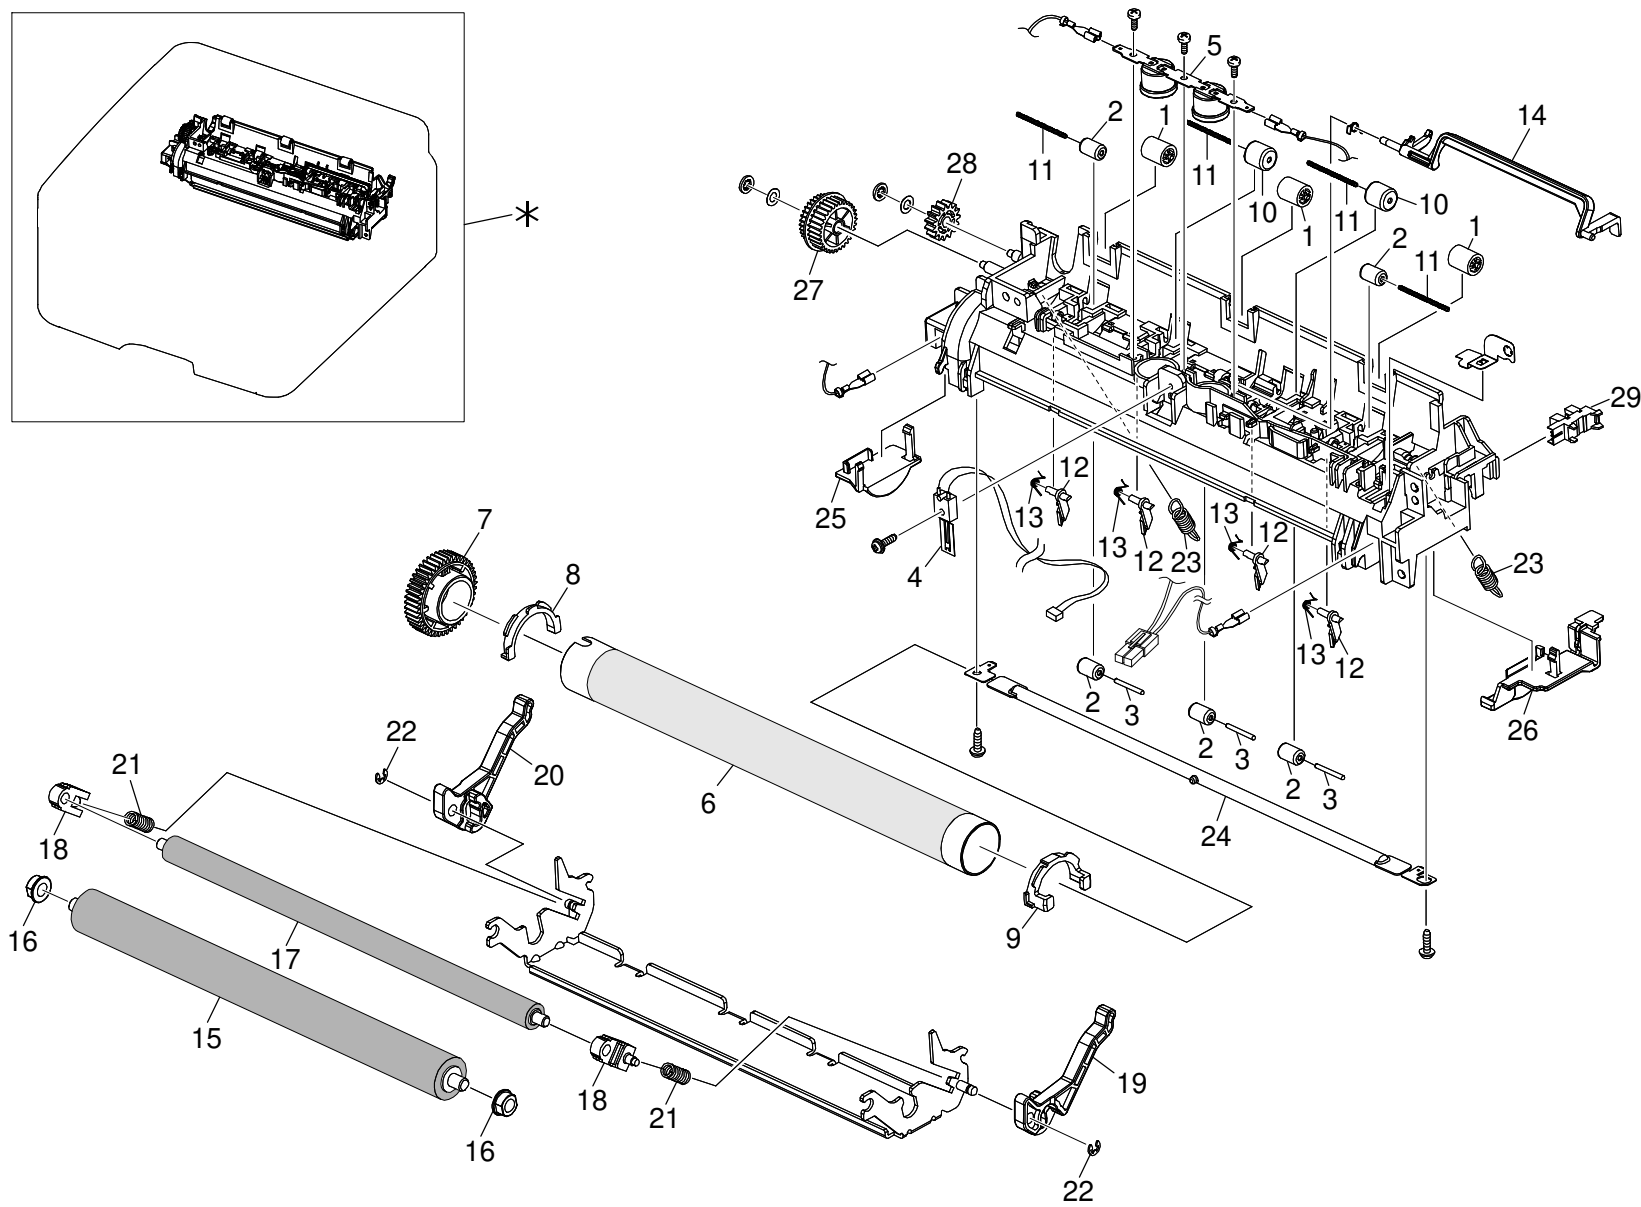


10.Fusing Unit (M009/M000)

Index No.	Part No.	Description	Q'ty Per Assembly
*	M000 1169	Fusing Unit:110V	1
*	M000 1503	Fusing Unit:220V	1
1	G186 1223	Upper Idle Roller	3
2	M000 1118	Roller:Idle	5
3	G186 1076	Idle Roller Shaft	3
4	M000 1001	Thermistor	1
5	G960 1007	Thermostat	1
6	M000 1117	Roller:Heat	1
7	M000 1116	Gear:Fuser	1
8	M000 1077	Bush-HR-L	1
9	M000 1078	Bush-HR-R	1
10	G186 1077	Idle Roller	2
11	M000 1018	Spring	4
12	M000 1044	Guide-Claw	4
13	M000 1042	Spring:Claw	4
14	M000 1121	Actuator-Exit	1
15	M000 1148	Roller:Pressure	1
16	M000 1079	Bush-PR-1st	2
17	M000 1149	Roller:Pressure:2nd	1
18	M000 1080	Bush-PR-2nd	2
19	M000 1123	Lever-Link Jam_R	1
20	M000 1122	Lever:Link Jam:Left	1
21	M000 1016	Spring	2
22	G960 1011	C-Ring	2
23	M000 1019	Spring	2
24	M000 1004	Lamp:Halogen:110V	1
24	M000 1501	Lamp:Halogen:220V	1
25	M000 1156	Cap-Lamp_L	1
26	M000 1157	Cap-Lamp_R	1
27	M000 1132	Gear:Fuser:28/20	1
28	M000 1109	Gear-MpF 5	1
29	G186 1102	Photo - Interrupter	1

Index No.	Part No.	Description	Q'ty Per Assembly

 11. Duplex Unit (M009/M000)

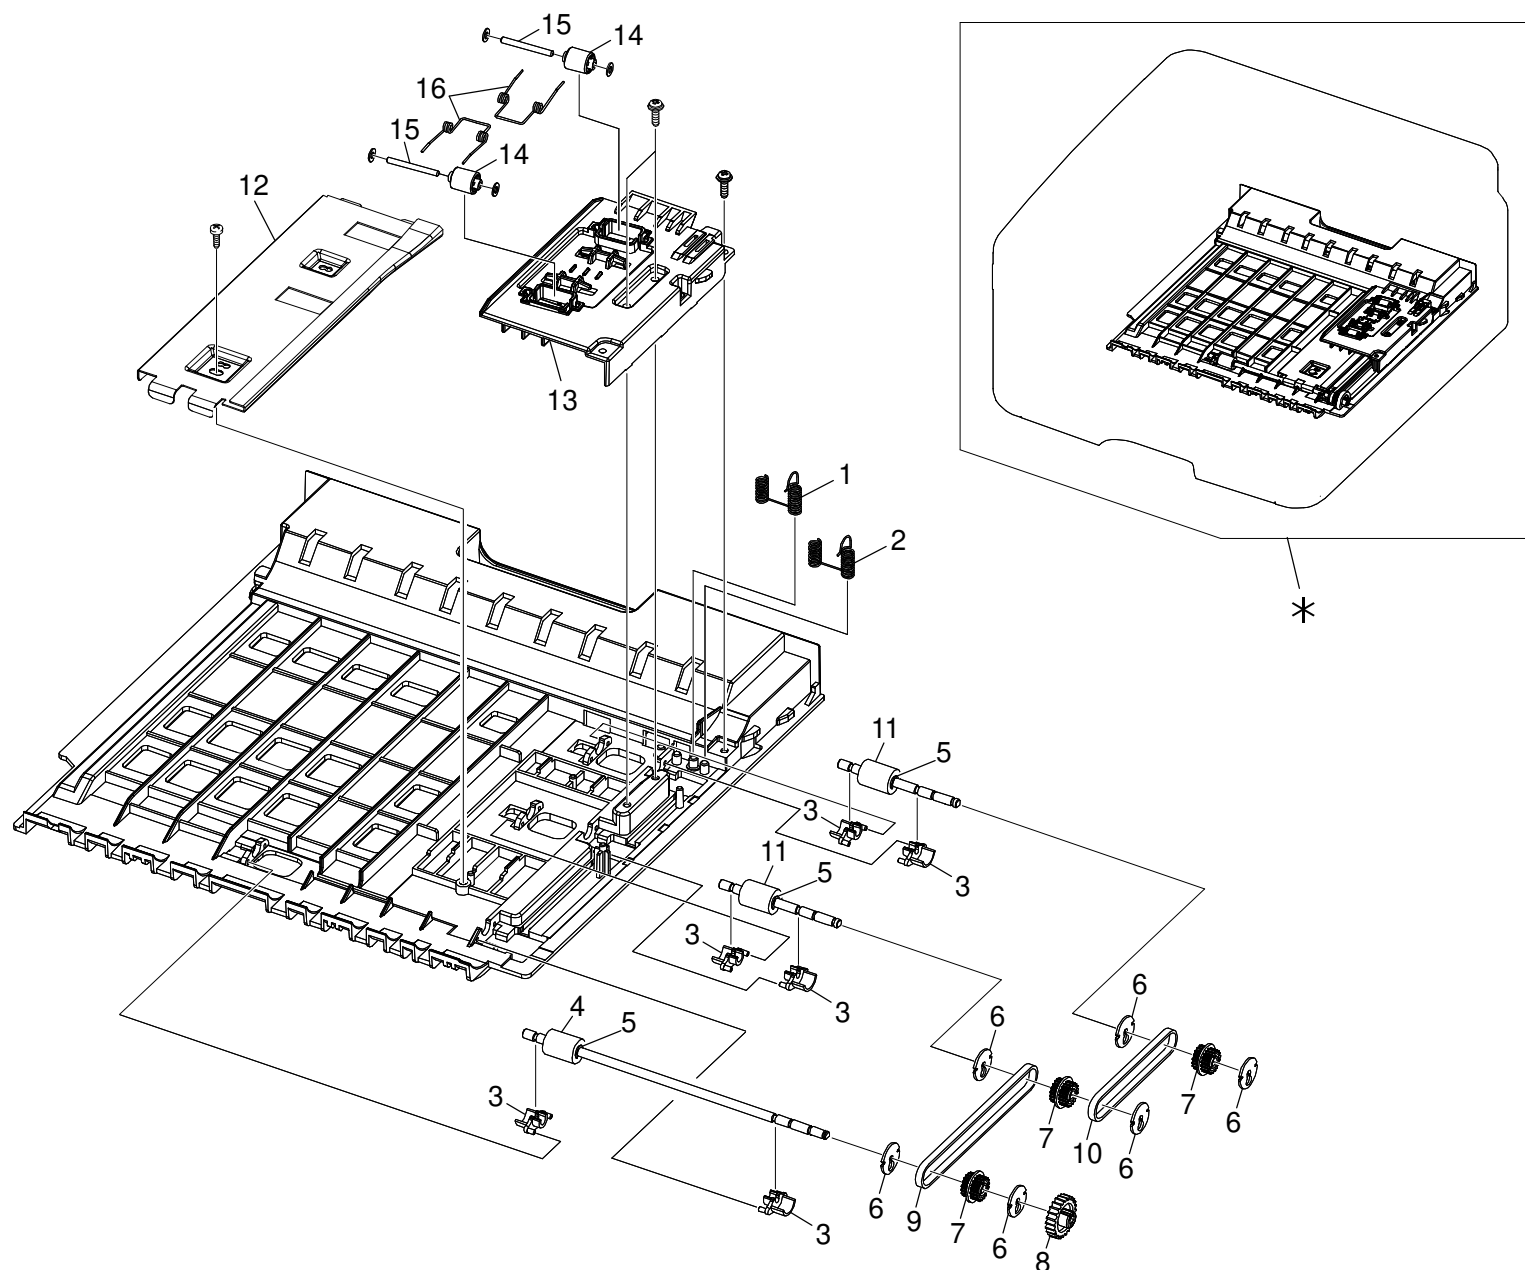


11.Duplex Unit (M009/M000)

Index No.	Part No.	Description	Q'ty Per Assembly
*	M000 1195	ELA Unit-Duplex	1
1	M000 1108	Terminal:Ground:Large	1
2	M000 1107	Terminal:Ground:Small	1
3	M307 1031	Bushing - Feed Roller	6
4	M000 1144	Roller-Feed_DUP2	1
5	M307 1033	C-Ring	3
6	M307 1029	Belt Stopper	6
7	M307 1030	Pulley - 18T	3
8	G960 1097	Gear - Exit Roller	1
9	M000 1023	Timing Belt	1
10	M000 1022	Timing Belt	1
11	M307 1032	Duplex Feed Roller	2
12	M000 1060	Bracket-Duplex_Align	1
13	M000 1076	Guide-Duplex_Upper	1
14	M307 1026	Idle Roller	2
15	M307 1025	Idle Roller Shaft	2
16	G960 1013	Spring	2

Index No.	Part No.	Description	Q'ty Per Assembly

 12.Cassette Unit (M009/M000)

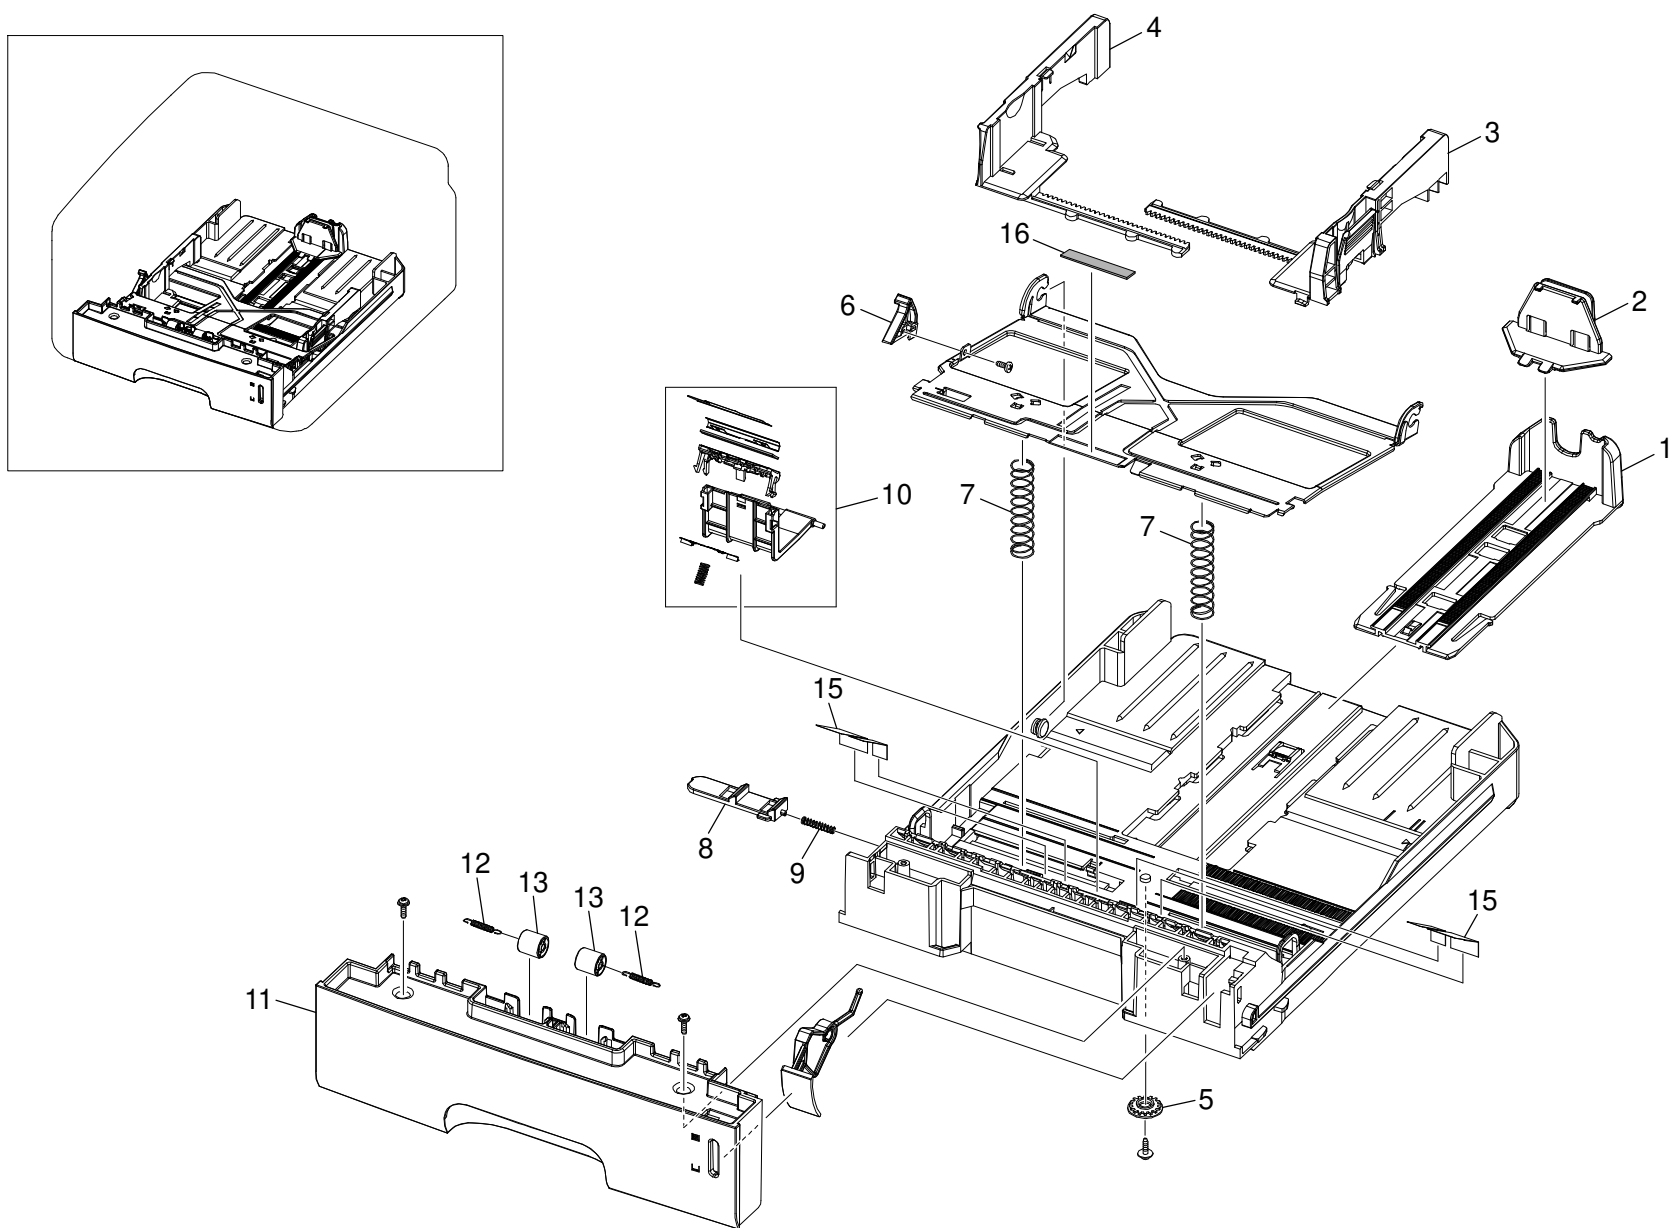

12.Cassette Unit (M009/M000)

Index No.	Part No.	Description	Q'ty Per Assembly
1	G144 9739	Extension - End	1
2	M000 1193	End Fence	1
3	M000 1192	Side Fence:Right	1
4	M000 1159	Side Fence:Left	1
5	G186 1007	Gear-16Z	1
6	G960 1411	RZL:Cam-M-Knock_up	1
7	G960 1016	Spring - Cassette	2
8	G960 1138	Lock Plate	1
9	G960 1194	Pressure Spring	1
10	M000 1176	Housing:Pad Holder	1
11	M000 1186	Cover-Handle_Cassette	1
12	G964 1002	Spring - ES	2
13	G144 9722	Idel Feed Roller	2
14	M000 1191	Indicator-Paper	1
15	M000 1101	Sheet-Guide_Side_Far	2
16	G960 1154	Pad - Cassette	1

Index No.	Part No.	Description	Q'ty Per Assembly

Parts Index

Parts Index

Part No.	Description	Page and Index No.
M000 1001	Thermistor	21 - 4
M000 1004	Lamp:Halogen:110V	21 - 24
M000 1012	Ring-CS;ID3,OD3,T0.25,Black,SU	13 - 23
M000 1013	Ring-CS	13 - 32
M000 1016	Spring	21 - 21
M000 1017	Spring	13 - 21
M000 1018	Spring	21 - 11
M000 1019	Spring	21 - 23
M000 1020	Spring:T Roller	15 - 35
M000 1021	Spring Clutch	17 - 13
M000 1022	Timing Belt	23 - 10
M000 1023	Timing Belt	23 - 9
M000 1024	Locker:Latch Push	9 - 2
M000 1025	Fan:DC	13 - 3
M000 1025	Fan:DC	13 - 27
M000 1026	Motor:Main	17 - 11
M000 1027	Solenoi:Pick-up	13 - 26
M000 1028	Harness:AC Inlet	3 - 9
M000 1029	Harness:Fuser AC	3 - 4
M000 1030	Harness:Motor/SOL	3 - 8
M000 1031	Harness:Power Pack	15 - 10
M000 1031	Harness:Power Pack	3 - 6
M000 1032	Harness:LSU_SW/Fan	13 - 33
M000 1033	Harness	3 - 5
M000 1034	Power Supply Unit	3 - 3
M000 1035	Power Pack	3 - 2
M000 1037	Bush	13 - 40
M000 1038	Spring ETC-ES (Guide Holder TR)	15 - 40
M000 1041	Holder - M - Exit	13 - 42
M000 1042	Spring:Claw	21 - 13
M000 1044	Guide-Claw	21 - 12
M000 1049	Guide-INPUT	15 - 26
M000 1052	Collar Swing	13 - 7
M000 1056	Stacker-RX	5 - 1
M000 1057	Holder-Transfer	15 - 41

Part No.	Description	Page and Index No.
M000 1059	Holder-REGI	13 - 4
M000 1060	Bracket-Duplex_Align	23 - 12
M000 1061	Plate Earth Transfer	15 - 27
M000 1066	Guide-Frame_Duplex	15 - 14
M000 1067	Guide-Holder_TR	15 - 39
M000 1068	Guide-TR_RIB	15 - 23
M000 1070	Guide-TR	15 - 25
M000 1071	Support-Roller	13 - 38
M000 1072	Frame-Duplex_Path	15 - 11
M000 1073	Frame-Exit_High	13 - 30
M000 1075	Frame-LSU-Holder-R	13 - 29
M000 1076	Guide-Duplex_Upper	23 - 13
M000 1077	Bush-HR-L	21 - 8
M000 1078	Bush-HR-R	21 - 9
M000 1079	Bush-PR-1st	21 - 16
M000 1080	Bush-PR-2nd	21 - 18
M000 1081	Guide-Change_DUP	11 - 1
M000 1082	Guide Front Paper	15 - 22
M000 1083	Bush-TR_L	15 - 36
M000 1095	Ground-Pick_up	15 - 19
M000 1101	Sheet-Guide_Side_Far	25 - 15
M000 1104	Sheet-Guide_DUP_Path	15 - 15
M000 1105	Key:On_line	5 - 6
M000 1106	Terminal Spring	15 - 37
M000 1107	Terminal:Ground:Small	23 - 2
M000 1108	Terminal:Ground:Large	23 - 1
M000 1109	Gear-MpF 5	21 - 28
M000 1110	Gear-Rack_Pinion	15 - 5
M000 1111	Roller - Exit Main	13 - 43
M000 1112	Roller - Exit FR	13 - 44
M000 1113	Gear-M-Fuser Idle 1	13 - 31
M000 1114	Roller-M-Idle SCF	15 - 12
M000 1115	Transfer Roller	3 - 10
M000 1115	Spring CS	13 - 45
M000 1116	Gear:Fuser	21 - 7

Part No.	Description	Page and Index No.
M000 1117	Roller:Heat	21 - 6
M000 1118	Roller:Idle	21 - 2
M000 1119	Gear:Exit	19 - 1
M000 1121	Actuator-Exit	21 - 14
M000 1122	Lever:Link Jam:Left	21 - 20
M000 1123	Lever:Link Jam_R	21 - 19
M000 1124	Gear:Feed:56/25	17 - 6
M000 1125	Gear:89/55	17 - 4
M000 1126	Gear:Feed	13 - 25
M000 1127	Gear:83/40	17 - 2
M000 1128	Gear:Fuser:61	17 - 3
M000 1129	Gear:OPC:89	17 - 5
M000 1130	Gear:Feed_Drive	13 - 20
M000 1131	Gear:Fuser:31	17 - 10
M000 1132	Gear:Fuser:28/20	21 - 27
M000 1133	Gear:Pick-up:31	17 - 7
M000 1134	Gear:Exit:61/28	17 - 1
M000 1135	Actuator-Duplex	15 - 7
M000 1136	Actuator:Feed	15 - 6
M000 1137	Actuator:Empty	15 - 18
M000 1138	Link-Cover_Rear	15 - 42
M000 1139	Gear:52/18	17 - 8
M000 1140	Gear:Duplex	13 - 6
M000 1141	Shaft-Feed Idle	15 - 28
M000 1142	Shaft-Feed REGI	13 - 8
M000 1143	Roller-Feed REGI	13 - 11
M000 1144	Roller-Feed_DUP2	23 - 4
M000 1145	Shaft-Feed	13 - 19
M000 1147	Roller:Exit F/Down	13 - 39
M000 1148	Roller:Pressure	21 - 15
M000 1149	Roller:Pressure:2nd	21 - 17
M000 1150	Shaft-P-Pick_up	13 - 15
M000 1151	Gear:OPC Clutch:29	17 - 9
M000 1152	Shaft-DUP_Roller	15 - 13
M000 1153	Magnetic Clutch	13 - 9

Part No.	Description	Page and Index No.
M000 1154	Cam-Pick Up	13 - 13
M000 1155	Gear:Exit:Z17	13 - 24
M000 1156	Cap-Lamp_L	21 - 25
M000 1157	Cap-Lamp_R	21 - 26
M000 1158	Lens Led	5 - 4
M000 1159	Side Fence:Left	25 - 4
M000 1160	Rack:Table	15 - 4
M000 1161	Left Guide:Table	15 - 2
M000 1162	Right Guide:Table	15 - 3
M000 1163	Hub-Clutch	17 - 12
M000 1165	Sub Stacker	5 - 2
M000 1168	PCB:Main-Zener	13 - 1
M000 1169	Fusing Unit:110V	21 - *
M000 1170	Drive Unit	17 - *
M000 1170	Drive Unit	3 - 7
M000 1171	MEA Unit Swing	13 - 5
M000 1172	Writing Unit	3 - 11
M000 1176	Housing:Pad Holder	25 - 10
M000 1177	Pick-up Roller	13 - 17
M000 1178	Rear Guide Unit	19 - *
M000 1178	Rear Guide Unit	15 - 44
M000 1179	MEA Unit-Gear Pick Up	13 - 12
M000 1185	Cover-Front	9 - 1
M000 1186	Cover-Handle_Cassette	25 - 11
M000 1187	Cover:Manual	9 - 3
M000 1189	Cover - Duplex	3 - 12
M000 1190	Cover - Rear - Duplex	3 - 13
M000 1191	Indicator-Paper	25 - 14
M000 1192	Side Fence:Right	25 - 3
M000 1193	End Fence	25 - 2
M000 1194	Main Board	3 - 1
M000 1195	ELA Unit-Duplex	23 - *
M000 1197	MEA Unit-Cover_Top	5 - *
M000 1198	MEA Unit-Cover_Left	7 - 2
M000 1199	MEA Unit-Cover_Right	7 - 3

Part No.	Description	Page and Index No.
M000 1200	MEA Unit-Cover_Rear	7 - 4
M000 1200	MEA Unit-Cover_Rear	11 - *
M000 1201	MEA Unit-Cover_Front	7 - 1
M000 1201	MEA Unit-Cover_Front	9 - *
M000 1203	Sheet-Overlay	5 - 3
M000 1501	Lamp:Halogen:220V	21 - 24
M000 1502	Power Supply Unit	3 - 3
M000 1503	Fusing Unit:220V	21 - *
M009 1001	Main Board	3 - 1
M009 1003	MEA Unit-Cover_Right	7 - 3

Part No.	Description	Page and Index No.
G144 9653	OP- Spring	5 - 5
G144 9674	OP - Board	13 - 28
G144 9722	Idel Feed Roller	25 - 13
G144 9739	Extension - End	25 - 1
G186 1007	Gear-16Z	25 - 5
G186 1076	Idle Roller Shaft	21 - 3
G186 1077	Idel Roller	21 - 10
G186 1102	Photo - Interrupter	21 - 29
G186 1102	Photointerrupter	15 - 9
G186 1139	Foot-ML80	15 - 1
G186 1141	Exit Roller Bushing	13 - 37
G186 1183	Bushing	15 - 16
G186 1183	Bushing	13 - 10
G186 1203	Spring - Guide	15 - 33
G186 1223	Upper Idle Roller	21 - 1
G186 1234	Spring	15 - 43
G186 1344	Antistatic Brush	15 - 21
G960 1007	Thermostat	21 - 5
G960 1011	C-Ring	21 - 22
G960 1013	Spring	23 - 16
G960 1015	Spring	15 - 8
G960 1016	Spring - Cassette	25 - 7
G960 1058	Bushing - Idle Roller	15 - 29
G960 1059	Bushing - Pickup Roller	13 - 18
G960 1060	Left Bushing	15 - 38
G960 1061	Plate	15 - 24
G960 1070	Stopper - Pick-up RO	13 - 16
G960 1080	Pressure Spring	15 - 30
G960 1096	Terminal	13 - 34
G960 1097	Gear - Exit Roller	23 - 8
G960 1099	Cam - Pick-up	13 - 22
G960 1126	Gear - Exit Roller	13 - 36
G960 1138	Lock Plate	25 - 8
G960 1140	Idler - Pick-up	13 - 14
G960 1141	Lock Plate	13 - 2

Part No.	Description	Page and Index No.
G960 1142	Left Guide Plate	15 - 32
G960 1143	Right Guide Plate	15 - 34
G960 1154	Pad - Cassette	25 - 16
G960 1161	Terminal Board	13 - 35
G960 1194	Pressure Spring	25 - 9
G960 1236	Holder Plate	15 - 31
G960 1411	RZL:Cam-M-Knock_up	25 - 6
G964 1002	Spring - ES	25 - 12
G964 1030	Sheet - Brush	15 - 20
H914 9709	Feed Roller	15 - 17

Part No.	Description	Page and Index No.
M307 1025	Idle Roller Shaft	23 - 15
M307 1026	Idle Roller	23 - 14
M307 1029	Belt Stopper	23 - 6
M307 1030	Pulley - 18T	23 - 7
M307 1031	Bushing - Feed Roller	23 - 3
M307 1032	Duplex Feed Roller	23 - 11
M307 1033	C-Ring	23 - 5