Notes for Users

Please note the following corrections to this manual:

Hardware Guide

Topic: Installing Options > Installing SD Memory Card Options > Important

Error	Correction
Using the upper slot is recommended for inserting the cards.	This information is not relevant to this machine.

Topic: Installing Options > Installing SD Memory Card Options > Step 4

Error	Correction
4. Carefully insert the optional card into	4. Insert the SD card into the slot until it
the upper slot, until the card clicks into	clicks.
the place.	Insert the SD card in the appropriate slot as follows: • Upper slot: Data overwrite security unit • Lower slot: data storage card or VM card

Copyright © 2008 Printed in China EN (USA) M001-8644



MOO18644