Model Kr-P2 Machine Code: M047

Field Service Manual

15 December,2009

Safety Notices

Important Safety Notices

Prevention of Physical Injury

- 1. Before disassembling or assembling parts of the machine and peripherals, make sure that the machine power cord is unplugged.
- 2. The wall outlet should be near the machine and easily accessible.
- 3. If any adjustment or operation check has to be made with exterior covers off or open while the main switch is turned on, keep hands away from electrified or mechanically driven components.
- 4. The machine drives some of its components when it completes the warm-up period. Be careful to keep hands away from the mechanical and electrical components as the machine starts operation.
- 5. The inside and the metal parts of the fusing unit become extremely hot while the machine is operating. Be careful to avoid touching those components with your bare hands.

Health Safety Conditions

Toner is non-toxic, but if you get either of them in your eyes by accident, it may cause temporary eye discomfort. Try to remove with eye drops or flush with water as first aid. If unsuccessful, get medical attention.

Observance of Electrical Safety Standards

The machine and its peripherals must be serviced by a customer service representative who has completed the training course on those models.

• The Controller board on this machine contains a lithium battery. The danger of explosion exists if a battery of this type is incorrectly replaced. Replace only with the same or an equivalent type recommended by the manufacturer. Discard batteries in accordance with the manufacturer's instructions and local regulations.

Safety and Ecological Notes for Disposal

- 1. Do not incinerate toner bottles or used toner. Toner dust may ignite suddenly when exposed to an open flame.
- 2. Dispose of used toner, the maintenance unit which includes developer or the organic photoconductor in accordance with local regulations. (These are non-toxic supplies.)

3. Dispose of replaced parts in accordance with local regulations.

WARNING

• To prevent a fire or explosion, keep the machine away from flammable liquids, gases, and aerosols. A fire or an explosion might occur.

Handling Toner

- Work carefully when removing paper jams or replacing toner bottles or cartridges to avoid spilling toner on clothing or the hands.
- If toner is inhaled, immediately gargle with large amounts of cold water and move to a well ventilated location. If there are signs of irritation or other problems, seek medical attention.
- If toner gets on the skin, wash immediately with soap and cold running water.
- If toner gets into the eyes, flush the eyes with cold running water or eye wash. If there are signs of irritation or other problems, seek medical attention.
- If toner is swallowed, drink a large amount of cold water to dilute the ingested toner. If there are signs of any problem, seek medical attention.
- If toner spills on clothing, wash the affected area immediately with soap and cold water. Never use hot water! Hot water can cause toner to set and permanently stain fabric.
- Always store toner and developer supplies such as toner and developer packages, cartridges, and bottles (including used toner and empty bottles and cartridges) out of the reach of children.
- Always store fresh toner supplies or empty bottles or cartridges in a cool, dry location that is not exposed to direct sunlight.

Laser Safety

The Center for Devices and Radiological Health (CDRH) prohibits the repair of laser-based optical units in the field. The optical housing unit can only be repaired in a factory or at a location with the requisite equipment. The laser subsystem is replaceable in the field by a qualified Customer Engineer. The laser chassis is not repairable in the field. Customer engineers are therefore directed to return all chassis and laser subsystems to the factory or service depot when replacement of the optical subsystem is required.

WARNING

• Use of controls, or adjustment, or performance of procedures other than those specified in this manual may result in hazardous radiation exposure.

∆warning

WARNING:

Turn off the main switch before attempting any of the procedures in the Laser Unit section. Laser beams can seriously damage your eyes.

CAUTION MARKING:

 


 
Conventions and Trademarks

Conventions

Symbol	What it means	
	Refer to section number	
P	Screw	
Ę₽	Connector	
C	E-ring	
$\langle \overline{0} \rangle$	C-ring	

The following notations are used in text to describe the direction of paper feed: lengthwise and sideways. The annotations "SEF" and "LEF" denote "Short Edge Feed" and "Long Edge Feed". (The arrows indicate the direction of paper feed.)





Short Edge Feed (SEF)

Long Edge Feed (LEF)

Trademarks

Microsoft[®], Windows[®], and MS-DOS[®] are registered trademarks of Microsoft Corporation in the United States and /or other countries.

PostScript[®] is a registered trademark of Adobe Systems, Incorporated.

PCL[®] is a registered trademark of Hewlett-Packard Company.

Ethernet[®] is a registered trademark of Xerox Corporation.

PowerPC[®] is a registered trademark of International Business Machines Corporation.

Other product names used herein are for identification purposes only and may be trademarks of their respective companies. We disclaim any and all rights involved with those marks.

This manual uses several symbols and some simple abbreviations.

TABLE OF CONTENTS

Safety Notices	1
Important Safety Notices	1
Laser Safety	2
Conventions and Trademarks	3
1. Product Information	
Specifications	
Overview	10
Mechanical Component Layout	10
Paper Path	
Machine Configuration	13
Model M047	13
2. Installation	
Installation Requirements	15
Environment	15
Machine Level	15
Machine Space Requirement	16
Power Supply	16
Machine Installation	17
Main Unit and Option Unit	17
Printer Option	17
SD Card Appli Move	17
3. Preventive Maintenance	
User Maintenance	
Service Maintenance	
Main	
Paper Feed Unit (Option)	23
4. Replacement and Adjustment	
General	
Precautions on Disassembly	
Releasing Plastic Latches	
After Servicing the Machine	
Special Tools	
Exterior Covers	

Operation Panel	
Rear Cover	
Upper Cover	
By-pass Tray	
Left Cover	
Front Door	
Right Cover	
Laser Unit	
Caution Decal Location	
Polygon Mirror Motor	
Laser Unit	
Laser Diode Unit	
Laser Beam Pitch Adjustment	
Image Transfer	41
Transfer Roller	41
Toner End Sensor	41
Fusing	43
Fusing Unit	
Hot Roller and Fusing Lamp	
Pressure Roller	47
Thermistor and Thermostat	
Hot Roller Strippers	51
Paper Feed	53
Paper Feed Roller	53
Friction Pad	53
Paper End Sensor	54
Remaining Paper Sensors	55
By-pass Feed	
By-pass Feed Unit	
By-pass Feed Roller	
By-pass Friction Pad	
By-pass Paper Set Sensor	
Paper Exit	61

Paper Exit Sensor	61
Overflow Sensor	61
Paper Exit Unit	61
Fusing Exit Sensor	62
Electrical Components	64
Printer Controller Board	64
Engine Board	64
Main Motor	65
Relay Clutch	66
Paper Feed Clutch	66
Registration Clutch	68
Registration Sensor	68
Power Supply Board and High Voltage Supply Board	69
Fusing Pressure Sensor	71
Fusing Fan	72
PSU Fan	72
Image Adjustment	74
Registration Adjustment	74
Parallelogram Image Adjustment	74
5. System Maintenance Reference	
Service Program Mode	
SP Tables	77
Inputting a Value or Setting for a Service Program	77
Exiting Service Mode	
Updating the Firmware	
Type of Firmware	
Precautions	79
Machine Firmware Update	80
Error Recovery	
Power-On Self Tests	83
Dip Switches	84
Controller Board	

6. Troubleshooting

Service Call Conditions	
Electrical Component Defects	
· Sensors	
Switches	
Blown Fuse Conditions	
LEDs	
7. Energy Saving	
Energy Save	
Energy Saver Modes	
Paper Save	
Effectiveness of Duplex/Combine Function	
INDEX	

1. Product Information


Specifications

See "Appendices" for the "General Specifications".

1

Overview

Mechanical Component Layout

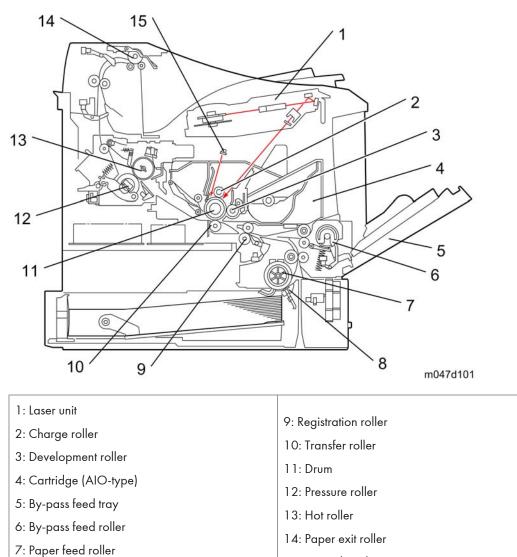


15: Quenching lamp

8: Friction pad

1

Paper Path

Printer

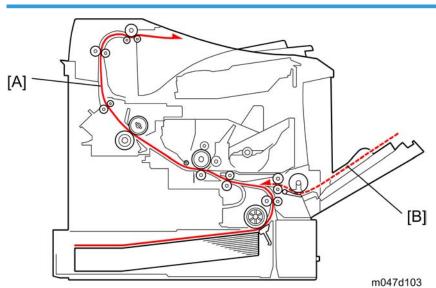


- [A]: Paper path from the paper tray (main)
- [B]: Paper path from the by-pass tray (main)

Vote

• If both optional paper tray units are installed, the envelope feeder must go in the top tray.


Printer with optional units

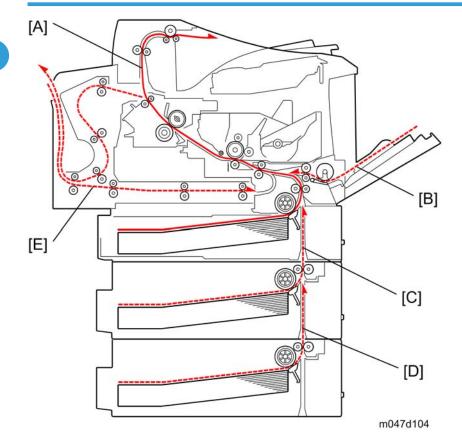

- [A]: Paper path from the paper tray (main)
- [B]: Paper path from the by-pass tray (main)
- [C]: Paper path from the paper tray 2 (option)
- [D]: Paper path from the paper tray 3 (option)
- [E]: Paper path from the duplex unit (option)

Machine Configuration

Envelope Feeder

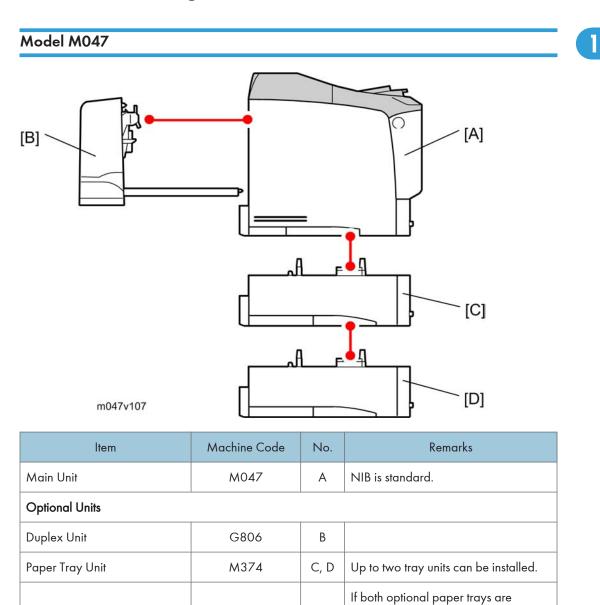

G807

С

installed, the envelope feeder must go

in the top tray.

1. Product Information

Installation Requirements

Environment


- This machine, which uses high voltage power sources, can generate ozone gas. High ozone density is harmful to human health. Therefore, the machine must be installed in a well-ventilated room.
- 1. Temperature Range: 10°C to 32°C (50°F to 89.6°F)
- 2. Humidity Range: 15 % to 89 % RH
- 3. Ambient Illumination: Less than 2,000 lux (do not expose to direct sunlight).
- 4. Ventilation: 3 times/hr/person
- 5. Avoid areas that are exposed to sudden temperature changes. This includes:
 - Areas directly exposed to cool air from an air conditioner.
 - Areas directly exposed to heat from a heater.
- 6. Do not install this machine in an area where it will be exposed to corrosive gases.
- 7. Do not install the machine at locations over 2,000 m (6,562 ft.) above sea level.
- 8. Put the machine on a strong and level base. Inclination on any side should not exceed 5 mm.
- 9. Do not put the machine where it may be subjected to strong vibrations.

Machine Level

Front to back: Within 5 mm. (0.2 inches) of level.

Right to left: Within 5 mm. (0.2 inches) of level.

Machine Space Requirement

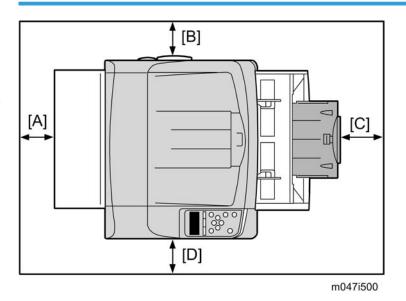

Place the machine near the power source, providing the clearance as shown below:

- A: Over 10 cm (4 inches)
- B: Over 10 cm (4 inches)
- C: Over 10 cm (4 inches)
- D: Over 10 cm (4 inches)

Power Supply

- Make sure the plug is firmly inserted in the outlet.
- Avoid multi-wiring.
- Be sure to ground the machine.

In most we have a lowed	120 volts, 60 Hz: More than 10 A			
Input voltage level	220-240 volts, 50 Hz/60Hz: More than 6 A			
Permissible voltage	missible voltage Fluctuation: ±10 %			
Do not set anything on the power cord				

Machine Installation

Main Unit and Option Unit

Refer to the "Hardware Guide" for MO41 model about the machines installation.

Printer Option

Refer to the "Hardware Guide" for MO41 model about the machines installation. If more than two optional applications are supposed to be installed, do "SD Card Appli Move" described below.

🚼 Important 🗋

 IPDS option requires an optional memory (128 MB or 256 MB). Install an optional memory first before installing the IPDS option. Otherwise, the machine may stall when large print job data is sent to the machine.

SD Card Appli Move

Overview

The service program "SD Card Appli Move" (SP5-873) lets you to copy application programs from one SD card to another SD card.

Slot 1 and Slot 2 are used to store application programs. However, more than two optional applications are supplied for this machine. In that case, you can move application programs from Slot 2 to Slot 1 with the following procedure.


Obey these precautions during the SD Card Appli move procedure:

- The authentication data is moved with the application program from an SD card to the other SD card. Authentication fails if you try to use the SD card after you move the application program from this card to another SD card.
- Do not use an SD card if it has been used for some other work, for example, on a computer. Normal
 operation is not guaranteed when such SD card is used.
- Store the original SD card in a safe location after the procedure. The original SD card cannot be used but it must be saved because (1) the original card is the only proof that the user is licensed to use the application program, and (2) you may need to check the SD card and its data to solve a problem in the future.

Move Exec

"Move Exec" (SP5873 1) moves application programs from the original SD card to another SD card. The application programs are moved from Slot 2 to Slot 1.

1. Turn off the main power switch.

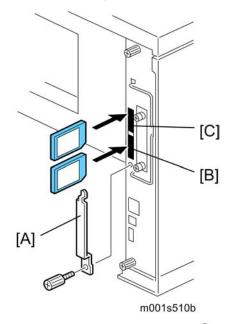


- 2. Remove the SD card slot cover [A] (*P* x 1).
- 3. Insert the original SD card with the application in Slot 2 [B] (lower slot).
- 4. Insert the SD card to receive the application in Slot 1 [C] (upper slot).
- 5. Turn on the main power switch.
- 6. Enter the SP mode and do SP5873 1 "Move Exec."
- 7. Follow the messages on the operation panel to complete the procedure.
- 8. Exit the SP mode.
- 9. Turn off the main power switch.
- 10. Remove the original SD card from Slot 2.
- 11. Leave the other SD card in Slot 1.
- 12. Turn on the main power switch.
- 13. Confirm that the application program runs normally.
- 14. Tell the customer to store the original SD card in a safe place.

Undo Exec

"Undo Exec" (SP5873 2) restores an application to its original SD card. The application is moved from Slot 1 to Slot 2.

1. Turn off the main power switch.

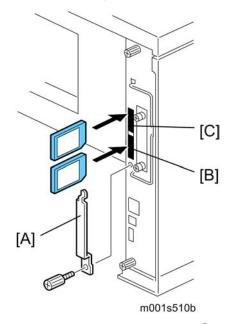

- 2. Remove the SD card slot cover [A] ($\mathscr{P} \times 1$).
- 3. Insert the SD card that currently holds the application in Slot 1 [B].
- 4. Insert the original SD card to receive the restored application in Slot 2 [C].
- 5. Turn on the main power switch.
- 6. Enter the SP mode and do SP5873 "Undo Exec."
- 7. Follow the messages on the operation panel to complete the procedure.
- 8. Exit the SP mode.
- 9. Turn off the main power switch.
- 10. Remove both SD cards.
- 11. Insert the SD card with the restored application in Slot 1.
- 12. Turn on the main power switch.
- 13. Confirm that the application operates normally.

2

2. Installation

3. Preventive Maintenance

User Maintenance

The customer can do all PM items with the Maintenance Kit.

Meter-charge mode must be set to "disabled" (engine SP mode 5930).

Cross-reference: "Engine service mode" in the Appendices.

The Operation panel shows "Replace Maintenance Kit" when the PM counter gets to 90K. After the user replaces the fusing unit in the maintenance kit, the machine automatically resets the PM counter.

ltem	Quantity	Remarks
Fusing unit	1	
Transfer roller	1	
Paper feed roller	3	For standard and optional tray(s)
Friction pad	3	For standard and optional tray(s)
PSU Fan Filter	1	

Service Maintenance

To enable the machine for maintenance by the service technician, the meter-charge mode must be set to "1: Yes" with SP5930-001.

The table below shows the PM items serviced by the service technician.

After completing a PM procedure, reset the PM counter for the replaced part with SP7-804.

- 7-804-2: Transfer roller
- 7-804-3: Paper feed roller
- 7-804-4: Fusing unit.

Main

Symbol keys: C: Clean/R: Replace/L: Lubricate/I: Inspect

ltem	90K	EM	Quantity	Remarks	
Paper Feed					
Paper Feed Roller	R	С	1	Clean with water	
Friction Pad	R	С	1	Clean with water	
Registration Roller	С	С	1	Clean with water	
Bottom Plate Pad	С	С	1	Clean with water	
Around the Drum	3	·		·	
Transfer Roller	R		1		
Fusing Unit and Paper Exit					
Hot Roller	R		1		
Pressure Roller	R		1		
Hot Roller Strippers	R		5		
Fusing Thermistor	R	С	1	Clean with alcohol if necessary.	
Bushings - Hot Roller	R		2		
Bushings - Pressure Roller	R		2		

ltem	90K	EM	Quantity	Remarks
Fusing Entrance and Exit Guide Plates	С		1 each	Clean with water or alcohol
Fusing Unit	R		1	
Other				
PSU Fan Filter	R		1	

Paper Feed Unit (Option)

Symbol keys: C: Clean/R: Replace/L: Lub	pricate / I: Inspect
---	----------------------

ltem	90K	EM	Quantity	Remarks
Paper Feed				
Paper Feed Roller	R	С	1	Clean with water
Friction Pad	R	С	1	Clean with water
Bottom Plate Pad	С	С	1	Clean with water

3. Preventive Maintenance

4. Replacement and Adjustment

General

• Turn off the main power switch and unplug the machine before attempting any of the procedures in this section.

Precautions on Disassembly

Use extreme caution when removing and replacing components. The cables in the machine are located very close to moving parts; proper routing is a must.

After components have been removed, any cables that have been displaced during the procedure must be restored as close as possible to their original positions. Before removing any component from the machine, note any cable routings that may be affected.

Before servicing the machine:

- 1. Verify that documents are not stored in memory.
- 2. Remove the toner cartridge before you remove parts.
- 3. Unplug the power cord.
- 4. Work on a flat and clean surface.
- 5. Replace with authorized components only.
- 6. Do not force plastic material components.

Make sure all components are returned to their original positions.

Laser unit

- Do not loosen or adjust the screws securing the LD drive board on the LD unit. Doing so will throw the LD unit out of adjustment.
- 2. Do not adjust the variable resistors on the LD unit, as these are permanently adjusted at the factory. If replacement of the LD drive board is necessary, replace the entire LD unit.
- 3. Keep the polygon mirror and toroidal lens free of dust. Laser performance is very sensitive to dust on these components.
- 4. Do not touch the shield glass or the surface of the polygon mirror with bare hands.
- 5. Do not adjust the Laser Synchronization detector on the LD unit, as these are permanently adjusted at the factory. If the position of the Laser Synchronization detector has changed from the factory set position, SC 322 will be shown.

Transfer Roller

- 1. Never touch the surface of the transfer roller with bare hands.
- 2. Be careful not to scratch the transfer roller, as the surface is easily damaged.


Fusing

- 1. After installing the fusing thermistor, make sure that it is in contact with the hot roller and that the roller can rotate freely.
- 2. Be careful to avoid damage to the hot roller stripper pawls and their tension springs.
- 3. Do not touch the fusing lamp and rollers with bare hands.
- 4. Make sure that the fusing lamp is positioned correctly and that it does not touch the inner surface of the hot roller.

Paper Feed

- 1. Do not touch the surface of paper feed rollers.
- To avoid misfeeds, the side and end fences in each paper tray must be positioned correctly so as to align with loaded paper size.

Releasing Plastic Latches

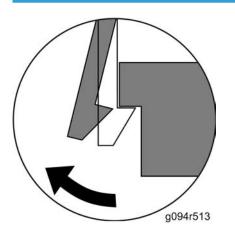

Many of the parts are held in place with plastic latches. The latches break easily, so release them carefully. To remove such parts, press the hook end of the latch away from the part to which it is latched.

After Servicing the Machine


- 1. Make sure all parts that require grounding are properly grounded.
- 2. Make sure the interlock switch is functioning.
- 3. Do not leave unused solder or parts inside the machine.
- 4. Do not leave any tools inside the machine.
- 5. Make sure all wires are properly connected and routed.
- 6. Make sure wires are not jammed between parts of the machine.

Special Tools


Part Number	Description	Q′ty	Remarks
B6455010	SD Card	1	Used in common with other printers.
B6456705	SD Card Adapter	1	Used in common with other printers.
B6456830	USB Reader/Writer	1	Used in common with other printers.
A0069104	Scanner Positioning Pin (4 pieces/set)	1	Used for LD Unit positioning. Used in common with the model K-P series and other models.

Exterior Covers

Operation Panel

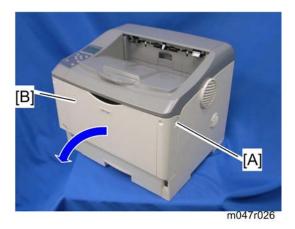

1. Press the button [A], and then open the front door [B].

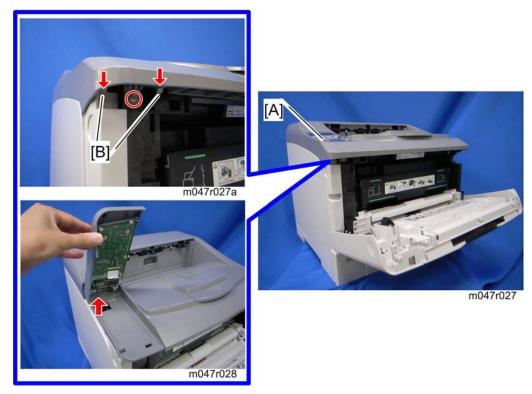

2. Operation panel [A] (🌮 x 1, hooks [B], 🕬 x 1)

4

Rear Cover




m047r030

1. Rear cover [A]

Upper Cover

- 1. Remove the AIO.
- 2. Rear cover (🖝 p.30)
- 3. Operation panel (🖝 p.29)

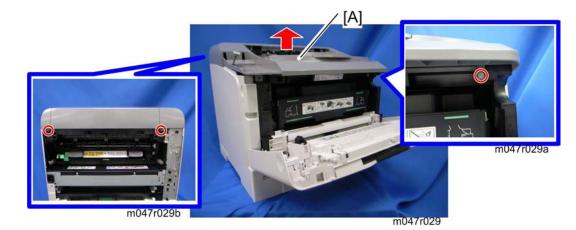

4. Upper cover [A] (🖉 x 3)

By-pass Tray

1. Open the front door.



m047r006

- 2. Release the both rails [A] (right and left) on the by-pass tray.
- 3. Close the by-pass tray cover [B].



m047r007

4. Lift the right edge of the by-pass tray cover [A], and then pull the by-pass tray cover to the front.




5. By-pass tray [A].

Left Cover

Note


- To remove the left cover, separate the machine from the optional paper feed unit first.
- 1. Upper cover (🖝 p.30)

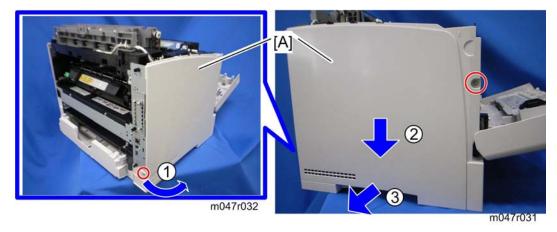

- 2. Left cover [A] (x 2)
 - [1]: First release the rear left part of the left cover.
 - [2]: Pull down the left cover
 - [3]: Then remove it.


Front Door

- 1. Remove the paper tray.
- 2. Upper cover (🖝 p.30)
- 3. Left cover (🖝 p.32)
- 4. By-pass tray (🖝 p.30)

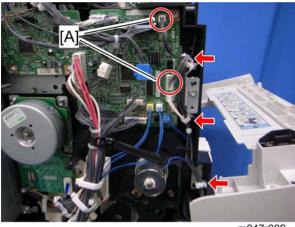

m047r009

5. Disconnect two connectors (CN7, CN17) [A] (🛱 x 3).

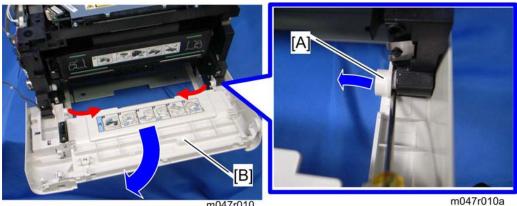

m047r010


- 6. Release the right hinge [A] of the front door.
- 7. Release the left hinge of the front door, and then remove the front door [B].

Right Cover

Note

- To remove the right cover, separate the machine from the optional paper feed unit first.
- 1. Upper cover (🖛 p.30)
- 2. Left cover (🖝 p.32)
- 3. By-pass tray (🖝 p.30)
- 4. Front door (🖛 p.32)

4

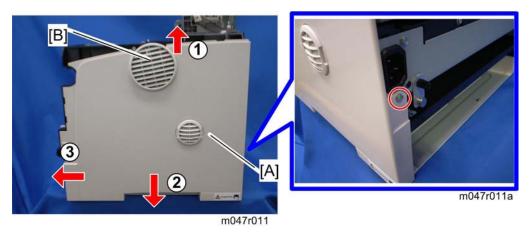

- 5. Lift the right cover [A], and then pull the top edge of the right cover slightly ($\mathscr{P} \times 1$, 3 tabs)
- 6. Slide the right cover to the front with pulling down the right cover (4 tabs).

Note

• The fan cover [B] falls after detaching the right cover form the machine. It is because that the fan cover is held only by the right cover.

Tab Locations on the Right Cover



There are seven tabs on the right cover. Each arrow shows the direction of the tab.

Laser Unit

WARNING

• Turn off the main power switch and unplug the machine before attempting any of the procedures in this section. Laser beams can seriously damage your eyes.

Caution Decal Location

Caution decals are attached as shown below.



m047r500


WARNING

• Be sure to turn off the main power switch and disconnect the power plug from the power outlet before beginning any disassembly or adjustment of the laser unit. This machine uses a class IIIb laser beam with a wavelength of 785 nm and an output of 6.2 mW. The laser can cause serious eye injury.

Polygon Mirror Motor

WARNING

- Turn off the main switch and unplug the machine before attempting any of the procedures in this section. Laser beams can seriously damage your eyes.
- 1. Upper cover (p.30)

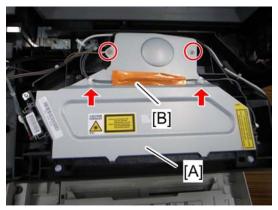



2. Polygon mirror cover [A] (x 2, tape [B] x 1, 🛱 x 2)





3. Polygon mirror motor [A] (x 4, w x 1)

Note


• Do not touch the surface of the mirror with bare hands.

Laser Unit


1. Open the front door.

4

- 2. Operation panel (🖝 p.29)
- 1. Upper cover (🖝 p.30)
- 2. Left cover (🖝 p.32)

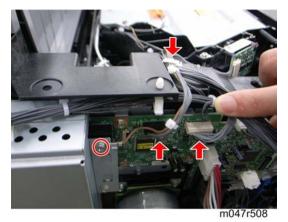


- 3. Disconnect the two harness ($\bigotimes x 1$) at the left side.
- 4. Remove the ground cable ($\mathscr{F} \times 1$).

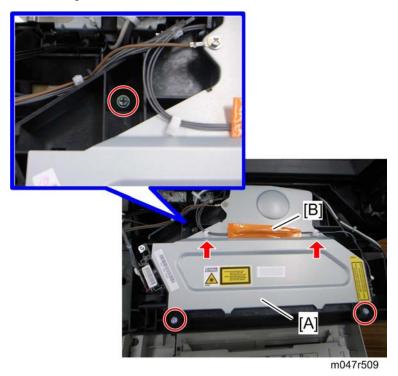

5. Laser unit [A] (🖉 x 3, tape [B] x 1, 🛱 x 2)


When reinstalling the laser unit

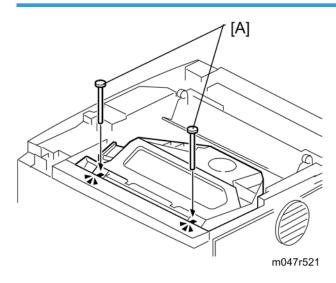

Use the scanner positioning pins (P/N: A0069104) to reinstall the unit. Set the positioning pins [A] as shown above. Then secure the laser unit.

Laser Diode Unit

1. Laser Unit (🖝 p.36)

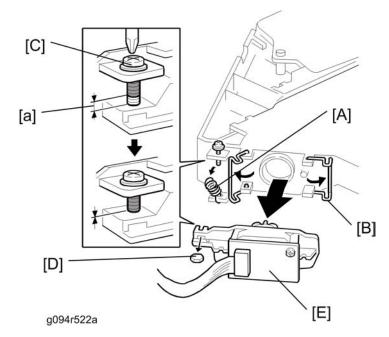

2. Spring [A]

- 3. LD unit holders [B] (x 2)
- 4. Loosen the screw [C].
- 5. Nut [D]
- 6. LD Unit [E] (💷 x 1)

Vote

- Do not remove the screws that secure the LD board.
- Do not touch any variable resistors on the LD board.


When installing the LD Unit:

Tighten the screw [C] until the unpainted portion of the screw [a] is not visible.

After installing the LD unit, check the test pattern for the final adjustment (see the following procedure).

Laser Beam Pitch Adjustment

- 1. Print out the following test patterns (A4 LEF or A3):
 - Select the test pattern "10.Stitch" with SP 5902-3.
 - After selecting a pattern, use SP 5902-1 to print one test pattern.
 - After completing the adjustment, reset SP 5902-3 to "NoPattern".

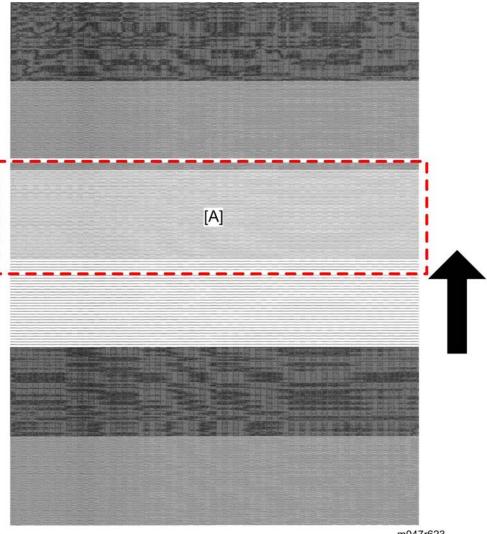


- m047r623
- 2. Check a test pattern. If the laser beam pitch is not correct, the images are as follows.
 - Third stripe [A] from the leading edge: Vertical black strips seem to appear.
- 3. Adjust the LD unit holder position: Tighten or loosen the screw [C] (see the previous page) until the printout appears as follows.
 - Third stripe [A] from the leading edge: The thin lines are of uniform thickness (no striping effect should appear on the printout).

Image Transfer

Transfer Roller

- 1. Open the front door.
- 2. Remove the AIO.

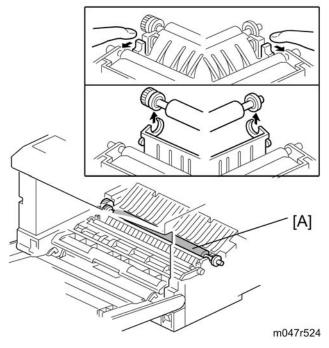


3. Transfer roller [A]

Note

• Do not touch the transfer roller surface.

Toner End Sensor

- 1. Open the front door.
- 2. Remove the AIO.

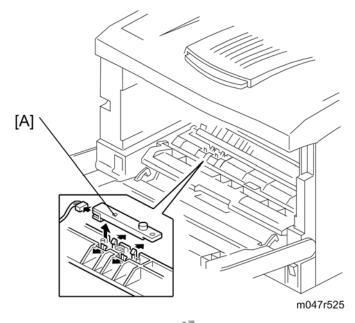


3. Toner end sensor [A] (4 hooks, 🕬 x 1)

4

Fusing

• Allow time for the unit to cool before doing the following procedure.

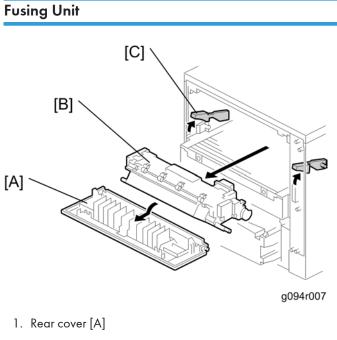


2. Fusing unit [B] (2 hooks [C])

Vote

• Lift both hooks before attempting to remove the fusing unit from the machine.

Hot Roller and Fusing Lamp

1. Fusing unit (🖝 p.43)

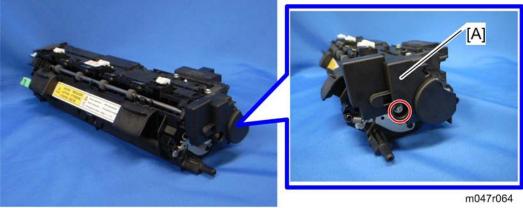


m047r063

2. Left cover [A] (* x 1)



m047r065

3. Release the fusing tension springs (left [A] and right [B]).

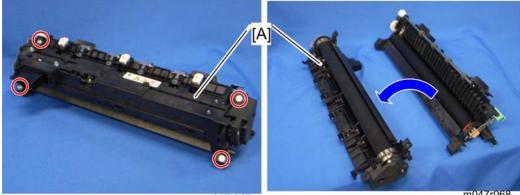

m047r067

m047r068

4. Upper fusing unit assembly [A] ($\mathscr{P} \times 4$)

Note


- Remove both springs before taking apart the fusing unit assembly. The reason for this is to relieve pressure on the unit.
- When reinstalling the fusing unit assembly, install both springs last. The reason for this is to reset the springs back to their default position.



m047r069


4

- 5. Upper guide plate [A] (hooks)
- 6. Right cover [B] (**2** x 1)

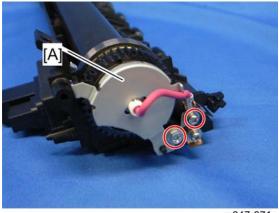

m047r071

7. Left lamp holder [A] (🖉 x 2)

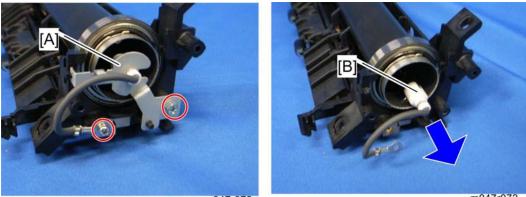




m047r073

- 8. Right lamp holder [A] (🖉 x 2)
- 9. Fusing Lamp [B]

Note

• The colored cable must be at the hot roller gear side.

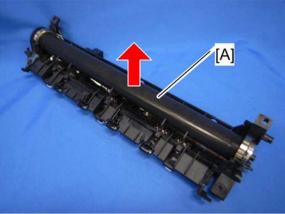

m047r074


10. Hot roller assembly [A]



- 11. Remove the gear and bearings (left and right) (ring pin x 2)
- 12. Hot roller [A]
- Note
 - Before installing the new hot roller, peel off 3 cm (1 inch) from both ends of the protective sheet on the new hot roller. Make sure to remove the rest of the paper before starting the machine.

Pressure Roller

- 1. Fusing unit (🖝 p.43)
- 2. Upper fusing unit assembly (🖝 p.43 "Hot Roller and Fusing Lamp")

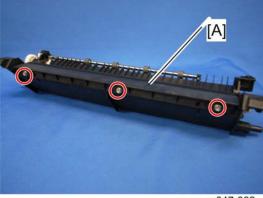


m047r082

3. Lower guide plate [A] (🖉 x 3)




merrere

- 4. Pressure roller levers [A] (spring x 1 each)
- 5. Bushings [B]

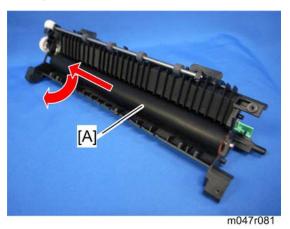

6. Pressure roller [A]

When reassembling the fusing unit

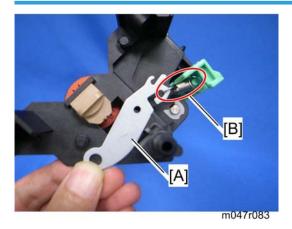


When attaching the pressure roller lever to the lower fusing unit assembly, attach the spring between the pressure roller lever and fusing unit first. If you try to attach the spring after attaching the pressure roller lever to the fusing unit, it is difficult to install the spring.

Thermistor and Thermostat

Thermostat

1. Upper fusing unit assembly (🖝 p.43 "Hot Roller and Fusing Lamp")

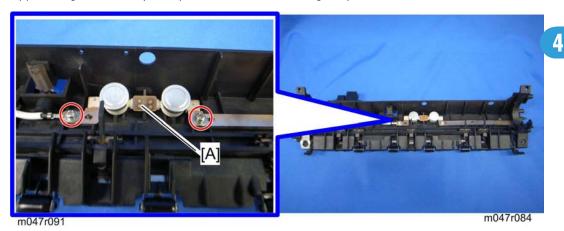


2. Thermostat [A] (x 2)

Note

- Do not touch the thermostat with your hands.
- Do not re-use a thermostat that is already opened. Safety is not guaranteed if you do this.


Thermistor

1. Upper fusing unit assembly (🖝 p.43 "Hot Roller and Fusing Lamp")

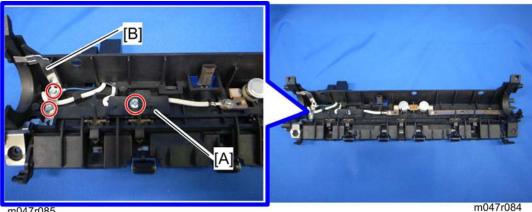


m047r085

- 2. Inner wire cover [A] (x 1)
- 3. Grounding plate [B] (x 2, 1 wire)

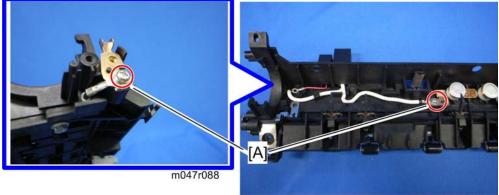


m047r087

4. Remove two screws [A] of the fusing unit connector.

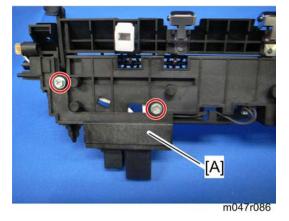


5. Upper wire cover [A] on the top of the fusing upper unit assembly ($ot\!\!\!/ x 2$)

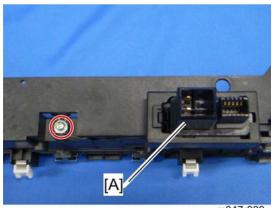

m047r089

6. Fusing unit connector [A] (x 1, 2 hooks)

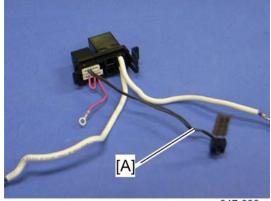

m047r090

7. Thermistor [A] (🖗 x 1, 1 harness)

Vote

• When removing the thermistor, remove the entire unit first and then separate it into two parts.

Hot Roller Strippers

1. Hot roller (🖝 p.43 "Hot Roller and Fusing Lamp")




m047r092

2. Hot roller strippers [A] (1 spring each [B])

Paper Feed

Paper Feed Roller


1. Pull out the paper tray.

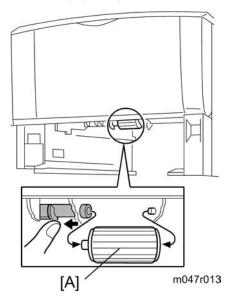

2. Paper feed roller [A]

Friction Pad

1. Pull out the paper tray.

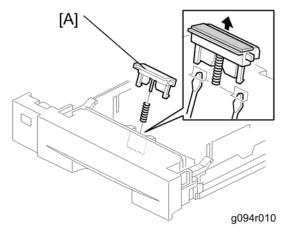

2. Friction pad [A] (2 hooks, 1 spring)

Vote


• Remove the paper tray unit from the machine before removing the friction pad.

When reinstalling the friction pad follow this order

- 1. Replace the spring.
- 2. Insert the right side of the friction pad first followed by the left side.
- 3. Gently push the friction pad down into the slot and then pull forward very slightly.

Paper End Sensor


1. Pull out the paper tray.

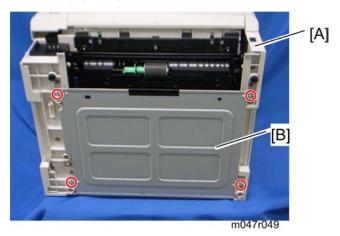

- 2. Set the machine [A] on the table with the rear side facing down.
- 3. Bottom plate [B] (*P* x 4)



4. Paper feed guide plate [A] ($\mathscr{F} \times 2$)

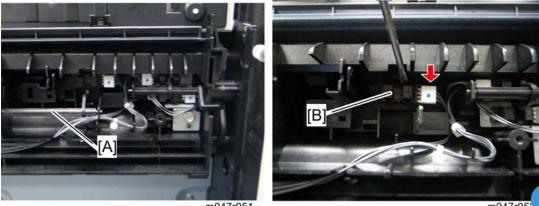

m047r051


m047r052

4

- 5. Paper end feeler [A]
- 6. Paper end sensor [B] (hooks, 💷 x 1)

Remaining Paper Sensors

- 1. Pull out the paper tray.
- 2. Bottom plate (p.54 "Paper End Sensor")
- 3. Paper feed guide plate (🖝 p.54 "Paper End Sensor")

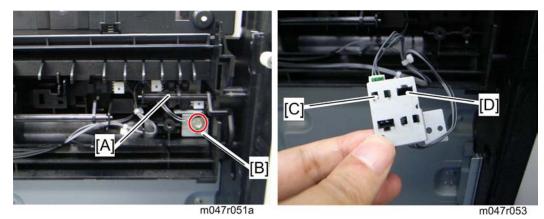


- 4. Paper remaining feeler [A]
- 5. Sensor bracket [B] (P x 1)
- 6. Remaining paper sensor 1 [C] (hooks, 💷 x 1)
- 7. Remaining paper sensor 2 [D] (hooks, 💷 x 1)

By-pass Feed

By-pass Feed Unit


- 1. Upper cover (🖝 p.30)
- 2. Left Cover (🖝 p.32)
- 3. Front door (🖝 p.32)

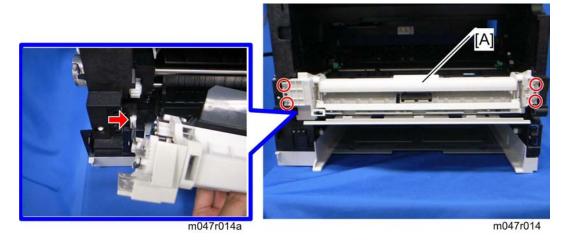

4. By-pass feed unit [A] (* x 4, 🕬 x 1)


By-pass Feed Roller

1. By-pass feed unit (🖝 p.56)

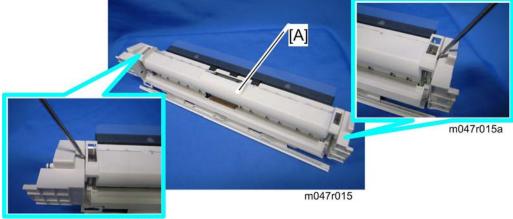


m047r015b

2. By-pass feed upper cover [A].

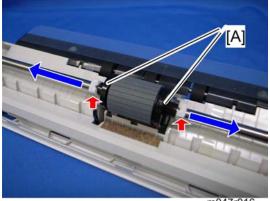

m047r016

3. Slide the by-pass feed roller holders [A] to the both edges (${{\ensuremath{\boxtimes}}\, x}$ 1 each).

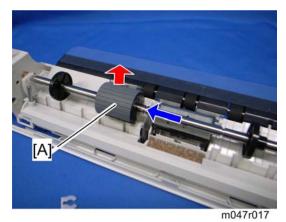

4. Slide the by-pass feed roller [A] to the left, and then remove it.


By-pass Friction Pad

- 1. By-pass feed unit (🖝 p.56)
- 2. By-pass feed roller (🖝 p.56)




m047r018


3. Bushing [A] at the right edge of the by-pass feed roller shaft (Clip x 1)

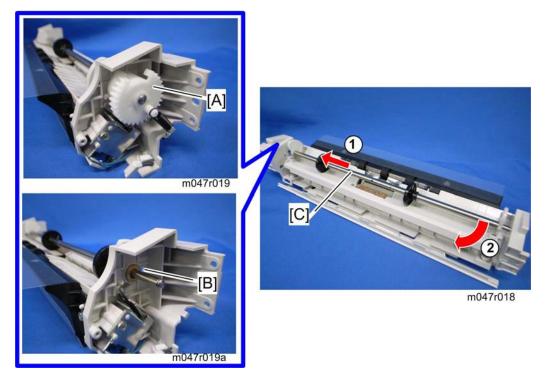

- 4. By-pass feed gear [A] (spring x 1, clip x 1)
- 5. Bushing [B] at the left edge of the by-pass feed roller shaft
- 6. Slide the by-pass feed roller shaft [C] to the left, and then remove it.

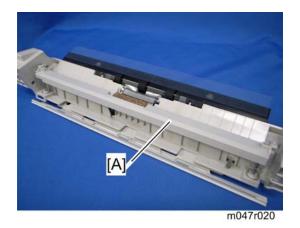

7. Bottom bar [A] with two springs

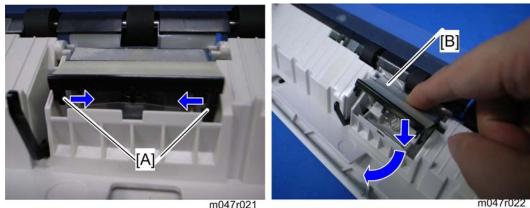


m047r021

4


- 8. Release the two hooks [A].
- 9. Press down the by-pass friction pad [B], and then pull it out (spring x 1).

By-pass Paper Set Sensor

1. By-pass feed unit (🖝 p.56)

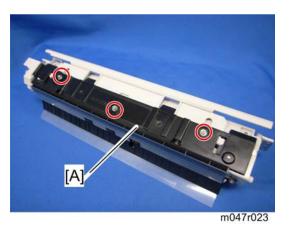


2. By-pass guide plate [A] (🕅 x 3)

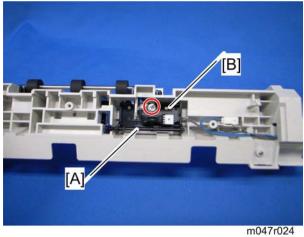

1110471

- 3. Feeler [A]
- 4. Sensor base [B] (x 1)

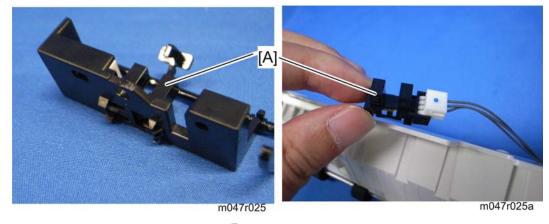

5. By-pass paper set sensor [A] (hook x 3, 🕬 x 1)

Paper Exit

Paper Exit Sensor

1. Upper cover (🖝 p.30)



m047r033a

m047r033

4

2. Paper exit sensor [A] (hooks, 💷 x 1)

Overflow Sensor

1. Upper cover (**•** p.30)



m047r034

2. Overflow sensor [A] (hooks, 📬 x 1)

Paper Exit Unit

1. Upper cover (🖝 p.30)



- 2. Disconnect two connectors and release four clamps.
- 3. Take aside the harnesses on the paper exit unit [A].



m047r037a

m047r036

- 4. Remove four screws on the paper exit unit.
- 5. Remove the gear [A] (hook) and bushing [B].

Note


- This gear is engaged with other drive gears through the timing belt. Check if the timing belt is correctly installed after installing the paper exit unit.
- 6. Paper exit unit [C]

Fusing Exit Sensor

- 1. Upper cover (🖝 p.30)
- 2. Paper exit unit (🖝 p.61)



- m047r038a
- 3. Sensor box [A] (hooks)

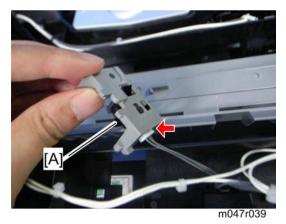


4. Fusing exit sensor [A] (hooks, 💷 x 1)

m047r038

Electrical Components

Printer Controller Board

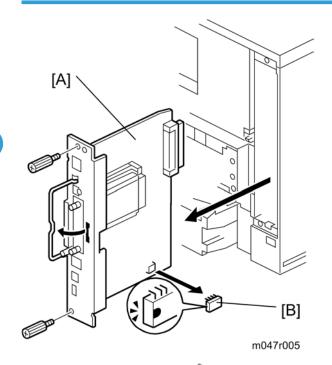

- 1. Printer controller board [A] ($\mathscr{F} \times 2$)
- 2. NVRAM [B]

Note


• Remove the NVRAM from the old printer controller board and insert it on the new board.

• Note

- Remove the Duplex Unit before you remove the controller board.
- The screws on the printer controller board are hand screws. Gently turn these screws when removing the printer control board.
- Pull on the handle to remove the printer controller board from the machine.

Engine Board

- 1. Left cover (🖝 p.32)
- 2. Printer controller board (🖝 p.64)

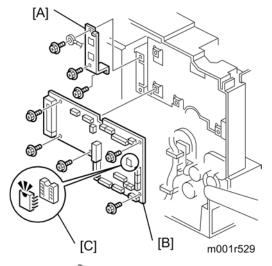


- 3. Bracket [A] (x 2, 1 grounding wire)
- 4. Engine board [B] (*P* x 5, all connectors)

Vote

• Remove the NVRAM [C] from the old engine board and insert it on the new board.

Main Motor

1. Left cover (🖝 p.32)

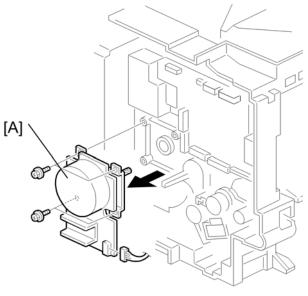


g094r530

2. Main motor [A] (🌶 x 4, 📫 x 1)

Relay Clutch

1. Left cover (🖝 p.32)

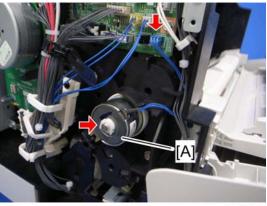


m047r056

2. Relay clutch [A] (💷 x 1, 🕅 x 1)


Paper Feed Clutch

1. Left cover (🖝 p.32)

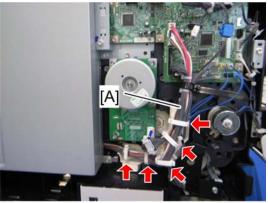


m047r058

2. Release the harness [A] (🗟 x 5, all connectors)

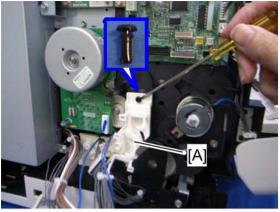


m047r057

3. Harness guide [A] (Rivet screw x 1)

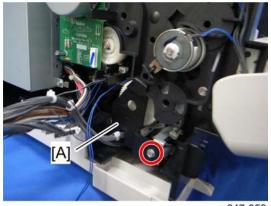


m047r059

4. Clutch cover [A] (🖗 x 1)

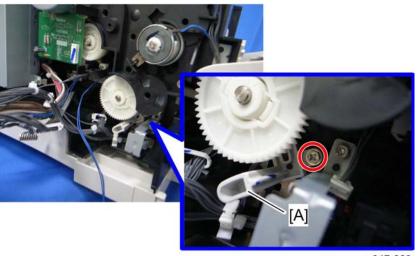

m047r060


5. Clutch holder [A] (x 1)

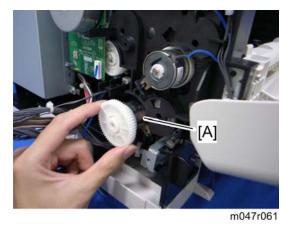

6. Paper feed clutch [A]

Registration Clutch

- 1. Left cover (🖝 p.32)
- 2. Main motor (🖝 p.65)
- 3. Harness guide (🖝 p.66 "Paper Feed Clutch")

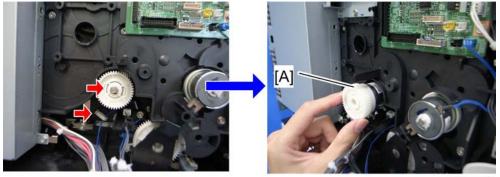


m047r062

4. Registration clutch [A] (⇔ x 1, ∞ x 1)


Registration Sensor

- 1. Left cover (🖝 p.32)
- 2. Harness guide (🖛 p.66)

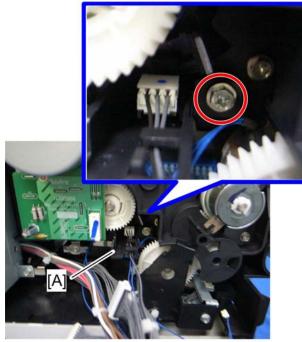

m047r054

3. Sensor holder [A] (🖉 x 1)

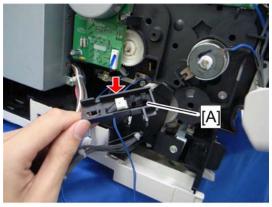


m047r055


4. Registration sensor [A] (hooks, 📬 x 1)

Power Supply Board and High Voltage Supply Board

- 1. Left cover (🖝 p.32)
- 2. Fusing unit (p.43)

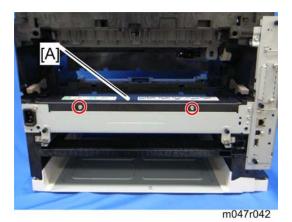


3. PSU cover [A] (🖗 x 2)

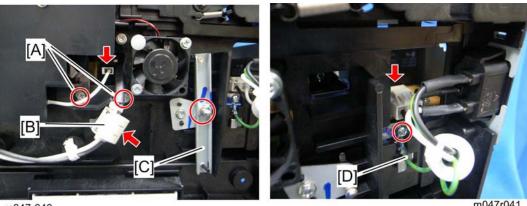


m047r040

m047r041

- 4. Remove the two screws [A] at the left of the machine.
- 5. Disconnect three cables (pointed by arrow mark).
 - Disconnect the cable [B] from the rear of the machine.
- 6. Main switch link [C] (🕅 x 1)
- 7. Ground cable [D] (🖗 x 1: washer screw)

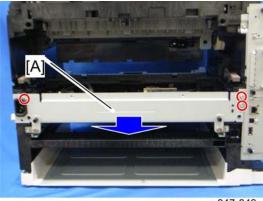


- m047r043
- 8. PSU assembly [A] (x 3, 🛱 x 3, all connectors)

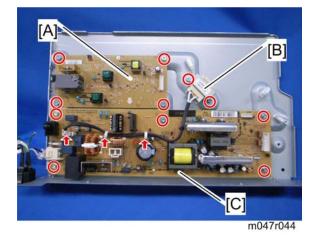

- 9. High voltage supply board [A] ($\mathscr{F} \ge 4$)
- 10. Choke coil [B] (🖉 x 2, 🖼 x 2, 💷 x 1)
 - The choke coil [B] is only for EU model.
- 11. Power supply board [C] (x 5)

Fusing Pressure Sensor


1. Right cover (🖝 p.33)

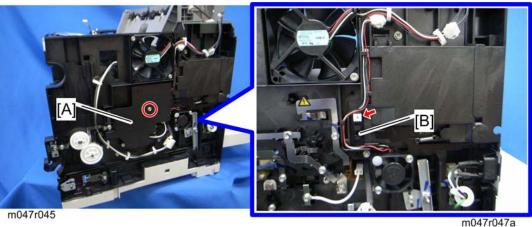

- 2. Terminal cover [A] (P x 1)
- 3. Fusing pressure sensor [B] (hooks, 💷 x 1)

Fusing Fan

1. Right cover (🖝 p.33)

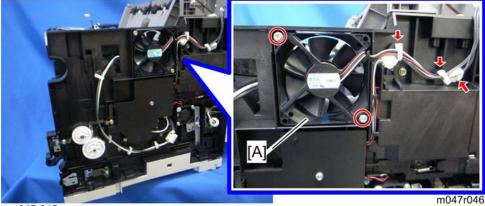

m047r045


2. Fusing fan [A] (🌶 x 2, 🛱 x 2, 📫 x 1)

Note

• The fusing fan must be reinstalled with the decal facing right. Do not reinstall the fusing fan opposite to the original position.

PSU Fan

1. Right cover (🖝 p.33)

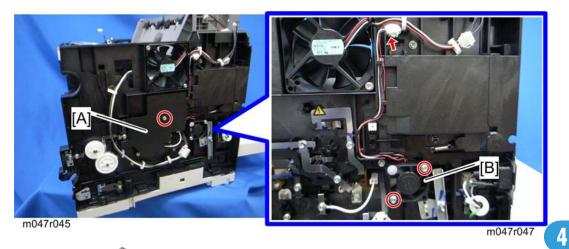

- 2. Terminal cover [A] (🌶 x 1)
- 3. PSU fan [B] (⋛ x 2, 💷 x 1)

Note

• The PSU fan must be reinstalled with the decal facing left. Do not reinstall the PSU fan opposite to the original position.

Image Adjustment


Registration Adjustment


The registration is adjusted using the user mode; "Maintenance-Registration". For details, see the Printer Reference operation manual.

Parallelogram Image Adjustment

Note

- Use the scanner positioning pin (P/N: A0069104) for the adjustment.
- Do the following procedure if a parallelogram is printed while adjusting the printing registration using a trimming pattern.

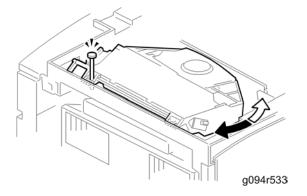

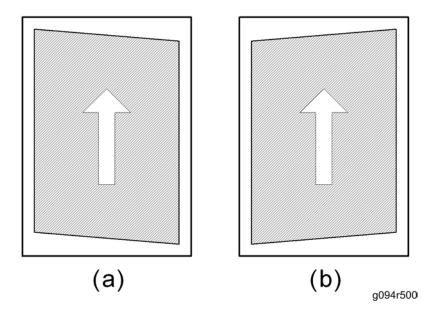

- 1. Remove the upper cover (🖝 p.30)
- 2. Put a positioning pin in one of the holes.
- 3. Loosen four screws and move the laser unit.
- 4. Tighten the laser unit.
- 5. Print the trimming area pattern to check the image. If it is still the same, repeat steps 3 to 5.

4. Replacement and Adjustment

5. System Maintenance Reference


Service Program Mode

SP Tables

See "Appendices" for the following information:

- Printer Controller Service Mode Tables
- Engine Mode Tables

- Before accessing the service menu, do the following:
- Confirm that there is no print data in the printer buffer (the Data In LED must not be lit or blinking).
- If there is some data in the buffer, wait until all data has been printed.

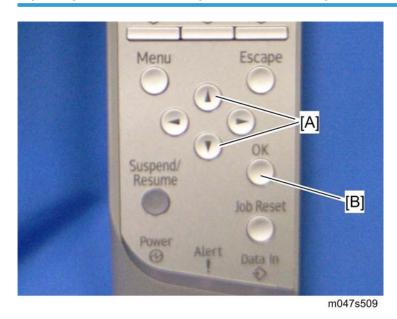

Inputting a Value or Setting for a Service Program

Enter the required program mode as explained above. The setting appearing on the display is the current setting.

Select the required setting using the "Up/Down arrow" keys [A], then press the "OK" key [B]. The previous value remains if the "OK" key [B] is not pressed.

Exiting Service Mode

Select "3. End" from the service mode main menu, then press the "OK" key.

Updating the Firmware

• Never turn off the machine while downloading the firmware.

Type of Firmware

The table lists the firmware programs used by the machine. All programs can fit on one SD card.

Program	What It Updates
Engine	Printer engine control
Network DocBox	Document server firmware
Printer	Printer feature applications
System	Printer management
Network Support	Network application
Update Mode Err.	Displays if an error occurs.
Verify Data	Verifies that the update executed successfully.

Precautions

Handling SD Cards

Observe these precautions when handling SD cards:

- Always turn off the main power switch before you insert or remove an SD card. Data on an SD card can be corrupted if you insert or remove an SD card while the main power switch is on.
- Never turn off the main power switch during downloading.
- Keep SD cards in a safe location. Never store SD cards in locations where they will be exposed to:
 - High temperature, high humidity
 - Direct sunlight
 - Strong vibrations
 - Magnetic fields generated by machines or electronic devices
- Handle SD cards carefully to avoid dropping them, bending, scratching, etc.

Upload/Download

In this service manual, "upload" and "download" have these meanings:

- Upload: Copying data from the printer to the SD card
- Download: Copying data from the SD card to the printer

Network Connection


A print job sent to the machine during firmware update will interrupt the procedure. Before you start the firmware update procedure tell the operator:

- The machine must be disconnected from the network.
- The machine cannot be used during firmware update.

Machine Firmware Update

Each program must be updated one a time. Follow the procedure below to update one program.

- 1. Prepare a card that contains the required program.
- 2. If the machine is on, switch it off.

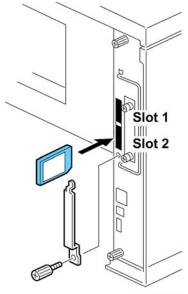

m001s510

- 3. Remove the SD card cover (*P* x 1).
- 4. Insert the SD card into Slot 2.
- 5. Turn on the power.
- 6. "Please Wait" appears, then you will see "Preparing to Start Firmware Update...".

- 7. Firmware names are displayed on the LCD.
- 8. Scroll to the program to upgrade, then press [OK].
- 9. Press the [UPDATE] to start the upgrade.

Loading	
* * * * * * * * * * * * * * * * * *	
Update done	
XXXXXXXXX	

- 10. "Update done" appears on the LCD after completing the firmware updating.
- 11. Turn off the power, remove the SD card from Slot 2, and turn on the power.

-or-

If you intend to update another program, leave the SD card in Slot 2 and turn off and on the power.

Note


• The firmware has not updated successfully if the "Update done" message does not appear. If this occurs, turn the machine power off/on and repeat the procedure.

Error Recovery

Controller

If an error occurs during updating the controller firmware, use the following procedure. This procedure will force the controller to boot from the firmware SD card.

- 1. Prepare an SD card with the required controller firmware version.
- 2. Turn off the machine and remove the controller.

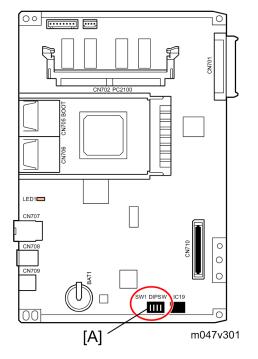

- 3. Change the DIP Switch 1 [A] No.1 setting to "OFF".
- 4. Put back the controller
- 5. Insert the SD card into the SD slot 2 (lower) on the controller.
- 6. Turn on the machine. The machine automatically starts to download the software.
- 7. When downloading is finished, "Updated" is displayed.
- 8. Turn off the machine, then remove the card.
- 9. Reset the DIP Switch 2 No.1 setting to "ON" and then put back the controller.

Note

- You must perform steps 5 to 8 for all three firmware cards.
- The default settings of the DIP Switches are as followed; "No.1: ON" and "No. 2 to 4: OFF ".
- 10. Turn on the machine, and print the service summary report.

Engine

If a download attempt failed, try downloading the new firmware again using the normal firmware download procedure described in "Machine Firmware Update".

Power-On Self Tests

The controller tests the following devices at power-on. If an error is detected, an error code is stored in the controller board.


- CPU, ASIC and clock
- Flash ROM
- Resident and optional SDRAM
- NIB
- IEEE 802.11a/g, Gigabit Ethernet or IEEE1284 (if installed)
- NVRAM
- Optional HDD (if installed)

To check the error codes, use engine SP 7832.

Refer to "Controller Error" for details about the error codes.

Dip Switches

Controller Board

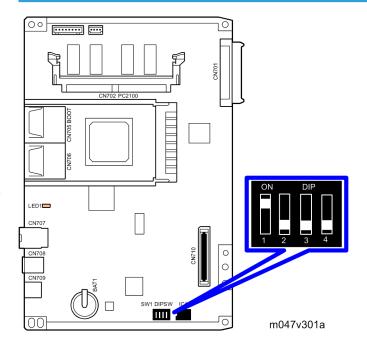

DIP Switch 1 (Bit 1) on the controller board is used for the error recovery after the firmware updating procedure failed.

Note

• The default settings of the DIP Switches are as followed; "No.1: ON" and "No. 2 to 4: OFF ".

6. Troubleshooting

Service Call Conditions

For "Service Call Conditions" information, see "Appendices".

Electrical Component Defects

Sensors

Component	CN	Condition	Symptom
	CN114.00	Open	The Paper Jam indicator will light whenever a print is made.
Paper Exit	CN14-20	Shorted	The Paper Jam indicator lights even if there is no paper.
Paper Overflow	CN4-30	Open	The paper overflow message is not displayed even when a paper overflow condition exists.
		Shorted	The paper overflow message is displayed.
г. г.,		Open	The Paper Jam indicator will light whenever a print is made.
Fusing Exit	CN5-25	Shorted	The Paper Jam indicator lights even if there is no paper.
	0114.05	Open	The Paper Jam indicator will light whenever a print is made.
Registration	CN14-35	Shorted	The Paper Jam indicator lights even if there is no paper.
Remaining paper	CN114.04	Open	The Paper End indicator lights even if paper is placed in the 1st paper tray.
sensor 1	CN14-26	Shorted	The Paper End indicator does not light even if there is no paper in the 1st paper tray.
Remaining paper	CN114.20	Open	The machine cannot determine the paper near-
sensor 2	CN14-29	Shorted	end condition properly.
Den es En d	CN14-23	Open	The Paper End indicator lights even if paper is placed in the 1st paper tray.
Paper End	CIN14-23	Shorted	The Paper End indicator does not light even if there is no paper in the 1st paper tray.

Component	CN	Condition	Symptom
Toner End	CN14-33	High	Toner near-end (toner end) is not detected.
	CIN 14-33	Low	The add toner message is displayed.
Fusing Pressure Sensor	Pressure Sensor CN5-19		Envelop mode is not selected even if the pressure lever at the fusing unit is set to the envelop mode.
	CN3-19	Shorted	Envelop mode is always selected even if the pressure lever at the fusing unit is set to the other paper mode.

Note

• The CN numbers describe the connector number on the engine board.

Switches

Component	CN	Condition Symptom	
Front Cover Safety	CNI0 1 /2	Open	The Front Cover Open message is not displayed even if the front cover is opened.
	CN8-1/3	Shorted	The Front Cover Open message is displayed even if the front cover is closed.
Rear Cover and Paper Exit Cover Safety	er CN4-1/5,	Open	The Cover Open (Rear Cover or Paper Exit Cover) message is not displayed even if the rear cover or paper exit cover is opened.
	CN4-3/T2	Shorted	The Cover Open (Rear Cover or Paper Exit Cover) message is displayed even if the rear cover or paper exit cover is closed.

Note

• The CN numbers describe the connector number on the engine board (except for the main switch).

Blown Fuse Conditions

CAUTION

• Use a correct rating fuse for the fuse replacement. Never use a wrong rating fuse. If do so, the machine may be damaged.

Fuse	Ro	iting	C
ruse	120 V	220 - 240 V	Symptom when turning on the main switch
Power Supply Bo	pard		
FU1	15 A/125 V	8A/250V	Machine does not start.
FU2	5.0 A/125 V	3.15 A/250 V	Machine does not start.
FU3	4 A/125 V	4 A/250 V	Machine does not start.
FU4	5 A/125 V	5 A/250 V	Machine does not start.
FU5	6.3V/125V	6.3 A/250V	"Please Wait" is displayed, but machine does not start or SC is issued on the LCD.

No LEDs are used for this model.

7. Energy Saving

Energy Save

Energy Saver Modes

The customer should use the energy saver mode correctly to save energy and protect the environment.

Power Consump. Operating Stand-by Mode Warm-up Energy Saver Timer 1 - 60 min. Plug-in Timer starts Mode Energy Saver Mode Time

The area shaded grey in this diagram represents the amount of energy that is saved.

Energy Saver Mode Setting

"Energy Saver" mode settings can be adjustable with User Mode (Menu > System > Energy Saver).

Energy Saver On/Off

You can specify whether or not to switch Energy Saver.

- On (Default)
- Off

Energy Saver Timer

Specify time for entering the Energy Saver mode.

• 1 minute (Default)

- 5 minutes
- 15 minutes
- 30 minutes
- 45 minutes
- 60 minutes

Return to Standby Mode

The machine returns to standby mode from energy saver mode after 10 sec.




Paper Save

Effectiveness of Duplex/Combine Function

Duplexing and the combine functions reduce the amount of paper used. This means that less energy overall is used for paper production, which improves the environment.


1. Duplex:

Reduce paper volume in half!

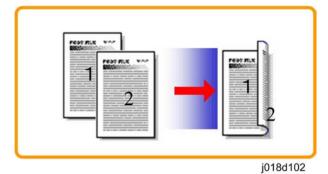


2. Combine mode:

Reduce paper volume in half!

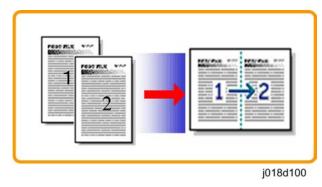

3. Duplex + Combine:

Using both features together can further reduce paper volume by 3/4!

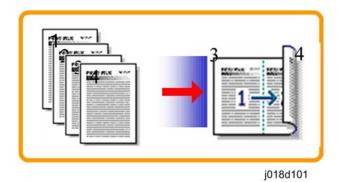

To check the paper consumption, look at the total counter and the duplex counter.

The total counter counts all pages printed.

- For one duplex page, the total counter goes up by 2.
- For a duplex job of a three-page original, the total counter goes up by 3.

The duplex counter counts pages that have images on both sides.

- For one duplex page, the duplex counter goes up by 1.
- For a duplex job of a three-page original, the duplex counter will only increase by 1, even though two sheets are used.

Recommendation

Please explain these features to the customers so they can reduce their paper usage.

Duplex Mode Tables

The following table shows paper savings and how the counters increase for some simple examples of single-sided and duplex jobs

Duplex mode:

Originals	Simplex Sheet used	Duplex Sheets used	Paper Saved	Total counter	Duplex counter
1	1	1	0	1	0
2	2	1	1	2	1
3	3	2	1	3	1
4	4	2	2	4	2
5	5	3	2	5	2

Originals	Simplex Sheet used	Duplex Sheets used	Paper Saved	Total counter	Duplex counter
10	10	5	5	10	5
20	20	10	10	20	10

If combine mode is used, the total and duplex counters work in the same way as explained previously. The following table shows paper savings and how the counters increase for some simple examples of duplex/ combine jobs.

2 in 1 mode:

Originals	Simplex Sheet used	Duplex Sheets used	Paper Saved	Total counter	Duplex counter
1	1	1	0	1	1
2	2	1	1	1	1
3	3	2	1	2	2
4	4	2	2	2	2
5	5	3	2	3	2
10	10	5	5	5	5
20	20	10	10	10	10

Duplex + 2 in 1 mode:

Originals	Simplex Sheet used	Duplex Sheets used	Paper Saved	Total counter	Duplex counter
1	1	1	0	1	1
2	2	1	1	1	1
3	3	1	2	2	2
4	4	1	3	2	2
5	5	2	3	3	3
6	6	2	4	3	3
7	7	2	5	4	4

Originals	Simplex Sheet used	Duplex Sheets used	Paper Saved	Total counter	Duplex counter
8	8	2	6	4	4
9	9	3	6	5	5
10	10	3	7	5	5
11	11	3	8	6	6
12	12	3	9	6	6

Model Kr-P2 Machine Code: M047

Appendices

15 December, 2009

TABLE OF CONTENTS

1. Appendix: Specifications

General Specifications	3
Mainframe	3
Controller	5
Operation Panel LED Specifications	7
Supported Paper Sizes	7
2. Appendix: Troubleshooting Guide	
Service Call Conditions	11
Summary	11
SC Code Descriptions	11
3. Appendix: SP Mode Tables	
SP Tables	21
Printer Controller Service Mode	21
Printer Engine Service Mode	27
INDEX	103

General Specifications

Mainframe

Configuration	Desktop	Desktop				
Paper size	DLT – A6 SEF					
Technology	Laser beam scanning (Laser class: Class 1) & Electro photographic printing Dual component toner development AIO is used					
Print Resolution	300/600/1200 dpi					
Smoothing	Yes (on, off)					
Continuous Print Speed	LEF A4 Mono 35 ppm					
Continuous Frint Speed	LT Mono 35 ppm					
	32 ppm from standard tray					
Duplex Print Speed (A4-LEF)	32 ppm from first optional paper tray					
	27 ppm from second optional paper tray					
First Print Speed	6.8 seconds or less (A4/1	LT, LEF from standard tray)				
	Paper Tray	60-216 g/m ² (16-57 lb.)				
Conv Panar Waight	By-pass tray	52-216 g/m ² (14-57 lb.)				
Copy Paper Weight	Optional PFU	60-216 g/m ² (16-57 lb.)				
	Duplex	64-105 g/m ² (17-28 lb.)				
Warm-up Time	19 seconds or less from p 12 seconds or less from e					

Standard tray	A3/DLT – A5	
By-pass tray	A3/DLT – A6, Free size	
By-pass tray-Custom size paper	Length: 148 - 432 mm (5.8" - 17"), Width: 64 - 305 mm (2.5" - 12"), Com#10, C5, C6, DL. Monarch	
Optional Envelope Feeder	Com#10, C5, C6, DL. Monarch	
Optional paper tray unit Up to 2 units can be installed.	A3/DLT – A5	
Standard tray and Optional paper trays	500 sheets (80 g/m ² , 20 lb.)	
By-pass tray	100 sheets (80 g/m ² , 20 lb.)	
Optional Envelope feeder	60 envelopes	
Maximum paper input	1600 sheets	
A3: 250 sheets A4 LEF: 500 sheets		
Electric Counter		
Energy Star Tier 2 or Ver. 1.1		
	By-pass tray By-pass tray-Custom size paper Optional Envelope Feeder Optional paper tray unit Up to 2 units can be installed. Standard tray and Optional paper trays By-pass tray Optional Envelope feeder Maximum paper input A3: 250 sheets A4 LEF: 500 sheets Electric Counter	

Power Source	North America: 120 V, 8.4 A or more, 60 Hz			
rower source	Europe: 220 - 240 V, 4	4.5 A or more, 50/60 Hz	Z	
Power Consumption	NA	Main Unit (including NIB)	Full system	
NA Maxim	Maximum	870 W or less	880 W or less	
	Energy Saver	3.9 W or less	7.5 W or less	
Power Consumption	EU	Main Unit (including NIB)	Full system	
EU	Maximum	910 W or less	940 W or less	
	Energy Saver	3.9 W or less	7.5 W or less	

1

			Mainframe Only		Full System
Noise Emission	Printing		67 dB or less		71 dB or less
Noise Emission	Stand-by		40 dB or less		40 dB or less
	Energy Saver	40 dB or less 40 dB or less 40 dB or less 40 dB or less 55dB or less (Operating position) 30dB or less (Operating position)			
Sound Pressure Level	Printing	550	55dB or less (Operating position)		
Sound Pressure Level	Pressure Level Energy Saver	300	30dB or less (Operating position)		
Weight	22.5 Kg. 49.6 lb. (ir	nclud	ing P	aper Tray and AIC))
Dimensions	Excluding standard t	tray	ray 478 x 410 x 404 (mm). 18.8 x 16.1 x 15.9 (inch)		
(W x D x H)	Including standard tray		478 x 437 x 404 (mm). 18.8 x 17.2x 15.9 (inch)		

Controller

СРИ	RM7035 466	MHz	
Driventer	Standard	PCL5e/XL, IRIPS PS3/PDF, RPCS	
Printer Languages	Option	IPDS	
	RPCS	300/600/1200 dpi	
Develoption	PCL6	600/1200 dpi	
Resolution	PCL5e	300/600 dpi	
	PS3	300/600/1200 dpi	
	PCL	45 fonts + 13 International fonts	
	PS	80 fonts (Type 2:24, Type 14:112)	
Resident Fonts	Font Manager currency ok.	and 31 additional fonts for PCL to be loaded to the PC, Euro	
	Optional	OCR, Barcode	

	RPCS	Windows 2000/XP/Server2003/Vista/Server2008 (32bit) Windows XP/Server2003/Vista/Server2008(64bit)			
	PCL6	Windows 2000/XP/Server2003/Vista/Server2008 (32bit)			
		Windows XP/Server2003/Vista/Server2008(64bit)			
Drivers	PCL5e	Windows 2000/XP/Server2003/Vista/Server2008 (32bit)			
		Windows XP/Server2003/Vista/Server2008(64bit)			
	PS3	Windows 2000/XP/Server2003/Vista/Server2008 (32bit)			
		Windows XP/Server2003/Vista/Server2008(64bit)			
	Mac OS 8.6.0 or later, Mac OSX (10.1 or later)				
ROM	NAND Flash: 1	NAND Flash: 128 MB			
ĸOM	NOR Flash: 4MB				
RAM	Standard	256 MB			
	Maximum	512 MB (with optional memory)			
HDD	Option: 80 GB				
	Standard	USB 2.0, USB Host			
Interface	Standard	10BASE-T/100BASE-TX			
	Optional	Bi-directional IEEE1284, Gigabit Ethernet, IEEE802.11a/g			
Eirmuunna Llashata	SD card. One SD card holds all programs				
Firmware Update	RFU (Remote Firmware Update)				
Network Protocol	TCP/IP (includi	ing IPP), IPX/SPX, SMBI, Apple Talk			
NRS	Supported				
DESS	Supported				

• The machine has a maximum memory capacity of 512 MB. You must install the optional memory (256 MB) in the machine if you want to increase the machine memory.

Operation Panel LED Specifications

LED	Color	Appearance	Meaning
		Off	Power off or in Energy Saver mode
Power	Blue	Flashing	Warming up
		On	Power on and not in Energy Saver mode
		Off	No data
Data In	Blue	Flashing	Data being received or processed or the printer is spooling
		On	Data being received or processed; more data coming
		Off	Printer off-line
Suspend/ Resume	Blue	Flashing	Going off-line
Resonie		On	Ready to print
	Red/ Yellow	Off	No messages or error conditions requiring attention
Alert	Yellow	Flashing	Requiring service maintenance soon
	Red	On	Printer requires service

Supported Paper Sizes

Paper	Size (W x L)	Paper Trays Main Unit/Option		Bypass Tray	Env. Feeder	Duplex
		NA	EU/Asia	indy		
A3	297 x 420 mm	Y#/Y	Y/Y	Y#	N	Y
B4	257 x 364 mm	Y#/Y#	Y#/Y#	Y#	N	Y
A4 SEF	210 x 297 mm	Y#/Y	Y/Y	Y#	N	Y
A4 LEF	297 x 210 mm	Y/Y	Y/Y	Y#	Y	Y

Paper	Size (W x L)	Paper Trays Main Unit/Option		Bypass Tray	Env. Feeder	Duplex
		NA	EU/Asia	,		
B5 SEF	182 x 257 mm	Y#/Y#	Y#/Y#	Y#	N	Y
B5 LEF	257 x 182 mm	Y#/Y#	Y#/Y#	Y#	N	Y
B6 SEF	128 x 182 mm	YC	YC	YC	N	N
A5 SEF	148 x 210 mm	Y#	Y#	Y#	N	Y
A5 LEF	210 x 148 mm	Y#/N	Y/N	Y#	N	Y
A6 SEF	105 x 148 mm	N	Ν	YC	N	N
Ledger	11 x 17"	Y/Y	Y#/Y	Y#	N	Y
Legal	8.5 x 14"	Y/Y	Y#/Y	Y#	N	Y
Letter SEF	8.5 x 11"	Y/Y	Y/Y	Y#	N	Y
Letter LEF	11 x 8.5"	Y/Y	Y/Y	Y#	N	Y
Half Letter SEF	5.5 x 8.5"	N	Ν	Y#	N	N
Half Letter LEF	8.5 x 5.5"	N	Ν	N	N	N
Executive SEF	7.25 x 10.5"	Y#/Y#	Y#/Y#	Y#	N	N
Executive LEF	10.5 x 7.25"	Y#/Y#	Y#/Y#	Y#	N	Y
F	8 x 13"	Y#/Y#	Y#/Y#	Y#	N	Y
Foolscap	8.5 x 13"	Y/Y#	Y#/Y#	Y#	N	Y
Folio	8.25 x 13″	Y#/Y#	Y#/Y#	Y#	N	Y
Com10 Env.	4.125 x 9.5"	N	Ν	Y#	Y#	N
Monarch Env.	3.875 x 7.5"	N	Ν	Y#	Y#	N
C6 Env.	114 x 162 mm	N	Ν	Y#	Y#	N
C5 Env.	162 x 229 mm	N	Ν	Y#	Y#	N
DL Env.	110 x 220 mm	N	Ν	Y#	Y#	N
8K	267 x 390 mm	Y#/Y#	Y#/Y#	Y#	N	Y

Paper	Size (W x L)	Paper Trays Main Unit/Option		Bypass Tray	Env. Feeder	Duplex
		NA	EU/Asia			
16K SEF	195 x 267 mm	Y#/Y#	Y#/Y#	Y#	N	Y
16K LEF	267 x 195 mm	Y#/Y#	Y#/Y#	Y#	N	Y
Custom	Minimum: 90 x 148 mm Maximum: 305 x 432 mm	N/YC	N/YC	YC	Ν	Ν

- Y: Supported. The paper size sensor detects the paper size.
- Y#: Supported. The user has to select the correct paper size for the tray.
- YC: Supported. The user has to enter the width and length of the paper.
- N: Not supported.

1. Appendix: Specifications

Service Call Conditions

Summary

There are 2 levels of service call conditions.

Level	Definition	Reset Procedure
A	Only a service representative can reset this SC. This will prevent damage to the machine. You cannot use the machine.	Enter engine SP mode 5810 and press "#". When 'execute' is displayed, press "#" again. Then press 'Escape'. Then turn the main power off/on.
В	The SC can be reset by turning the operation switch off and on, if the SC was caused by a sensor error.	Set the main power off and on.
С	SCs that are not shown on the operation panel. They are internally logged.	Logging only

Note

- If the problem is with electrical circuit boards, disconnect the connectors first. Then reconnect the connectors before you replace the PCBs.
- If the problem is with a motor lock, first examine the mechanical load. Then replace motors or sensors.

SC Code Descriptions

Engine SC

Code I	No.	Symptom	Possible Cause
202	В	Polygon motor error	

Code	No.	Symptom	Possible Cause
		The polygon motor does not reach its operating speed within 10 seconds after the polygon motor on signal, or the lock signal is not detected for more than a certain time during operation.	Polygon motorPolygon motor cable
		1 st laser synchronization error	• Laser synchronization detector board
220	В	The laser synchronization detector cannot detect the laser synchronization signal for more than 5 consecutive 100 ms intervals.	 out of position Laser synchronization detector board or cable defective Laser synchronization mirror out of position LD unit defective Engine board defective
		2nd laser synchronization error	
221	В	The 1st LD1 is already on, but the laser synchronization detector cannot detect the laser synchronization signal from the 2nd LD for more than 5 consecutive 100 ms intervals.	 Laser synchronization detector board out of position LD unit defective Engine board defective
		FGATE error	
230	В	The FGATE signal cannot be detected for 1 second after the machine has sent a start trigger. The FGATE signal is still detected for 13 seconds after the machine has detected the FGATE signal.	Engine board defectiveController board defectiveHarness broken
		LD error	• Worn-out LD unit
240	С	The machine detects LDB error a few times consecutively when LDB unit turns on after LDB initialization.	 Disconnected or broken harness of the LD unit LD unit defective

Code No.		Symptom	Possible Cause
300	В	Charge roller current leak 60% or more of the PWM duty output is detected for 0.2 seconds when the charge bias is generated by the charge roller.	Cartridge (charge roller) defectiveHigh voltage supply board defective
330	В	Development bias leak 60% or more of the PWM duty output is detected for 0.2 seconds when the development bias is generated by the development roller.	 Cartridge (development roller) defective High voltage supply board defective
520	В	Main motor lock A main motor lock signal is not detected for more than 700 ms after the main motor starts to rotate, or the lock signal is not detected for more than a certain time during rotation after the last signal.	 Main motor defective Harness broken Too much load on the drive mechanism
530	В	Fusing fan error The CPU detects the fusing fan lock signal for more than 3 seconds.	Poor connection of the fusing fanFusing fan defective
531	В	PSU fan error The CPU detects the PSU fan lock signal for more than 3 seconds.	Poor connection of the PSU fanPSU fan defective
541	A	Thermistor error The fusing temperature detected by the thermistor is 0°C for 7 seconds after the fusing relay has been turned on.	• Thermistor defective
542	A	Fusing temperature warm-up error The fusing temperature does not increase by 7°C for 10 seconds. The fusing temperature does not reach more than 135°C for 24 seconds after the main switch is turned on.	 Thermistor defective or deformed Fusing lamp open Fusing thermostat open

2. Appendix: Troubleshooting Guide

Code No.		Symptom	Possible Cause
543	A	Fusing overheat error: Software A fusing temperature of over 235°C is detected for 0.5 seconds by the fusing thermistor.	Fusing thermistor defectivePower supply board defective
544	A	Fusing overheat error: Software The machine detects an overheat error of the hardware.	Fusing control out of controlPower supply board defective
545	A	Fusing lamp stays on The fusing lamp stays on more than 12 seconds after the main motor has been turned off.	 Fusing thermistor defective Power supply board defective Defective connection of the fusing unit
547	В	Zero cross signal malfunction Zero cross signals are already detected for 0.15 seconds before the fusing relay-on. Zero cross signals are not detected for 3 seconds or the machine cannot detect a frequency.	 Power supply board defective Unstable main power supply condition
559	A	Fusing jam error: 3 counts At the fusing exit sensor the paper jam is detected late for three pulse counts (lag error) when SP1913-001 is set to "1: Yes".	Obstacle in the paper transport pathFusing unit installed incorrectlyFusing unit defective
620	В	Communication error - GAVD The engine board detects an unknown device.	• Engine board defective
622	В	Communication error - PFU Three consecutive errors are detected during polling after the PFU is successfully detected by the machine.	 Noise Harness connection disconnected between the machine and PFU

Code	No.	Symptom	Possible Cause	
		EEPROM error		
669	В	The EEPROM error is detected at reading the prefix of the EEPROM address after power-on or recovery from the energy saver mode.	 EEPROM not installed or incorrectly installed EEPROM defective 	
		PER-command error		
687	В	The machine does not receive PAPI-PER command for s10 seconds after PAPI-PES has been issued.	Controller board defective	
		Ready notification error of image data transmission		
688	В	The controller does not send a ready notification of image data transmission after a sheet of paper has stopped at the registration roller.	Controller board defectiveCommunication error	

Controller SC

The following table describes the controller error codes. These codes are displayed at power-on, or after the power-on self test, if an error occurs.

Code	Description	Required Action
641	Engine to controller communication error (no answer).	Examine the connection between the controller and the engine board.Replace the engine board if the error is frequent.
670	Engine response error	 Engine board installed incorrectly Engine board defective Controller board defective
819	Kernal end error	HDD errorSoftware application errorRAM shortage
820	Controller CPU error	• Replace the controller if the error is frequent.

Code	Description	Required Action
833	Self-diagnostic error: Engine I/F ASIC	 Replace the engine board. ASIC for system control could not be detected. After the PCI configuration, the device ID for the ASIC could not be checked. Replace the mother board or check the harness connection. Could not initialize or read the bus connection. Value of the SSCG register is incorrect.
851	IEEE1394 interface error	• Replace the controller if the error is frequent.
853	Wireless LAN Error: Card Error 1	• Wireless LAN card not inserted into the wireless LAN board
854	Wireless LAN Error: Card Error 2	Wireless LAN card has been removed
855	Wireless LAN Error: Card Error 3	Wireless LAN card defectiveWireless card connection not tight
856	Wireless LAN Error 4: Board	Wireless LAN card board defectivePCI connector loose
857	USB I/F Error	 The USB driver can generate three types of errors: RX, CRC, and STALL errors. Only the STALL error can generate this SC code. Defective controller board
858	HDD Encryption unit error 1	A serious error occurs when data is encrypted to update an encryption key with the HDD encryption unit. [Number] shows a suffix number of SC code. • [0], [1], [30]: Replace the controller board. • [2]: Replace the NVRAM.
859	HDD Encryption unit error 2	 A serious error occurs when the HDD data is encrypted to update an encryption key with the HDD encryption unit. [Number] shows a suffix number of SC code. [8]: Install the HDD correctly or initialize the HDD. [9]: Initialize the HDD. [10]: Replace the HDD or replace the controller board.

Code	Description	Required Action
860	HDD start-up error	 Turn off the machine and turn it back on. Examine the connection between the HDD and the controller. Replace the HDD if the error is frequent.
861	HDD: Reboot error	 Loose connection of HDD Defective cables of HDD Defective HDD Defective controller
863	HDD data unable to read	
864	HDD data access error	• Replace the HDD if the error is frequent.
865	HDD access error	
866	SD card authentication error	SD-card data is corrupted. • Store correct data in the SD card.
867	SD card error	The SD card is ejected from the slot. • Install the SD card.
868	SD card access error	 -13 to -3 (sub-code): File system error Format the SD card on your PC. Replace the SD card. Replace the controller. Other number (sub-code): Device error Turn off and on the machine.
870	Address book error	Defective software program Defective HDD Incorrect path to the server • Initialize the address book data (SP5-846-050). • Initialize the HDD (SP5-832-001). • Replace the HDD.

Code	Description	Required Action
872	HDD mail data error	Defective HDD Power failure during an access to the HDD • Initialize the HDD (SP5-832-001). • Replace the HDD.
873	HDD mail transfer error	Defective HDD Power failure during an access to the HDD • Initialize the HDD (SP5-832-001). • Replace the HDD.
874	Delete All error 1: HDD	 Data Overwrite Security Unit (SD card) not installed Defective HDD Install the Data Overwrite Security Unit (D377). Replace the HDD.
875	Delete All error 2: Data area	• The logical format for the HDD fails.
876	Log Data Error	

Code	Description	Required Action		
	Log Data Error 1			
	Damaged log data file in the HDD			
	• Initialize the HDD with SP5832-	 Initialize the HDD with SP5832-001. 		
	Log Data Error 2			
	An encryption module not installed			
	• Disable the log encryption settin	g with SP9730-004 ("0" is off.)		
	 Install the DESS module. 			
	Log Data Error 3			
	Invalid log encryption key due to defe	ective NVRAM data		
	Initialize the HDD with SP5832-	.001.		
	• Disable the log encryption settin	g with SP9730-004 ("0" is off.)		
	Log Data Error 4			
	Unusual log encryption function due t	to defective NVRAM data		
	Initialize the HDD with SP5832-	.004.		
	Log Data Error 5			
	Installed NVRAM or HDD which is us	ed in another machine		
	 Reinstall the previous NVRAM or 	or HDD.		
	 Initialize the HDD with SP5832- 	.001.		
	Log Data Error 99			
	Other than the above causes			
	 Ask your supervisor. 			
		Defective SD card (M352)		
		SD card (M352) not installed		
877	HDD Data Overwrite Security SD card error	 Replace the NVRAM and then install the new SD card (M352). 		
		• Check and reinstall the SD card (M352).		
		Incorrect updating for the system firmware		
878	TPM system authentication error	Defective flash ROM on the controller board		
		• Replace the controller board.		
900	Controller counter error	• Replace the NVRAM if the error is frequent.		

Code	Description	Required Action
920	Printer application error	 Defective software Unexpected hardware resource (e.g., memory shortage) Software defective; switch off/on, or change the controller firmware if the problem is not solved Insufficient memory
921	Printer font error	A necessary font is not found in the SD card. The SD card data is corrupted. • Check that the SD card has the correct data.
990	Software performance error	 Software defective; reboot the machine Internal parameter incorrect Insufficient working memory When this SC occurs, the file name, address, and data will be stored in NVRAM. Note the above data and the situation in which this SC occurs. Then report the data and conditions to your technical control center.
991	Software continuity error	 Software bug; reboot the machine Internal parameter incorrect Insufficient working memory
992	Undefined error	Defective software program • An error undetectable by any other SC code occurred
998	Application start error	 Software defective; change the firmware for the application that failed An option required by the application (RAM, DIMM, board) is not installed

SP Tables

Printer Controller Service Mode

Service Mode Menu ("1. Service Menu")

1001	Bit Switch			
001	Bit Swi	tch 1	0	1
	bit 0	DFU	-	-
	bit 1	DFU	-	-
	bit 2	DFU	-	-
	bit 3	No I/O Timeout	0: Disable	1: Enable
		Enable: The MFP I/O Timeout setting will have no effe	ect. I/O Timeou	ts will never occur.
	bit 4	SD Card Save Mode	0: Disable	1: Enable
		Enable: Print jobs will be saved to an SD Card in the	GW SD slot.	
	bit 5	DFU	-	-
	bit 6	DFU	-	-
	bit 7	[RPCS,PCL]: Printable area frame border	0: Disable	1: Enable
		Prints all RPCS and PCL jobs with a border around th	ne printable are	ea.

1001	Bit Switch

002	Bit Switch 2		0	1
	bit 0	DFU	-	-
	bit 1	DFU	-	-
	bit 2	DFU	-	-
	bit 3	[PCL5e/c,PS]: PDL Auto Switching	0: Enable	1: Disable
		Disable: The MFPs ability to change the PDL processor mid-job. Some host systems submit jobs that contain both PS and PCL5e/c. If Auto PDL switching is disabled, these jobs will not be printed properly.		
	bit 4	DFU	-	-
	bit 5	DFU	-	-
	bit 6	DFU	_	-
	bit 7	DFU	-	-

1001	Bit Swi	Bit Switch				
003	Bit Switch 3		0	1		
	bit 0	DFU	-	-		
	bit 1	DFU	-	-		
	bit 2	[PCL5e/c]: Legacy HP compatibility	0: Disable	1: Enable		
		Enable: Uses the same left margin as older HP mode In other words, the left margin defined in the job (usual to " <esc>*r1A"</esc>				
	bit 3	DFU	-	-		
	bit 4	DFU	-	-		
	bit 5	DFU	-	-		
	bit 6	DFU	-	-		
	bit 7	DFU	-	-		

004	Bit Swit	Bit Switch 4 DFU		1	
	bit 0	DFU	-	-	
	bit 1	DFU	-	-	
	bit 2	DFU	-	-	
	bit 3	IPDS print-side reversal	0: Disable	1: Enable	
			bled, the simplex pages of IPDS jobs will be printed on the front side bec g on the back side of the page. This might reduce printing speed.		
	bit 4	DFU	-	-	
	bit 5	DFU	-	-	
	bit 6	DFU	-	-	
	bit 7	DFU	-	-	

1001	Bit Switch					
005	Bit Switch 5		0	1		
	bit 0	DFU	-	-		
	bit 1	Multiple copies if a paper size or type mismatch occurs	0: Disable (Single copy)	1: Enable (Multiple copy)		
	If a paper size or type mismatch occurs during the printing of multiple copies, or single copy is output by default. Using this BitSw, the device can be configured to all copies even if a paper mismatch occurs.					
	bit 2	Prevent SDK applications from altering the contents of a job.	0: Disable	1: Enable		
	If this BitSw is enabled, SDK applications will not be able to alter print data. This i achieved by preventing SDK applications from accessing a module called the "G Filter".					
	Note: The main purpose of this BitSw is for troubleshooting the effects of SDK applications on data.			cts of SDK		

bit 3	[PS] PS Criteria	0: Pattern3	1: Pattern 1		
	Change the number of PS criterion used by the PS interpreter to determine whether a job is PS data or not.				
	Pattern3: includes most PS commands. Pattern1: A small number of PS tags and headers				
bit 4	Increase max number of the stored jobs to 1000 jobs.	0: Disable (100)	1: Enable (1000)		
	Enable: Changes the maximum number of jobs that can be stored on the HDD via Job Type settings to 1000. The default is 100.				
bit 5	DFU	-	-		
bit 6	Method for determining the image rotation for the edge to bind on.	0: Disable	1: Enable		
	If enabled, the image rotation will be performed as they were in the spe older models for the binding of pages of mixed orientation jobs. The old models are below: - PCL: Pre-04A models				
	- PS/PDF/RPCS:Pre-05S models				
bit 7	Letterhead mode printing	0: Disable	1: Enable (Duplex)		
	Routes all pages through the duplex unit.				
	If this is disabled, simplex pages or the last page of an odd-paged duplex job, are not routed through the duplex unit. This could result in problems with letterhead/pre-printed pages.				
	Only affects pages specified as Letterhead paper.				

1001	Bit Swit	Bit Switch				
006	Bit Swit	ch 6	0	1		
	bit 0 to 5	DFU	-	-		

	bit 6	PDL Auto Detection timeout of jobs submitted via USB or Parallel Port (IEEE 1284).	0: Disable (Immediately)	1: Enable (10 seconds)
		To be used if PDL auto-detection fails. A failure of PDL autodetection doesn't necessarily mean that the job can't be printed. This bit switch tells the device whether to time-out immediately (default) upon failure or to wait 10 seconds.		
	bit 7	DFU	-	-

Switch	6-7
RTB 1 3	3

1001	Bit Swit	Bit Switch			
007	Bit Swit	rch 7	0	1	
		Print path	0: Disable	1: Enable	
bit 0 If enabled, simplex pages (in mixed simplex/duplex PS/PCL5 jobs of page of an odd paged duplex job (PS, PCL5, PCL6), are always rou duplex unit. Not having to switch paper paths increases the print spe				outed through the	
	bit 1 to 7	DFU	-	-	

1001	Bit Switch		
008	Bit Switch 8 DFU	-	-

1003	Clear Setting	
001	Init. System	Initializes settings in the System menu of the user mode.
003	Delete Program	DFU

1004	Print Summary
001	Service Summary
001	Touch [Execute] to print the printer summary sheets.


1005	Display Version.
	Printer Version
Displays the version of the controller firmware.	

1007	Supply Display		
1007	Enables or disables the display for information on each consumable supply.		
001	Development		
002	PCU		
003	Transfer		
004	Int. Transfer	[0 or 1 / 1 / 1 /step] 0: OFF, 1: ON	
005	Transfer Roller		
006	Fuser		
007	Fuser Oil		

Bit Switch Programming



 • Currently, the bit switches are not being used.




1. Enter the SP mode, select "Service Menu", then press [Enter] twice.



m047s502

 - 2. Select #1, #2, #3, or #4 for the desired bit switch, then press [Enter].
 - [▲] [▼]: Move to the next switch.



3. Adjust the bit switch using the following keys.

- [▲] [▼]: Move to the next bit.
- [Escape]: Exit without saving changes.
- [Enter]: Exit and save changes.

Note

- The left digit on the display is bit 7 and the right digit is bit 0.
- 4. Press [Enter] to save changes and exit.

Printer Engine Service Mode

Service Mode Table

Notation	What it means
[range / default / step]	Example: [-9 to $+9 / 3.0 / 0.1$ mm step]. The setting can be adjusted in the range ± 9 , value reset to $+3.0$ after an NVRAM reset, and the value can be changed in 0.1 mm steps with each key press.
Bold	Comments added for reference.
DFU	Denotes "Design or Factory Use". Do not change this value.
Japan only	The feature or item is for Japan only. Do not change this value.

SP1-xxx: Feed

	Lead Edge Regist
1001	Adjusts the printing leading edge registration for feeding from the trays and duplex tray using the trimming area pattern (SP5-902-003 No.9).
	Push [▲] or [▼] to select the settings (plus or minus).
	The specification is 4±2 mm

1001 1	BypassTray Plain	
1001 2	BypassTray Thick	
1001 3	BypassTray Thick2	
1001 4	MainTray Plain	
1001 5	MainTray Thick	[-40 to +40 / 0 / 1 mm]
1001 6	MainTray Thick2	[-40 10 +40 / U / 1 mm]
10017	BankTray Plain	
1001 8	BankTray Thick	
1001 9	BankTray Thick2	
1001 10	Duplex	

	Side to Side Reg		
1002	Adjusts the printing side-to-side registration from the 1st paper feed station using the trimming area pattern (SP2-902 No.12).		
	Push [▲] or [▼] to select the settings (plus or minus).		
	Specification: 0 ±2.0 mm.		
1002 1	BypassTray		
1002 2	MainTray 1	[-40 to +40 / 0 / 1 mm]	
1002 3	MainTray2		
1002 4	BankTray 1		
1002 5	BankTray2		
1002 6	Duplex		

	Regist sag
1003	Adjusts the relay clutch timing at registration. Relay clutch timing determines the amount of paper buckle at registration. (A "+" setting causes more buckling.)

1003 1BypassTray Plain1003 2BypassTray Thick1003 3BypassTray Thick21003 4MainTray Plain1003 5MainTray Thick1003 6MainTray Thick21003 7BankTray Plain			
1003 3 BypassTray Thick2 1003 4 MainTray Plain 1003 5 MainTray Thick 1003 6 MainTray Thick2	1003 1	BypassTray Plain	
1003 4 MainTray Plain 1003 5 MainTray Thick 1003 6 MainTray Thick2	1003 2	BypassTray Thick	
1003 5 MainTray Thick 1003 6 MainTray Thick2 [-8 to 8 / 0 / 1 mm step]	1003 3	BypassTray Thick2	
1003 6 MainTray Thick2 1003 6 MainTray Thick2	1003 4	MainTray Plain	
1003 6 MainTray Thick2	1003 5	MainTray Thick	$\begin{bmatrix} 9 \text{ to } 9 / 0 / 1 \text{ mm stan} \end{bmatrix}$
1003 7 BankTray Plain	1003 6	MainTray Thick2	
	1003 7	BankTray Plain	
1003 8 BankTray Thick	1003 8	BankTray Thick	
1003 9 BankTray Thick2	1003 9	BankTray Thick2	
1003 10 Duplex	1003 10	Duplex	

	Fusing control	0: Normal, 1: Phase control
1104	Use phase control if the room lights flicker when the fusing lamp starts.	
	Defaults: North America – Normal (On/off control), Europe – Phase	

1105	Fusing Temp.		
1105	Adjusts the fusing temperatures for printing and standby mode.		
		[150 to 200 / 170 / 5 deg.] DFU	
1105 1	Adjusts the fusing temperature for printing on normal paper.		
1105 2	Thick2	[150 to 195 / 185 / 5 deg.] DFU	
1105 2	Adjusts the fusing temperature for printing on thick 2 paper.		
1105.2	Standby Temp	[140 to 175 / 168 / 1 deg.] DFU	
1105 3	Adjusts the fusing temperature for standby mode.		

1106	Fusing Temp Disp	
1106 1	Displays the current fusing temperature.	

1901	OP LoopBackCheck				
1901	Displays the result of the optional loop back checking at power on.				
	Summary	Displays the	e error status for each option.		
	Sommary	0: Normal,	1: Error		
1901 1	bit 0: Bank (paper feed) unit er	ror			
	bit 1: Bin unit error (Not used)				
	bit 2: Duplex unit error				
1901 2	BankTray	[0 to 255 /	′ 0 ∕ 1 step.]		
17012	Displays the error status for the	optional pa	per feed unit.		
	0: Checking is correctly done.		7: X3FCL is not "ON".		
	1: D5 is not "High".		8: X3FCL is not "OFF".		
	2: D5 is not "Low".		9: X3MOTOR is not "ON".		
	3: X2FCL is not "ON".		10: X3 MOTOR is not "OFF".		
	4: X2FCL is not "OFF". 5: X2MOTOR is not "ON".		11: D4 is not "Low".		
			255: Loop back connector is not		
	6: X2 MOTOR is not "OFF".		connected.		
	Duplex	[0 to 255 /	′ 0 / 1 step.]		
Displays the error status for the optional duple unit.		ole unit.			
1901 4	0: Checking is correctly done.				
	1: Serial number communication fails.				
	2: DPXSET is not "Low".				
	255: Loop back connector is not connected.				

	Curl Control	Curl Reduction		
	Thin paper has a tendency to jam or wrinkle, especially during duplex printing. When this SP code is switched on:			
 The machine ignores the fusing temperature set for SP1105. When the machine is powered on or recovers from the low power mode the requires about 20 sec. to warm up (this is longer than normal). [0 or 1 / 0 / -] 		fusing temperature set for SP1105.		
	0: No (Normal)	0: No (Normal)		
	1: Yes (Curl Control)			

	SC559 Detect	Fusing Jam SC Setting	
	This SP setting determines whether SC559 is issued after three paper late jams occur in the fusing unit. After this SP code is turned on, a counter monitors the number of paper late jams that occur in the fusing unit. After the 3rd occurrence of a fusing jam, SC559 is issued and the machine cannot be used until the service technician releases the error.		
 1913 Note: Switching the machine off/on does not reset this jam counter. The coun after the cause of the jam has been removed and a sheet of paper successful the fusing exit sensor. [0 to 1 / 0 / 1] 0: No 1: Yes 			

1914	Nip Measure (Fusing Nip Width Measurement)		
1914 001	Measure Exe.	-	-
	Performs the nip width measurement. This is for by-pass tray and used OHP type.		

1915	Envelope Flap
	JPN use only

SP2-xxx: Drum

2001	Charge Rol Bias
2001	Adjusts the voltage applied to the charge roller for printing.

2001 1	Charge (1)	[1000 to 2000 / -1650V / 5V step] DFU	
2001 2	Charge (2)	[1000 to 2000 / -1675V / 5V step] DFU	

2112	Mainscan Mag	
Adjusts the main scan magnification.		ation.
2112 1	Mainscan (1)	[-0.5% to 0.5% / 0 / 0.1% step]
2112 2	Mainscan (2)	[-0.5% to 0.5% / 0 / 0.1% step]

2113	Subscan Mag		
2113	Adjusts the sub scan magnification.		
2113 1	Subscan (1)	[-0.5% to 0.5% / 0 / 0.1% step]	
2113 2	Subscan (2)	[-0.5% to 0.5% / 0 / 0.1% step]	

2201	Developer Bias		
Adjusts the development bias for printing.		or printing.	
2201 1	Developer (1)	[200 to 800 / 700V / 10V step] DFU	
2201 2	Developer (2)	[200 to 800 / 750V / 10V step] DFU	

2213	Toner End Count	[50 to 200 / 200 / 50 sheets/step]
2213	Adjusts the number of prints the machine can make after it detects toner near-end.	

2301	Trans Current	
	Adjusts the correction current applied to the transfer roller.	
2201.1	Trans (1)	[-5 to 5 / 0 / 1 µA/step]
2301 1	Adjusts the correction value for the transfer current in 120.8 mm/sec line speed.	
2301 2	Trans (2)	[-5 to 5 / 0 / 1 µA/step]
	Adjusts the correction value for the transfer current in 161.4 mm/sec line speed.	

	Thermistor Adjust	0: Yes, 1: No DFU
2910	If this is "Yes", the machine automatically adjusts the charge roller voltage and tran- current in response to the temperature within the machine.	

2911	PreRotate Time	
00110	Curl Reduction	[0 to 40 / 20 / 5 sec/step]
29112	Specifies the pre-rotation time at power-on or recovery from the energy saver mode.	
	LowTemp PreRotate	[0 to 40 / 20 / 5 sec/step]
29113	Specifies the pre-rotation time at power-on or recovery from the energy saver mode in low temperature environment (less than -15°C).	

2980	Waste Toner Count	
2980	Displays the waste toner counter in the engine board.	

SP3-xxx: Process

Ab Chrg Thermist	[0 to 2 / 0 / 1 /step]
3910 Displays the result of the charge thermister check (temperat back connector. 0: Normal	e thermister check (temperature) monitored by the loop
1: Low temperature limit	
C C	Displays the result of the charge pack connector. D: Normal

3920	Density Adjust	
	Density (1)	[-6 to 3 / 0 / 1 /step]
3920 1	Adjusts the image density level in 120.8 mm/sec. line speed. +3: Darkest/ -6: Lightest	
	Density (2)	[-6 to 3 / 0 / 1 /step]
3920 2	Adjusts the image density level in 161.4 mm/sec. line speed. +3: Darkest/ -6: Lightest	

	WasteTonerLimiter	[0 or 1 / 1 /-]
3923	Turns on or off the waste toner I time of the PCU rotation. 0: No (Off), 1: Yes (On)	imiter. The waste toner limiter is executed by the threshold

3924	Toner End Sensor	
3924 1	Toner Near-end	[100 to 1000 / 200 / 100 ms step] DFU
	Threshold adjustment for toner near-end detection.	
0004.0	Toner End	[250 to 1050 / 550 / 50 ms step] DFU
3924 2	Threshold adjustment for toner end detection	

	Toner End Judge	
 toner end. Even when toner end is detected, there is a same a user wants to print with the AIO until all to then, there is no toner end detection, and then 	This SP code determines whether the machine disables printing when the machine detects toner end.	
	• Even when toner end is detected, there is a small amount of toner left in the AIO. If a user wants to print with the AIO until all toner is used up, then set this SP to 1. But then, there is no toner end detection, and the user must watch the print quality and change the AIO when prints become too pale.	
	[0 or 1 / 0 / -]	
	O: Yes (Printing stops when toner end is detected.)	
	1: No (Printing can continue even after toner end is detected.)	

SP5-xxx: Mode

5001	All Indicators On	
5001	Turns on or off the all indicators on the operation panel.	
	5	

	mm/inch Selection	0: Europe/Asia (mm), 1: North America (inch)	
5024	Selects the unit of measurement	Selects the unit of measurement.	
	After selection, turn the main p	After selection, turn the main power switch off and on.	

	Refill Toner Disp	Toner Refill Detect Display	
5051	This SP switches on/off the message that prompts the operator when it is necessary to replenish toner in the machine.		
	0: ON (Message displayed (Default))		
	1: OFF (Message not displayed)		

5055	Display IP address Display IP Address		
	Switches the banner display of the IP address off and on.		
	[0 to 1/0/1] 0= No, 1= Yes		
	For example, if this SP is switched on, the IP address will be displayed below "Ready" while the printer is in standby mode:		
	Ready 169.254.187.055		

Display or does not display the coverage counter on the LCD.	
5056 [0 to 1 / 0 / 1] 0: Not displayed, 1: Displayed	5056

5104	A3 Double Count	Specifies whether the counter is doubled for A3/11" x 17" paper. If "Yes" is selected, the total counter counts up twice when A3/11" x 17" paper is used. Yes (double count), No (single count)
------	-----------------	---

	CE Login		
5169	If you will change the printer bit switches, you must 'log in' to service mode with this SP before you go into the printer SP mode. [0 to 1 / 0 / 1]		
	0: Off. Printer bit switches cannot be adjusted. 1: On. Printer bit switches can be adjusted.		

5195	Limitless SW	
	DFU	

5302	Set Time
	Time Difference
	Sets the time clock for the local time. This setting is done at the factory before delivery. The setting is GMT expressed in minutes.
	[-1440 to 1440 / - / 1 min.]
	Japan: +540 (Tokyo)
002	NA: -300 (NY)
	EU: +60 (Paris)
	CH: +480 (Peking)
	TW: +480 (Taipei)
	AS: +480 (Hong Kong)
	KO: +540 (Korea)

5307	Summer Time
	Lets you set the machine to adjust its date and time automatically with the change to Daylight Savings time in the spring and back to normal time in the fall. This SP lets you set these items:
	Day and time to go forward automatically in April.
	Day and time to go back automatically in October.
	Set the length of time to go forward and back automatically.
	The settings for 002 and 003 are done with 8-digit numbers:

	Digits	jits Meaning		
	1st, 2nd	•	Month. 4: April, 10: October (for months 1 to 9, the first digit of 0 cannot be input, so the eight-digit setting for 002 or 003 becomes a seven-digit setting)	
	3rd	Day of the week. 0: S	unday, 1: Monday	
	4th		ek for the day selected at the 3rd digit. If "O" is selected mple, and the selected Sunday is the start of the 2nd " for this digit.	
	5th, 6th	The time when the change occurs (24-hour as hex code). Example: 00:00 (Midnight) = 00, 01:00 (1 a.m.) = 01, and so on.		
	7th	The number of hours t	to change the time. 1 hour: 1	
	8th	If the time change is n should be 3 (30 minu	not a whole number (1.5 hours for example), digit 8 ites).	
	001	ON/OFF	Enables/disables the settings for 002 and 003. [0 or 1 / 1 (NA/EU), 0 (AA/CHN) / -] 0: OFF 1: ON	
	003	Start	The start of summer time.	
	004	End	The end of summer time.	

5401	Access Control		
	Determines whether the machine adds new user codes in the User Management Tool in Smart Net Monitor.		
	Authentication Time	[0 to 255 / 0 / 1 second]	
5401 104	Specifies the time for the authentication timeout. 0 = 60 seconds, 1 to 255 = displayed time (seconds)		

	ExtAuth Detail		
5401 162	Selects the log out type for the Bit 0: Log-out without an IC car 0 : Not allowed (default) 1: Allowed		
5401 200	SDK1 UniqueID		
5401 201	SDK1 Certification Method		
5401 210	SDK2 UniqueID"SDK" is the "Software Development Kit". This data of be converted from SAS (VAS) when installed or uninstalled. (DFU)SDK3 UniqueID		
5401 211			
5401 220			
5401 221	SDK3 Certification Method		
5401 230	SDK Certification Device		
	Detail Option		
	Enalbes or disables the log out confirmation option.		
	Bit 0: Log out confirmation option		
5401 240	0: Enable (default), 1: Disable		
	Selects the automatic log out time.		
	Bit 1 and 2: Automatic log out timer reduction		
	00: 60 seconds (default), 01: 10 seconds,		
	10: 20 seconds, 11: 30 seconds		

	User Code Clear
5404	Clears the counts for the user codes assigned by the key operator to restrict the use of the machine. Press [#Enter] to clear.

5411	LDAP-Certification	
	Easy Certification	
54114	1 4 Determines whether easy LDAP certification is done. [0 to 1 / 1 / 1] 1: On, 0: Off	

	Password Null Not Permit
54115	This SP is referenced only when SP5411-4 is set to "1" (On). [0 to 1 / 0 / 1]
0: Password NULL not permitted.	0: Password NULL not permitted.
	1: Password NULL permitted.

5413	Lock Setting	
001	Lockout On/Off	[0 to 1 / 0 / 1] 0: OFF, 1:ON
001	Turns on or off the account	lock for the local address book account.
000	Lockout Threshold	[1 to 10 / 5 / 1]
002	Sets the maximum trial times for accessing the address book account.	
	Cancellation On/Off	[0 to 1 / 0 / 1]
		0: OFF (Lockout is not cancelled.)
003		1: ON (Lockout is cancelled if a user ID and password are correctly entered after the lockout function has been executed and a specific time has passed.)
	Turns on or off the cancellation function of the account lockout.	
	Cancellation Time	[1 to 9999 / 60 / 1 min]
004	Sets the interval of the retry for accessing the local address book account after the lockout function has been executed.	
This setting is enabled only if SP5413-3 is set to "1" (ON).		it SP5413-3 is set to "1" (ON).

5414	Access Mitigation
	Mitigation On/Off
001 F	Permits or does not permit consecutive access to the machine with the same ID and password.
	[0 to 1 / 0 / 1]
	0: Off (Permitted)
	1: On (Not permitted)

	Mitigation Time
002	Sets the prohibiting time for consecutive access to the machine with the same ID and password.
	[0 to 60 / 15 / 1 min]

5415	Password Attack	
	Permissible Number	[0 to 100 / 30 / 1 times]
001	001 Sets the threshold number of attempts to attack the system with random password illegal access to the system.	
002	Detect Time	[0 to 10 / 5 / 1 sec]
002	Sets a detection time to count a password attack.	

5416	Access Information	
0.01	User Max Num	[50 to 200 / 200 / 1]
001	Sets the number of users for the access exclusion and password attack detection function.	
	Password Max Num	[50 to 200 / 200 / 1]
002	OO2 Sets the number of passwords for the access exclusion and password attack detect function.	
002	Monitor interval	[1 to 10 / 3 / 1 sec]
003	Sets the interval of watching out for user information and passwords.	

5417	Access Attack	
0.01	Permission Num	[0 to 500 / 100 / 1]
001	Sets a limit on access attempts to prevent password cracking.	
	Attack Detect Time	[10 to 30 / 10 / 1 sec]
002	Sets a detection time to count password cracking.	
	Cert Wait	[0 to 9 / 3 / 1 sec]
OO3 Sets the wait time to slow down the speed access attempts have been detected.		beed of certification when an excessive number of

	Attack Max Num	[50 to 200 / 200 / 1]
004	· · ·	received for certification in order to slow down the number of access attempts have been detected.

	User Authentication	
5420	These settings should be done with the System Administrator.	
	♦ Note	
	• These functions are enabled o	nly after the user access feature has been enabled.
		[0 or 1/0/1] 0: ON. 1: OFF
041	Printer	Determines whether certification is required before a user can use the printer application.
051	SDK1	[0 or 1/ 0 /1] 0: ON. 1: OFF
061	SDK2	Determines whether certification is required before
071	SDK3	a user can use the SDK application.

5481 Auth. Error Code This SP code determines how the authentication failures are displayed.		
		how the authentication failures are displayed.
001	System Log Disp	[0 or 1 / 0 / -] 0: OFF [Default], 1: ON Determines whether an error code appears in the system log after a user authentication failure occurs.

5501	PM Alarm Interval	
	Printout	
001	[0 to 9999 / 0 / 1 step]	
	0: Alarm off	
	1 to 9999: Alarm goes off when Value (1 to 9999) >= PM counter	

Sets ti	Jam Alarm
	Sets the alarm to sound for the specified jam level (document misfeeds are not included).
	[0 to 3/3/1 step]
5504	0: Zero (Off)
	1: Low (2.5K jams)
	2: Medium (3K jams)
	3: High (6K jams)

	Error Alarm DFU
5505	Sets the error alarm level. [0 to 255 / 25 / 100 copies/ 1 step]

5507	Supply Alarm	
	Paper Supply Ala(rm)	Switches the control call on/off for the paper supply. DFU
		0: Off , 1: On
5507 001		0: No alarm.
		1: Sets the alarm to sound for the specified number transfer sheets for each paper size (A3, A4, B4, B5, DLT, LG, LT, HLT)
5507 004	MaintenanceKit	When switched on this function informs the @Remote supply center that the maintenance kit requires servicing. [0: OFF/ 1: ON]
5507 009	Cartridge Alarm	When switched on this function informs the @Remote supply center that the toner cartridge is almost empty (near-end). [0: OFF/ 1: ON]
5507 080	Toner Call Timing	Selects the timing of the toner supply call for @Remote. [0: At Replacement/ 1: At nearend]

5507 128	Interval: Others	
5507 132	Interval: A3	
5507 133	Interval: A4	
5507 134	Interval: A5	 The "Paper Supply Call Level: nn" SPs specify the paper control call interval for the referenced paper sizes. DFU [00250 to 10000/1000/1 Step]
5507 141	Interval: B4	
5507 142	Interval: B5	
5507 160	Interval: DLT	
5507 164	Interval: LG	
5507 166	Interval: LT	
5507 172	Interval: HLT	

	SC/Alarm Setting		
5515*	With @Remote in use, these SP codes can be set to issue an SC call when an SC error occurs. If this SP is switched off, the SC call is not issued when an SC error occurs.		
001	SC Call	[0 or 1 / 1 / 1] 0: OFF 1: ON	
002	Service Parts Near End Call	[0 or 1 / 0 / 1] 0: OFF 1: ON	
003	Service Parts End Call		
004	User Call		
006	Communication Information Test Call	[0 or 1 / 1 / 1] 0: OFF 1: ON	
007	7 Machine Information Notice		
008	Alarm Notice	[0 or 1 / 0 / 1] 0: OFF 1: ON	
009	Non Genuine Toner		
010	Supply Automatic Ordering Call	[0 or 1 / 1 / 1] 0: OFF 1: ON	
011	Supply Management Report Call		

	Memory Clear		
5801	Resets NVRAM data to the default settings. Before executing any of these SP an SMC Report.		
5801 001	All Clear	Initializes items 2 to 15 below.	
5801 002	Engine	Initializes all registration settings for the engine and process settings.	
5801 003	SCS	Initializes default system settings, SCS (System Control Service) settings, operation display coordinates, and ROM update information.	
5801 004	IMH Memory Clr	Initializes the image file system. (IMH: Image Memory Handler)	
5801 005	MCS	Initializes the automatic delete time setting for stored documents. (MCS: Memory Control Service)	
5801 008	Printer	Initializes the printer defaults, programs registered, the printer SP bit switches, and the printer CSS counter.	
5801 010	GWWS/ NFA	Deletes the Netfile (NFA) management files and thumbnails, and initializes the Job login ID. Netfiles: Jobs to be printed from the document server using a PC and the DeskTopBinder software	
5801 011	NCS	Initializes the system defaults and interface settings (IP addresses also), the SmartNetMonitor for Admin settings, WebStatusMonitor settings, and the TELNET settings. (NCS: Network Control Service)	
5801 014	Clear DCS Setting	Initializes the DCS (Delivery Control Service) settings.	
5801 015	Clr UCS Setting	Initializes the UCS (User Information Control Service) settings.	
5801 016	MIRS Setting	Initializes the MIRS (Machine Information Report Service) settings.	
5801 017	CCS	Initializes the CCS (Certification and Charge-control Service) settings.	
5801 018	SRM Memory Clr	Initializes information in non-volatile RAM.	

5801 019	LCS	Initializes information in non-volatile RAM.
5801 021	ECS	Initializes the ECS settings.

5802	Free run
	The machine performs a free run. Press [ON] to start.
	Press [OFF] to stop.
	Please note that the machine will not stop immediately after the [Enter] key is pressed.

	Input check		
5803	Displays signals received from sensors and switches.		
	NOTE: SP Modes other than those listed in this table, are not used in the machine.		
	Operation Panel Component Name		
		Front and rear cover safety switches	
		0: Close, 1: Open	
5803 1	Cover Info	Front door open: bit 0	
		Paper exit door: bit 1 and 0	
		Rear cover: bit 2, 1 and 0	
5803 2	Main Motor Lock	Main Motor Lock	
5803 3	Polygon Motor Lock	Polygon Motor Lock	
5803 4	Fan High	Fusing fan; 0: Stop, 1: Lock	
5803 5	Fan Lock	Fusing fan; 0: Stop, 1: Lock	
5803 6	PSU Fan Lock	PSU fan; 0: Stop, 1: Lock	
58037	Destination	0: NA model, 1: EU model	
5803 8	AIO Unit Set	0: Not set, 1: Set	
5803 9	Fuser Temp Error	0: Normal, 1: Error	
5803 10	Toner End Sensor	0: Not end, 1: End	
5803 11	Paper Full Sensor	0: Not full, 1: Full	

5803 12	Carry Sensor	Paper exit sensor; 0: Paper not detected, 1: Paper detected
5803 13	Regist Sensor	0: Paper not detected, 1: Paper detected
5803 14	Exit Sensor	Fusing exit sensor; O: Paper not detected, 1: Paper detected
5803 15	Fuser Pressure	Fusing pressure sensor; O: Plain paper, 1: Thick paper
5803 16	Bypass PaperEnd	By-pass Paper Set Sensor; O: Not end, 1: End
5803 17	Tray1 PaperEnd	0: Not end, 1: End
5803 18	Tray1 RestSensor	Remaining Paper Sensors; bit 1 and 0 00: 1 to 49 sheets 01: 50 to 249 sheets 11: 250 to 449 sheets 10: 450 to 500 sheets
5803 19	Tray2 PaperEnd	Not used
5803 20	Tray1 PaperSize	Paper size switch (Tray 1); bit 2, 1 and 0 000: Tray 1 not set 001: A4 LEF/ LG SEF 010: LT LEF/ 8 _{1/2} " x 13" 011: A4 SEF/ LT LEF 100: Not used 101: LT SEF/ A4 LEF 110: A5 LEF/ LT SEF 111: A3 SEF/ DLT SEF
5803 21	Tray2 PaperSize	Not used
5803 22	Test Mode	0: Normal mode, 1: Test mode
5803 23	Test Print	0: Normal mode, 1: Test print

5803 24	Trans Thermistor		
5803 25	Fuser Thermistor		
5803 26	Fuser Unit Set		
5803 27	Trans Feedback		
5803 28	Charge Feedback		
5803 29	DeveloperFeedback		
5803 30	Bank1 CarrySensor Paper feed sensor (PFU 1); 0: Paper not detected, 1: Paper detected		
5803 31	Bank1 PaperEnd	Paper end sensor (PFU 1); O: Paper not detected, 1: Paper detected	
5803 32	Bank1 RestSensor	Paper remaining sensors (PFU 1); bit 1 and 0 00: 1 to 49 sheets 10: 50 to 249 sheets 11: 250 to 449 sheets 01: 450 to 500 sheets	
5803 33	Bank1 PaperSize	Paper size switch (PFU 1); bit 2, 1 and 0 000: Tray 1 not set 001: A4 LEF 010: LG SEF 011: A4 SEF 100: LT LEF 101: Not used 110: DLT SEF 111: A3 SEF	
5803 34	Bank2 CarrySensor	Same as SP5803-30	
5803 35	Bank2 PaperEnd	Same as SP5803-31	
5803 36	6 Bank2 RestSensor Same as SP5803-32		

5803 37	Bank2 PaperSize	Same as SP5803-33
5803 38	Duplex Cover	0: Close, 1: Open
5803 39	Duplex Unit Set	0: Not set, 1: Set
5803 40	Dplx Ent Sensor	Duplex entrance sensor; 0: Paper not detected, 1: Paper detected
5803 41	Dplx Exit Sensor	Duplex exit sensor; 0: Paper not detected, 1: Paper detected
5803 42 Dplx Turn Sensor		Duplex inverter sensor; 0: Paper not detected, 1: Paper detected

	Output check		
5804	Turns on electrical components individually for test purposes.		
	NOTE: SP Modes other than those listed in this table, are not used in the machine.		
5804 1	Main Motor: L		
5804 2	Main Motor: H		
5804 3	Middle Clutch		
5804 4	Tray1 Clutch		
5804 5	Tray2 Clutch		
5804 6	Regist Clutch		
5804 7	Bypass Solenoid		
5804 8	Fan High		
5804 9	LD1 Compulsion		
5804 10	LD2 Compulsion		
5804 11	LD1+2 Compulsion		
5804 12	Polygon Motor: L		
5804 13	Polygon Motor: H		
5804 16	Fuser Fuse Cut		

5804 17 QL 5804 18 Charge Bias	
5804 19 Developer Bias	
5804 20 Trans Plus	
5804 21 Trans Minus	
5804 22 Bank1 Motor: L	
5804 23 Bank1 Motor: H	
5804 24 Bank2 Motor: L	
5804 25 Bank2 Motor: H	
5804 26 Bank1 Clutch	
5804 27 Bank2 Clutch	
5804 28 Dplx Mtr Normal: L	
5804 29 Dplx Mtr Normal: H	
5804 30 Dplx Mtr Revers: L	
5804 31 Dplx Mtr Revers: H	
5804 32 Dplx Mtr Long: L	
5804 33 Dplx Mtr Long: H	
5804 34 Dplx Split SOL	

5907	CLT Dest. Code
5807	DFU

	Fusing Err Clr
5810	Resets a service call condition (for fusing unit errors). After using this SP mode, turn the main switch off and on.

	Machine No. Setting DFU
5811	Used to input the machine serial number. This is normally done at the factory. If you want to know the serial number, print the system parameter list. Press ^(*) and then input "A".

	Service TEL	
5812	Use these SP modes to input service and support telephone numbers. Enter the num and press Press the ^(**) key to input a pause. Press the "Clear modes" key to delete the telephon number.	
58121	Telephone	Use this to input the telephone number of the CE printed on the SP print mode printout.
5812 2	Facsimile	Use this to input the fax number of the CE printed on the SP print mode printout.

5816	NRS Function	
	I/F Setting	
	Selects the remote service setting.	
5816 001	[0 or 2 / 2 / 1 /step]	
	0: OFF (Remote service off)	
	2: Network (@Remote remote service on)	
	CE Call	
	Performs the CE Call at the start or end of the service.	
5816 002	[0 or 1 / 0 / 1 /step]	
5010 002	0: Start of the service	
	1: End of the service	
	NOTE: This SP is activated only when SP 5816-001 is set to "2".	

	Function Flag			
5816 003	Enables or disables the remote service function.			
	[0 to 1 / 0 / 1 /step]			
	0: Disabled	0: Disabled		
	1: Enabled			
	SSL Disable			
	Uses or does not use the RCG certification by SSL when calling the	RCG.		
5816 007				
	0: Uses the RCG certification			
	1: Does no use the RCG certification			
	RCG Connect T/O			
5816 008	Specifies the connect timeout interval when calling the RCG.			
	[1 to 90 / 30 / 1 second /step]	[1 to 90 / 30 / 1 second /step]		
	RCG Write Timeout	RCG Write Timeout		
5816 009	Specifies the write timeout interval when calling the RCG.			
	[1 to 100 / 60 / 1 second /step]			
	RCG Read Timeout			
5816010	Specifies the read timeout interval when calling the RCG.			
	[1 to 100 / 60 / 1 second /step]			
	Port 80 -			
	Enables/disables access via port 80 to the SOAP method.			
5816011	[0 or 1 / 0 / -]			
	0: Disabled			
	1: Enabled			
	RFU Timing			
	Selects the RFU (Remote Frimware Update) timing.			
5816013	[0 or 1 / 1 / -]			
	0: RFU is executed whenever update request is received.			
	1: RFU is executed only when the machine is in the sleep mode.			

	Function Flag		
5816 021	This SP displays the embedded RCG installation end flag. 0: Installation not completed 1: Installation completed		
5816 022	Install Status		
	This SP displays the external RCG installation status. 0: External RCG not registered 1: External RCG registered 2: Device registered		
	Connect Mode (N/M)		
5816 023	This SP displays and selects the embedded RCG connection method. [0 or 1 / 0 / 1 /step] 0: Internet connection 1: Dial-up connection		
5816061	NotiTime ExpTime DFU Proximity of the expiration of the certification.		
	HTTP Proxy use		
5816 062	This SP setting determines if the proxy server is used when the machine communicates with the service center. [0 or 1 / 0 / 1 /step] 0: HTTP Proxy not used 1: HTTP Proxy used		
	HTTP Proxy Host		
5816 063	This SP sets the address of the proxy server used for communication between embedded RCG-N and the gateway. Use this SP to set up or display the customer proxy server address. The address is necessary to set up embedded RCG-N.		
	Note: The address display is limited to 128 characters. Characters beyond the 128 character are ignored. This address is customer information and is not printed in the SMC report.		

	HTTP	Proxy Port
5816 064	This SP sets the port number of the proxy server used for communication between embedded RCG-N and the gateway. This setting is necessary to set up embedded RCG-N.	
	Note	: This port number is customer information and is not printed in the SMC report.
	HTTP	Prox AutUsr
	This S	SP sets the HTTP proxy certification user name.
5816 065	Note	:
		The length of the name is limited to 31 characters. Any character beyond the 31st character is ignored.
	•	This name is customer information and is not printed in the SMC report.
	HTTP	Prox AutPass
	This SP sets the HTTP proxy certification password.	
5816 066	• The length of the name is limited to 31 characters. Any character beyond the 31st character is ignored.	
	• This name is customer information and is not printed in the SMC report.	
5816 067	Cer l	Jpdt Cond
3810 007	Displ	ays the status of the certification update.
	0	The certification used by embedded RCG is set correctly.
	1	The certification request (setAuthKey) for update has been received from the GW URL and certification is presently being updated.
	2	The certification update is completed and the GW URL is being notified of the successful update.
	3	The certification update failed, and the GW URL is being notified of the failed update.
	4	The period of the certification has expired and new request for an update is being sent to the GW URL.
	11	A rescue update for certification has been issued and a rescue certification setting is in progress for the rescue GW connection.
	12	The rescue certification setting is completed and the GW URL is being notified of the certification update request.

		i		
	13	The notification of the request for certification update has completed successfully, and the system is waiting for the certification update request from the rescue GW URL.		
	14	The notification of the certification request has been received from the rescue GW controller, and the certification is being stored.		
	15	The certification has been stored, and the GW URL is being notified of the successful completion of this event.		
	16	The storing of the certific failure of this event.	ation has failed, and the GW URL is being notified of the	
	17	The certification update request has been received from the GW URL, the GW URL was notified of the results of the update after it was completed, but an certification error has been received, and the rescue certification is being recorded.		
	18	The rescue certification of No. 17 has been recorded, and the GW URL is being notified of the failure of the certification update.		
5816 068	Cer A	Cer Abnml Cause		
		Pisplays a number code that describes the reason for the request for update of the ertification.		
	0	Normal. There is no request for certification update in progress. Request for certification update in progress. The current certification has expired. An SSL error notification has been issued. Issued after the certification has expired. Notification of shift from a common authentication to an individual certification. Notification of a common certification without ID2. Notification that no certification was issued. Notification that GW URL does not exist.		
	1			
	2			
	3			
	4			
	5			
	6			
5816 069	Cer l	Jpdt ReqID	The ID of the request for certification.	
5816 083	Firm	Updating	Displays the status of the firmware update.	
			·	

5816 085	Firm UpUsr Conf	This SP setting determines if the operator can confirm the previous version of the firmware before the firmware update execution. If the option to confirm the previous version is selected, a notification is sent to the system manager and the firmware update is done with the firmware files from the URL.	
5816 086	Firmware Size	Allows the service technician to confirm the size of the firmware data files during the firmware update execution.	
5816 087	CERT: MacroVsn	Displays the macro version of the @Remote certification.	
5816 088	CERT: PAC Vsn	Displays the PAC version of the @Remote certification.	
5816 089	CERT: ID2 Code	Displays ID2 for the @Remote certification. Spaces are displayed as underscores (_). Asteriskes (* * *) indicate that no @Remote certification exists.	
5816 090	CERT: Subject	Displays the common name of the @Remote certification subject. CN = the following 17 bytes. Spaces are displayed as underscores (_). Asterisks (* * *) indicate that no DESS exists.	
5816 091	CERT: SeriNum	Displays serial number for the @Remote certification. Asterisks (***) indicate that no DESS exists.	
5816 092	CERT: Issuer	Displays the common name of the issuer of the @Remote certification. CN = the following 30 bytes. Asteriskes (* * *) indicate that no DESS exists.	
5816 093	CERT: St ExpTime	Displays the start time of the period for which the current @Remote certification is enabled.	
5816 094	CERT: Valid End	Displays the end time of the period for which the current @Remote certification is enabled.	
	Polling Man Exc		
5816 200		in periodically polls the @Remote Gateway by HTTPS. This this SP at any time to poll the @Remote supply center.	

	Instl: Condition			
5816 201	Displays a number that indicates the status of the @Remote service device.			
	0: Neither the registered device by the embedded RCG nor embedded RCG device is set.			
		ce is being set. Only Box registration is completed. In this cannot answer a polling request.		
	2: The embedded RCG devi a polling request.	ce is set. In this status the external RCG unit cannot answer		
	3: The registered device by t RCG device cannot be set.	he embedded RCG is being set. In this status the embedded		
	4: The registered module by	the embedded RCG has not started.		
5816 202	Instl: ID #	Allows entry of the number of the request needed for the embedded RCG device.		
5816 203	Instl: Reference	Executes the inquiry request to the @Remote GateWay URL.		
	Instl Ref Result			
	Displays a number that indicates the result of the inquiry executed with SP5816 203.			
	0: Succeeded			
	1: Inquiry number error			
	2: Registration in progress			
5816 204	3: Proxy error (proxy enabled)			
	4: Proxy error (proxy disabled)			
	5: Proxy error (Illegal user name or password)			
	6: Communication error			
	7: Certification update error			
	8: Other error			
	9: Inquiry executing			
	Instl: Ref Section			
5816 205	Displays the result of the notification sent to the device from the GW URL in answer to the inquiry request. Displayed only when the result is registered at the GW URL.			
5816 206	Instl: Rgstltn Executes Embedded RCG Registration.			

	Instl: Rgstltn Rst					
	Displays a number that indicates the registration result.					
	0: Succeeded					
	2: Registration in progre	ess				
	3: Proxy error (proxy er	nabled)				
5816 207	4: Proxy error (proxy di	sabled)				
	5: Proxy error (Illegal u	ser name or pa	ssword)			
	6: Communication error	r				
	7: Certification update e	error				
	8: Other error	8: Other error				
	9: Registration executing	9				
	Instl: Error Code					
5816 208	Displays a number that describes the error code that was issued when either SP5816-204 or SP5816-207 was executed.					
	Cause	Code	Meaning			
	Illegal Modem Parameter	-11001	Chat parameter error			
		-11002	Chat execution error			
		-11003	Unexpected error			
	Operation Error, Incorrect Setting	-12002	Inquiry, registration attempted without acquiring device status.			
		-12003	Attempted registration without execution of an inquiry and no previous registration.			
		-12004	Attempted setting with illegal entries for certification and ID2.			

		-12005	@Remote communication is prohibited. The device has an Embedded RC gate-related problem.
		-12006	A confirmation request was made after the confirmation had been already completed.
		-12007	The request number used at registration was different from the one used at confirmation.
		-12008	Update certification failed because mainframe was in use.
		-2385	Attempted dial up overseas without the correct international prefix for the telephone number.
		-2387	Not supported at the Service Center
		-2389	Database out of service
		-2390	Program out of service
	Error Caused by Response from GW URL	-2391	Two registrations for same device
		-2392	Parameter error
		-2393	External RCG not managed
		-2394	Device not managed
		-2395	Box ID for External RCG is illegal
		-2396	Device ID for External RCG is illegal
		-2397	Incorrect ID2 format
		-2398	Incorrect request number format
5816 209	Instl Clear	Releases the	machine from its embedded RCG setup.
5816 250	Print Comm Log	Prints the communication log.	

5821	NRS Address
------	-------------

5821 2	RCG IP Address	Sets the IP address of the RCG (Remote Communication Gate) destination for call processing at the remote service center. [00000000h to FFFFFFFh/0000000h/
--------	----------------	--

	NVRAM Upload
5824	Uploads the UP and SP mode data (except for counters and the serial number) from NVRAM on the control board to a flash memory card.
	While using this SP mode, always keep the front cover open. This prevents a software module accessing the NVRAM during the upload.

5825	NVRAM Download
5625	Downloads the content of a flash memory card to the NVRAM on the control board.

	Network Setting		
5828	This machine supports both Internet Protocols IPv4 and IPv6. IPv6 is the next generation protocol designed by the IETF to replace IPV4. IPv6 adds many improvements such as routing and network auto-configuration.		
5828 050	1284 Compatible	Enables and disables bi-directional communication on the parallel connection between the machine and a computer. [0 to 1 / 1 / -] 0:Off, 1: On	
5828 052	ECP	Disables and enables the ECP feature (1284 Mode) for data transfer. [0 to 1 / 1 /-] 0: Disabled 1: Enabled	
5828 065	Job Spooling	Switches job spooling spooling on and off. 0: No spooling , 1: Spooling enabled	

5828 066	Job Spooling Clear	This SP determines whether the job interrupted at power off is resumed at the next power on. This SP operates only when SP5828 065 is set to 1.
		1: OFF (Resumes printing spooled jog.)
		0: ON (Clears spooled job.)
5828 069	JobSpooling Protocl	
	This SP determines whe a 8-bit setting.	ther job spooling is enabled or disabled for each protocol. This is
	0: LPR/ 1: FTP (Not Use	ed)/ 2: IPP/ 3: SMB/ 4: BMLinks (Japan Only)/
	5: DIPRINT/ 6: Reserve	ed (Not Used)/ 7: Reserved (Not Used)
		Disables or enables Telnet operation. If this SP is disabled, the Telnet port is closed.
5828 090	TELNET	[Oto1 / 1 /-]
		0: OFF
		1: ON
		Disables or enables the Web operation.
5828 091) A/_ L	[Oto1 / 1 /-]
3020 091	Web	0: OFF
		1: ON
	Active IPv6 Link Local	This is the IPv6 local address referenced on the Ethernet or wireless LAN (802.11) in the format:
5828 145		"Link-Local address" + "Prefix Length"
5626 145		The IPv6 address consists of a total 128 bits configured in 8 blocks of 16 bits each. These notations can be abbreviated. See "Note: IPV6 Addresses " below this table.
5828 147	Active IPv6 Stat 1	
5828 149	Active IPv6 Stat 2	These SPs are the IPv6 stateless addresses (1 to 5) referenced on the Ethernet or wireless LAN (802.11) in the format:
5828 151	Active IPv6 Stat 3	"Stateless Address" + "Prefix Length"
5828 153	Active IPv6 Stat 4	The IPv6 address consists of a total 128 bits configured in 8 blocks of 16 bits each.
5828 155	Active IPv6 Stat 5	

	IPv6Manual Address	This SP is the IPv6 manually set address referenced on the Ethernet or wireless LAN (802.11) in the format:
5828 156		"Manual Set Address" + "Prefix Length"
5626 150		The IPv6 address consists of a total 128 bits configured in 8 blocks of 16 bits each. These notations can be abbreviated. See "Note: IPV6 Addresses" below this table.
5828 158	IPvó Gateway Address	This SP is the IPv6 gateway address referenced on the Ethernet or wireless LAN (802.11). The IPv6 address consists of a total 128 bits configured in 8 blocks of 16 bits each. These notations can be abbreviated. See "Note: IPV6 Addresses " below this table.
5828 161	IPv6 Statelss Auto	Enables or disables the IPv6 Stateless Auto setting on the Ethernet or wireless LAN (802.11). 0: Off, 1: On

Note: IPV6 Addresses

Ethernet and the Wireless LAN (802.11) reference the IPV6 "Link-Local address + Prefix Length". The IPV6 address consists of 128 bits divided into 8 blocks of 16 bits:

aaaa:bbbb:cccc:dddd:eeee:ffff:gggg:hhhh:

The prefix length is inserted at the 17th byte (Prefix Range: 0x0to0x80). The initial setting is 0x40(64).

For example, the data:

2001123456789012abcdef012345678940h

is expressed:

2001:1234:5678:9012:abcd:ef01:2345:6789: prefixlen 64

However, the actual IPV6 address display is abbreviated according to the following rules.

Rules for Abbreviating IPV6 Addresses

- 1. The IPV6 address is expressed in hexadecimal delimited by colons (:) with the following characters: 0123456789abcdefABCDEF
- 2. A colon is inserted as a delimiter every 4th hexadecimal character.

fe80:0000:0000:0000:0207:40ff:0000:340e

- The notations can be abbreviated by eliminating zeros where the MSB and digits following the MSB are zero. The example in "2" above, then, becomes: fe80:0:0:0207:40ff:0:340e
- 4. Sections where only zeros exist can be abbreviated with double colons (::). This abbreviation can be done also where succeeding sections contain only zeros (but this can be done only at one point in

the address). The example in "2" and "3" above then becomes: fe80::207:40ff:0:340e (only the first null sets zero digits are abbreviated as "::")

-or-

fe80:0:0:0:207:40ff::340e (only the last null set before "340e" is abbreviated as "::")

	Web Item visible
236	Displays or does not display the Web system items.
	[0 x 0000 to 0 x ffff / 0 x ffff] 0: Not displayed, 1: Displayed
	bit0: Net RICOH
	bit1: Consumable Supplier
	bit2-15: Reserved (all)
	Web shop Link
237	Displays or does not display the link to Net RICOH on the top page and link page of the web system.
	[0 to 1 / 1 / 1]
	0: Not display, 1:Display
	Web supplies Link
238	Displays or does not display the link to Consumable Supplier on the top page and link page of the web system.
	[0 to 1 / 1 / 1]
	0: Not display, 1:Display
	Web Link 1 Name
239	This SP confirms or changes the URL1 name on the link page of the web system. The maximum characters for the URL name are 31 characters.
	Web Link 1 URL
240	his SP confirms or changes the link to URL1 on the link page of the web system. The maximum characters for the URL are 127 characters.
	Web Link 1 visible
241	Displays or does not display the link to URL1 on the top page of the web system.
	[0 to 1 / 1 / 1]
	0: Not display, 1:Display

242	Web Link2 Name	Same as "-239"
243	Web Link2 URL	Same as "-240"
244	Web Link2 visible	Same as "-241"

5832	HDD
	Formatting (ALL)
001	Initializes the hard disk.
	Use this only if there is a hard disk error.

5837	Prog checksum		
		Displays the checksum for the engine firmware.	

5840	IEEE 802.11	
	Channel max	
006	Sets the maximum range of the bandwidth for the wireless LAN. This bandwidth setting varies for different countries.	
	[1 to 14 / 11 (NA), 13 (EU), 14 (JPN) / 1]	
	JPN: 1 to 14, NA: 1 to 11, EU: 1 to 13	
	Channel min	
007	Sets the minimum range of the bandwidth for operation of the wireless LAN. This bandwidth setting varies for different countries.	
	[1 to 14 / 1 / 1]	
	JPN: 1 to 14, NA: 1 to 11, EU: 1 to 13	

	Transmission speed	[0 x 00 to 0 x FF / 0 x FF to Auto / -]	
	0 x FF to Auto [Default]		
	0 x 11 - 55M Fix	0 x 07 - 11M Fix	
	0 x 10 - 48M Fix	0 x 05 - 5.5M Fix	
008	0 x 0F - 36M Fix	0 x 08 - 1 M Fix	
	0 x 0E - 18M Fix	0 x 13 - 0 x FE (reserved)	
	0 x 0D - 12M Fix	0 x 12 - 72M (reserved)	
	0 x 0B - 9M Fix	0 x 09 - 22M (reserved)	
	0 x 0A - 6M Fix		
	WEP Key Select		
	Selects the WEP key.		
011	Bit 1 and 0		
	00: Key1, 01: Key2 (Reserved),		
	10: Key3 (Reserved), 11: Key4(Reserved)		
	This SP is displayed only when the IEEE802.11 card is installed.		
	Fragment Thresh		
042	Adjusts the fragment threshold for the IEEE802.11 card.		
042	[256 to 2346 / 2346 / 1]		
	This SP is displayed only when the IEEE802.11 card is installed.		
	11g CTS to self		
043	Determines whether the CTS self function is turned on or off.		
045	[0 to 1 / 1 / 1] 0: Off, 1: On		
	This SP is displayed only when the IEEE802.11 card is installed.		
	11g Slot Time		
044	Selects the slot time for IEEE802.11.		
044	[0 to 1 / 0 / 1] 0: 20 µm, 1: 9 µm		
	This SP is displayed only when the	e IEEE802.11 card is installed.	

	WPA Debug Lvl
045	Selects the debug level for WPA authentication application.
040	[1 to 3 / 3 / 1] 1: Info, 2: warning, 3: error
	This SP is displayed only when the IEEE802.11 card is installed.

	GWWS Analysis (DFU)		
		Bit	Groups
		0	System & other groups (LSB)
		1	Capture related
5842	This is a debugging tool. It sets the debugging output mode of	2	Certification related
	each Net File process. Bit SW 0011 1111	3	Address book related
		4	Machine management related
		5	Output related (printing, delivery)
		6	Repository related
001	Setting 1	Netfi	ult: 00000000 – do not change les: Jobs to be printed from the document server a PC and the DeskTopBinder software
			sts the debug program mode setting. 5682 mmseg-log setting
002	Setting 2		ate/Hour/Minute/Second
			inute/Second/Msec. 5: Not used
		0 10 0	J. INOLUSEO

5844	USB	
5844 1	Transfer rate	0 x 01 [Full Speed], 0 x 04 [Auto Change]
5644 1	Sets the speed for USB data transmission.	
5844 2	Vendor ID	DFU
5844 3	Product ID	DFU

3. Appendix: SP Mode Tables

5844 4	Device Release Number	DFU
5945	Delivery Srv	
5845 Provides items for delivery server settings.		r settings.

5845 3	Retry Interval	[60to900 / 300 / 1 sec]
	Determines the time interval between retries before the machine returns to standby after an error occurs during an image transfer with the delivery scanner or SMTP server.	
	Number of Retries	[Oto99 / 3 / 1]
5845 4	Determines the number of retries before the machine returns to standby after an error occurs during an image transfer with the delivery or SMTP server.	
	Instant Trans Off	[0 to 1 / 0 / -]
5845 22	Instant Trans Off	0: Disable, 1: Enable
	Enables or disables the prevention function for the continuous data sending error.	

5846 UCS Setting	
LDAP Search Timeout	
010	Sets the length of the time-out for the search of the LDAP server.
[1 to 255 / 60 / 1 step]	
041 AddrB Acl Info.	

	This SP must be executed immediately after installation of an HDD unit in a basic machine that previously had no HDD. The first time the machine is powered on with the new HDD installed, the system automatically takes the address book from the NVRAM and writes it onto the new HDD. However, the new address book on the HDD can be accessed only by the system administrator at this stage. Executing this SP by the service technician immediately after power on grants full address book access to all users.	
	Procedure	
	1. Turn the machine off.	
	2. Install the new HDD.	
	3. Turn the machine on.	
	 The address book and its initial data a However, at this point the address boo administrator or key operator. 	-
	5. Enter the SP mode and do SP5846 041 can access the address book.	. After this SP executes successfully, any user
	Addr Book Media	
	Displays the slot number where an address book data is in.	
	[0 to 30 / - /1]	
043	0: Unconfirmed	
	1: SD Slot 1	20: HDD
	2: SD Slot 2	30: Nothing
	4: USB Flash ROM	
	Ini Local AddrB	
047	Clears all of the address information from the local address book of a machine managed with UCS.	
	Ini LDAP AddrB	
049	Push [Execute] to delete all items (this does not include user codes) in the LDAP address book that is controlled by UCS.	
	Ini All AddrB	
050	Clears everything (including users codes) in the directory information managed by UCS. However, the accounts and passwords of the system administrators are not deleted.	

	Backı	אַר All AddrB
051	Copies all directory information to the SD card. Do this SP before replacing the controller board or HDD. The operation may not succeed if the controller board or HDD is damaged.	
	Restore All AddrB	
052	Copies back all directory information from the SD card to the flash ROM or HDD. Upload the address book from the old flash ROM or HDD with SP5846-51 before removing it. Do SP5846 52 after installing the new HDD.	
	Clear	Backup Info.
053	Deletes the address book uploaded from the SD card in the slot 2. Deletes only the files uploaded for that machine. This feature does not work if the card is write-protected.	
		After you do this SP, go out of the SP mode, turn the power off. Do not remove the ard until the Power LED stops flashing.
	Searc	h Option
	This S	P uses bit switches to set up the fuzzy search options for the UCS local address book.
	Bit	Meaning
	0	Checks both upper/lower case characters
	1	
060	2	Japan Only
	3	
	4	Not Used
	5	Not Used
	6	Not Used
	7	Not Used

	Complexity Option 1
	Use this SP to set the conditions for password entry to access the local address book. Specifically, this SP limits the password entry to upper case and sets the length of the password.
062	[0 to 32 / 0 / 1 step]
	◆Note
	 This SP does not normally require adjustment.
	 This SP is enabled only after the system administrator has set up a group password policy to control access to the address book.
	Complexity Option 2
	Use this SP to set the conditions for password entry to access the local address book. Specifically, this SP limits the password entry to lower case and defines the length of the password.
063	[0 to 32 / 0 / 1 step]
	♦ Note
	 This SP does not normally require adjustment.
	• This SP is enabled only after the system administrator has set up a group password policy to control access to the address book.
	Complexity Option 3
064	Use this SP to set the conditions for password entry to access the local address book. Specifically, this SP limits the password entry to numbers and defines the length of the password.
	[0 to 32 / 0 / 1 step]
	Note
	 This SP does not normally require adjustment.
	 This SP is enabled only after the system administrator has set up a group password policy to control access to the address book.

Use this SP to set the conditions for password entry to access the local address book. Specifically, this SP limits the password entry to symbols and defines the length of the password.

065 [0 to 32 / **0** / 1 step]

Note

- This SP does not normally require adjustment.
- This SP is enabled only after the system administrator has set up a group password policy to control access to the address book.

	Encryption Start
094	Shows the status of the encryption function of the address book on the LDAP server.
	[0 to 255 / 1] No default

5848	WebService	
5848 004	ac:UD	
5848 009	ac:Job Ctrl	Switches access control on and off.
5848 011	ac:Dev Mng	0000: OFF, 0001: ON
5848 022	ac:Vadmin	

50.40.010	Log Type:Job 1 DFU	
5848 210	[0 to 0xFFFFFFF/0/1]	
50.40.01.1	Log Type:Job 2 DFU	
5848 211	[0 to 0xFFFFFFF/0/1]	
5848 212	Log Type Access DFU	
3646 212	[0 to 0xFFFFFFF/0/1]	
5848 213	PrimarySrv DFU	
5848 214	Secondary Srv DFU	Note : These SP codes are for display only;
5848 215	StartTime DFU	they cannot be changed.
5848 215	[0 to 0xFFFFFFF/0/1]	
5848 216	IntervalTime DFU	
3646 210	[1 to 100/1/1]	
	Timing DFU	
	[0 to 2/0/1]	
5848 217	0: Transmission off	
	1: Transmission 1 by 1	
	2: Periodic transmission	

5849	Installation Date	
	Displays or prints the installation date of the machine.	
5849 001	Display	Displays the installation date of the machine.
	Switch to Print	Determines whether the installation date is printed on the printout for the total counter.
5849 002		[0 to 1 / 1 / -]
		0: OFF (No Print)
		1: ON (Print)
5849 003	Total Counter	Displays the total counter of the machine installation's day.

5851	Bluetooth
	Sets the Bluetooth security mode. [0: Public] / [1: Private]
5856	Remote Program Update: Local port.

5856	Remote Program Update: Local port.
	When set to "enable" allows reception of firmware data via the local port (IEEE 1284) during a remote ROM update.
	0: Disallow, 1: Allow
	This setting is reset to "disable" after the machine is cycled off and on.

5857	Debug Log Save
	On/Off (1:ON 0:OFF)
001	Switches on the debug log feature. The debug log cannot be captured until this feature is switched on.
	[0 to 1 / 0 / 1]
	0: OFF, 1: ON
	Target (2: HDD 3: SD)
002	Selects the destination where the debugging information generated by the event selected by SP5858 will be stored if an error is generated
	[2 to 3 / 2 / 1]
	2: HDD, 3: SD Card
005	Save to HDD
	Specifies the decimal key number of the log to be written to the hard disk.
006	Save to SD Card
	Specifies the decimal key number of the log to be written to the SD Card.

009	HDD to SD Card Latest
	Takes the most recent 4 MB of the log written to the hard disk and copies them to the SD Card.
	A unique file name is generated to avoid overwriting existing file names on the SD Card. Up to 4MB can be copied to an SD Card. 4 MB segments can be copied one by one to each SD Card.
	HDD to SD Any
010	Takes the log of the specified key from the log on the hard disk and copies it to the SD Card.
	A unique file name is generated to avoid overwriting existing file names on the SD Card. Up to 4 MB can be copied to an SD Card. 4 MB segments can be copied one by one to each SD Card. This SP does not execute if there is no log on the HDD with no key specified.
011	Erase HDD Debug
011	Erases all debug logs on the HDD
	Erase SD Card Debug
012	Erases all debug logs on the SD Card. If the card contains only debugging files generated by an event specified by SP5858, the files are erased when SP5857 010 or 011 is executed.
	To enable this SP, the machine must be cycled off and on.
013	Dsply-SD Space
013	Displays the amount of space available on the SD card.
	SD to SD Latest
014	Copies the last 4MB of the log (written directly to the card from shared memory) onto an SD card.
	SD to SD Any
015	This SP copies the log on an SD card (the file that contains the information written directly from shared memory) to a log specified by key number.
017	Make HDD Debug File
016	This SP creates a 32 MB file to store a log on the HDD.

017	Make SD Debug File	
017	This SP creates a 4 MB file to store a log on an SD card.	

	Debug Log Save: SC			
5858These SPs select the content of the debugging information to be saved to the selected by SP5857-002.SP5858-003 stores one SC specified by number.				
001	Engine SC (0:OFF 1:ON)	Stores SC codes generated by copier engine errors.		
002	Controller SC (0:OFF 1:ON)	Stores SC codes generated by GW controller errors.		
003	Any SC	[0 to 65535 / 0 / 1 step]		
004	Jam (0:OFF 1:ON)	Stores jam errors.		

5859	Debug Log Sc	Debug Log Save Key		
001	Key 1			
002	Key 2			
003	Key 3			
004	Key 4			
005	Key 5	These SPs allow you to set up to 10 keys for log files for functions that use common memory on the controller board.		
006	Key 6	[-9999999 to 9999999 / - / 1]		
007	Key 7			
008	Key 8			
009	Key 9			
010	Key 10			

5860	SMTP/POP3/IMAP4	
5860 2	SMTP Srvr Port no.	Input the SMTP server port number.

		1
5860 3	SMTP Auth	SMTP authentication enable/disable
5860 6	SMTP Auth Encryp	Encryption mode for SMTP authentication enable/ disable (Only valid if 5860 3 is set to "enable")
58607	POP before SMTP	Enable/disable POP before SMTP. If the SMTP server does not have authentication, you can enable POP before SMTP, them POP authentication is available (SP 586013)
5860 8	POP to SMTP Waiting	When using POP before SMTP, this SP mode determines the maximum wait time between POP authentication and connection with SMTP. Communication stops if this time is exceeded.
		Selects the protocol for the mail reception.
		[0 to 3 / 1 / 1]
5860 9	Mail Dessive Drate cal	0: No reception
5000.4	Mail Receive Protocol	1: POP3
		2: IMAP4
		3: SMTP
	POP3/IMAP4 Auth.	If POP before SMTP is enabled, then you can use this SP to enable or disable encryption mode for POP authentication
5860 13		[0 to 2 / 0 / 1]
		0: Auto
		1: Off
		2: On
5860 14	POP Serv Port No.	Input the POP server port number.
5860 15	IMAP4 Srvr Port	Input the IMAP4 server port number.
5860 16	SMTP Rx Port No.	Input the SMTP port for the mail reception.
5860 17	Mail Rx Interval	Specifies the interval for the mail reception.

		Selects the mail saving setting.	
5860 19		[0 to 2 / 0 / 1]	
	Mail Keep Setting	0: Not saved in the mail server	
		1: All saved in the mail server	
		2: Only error mails saved in the mail server	
	Par Mail Rec Out	·	
	[1 to 168 / 72 / 1 hour]		
5860 20	Sets the amount of time to wait before saving a mail that breaks up during reception. The received mail is discarded if the remaining portion of the mail is not received during this prescribed time.		
	MDN Res RFC2298		
5860 21	Determines whether RFC2298 compliance is switched on for MDN reply mail. [0 to 1 / 1 / 1]		
	0: No, 1: Yes		
		If SMTP authentication is enabled, this SP mode determines which name is included in the e-mail header.	
5860 22	IMAP4Aut FieldRep	[0 or 1 / 0 / -]	
		0: Normal sender name 1: User name used by the authentication feature	
	SMTP Auth Direct Set DFU		
	Select the authentication method for SMPT.		
	Bit 0: LOGIN		
	Bit 1: PLAIN		
5860 025	Bit 2: CRAM_MD5		
	Bit 3: DIGEST_MD5		
	Bit 4 to Bit 7: Not Used		
	♦ Note		
	• This SP is activated only when SMTP authentication is enabled by UP mode.		

	S/MIVE: MIME Header Setting
	Selects the MIME header type of an E-mail sent by S/MIME.
5860 026	[0 to 2 / 0 / 1]
0000020	0: Microsoft Outlook Express standard
	1: Internet Draft standard
	2: RFC standard

5866	E-Mail Report		
001	Report Validity	Enables or disables the E-mail alert function. [0 or 1 / 0 / –] 0: Enabled, 1: Disabled	
005	Add Date Field	Adds or does not add the date field to the header of the alert mail. [0 or 1 / 0 / -] 0: Not added, 1: Added	

5869	RAM disk setting	DFU	
------	------------------	-----	--

	Common KeyInfo Writing			
	Writes to flash ROM the common proof for validating the device for @Remote specifications.			
5870	Note:			
	 These SP settings are required to connect @Remote or must also be set after the board is replaced. 			
	 Even if @Remote is not connected, these settings are used for Web validation, so at least SP5870 003 must be enabled. 			
5870 001	Writing	Writes the authentication data (used for NRS) in the memory.		
5870 003	Initialize	Initializes the authentication data in the memory.		

	SDCardAppliMove		
5873 Allows you to move applications from one SD card another. For more, please refer "SD Card Application Move" section.			
5873 001	MoveExec Executes the move from one SD card to another.		

5873 002	UndoExec	ndoExec This is an undo function. It cancels the previous execution.	
5878	Option Setup		
001	Data Overwrite Security		Press [Execute] to initialize the Data Overwrite Security option for the printer. For more, see "DataOverwriteSecurity Unit" in the chapter "Installation".
002	HDD Encryption		Press [Execute] to initialize the HDD Encryption option for the printer. For more, see "HDD Encryption" in the

5888	Person. Info Prot.
	Selects the protection level for logs. [0 to 1 / 0 / 1] 0: No authentication, No protection for logs 1: No authentication, Protected logs (only an administrator can see the logs)

chapter "Installation".

5893	SDK Application Counter
	Displays the counter name of each SDK application.
5893 001	SDK-1
5893 002	SDK-2
5893 003	SDK-3
5893 004	SDK-4
5893 005	SDK-5
5893 006	SDK-5

5902	Test Print	
	Prints the test pattern that you selected with SP 5902-003.	
5902 001	1 Sheet Print	
	Prints one test pattern	

	Continuous Print	
5902 002	Prints consecutive copies of the test pattern	
	Print Pattern	
	Selects a printer test pattern.	
	Use SP 5902 to print either one test pattern (5902-1) or more than one pattern. (5902-2).	
	Pattern:	
	0: Not Specified	
	1: Vertical Line (1dot)	
	2: Vertical Line (2dot)	
	3: Horizontal (1dot)	
5902 003	4: Horizontal (2dot)	
	5: Grid pattern Small	
	6: Grid pattern Large	
	7: Argyle Pattern Small	
	8: Argyle Pattern Large	
	9: Trimming Area	
	10: Horizontal Stitch	
	11: Checker Flag	

	Plug & Play
5907	Sets the brand name and the production name for Windows Plug & Play. This information is stored in NVRAM. If the NVRAM is defective or has been replaced, these names should be registered again.
	To set the plug and play model name, enter the model number, and then press $^{\oplus}$.

5924	SDK Apli Display
------	------------------

001 [0 or 1 / 0 / -] 0: Not displayed 1: Displayed		Selects the display mode for SDK application.
0: Not displayed	001	[0 or 1 / 0 / -]
1: Displayed	001	0: Not displayed
		1: Displayed

5930	Meter Click Charge		
	Setting		
	Switches the meter-click charge mode on and off.		
	[0: No], [1: Yes]		
	Important: Turn the main switch off/on after changing this setting.		
	No: Meter charge mode disabled (default). This setting is for machines were the operator is responsible for replacing the AIO and the Maintenance Kit.		
5930 001	 Alert messages are displayed on the operation panel when the AIO or PM parts reach the limit of their yield. 		
	• The PM counter resets automatically after the user replaces the fusing unit.		
	Yes: Meter charge mode enabled. This setting is for machines where the service technician has responsibility for servicing the machine.		
	 Alert messages are not displayed when the AIO or PM parts reach the limits of their yield. 		
	• Pressing the [Menu] button displays the meter charge count.		
	 The service technician must reset the PM counter after completing machine maintenance. 		
	Life Alert Display		
5930 002	Switches the PM alerts on and off.		
	[0: No], [1: Yes]		
	No: Maintenance Kit alerts will not display.		
	Yes: Maintenance Kit alerts will display.		
	Important:		
	• The setting of SP5930 002 is ignored unless SP5930 001 is set to "Yes".		
	 In order for the PM alerts to display both SP5930 001 and SP5930 002 must be set to "Yes". 		

	Pcon. Life Alert
	This SP switches the near-end and end alerts on/off for the service life of the OPC (not toner), based on the accumulated operation time of the main motor.
	Note: "Pcon" (photoconductor) means OPC drum.
5930 003	[0: No], [1: Yes]
	No: Near-end and end alerts will not display.
	Yes: Near-end and end alerts will display.
	Important:
	• The setting of SP5930 003 is ignored unless SP5930 001 is set to "Yes".
	 In order for the OPC alerts to display (near-end, end of service life) for the AIO, both SP5930 001 and SP5930 003 must be set to "Yes".

5990	SP Print Mode	
5990 1	All (Data List)	
5990 2	SP (Mode Data List)	Prints summary sheet for the item selected.
5990 4	Logging Data	
5990 5	Diagnostic Report	
5990 6	Non-Default	
59907	NIB Summary	

5997	debug: PSC DFU	
5997 1	COMMAND	

SP7-xxx: Data Log

7001	Operation time
	Displays the total number of engine rotation cycles made so far.
	However, this counter also includes idle rotations.
	This counter is not reset at PM.

7401	Total SC Counter	Displays the total number of service calls that have occurred.
		Display range: 0000 to 9999

7403	SC History	
7403 001	Latest	
7403 002	Latest 1	
7403 003	Latest 2	
7403 004	Latest 3	
7403 005	Latest 4	Displays the most recent service calls successive groups
7403 006	Latest 5	of 10.
7403 007	Latest 6	
7403 008	Latest 7	
7403 009	Latest 8	
7403 010	Latest 9	

7502	Counter-Paper Jam	Displays the total number of jams.
		Display range: 0000 to 9999

	Paper Jam Loc			
7504	Displays the total number of jams by location. A "Paper Late" error occurs when the paper fails to activate the sensor at the precise time A "Paper Lag" paper jam occurs when the paper remains at the sensor for longer than the prescribed time. Display range: 0000 to 9999			
	Error No.	Error		
7504 001	1	At Power On		
7504 017	17	PFU1: Trans. SN: OFF		
7504 018	18	PFU2: Trans. SN: OFF		

7504 019	19	Regist Bypass: OFF
7504 020	20	Regist T1: OFF
7504 021	21	Regist T2: OFF
7504 022	22	Regist PFU: OFF
7504 023	23	Regist Duplex: OFF
7504 024	24	Regist SN: ON
7504 025	25	Paper Exit SN: OFF
7504 032	32	Paper Exit SN: ON
7504 049	49	Dup Entrance: OFF
7504 050	50	Dup Entrance: ON
7504 051	51	Dup Inverter: OFF
7504 052	52	Dup Inverter: ON
7504 053	53	Duplex Exit: OFF
7504 054	54	Duplex Exit: ON
	<u>.</u>	

7506

Paper Jam/ Size

7506 005	A4 LEF	
7506 006	A5 LEF	
7506 014	B5 LEF	
7506 038	LT LEF	
7506 044	HLT LEF	
7506 132	A3 SEF	
7506 133	A4 SEF	
7506 134	A5 SEF	Displays the total number of jams by paper size
7506 141	B4 SEF	
7506 142	B5 SEF	
7506 160	DLT SEF	
7506 164	LG SEF	
7506 166	LT SEF	
7506 172	HLT SEF	
7506 255	Others	

Displays the Display con7507CODE is the	Dsply-P Jam Hist
	Displays the copy jam history in groups of 10, starting with the most recent 10 jams. Display contents are as follows:
	CODE is the SP7-504-nnn number.
	SIZE is the ASAP paper size (hexadecimal).
	TOTAL is the total jam error count (SP7-003)
	DATE is the date the jams occurred.

	-	-
7507 001	Latest	
7507 002	Latest 1	
7507 003	Latest 2	
7507 004	Latest 3	
7507 005	Latest 4	Sample Display: CODE: 007
7507 006	Latest 5	TOTAL: 0000334
7507 007	Latest 6	
7507 008	Latest 7	
7507 009	Latest 8	
7507 010	Latest 9	

Paper Size	Code (hex)	Paper Size	Code (hex)
A4 LEF	05	B4 SEF	8D
A5 LEF	06	B5 SEF	8E
B5 LEF	OE	DLT SEF	AO
LT LEF	26	LG SEF	A4
HLT LEF	2C	LT SEF	A6
A3 SEF	84	HLT SEF	AC
A4 SEF	85	Others	FF
A5 SEF	86		

7801	Memory/Version/PN
	Displays the firmware version (system, engine, and duplex).
7801 255	Memory/Version/PN

	PM Counter
7803	Displays the PM counter. This is not a page counter. It estimates the page count using the engine rotation cycle count. It counts up one page when the engine has made the average number of rotations that is required for one page of a three-page job.
7803 1	Paper
7803 2	Trans Roller
7803 3	Paper Feed Roller
7803 4	Fusing unit

	PM Count. Reset
7804	Resets the PM counter. Important: If a technician replaces the PM items, reset this counter after replacing these items.
7804 1	Paper
7804 2	Trans Roller
7804 3	Paper Feed Roller
7804 4	Fusing unit

	Reset-SC/Jam
7807	Resets the SC and jam counters. To reset, press [#Enter].
	Note: This SP does not reset the jam history counter: SP7-507

7832	Display-Self-Diag	
	Press # to display a list of error codes. Nothing is displayed if no errors have occurred.	

7836	Resident Memory
	Displays the memory capacity of the controller system.
7853	Replacement Cnt

70	252 15	Fusing Unit
7853 15	Displays the number of replacement for the fusing unit.	

7901	Assert Info DFU (Used for debugging.)	
79011	File Name	DFU
79012	Number of Lines	DFU
79013	Location	DFU

7904	Supply Near-end	
7904 1	Fusing Unit	
	Selects the near end display for the fusing unit. [0 to 2 / 0 / 1]	
	[0 to 2 / 0 / 1] 0: Sooner 1: Normal 2: Later	

	Cartridge info	
	Displays information a	bout the cartridge.
7931	• Returns a value of "0" if the number stored in the cartridge is not recognized.	
		n on the AIO ID Chip so if the cartridge is not installed, if the AIO y, or if the front door is open, no value will be displayed because not communicate with the AIO.
7931 001	Machine ID	Identification number of the machine (Model Name)
7931 002	Version	Cartridge version number
7931 003	Brand ID	Displays the OEM brand 1: Ricoh

7931 004	Area ID	Displays the area ID 1: DOM (Japan 2: NA (North America) 3: EU (Europe) 4: Asia
7931 005	Kind ID	Displays the part code number 1: 6K 3: 15K
7931 006	Color ID	Displays "1" for the color of the toner (Black), this is the only setting for this machine.
7931 007	Maintenance ID	Displays the maintenance ID 1: Printer (no maintenance contract) 3: Accessories
7931 008	New AlO	Displays the conditions of AIO 0: Normal 64: New AIO
7931 009	Recycle Count	0 to 3
7931 010	EDP Code	Displays the toner order code, the code is a string of ASCII characters.
7931 011	Serial No	 Displays an ASCII string that identifies the manufacturer Note: This data is originally entered as BCD and changes into a 16-character string in order to convert it to ASCII. However, only 10 bytes can be used to communicate with the controller, so the 16 bytes are truncated to 10 bytes.
7931 012	Remaining Toner	Displays "0" to "100" (the percentage of toner remaining in the cartridge)
7931 013	Toner End	N: Toner near end E: Toner end
7931 014	Refill Flag	Displays "RF" when the cartridge requires refilling

7931 015	R:Total Counter	Displays a number in the range "0" to "99999999", this is the total count at toner remaining.
7931 016	E:Total Counter	Displays a number in the range "0" to "99999999", this is the total count at toner end.
7931 017	Unit Counter	Displays a number in the range "0" to "99999999", this is the total number of pages output by the AIO unit. Counter adds once for each sheet output.
7931018	Install Date	Displays Year-Month-Date of installation for the AIO unit, this setting updates automatically through a serial interface with the machine when the new unit is installed.
7931019	Toner End Date	Displays Year-Month-Date when toner end occurred
7931 020	Pcon Rotation Time 1	Displays a number in the range "0" to "00000000", this is the
7931 021	Pcon Rotation Time 2	count for OPC rotation. Note:
7931 022	Pcon Rotation Time 3	• This information resides at four locations (020, 021, 022,
		023. The recycle count determines where the value is written.
7931 023	Pcon Rotation Time 4	 The counter increments by "1" for every 6 sec. of drum rotation time.
		• To calculate the actual time in sec., multiply the displayed value by 6.

7932	Pconductor Info
	Rotation Time
7932 001	Displays the rotation time 1 of the photoconductor (AIO). Actual rotation time = displayed time x 6 (sec)
	Pre Rotation Time
7932 002	Displays the rotation time 2 of the photoconductor (AIO). Actual rotation time = displayed time x 6 (sec)

	Alert Condition
	Displays the current alert condition of the each part in the AIO.
	This SP is displayed with hexadecimal number.
	bit 0: Toner near end
7932 003	bit 1: Toner end
	bit 2: Waste toner near end
	bit 3: Waste toner end
	bit 4: Toner near end
	bit 5: Photoconductor near end
	bit 6: Photoconductor end
	Pre Alert Condition
	Displays the previous alert condition of the each part in the AIO.
	This SP is displayed with hexadecimal number.
	bit 0: Toner near end
7932 004	bit 1: Toner end
	bit 2: Waste toner near end
	bit 3: Waste toner end
	bit 4: Toner near end
	bit 5: Photoconductor near end
	bit 6: Photoconductor end
	Kind ID
	Displays the kind ID of the AIO.
	This SP is displayed with hexadecimal number.
7932 005	01: 3K life
	02: 6K life
	03: 15K life
1	04: 20K life

	Pre Kind ID
	Displays the previous kind ID of the AIO.
	This SP is displayed with hexadecimal number.
7932 006	01: 3K life
	02: 6K life
	03: 15K life
	04: 20K life
	RF Rotation Time
7932 007	Displays the rotation time of the photoconductor (AIO) after refilled AIO has been detected.
	Actual rotation time = displayed time x 6 (sec)
	Remaining Time
	Displays the rest of photoconductor life.
7932 008	[0 to 100 / - / 1 %]
	NOTE : "0 %" may be displayed if the machine is turned on or recovered from the energy saver with the door opened.

7935	Cartridge Log	
7935 001	1 Serial No.	Saves the serial number of the previous AIO.
7935 002	1 Install Date	Saves the installation date of the previous AIO.
7935 003	1 R: Total Counter	Saves the total counter of the previous AIO.
7935 004	1 Refill Flag	Saves the refill flag (RF) of the previous AIO.
7935 005	2 Serial No.	Saves the serial number of the 2nd previous AIO.
7935 006	2 Install Date	Saves the installation date of the 2nd previous AIO.
7935 007	2 R: Total Counter	Saves the total counter of the 2nd previous AIO.
7935 008	2 Refill Flag	Saves the refill flag (RF) of the 2nd previous AIO.
7935 009	3 Serial No.	Saves the serial number of the 3rd previous AIO.
7935 010	3 Install Date	Saves the installation date of the 3rd previous AIO.
7935 011	3 R: Total Counter	Saves the total counter of the 3rd previous AIO.

7935 012	3 Refill Flag	Saves the refill flag (RF) of the 3rd previous AIO.
7935 013	4 Serial No.	Saves the serial number of the 4th previous AIO.
7935 014	4 Install Date	Saves the installation date of the 4th previous AIO.
7935 015	4 R: Total Counter	Saves the total counter of the 4th previous AIO.
7935 016	4 Refill Flag	Saves the refill flag (RF) of the 4th previous AIO.
7935 017	5 Serial No.	Saves the serial number of the 5th previous AIO.
7935 018	5 Install Date	Saves the installation date of the 5th previous AIO.
7935 019	5 R: Total Counter	Saves the total counter of the 5th previous AIO.
7935 020	5 Refill Flag	Saves the refill flag (RF) of the 5th previous AIO.

7993	Total counter	
Displays the engine total counter. It counts up for all prints, including service		

SP8XXX: Data Log 2

The SPs in this group are prefixed with a letter that indicates the mode of operation. The mode of operation is referred to as an 'application'. Before reading the Group 8 Service Tables, make sure that you understand what these prefixes mean.

Prefix	Application	What It Means
T:	Total	Grand total of the items counted for all applications (C, F, P, etc.).
P:	Print	Totals (pages, jobs, etc.) executed for each application when the job was not stored on the document server.
O:	Other	Other applications (external network applications, etc.). Refers to network applications such as Web Image Monitor. Utilities developed with the SDK (Software Development Kit) are also counted.

Group 8 SP codes are limited to 17 characters, forced by the necessity of displaying them on the small LCDs of printers and faxes that also use these SPs.

Vote

• All of the Group 8 SPs are reset with SP5 801 1 Memory All Clear.

8381	T:Total PrtPGS	These SPs count the number of pages printed by the customer.
8384	P:Total PrtPGS	The counter for the application used for storing the pages increments.
8387	O:Total PrtPGS	[0 to 9999999/0/1]

- When the A3/DLT double count function is switched on with SP5104, 1 A3/DLT page is counted as 2.
- When several documents are merged for a print job, the number of pages stored are counted for the application that stored them.
- These counters are used primarily to calculate charges on use of the machine, so the following pages are not counted as printed pages:
- Blank pages in a duplex printing job.
- Reports printed to confirm counts.
- All reports done in the service mode (service summaries, engine maintenance reports, etc.)
- Test prints for machine image adjustment.
- Error notification reports.
- Partially printed pages as the result of a jam.

	LSize PrtPGS	
8391	These SPs count pages [0 to 9999999/0/1]	s printed on paper sizes A3/DLT and larger.

	Prints/Duplex	
8411		ount of paper (front/back counted as 1 page) used for duplex inted only on one side are not counted.

	T:PrtPGS/Dup Comb
8421	These SPs count by binding and combine, and n-Up settings the number of pages processed for printing. This is the total for all applications. [0 to 9999999/0/1]

	P:PrtPGS/Dup Comb		
8424	These SPs count by binding and combir processed for printing by the printer ap [0 to 9999999/0/1]	ne, and n-Up settings the number of pages plication.	
	O:PrtPGS/Dup Comb	′Dup Comb	
8427	These SPs count by binding and combine, and n-Up settings the number of pages processed for printing by Other applications [0 to 9999999/0/1]		
842x 1	Simplex> Duplex		
842x 4	Simplex Combine		
842x 5	Duplex Combine		
842x 6	2>	2 pages on 1 side (2-Up)	
842x 7	4>	4 pages on 1 side (4-Up)	
842x 8	6>	6 pages on 1 side (6-Up)	
842x 9	8>	8 pages on 1 side (8-Up)	
842x 10	9>	9 pages on 1 side (9-Up)	
842x 11	16>	16 pages on 1 side (16-Up)	
842x 12	Booklet		
842x 13	Magazine		

- These counts are especially useful for customers who need to improve their compliance with ISO standards for the reduction of paper consumption.
- Pages that are only partially printed with the n-Up functions are counted as 1 page.

	T:PrtPGS/Ppr Size
8441	These SPs count by print paper size the number of pages printed by all applications. [0 to 9999999/0/1]

	P:PrtPGS/Ppr Size	
8444	These SPs count by print pap [0 to 9999999/0/1]	er size the number of pages printed by the printer application.
	O:PrtPGS/Ppr Size	
8447	These SPs count by print paper size the number of pages printed by Other applications. [0 to 9999999/0/1]	
844x 1	A3	
844x 2	A4	
844x 3	A5	
844x 4	В4	
844x 5	В5	
844x 6	DLT	
844x 7	LG	
844x 8	LT	
844x 9	HLT	
844x 10	Full Bleed	
844x 254	Other (Standard)	
844x 255	Other (Custom)	

• These counters do not distinguish between LEF and SEF.

	PrtPGS/PPr Tray		
8451	These SPs count the number of sheets fed from each paper feed station. [0 to 9999999/0/1]		
001	Bypass Tray	Bypass Tray	
002	Tray 1	Main Machine	
003	Tray 2	Paper Tray Unit (Option)	
004	Tray 3	Paper Tray Unit (Option)	

005	Tray 4	
006	Tray 5	
007	Tray 6	Currently not used.
008	Tray 7	Correnity nor used.
009	Tray 8	
010	Tray 9	

	T:PrtPGS/Ppr Type	
	[0 to 9999999/0/1]	
	These SPs count by paper type the number pages printed by all applications.	
8461	 These counters are not the same as the PM counter. The PM counter is based on feed timing to accurately measure the service life of the feed rollers. These counts are based on output timing. 	
	• Blank sheets (covers, chapter covers, slip sheets) are also counted.	
	• During duplex printing, pages printed on both sides count as 1, and a page printed on one side counts as 1.	
8464	P:PrtPGS/Ppr Type	
6404	These SPs count by paper type the number pages printed by the printer application.	
846x 1	Normal	
846x 2	Recycled	
846x 3	Special	
846x 4 Thick		
846x 5	Normal (Back)	
846x 6	Thick (Back)	
846x 7	OHP	
846x 8	Other	

	T:PrtPGS/FIN
8521	[0 to 9999999/0/1]
	These SPs count by finishing mode the total number of pages printed by all applications.
	P:PrtPGS/FIN
8524	These SPs count by finishing mode the total number of pages printed by the Print application. [0 to 9999999/0/1]
852x 1	Sort
852x 2	Stack
852x 3	Staple
852x 4	Booklet
852x 5	Z-Fold
852x 6	Punch
852x 7	Other
852x 8	Inside-Fold
852x 9 Three-IN-Fold	
852x 10	Three-OUT-Fold
852x 11	Four-Fold

- If stapling is selected for finishing and the stack is too large for stapling, the unstapled pages are still counted.
- The counts for staple finishing are based on output to the staple tray, so jam recoveries are counted.

	T:Counter
8581	These SPs count the total output broken down by color output, regardless of the application used. In addition to being displayed in the SMC Report, these counters are also displayed [O to 9999999/0/1]

	O:Counter	
8591	These SPs count the totals for A3/DLT paper used, number of duplex pages printer the number of staples used. These totals are for Other (O:) applications only. [0 to 9999999/0/1]	
8591 001	A3/DLT	
8591 002	Duplex	

9401	Cvg Counter	
8601	These counts correspond to the total counts recorded with the mechanical co	
8601 001	Cvg: BW %	Coverage: BW Pages
8601 011	Cvg: BW Pages	Coverage: BW Percent

861 <i>7</i>	SDK Apli Counter	*CTL	[0 to 9999999/ 0 / 1]		
0017	These SPs count the total printout pages for each SDK applicaion.				
86171	SDK-1				
8617 2	SDK-2				
86173	SDK-3				
86174	SDK-4	-			
8617 5	SDK-5				
86176	SDK-6				

	Func Use Counter DFU
8621 This SP counts the number of development roller rotations for development.	
	[0 to 9999999/0/1]
1 to 64	Function-1 to -64

	Dev Counter
8771	This SP counts the number of development roller rotations for development.
	[0 to 9999999/0/1]

	Toner_Botol_Info.
8781	This SP displays the count for the number of toner bottles used. The count is done based on the assumption that one toner bottle yields about 1,000 printed pages.

	Toner Remain
8801	This SP displays (as a percentage) the amount of toner remaining. This precise method of measuring remaining toner supply (1% steps) is better than other machines in the market that can only measure in increments of 10 (10% steps). [0 to 100/0/1]

	Cvr Cnt: 0-10%	
8851 These SPs count the percentage of dot coverage for K toner. [0 to 9999999]		percentage of dot coverage for K toner.
8851 011	0 to 2%:BK	
8851 021	3 to 4%:BK	
8851 031	5 to 7%:BK	
8851 041	8 to 10%:BK	

	Cvr Cnt: 11-20%
8861	This SP counts the number of prints that had a percentage of black dot coverage in the range 11-20%. [O to 9999999]

	Cvr Cnt: 21-30%
8871	This SP counts the number of prints that had a percentage of black dot coverage in the range 21-30%. [O to 9999999]

	Cvr Cnt: 31%-
8881	This SP counts the number of prints that had a percentage of black dot coverage in the range above 31%. [O to 9999999]

8891	Page/ Toner Bottle
8901	Page/ Ink Prev1
8911	Page/ Ink Prev1

	Cvr Cnt/Total		
8921	These counters count the percentage of dot coverage for K toner. (This machine uses only black toner)		
8921 001	Coverage (%):BK		
8921 011	Coverage/P:BK		

	Machine Status		
8941	These SPs count the amount of time the machine spends in each operation mode. Thes SPs are useful for customers who need to investigate machine operation for improveme in their compliance with ISO Standards. [0 to 9999999/0/1]		
8941 001	Operation Time	Engine operation time. Does not include time while controller is saving data to HDD (while engine is not operating).	
8941 002	Standby Time	Engine not operating. Includes time while controller saves data to HDD. Does not include time spent in Energy Save mode.	
8941 003	Energy Save Time	Includes time while the machine is performing background printing.	
8941 004	Low Power Time	Includes time in Energy Save mode with Engine on. Includes time while machine is performing background printing.	
8941 005	Off Mode Time	Includes time while machine is performing background printing. Does not include time machine remains powered off with the power switches.	

8941 006	SC	Total down time due to SC errors.	
8941 007	PrtJam	Total down time due to paper jams during printing.	
8941 008	OrgJam	Total down time due to original paper jams.	
8941 009	Supply PM Unit End	Total down time due to toner end.	

	AdminCounter	Machine Admin	istration Counter	
8999	This SP displays the counts for the items listed below. Use this SP as a quick reference to see the total counts of the corresponding SP codes listed below.			
	Note: This machine supports K printing only, so the counts for 015 and 017 are identical.			
8999 001	Total (SP8381 001)		Total output (sheets fed out)	
8999 007	Printer: BW		Total output for black & white	
8999 012	A3/DLT		Total output for A3/DLT paper	
8999 013	Duplex (SP8411 001)		Total output of duplexed sheets	
8999 015	Cvg:BW% (SP8601 001)		Total output of K pages	
8999 017	Cvg:BW Pages (SP8601 011)		Total output of K pages	