Paper Feed Unit PB 3020

(Code: G839)


For Machine Code: G147

Setup Guide

A CAUTION:

- Before moving the machine, unplug the power cord from the outlet. If the cord is unplugged abruptly, it could become damaged. Damaged plugs or cords can cause an electrical or fire hazard.
- When lifting the machine, use the grips on both sides. The machine could break or cause an injury if dropped.
- When lifting the paper feed unit, hold the bottom of it, and then lift it slowly. Lifting it carelessly or dropping it may cause an injury.
- #Important
- ☐ Before using the new paper feed unit, you must make settings in the printer driver.
- ☐ Check the printer nameplate to confirm the model code.

- Check the package contains the following:
 - ❖ Paper Feed Unit PB 3020

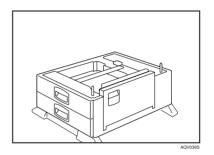


\$\begin{align*}
\text{\$\gamma\$} 2 & \\
\text{\$\summa\$} 3 & \\
\text{


AQV720S

- 1. Screw
- 2. Knob Screw (Finger type)
- 3. Lock Plate


- 2 Confirm that the printer is turned off, and the power cord is unplugged from the wall outlet.
- Remove the tape that holds the paper feed unit, and then remove the packing material.

Do not remove the tape that holds the connector cable inside the connector cover on the back of the paper feed unit in this step. It is removed in the further step.

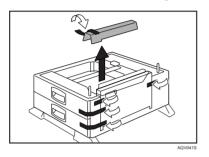


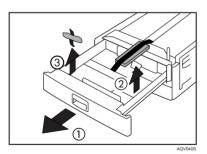


Align the printer with the two upright pins on the paper feed unit and then lower the printer slowly.

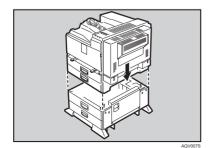


- The printer should be held by least two people.
- When lifting the printer, pull out the grips from the front of the printer. One person should hold the grips on the front and another person should hold the grips on the rear.

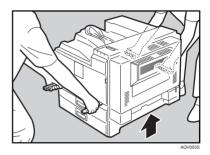


Push the grips into the printer. Take out the cover inside Tray 2 and attach it between the paper tray and the front cover.

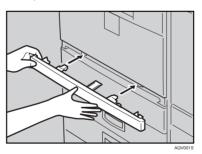


Pull the second paper tray (Tray 2) until it stops. After that, lift it slightly, and then pull it out.

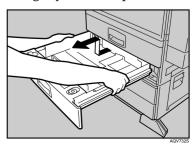

Pull out the first paper tray (Tray 1), and take the screwdriver (1) from the tray.

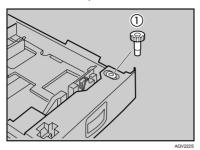


E Lock the Paper Bank and the printer with the screw.

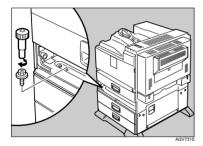


Be sure to return the screwdriver to the paper tray after using it.


Open the lower vertical paper feed cover on the right side of the paper feed unit (1). Hang the lock plate hook in the hole inside (2), and then fasten the plate with the knob screw using your fingers.

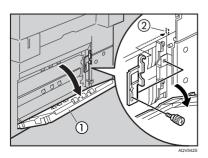


- Close the lower vertical paper feed cover.
- Open the connector cover (2), remove the tape that holds the connector cable and attach the connector cables (3) as shown in the illustration.

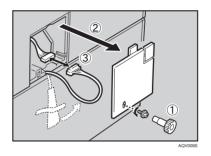

Fasten the band as shown until it clicks to secure the cable.

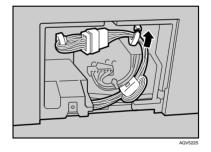

Close the connector cover.

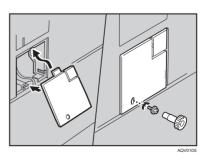

∅ Note

- ☐ Print a configuration page to confirm that the paper feed unit is properly installed.
- ☐ If the paper feed unit is not installed properly, reinstall it following this procedure. If you cannot install it properly even after attempting reinstallation, contact your sales or service representative.

For printing the configuration page, see "Printing the Test Page", Quick Installation Guide.

Copyright © 2006 Printed in Japan GB EN AE G839-8617

