


Errata for Quick Installation Guide

The following was omitted from the *Quick Installation Guide*:


Be sure to perform the following procedure after 4. Preparing the Development Unit, *Quick Installation Guide*.

Preparing the Fusing Unit


1. Raise the brown levers on both sides.

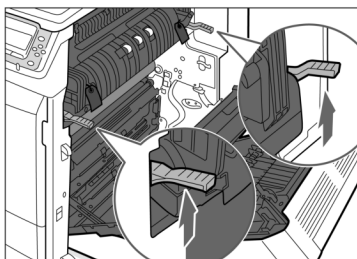


3. Raise the brown levers on both sides again.

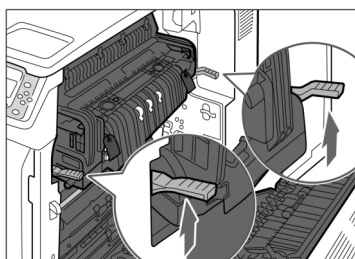


2. Holding the fusing unit by the handles, slowly pull out the fusing unit until it stops.

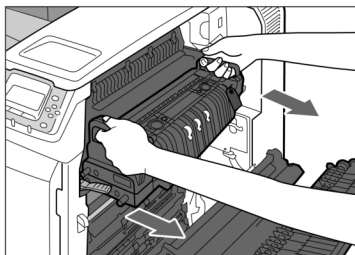


4. Holding the fusing unit firmly by the handles, pull out the fusing unit completely.

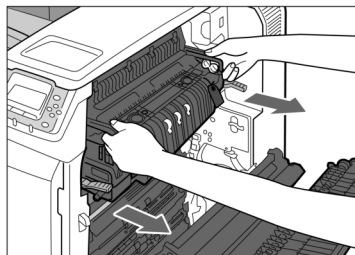

5. Turn toward you the pins that have a red tag, and then pull those pins out.

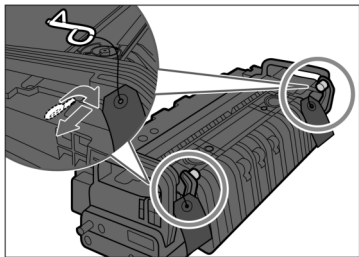

6. Holding the fusing unit by the handles, carefully push the fusing unit into the printer completely.

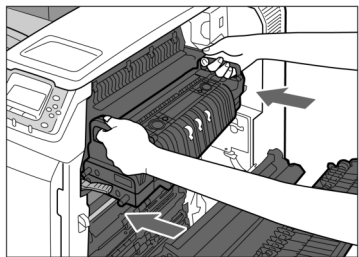

7. Lower the brown levers back in place.



8. Carefully close the right cover.

Copyright © 2008

Printed in USA

GB (GB) EN (USA) G179-7549



G1797549