# Model G-P3 Machine Code: G190

# **SERVICE MANUAL**

# **Safety Notices**

#### **Important Safety Notices**

#### **Prevention of Physical Injury**

- 1. Before disassembling or assembling parts of the printer and peripherals, make sure that the printer power cord is unplugged.
- 2. The wall outlet should be near the printer and easily accessible.
- 3. If any adjustment or operation check has to be made with exterior covers off or open while the main switch is turned on, keep hands away from electrified or mechanically driven components.
- 4. The printer drives some of its components when it completes the warm-up period. Be careful to keep hands away from the mechanical and electrical components as the printer starts operation.
- 5. The inside and the metal parts of the fusing unit become extremely hot while the printer is operating. Be careful to avoid touching those components with your bare hands.

#### **Health Safety Conditions**

Toner and developer are non-toxic, but if you get either of them in your eyes by accident, it may cause temporary eye discomfort. Immediately wash eyes with plenty of water. If unsuccessful, get medical attention.

#### **Observance of Electrical Safety Standards**

The printer and its peripherals must be serviced by a customer service representative who has completed the training course on those models.

#### Lithium Batteries

Incorrect replacement of lithium battery(s) on the EGB and controller board may pose risk of explosion. Replace only with the same type or with an equivalent type recommended by the manufacturer. Discard used batteries in accordance with the manufacturer's instructions.

#### Safety and Ecological Notes for Disposal

1. Do not incinerate toner bottles or used toner. Toner dust may ignite suddenly when exposed to an open flame.

- 2. Dispose of used toner, the maintenance unit which includes developer or the organic photoconductor in accordance with local regulations. (These are non-toxic supplies.)
- 3. Dispose of replaced parts in accordance with local regulations.
- 4. When keeping used lithium batteries in order to dispose of them later, do not put more than 100 batteries per sealed box. Storing larger numbers or not sealing them apart may lead to chemical reactions and heat build-up.

#### LASER SAFETY

The Center for Devices and Radiological Health (CDRH) prohibits the repair of laser-based optical units in the field. The optical housing unit can only be repaired in a factory or at a location with the requisite equipment. The laser subsystem is replaceable in the field by a qualified Customer Engineer. The laser chassis is not repairable in the field. Customer engineers are therefore directed to return all chassis and laser subsystems to the factory or service depot when replacement of the optical subsystem is required.

# **ACAUTION**

Use of controls, or adjustment, or performance of procedures other than those specified in this
manual may result in hazardous radiation exposure.

### **⚠ WARNING**

- Turn off the main switch before attempting any of the procedures in the Laser Optics Housing Unit section. Laser beams can seriously damage your eyes.
- CAUTION MARKING:



# Symbols, Abbreviations, and Trademarks

## Symbols and Abbreviations

This manual uses the symbols and abbreviations shown below.

Symbol	Meaning	
•	Refer to section number	
ℴ	Clip ring	
F	Screw	
	Connector	
Ž.	Clamp	
C	E-ling	
SEF	Short Edge Feed	
LEF	Long Edge Feed	

#### Trademarks

Microsoft®, Windows®, and MS-DOS® are registered trademarks of Microsoft Corporation in the United States and /or other countries.

PostScript® is a registered trademark of Adobe Systems, Incorporated.

PCL® is a registered trademark of Hewlett-Packard Company.

Ethernet® is a registered trademark of Xerox Corporation.

PowerPC® is a registered trademark of International Business Machines Corporation.

Other product names used herein are for identification purposes only and may be trademarks of their respective companies. We disclaim any and all rights involved with those marks.

# **TABLE OF CONTENTS**

Safety Notices	1
Important Safety Notices	1
LASER SAFETY	2
Symbols, Abbreviations, and Trademarks	3
Symbols and Abbreviations	3
Trademarks	3
1. Installation Procedure	
Installation Requirements	
Environment	11
Machine Level	12
Machine Space Requirements	12
Power Requirements	12
Optional Unit Combinations	14
Machine Options	14
Controller Options	14
Printer Installation.	15
Installation Procedure	15
Meter Click Charge	28
Moving the Machine	30
Transporting the Machine	30
Options Installation	31
Paper Feed Unit	31
Tray Heater	31
Controller Options	33
Overview	33
SD Card Appli Move	34
2. Preventive Maintenance	
User Replaceable Items	37
Service Maintenance	38
Recommended Cleaning Procedure	38
3. Replacement and Adjustment	
Before You Start	39
Special Tools and Lubricants	

Tools	40
Electrical Components	41
Electrical board unit	41
IOB (Input/Output Board)	44
Controller Board	44
Installing the new NVRAM	46
PSU (Power Supply Unit) Board	47
High Voltage Power Supply Board 1	47
EGB (Engine Board) and High Voltage Power Supply Board 2	48
LCD Panel	49
NVRAM Replacement Procedure	49
Laser Optics	52
Caution Decal Locations	52
LD Unit	52
LDB	56
Polygon Mirror Motor	56
Laser Synchronizing Detector Boards	57
LDU Shutter Motor Unit and Sensor	58
Paper Feed	60
Paper Feed Roller	60
Paper Friction Pad	61
By-Pass Paper Size Sensor	61
By-Pass Feed Roller, Friction Pad	62
Registration Sensor	64
Paper Volume Sensor, End Sensor and Paper width Sensor	64
Paper Size Sensor and Temperature/ Humidity Sensor	67
Paper Feed Motor	67
Paper Registration Clutch, Paper Feed Clutch and By-Pass Clutch	68
Development	69
Color Development Motor, Color OPC Motor and Black OPC/Development Motor	69
Development Clutch	70
Transfer Belt Contact Motor	71
Toner Supply Motor	72

Transfer Roller Contact Motor	72
ID Sensors	74
Drive	75
Drive unit	75
Duplex	77
Duplex Jam Sensor	77
Inverter Sensor	78
Duplex Motor and Inverter Motor	78
Fusing	80
Fusing Unit	80
Thermistor and Thermostat	80
Fusing Lamp	83
Fusing Exit Sensor and Paper Exit Sensor	84
Fusing Registration Sensor	84
Fan Direction	85
Adjustments	86
Gamma Adjustment	86
4. Troubleshooting	
Process Control Results	
Service Call Conditions	93
Summary	93
SC Code Descriptions	93
Troubleshooting Guide	124
Blank Print	124
All-black Print	124
Missing CMY Color	125
Light Print	125
Repeated Spots or Lines on Prints	125
Dark Vertical Line on Prints	126
White Horizontal Lines or Bands	127
Missing Parts of Images	127
Dirty Background	127
Partial CMY Color Dots	128


Dark Irregular Streaks on Prints	128
CMY Color Irregular Streaks	128
Ghosting	128
Unfused or Partially Fused Prints	128
Image Skew	129
Background Stain	129
No Printing on Paper Edge	130
Image not centered when it should be	130
Electrical Component Defects	131
Sensors	131
Blown Fuse Conditions	135
Power Supply Unit	135
IOB	135
LEDs.	136
5. Service Tables	
Service Program Mode	137
Service Mode Operation	137
Remarks	139
Bit Switch Programming	141
Service Mode Table	142
Controller Service Mode	142
Engine Service Mode	147
Input Check Table	319
Output Check Table	323
Firmware Update	326
Type of Firmware	326
Before You Begin	326
Updating Firmware	327
NVRAM Data Upload/Download	330
Address Book Upload/Download	332
Handling Firmware Update Errors	333
Controller Self-Diagnostics	335
Overview	335

Using the Debug Log	337
Switching On and Setting Up Save Debug Log	337
Retrieving the Debug Log from the HDD	340
Debug Log Codes	340
DIP Switches	342
Controller Board	342
6. Detailed Function Descriptions	
Overview	343
Component Layout	343
Paper Path	344
Drive Layout	345
Board Structure	346
Printing Process	348
Process Control	350
Overview	350
Potential Control	350
Toner Supply Control	353
Toner Near End/Toner End Detection	355
Developer Initialization	356
Paper Feed	357
Overview	357
Paper Feed Drive	358
Paper Tray	359
By-pass Tray Feed and Size Detection	362
Duplex	363
Laser Exposure	367
Overview	367
Optical Path	368
Laser Synchronizing Detector	369
LD Safety Switch	370
Automatic Line Position Adjustment	371
Photoconductor Unit	376
Overview	376

Drive and Drive Gear Position Sensor	377
Drum Charge and Quenching	379
Drum Cleaning	380
Waste Toner Collection	381
Waste Toner Bottle Full Detection and Set Detection	382
PCU Detection (Development Unit Detection)	383
Development	385
Overview	385
Drive	386
Developer Mixing	387
Development Bias	387
Toner Supply Mechanism	388
Image Transfer	389
Overview	389
Transfer Unit Detection and New Unit Detection	390
Drive and Transfer Belt Roller Voltage	391
Transfer Roller Unit	393
Fusing	396
Overview	396
Fusing Temperature Control	397
Drive	400
Controller	401
7. Specifications	
Specifications	
General Specifications	403
Supported Paper Sizes	406
Software Accessories	407
Machine Configuration	408

# **Installation Requirements**

#### **Environment**

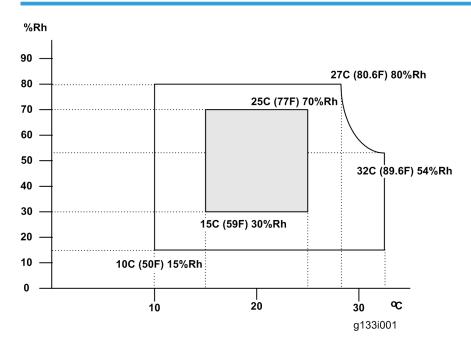

- 1. Temperature Range: 10°C to 32°C (50°F to 89.6°F)
- 2. Humidity Range: 15% to 80% RH
- 3. Ambient Illumination: Less than 1500 lux (do not expose to direct sunlight)
- 4. Ventilation: 3 times/hr/person or more
- 5. Do not let the machine get exposed to the following:
  - 1) Cool air from an air conditioner
  - 2) Heat from a heater
- 6. Do not install the machine in areas that are exposed to corrosive gas.
- 7. Install the machine at locations lower than 2,500 m (8,200 ft.) above sea level.
- 8. Install the machine on a strong, level base. (Inclination on any side must be no more than 5 mm.)
- 9. Do not install the machine in areas that get strong vibrations.


#### Machine Level

Front to back: Within 5 mm (0.2") Right to left: Within 5 mm (0.2")

# **Machine Space Requirements**

## **ACAUTION**

• This machine, which uses high voltage power sources, can generate ozone gas. High ozone density is harmful to human health. Therefore, the machine must be installed in a well-ventilated room.

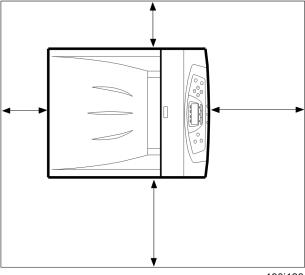

g190i126

• Left side: Over 50cm (19.7")

• Rear: Over 10cm (4")

• Right side: Over 10cm (4")

• Front: Over 70cm (27.6")

Put the machine near the power source with the clearance.

# **Power Requirements**

# **ACAUTION**

- Insert the plug firmly in the outlet.
- Do not use an outlet extension plug or cord.

- Ground the machine.
- 1. Input voltage level:
- 2. 120 V, 60 Hz: More than 11 A
- 3. 220 V to 240 V, 50 Hz/60 Hz: More than 6 A
- 4. Permissible voltage fluctuation:  $\pm 10 \%$
- 5. Do not put things on the power cord.

# **Optional Unit Combinations**

# **Machine Options**

U: User installation, C: CE installation

No.	Options	Remarks	
1	Paper Feed Unit Type 4000 (G392)		Up to x 3

# **Controller Options**

U: User installation, C: CE installation

No.	Options		Remarks	
1	Printer Hard Disk Drive Type 420 (M344)	U		
2	Memory Unit Type G /128MB (M345)	U		
3	Memory Unit Type G /256MB (D362)	U		
4	IEEE 1284 Interface Board Type A (B679)	U		
_	IEEE802.11a/g Interface Unit Type L (M344)			
5	-or- IEEE802.11a/g Interface Unit Type M (M344)	U	I/F slot	
6	IEEE802.11g Interface Unit Type P (M344)	U		
7	Gigabit Ethernet Board Type A (874)	U		
8	Bluetooth Interface Unit (B826)	U		
9	Camera Direct Print Card Type E (M344)	U		
10	Data Overwrite Security Unit (M344)	U	SD slot 1	
11	Data Storage Card Type A (G874)	U		
12	HDD Encryption Unit Type C (M344)	U	CD -1-1 2	
13	VM Card Type H (G344)	С	SD slot 2	

# **Printer Installation**

#### Installation Procedure

# **ACAUTION**

• Remove the tape from the development units before you turn the main switch on. The development units can be severely damaged if you do not remove the tape.




• Keep the shipping retainers after you install the machine. You may need them in the future if you transport the machine to another location.

#### Unpacking

## **ACAUTION**


- When lifting the machine, use the inside grips on both sides of the machine.
- If not, the machine could be dropped. This may cause an injury and may damage the machine.
- Place no objects to the left or on the cover.
- 1. Remove the plastic bag.

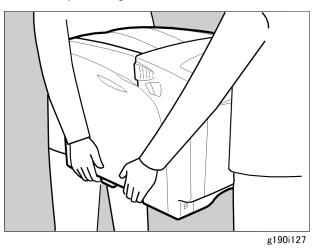

2. Lift the machine with two people by using the inset grips on both sides of the machine.


# 

- Do not remove the tapes before placing the machine.
- Lower the machine slowly and carefully, so as not to pinch your hands.
- 3. Remove the tape from the printer.

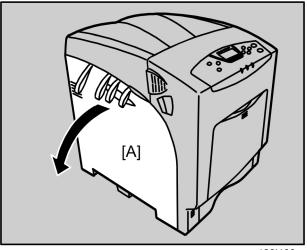


g190i100

4. Open the left cover [A] of the printer.

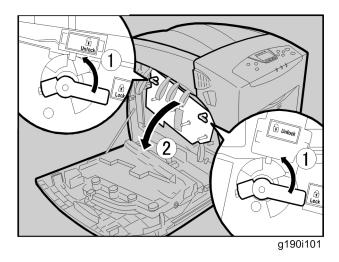


5. Turn the two green levers counterclockwise  $\mathbin{ @ @}$ , and then slowly open the inner cover  $\mathbin{ @}$ 

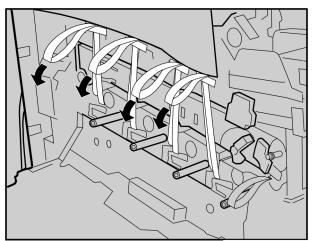


g190i102

6. Remove the end of the tape from the printer.

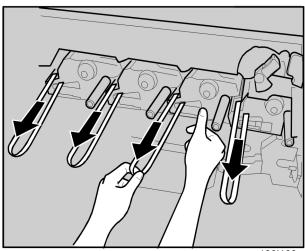


g190i103


7. Remove the four pieces of tape from the PCU in a horizontal direction.

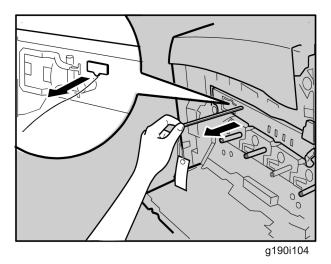


- 8. Remove the securing pin, as shown, from the transfer unit.  $\square$
- 9. Turn the green lever of the transfer unit counterclockwise to unlock the unit.

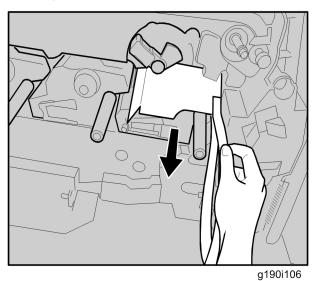


10. Remove the protective sheet.

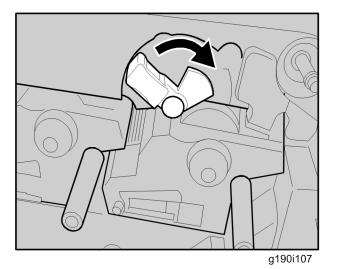


11. Turn the green lever clockwise to lock the unit.

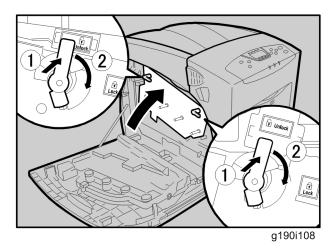

- 12. Close the inner cover.
- 13. Push the two green levers 1 to lock the inner cover, and then turn them clockwise 2.
- 14. Close the left cover.

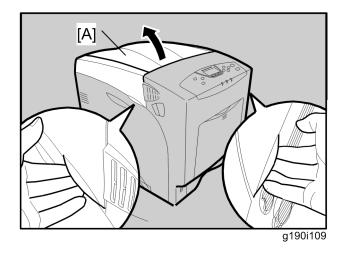

15. Open the top cover [A] by grasping the handles on the left and right sides.

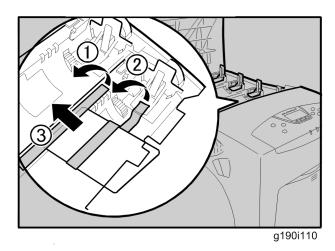


UNote

- Be sure to remove the caution sheet, which is attached to the toner compartment.
- 16. Remove the tapes and cover.




- 17. Remove the clips protecting the mouths of all four toner compartments.
- 18. Close the top cover.

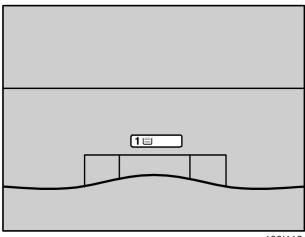

g190i112


19. Put labels "1" on the front of the paper tray.

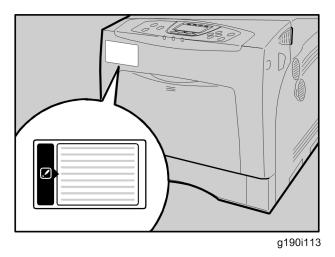


**U** Note

• Be sure to read the label which is attached to the front surface of the printer. This warns you that ink-jet paper cannot be used with this printer.

# Installing the toner

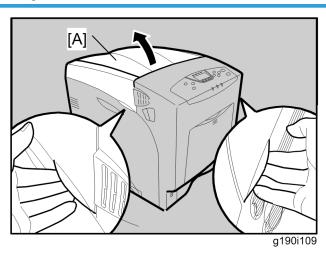


1. Open the top cover [A].

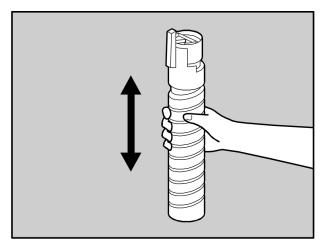


g190i115

2. Shake the toner bottles up and down seven or eight times before installing.

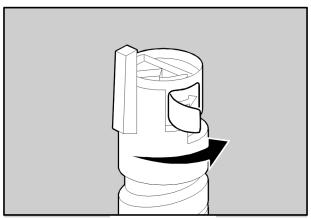


g190i116

3. Remove the tape from the toner bottle.

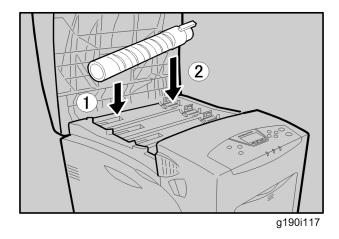

4. Install the yellow toner bottle first. Holding the toner bottle horizontally ① with the locking lever on the upper side, install the toner bottom first, and then move the locking lever to the triangle mark ②.

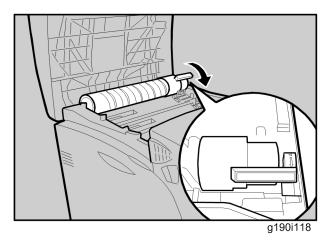


Turn the locking lever to the circle mark. Pull the locking lever toward front side of the printer, until it locks and clicks into place.




- Do not repeatedly insert and remove toner bottles. This causes toner leakage.
- 6. Do the same procedure to install the other three bottles: cyan (C), magenta (M), and black (B).
- 7. Close the top cover.

#### **Loading Paper**

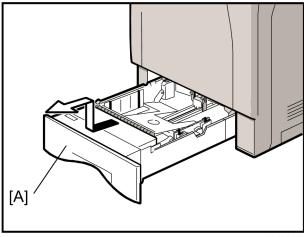


g190i119

- 1. Pull out tray 1 [A] of the printer until it stops.
- 2. Lift it slightly, and then pull it out.

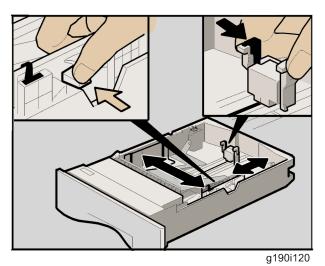


3. Adjust the green clips of the side guide and the end guide to the paper size you want.

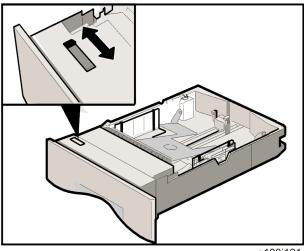


g190i121

4. Move the green switch on the front of the tray to match the type of paper to be loaded. Move the switch to the left when you load thick paper of  $75 \text{ g/m}^2$  or more.

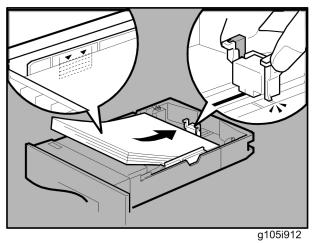

5. Arrange and load a stack of new paper into the tray with the print side up. Make sure that there is no gap between the paper and the paper guides. Adjust the paper guides to close gaps if necessary.

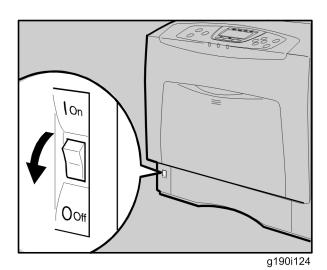


6. Lift the front of paper tray 1, and slowly slide the paper tray back until it stops. Make sure that the paper tray is fully inserted, to prevent paper jams.

## **Turning Power on**

# **ACAUTION**

- Turn off the power switch whenever you plug in and unplug the power cord.
- 1. Make sure that the power switch is set to "O" (Off).
- 2. Plug in the machine.

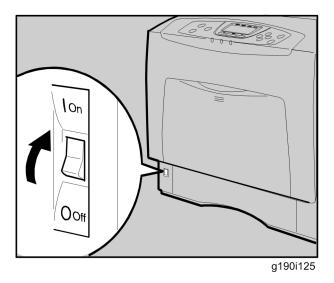

3. Turn on the power switch.



• Do not turn off the power switch until initialization is completed ('Ready' appears on the display when initialization is completed). Otherwise, the machine may malfunction.


#### **Selecting the Panel Display Language**



- You can select one of these languages (the default is English): English, German, French, Italian, Dutch, Swedish, Norwegian, Danish, Spanish, Finnish, Portuguese, Czech, Polish or Hungarian.
- You do not have to do this procedure if you use English. Do this procedure if you want to use a different language.
- 1. Turn on the power switch of the printer.



- "Ready" shows on the panel display after the machine warms up.
- 2. Press the "Menu" key.

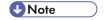

- "Menu" shows on the panel display.
- 3. Press the "▼" or "▲" key to select "Language."
- 4. Press the "OK" key.
- 5. Press the "▼" or "▲" key to select the language you want.
- 6. Press the "OK" key.

1

7. Press the "Menu" key to return to the initial screen.

#### **Printing the Test Page**

- You can check if the printer works correctly by printing a test page such as the configuration page.
   However, you cannot check the connection between the printer and the computer by printing the test page.
- 2. Turn on the power switch of the printer.



- "Ready" shows on the panel display after the machine warms up.
- 3. Press the "Menu" key.
- 4. Press the "▼" or "▲" key to select "List/Test Print."
- 5. Press the "OK" key.
- 6. Press the "▼" or "▲" key to select "Config. Page".
- 7. Press the "OK" key.
- 8. The test printing starts shortly after.
- 9. Press the "Menu" key to return to the initial screen.
- 10. Turn off the power switch of the printer.

#### Settings Relevant to the Service Contract

Change the necessary settings depending on the each customer's service contract. For details, refer to "Meter Click Charge" following this section.

## Meter Click Charge


Basically, there are two ways to set up this function.

Meter click change enabled (SP 5-930-001 set to 'enabled'): The counter can be displayed and printed by the customer. The technician can then call the customer and ask them to read the counter.

Meter click charge disabled (SP 5-930-001 set to 'disabled'; this is the default setting): The counter cannot be displayed or printed by the customer. To check the counter, the technician must print the SMC report (SP 5-990).



 You must select one of the counter methods (developments/prints) in accordance with the contract (
SP5-045-001).

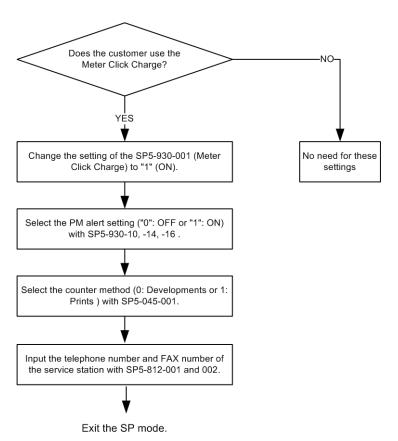

g133i528a

ltem	SP No.	Function	Default
Meter Click Charge	SP5-930-001	Enables or disables Meter Click Charge.  When enabled:  The counter menu shows immediately after you push the "Menu" key. The "Counter Method" (SP5-045) sets the type of the counter.  You can print the counter from the counter menu.  When disabled:  The counter menu does not show.	"0": OFF
Meter Click Charge: PCU	SP5-930-010	Enables or disables the PM alert for the PCUs.	"1": No alert

		If this SP is enabled, an alert message is displayed when the PCUs need to be replaced.	
Meter Click Charge: Image Transfer Belt Unit	image transfer belt unit.  Je: Transfer  SP5-930-014  If this SP is enabled, an alert message is displayed when the image transfer belt.		"1": No alert
Meter Click Charge: Fusing Unit	SP5-930-016	Enables or disables the PM alert for the fusing unit.  If this SP is enabled, an alert message is displayed when the fusing unit needs to be replaced.	"1": No alert
Counter method	SP5-045-001	Specifies if the counting method used in meter charge mode is based on developments or prints.	"1": Prints
Service Tel: Telephone / Facsimile	SP5-812-001 and -002	-001: shows or sets the telephone number of the service representative002: shows or sets the fax number of the service station. The number is printed on the counter list when the "Meter Click Charge" is enabled. User can send a fax message with the counter list.	-

# Moving the Machine

This section shows you how to manually move the machine from one floor to another floor. See the section "Transporting the Machine" if you have to pack the machine and move it a longer distance.

• Remove all trays from the optional paper feed unit.

# Transporting the Machine

- 1. Make sure there is no paper left in the paper trays.
- 2. Do one of the following:
  - Attach shipping tape to the covers and doors.
  - Shrink-wrap the machine tightly.

# **Options Installation**


# **Paper Feed Unit**

For details, refer to the "Hardware Guide" for this machine.


# Tray Heater

## 


• Before installing, make sure that the power source rating of the tray heater is same as the machine.

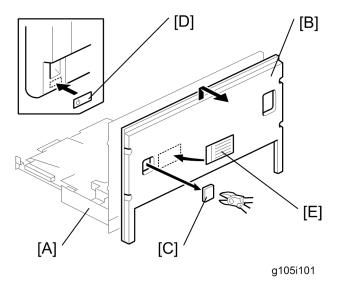

- 1. Electrical board unit [A] ( : Electrical board unit)
- 2. Rear cover [B]
- 3. Rear cover piece [C] for the power supply connector
- 4. Decal [D]
- 5. Decal [E]

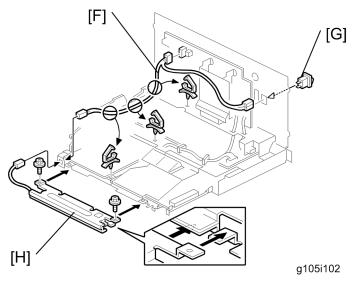

- 6. Harness [F] (□ x 2, □ x 3)
- 7. Tray heater switch [G]
- 8. Tray heater [H] (🕏 x 2, 🕮 x 1)

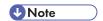

• You can adjust the tray heater switch setting with SP5953-001 as shown in the following table.

SP5953-001	Tray heater switch	When the Main Power turns on	When the printer is in energy saver mode
0: Off	On	No power supply	Power supply
U: Off	Off	No power supply	No power supply
1. O.	On	Power supply	Power supply
1: On	Off	No power supply	No power supply

# **Controller Options**

The following options are available for this machine; refer to the "Hardware Guide".

- Hard Disk Drive
- IEEE1284
- IEEE802.11a/g,g
- Gigabit Ethernet
- Bluetooth
- Camera Direct Print Card
- Data Storage card
- VM Card


The following options are available for this machine; refer to the "Security Guide".

- Data Overwrite Security Unit
- HDD Encryption Unit

#### Overview

This machine has I/F card slots for optional I/F connections and SD card slots applications.

After you install an option, check that the machine can recognize it.

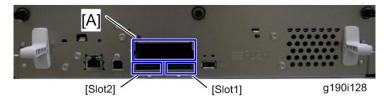

#### I/F Card Slots

• Slot A is used for one of the optional I/F connections (only one can be installed): IEEE1284, IEEE802.11a/g, IEEE802.11g, Bluetooth, Gigabit Ethernet,

#### **SD Card Slots**

- SD Slot 1 is used for PictBridge, Data Overwrite Security Unit. Data Storage Card.
- SD Slot 2 is used for installing the VM card or HDD Encryption Unit or one of the optional applications for service only (for example, updating the firmware).

#### SD Card Appli Move

#### Overview

The service program "SD Card Appli Move" (SP5-873) lets you copy application programs from one SD card to another SD card.

Do not try to copy the VM card or the HDD encryption unit to another SD card.

You cannot run application programs from Slot 2. However you can move application programs from Slot 2 to Slot 1 with the following procedure.

- Make sure that the target SD card has enough space, and put it in slot 1.
- Enter SP5873 "SD Card Appli Move".
- Then move the application from the SD Card in Slot 2 to the card in slot 1.



- Do steps 1-2 again if you want to move another application program.
- Exit the SP mode.

Be very careful when you do the SD Card Appli Move procedure:

- The data necessary for authentication is transferred with the application program from an SD card to another SD card. Authentication fails if you try to use the SD card after you copy the application program from one card to another card.
- Do not use the SD card if it has been used before for other purposes. Normal operation is not guaranteed when such an SD card is used.
- Keep the SD card in the storage place ( NOTE) after you copy the application program from the card to another card. This is done for the following reasons:
  - 1. The SD card can be the only proof that the user is licensed to use the application program.
  - 2. You may need to check the SD card and its data to solve a problem in the future.



• Refer to "Storing the SD card" at the end of this chapter.

#### Move Exec

The menu "Move Exec" (SP5-873-001) lets you copy application programs from the original SD card to another SD card.



Do not turn ON the write protect switch of the system SD card or application SD card on the machine.
 If the write protect switch is ON, a download error (e.g. Error Code 44) occurs during a firmware upgrade or application merge.

- 1. Turn the main switch off.
- 2. Make sure that an SD card is in SD Card Slot 1. The application program is copied to this SD card.
- Insert the SD card with the application program in SD Card Slot 2. The application program is copied from this SD card.
- 4. Turn the main switch on.
- 5. Start the SP mode.
- 6. Select SP5-873-001 "Move Exec."
- 7. Follow the messages shown on the operation panel.
- 8. Turn the main switch off.
- 9. Remove the SD card from SD Card Slot 2.
- 10. Turn the main switch on.
- 11. Check that the application programs run normally.

#### Undo Exec

"Undo Exec" (SP5-873-002) lets you copy back application programs from an SD card to the original SD card. You can use this program when, for example, you have mistakenly copied some programs by using Move Exec (SP5-873-001).

# 


- Do not turn ON the write protect switch of the system SD card or application SD card on the machine.
   If the write protect switch is ON, a download error (e.g. Error Code 44) occurs during a firmware upgrade or application merge.
- 1. Turn the main switch off.
- 2. Insert the original SD card in SD Card Slot 2. The application program is copied back into this card.
- 3. Insert the SD card with the application program in SD Card Slot 1. The application program is copied back from this SD card.
- 4. Turn the main switch on.
- 5. Start the SP mode.
- 6. Select SP5-873-002 "Undo Exec."
- 7. Follow the messages shown on the operation panel.
- 8. Turn the main switch off.
- 9. Remove the SD card from SD Card Slot 2.



- This step assumes that the application programs in the SD card are used by the machine.
- 10. Turn the main switch on.

#### 11. Check that the application programs run normally.

### Storing the SD Card

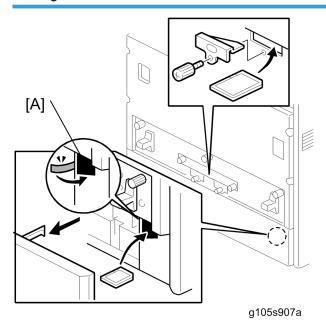

After moving an application, the original SD card must be kept. Keep the SD card in the location [A] shown in the drawing and fasten it with tape.

# 2. Preventive Maintenance

# User Replaceable Items

The user replaces these items if the service contract requires that the user does some of the PM.

İtem	Remarks
PCU	50kP (YMC, BK)
Transfer Belt Unit	100kP
Waste Toner Bottle	50kP
Maintenance Kit:  • Fusing Unit  • Transfer Roller  • Paper Feed Roller x 3  • Friction Pad x 3  • Dust Filter x 2	100kP
Feed Roller Kit (For tray 4)  Paper Feed Roller x 1  Friction Pad x 1	100kP

Chart: A4 (LT), 5%

Mode: Continuously Printing

Environment: Recommended temperature and humidity

Yield changes depend on circumstances and print conditions

An error message appears when a maintenance counter gets to the value in the PM table, when the machine's default settings are used.

It is not necessary to reset counters for each part if the technician does the PM. The machine detects new components automatically and resets the necessary counters.

# **Service Maintenance**

### **Recommended Cleaning Procedure**

- 1. Turn off the main switch.
- 2. Remove the waste toner bottle.
- 3. Remove the PCUs.
- 4. Remove the transfer belt unit.



- Do not touch the transfer belt surface.
- 5. Remove the fusing unit.
- 6. Remove the standard paper tray.
- 7. Clean the paper path.
- 8. Clean all printer rollers with dry cloth only.



- Do not clean the transfer roller.
- 9. Use a blower brush to clean the laser unit windows.
- 10. Vacuum the interior of the printer.
- 11. Carefully clean the area around the transfer roller.

# 3

# 3. Replacement and Adjustment

# **Before You Start**

## **ACAUTION**

• Turn off the main power switch and unplug the machine before you do the procedures in this section.

- Remove these before you do the procedures in this section:
- 4 toner bottles (cyan, magenta, yellow, and black)
- Waste toner bottle
- Standard paper tray

**Special Tools and Lubricants** 

### Tools


Item	Part Number	Description	Q'ty
1	B6455010	SD Card	1
2	B6456705	PCMCIA Card Adapter	1
3	B6456820	USB Reader/ Writer	1
4	VSSM9000	Digital Multimeter - FLUKE87	1
5	G0219350	Loop Back Connector - Parallel	1
6	C4019503	20X Magnification Scope	1
7	A2579300	Grease Barrierta – S552R	1
8	52039502	Silicon Grease G-501	1
9	B6795100	Plug - IEEE1284 Type C	1

# **Electrical Components**





- Before you replace the EGB (Engine Board), the controller, or the NVRAM, print out the SMC reports ("SP Mode Data" and "Logging Data").
- After you replace the EGB (Engine Board) or the controller, remove the NVRAM from the old board and install it on the new board. If the NVRAM on the old board is defective, replace the NVRAM ( NVRAM Replacement procedure).

#### Electrical board unit

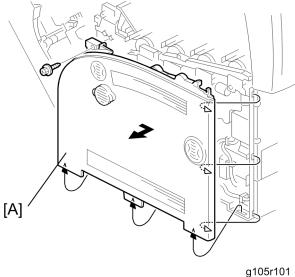


- 1. Front door
- 2. Top cover
- 3. Right cover [A] ( x 1)

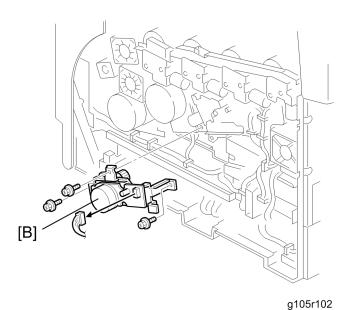


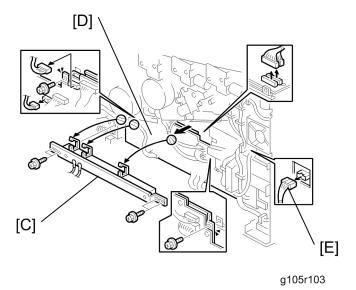

- 5. Side bar [C] (🖗 x 4)
- 7. 🛍 [E] x 1

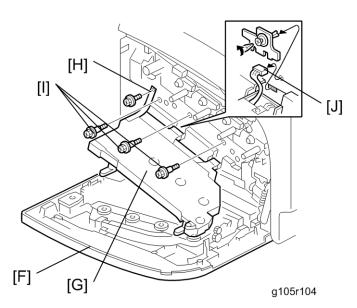


- 8. Left cover [F]
- 9. Drum positioning plate [G]
- 10. Drum positioning plate belt [H] ( $\hat{\mathcal{E}}$  x 1)
- 11. 🖇 [I] x 3, 🗐 [J] x 1

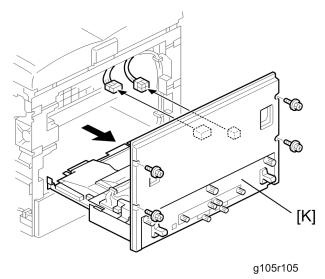


12. Electrical board unit [K] (  $\mathscr{F}$  x 4,  $\mathrel{\mathbb{Z}}$  x 2)

## IOB (Input/Output Board)

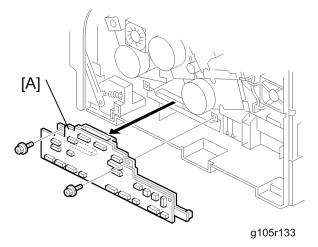


- 1. Front door
- 2. Top cover
- 3. Right cover ( Electrical board unit)
- 4. Side bar ( Electrical board unit)
- 5. IOB [A] (♠ x 2, 🗐 x all)


### **Controller Board**

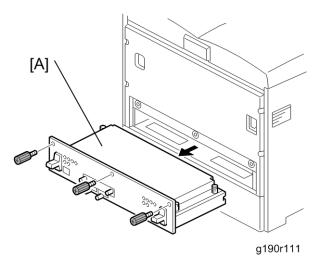

1. Controller unit [A] ( x 3)

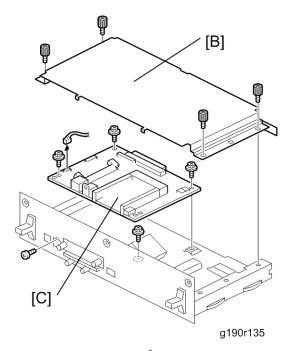

- 2. Controller unit cover [B] ( F x 4)
- 3. Controller board [C] ( $\mathscr{F} \times 5$ ,  $\exists \mathbb{Z} \times 1$ )

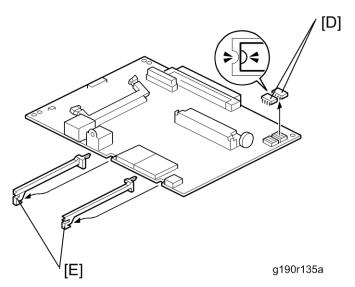

- 4. Two NVRAMs [D]
- 5. Two rails [E]



• Removed NVRAMs musrt be installed on the new board.

### **ACAUTION**

- Keep NVRAMs away from objects that can cause static electricity. The data in NVRAMs can be corrupted by static electricity.
- Make sure the NVRAM is correctly installed on the board. A half-disk is engraved on one side
  of the NVRAM, and a guide mark is on one side of the NVRAM slot. When you install the
  NVRAM, the half-disk and the guide mark must be on the same side.

### Installing the new NVRAM


When the NVRAM on the controller board is detective, you must replace the detective NVRAM with a new NVRAM.

- 1. Controller board (see Controller Board)
- 2. Remove the defective NVRAM.
- 3. Install the new NVRAM on the controller board.
- 4. Reassemble the machine.
- 5. Plug in and turn on the main power
- 6. Set the date and time with the timer setting in the UP (Maintenance > Menu) after installing a new controller board.




• If the date and time setting is not done, Weblmage Monitor cannot be used.

# PSU (Power Supply Unit) Board

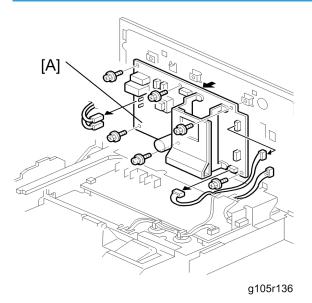

- 1. Electrical boards unit ( Electrical board unit)
- 2. PSU board [A] (♠ x 6, □ x 5)

# High Voltage Power Supply Board 1

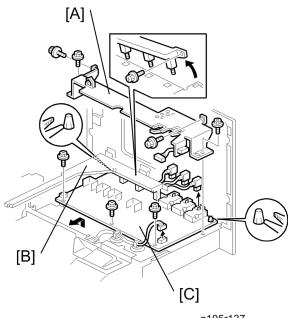


g105r137

- 1. Electrical board unit ( Electrical board unit)
- 2. PSU board ( PSU (Power Supply Unit) Board)
- 3. Electrical board unit frame [A] (F x 4)
- 4. High voltage terminal plate [B] ( \$\hat{\beta} \times 1 )
- 5. High voltage power supply board 1 [C] ( x 4, x 4, stand offs x 2).



Make sure that each high voltage terminal is connected securely after you replace this board.

### EGB (Engine Board) and High Voltage Power Supply Board 2

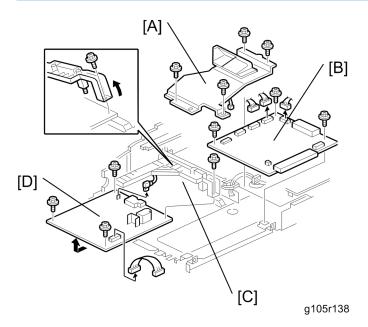

- 1. Electrical board unit ( Electrical board unit)
- 2. EGB shield [A] (♠ x 3, 🗐 x 1)
- 3. EGB [B] (♠x 4, 🗐 x 4)



- Remove the NVRAM from the old board. Then install it on the new board.
- 4. High voltage terminal plate [C] ( \$\hat{\beta} \times 1)
- 5. High voltage power supply board 2 [D] (  $\ensuremath{\widehat{\mathcal{F}}} \times 3$  ,  $\ensuremath{\mathbb{Z}} \!\!\!/ \times 2$  )




• Make sure that each high voltage terminal is connected securely after you replace this board.

### **CAUTION**

- Keep NVRAMs away from objects that can cause static electricity. The data in NVRAMs can be corrupted by static electricity.
- Make sure the NVRAM is correctly installed on the board. A half-disk is engraved on one side
  of the NVRAM, and a guide mark is on one side of the NVRAM slot. When you install the
  NVRAM, the half-disk and the guide mark must be on the same side.

### LCD Panel

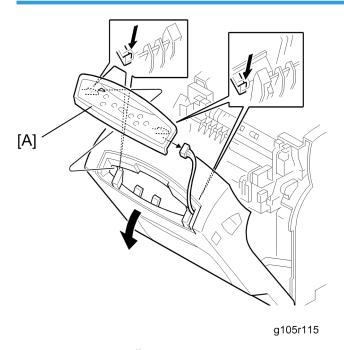

1. LCD panel [A] (🗐 x 1)

### **NVRAM Replacement Procedure**

Make sure that you have the SMC report (factory settings) before beginning the following procedure.

#### NVRAM on the EGB (Engine Board)

For this procedure, you must know the device number and the destination code ( step 8).

- 1. Start the SP mode.
- 2. Use SP5-990 to print out the SMC reports ("SP Mode Data" and "Logging Data") if possible.
- 3. Turn off the main power switch and unplug the power cord.

- 4. Replace the NVRAM on the EGB and reassemble the machine.
- 5. Plug in the power cord.
- 6. Turn on the main power switch.
- 7. Start the SP mode.
- 8. Contact your supervisor to enter the machine's device number.



- SC542 may be displayed until the machine's device number and destination code are programmed properly.
- 9. Turn the main power switch off and on.
- 10. Start the SP mode.
- 11. Use SP5-801-002 to reset the engine settings.
- 12. Reset the meter charge settings (SP5-930-001).
- 13. Enter the SP mode changes previously made at the factory and the field.
- 14. Replace all maintenance kits with new ones.

#### **NVRAM** on the Controller

- 1. Start the SP mode.
- 2. Use SP5-990 to print out the SMC reports ("SP Mode Data" and "Logging Data") if possible.
- 3. Use SP5-824 to upload the NVRAM data if possible.
- 4. Turn off the main power switch and unplug the power cord.
- 5. Replace the NVRAM on the controller and reassemble the machine.
- 6. Plug in the power cord.
- 7. Turn on the main power switch.
- 8. Start the SP mode.
- 9. Use SP5-825 to download the NVRAM data if possible. If it can be done, the following steps are not required.
- 10. Use Memory Clear (SP5-801) to reset this data:
  - SCS (SP5-801-003)
  - PRT (SP5-801-008)
  - NCS (SP5-801-011)
- 11. Do Counter Clear (SP7-810).
- 12. Make these contract-related settings:
  - Counter Method (SP5-045)

- Telephone Number Setting > Fax Telephone Number (SP5-812-002) if the meter charge mode (SP5-930-001) is "ON" (enabled)
- 13. Enter the SP mode changes previously made at the factory and the field.

#### **NVRAMs on the EGB and Controller**

For this procedure, you must know the device number and the destination code ( step 10).

- 1. Start the SP mode.
- 2. Use SP5-990 to print out the SMC reports ("SP Mode Data" and "Logging Data") if possible.
- 3. Use SP5-824 to upload the NVRAM data if possible.
- 4. Turn off the main power switch and unplug the power cord.
- 5. Replace the NVRAMs on the EGB and the controller, and reassemble the machine.
- 6. Plug in the power cord.
- 7. Turn on the main power switch.
- 8. Start the SP mode.
- 9. Use SP5-825 to download the NVRAM data if possible.
- 10. Contact your supervisor to enter the machine's device number.



- SC542 may be displayed until the machine's device number and destination code is programmed properly.
- 11. Turn the main power switch off and on.
- 12. Start the SP mode.
- 13. Use SP5-801-002 to reset the engine settings.
- 14. Use Memory Clear (SP5-801) to reset this data:
  - SCS (SP5-801-003)
  - PRT (SP5-801-008)
  - NCS (SP5-801-011)
- 15. Do Counter Clear (SP7-810).
- 16. Reset the meter charge settings (SP5-930-001).
- 17. Make these contract-related settings:
  - Counter Method (SP5-045)
  - Telephone Number Setting > Fax Telephone Number (SP5-812-002)
- 18. Enter the SP mode changes previously made at the factory and the field.
- 19. Replace all maintenance kits with new ones.


# **Laser Optics**

### **MARNING**

• Turn off the main power switch and unplug the printer before you do the procedures in this section. Laser beams can cause serious eye injury.

#### **Caution Decal Locations**

The caution decal is attached as shown below

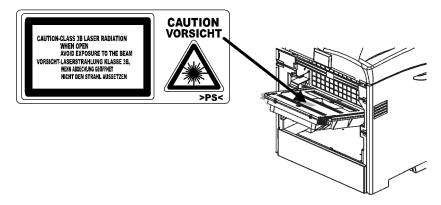

### **MARNING**


 Make sure to turn off the main power switch and disconnect the power plug from the power outlet before you do any disassembly or adjustment of the laser unit. This printer uses a class 3B laser beam with a wavelength of 648 to 663 nm and an output of 9 mW. The laser can cause serious eye injury.

#### **LD Unit**

#### Replacement



• Print the SMC report with SP 5990 2 before you replace the LDU.

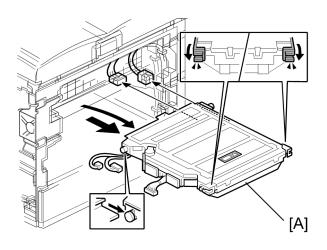


g105r106

- 1. Electrical board unit ( Electrical board unit)
- 2. LDU [A]

#### **Color Registration Adjustment**



- You must manually do the color registration adjustment after you install the new LDU.
- When the polygon mirror motor or LDB unit is defective, only replace the defective parts. At this time, if only the motor is changed it is not necessary to do this adjustment procedure.
- Print the SMC report with SP 5990 2 before you replace the LDU. Find the values for SP 2181 1, SP 2181 11, 2181 21, and 2181 31.
- 2. Do SP 2111 2 (Pro. Position Adj > Execute) to roughly adjust the line position after you install the new LDU. "Result = OK" shows on the LCD if this is done correctly. If not, do it again until you get "OK".
- 3. Do SP2111 3 (Skew Adjust. > Execute) to measure the skew values for each color. "Result = OK" shows on the LCD if this is done correctly. If not, do it again until you get "OK".
- 4. Check the skew values with SP 2181: Then write down the values. (You can also check these if you print the SMC report again with SP 5990 2. The values will probably be different from the values on the report that you printed in step 1.)
  - SP 2181 1 for black skew
  - SP 2181 11 for magenta
  - SP 2181 21 for cyan
  - SP 2181 31 for yellow

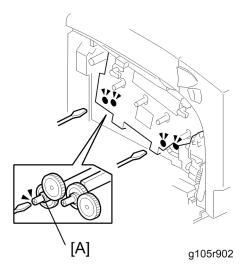


- 5. Open the left cover
- Adjust the skew adjustment cam [A] for each color with a screwdriver. You must adjust the skew values
  for each color until they are all the same as the value for magenta that you found in step 1, before
  you replaced the LDU.
  - For example: If the new value for K (after step 4) is -300 and the old value for magenta (in step 1) is -250, you must adjust the skew for K until it is -250.
  - Turn the cam as shown in the "Cam Rotation Direction" column below to increase the skew value.
  - Turn it in the opposite direction from this to decrease the skew value.
  - "Adjustment value" shows the change when you turn the cam one click.

Color	Cam Rotation Direction	Adjustment Value
Yellow	CW	14 μm
Cyan	CW	10 μm
Magenta	CCW	10 μm
Black	CCW	10 μm




- The adjustment values in the table are not exact values. These are approximate values.
- CW: Clockwise, CCW: Counter-clockwise

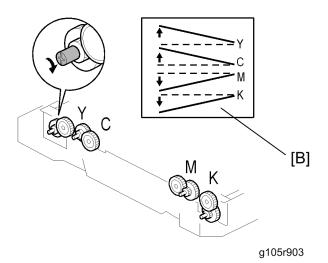

- The diagram shows the effect on line skew [B] when you turn the cam in a counter clockwise direction.
- 7. Close the left cover. Then measure the skew values again with SP 2111 3. (To do this, repeat step 3.)
  - If these are close to the value for magenta that you found in step 1 (within one click in the above table), go to the next step. If not, do SP 2111 3 again until you get a good result.
- 8. Do SP 2111 1 to finely adjust the line position for each color.
  - Try SP 2111 2 if "Result = OK" does not show.
- 9. When you get "Result = OK", this adjustment is completed.

### LDB

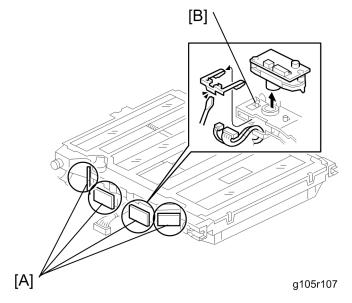


- 1. LDU ( LD unit)
- 2. LDB [A] (🗐 x 2)



• Make sure that the spring plate [B] holds the LDB unit.

# Polygon Mirror Motor

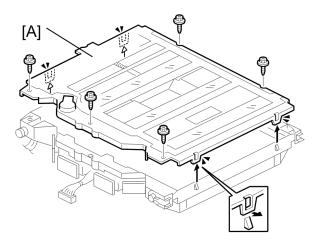


g105r108

1. LDU ( LD unit)

2. Top cover [A] ( F x 5, tabs x 4)




• Do not touch the mirrors. Clean with an optics cloth if you touch the mirrors.

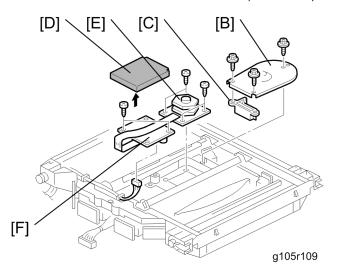

- 3. Polygon motor cover [B] (  $\mbox{\ensuremath{\beta}}\mbox{ x 3), shading plate [C], sponge [D]}$
- 4. Polygon mirror motor [E] ( $\mathscr{F}$  x 4), drive board [F] ( $\mathscr{F}$  x 2, x = 1, 1 flat cable)

# Laser Synchronizing Detector Boards

1. LDU ( LD unit)

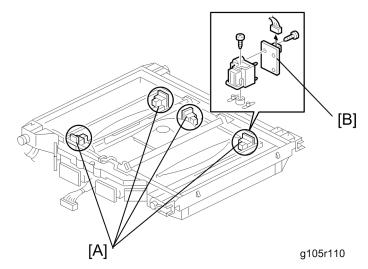


- 2. Top cover
- 3. Synchronizing detector board unit [A] (  $\ensuremath{\mathscr{F}}$  x 1)

**U** Note


4. Synchronizing detector board [B] ( $\mathscr{F}$  x 1,  $\bowtie$  x 1)

• Do not touch the mirrors. Clean with an optics cloth if you touch the mirrors.

### LDU Shutter Motor Unit and Sensor

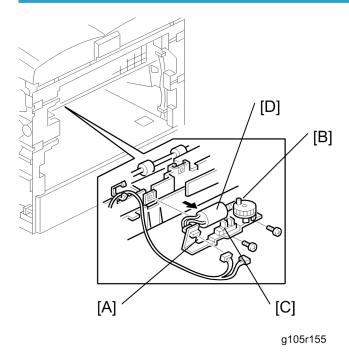


- 1. Electrical board unit ( Electrical board unit)
- 2. LDU ( LD unit)
- 3. LDU shutter motor unit [A] ( $\mathscr{F}$  x 2,  $\mathfrak{P}$  x 2,  $\mathfrak{P}$  x 1)
- 4. Slide up the gear [B] (© x1).
- 5. LDU shutter sensor [C]
- 6. LDU shutter motor [D] ( $\mathscr{F} \times 2$ ,  $\square \times 1$ )

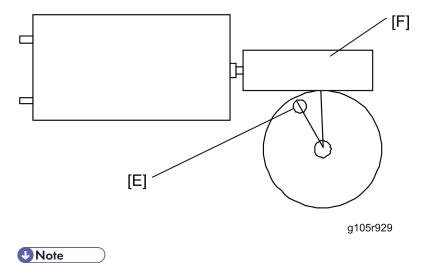


• To do this, place the projection [E] of the gear as shown in the diagram below. The worm gear [F] must turn.

# **Paper Feed**

# Paper Feed Roller

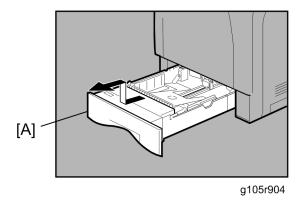


1. Standard tray [A]

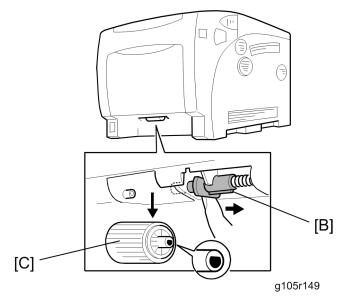

- 2. Slide the side roller holder [B]
- 3. Paper feed roller [C]

## **Paper Friction Pad**

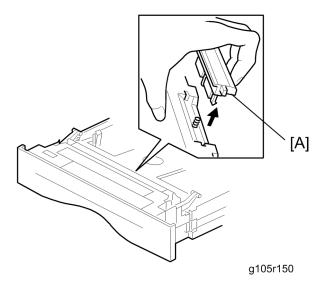


- 1. Standard tray ( Paper feed roller)
- 2. Paper friction pad [A]




• Make sure that the paper friction pad stick is put through the spring when you reassemble it.

# By-Pass Paper Size Sensor

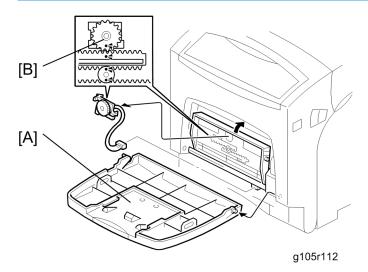


- 1. By-pass tray cover [A]
- 2. By-pass paper size sensor [B] (■ x 1)


# By-Pass Feed Roller, Friction Pad

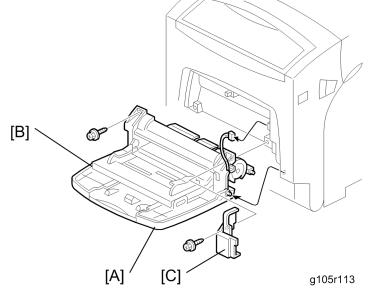

- 1. By-pass tray cover [A]

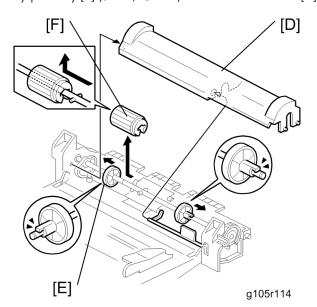

- 3. By-pass feed shaft cover [D]
- 4. Move the holding roller left [E]
- 5. By-pass feed roller [F]

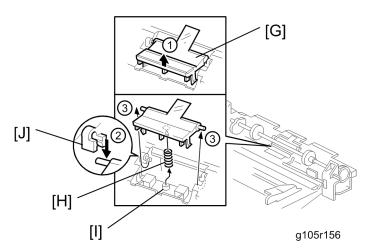


- 6. By-pass friction pad [G]
- Pull up the edge of the by-pass friction pad (11).
- Pull the by-pass friction pad forward. When you do this, hold down the edge where its shaft is located
   (2).

#### Reassembling the by-pass friction pad

- 1. Place the spring [H] on the projection [I] of the by-pass tray.
- 2. Hold down the by-pass friction pad after you put the spring on the projection of pad's reverse side (3).
- 3. Release the by-pass tray friction pad when it passes through the bushing [J].
- 4. Pull up the shaft of the by-pass friction pad to the busing until it is clicked.


## **Registration Sensor**

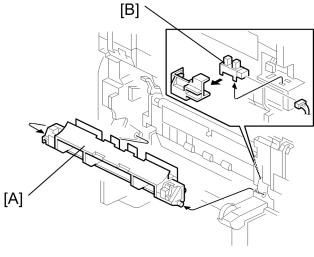

g105r139


- 1. Front Door
- 2. Fusing unit (Fusing unit)
- 3. Registration guide [A]
- 4. Registration sensor [B] (□ x 1)

# Paper Volume Sensor, End Sensor and Paper width Sensor

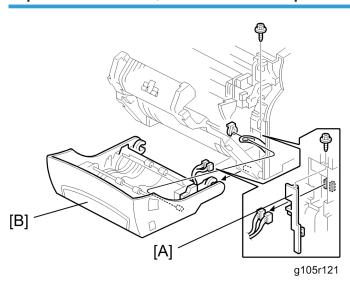


1. Standard tray ( Paper feed roller)


- 2. Front door
- 3. Fusing unit (Fusing unit)
- 4. Harness cover [A] (🛱 x 1)
- 5. Front door cover [B] ( $\bigcirc$  x 1,  $\square$  x 2)

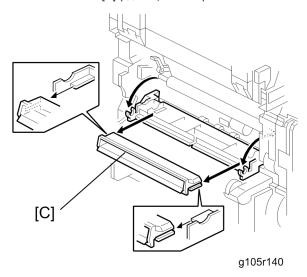

- 6. Registration guide ( Registration sensor)
- 7. Paper dust case holder [C]

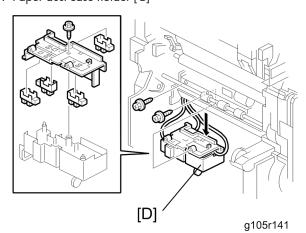

8. Tray paper sensor box [D] (🛱 x 2)

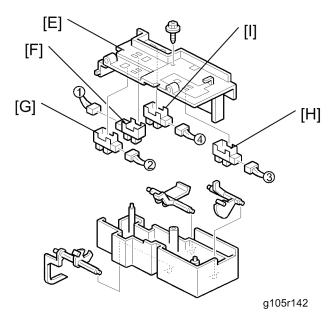


- 9. Tray paper sensor box cover [E] ( F x 1,)
- 10. Paper height sensor [F] (□ x 1)
- 11. Paper height sensor [G] (■ x 1)
- 12. Paper end sensor [H] (□ x 1)
- 13. Paper width sensor [I] (□ x 1)




• Each sensor and each cable have a number written on them. Make sure to connect the correct cables to each sensor.

## Paper Size Sensor and Temperature/ Humidity Sensor

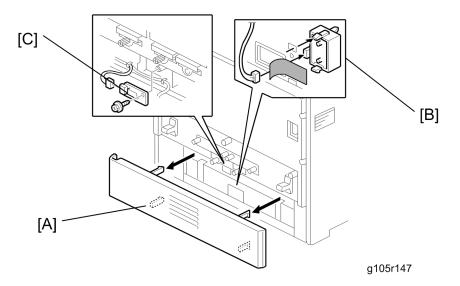


- 1. Standard tray ( Paper feed roller)
- 2. Rear cover [A]
- 3. Paper size sensor [B] (□ x 1)
- 4. Temperature/Humidity sensor [C] (♠ x 1, x 1)

## Paper Feed Motor

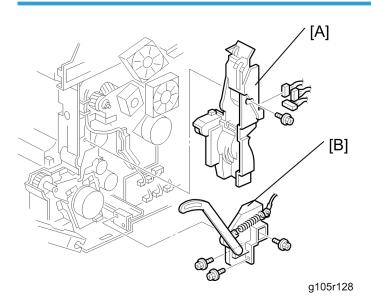

- 1. Front door cover ( Paper volume sensor, end sensor and paper width sensor)
- 2. Right cover ( x 1)
- 3. Side bar ( Electrical board unit)
- 4. Harness guide [A] (ℰ x 1, 🖼 x 3)
- 5. Front support unit [B] ( F x 3)
  - 1
- 6. Paper feed motor [C] (₹ x 4, □ x 1)

### Paper Registration Clutch, Paper Feed Clutch and By-Pass Clutch

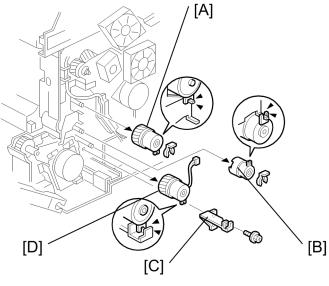


g105r129

- 1. Front door
- 2. Front door cover ( Electrical board unit)
- 3. Right cover ( Electrical board unit)
- 4. Side bar ( Electrical board unit)
- 5. Harness cover ( Duplex motor and inverter motor)
- 6. Paper registration clutch [A] (⟨⟨⟨⟩ x 1, h x 1)
- 7. By-pass clutch [B] (⟨⟨⟨⟩ x 1, □⟨⟨ x 1⟩
- 8. Front support unit ( Transfer roller contact motor)
- 9. Paper feed clutch support [C] ( \*x 1)
- 10. Paper feed clutch [D] (□ x 1)

#### 3


# **Development**

# Color Development Motor, Color OPC Motor and Black OPC/Development Motor

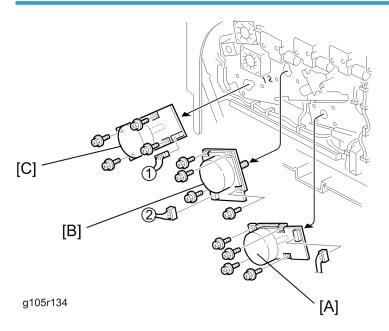


- 1. Front door
- 2. Right cover ( Electrical board unit)
- 3. Color development motor [A] (♠ x 4, 🗐 x 1)
- 4. Color OPC motor [B] (♠ x 4, 🗐 x 1)
- 5. Black OPC/development motor [C] (🖗 x 4, 🗐 x 1)

# Development Clutch

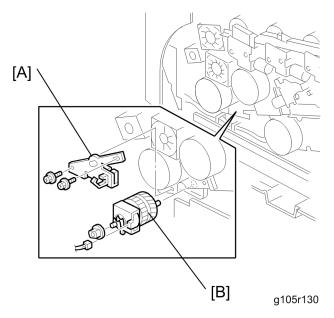


- 1. Front door
- 2. Top cover
- 3. Right cover ( Electrical board unit)
- 4. Development clutch plate [A] ( $\mathscr{F} \times 2$ )
- 5. Development clutch [B] (metal pin x 1,  $\square$  x 1)

### Transfer Belt Contact Motor

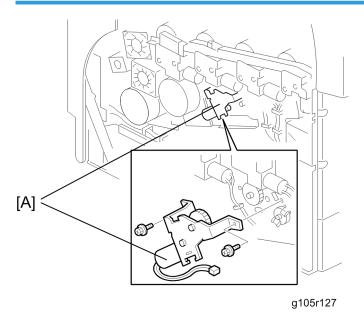


- 1. Front door
- 2. Top cover
- 3. Right cover ( Electrical board unit)
- 4. Transfer belt contact motor unit [A] (  $\mbox{\ensuremath{\not\sim}} \times 2$  ,  $\mbox{\ensuremath{\square}}\mbox{\ensuremath{\square}} \times 1)$

# **Toner Supply Motor**

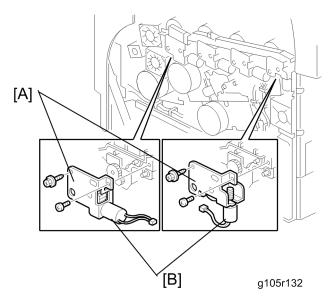


- 1. Front cover
- 2. Top cover
- 3. Right cover ( Electrical board unit)
- 4. Toner supply motor unit [A] (♠ x 2, 🖼 x 1)
- 5. Toner supply motor [B] ( Fx 2)

## **Transfer Roller Contact Motor**

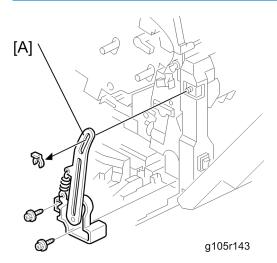


1. Front door

- 2. Left cover
- 3. Front door support unit [A] ( $\mathscr{F} \times 2$ ,  $\langle \overline{\mathbb{S}} \rangle \times 1$ )

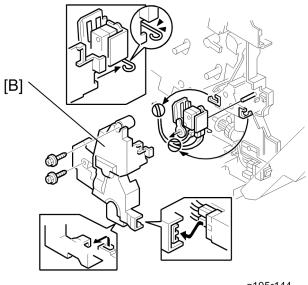


g105r144

4. Inner cover [B] ( 🛱 x 2)

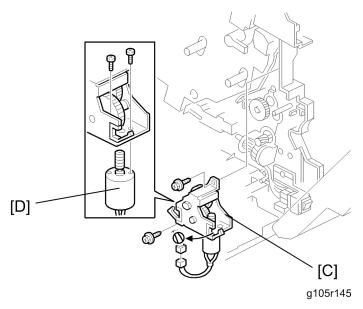

- 5. Transfer roller contact motor unit [C] (  $\ensuremath{\mathscr{E}}$  x 2,  $\ensuremath{\mathbb{Z}}^{\parallel}$  x 1)
- 6. Transfer roller contact motor [D] ( $\mathscr{F} \times 2$ )

# ID Sensors

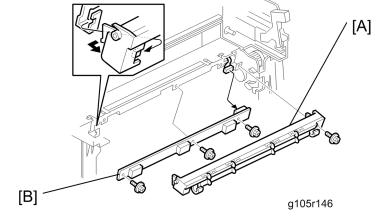

- 1. Front door
- 2. Fusing unit ( Fusing unit)
- 3. ID sensor cover [A] ( 🛱 x 1)
- 4. ID sensor bracket [B] (ℰ x 3, 🗐 x 1)



- Do SP 2111 4 to adjust the ID sensors after you replace the ID sensor.
- Do SP 3148 1 to input the bar code number of the ID sensor board.


# **Drive**

### **Drive unit**

- 1. Top cover
- 2. Front door
- 3. Left cover
- 4. Transfer belt unit
- 5. PCU x 4
- 6. Toner bottle x 4
- 7. Toner supply motor unit x 4 ( Toner supply motor)




• Clean the toner hopper and toner transport path before you remove the toner supply motor unit. If not, toner scattering can occur.

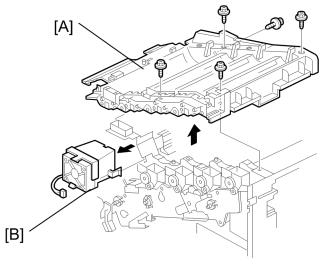

g105r151

- 8. Right cover ( Electrical board unit)
- 9. Top frame [A] ( F x 5)
- 10. Fusing unit fan [B] (■ x 1)

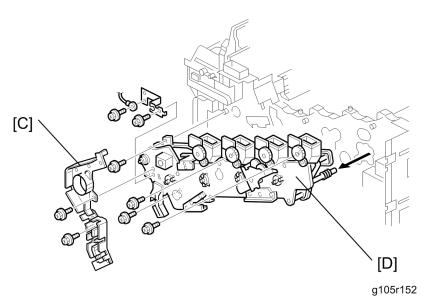


- 11. Harness guide [C] (🛱 x 2)

# **Duplex**


# **Duplex Jam Sensor**

1. Front door cover ( Paper volume sensor, end sensor and paper width sensor)

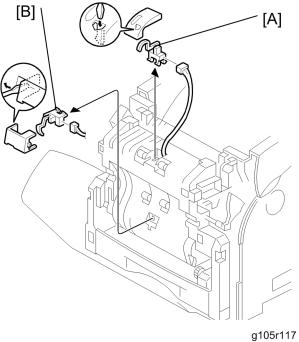

- 3
- 2. Duplex jam sensor 1 [A] (□ x 1)
- 3. Duplex jam sensor 2 [B] (□ x 1)


### **Inverter Sensor**

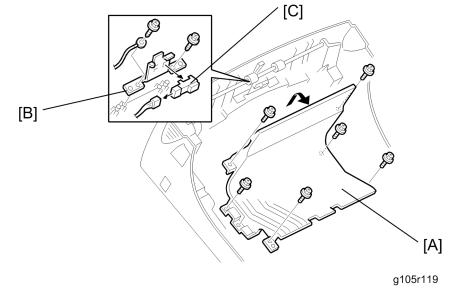


- 1. Front door
- 2. Duplex paper guide plate [A] ( Fx 6)
- 3. Inverter sensor board [B]
- 4. Inverter sensor [C] (□ x 1)

# Duplex Motor and Inverter Motor

- 1. Front door
- 2. Front door cover ( Paper volume sensor, end sensor and paper width sensor)

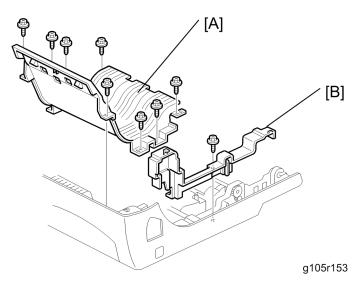

- 3. Duplex paper guide plate [A] ( $\hat{F} \times 6$ )
- 4. Harness cover [B] ( 🛱 x 2)

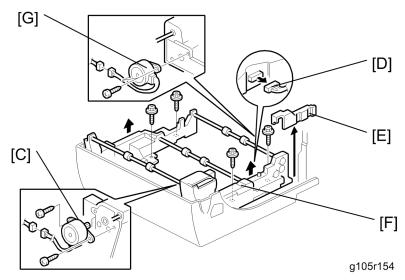


- 5. Inverter motor [C] (இ x 2, □ x 1)
- 6. Harness [D]
- 7. Harness cover [E]
- 8. Duplex roller unit [F] (\$\hat{F} x 4)
- 9. Duplex motor [G] (⋛ x 2, 🗐 x 1)

# **Fusing**

## **ACAUTION**

- Make sure that the fusing unit is cool before you touch it. The fusing unit can be very hot.
- Make sure to restore the insulators, shields, etc after you service the fusing unit.


## **Fusing Unit**

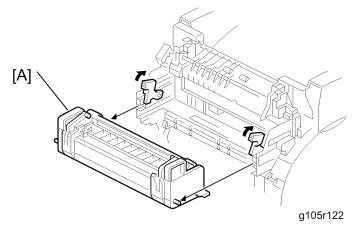


- 1. Front door
- 2. Fusing unit [A]

### Thermistor and Thermostat

- 1. Front door
- 2. Fusing unit (see above)

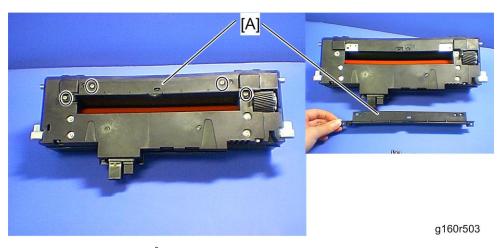


3. Fusing unit guide plate [A] ( $\mathscr{F} \times 4$ )

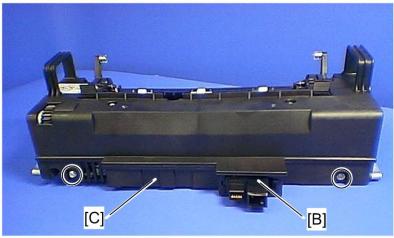

g160r504

- 4. Release the connector [B] from the fusing lower cover [C] (hook  $\times$  1).
- 5. Fusing lower cover [C] ( $\mathscr{F}$  x 2)

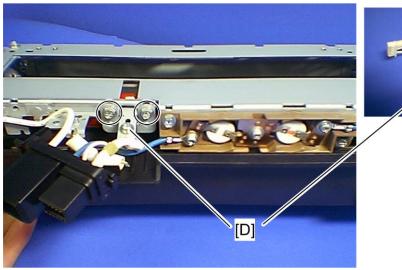




g160r505

6. Thermistor with bracket [D] (⋛ x 2, 🗐 x 1)




Do not remove the thermistor from the bracket when removing it. The pressure of the thermistor
plate to the fusing belt is adjusted properly in the factory. If you remove it, some image problem
may occur.

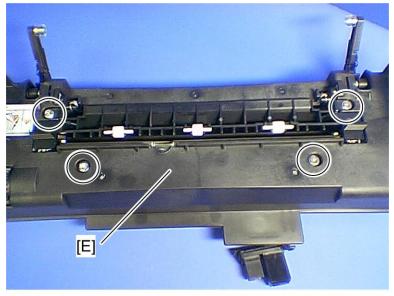

g160r506

7. Fusing upper cover [E] ( F x 4)

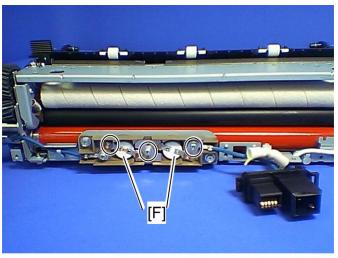


g160r507

8. Thermostat [F] x 2 (\$\hat{F}\$ x 3)



• Do not recycle a thermostat that is already opened. Safety is not guaranteed if you do this.


## **Fusing Lamp**

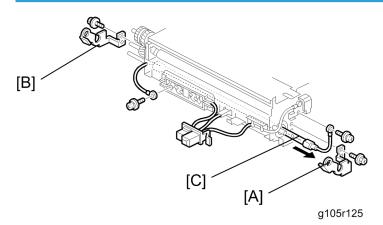

- 1. Fusing unit
- 2. Fusing unit upper and lower cover ( Thermistor and thermostat)
- 3. Fusing supporter right and left plate ( Thermistor and thermostat)
- 4. Fusing lamp supporter right [A] ( $\hat{\mathscr{E}} \times 1$ ) and left plate [B] ( $\hat{\mathscr{E}} \times 1$ )
- 5. Fusing lamp [C] ( x 2)


# Fusing Exit Sensor and Paper Exit Sensor

- 1. Front door
- 2. Paper exit unit ( Fx 3)

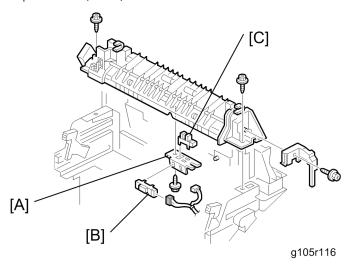


- 3. Sensor board [A] ( $\mathscr{F} \times 1$ ,  $\bowtie \times 2$ )
- 4. Fusing exit senor [B]
- 5. Paper exit sensor [C]

# **Fusing Registration Sensor**

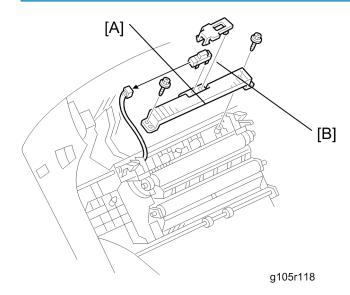

- 1. Front door
- 2. Paper guide [A] (ℱ x 2, ᇦ x 1)
- 3. Fusing registration sensor [B]

### **Fan Direction**

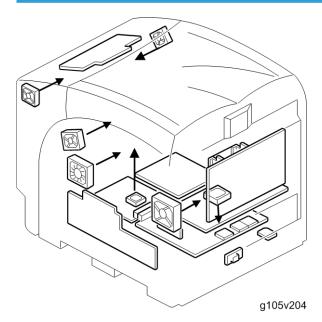

**U** Note

• You must reinstall the cooling fans in the original orientations. Do not reinstall the cooling fans opposite to the original orientations, or the air will be blown in the wrong directions.

# **Adjustments**

#### Gamma Adjustment




 Clean and/or replace related parts first to solve color quality problems. Do these procedures if adjustments are necessary.

#### **Summary**

To adjust the printer gamma:

- Select the print mode you want to calibrate
- Print a color calibration test sheet
- Make the gradation scales on the printout smooth from the lowest to the highest density. Adjust the
  CMY gradation scale at the top of the chart by balancing the density of the C, M, and Y gradation
  scales the CMY gray scale should change smoothly from minimum to maximum. There should be no
  coloration.

Examine this color adjustment sheet:

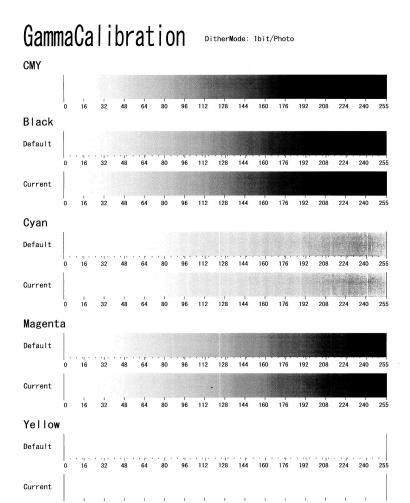

You can adjust 15 points for each color: (example [A]) between 0 (lowest density) [B] and 255 (highest density) [C]. For each point, you can adjust the density within 0 and 255.

The gradation scales marked 'Default' are printed according to the default gamma settings in the flash ROM in the controller. The gamma adjustment changes the densities at the adjustable points in the gradation scale. The gradation scale marked "Current" shows the current settings.

Compare the "Current" gradation scale with the 'Default' at the time you do the adjustment procedure. Select the density for each of the 15 adjustable points, excluding points 0 and 255, from the 'Default' gradation scale.

The NVRAM holds three sets of controller gamma settings:

• Those saved this time: Controller SP 1101 ToneCtlSet - Tone (Current)

- Those saved in the previous adjustment: Controller SP 1101 ToneCtlSet Tone (Prev)
- The factory settings: Controller SP 1101 ToneCtlSet Tone (Factory).

#### **Adjustment Procedure**

- 1. Enter the controller service mode.
- 2. Use the down arrow key to select Controller SP 1102 "ToneCtlSet". Then press the Enter key.
- 3. Use the up/down key to select the mode you want to calibrate, Then press the Escape key until you get back to the controller service mode menu.
- 4. Use the down arrow key to select Controller SP 1103 "PrnColorSheet". Then press the Enter key.
- 5. Use the up/down key to select Controller SP 1103 001 "ToneCtlSheet" (normally this is displayed by default). Then press the Enter key.
- 6. When "Execute?" shows, press the Enter key to print out the "color calibration test sheet".
- 7. Press the Escape key 2 times to exit from the menu when "Execute OK" shows. (You return to Controller SP 1103 "PrnColorSheet" in the controller service menu.)
- 8. Use the down arrow key to select Controller SP 1104 "ToneCtlValue". Then press the enter key.
- 9. Use the up/down arrow key to select the setting you want to adjust. Then press the enter key. The three digits in the display (example '016') indicate a position on the color calibration test sheet.

Operation Panel Display	Color Calibration Test Sheet
Set Black 1	Default Value 16
Set Black 2	Default Value 32
Set Black 3	Default Value 48
:	:
:	:
Set Black 13	Default Value 208
Set Black 14	Default Value 224
Set Black 15	Default Value 240
Set Cyan 1 to 15	See Set Black 1 to 15
Set Magenta 1 to 15	See Set Black 1 to 15
Set Yellow 1 to 15	See Set Black 1 to 15

Adjust the color density at each of the 15 points for each of the four colors.



- Do these to decide what density value to input:
- Look at the color adjustment sheet.
- · Look at the gradation scale entitled 'Default' for the color you want to adjust.
- · Go along the scale until you reach the density you want to input.
- Read off the value on the scale and store it in the machine:
- Use the up/down key to move the cursor along the three-digit display. Then press the Enter key.
- Use the up/down key to change the digit at the cursor. Then press the Enter key.
- Press the Escape key to exit from the menu.
- Do the same for all 15 points.
- 10. When the density setting is complete for all colors, print out a color adjustment sheet again and make sure that the gradation scale for each printed color is smooth and that the CMY gradation scale is gray. Do the adjustment again if there is an anomaly (normally, repeat this procedure 3 to 5 times).
- 11. Do these when the adjustment results are satisfactory:
  - Use Controller SP 1105 "ToneCtlSave" in the controller service menu, to store the new settings in the controller.
  - Reset the controller (press the [Reset] key when the machine is off line") to use the new settings.



• You must reset the controller to keep the new settings in the controller NVRAM.

# 4. Troubleshooting

# **Process Control Results**

The table below lists the process control results shown in SP 3821.

Number	Result	Notes
10	Success	No error
21	ID sensor correction error	SC 400
22	ID sensor: LED adjustment error	SC 418
31	Charge bias correction error	SC 300 to 307
51	High Vmin (Bk), High K2 (Color) error	SP 3145 (see the note below the table)
52	Low K2 (Color) error	SP 3146 (see the note below the table)
53	High K5 error	SP 3147 (see the note below the table)
54	Low K5 error	SP 3147 (see the note below the table)
55	High development gamma	Gamma > 5.0 (see the note below the table)
56	Low development gamma	Gamma < 0.5 (see the note below the table)
57	Development bias adjustment error	Vk >150V (see the note below the table)
58	Development bias adjustment error	Vk < -150V (see the note below the table)
90	No process control	-
99	Not successful	Interrupt during the process control (e.g. Door open)



 This error code does not usually occur. If no problem is observed with image density and/or development gamma, nothing needs to be done. If an image problem such as low image density is observed, check the following points: Transfer belt/PCU/ID sensor/Toner bottle

The 8 numbers on the LCD in SP 3821 indicate the process control result for each color.

There are two numbers for each color. The numbers are shown from left to right on the display as follows: Black, Magenta, Cyan, Yellow. For example, if process control for each color is successful: 10 (Black), 10 (Magenta), 10 (Cyan), 10 (Yellow)

# **Service Call Conditions**

#### Summary

- 1. All SCs are logged.
- 2. First disconnect then reconnect the connectors before you replace the PCBs if the problem concerns electrical circuit boards.
- 3. First check the mechanical load before you replace motors or sensors if the problem concerns a motor lock.

There are 4 levels of service call conditions.

Level	Definition	Reset Procedure
А	To prevent damage to the machine, the main machine cannot be operated until a service representative has reset the SC.	Do SP 5810, and then turn the main power switch off and on.
В	SCs that disable only the features that use the defective item. Although these SCs are not shown to the user under normal conditions, they are displayed on the operation panel only when the defective feature is selected.	Turn the operation switch or main switch off and on.
С	The SC history is updated. The machine can be operated as usual.	The SC will not be displayed. Only the SC history is updated.
D	Turning the main switch off then on resets SCs displayed on the operation panel. These are redisplayed if the error occurs again.	Turn the operation switch off and on.

## **SC Code Descriptions**



- Remove the NVRAM from the old board and install it on the new one when you replace the EGB or the controller board.
- The SC level is indicated under SC number in the list below.
- The numbers (1, etc.) in the "Possible Cause/Requirement Action" column indicate the required actions.

## **Engine SC**

SC [Level]	Symptom	Possible Cause/Required Action
	Incorrect serial number	
195 [D]	When checking the registered product number, it does not match the printer's product number.	<ul> <li>Registered product number does not match the printer's product number.</li> <li>1. Ask your service key man.</li> </ul>
	Polygon motor error: Time out v	with the polygon motor activated
202 [D]	After the polygon motor turns on or changes the speed, SCRDY_N is not active within 10 seconds.	Disconnected cable from the polygon motor drive board or defective connection     Defective polygon motor or drive board
	Polygon motor error: Time out v	with the polygon motor inactivated
203 [C]	After the polygon motor turns off or changes the speed, SCRDY_N is not inactive within 10 seconds.	<ul> <li>Disconnected cable from the polygon motor drive board or defective connection</li> <li>Defective polygon motor or drive board</li> </ul>
	Polygon motor error: XSCRDY signal error	
204 [C]	PMRDY_N signal consecutively detects that the polygon motor is an inactive state while LDB unit scans.	<ul> <li>Disconnected cable from the polygon motor drive board or defective connection</li> <li>Defective polygon motor or drive board</li> <li>1. Check the connectors.</li> <li>2. Replace the polygon motor.</li> <li>3. Replace the polygon motor drive board.</li> </ul>
	Polygon motor error: XSCRDY signal not stable	
205 [D]	PMRDY_N signal consecutively detects that the polygon motor is an inactive state while the polygon motor turns on or changes the speed.	<ul> <li>Disconnected cable from the polygon motor drive board or defective connection</li> <li>Defective polygon motor or drive board.</li> <li>1. Check the connectors.</li> <li>2. Replace the polygon motor.</li> <li>3. Replace the polygon motor drive board.</li> </ul>

SC [Level]	Symptom	Possible Cause/Required Action
	Trailing edge laser detection error: [K]	
210 [C]	The laser synchronizing detection signal for LDB [K] of the trailing edge is not detected for one second after the LDB unit turned on when detecting the main scan magnification.	<ul> <li>Disconnected cable from the laser synchronizing detection unit or defective connection</li> <li>Defective laser synchronizing detector</li> <li>Defective LDB</li> <li>Defective EGB</li> <li>Check the connectors.</li> <li>Replace the laser-synchronizing detector.</li> <li>Replace the LDB.</li> <li>Replace the EGB.</li> </ul>
	Trailing edge laser detection error: [Y]	
211 [C]	The laser synchronizing detection signal for LDB [Y] of the trailing edge is not detected for one second after the LDB unit turned on when detecting the main scan magnification.	Same as SC 210
	Trailing edge laser detection error: [M]	
212 [C]	The laser synchronizing detection signal for LDB [M] of the trailing edge is not detected for one second after the LDB unit turned on when detecting the main scan magnification.	Same as SC 210
	Trailing edge laser detection er	ror: [C]
213 [C]	The laser synchronizing detection signal for LDB [C] of the trailing edge is not detected for one second after the LDB unit turned on when	Same as SC 210

SC [Level]	Symptom	Possible Cause/Required Action
	detecting the main scan magnification.	
	Laser Synchronizing Detection	Error: LDB of the leading edge [K]
220 [D]	The laser synchronizing detection signal for LDB [K] of the leading edge is not output for two seconds after LDB unit turns on while the polygon motor is rotating normally.	<ul> <li>Disconnected cable from the laser synchronizing detection unit or defective connection</li> <li>Defective laser synchronizing detector</li> <li>Defective LDB</li> <li>Defective EGB</li> <li>Check the connectors.</li> <li>Replace the laser-synchronizing detector.</li> <li>Replace the LDB.</li> <li>Replace the EGB.</li> </ul>
	Leading edge laser detection e	rror: [Y]
222 [D]	The laser synchronizing detection signal for LDB [Y] of the leading edge is not output for two seconds after LDB unit turns on while the polygon motor is rotating normally.	Same as SC 220
	Leading edge laser detection error: [M]	
224 [D]	The laser synchronizing detection signal for LDB [M] of the leading edge is not output for two seconds after LDB unit turns on while the polygon motor is rotating normally.	Same as SC 220
	Leading edge laser detection e	rror: [C]
226 [D]	The laser synchronizing detection signal for LDB [C] of the leading edge is not output for two seconds after LDB unit	Same as SC 220

SC [Level]	Symptom	Possible Cause/Required Action
	turns on while the polygon motor is rotating normally.	
	FGATE: On error [K]	
230 [C]	The PFGATE ON signal does not assert within 5 seconds after processing the image in normal job or MUSIC for [K] starts.	<ul> <li>Defective connection between the controller board and EGB</li> <li>Defective cable between the EGB and LDB</li> <li>Check the connectors.</li> <li>Replace the LDB.</li> <li>Replace the EGB.</li> </ul>
	FGATE: Off error [K]	
231 [C]	The PFGATE ON signal still asserts within 5 seconds after processing the image in normal job or MUSIC for [K] ends.  The PFGATE ON signal still asserts when the next job starts.	<ul> <li>Defective connection between the controller board and EGB</li> <li>Defective cable between the EGB and LDB</li> <li>Check the connectors.</li> <li>Replace the LDB.</li> <li>Replace the EGB.</li> </ul>
	FGATE: On error [Y]	
232 [C]	The PFGATE register of GAVD does not assert within 5 seconds after processing the image in normal job or MUSIC for [Y] started.	Same as SC 230
	FGATE: Off error [Y]	
233 [C]	The PFGATE ON signal still asserts within 5 seconds after processing the image in normal job or MUSIC for [K] ends. The PFGATE ON signal still asserts when the next job starts.	Same as SC 231

SC [Level]	Symptom	Possible Cause/Required Action
	FGATE: On error [M]	
234 [C]	The PFGATE register of GAVD does not assert within 5 seconds after processing the image in normal job or MUSIC for [M] started.	Same as SC 230
	FGATE: Off error [M]	
235 [C]	The PFGATE ON signal still asserts within 5 seconds after processing the image in normal job or MUSIC for [M] ends.  The PFGATE ON signal still asserts when the next	Same as SC 231
	job starts.	
236 [C]	FGATE: On error [C]  The PFGATE register of GAVD does not assert within 5 seconds after processing the image in normal job or MUSIC for [C] started.	Same as SC 230
	FGATE: Off error [C]	
237 [C]	<ul> <li>The PFGATE ON signal still asserts within 5 seconds after processing the image in normal job or MUSIC for [C] ends.</li> <li>The PFGATE ON signal still asserts when the next job starts.</li> </ul>	Same as SC 231
240	LDB error [K]	
[D]	The EGB detects LDB error a few times consecutively when	Defective LDB     Replace the LDB.

#### SC270 RTB 13

SC [Level]	Symptom	Possible Cause/Required Action
	LDB unit turns on after LDB initialization.	
	LDB error [Y]	
241 [D]	The EGB detects LDB error a few times consecutively when LDB unit turns on after LDB initialization.	Same as SC240
	LDB error [M]	
242 [D]	The EGB detects LDB error a few times consecutively when LDB unit turns on after LDB initialization.	Same as SC240
	LDB error [C]	
243 [D]	The EGB detects LDB error a few times consecutively when LDB unit turns on after LDB initialization.	Same as SC240
	LDU shutter error	
270 [D]	Sensor output does not change even if 1 second passes after the LDU shutter motor is on.	Sensor defective or LDU shutter motor defective     Replace the LDU shutter sensor or shutter motor.
	High voltage power board: Charge voltage output error [K]	
300 [D]	The measured voltage is not proper when EGB measures the charge output for each color.	<ul> <li>Defective charge roller</li> <li>Defective connectors</li> <li>Disconnected harness</li> <li>Defective high voltage power 1</li> <li>1. Check the connectors.</li> <li>2. Replace the PCU for black.</li> <li>3. Replace the drum positioning plate.</li> <li>4. Replace the high voltage power 1.</li> </ul>

SC [Level]	Symptom	Possible Cause/Required Action
	High voltage power board: Ch	arge voltage output error [M]
301 [D]	The measured voltage is not proper when EGB measures the charge output for each color.	<ul> <li>Defective charge roller</li> <li>Defective connectors</li> <li>Disconnected harness</li> <li>Defective high voltage power 1</li> <li>1. Check the connectors.</li> <li>2. Replace the PCU for magenta.</li> <li>3. Replace the drum positioning plate.</li> <li>4. Replace the high voltage power 1.</li> </ul>
	High voltage power board: Ch	arge voltage output error [C]
302 [D]	The measured voltage is not proper when EGB measures the charge output for each color.	<ul> <li>Defective charge roller</li> <li>Defective connectors</li> <li>Disconnected harness</li> <li>Defective high voltage power 1</li> <li>1. Check the connectors.</li> <li>2. Replace the PCU for cyan.</li> <li>3. Replace the drum positioning plate.</li> <li>4. Replace the high voltage power 1.</li> </ul>
	High voltage power board: Ch	arge voltage output error [Y]
303 [D]	The measured voltage is not proper when EGB measures the charge output for each color.	<ul> <li>Defective charge roller</li> <li>Defective connectors</li> <li>Disconnected harness</li> <li>Defective high voltage power 1</li> <li>1. Check the connectors.</li> <li>2. Replace the PCU for yellow.</li> <li>3. Replace the drum positioning plate.</li> <li>4. Replace the high voltage power 1.</li> </ul>
304 [D]	Charge AC bias error [K]	

SC [Level]	Symptom	Possible Cause/Required Action
	The charge current less than 200 µA is detected.	<ul> <li>Defective charge roller</li> <li>Defective connectors</li> <li>Disconnected harness</li> <li>Defective high voltage power 1</li> <li>1. Check the connectors.</li> <li>2. Replace the PCU for black.</li> <li>3. Replace the drum positioning plate.</li> <li>4. Replace the high voltage power 1.</li> </ul>
	Charge AC bias error [M]	
305 [D]	The charge current less than 200 µA is detected.	<ul> <li>Defective charge roller</li> <li>Defective connectors</li> <li>Disconnected harness</li> <li>Defective high voltage power 1</li> <li>1. Check the connectors.</li> <li>2. Replace the PCU for magenta.</li> <li>3. Replace the drum positioning plate.</li> <li>4. Replace the high voltage power 1.</li> </ul>
	Charge AC bias error [C]	
306 [D]	The charge current less than 200 µA is detected.	<ul> <li>Defective charge roller</li> <li>Defective connectors</li> <li>Disconnected harness</li> <li>Defective high voltage power 1</li> <li>1. Check the connectors.</li> <li>2. Replace the PCU for cyan.</li> <li>3. Replace the drum positioning plate.</li> <li>4. Replace the high voltage power 1.</li> </ul>
007	Charge AC bias error [Y]	
307 [D]	The charge current less than 200 µA is detected.	Defective charge roller     Defective connectors

SC [Level]	Symptom	Possible Cause/Required Action
		<ul> <li>Disconnected harness</li> <li>Defective high voltage power 1</li> <li>1. Check the connectors.</li> <li>2. Replace the PCU for yellow.</li> <li>3. Replace the drum positioning plate.</li> <li>4. Replace the high voltage power 1.</li> </ul>
	Color development motor error	
325 [D]	LOCK signal is not detected for more than two seconds while the motor START signal is on.     LOCK signal is not cancelled within two seconds after the motor is off.	<ul> <li>Color development motor slip due to the increase of the load torque</li> <li>1. Adjust the load torque properly by replacing or cleaning the development unit.</li> <li>2. Replace or repair the development motor if the load torque is normal.</li> </ul>
	TD sensor: Output maximum er	ror [K]
360 [D]	Vt is more than the maximum value (4.5) for three times consecutively.	<ul> <li>Defective connector connection</li> <li>Increasing toner density</li> <li>Replace the PCU.</li> </ul>
361	TD sensor: Output maximum error [M]	
[D]	Same as SC 360	
362	TD sensor: Output maximum error [C]	
[D]	Same as SC 360	
363	TD sensor: Output maximum error [Y]	
[D]	Same as SC 360	
	TD sensor: Output minimum err	or [K]
364 [D]	Vt is less than the minimum value (0.5) for three times consecutively.	<ul><li>Defective connector connection</li><li>Decreasing toner density</li><li>1. Replace the PCU.</li></ul>

SC [Level]	Symptom	Possible Cause/Required Action	
365	TD sensor Output minimum error [M]		
[D]	Same as SC 364		
366 [D]	TD sensor: Output minimum error [C]		
	Same as SC 364		
367	TD sensor: Output minimum error [Y]		
[D]	Same as SC 364		
	TD sensor: Initial control voltage error [K]		
368 [D]	<ul> <li>Vt is less than 1 V even though the control power voltage is adjusted to the maximum.</li> <li>Vt is more than 1 V even though the control power voltage is adjusted to the minimum.</li> </ul>	<ul> <li>Defective connector connection</li> <li>Defective TD sensor</li> <li>The toner density in the developer is different from the initial condition.</li> <li>Replace the PCU.</li> </ul>	
369	TD sensor: Initial control voltage error [M]		
[D]	Same as SC 368		
370	TD sensor: Initial control voltage error [C]		
[D]	Same as SC 368		
371	TD sensor: Initial control voltage error [Y]		
[D]	Same as SC 368		
372 [D]	TD sensor: Initial adjustment error [K]		
	Vt is not (A ±0.2) when initial setting for TD sensor is executed.  A = SP3011-001 for [K]	<ul> <li>Defective connector connection</li> <li>Defective TD sensor</li> <li>The toner density in the developer is different from the initial condition.</li> <li>Replace the PCU.</li> </ul>	

SC [Level]	Symptom	Possible Cause/Required Action	
	TD sensor: Initial adjustment error [M]		
373 [D]	Vt is not (A ±0.2) when initial setting for TD sensor is executed.  A = SP 3011 2 for [M]	Same as 372	
374 [D]	TD sensor: Initial adjustment error [C]: same as 372		
	Vt is not (A ±0.2) when initial setting for TD sensor is executed.  A = SP 3011 3 for [C]	Same as 372	
	TD sensor: Initial adjustment error [Y]: same as 372		
375 [D]	Vt is not (A ±0.2) when initial setting for TD sensor is executed.  A = SP 3011 4 for [Y]	Same as 372	
	Drum gear position sensor error		
380 [C]	When receiving the input signal of drum gear position sensor is not correctly done, SC380 is logged.	<ul> <li>Dirty or defective drum gear position sensor</li> <li>Clean the drum gear position sensor.</li> <li>Replace the drive unit.</li> </ul>	
	Drum motor error [K]		
396 [D]	The LOCK signal is not detected for 2 seconds more while the start signal of the drum motor for black PCU is output.	<ul> <li>OPC motor slip due to the excessive load</li> <li>Clean the PCU.</li> <li>Check the cable from the Black OPC/ Development motor. Replace it if necessary.</li> <li>Replace the EGB.</li> <li>Replace the Black OPC/Development motor.</li> </ul>	
397 [D]	Drum motor error [CMY]		
	The LOCK signal is not detected for 2 seconds more	Same as SC 396	

SC [Level]	Symptom	Possible Cause/Required Action
	while the start signal of the drum motor for color PCU is output.	
400 [D]	ID sensor correction error	
	Regular Vsp is not (4 ±0.5V) when ID sensor correction is executed.	<ul> <li>Defective ID sensors</li> <li>Dirty ID sensors or transfer belt</li> <li>ID sensor life is over.</li> <li>Replace the ID sensors.</li> </ul>
	ID sensor: LED adjustment error	
418 [D]	LED PWM adjustment is not [A] for three times consecutively.  [A] = 50 < [A] < 400	<ul> <li>Defective ID sensors</li> <li>Dirty ID sensors or transfer belt</li> <li>ID sensor life is over.</li> <li>Replace the ID sensors.</li> </ul>
	Transfer belt contact error	
442 [D]	The transfer belt contact sensor does not detect the movement of actuator at the sensor while the motor rotates.	<ul> <li>Dirty transfer belt contact sensor</li> <li>Defective transfer belt contact motor</li> <li>Disconnected connector of transfer belt contact sensor or motor</li> <li>Disconnected cable</li> <li>Replace the transfer belt contact sensor.</li> <li>Replace the transfer belt contact motor.</li> </ul>
443 [C]	Transfer belt speed error	
	The detected speed is different from the normal speed by 1% or more	<ul> <li>Defective transfer belt motor</li> <li>Disconnected harness</li> <li>Replace the transfer belt motor</li> <li>Replace the image transfer unit.</li> </ul>
452 [D]	Transfer roller contact error	
	The transfer roller contact sensor does not detect the	<ul> <li>Defective transfer roller contact sensor</li> <li>Defective transfer roller contact motor</li> </ul>

SC [Level]	Symptom	Possible Cause/Required Action	
	movement of actuator at the sensor while the motor rotates.	<ul> <li>Defective IOB</li> <li>Replace the transfer roller contact sensor.</li> <li>Replace the transfer roller contact motor.</li> <li>Replace the IOB.</li> </ul>	
	High Voltage Power 1: High voltage output error		
490 [D]	Error signal is detected 10 times consecutively.	<ul> <li>One of the DC bias outputs for each PCU is shorted or one of the transfer belt bias outputs for [Y], [M] and [C].</li> <li>Power leaking</li> <li>Defective connection</li> <li>Disconnected cable</li> <li>Defective PCU</li> <li>Defective High Voltage Power 1</li> <li>Replace the High Voltage Power 1.</li> <li>Reset the cables and components.</li> <li>Replace the PCU.</li> </ul>	
	High Voltage Power 2: High voltage output error		
491 [D]	Error signal is detected for 10 times consecutively.	<ul> <li>One of the separation bias output, development bias output and transfer belt cleaning bias output is shorted or one of the transfer belt bias output for [K] and transfer roller bias output is shorted.</li> <li>Power leaking</li> <li>Defective connection</li> </ul>	
		<ul> <li>Defective PCU</li> <li>Defective High Voltage Power 2</li> <li>Replace the High Voltage Power 2.</li> <li>Reset the cables and components.</li> <li>Replace the PCU.</li> </ul>	
531	Paper feed / Fusing motor error		
[D]	LOCK signal is not detected for more than	Defective paper feed/ fusing motor	

SC [Level]	Symptom	Possible Cause/Required Action
	two seconds while the motor START signal is on.  • LOCK signal is not cancelled within two seconds after the motor is off.	1. Replace the paper feed/ fusing motor.
	Fan motor error	
532 [D]	The fan motor "On" signal is not detected for the components below after the drum motor for black is set to "On".  PSU fan  Fusing unit fan  Polygon motor fan  Drive unit fan  Exit paper fan	Defective fan motor  I. If the error occurs again, one of the fans is defective. Remove the covers, find the defective fan and replace it.
5.41	Thermistor error	
541 [A]	The thermistor output is less than 0 °C for six seconds.	Disconnected thermistor     Defective connector connection
	Print ready temperature error	
542 [A]	<ul> <li>The heating roller temperature increase that is less than 67 degrees for 9 seconds is detected five times consecutively.</li> <li>The fusing temperature does not reach the print ready temperature within 15 seconds after the fusing lamp was controlled.</li> </ul>	<ul> <li>Defective thermistor</li> <li>Thermistor coming off</li> <li>Incorrect power supply input at the main power socket</li> <li>Defective fusing lamp</li> </ul>

SC [Level]	Symptom	Possible Cause/Required Action
	High temperature detection: So	ftware
543 [A]	The thermistor detects 230°C for 0.2 seconds.	<ul> <li>Defective thermistor</li> <li>Defective I/O board</li> <li>Defective EGB</li> </ul>
	High temperature detection: Ho	ard
544 [A]	The thermistor detects 250°C.	<ul> <li>Defective thermistor</li> <li>Defective I/O board</li> <li>Defective EGB</li> <li>Defective fusing unit, PSU, or EGB</li> <li>Replace the fusing unit.</li> <li>Replace the PSU.</li> </ul>
	Heating lamp error	
545 [A]	The fusing lamp is full- powered for 8 seconds after the heating roller reaches the print ready temperature.	<ul><li>Deformed thermistor</li><li>Thermistor coming off</li><li>Defective fusing lamp</li></ul>
	Zero cross error	
547 [D]	The zero cross signal is detected three times even though the heater relay is off when turning on the main power.  The zero cross signal is not detected for three seconds even though the heater relay is on after turning on the main power or closing the front door.  The detection error occurs twice or more in the ten zero cross signal	<ul> <li>Defective fusing lamp relay</li> <li>Defective fusing lamp relay circuit</li> <li>Unstable power supply</li> <li>Check the power supply source.</li> <li>Replace the PSU.</li> </ul>

SC [Level]	Symptom	Possible Cause/Required Action
	detections. This error is defined when the detected zero cross signal is less than 17 for 200 ms.	
	Zero cross frequency error	
557 [C]	The detection error occurs ten times in a row in ten zero cross signal detections. This error is defined when the detected zero cross signal is more than 28 for 200 ms.  This SC is only logged. In this case, the power frequency is defined as 60 Hz.	Noise (high frequency)     Check the power supply source.
	Continuous paper jam at Fusing	g unit
559 [A]	The paper jam occurs three times consecutively at the fusing unit only when the SP 1159 1 is set to "1 (ON)". If not, this SP does not occur.  The jam counter is cleared when a sheet of paper is fed normally.	<ul> <li>Defective fusing entrance sensor</li> <li>Defective EGB</li> <li>Replace the fusing entrance sensor.</li> <li>Replace the EGB.</li> </ul>
	Controller board command err	or
68 <i>7</i> [D]	A command from the controller board is not received.	<ul> <li>Loose connection</li> <li>Defective controller board</li> <li>Defective EGB</li> <li>1. Check the connection of the controller board.</li> <li>2. Replace the controller board.</li> <li>3. Replace the EGB.</li> </ul>

The following table shows the controller error codes. These codes show at these times if an error occurs:

- Power-or
- After the power-on self diagnostic test

### **Important**

• Always try turning the main switch off and on and check if the problem persists.

SC [Level]	Symptom	Possible Cause/Required Action
636	SD Card Error	
	Expanded authentication modu	le error
-001 [B]	There is no expanded authentication module in the machine.  The SD card or the file of the expanded authentication module is broken.  There is no DESS module in the machine.	<ul> <li>No expanded authentication module</li> <li>Defective SD card</li> <li>No DESS module</li> <li>Install the expanded authentication module.</li> <li>Install the SD card.</li> <li>Install the DESS module.</li> </ul>
	Version error	
-002 [B]	The version of the expanded authentication module is not correct.	<ul> <li>Incorrect module version</li> <li>1. Install the correct file of the expanded authentication module.</li> </ul>
	Engine start-up error	
670 [D]	A command from the controller board is not received.	Defective engine board.  1. Replace the engine board.
	Watchdog error	
818 [B]	While the system program is running, no other programs can run (due to a bus hold or endless loop).	<ul> <li>Defective system program</li> <li>Defective controller board</li> <li>Reinstall the system program.</li> <li>Replace the controller board.</li> </ul>

SC [Level]	Symptom	Possible Cause/Required Action
819	Kernel stop	
	Process error	
[0696e] [B]	System completely down	<ul> <li>Defective RAM DIMM</li> <li>Defective controller</li> <li>Software error</li> <li>Check and/or replace the RAM DIMM.</li> <li>Replace the controller.</li> </ul>
	VM full error	
[0766d] [B]	Unexpected system memory size	<ul> <li>Defective RAM DIMM</li> <li>Defective controller</li> <li>Software error</li> <li>Check and/or replace the RAM DIMM.</li> <li>Replace the controller.</li> </ul>
[4041]	Cache error	
[4361] [B]	Cache error in the CPU	Defective CPU     Replace the controller board.
	The others	
[] [B]	Error in OS	<ul> <li>Defective memory</li> <li>Defective flash memory</li> <li>Defective CPU</li> <li>Replace the controller board.</li> </ul>
820	Self-Diagnostic Error: CPU	
	[0001-0015] [000A-000D]: Detailed error code	
[B]	During the boot monitor program and self-diagnostic, any exception or cut-in are not supposed to happen. If these happen, it is defined as SC.	<ul> <li>Defective CPU device</li> <li>Defective boot monitor program or self-diagnostic program</li> <li>Replace the controller board.</li> <li>Reinstall the system firmware.</li> </ul>

SC [Level]	Symptom	Possible Cause/Required Action
	[00FF]: Detailed error code	
[B]	Cache access error in the CPU	<ul> <li>Defective CPU</li> <li>Defective local bus</li> <li>1. Turn the main power switch off and on.</li> <li>2. Reinstall the system program.</li> <li>3. Replace the controller board.</li> </ul>
	[0601, 0602, 0605, 0606, 0	607, 0609]: Detailed error code
[B]	Exceptional command does not operate even though it is executed on purpose.	<ul><li>Defective CPU devices</li><li>1. Replace the controller board.</li></ul>
[B]	[060A-060E]: Detailed error c	ode
	Cut-in command does not operate when it is executed.	<ul><li>Defective CPU devices</li><li>Defective ASIC devices</li><li>Replace the controller board.</li></ul>
	[0610]: Detailed error code	
[B]	Timer cut-in does not operate even though it is set.	<ul><li>Defective CPU devices</li><li>1. Replace the controller board.</li></ul>
	[0612]: Detailed error code	
[B]	Cut-in in ASIC occurs.	<ul> <li>Defective ASIC</li> <li>Defective devices in which ASIC detects cut-in.</li> <li>Replace the controller board.</li> </ul>
	[06FF]: Detailed error code	
[B]	The pipeline clock frequency rate is different from the prescribed value.	<ul> <li>Defective CPU devices</li> <li>Mode bit data error, which is used for initializing CPU.</li> <li>Replace the controller board.</li> </ul>
[B]	[0702]: Detailed error code	

SC [Level]	Symptom	Possible Cause/Required Action
	The result when the program is executed in the command cache is different from desirable value.	<ul> <li>Insufficient CPU cache</li> <li>Insufficient memory process speed</li> <li>Replace the controller board.</li> <li>Replace the RAM DIMM.</li> </ul>
	[0709, 070A]: Detailed error	code
[B]	Even you write the data in the only cache of memory, the data is actually written in another area (not cache) of memory.	<ul> <li>Defective CPU devices</li> <li>Incorrect SPD</li> <li>Boot mode setting error</li> <li>Replace the controller board.</li> <li>Replace the RAM DIMM.</li> </ul>
	[0801, 0804, 0807, 0808, 0	809, 80A]: Detailed error code
[B]	An error occurs when checking the TLB.	Defective CPU devices     Replace the controller board.
	[4002-4005]: Detailed error code	
[B]	The calculation error in the CPU occurs.	Defective CPU     Replace the CPU.
821	Self-Diagnostic Error: ASIC	
[0000]	ASIC error	
[OBOO] [B]	The write-&-verify check error has occurred in the ASIC.	Defective controller board     Replace the controller.
	ASIC not detected	
[OBO6] [B]	The ASIC of the I/O is not detected.	<ul> <li>ASIC (controller board defective)</li> <li>Poor connection between North Bridge and PCI I/F.</li> <li>Replace controller board.</li> </ul>
[OB10] [B]	SHM register check error	

SC [Level]	Symptom	Possible Cause/Required Action
	Failed to initialize or could not read connection bus. Data in SHM register incorrect.	<ul> <li>Defective bus connection</li> <li>Defective SHM</li> <li>Replace controller board</li> </ul>
	Timer error between ASIC and	CPU
[ODO5] [B]	The CPU checks if the ASIC timer works properly compared with the CPU timer. If the ASIC timer does not function in the specified range, this SC code is displayed.	<ul> <li>System firmware problem</li> <li>Defective RAM-DIMM</li> <li>Defective controller</li> <li>Reinstall the controller system firmware.</li> <li>Replace the RAM-DIMM.</li> <li>Replace the controller board.</li> </ul>
822	Self-Diagnostic Error: HDD	
	Timeout error/ [3004]: Command error	
[3003] [B]	When the main switch is turned on or starting the self-diagnostic, the HDD stays busy for the specified time or more.	<ul> <li>Loose connection</li> <li>Defective HDD</li> <li>Defective controller</li> <li>1. Check that the HDD is correctly connected to the controller.</li> <li>2. Replace the HDD.</li> <li>3. Replace the controller.</li> </ul>
823	Self-diagnostic Error: NIB	
	MAC address check sum error	
[6101] [B]	The result of the MAC address check sum does not match the check sum stored in ROM.	Defective controller     Replace the controller.
	PHY IC error	
[6104] [B]	The PHY IC on the controller cannot be correctly recognized.	Same as SC823-[6101]

SC [Level]	Symptom	Possible Cause/Required Action
	PHY IC loop-back error	
[6105] [B]	An error occurred during the loop-back test for the PHY IC on the controller.	Same as SC823-[6101]
	Self-diagnostic Error: NVRAM	
824 [B]	The controller cannot recognize the standard NVRAM installed or detects that the NVRAM is defective.	<ul> <li>NVRAM damaged or abnormal</li> <li>Backup battery has discharged</li> <li>NVRAM socket damaged</li> <li>Replace the NVRAM.</li> </ul>
826	Self-diagnostic Error: RTC/Opt	ional NVRAM
	Clock error	
[1501] [B]	An RTC device is recognized, and the difference between the RTC device and the CPU exceeds the defined limit.      No RTC device is recognized.	<ul> <li>RTC defective</li> <li>NVRAM without RTC installed</li> <li>Backup battery discharged</li> <li>Replace the NVRAM with another NVRAM with an RTC device.</li> </ul>
	RTC not detected	
[15FF] [B]	The RTC device is not detected.	<ul> <li>NVRAM without RTC installed</li> <li>Backup battery discharged</li> <li>Replace the NVRAM with another NVRAM with an RTC device.</li> </ul>
827	Self-diagnostic Error: RAM	
	Verification error	
[0201] [B]	Error is detected during a write/verify check for the standard RAM (SDRAM DIMM).	<ul> <li>Loose connection</li> <li>Defective SDRAM DIMM</li> <li>Defective controller</li> <li>Replace the SDRAM DIMM.</li> </ul>

SC [Level]	Symptom	Possible Cause/Required Action
		2. Replace the controller.
	Resident memory error	
[0202] [B]	The SPD values in all RAM DIMM are incorrect or unreadable.	<ul> <li>Defective RAM DIMM</li> <li>Defective SPD ROM on RAM DIMM</li> <li>Defective 12C bus</li> <li>Replace the RAM DIMM.</li> </ul>
828	Self-diagnostic Error: ROM	
	Boost lap code error	
[0101] [B]	The boot monitor and OS program stored in the ROM DIMM is checked. If the check sum of the program is incorrect, this SC code is displayed.	<ul> <li>Defective ROM DIMM</li> <li>Defective controller</li> <li>Replace the ROM DIMM.</li> <li>Replace the controller.</li> </ul>
	ROMFS error	
[0104] [B]	All areas of the ROM DIMM are checked. If the check sum of all programs stored in the ROM DIMM is incorrect, this SC code is displayed.	Defective ROM DIMM     Replace the ROM DIMM.
829	Self-diagnostic Error: Optional	RAM
	Verification error (Slot 1)	
[0401] [B]	The data stored in the RAM in Slot 1 does not match the data when reading.	<ul> <li>Not specified RAM DIMM installed</li> <li>Defective RAM DIMM</li> <li>Replace the RAM DIMM.</li> <li>Replace the controller board.</li> </ul>
	Composition error (Slot 1)	
[0402]	The result of checking the composition data of the RAM	<ul> <li>Not specified RAM DIMM installed</li> <li>Defective RAM DIMM</li> <li>Replace the RAM DIMM.</li> </ul>

SC [Level]	Symptom	Possible Cause/Required Action
	in Slot 1 on the controller is incorrect.	2. Replace the controller board.
	IEEE1394 interface error	
851 [B]	The 1394 interface is unusable.	<ul> <li>Defective IEEE1394</li> <li>Defective controller.</li> <li>Replace the IEEE1394 interface board.</li> <li>Replace the controller.</li> </ul>
	Wireless LAN or Bluetooth card	d not detected at starting communication
853 [B]	The wireless LAN or Bluetooth card is not detected before communication is established, though the wireless LAN or Bluetooth board is detected.	<ul><li>Loose connection</li><li>1. Check the connection.</li><li>2. Insert the wireless LAN or Bluetooth card to its board.</li></ul>
	Wireless LAN or Bluetooth card not detected during operation	
854 [B]	The wireless LAN or Bluetooth card is not detected after communication is established, though the wireless LAN or Bluetooth board is detected.	<ul><li>Loose connection</li><li>1. Check the connection.</li><li>2. Insert the wireless LAN or Bluetooth card to its board.</li></ul>
	Wireless LAN or Bluetooth card	d error
855 [B]	An error is detected in the wireless LAN or Bluetooth card.	<ul> <li>Loose connection</li> <li>Defective wireless LAN or Bluetooth card</li> <li>1. Check the connection.</li> <li>2. Replace the wireless LAN or Bluetooth card.</li> </ul>
	Wireless LAN or Bluetooth board error	
856 [B]	An error is detected in the wireless LAN or Bluetooth board.	<ul> <li>Defective wireless LAN or Bluetooth board</li> <li>Loose connection</li> <li>1. Check the connection.</li> <li>2. Replace the wireless LAN or Bluetooth board.</li> </ul>
857	USB interface error	

SC [Level]	Symptom	Possible Cause/Required Action
[B]	The USB interface cannot be used due to a driver error.	<ul> <li>Defective USB driver</li> <li>Loose connection</li> <li>1. Check the connection.</li> <li>2. Replace the controller.</li> </ul>
	HDD: Initialization error	
860 [B]	The controller detects that the hard disk fails.	<ul> <li>HDD not initialized</li> <li>Defective HDD</li> <li>Reformat the HDD (SP5832).</li> <li>Replace the HDD.</li> </ul>
	HDD: Reboot error	
861 [D]	The HDD does not become ready within 30 seconds after the power is supplied to the HDD.	<ul> <li>Loose connection</li> <li>Defective cables</li> <li>Defective HDD</li> <li>Defective controller</li> <li>1. Check the connection between the HDD and controller.</li> <li>2. Check and replace the cables.</li> <li>3. Replace the HDD.</li> <li>4. Replace the controller.</li> </ul>
	HDD: Read error	
863 [D]	The data stored in the HDD cannot be read correctly.	<ul> <li>Defective HDD</li> <li>Defective controller</li> <li>Replace the HDD.</li> <li>Replace the controller.</li> </ul>
	HDD: CRC error	
864 [D]	While reading data from the HDD or storing data in the HDD, data transmission fails.	Defective HDD     Replace the HDD.
865	HDD: Access error	

Possible Cause/Required Action

#### An error other than SC863 Defective HDD [D] and SC864 is detected while 1. Replace the HDD. operating the HDD. SD card authentication error 866 • SD-card data is corrupted. A correct license is not found [B] in the SD card. 1. Store correct data in the SD card. SD card error 867 • The SD card for an application is ejected from the The SD card for an application [D] slot. is ejected from the slot. 1. Install the SD card. SD card access error [File system error, Device error] • Defective SD card • Defective SD card controller 868 1. For a file system error, format the SD card on your SD card error occurs when SD [D] PC. card is activated. 2. For a device error, turn the mains switch off and on. 3. Replace the SD card. 4. Replace the controller. Address data error • Defective software program Defective HDD 870 • Incorrect path to the sever An error is detected in the data [B] copied to the address book 1. Initialize the address book data (SP5846-50). over a network.

SC

[Level]

872

[B]

SC866

**RTB 12** 

Symptom

3. Replace the HDD.

HDD mail data error

with SP5832).

2. Initialize the user information (format the hard disk

SC [Level]	Symptom	Possible Cause/Required Action
	An error is detected in the mail receiving data area of the HDD at machine initialization.	<ul> <li>Defective HDD</li> <li>Power failure during an access to the HDD</li> <li>Initialize the HDD (SP5-832-001).</li> <li>Replace the HDD.</li> </ul>
	HDD mail transfer error	
873 [B]	An error is detected in the mail transmitting data area of the HDD at machine initialization.	<ul> <li>Defective HDD</li> <li>Power failure during an access to the HDD</li> <li>Initialize the HDD (SP5-832-001).</li> <li>Replace the HDD.</li> </ul>
	Delete All error 1: HDD	
874 [D]	An error is detected while the all data of the HDD or NVRAM are formatted physically by the Data Overwrite Security Unit (B735).	<ul> <li>Not installed Data Overwrite Security Unit (SD card)</li> <li>Defective HDD</li> <li>Install the Data Overwrite Security Unit (B735).</li> <li>Replace the HDD.</li> </ul>
	Delete All error 2: Data area	
875 [D]	An error is detected while the all data of the HDD or NVRAM are formatted logically by the Data Overwrite Security Unit (B735).	<ul> <li>The logical format for HDD fails.</li> <li>1. Turn the main switch off/on and try the operation again.</li> </ul>
876	Log Data Error	
001 [D]	<ul> <li>Log Data Error 1</li> <li>An error was detected in the handling of the log data at power on or during machine operation. This can be caused by switching the machine off while it is operating.</li> <li>1. Initialize the HDD with SP5832-004.</li> </ul>	
002	Log Data Error 2	
002 [D]	The DESS module is not installed when the DESS module is set to ON.  Replace the DESS module.	

Possible Cause/Required Action

(B735) is installed and card (B735).  2. Check and reinstall the SD card (B735).  Electric counter error  Defective NVRAM  Defective controller  Abnormal data is stored in the  1. Turn the main switch off and on.	[Level]	Sympion	rossible Cause/ Required Action		
Invalid encryption key log due to defective NVRAM data     ID     I. Initialize the HDD with SP5832-004.     2. Disable the log encryption setting.  Log Data Error 4      Unusual encryption function log due to the defective NVRAM data     1. Initialize the HDD with SP5832-004.  Log Data Error 5      NVRAM or HDD, which is used in other machine, is installed.     1. Reinstall the previous NVRAM or HDD.     2. Initialize the HDD with SP5832-004.  Log Data Error 99      Other than above causes     1. Ask your supervisor.  HDD Data Overwrite Security SD card error  The all delete cannot be executed even though the Data Overwrite Security Unit (B735) is installed and activated.  Electric counter error  Poefective NVRAM     Defective NVRAM     Defective NVRAM     Defective NVRAM     Defective Controller     1. Turn the main switch off and on.		2. Turn off the DESS module function.			
[D] 1. Initialize the HDD with SP5832-004. 2. Disable the log encryption setting.  Log Data Error 4  • Unusual encryption function log due to the defective NVRAM data 1. Initialize the HDD with SP5832-004.  Log Data Error 5  • NVRAM or HDD, which is used in other machine, is installed.  1. Reinstall the previous NVRAM or HDD. 2. Initialize the HDD with SP5832-004.  Log Data Error 99  • Other than above causes 1. Ask your supervisor.  HDD Data Overwrite Security SD card error  The all delete cannot be executed even though the Data Overwrite Security Unit (B735) is installed and activated.  Electric counter error  Poefective NVRAM • Defective NVRAM • Defective controller  1. Turn the main switch off and on.		Log Data Error 3			
Unusual encryption function log due to the defective NVRAM data     I. Initialize the HDD with SP5832-004.  Log Data Error 5      NVRAM or HDD, which is used in other machine, is installed.  I. Reinstall the previous NVRAM or HDD. 2. Initialize the HDD with SP5832-004.  Log Data Error 99  Other than above causes 1. Ask your supervisor.  HDD Data Overwrite Security SD card error  The all delete cannot be executed even though the Data Overwrite Security Unit (B735) is installed and activated.  Plectric counter error  Pool  Abnormal data is stored in the  Pofective NVRAM  Defective NVRAM  Defective controller  1. Turn the main switch off and on.		1. Initialize the HDD with SP5832-004.			
<ul> <li>Unusual encryption function log due to the defective NVRAM data <ol> <li>Initialize the HDD with SP5832-004.</li> </ol> </li> <li>Log Data Error 5  <ol> <li>NVRAM or HDD, which is used in other machine, is installed.</li> <li>Reinstall the previous NVRAM or HDD.</li> <li>Initialize the HDD with SP5832-004.</li> </ol> </li> <li>Log Data Error 99  <ol> <li>Other than above causes</li> <li>Ask your supervisor.</li> </ol> </li> <li>HDD Data Overwrite Security SD card error  <ol> <li>Pofective SD card (B735)</li> <li>Not installed SD card (B735)</li> <li>Not installed SD card (B735)</li> </ol> </li> <li>Not installed SD card (B735)</li> <li>Replace the NVRAM and then install the new scard (B735).</li> <li>Check and reinstall the SD card (B735).</li> </ul> <li>Electric counter error  <ul> <li>Defective NVRAM</li> <li>Defective controller</li> <li>Turn the main switch off and on.</li> </ul> </li>	004	Log Data Error 4			
NVRAM or HDD, which is used in other machine, is installed.      Reinstall the previous NVRAM or HDD.     Initialize the HDD with SP5832-004.    Log Data Error 99					
[D] 1. Reinstall the previous NVRAM or HDD. 2. Initialize the HDD with SP5832-004.  Log Data Error 99  • Other than above causes 1. Ask your supervisor.  HDD Data Overwrite Security SD card error  The all delete cannot be executed even though the Data Overwrite Security Unit (B735) is installed and activated.  Electric counter error  Pool [D]  Abnormal data is stored in the  1. Turn the main switch off and on.		Log Data Error 5			
Other than above causes  1. Ask your supervisor.  HDD Data Overwrite Security SD card error  The all delete cannot be executed even though the Data Overwrite Security Unit (B735) is installed and activated.  Electric counter error  Other than above causes  1. Ask your supervisor.  Defective SD card (B735)  Not installed SD card (B735)  1. Replace the NVRAM and then install the new scard (B735).  2. Check and reinstall the SD card (B735).  Electric counter error  Defective NVRAM  Defective controller  1. Turn the main switch off and on.		1. Reinstall the previous NVRAM or HDD.			
Potentian above causes  1. Ask your supervisor.  HDD Data Overwrite Security SD card error  The all delete cannot be executed even though the Data Overwrite Security Unit (B735) is installed and activated.  Electric counter error  Poefective SD card (B735)  Not installed SD card (B735)  Replace the NVRAM and then install the new scard (B735).  Check and reinstall the SD card (B735).  Electric counter error  Poefective NVRAM  Defective controller  Turn the main switch off and on.	000	Log Data Error 99			
The all delete cannot be executed even though the Data Overwrite Security Unit (B735) is installed and activated.  Electric counter error  Defective SD card (B735)  Not installed SD card (B735)  Replace the NVRAM and then install the new scard (B735).  Check and reinstall the SD card (B735).  Electric counter error  Defective NVRAM  Defective controller  Turn the main switch off and on.					
Problem of the difference cannot be executed even though the Data Overwrite Security Unit (B735) is installed and activated.  Electric counter error  Poefective NVRAM  Defective NVRAM  Defective controller  Abnormal data is stored in the Data Overwrite Security Unit (B735).  Post installed SD card (B735)  Replace the NVRAM and then install the new security (B735).  Check and reinstall the SD card (B735).  Defective NVRAM  Defective controller  1. Turn the main switch off and on.		HDD Data Overwrite Security SD card error			
Defective NVRAM     Defective controller     Abnormal data is stored in the  1. Turn the main switch off and on.		executed even though the Data Overwrite Security Unit (B735) is installed and	<ul> <li>Not installed SD card (B735)</li> <li>Replace the NVRAM and then install the new SD card (B735).</li> </ul>		
Defective controller     Abnormal data is stored in the     Turn the main switch off and on.		Electric counter error			
counters.  2. Check the connection between the NVRAM as		, 12.101.11.21.21.21.21.21.21.21.21.21.21.21.21	Defective controller		

3. Replace the NVRAM.

SC878 RTB 19 SC

Symptom

SC [Level]	Symptom	Possible Cause/Required Action
		4. Replace the controller.
	Printer function error	
920 [B]	The error that causes the malfunction in the software application is detected.	<ul> <li>Turn the main switch off/on, or install Printer Application firmware</li> <li>Unexpected hardware structure (insufficient memory or hard disk space.)</li> </ul>
	Printer font error	
921 [B]	No font is detected in the machines that have the font in the SD card when the printer application is run.	Install the System, Printer Application, NIB, and Web System firmware.
	Software performance error 1	
990 [D]	The software makes an unexpected operation.	<ul> <li>Defective software</li> <li>Defective controller</li> <li>Software error</li> <li>Reinstall the controller and/or engine main firmware.</li> <li>See the Note at the end of the SC table.</li> </ul>
	Software performance error 2	
991 [C]	Unexpected software error detected, which does not affect operation of the machine	The machine does not stop and the SC code is not displayed. The machine automatically recovers.  However, the SC code is logged in the engine summary sheet (SMC).
	SC not defined	
992 [D]	SC that is not controlled in the system occurs.	Defective system software
	Application start error	
998 [D]	No applications start within 60 seconds after the power is turned on.	Loose connection of RAM, DIMM and SD card in slot 1     Defective controller

SC [Level]	Symptom	Possible Cause/Required Action
		Software problem
		<ol> <li>Check if the RAM, DIMM and SD card in slot 1 are properly connected.</li> </ol>
		2. Reinstall the controller system firmware.
		3. Replace the controller.



- If a problem always occurs in a specific condition (for example. printer driver setting, image file), the problem may be caused by a software error. In this case, the following data and information needs to be sent back to your product specialist:
  - Symptom / Possible Causes / Action taken
  - Summary sheet (SP mode "1 Service/Printer SP", SP 1004 [Print Summary])
  - SMC All (SP 5990 2)
  - SMC Logging (SP 5990 4)
  - Printer driver settings used when the problem occurs
  - All data displayed on the screen (SC code, error code, and program address where the problem is logged.)
  - Image file which causes the problem, if possible

# **Troubleshooting Guide**

**U** Note

• Remove the NVRAM from the original engine control board and install it on the new one when you replace the engine control board.

### **Blank Print**

Symptom	Possible cause	Necessary actions
	Defective LDU	Replace the LDU.
	Defective PCU	Replace the PCU.
No image is printed.	Defective transfer belt unit	Replace the transfer belt unit.
	Incorrect action of transfer roller	Check the guide and the transfer roller.
	Defective high voltage supply board	Replace high voltage supply board 1 or 2.
	Defective engine board (EGB)	Replace the engine board (EGB).

### All-black Print

Symptom	Possible cause	Necessary actions
All the paper is black.	Incorrectly installed PCU	Install the PCU correctly.
	Defective PCU	Replace the PCU.
	Defective high voltage supply board	Replace high voltage supply board 1 or 2.
	Defective LDU	Replace the LDU.
	Defective engine board (EGB)	Replace the engine board (EGB).
	Defective main board	Replace the main board.

### Missing CMY Color

Symptom	Possible cause	Necessary actions
	Defective PCU	Replace the PCU.
C, M, or Y is missing.	Loose connection between printer cartridge and engine board (EGB)	Replace the drum positioning cover. (See 'Replacement and Adjustment – Electrical Components – Electrical Board Unit'.)
	Transfer belt not contacting PCU	Check the belt tension unit.
	Defective the color OPC motor	Replace the color OPC motor.
	Defective engine board (EGB)	Replace the engine board (EGB).

# **Light Print**

Symptom	Possible cause	Necessary actions
Printed images are too weak.	Loose connection between transfer roller and high voltage supply unit	Check the connection between the transfer roller and the high voltage supply unit.
	Dust in the laser beam path	Clean the laser beam path.
	Transfer belt not contacting PCU	Check the transfer unit.
	Defective PCU	Replace the PCU.
	Defective transfer roller	Repair the transfer roller.
	Defective fusing unit	Replace the fusing unit.
	Defective engine board (EGB)	Replace the engine board (EGB).

# Repeated Spots or Lines on Prints

The same spots or lines appear at regular intervals.

Interval	Possible cause	Necessary actions
At intervals of 35.0 mm (1.38 inches)	Defective charge roller	Replace the PCU.
At intervals of 35.8 mm (1.41 inches)	Defective OPC cleaning brush roller	Replace the PCU.
At intervals of 40.5 mm (1.59 inches)	Defective belt entrance roller	Replace the transfer belt unit.
At intervals of 41.1 mm (1.62 inches)	Defective belt transfer roller	Replace the transfer belt unit.
At intervals of 47.1 mm (1.86 inches)	Defective toner mixing auger	Replace the PCU.
At intervals of 56.5 mm (2.23 inches)	Defective development roller	Replace the PCU
At intervals of 72.8 mm (2.87 inches)	Defective belt tension roller	Replace the transfer belt unit.
At intervals of 82.2 mm (3.24 inches)	Defective transfer belt drive roller	Replace the transfer belt unit.
At intervals of 82.5 mm (3.25 inches)	Defective transfer roller	Replace the transfer roller.
At intervals of 94.2 mm (3.71 inches)	Defective OPC drum or pressure roller	Replace the PCU or the fusing unit
At intervals of 141.4 mm (5.57 inches)	Defective fusing belt	Replace the fusing unit.

### Dark Vertical Line on Prints

Symptom	Possible cause	Necessary actions
A dark line appears. The line is parallel to the paper feed direction of one CMY color.	Defective PCU	Replace the PCU.
A dark line appears. The line is parallel to the paper feed	Dust in the laser beam path	Clean the laser beam path.

Symptom	Possible cause	Necessary actions
direction of any color (not C, M,	Defective transfer belt unit	Replace the transfer belt unit.
or Y).	Defective fusing unit	Replace the fusing unit.

### White Horizontal Lines or Bands

Symptom	Possible cause	Necessary actions
White lines or bands appear in images of all toner colors.	Defective PCU	Replace the PCU.
	Defective transfer belt unit	Replace the transfer belt unit.
	Defective transfer roller	Replace the transfer roller.

# Missing Parts of Images

Symptom	Possible cause	Necessary actions
	Defective PCU	Replace the PCU.
Some parts of images are	Defective transfer belt unit	Replace the transfer belt unit.
missing.	Defective transfer roller	Replace the transfer roller.
	Defective fusing unit	Replace the fusing unit.

# Dirty Background

Symptom	Possible cause	Necessary actions	
Backgrounds of one CMYK color are too dense.	Defective PCU	Replace the PCU.	
Backgrounds of more than one CMYK are too dense.color	Defective high voltage supply board	Replace the high voltage supply board (1 or 2).	

Symptom	Possible cause	Necessary actions	
Unexpected dots of the same color appear at irregular	Defective PCU	Replace the PCU.	
	Defective transfer belt unit	Replace the transfer belt unit.	
intervals.	Defective fusing unit	Replace the fusing unit.	

# Dark Irregular Streaks on Prints

Symptom	Possible cause	Necessary actions	
Unexpected streaks appear at irregular intervals.	Defective transfer belt	Replace the transfer belt unit.	

# CMY Color Irregular Streaks

Symptom	Possible cause	Necessary actions	
Unexpected streaks of the same	Defective PCU	Replace the PCU.	
color appear at irregular intervals.	Defective transfer belt unit	Replace the transfer belt unit.	

### Ghosting

Symptom	Possible cause	Necessary actions	
The same or similar image	Defective PCU	Replace the PCU.	
appears two or more times. They get weaker and weaker.	Defective transfer unit	Replace the transfer unit.	

# Unfused or Partially Fused Prints

Symptom	Possible cause	Necessary actions	
Some parts of images are not fused very well.	Non-standard paper in use	Use recommended paper.	

Symptom	Possible cause	Necessary actions
	Incorrect media type mode Select an appropriate media mode.	
	Defective fusing unit Replace the fusing unit.	

# Image Skew

Symptom	Possible cause	Necessary actions	
Images are skewed	Incorrect installation of paper	Install the paper correctly.	
	Incorrect paper guide position	Adjust the paper guide correctly.	
	Defective registration roller	Repair the paper feed unit.	
	Incorrect action of transfer roller	Check the transfer roller.	
	Defective engine board (EGB)	Replace the engine board (EGB).	
	Unclean separation pad	Clean the separation pad.	
	Defective spring	Replace the spring for the friction pad.	

# Background Stain

Symptom	Possible cause	Necessary actions	
The reverse side of the paper is not clean.	Unclean transfer roller	Clean the transfer roller.	
	Unclean paper path	Clean the paper path.	
	Unclean registration roller	Clean the registration roller.	
	Unclean fusing unit exit	Clean the fusing unit exit.	
	Defective fusing unit	Replace the fusing unit.	

# No Printing on Paper Edge

Symptom	Possible cause	Necessary actions	
Images are not printed in the areas around the paper edges.	Defective PCU	Replace the PCU.	
	Defective toner cartridge	Replace the toner cartridge.	
	Defective transfer belt unit	Replace the transfer belt unit.	
	Transfer belt not contacting PCU	Check the transfer unit.	

# Image not centered when it should be

Symptom	Possible cause	Necessary actions	
Images do not come to the center.	Incorrect installation of paper	Install the paper correctly.	
	Incorrect paper guide position	Adjust the paper guide correctly.	
	Incorrect margin setting	Adjust the margin setting.	
	Defective engine control board	Replace the engine control board.	

#### 4

# **Electrical Component Defects**

### Sensors

No.	Sensor Name/ Sensor Board Name	Active	CN No./ Pin No.	Condition	Symptom
1	Color Drum Gear	Н	CN1000 /0	Open	SC380
'	Position Sensor	П	CN222/2	Shorted	5C380
	Black Drum Gear		0) 1000 /5	Open	
2	Position Sensor	Н	CN222/5	Shorted	SC380
	Toner End Sensor (K) Toner End Sensor (M)		CN222/8 CN230/13	Open	Toner end cannot be detected.
3	Toner End Sensor (C) Toner End Sensor (Y)	L	CN230/26 CN230/29	Shorted	Toner end is detected even if there is enough toner.
,	Transfer Belt Contact			Open	
4	Sensor	Н	CN222/11	Shorted	SC442
	Transfer Roller Contact	1	CN 1000 /1 /	Open	56450
5	Sensor	L	CN222/14	Shorted	SC452
	TD Sensor (K)		CN222/20	Open	SC368 (K)
6	TD Sensor (M)	Α	CN225/4		SC369 (M)
	TD Sensor (C)		CN230/4	Shorted	SC370 (C)
	TD Sensor (Y)		CN230/20		SC371 (Y)
				Open	Automatic line position adjustment error: Transfer
8	Transfer Belt Rotation	L	CN222/27	Shorted	belt unit speed cannot be detected, causing image skew.
10	Front Door Sensor	Н	CN206/1	Open	"Close Front/Left Cover" is displayed.

No.	Sensor Name/ Sensor Board Name	Active	CN No./ Pin No.	Condition	Symptom
				Shorted	Front cover open cannot be detected.
	W. J. T. O. off			Open	Waste Toner near full is indicated.
11	Waste Toner Overflow Sensor	Н	CN230/10	Shorted	Waste toner full cannot be detected even if the waste toner bottle is full.
12	Left Cover Sensor	Н	C230/15	Open	"Close Front/Left Cover" is displayed.
12	Left Cover Serisor	П	C230/13	Shorted	Left cover open cannot be detected.
	T /	Α	A CN231/1	Open	Printed image is wrong,
13	Temperature/ Humidity Sensor	A	CN231/3	Shorted	such as rough image, dirty background or weak image.
			CN214/17	Open	
14	Paper Size Sensor	L	CN214/15 CN214/14 CN214/13	Shorted	Paper size error
15	F	L	CN1212 /4	Open	Paper jam is not detected even if there is paper
13	Fusing Entrance Sensor	L	CN213/6	Shorted	Paper jam is detected even if there is no paper.
			CN213/1	Open	Paper jam is not detected even if there is paper
16	Duplex Jam Sensor 1	L		Shorted	Paper jam is detected even if the there is no paper.
17	Duplex Jam Sensor 2	L	CN213/3	Open	Paper jam is not detected even if there is paper

No.	Sensor Name/ Sensor Board Name	Active	CN No./ Pin No.	Condition	Symptom
				Short	Paper jam is detected even if the there is no paper.
	D D			Open	Paper is not detected on the by-pass tray
18	By-pass Paper Detection Sensor	L	CN211/22	Shorted	Paper is detected even if there is no paper on the by-pass tray.
			CN211/17	Open	
19	By-pass Paper Size	L	CN211/16		Paper size error
	Sensor		CN211/20	Shorted	
			CN211/19		
20	Inverter Sensor	L	CN211/2	Open	Paper jam Z
			,	Shorted	
21	Fusing Exit Sensor	L	CN210/13	Open	Paper jam A
21	Toshing Exil Oction	_		Shorted	raper jam //
22	Paper Overflow Sensor	L	CN210/10	Open	The paper overflow message is not displayed even when a paper overflow condition exists, causing paper jam.
				Shorted	The paper overflow message is displayed.
23	00 5 5 10		CN1210 /7	Open	Paper Jam A
	Paper Exit Sensor	L	CN210/7	Shorted	r aper Jani A
2.4	ID Camana		CNI200	Open	SC400/410
24	ID Sensors	A	CN209	Shorted	SC400/418
25	Fusing Thermistor	А	CN209/1	Open	SC541

No.	Sensor Name/ Sensor Board Name	Active	CN No./ Pin No.	Condition	Symptom
				Shorted	
26	Euring Sat Sanaar	L	CN209/3	Open	"Reset Fusing Unit
20	Fusing Set Sensor	L	CN209/4	Shorted	correctly" is displayed.
27	Ton Cover Sensor	Н	CN208/2	Open	"Close Top Cover" is displayed.
27	Top Cover Sensor	П	CIN200/ 2	Shorted	Top cover open cannot be detected.
28	LDU Shutter Sensor	Н	CN207/17	Open	SC270
20	LDO Shuffer Sensor	П	CN20//1/	Shorted	3C270
29	00 8		CN207/14	Open	Paper Jam A
27	Registration Sensor	L	CIN20// 14	Shorted	raper Jani A
30	30 Paper Width Sensor H	CN207/11	Open	Always, small paper is detected, causing slow printing.	
				Shorted	Small paper size is not detected.
0.1	Paper Height Sensor		CN207/5	Open	Remaining paper volume
31	1/2	Н	CN207/8	Shorted	is wrong on Web Image Monitor.
				Open	Paper end is detected even if paper is placed in the paper tray.
32	Paper End Sensor H	Н	CN2072	Shorted	Paper end is not detected even if there is no paper in the paper tray, causing a paper jam.

# **Blown Fuse Conditions**

# **Power Supply Unit**

E	Rating		Summature values trusting on the main societals
Fuse	115V	220V-240V	Symptom when turning on the main switch
FU1	15A/125V	8A/250V	No response.
FU2	8A/125V	4A/250V	No response.
FU3	1A/250V	1A/250V	Tray Heater does not turn on.
FU4	4A/250V	4A/250V	No display.
FU5	6.3A/250V	6.3A/250V	SC270 is displayed.
FU6	6.3A/250V	6.3A/250V	SC270 is displayed.

### IOB

Fuse	Rating	Symptom when turning on the main switch
FU1	1A	SC270 is displayed.
FU2	3.15A	Toners are not supplied.
FU3	3.15A	Optional Paper Tray Unit does not work.

No LEDs are used for this model (except for the Network Interface).

# 5. Service Tables

# Service Program Mode

### **ACAUTION**

- Before accessing the service menu, do the following:
- Confirm that there is no print data in the printer buffer (the Data In LED must not be lit or blinking).
- If there is some data in the buffer, wait until all data has been printed.




This machine has SSP mode, which is restricted for supervisor use only. However, most of them are
also used for the factory adjustments. Do not change those SSP settings until it is advised to do so by
the technical information.

### Service Mode Operation



The Service Program Mode is for use by service representatives only so that they can properly maintain
product quality. If this mode is used by anyone other than service representatives for any reason, data
might be deleted or settings might be changed. In such case, product quality cannot be guaranteed
any more.

### **Entering the Service Mode**

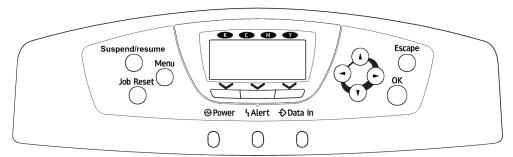

g160s501



• If you switch the machine off, any jobs stored on the hard disk using the sample print and protected print features will be deleted.

5

 Check first with the user tools to see if there are any jobs stored with these features (Menu key - Sample Print, or Protected Print).

#### Method 1:

Turn the machine on while pressing the "On Line" key and "Escape" key together until "SYSTEMver x.xx/1. Service" shows on the display.

NOTE:If you switch the machine off, any jobs stored on the hard disk using the sample print and protected print features will be deleted.

Check first with the user tools to see if there are any jobs stored with these features (Menu key - Sample Print, or Protected Print).

**Method 2:** Press the "Up/Down arrow" keys together for about 5 seconds, and then press the "OK" key. "SYSTEMver x.xx/ 1. Service" appears on the display.



The machine automatically goes off line when you enter the service mode.

### **Accessing the Required Program**

Use the "Up/Down arrow" keys to scroll through the menu listing.

- 1. Service: Controller service modes
- 2. Engine: Engine service modes
- 3. End: Exit service mode

To select an item, press the "OK" key. Then the sub-menu shows.

Scroll through the sub menu items using the "

To go back to a higher level, press the "Escape" key.

### Inputting a Value or Setting for a Service Program

Enter the required program mode as explained above. The setting appearing on the display is the current setting.

Select the required setting using the "D" keys, then press the "OK" key. The previous value remains if the "OK" key is not pressed.

#### **Exiting Service Mode**

Select "End" from the service mode main menu, then press the "OK" key.



To make the settings effective, turn the main switch off and on after exiting service mode.

#### Remarks

### Display on the Control Panel Screen

Since the maximum number of characters which can be displayed on the control panel screen is limited (12 or 17 characters), the description of SP modes displayed on the screen needs to be abbreviated. The following are the major abbreviations used for the SP modes for which the full description is over 12 or 17 characters.

### 1. Paper Type

N: Plain paper 1, N2 or Normal 2: Plain paper 2 (plain & recycled)

TC: Thick paper, Thick 1: Thick paper 1, Thick 2: Thick paper 2

TN: Thin paper

SP: Special paper

### 2. Color Mode [Color]

[K]: Black in B&W mode

[Y], [M], or [C]: Yellow, Magenta, or Cyan in Full Color mode

[YMC]: Only for Yellow, Magenta, and Cyan

[FC], [Cl]: Full Color mode

[FC, K], [FC, Y], [FC, M], or [FC, C]: Black, Yellow, Magenta, or Cyan in full color mode

#### 3. Process Speed

LS: Low speed xx

RS: Regular speed xxx

HS: High speed xxx

As shown in the following table, the process speed (mm/s) depends on the print mode (B&W or Color), resolution, and/or type of paper selected. Some SP mode settings depend on the process speed.

Mode	Resolution (dpi)	Line speed (mm/s)	Print speed (ppm)
B/W	600 x 600 1,200 x 600	182	30
	1,200 x 1,200	91	15
Color	600 x 600 1,200 x 600	182	30
	1,200 x 1,200	91	15

Mode	Resolution (dpi)	Line speed (mm/s)	Print speed (ppm)
	600 x 600		
OHP/Thick	1,200 x 600	91	15
	1,200 x 1,200		

#### 4. Count Unit

R: Rotation

S: Prints

#### 5. Environment

LL: Low temperature and Low humidity

ML: Medium temperature and Low humidity

MM: Medium temperature and Medium humidity

MH: Medium temperature and High humidity

HH: High temperature and High humidity

#### 7. Others

The following symbols are used in the SP mode tables.

FA: Factory setting (Data may be adjusted from the default setting at the factory.)

DFU: Design/Factory Use only - Do not touch the SP mode in the field.

"P" in the right hand side of the mode number column means that this SP mode relates to the Printer Controller. If "P" is not in the column, this SP mode relates to the Printer Engine.

A sharp (#) to the right hand side of the mode number column means that the main switch must be turned off and on to effect the setting change.

An asterisk (\*) to the right hand side of the mode number column means that this mode is stored in the NVRAM (Engine and Printer Controller). If you do a RAM clear, this SP mode will be reset to the default value. "EGB", "CTL" and "NV" indicate which NVRAM contains the data.

- EGB: NVRAM on the EGB board
- CTL: NVRAM on the controller board
- NV: NVRAM on the NVRAM expansion board (user account enhancement kit)

The settings of each SP mode are explained in the right-hand column of the SP table in the following manner.

[ Adjustable range / Default setting / Step ] Alphanumeric



If "Alphanumeric" is written to the right of the bracket as shown above, the setting of the SP mode is
displayed on the screen using alphanumeric characters instead of only numbers. However, the settings
in the bracket in the SP mode table are explained by using only the numbers.


### **Bit Switch Programming**

Do not change the bit switches unless you are told to do this by the manufacturer.

- 1. Start the SP mode. Select the "Service" menu with "▲/▼" keys.
- 2. Press the "OK" key three times.
- 3. To select a bit switch, press the "◀/▶" keys.
- 4. Push the OK key.
- 5. Set the value with these keys:
  - [Left] [Right]: Moves the cursor to one of the adjacent bits.
  - [Up] [Down]: Changes a bit between "0" and "1".
  - [Escape]: Goes out of the program without saving changes.
  - [OK]: Goes out of the program and saves changes.



• The digit at the left [A] is bit 7 and the digit at the right [B] is bit 0.

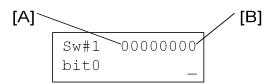

- 1. Push the "Escape" key one or more times until the menu "SP mode (Service)" is shown.
- 2. Select "End" and push the OK key.

### 5

# Service Mode Table

### Controller Service Mode

1001	[Bit Switch]		
1001 001	Bit Switch 1	*CTL	Adjusts bit switch settings. <b>DFU</b>
1001 002	Bit Switch 2	*CTL	Bit 0 to 2: Not used. Do not change the settings.  Bit 3: Changing the print language (PCL <-> PS)  O: Enabled  1: Disabled (No change)  Bit 4 to 7: Not used. Do not change the settings.
1001 003	Bit Switch 3	*CTL	Bit 0: PostScript3 Euro glyph  O: Disabled  1: Enabled (Even if there is no Euro Glyph in the ROM, it is possible to load the Euro Glyph data.)  Bit 1: Not used. Do not change the setting.  Bit 2:PCL5e/5c (HP4000/HP8000)  The left space command is set to "0", the machine is changed to "1"  O: Disabled  1: Enabled  Bit 3: PCL5e/GL2: pen # of PW  O: Normal  1: Patch  Bit 4: Tray selecting  O: The tray is determined by auto tray selection  1: Like HP/SV  Bit 5 to 7: Not used. Do not change the settings.
1001 004	Bit Switch 4	*CTL	Adjusts bit switch settings. <b>DFU</b>
1001 005	Bit Switch 5	*CTL	Bit 0 to 2: Not used. Do not change the settings.

#### Bit 3: Enables the "%%" command of the PostScript detection condition for the auto print language selection function. • 0: Enabled • 1: Disabled Bit 4 to 7: Not used. Do not change the settings. \*CTL 1001 006 Bit Switch 6 Adjusts bit switch settings. **DFU** 1001 007 Bit Switch 7 \*CTL \*CTL 1001 008 Bit Switch 8

RTB 7i Switch 6-7 added

1003	[Clear Setting]		
1003 001	Initialize System		Initializes settings in the System menu of the user mode.
1003 003	Delete Program		DFU

1004	[Print Summary]	
1004 001	Service Summary	Prints the service summary sheet (a summary of all the controller settings).

1005	[Display Version]	
1005 001	Printer Version	Displays the version of the controller firmware.

1007	[Supply Display]		
1007 001	Development	*CTL	[0 or 1 / 1 / 1 /step]
1007 002	PCU	*CTL	[0 or 1 / 1 / 1 /step]
1007 003	Transfer	*CTL	[0 or 1 / 1 / 1 /step]
1007 004	Int. Transfer	*CTL	[0 or 1 / 1 / 1 /step]
1007 005	Transfer Roller	*CTL	[0 or 1 / 1 / 1 /step]
1007 006	Fuser	*CTL	[0 or 1 / 1 / 1 /step]
1007 007	Fuser Oil	*CTL	[0 or 1 / 1 / 1 /step]

1101	[ToneCtlSet]		
1101 001	Tone (Factory)	*CTL	Recalls a set of gamma settings. This can be either a)
1101 2	Tone (Prev.)	*CTL	the factory setting, b) the previous setting, or c) the
11013	Tone (Current)	*CTL	current setting.

	[ToneCtlSet]	*CTL				
		Sets the printing mode (resolution) for the printer gamma adjustment. The asterisk (*) shows which mode is set.				
	• 00: *1200x120	• 00: *1200x1200Photo				
1102	• 01: 600x600Tex	• 01: 600x600Text				
	• 02: 1200x1200Text					
	• 03: 1200x600Te	• 03: 1200x600Text				
	• 04: 600x600Phc	• 04: 600x600Photo				
	• 05: 1200x600Photo					

1103	[PrnColorSheet]	
1103 001	ToneCtlSheet	Prints the test page to check the color balance before
1103 002	ColorChart	and after the gamma adjustment.

1104	[ToneCtlValue]				
1104	Adjusts the printer gamma for the mode selected in the Mode Selection menu.				
1104 001	Set Black 1	*CTL			
1104 021	Set Cyan 1	*CTL	[0.1- 255 / 14 / 1 / 1.1-1]		
1104 041	Set Magenta 1	*CTL	[0 to 255 / <b>16</b> / 1/step]		
1104 061	Set Yellow 1	*CTL			
1104 002	Set Black 2	*CTL			
1104 022	Set Cyan 2	*CTL	[O to 255 / <b>22</b> / 1 /stan]		
1104 042	Set Magenta 2	*CTL	[0 to 255 / <b>32</b> / 1/step]		
1104 062	Set Yellow 2	*CTL			

1104 003	Set Black 3	*CTL	
1104 023	Set Cyan 3	*CTL	[0 to 255 / <b>48</b> / 1/step]
1104 043	Set Magenta 3	*CTL	[0 to 233 / <b>46</b> / 1/ steb]
1104 063	Set Yellow 3	*CTL	
1104 004	Set Black 4	*CTL	
1104 024	Set Cyan 4	*CTL	[0.5. 255 / 4.4 / 1 / 55]
1104 044	Set Magenta 4	*CTL	[0 to 255 / <b>64</b> / 1/step]
1104 064	Set Yellow 4	*CTL	
1104 005	Set Black 5	*CTL	
1104 025	Set Cyan 5	*CTL	[0. 055 / 00 / 1 / . ]
1104 045	Set Magenta 5	*CTL	[0 to 255 / <b>80</b> / 1/step]
1104 065	Set Yellow 5	*CTL	
1104 006	Set Black 6	*CTL	
1104 026	Set Cyan 6	*CTL	[0.1. 255 / 04 / 1 / 1]
1104 046	Set Magenta 6	*CTL	[0 to 255 / <b>96</b> / 1/step]
1104 066	Set Yellow 6	*CTL	
1104 007	Set Black 7	*CTL	
1104 027	Set Cyan 7	*CTL	[O. O. O. F. / 110 / 1 / 1 ]
1104 047	Set Magenta 7	*CTL	[0 to 255 / <b>112</b> / 1/step]
1104 067	Set Yellow 7	*CTL	
1104 008	Set Black 8	*CTL	
1104 028	Set Cyan 8	*CTL	[0. 055 / 100 / 1 / . ]
1104 048	Set Magenta 8	*CTL	[0 to 255 / <b>128</b> / 1/step]
1104 068	Set Yellow 8	*CTL	
1104 009	Set Black 9	*CTL	
1104 029	Set Cyan 9	*CTL	[0 to 255 / <b>144</b> / 1/step]

1104 049	Set Magenta 9	*CTL	
1104 069	Set Yellow 9	*CTL	
1104 010	Set Black 10	*CTL	
1104 030	Set Cyan 10	*CTL	[0. 055 /1/0 /1/. ]
1104 050	Set Magenta 10	*CTL	[0 to 255 / <b>160</b> / 1/step]
1104 070	Set Yellow 10	*CTL	
1104 011	Set Black 11	*CTL	
1104 031	Set Cyan 11	*CTL	[0 055 / 174 / 1 /]
1104 051	Set Magenta 11	*CTL	[0 to 255 / <b>176</b> / 1/step]
1104 071	Set Yellow 11	*CTL	
1104 012	Set Black 12	*CTL	
1104 032	Set Cyan 12	*CTL	[0 to 255 / <b>192</b> / 1/step]
1104 052	Set Magenta 12	*CTL	[0 to 233 / 192 / 1 / step]
1104 072	Set Yellow 12	*CTL	
1104 013	Set Black 13	*CTL	
1104 033	Set Cyan 13	*CTL	[0 to 255 / <b>208</b> / 1/step]
1104 053	Set Magenta 13	*CTL	[0 10 233 / <b>206</b> / 1 / siep]
1104 073	Set Yellow 13	*CTL	
1104014	Set Black 14	*CTL	
1104 034	Set Cyan 14	*CTL	[0 to 255 / <b>224</b> / 1/step]
1104 054	Set Magenta 14	*CTL	[0 10 233 / <b>224</b> / 1 / siep]
1104 074	Set Yellow 14	*CTL	
1104 015	Set Black 15	*CTL	
1104 035	Set Cyan 15	*CTL	[0 to 255 / <b>240</b> / 1/step]
1104 055	Set Magenta 15	*CTL	[O IO 200 / <b>Z40</b> / 1 / sieh]
1104 075	Set Yellow 15	*CTL	

	[ToneCtlSave]
1105	Saves the print gamma (adjusted with the Gamma Adj.) as the new Current Setting. Before the machine stores the new "current setting", it moves the data stored as the "current setting" to the "previous setting" memory-storage location.

1106		[Toner Limit Value]				
'	100	Adjusts the maximum toner amount for image development.				
1	106 001	TonerLimitValue	*CTL	[100 to 400 / <b>260</b> / 1%/step]		

1108	[Ext. Toner Save]		
1108 001	Mode 1: Text		
1108 002	Mode 2: Text		
1108 003	Mode 1: Image		
1108 004	Mode 2: Image	DELL	
1108 005	Mode 1: Line	DFU	
1108 006	Mode 2: Line		
1108 007	Mode 1: Paint		
1108 008	Mode 2: Paint		

## Engine Service Mode

## SP1-XXX (Feed)

	[Lead Edge Reg.] Leading Edge Registration
	(Tray or By-pass, Paper Type, Process Speed)
1001	Paper Type ->N: Plain paper 1, N2 or Normal 2: Plain paper 2, Thick2: Thick paper 2 (see the Specifications table for details on these paper weights)
	Process Speed: LS: Low speed, RS: Regular speed

## **U** Note

- Adjusts the leading edge registration. This SP changes the registration clutch operation timing for each mode.
- A +ve value sets the registration start timing earlier.
- A -ve value sets the registration start timing later. The value of the normal paper in RS is the standard value. The values of papers other than normal are added to the value of the normal paper in RS.

	1 1		
1001 001	Tray 1: Normal: LS	*EGB	[-10.0 to 10.0 / <b>0.0</b> / 0.1 mm/step]
1001 002	Tray 1: Normal: RS	*EGB	[-10.0 to 10.0 / <b>-3.0</b> / 0.1 mm/step]
1001 003	Tray 1: Thick	*EGB	[-10.0 to 10.0 / <b>1.5</b> / 0.1 mm/step]
1001 004	Tray 1: OHP	*EGB	[-10.0 to 10.0 / <b>0.0</b> / 0.1 mm/step]
1001 005	Tray 2: Normal: LS	*EGB	[-10.0 to 10.0 / <b>0.0</b> / 0.1 mm/step]
1001 006	Tray 2: Normal: RS	*EGB	[-10.0 to 10.0 / <b>-3.0</b> / 0.1 mm/step]
1001 007	Tray 2: Thick	*EGB	[-10.0 to 10.0 / <b>1.5</b> / 0.1 mm/step]
1001 008	Tray 2: OHP	*EGB	[-10.0 to 10.0 / <b>0.0</b> / 0.1 mm/step]
1001 009	Tray 3: Normal: LS	*EGB	[-10.0 to 10.0 / <b>0.0</b> / 0.1 mm/step]
1001 010	Tray 3: Normal: RS	*EGB	[-10.0 to 10.0 / <b>-3.0</b> / 0.1 mm/step]
1001 011	Tray 3: Thick	*EGB	[-10.0 to 10.0 / <b>1.5</b> / 0.1 mm/step]
1001 012	Tray 3: OHP	*EGB	[-10.0 to 10.0 / <b>0.0</b> / 0.1 mm/step]
1001 013	By-pass: N: LS	*EGB	[-10.0 to 10.0 / <b>0.0</b> / 0.1 mm/step]
1001 014	By-pass: N: RS	*EGB	[-10.0 to 10.0 / <b>-3.0</b> / 0.1 mm/step]
1001 015	By-pass: Thick	*EGB	[-10.0 to 10.0 / <b>1.5</b> / 0.1 mm/step]
1001 016	By-pass: OHP	*EGB	[-10.0 to 10.0 / <b>0.0</b> / 0.1 mm/step]
1001 017	Duplex: Normal: LS	*EGB	[-10.0 to 10.0 / <b>0.0</b> / 0.1 mm/step]
1001 018	Duplex: Normal: RS	*EGB	[-10.0 to 10.0 / <b>-3.0</b> / 0.1 mm/step]
1001 019	Duplex: Thick	*EGB	[-10.0 to 10.0 / <b>1.0</b> / 0.1 mm/step]
1001 020	Duplex: N2: LS	*EGB	[-10.0 to 10.0 / <b>1.0</b> / 0.1 mm/step]
		,	

1001 021	Duplex: N2: RS	*EGB	[-10.0 to 10.0 / <b>1.0</b> / 0.1 mm/step]
1001 022	Tray 1: Normal 2: LS	*EGB	[-10.0 to 10.0 / <b>1.0</b> / 0.1 mm/step]
1001 023	Tray 1: Normal 2: RS	*EGB	[-10.0 to 10.0 / <b>1.0</b> / 0.1 mm/step]
1001 024	Tray 1: Thick 2	*EGB	[-10.0 to 10.0 / <b>1.5</b> / 0.1 mm/step]
1001 025	Tray 1: Thin: LS	*EGB	[-10.0 to 10.0 / <b>0.0</b> / 0.1 mm/step]
1001 026	Tray 1: Thin: RS	*EGB	[-10.0 to 10.0 / <b>0.0</b> / 0.1 mm/step]
1001 027	Tray 1: Special	*EGB	[-10.0 to 10.0 / <b>1.5</b> / 0.1 mm/step]
1001 028	Tray 2: Normal 2: LS	*EGB	[-10.0 to 10.0 / <b>1.0</b> / 0.1 mm/step]
1001 029	Tray 2: Normal 2: RS	*EGB	[-10.0 to 10.0 / <b>1.0</b> / 0.1 mm/step]
1001 030	Tray 2: Thick 2	*EGB	[-10.0 to 10.0 / <b>1.5</b> / 0.1 mm/step]
1001 031	Tray 2: Thin: LS	*EGB	[-10.0 to 10.0 / <b>0.0</b> / 0.1 mm/step]
1001 032	Tray 2: Thin: RS	*EGB	[-10.0 to 10.0 / <b>0.0</b> / 0.1 mm/step]
1001 033	Tray 2: Special	*EGB	[-10.0 to 10.0 / <b>1.5</b> / 0.1 mm/step]
1001 034	Tray 3: Normal 2: LS	*EGB	[-10.0 to 10.0 / <b>1.0</b> / 0.1 mm/step]
1001 035	Tray 3: Normal 2: RS	*EGB	[-10.0 to 10.0 / <b>1.0</b> / 0.1 mm/step]
1001 036	Tray 3: Thick 2	*EGB	[-10.0 to 10.0 / <b>1.5</b> / 0.1 mm/step]
1001 037	Tray 3: Thin: LS	*EGB	[-10.0 to 10.0 / <b>0.0</b> / 0.1 mm/step]
1001 038	Tray 3: Thin: RS	*EGB	[-10.0 to 10.0 / <b>0.0</b> / 0.1 mm/step]
1001 039	Tray 3: Special	*EGB	[-10.0 to 10.0 / <b>1.5</b> / 0.1 mm/step]
1001 040	By-pass: N2: LS	*EGB	[-10.0 to 10.0 / <b>1.0</b> / 0.1 mm/step]
1001 041	By-pass: N2: RS	*EGB	[-10.0 to 10.0 / <b>1.0</b> / 0.1 mm/step]
1001 042	By-pass: Thick 2	*EGB	[-10.0 to 10.0 / <b>1.5</b> / 0.1 mm/step]
1001 043	By-pass: Thin: LS	*EGB	[-10.0 to 10.0 / <b>0.0</b> / 0.1 mm/step]
1001 044	By-pass: Thin: RS	*EGB	[-10.0 to 10.0 / <b>0.0</b> / 0.1 mm/step]
1001 045	By-pass: Special	*EGB	[-10.0 to 10.0 / <b>1.5</b> / 0.1 mm/step]
1001 046	Tray4:Normal:LS	*EGB	[-10.0 to 10.0 / <b>0.0</b> / 0.1 mm/step]

1001 047	Tray4:Normal:RS	*EGB	[-10.0 to 10.0 / <b>-3.0</b> / 0.1 mm/step]
1001 048	Tray4:Thick	*EGB	[-10.0 to 10.0 / <b>1.5</b> / 0.1 mm/step]
1001 049	Tray4:OHP	*EGB	[-10.0 to 10.0 / <b>0.0</b> / 0.1 mm/step]
1001 050	Tray4:Normal2:LS	*EGB	[-10.0 to 10.0 / <b>1.0</b> / 0.1 mm/step]
1001 051	Tray4:Normal2:RS	*EGB	[-10.0 to 10.0 / <b>1.0</b> / 0.1 mm/step]
1001 052	Tray4:Thick2	*EGB	[-10.0 to 10.0 / <b>1.5</b> / 0.1 mm/step]
1001 053	Tray4:Thin:LS	*EGB	[-10.0 to 10.0 / <b>0.0</b> / 0.1 mm/step]
1001 054	Tray4:Thin:RS	*EGB	[-10.0 to 10.0 / <b>0.0</b> / 0.1 mm/step]
1001 055	Tray4:Special	*EGB	[-10.0 to 10.0 / <b>1.5</b> / 0.1 mm/step]

1002	[S-to-S Reg.] Side-to-Side Registration		
1002 001	By-pass	*EGB	
1002 002	Tray 1	*EGB	
1002 003	Tray 2	*EGB	Adjusts the side-to-side registration for each mode. This SP changes the laser main scan start
1002 004	Tray 3	*EGB	position.
1002 005	Duplex	*EGB	[-10.0 to 10.0 / <b>0.0</b> / 0.1 mm/step]
1002 006	Tray4	*EGB	

	[Paper Buckle] Paper Buckle			
	(Tray or By-pass, Paper Type, Process Speed)			
1003	Paper Type ->N: Plain paper 1, N2 or Normal 2: Plain paper 2, Thick2: Thick paper 2 (see the Specifications table for details on these paper weights)  Process Speed-> LS: Low speed, RS: Regular speed			
1003 001	Tray 1: Normal: LS	*EGB		
1003 002	Tray 1: Normal: RS	*EGB	Adjusts the amount of paper buckle at the	
1003 003	Tray 1: Thick	*EGB	registration roller for each mode. This SP changes the paper feed timing.	
1003 004	Tray 1: OHP	*EGB	[-10.0 to 10.0 / <b>0.0</b> / 0.1 mm/step]	
1003 005	Tray 2: Normal: LS	*EGB		

1003 006	Tray 2: Normal: RS	*EGB
1003 007	Tray 2: Thick	*EGB
1003 008	Tray 2: OHP	*EGB
1003 009	Tray 3: Normal: LS	*EGB
1003 010	Tray 3: Normal: RS	*EGB
1003 011	Tray 3: Thick	*EGB
1003 012	Tray 3: OHP	*EGB
1003 013	By-pass: N:LS	*EGB
1003 014	By-pass: N:RS	*EGB
1003 015	By-pass: Thick	*EGB
1003 016	By-pass: OHP	*EGB
1003 017	Duplex: Normal: LS	*EGB
1003 018	Duplex: Normal: RS	*EGB
1003 019	Duplex: Thick	*EGB
1003 020	Duplex: N2: LS	*EGB
1003 021	Duplex: N2: RS	*EGB
1003 022	Tray 1: Normal 2: LS	*EGB
1003 023	Tray 1: Normal 2: RS	*EGB
1003 024	Tray 1: Thick 2	*EGB
1003 025	Tray 1: Thin: LS	*EGB
1003 026	Tray 1: Thin: RS	*EGB
1003 027	Tray 1: Special	*EGB
1003 028	Tray 2: Normal 2: LS	*EGB
1003 029	Tray 2: Normal 2: RS	*EGB
1003 030	Tray 2: Thick 2	*EGB
1003 031	Tray 2: Thin: LS	*EGB

	i -		1
1003 032	Tray 2: Thin: RS	*EGB	
1003 033	Tray 2: Special	*EGB	
1003 034	Tray 3: Normal 2: LS	*EGB	
1003 035	Tray 3: Normal 2: RS	*EGB	
1003 036	Tray 3: Thick 2	*EGB	
1003 037	Tray 3: Thin: LS	*EGB	
1003 038	Tray 3: Thin: RS	*EGB	
1003 039	Tray 3: Special	*EGB	
1003 040	By-pass: N2: LS	*EGB	
1003 041	By-pass: N2: RS	*EGB	
1003 042	By-pass: Thick 2	*EGB	
1003 043	By-pass: Thin: LS	*EGB	
1003 044	By-pass: Thin: RS	*EGB	
1003 045	By-pass: Special	*EGB	
1003 046	Tray4:Normal:LS	*EGB	
1003 047	Tray4:Normal:RS	*EGB	
1003 048	Tray4:Thick	*EGB	
1003 049	Tray4:OHP	*EGB	
1003 050	Tray4:Normal2:LS	*EGB	
1003 051	Tray4:Normal2:RS	*EGB	•
1003 052	Tray4:Thick2	*EGB	
1003 053	Tray4:Thin:LS	*EGB	
1003 054	Tray4:Thin:RS	*EGB	
1003 055	Tray4:Special	*EGB	
1003 100	Detection Width	*EGB	Sets the rear edge detection width for dupl [0.0 to 255 / 148 / 1.0 mm/step]

	[Mt Speed] Drive Motor Spe	eed <b>DFU</b>			
	(Unit, Process Speed, Paper Type)				
1004	Paper Type ⇒ N: Plain paper 1, N2 or Normal 2: Plain paper 2, Thick2: Thick paper 2 (see the Specifications table for details on these paper weights)				
	Process Speed ⇒ LS: Low sp	peed, RS: R	egular speed		
	CW: Clockwise, CCW: Cou	ınterclockw	rise		
	PFU: Optional paper tray ur	nit			
1004 001	DEV / OPC [K]: LS	*EGB	Adjusts the black development and OPC motor		
1004 002	DEV / OPC [K]: RS	*EGB	speed. [-4.00 to 4.00 / <b>-1.35</b> / 0.01%/step]		
1004 003	DEV [CMY]: LS	*EGB	Adjusts the color development motor speed.		
1004 004	DEV [CMY]: RS	*EGB	[-4.00 to 4.00 / <b>0.0</b> / 0.01%/step]		
1004 005	OPC [CMY]: LS	*EGB	Adjusts the color OPC motor speed.		
1004 006	OPC [CMY]: RS	*EGB	[-4.00 to 4.00 / <b>-1.35</b> / 0.01%/step]		
1004 007	Fusing: LS	*EGB	Adjusts the paper exit and fusing motor speed.		
1004 008	Fusing: RS	*EGB	[-4.00 to 4.00 / <b>0.95</b> / 0.01%/step]		
1004 009	Transfer Belt: LS	*EGB	Adjusts the transfer belt motor speed.		
1004 010	Transfer Belt: RS	*EGB	[-4.00 to 4.00 / <b>0.0</b> / 0.01%/step]		
1004 011	PFU: LS	*EGB	Adjusts the speed of the feed motor in the optional paper tray unit.		
			[-4.00 to 4.00 / <b>-1.06</b> / 0.01%/step]		
1004 012	PFU: RS	*EGB	[-4.00 to 4.00 / <b>-0.27</b> / 0.01%/step]		
1004 013	Duplex: LS: Add	*EGB	Adjusts the duplex motor speed.		
1004 014	Duplex: RS: Add	*EGB	[-4.00 to 4.00 / <b>0.0</b> / 0.01%/step]		
1004 015	Duplex: LS	*EGB	Adjusts the duplex motor speed.		
	'		[-4.00 to 4.00 / <b>0.41</b> / 0.01%/step]		
1004 016	Duplex: RS	*EGB	[-4.00 to 4.00 / <b>1.21</b> / 0.01%/step]		
1004 017	Reverse: LS: CW	*EGB	Adjusts the inverter motor speed.		
1004 018	Reverse: RS: CW	*EGB	[-4.00 to 4.00 / <b>1.4</b> / 0.01%/step]		

1004 019	Reverse: LS: CCW	*EGB	Adjusts the inverter motor speed.
1004 020	Reverse: RS: CCW	*EGB	[-4.00 to 4.00 / <b>0.0</b> / 0.01%/step]
		*EGB	
1004 021	DEV / OPC [K]: LS: N2	EGB	Adjusts the black development and OPC motor speed.
1004 022	DEV / OPC [K]: RS: N2	*EGB	[-4.00 to 4.00 / <b>-1.35</b> / 0.01%/step]
1004 023	DEV [CMY]: LS: N2	*EGB	Adjusts the color development motor speed.
1004 024	DEV [CMY]: RS: N2	*EGB	[-4.00 to 4.00 / <b>0.0</b> / 0.01%/step]
1004 025	OPC [CMY]: LS: N2	*EGB	Adjusts the color OPC motor speed.
1004 026	OPC [CMY]: RS: N2	*EGB	[-4.00 to 4.00 / <b>-1.35</b> / 0.01%/step]
1004 027	Fusing: LS: N2	*EGB	Adjusts the paper exit and fusing motor speed.
1004 028	Fusing: RS: N2	*EGB	[-4.00 to 4.00 / <b>0.6</b> / 0.01%/step]
1004 029	Trans. Belt: LS: N2	*EGB	Adjusts the transfer belt motor speed.
1004 030	Trans. Belt: RS: N2	*EGB	[-4.00 to 4.00 / <b>0.0</b> / 0.01%/step]
1004 031	PFU: LS: Normal 2	*EGB	Adjusts the speed of the feed motor in the
1004 032	PFU: RS: Normal 2	*EGB	optional paper tray unit. [-4.00 to 4.00 / <b>-1.14</b> / 0.01%/step]
1004 033	Duplex: LS: Add: N2	*EGB	Adjusts the duplex motor speed.
1004 034	Duplex: RS: Add: N2	*EGB	[-4.00 to 4.00 / <b>0.0</b> / 0.01%/step]
1004 035	Duplex: LS: N2	*EGB	Adjusts the duplex motor speed.
1004 036	Duplex: RS: N2	*EGB	[-4.00 to 4.00 / <b>-0.36</b> / 0.01%/step]
1004 037	Reverse: LS: CW: N2	*EGB	Adjusts the inverter motor speed.
1004 038	Reverse: RS: CW: N2	*EGB	[-4.00 to 4.00 / <b>0.6</b> / 0.01%/step]
1004 039	Rever.: LS: CCW: N2	*EGB	Adjusts the inverter motor speed.
1004 040	Rever.: RS: CCW: N2	*EGB	[-4.00 to 4.00 / <b>0.0</b> / 0.01%/step]
1004 041	DEV / OPC [K]: LS: TC	*EGB	Adjusts the black development and OPC motor speed.  [-4.00 to 4.00 / -1.35 / 0.01%/step]

1004 042	DEV [CMY]: LS: TC	*EGB	Adjusts the color development motor speed.  [-4.00 to 4.00 / 0.0 / 0.01%/step]
1004 043	OPC [CMY]: LS: TC	*EGB	Adjusts the color OPC motor speed. [-4.00 to 4.00 / -1.35 / 0.01%/step]
1004 044	Fusing: LS: Thick	*EGB	Adjusts the paper exit and fusing motor speed.  [-4.00 to 4.00 / 0.6 / 0.01%/step]
1004 045	Trans. Belt: LS: TC	*EGB	Adjusts the transfer belt motor speed.  [-4.00 to 4.00 / 0.0 / 0.01%/step]
1004 046	PFU: LS: Thick	*EGB	Adjusts the speed of the feed motor in the optional paper tray unit.  [-4.00 to 4.00 / -1.14 / 0.01%/step]
1004 047	Duplex: LS: Add: TC	*EGB	Adjusts the duplex motor speed. [-4.00 to 4.00 / 0.0 / 0.01%/step]
1004 048	Duplex: LS: Thick	*EGB	Adjusts the duplex motor speed. [-4.00 to 4.00 / -0.36 / 0.01%/step]
1004 049	Reverse: LS: CW: TC	*EGB	Adjusts the inverter motor speed.  [-4.00 to 4.00 / 0.6 / 0.01%/step]
1004 050	Rever.: LS: CCW: TC	*EGB	Adjusts the inverter motor speed.  [-4.00 to 4.00 / 0.0 / 0.01%/step]
1004 051	DEV / OPC [K] LS:TC2	*EGB	Adjusts the black development and OPC motor speed.  [-4.00 to 4.00 / -1.35 / 0.01%/step]
1004 052	DEV [CMY]: LS: TC2	*EGB	Adjusts the color development motor speed.  [-4.00 to 4.00 / 0.0 / 0.01%/step]
1004 053	OPC [CMY]: LS: TC2	*EGB	Adjusts the color OPC motor speed. [-4.00 to 4.00 / -1.35 / 0.01%/step]
1004 054	Fusing: LS: TC 2	*EGB	Adjusts the paper exit and fusing motor speed.  [-4.00 to 4.00 / 0.6 / 0.01%/step]
1004 055	T. Belt: LS: TC 2	*EGB	Adjusts the transfer belt motor speed.

			[-4.00 to 4.00 / <b>0.0</b> / 0.01%/step]
1004 056	PFU: LS: Thick 2	*EGB	Adjusts the speed of the feed motor in the optional paper tray unit.  [-4.00 to 4.00 / -1.14 / 0.01%/step]
1004 057	Duplex: LS: Thick 2	*EGB	Adjusts the duplex motor speed. [-4.00 to 4.00 / -0.36 / 0.01%/step]
1004 058	DEV / OPC [K]: LS: SP	*EGB	Adjusts the black development and OPC motor speed.  [-4.00 to 4.00 / -1.35 / 0.01%/step]
1004 059	DEV [CMY]: LS: SP	*EGB	Adjusts the color development motor speed.  [-4.00 to 4.00 / 0.0 / 0.01%/step]
1004 060	OPC [CMY]: LS: SP	*EGB	Adjusts the color OPC motor speed. [-4.00 to 4.00 / -1.35 / 0.01%/step]
1004 061	Fusing: LS: SP	*EGB	Adjusts the paper exit and fusing motor speed.  [-4.00 to 4.00 / 0.6 / 0.01%/step]
1004 062	Trans. Belt: LS: SP	*EGB	Adjusts the transfer belt motor speed.  [-4.00 to 4.00 / 0.0 / 0.01%/step]
1004 063	PFU: LS: SP	*EGB	Adjusts the speed of the feed motor in the optional paper tray unit.  [-4.00 to 4.00 / -1.14 / 0.01%/step]
1004 064	Duplex: LS: SP	*EGB	Adjusts the duplex motor speed. [-4.00 to 4.00 / -0.36 / 0.01%/step]
1004 065	DEV / OPC [K]: LS: TN	*EGB	Adjusts the black development and OPC motor
1004 066	DEV / OPC [K]: RS: TN	*EGB	speed. [-4.00 to 4.00 / <b>-1.35</b> / 0.01 %/step]
1004 067	DEV [CMY]: LS: Thin	*EGB	Adjusts the color development motor speed.
1004 068	DEV [CMY]: RS: Thin	*EGB	[-4.00 to 4.00 / <b>0.0</b> / 0.01%/step]
1004 069	OPC [CMY]: LS: Thin	*EGB	Adjusts the color OPC motor speed.
1004 070	OPC [CMY]: RS: Thin	*EGB	[-4.00 to 4.00 / <b>-1.35</b> / 0.01%/step]
1004 071	Fusing: LS: Thin	*EGB	Adjusts the paper exit and fusing motor speed.

1004 072	Fusing: RS: Thin	*EGB	[-4.00 to 4.00 / <b>1.05</b> / 0.01%/step]
1004 073	Trans. Belt: LS: TN	*EGB	Adjusts the transfer belt motor speed.
1004 074	Trans. Belt: RS: TN	*EGB	[-4.00 to 4.00 / <b>0.0</b> / 0.01%/step]
1004 075	PFU: LS: Thin	*EGB	Adjusts the speed of the feed motor in the
1004 076	PFU: RS: Thin	*EGB	optional paper tray unit. [-4.00 to 4.00 / <b>-0.36</b> / 0.01%/step]
1004 077	Duplex: LS: Thin	*EGB	Adjusts the duplex motor speed.
1004 078	Duplex: RS: Thin	*EGB	[-4.00 to 4.00 / <b>-0.36</b> / 0.01%/step]
1004 079	DEV / OPC [K]: LS: OHP	*EGB	Adjusts the black development and OPC motor speed.  [-4.00 to 4.00 / -1.35 / 0.01 %/step]
1004 080	DEV [CMY]: LS: OHP	*EGB	Adjusts the color development motor speed.  [-4.00 to 4.00 / 0.0 / 0.01%/step]
1004 081	OPC [CMY]: LS: OHP	*EGB	Adjusts the color OPC motor speed. [-4.00 to 4.00 / -1.35 / 0.01%/step]
1004 082	Fusing: LS: OHP	*EGB	Adjusts the paper exit and fusing motor speed.  [-4.00 to 4.00 / <b>0.6</b> / 0.01%/step]
1004 083	T.Belt: LS: OHP	*EGB	Adjusts the transfer belt motor speed.  [-4.00 to 4.00 / 0.0 / 0.01%/step]
1004 084	PFU: LS: OHP	*EGB	Adjusts the speed of the feed motor in the optional paper tray unit.  [-4.00 to 4.00 / -1.14 / 0.01%/step]
1004 085	Duplex: LS: OHP	*EGB	Adjusts the duplex motor speed. [-4.00 to 4.00 / -0.36 / 0.01%/step]

1006	[Phase Adjust.] Phase Adjustment		
1006 001	Angle	*EGB	Adjusts the phase angle between the K drum and the CMY drums.  [-180 to 180 / 0 / 1deg/step] <b>DFU</b>

1104	[Fusing Cont.] Fusing Control				
	Control Method	*EGB	[0 or 1 / 1 / -]		
1104 001	Selects the fusing control n	nethod.			
	0: ON/OFF Control, 1: Pl	D Control	(Phase control)		
	Max. Wait Time	*EGB	[0 to 255 / <b>30</b> / 1 sec/step]		
1104 022	1	-	r the target printing temperature of fusing unit. After imperature did not get to the target.		
	Paper Feed. Temp.	*EGB	[0 to 30 / <b>10</b> / 1 deg / step]		
1104 023	Adjusts the increase in the t	•	e of the fusing unit between the ready condition and a new job.		
	1 st Add Time: LS		[0 to 50 / <b>0</b> / 0.1 sec/step]		
1104 024	1		If the interval between jobs is less than this setting, then the 025) for the first page of a new job is not applied.		
	1 st Add Temp.	*EGB	[0 to 20 / <b>8</b> / 1 deg /step]		
1104 025	Adds this value to the basic fusing temperature, for the first page of a new job. This extra temperature is necessary because when the printer starts the first page, the fusing unit is not warm enough.				
1104004	1 st Temp. Maint.	*EGB	[0 to 50 / <b>8</b> / 1 sec/step]		
1104 026	Adjusts the time for maintaining the temperature change that is set with 1104 025.				
	1 st Print Inter.	*EGB	[0 to 100 / <b>0</b> / 0.1 sec/step]		
1104 027	For print jobs at regular speed. If the interval between jobs is less than this setting, then the temperature change (1104 025) for the first page of a new job is not applied.				
	Paper Feed. Temp.	*EGB	[0 to 30 / <b>5</b> / 0.1 deg/step]		
1104 028	Adjusts the increase in the temperature of the fusing unit between the ready condition and the start of paper feed at the start of a new job (B/W mode).				
	1 st PrtDecTmpTime	*EGB	[0 to 255 / <b>3</b> / 1 sec/step]		
1104 029	Adjusts the time for decreasing 1°C when the temperature decline to the target printing temperature.				
1104 030	PreRot.Thre.Temp.	*EGB	[0 to 255 / <b>20</b> / 1 deg/step]		

	Adjusts the threshold temperature for the added idling rotation.			
	1 st Pot Add Time	*EGB	[0 to 10 / <b>2</b> / 0.1 sec/step]	
1104 031	Adjusts the added idling rotation time. This SP is activated when the fusing temperature does not reach the specified temperature with SP1104-30.			

	[Fusing Temp.] Fusing Temp	erature			
	(Paper Type, Mode, Color, Process Speed)				
	Paper Type -> N: Plain paper 1, N2: Plain paper 2, TC: Thick, TN: Thin, SP: Special, OHP, ENV: Envelope, GL: Glossy paper, TK2: Thick paper 2				
1105	Mode -> Simple [one-sided	] or Duple	x		
	Color -> K: Black only, FC:	Full color			
	Process Speed -> LS: Low sp	peed, RS: I	Regular speed		
	Reload: Print ready, betwee	en jobs			
	Adjusts the fusing unit tempe	erature for	each mode.		
1105 022	Reload Temp.	*EGB	[100 to 180 / <b>160</b> / 1deg /step]		
1105 025	TC1: Simple: [K]	*EGB			
1105 026	TC1: Duplex: [K]	*EGB			
1105 027	TC1: Simple: [FC]	*EGB	[1204-190/140/14/]		
1105 028	TC1: Duplex: [FC]	*EGB	[120 to 180 / <b>160</b> / 1deg /step]		
1105 029	TC2: Simple: [K]	*EGB			
1105 031	TC2: Simple: [FC]	*EGB			
1105 033	N: Simple: [K]: LS	*EGB	[120 to 180 / <b>145</b> / 1deg /step]		
1105 034	N: Simple: [K]: RS	*EGB	[120 to 180 / <b>160</b> / 1deg /step]		
1105 035	N: Duplex: [K]: LS	*EGB	[120 to 180 / <b>145</b> / 1deg /step]		
1105 036	N: Duplex: [K]: RS	*EGB	[120 to 180 / <b>160</b> / 1 deg /step]		
1105 037	N: Simple: [FC]: LS	*EGB	[120 to 180 / <b>145</b> / 1deg /step]		
1105 039	N: Simple: [FC]: RS	*EGB	[120 to 180 / <b>160</b> / 1deg /step]		
1105 040	N: Duplex: [FC]: LS	*EGB	[120 to 180 / <b>145</b> / 1deg /step]		

1105 042	N: Duplex: [FC]: RS	*EGB	[120 to 180 / <b>160</b> / 1 deg /step]		
	Check Temp. Time	*EGB	[0 to 10 / 2.0 / 0.1 sec/step]		
1105 043	Adjusts the rotation time before checking the fusing unit temperature. If the main switch is turned on and off for a short time, it might be possible that the checked temperature is high even though the whole of the fusing unit is not high enough for printing condition.				
1105 049	N2: Simple: [K]: LS	*EGB	[120 to 180 / <b>150</b> / 1deg /step]		
1105 050	N2: Simple: [K]: RS	*EGB	[120 to 180 / <b>165</b> / 1deg /step]		
1105 051	N2: Duplex: [K]: LS	*EGB	[120 to 180 / <b>150</b> / 1deg /step]		
1105 052	N2: Duplex: [K]: RS	*EGB	[120 to 180 / <b>165</b> / 1deg /step]		
1105 053	N2: Simple: [FC] LS	*EGB	[120 to 180 / <b>150</b> / 1deg /step]		
1105 054	N2: Simple: [FC] RS	*EGB	[120 to 180 / <b>165</b> / 1deg /step]		
1105 055	N2: Duplex: [FC] LS	*EGB	[120 to 180 / <b>150</b> / 1deg /step]		
1105 056	N2: Duplex: [FC] RS	*EGB	[120 to 180 / <b>165</b> / 1deg /step]		
1105 057	TN: Simple: [K]: LS	*EGB	[120 to 180 / <b>135</b> / 1deg /step]		
1105 058	TN: Simple: [K]: RS	*EGB	[120 to 180 / <b>150</b> / 1deg /step]		
1105 059	TN: Duplex: [K]: LS	*EGB	[120 to 180 / <b>135</b> / 1deg /step]		
1105 060	TN: Duplex: [K] RS	*EGB	[120 to 180 / <b>150</b> / 1deg /step]		
1105 061	TN: Simple: [FC] LS	*EGB	[120 to 180 / <b>135</b> / 1deg /step]		
1105 062	TN: Simple: [FC] RS	*EGB	[120 to 180 / <b>150</b> / 1deg /step]		
1105 063	TN: Duplex: [FC] LS	*EGB	[120 to 180 / <b>135</b> / 1deg /step]		
1105 064	TN: Duplex: [FC] RS	*EGB	[120 to 180 / <b>150</b> / 1deg /step]		
1105 065	SP1: Simple: [K] LS	*EGB	[120 to 180 / <b>165</b> / 1deg /step]		
1105 067	SP1: Duplex: [K] LS	*EGB	[120 to 180 / <b>165</b> / 1deg /step]		
1105 069	SP1: Simp.: [FC] LS	*EGB	[120 to 180 / <b>165</b> / 1deg /step]		
1105 071	SP1: Dupl.: [FC] LS	*EGB	[120 to 180 / <b>165</b> / 1deg /step]		
1105 073	ENV: Simple: [K] RS	*EGB	[120 to 180 / <b>170</b> / 1deg /step]		

1105 074	ENV: Simple: [FC] RS	*EGB	
1105 075	GL: Simple: [K] LS	*EGB	[1204-120 / 155 / 1 day / tan]
1105 076	GL: Duplex: [K] LS	*EGB	[120 to 180 / <b>155</b> / 1deg /step]
1105 077	GL: Simple: [FC] LS	*EGB	[1204-120 / 155 / 1 day / tan]
1105 078	GL: Duplex: [FC] LS	*EGB	[120 to 180 / <b>155</b> / 1deg /step]
1105 089	OHP: [K]: LS	*EGB	[1204-190/140/14/]
1105 090	OHP: [FC]: LS	*EGB	[120 to 180 / <b>160</b> / 1deg /step]
1105 091	TK2: Duplex: [K]	*EGB	[1204-190 / 150 / 14 /]
1105 092	TK2: Duplex: [FC]	*EGB	[120 to 180 / <b>150</b> / 1deg /step]

1106	[Fusing Temp.] Fusing Temperature H. Roller: Heat Roller		
1106 002	H. Roller Temp.		Displays the heating roller temperature at this time.  [0 to 230 / <b>0</b> / 1 deg /step]

1159	[Fusing JAM SC] Fusing JAM SC Setting			
1159 001	Fusing JAM SC	*EGB	Turns on or off the fusing jam SC to detect the three consecutive paper jams at fusing unit.  [0 or 1 / 0 / 1 /step]  0: OFF  1: ON	

	[Print Speed Ctl] Print Speed Control for small paper sizes (A5 or smaller)				
	(Sheets of paper, Interval time or Temperature, Process Speed)				
1911	Simple [one-sided] or Duplex				
	Process Speed -> LS: Low speed, RS: Regular speed				
	See section 6 for more about these SPs.				
1911 001	PPM Down: RS: S	*EGB	The print speed (PPM) is reduced after the machine		
1911 002	PPM Down: LS: S	*EGB	has printed this number of pages continuously.  [0 to 99 / 15 / 1 sheet/step]		

1911 003	PPM Down Inter.	*EGB	The print speed goes back to the normal speed after this interval.  [0 to 255 / 30 / 1 sec/step]
1911 004	S-size Temp. 1	*EGB	The temperature is decreased by this amount to prevent overheating the fusing unit for small size paper.  [0 to 200 / 2 / 1 deg / step]
1911 006	S-size Temp. 2	*EGB	
1911 008	S-size Temp. 3	*EGB	[0 to 200 / <b>5</b> / 1 deg /step]]
1911 014	S-size Temp.: S1	*EGB	These SPs control when the above temperature reductions are done.  [0 to 255 / 25 / 1 sheet/step]
1911 016	S-size Temp.: S2	*EGB	[0 to 255 / <b>10</b> / 1 sheet/step]
1911 018	S-size Temp.: S3	*EGB	[0 to 255 / <b>15</b> / 1 sheet/step]
1911 020	Simple Temp. 3	*EGB	This SP controls when the temperature reduction of SP1911-022 is done.  [0 to 500 / 15 / 1 sheet/step]
1911 021	Simple Temp. 1	*EGB	Adjusts the temperature reduction for one-sided printing.  [0 to 200 / 2 / 1 deg / step]]
1911 022	Simple Temp. 2	*EGB	Adjusts the temperature reduction 2 for one-sided printing.  [0 to 200 / 5 / 1 deg / step]]
1911 023	Simple Temp.:S1	*EGB	This SP keeps the target print temperature for specified printouts with this SP.  [0 to 500 / 100 / 1 sheet/step]
1911 024	Simple Temp.:S2	*EGB	This SP controls when the temperature reduction of SP1911-021 is done.  [0 to 500 / 10 / 1 sheet/step]
1911 025	Duplex Temp. 1	*EGB	Adjusts the temperature reduction for duplex printing.  [0 to 200 / 2 / 1 deg / step]]

1911 026	Duplex Temp. 2	*EGB	[0 to 200 / <b>5</b> / 1 deg /step]]
1911 027	Duplex Temp.: S1	*EGB	This SP keeps the target print temperature for specified printouts with this SP in duplex printing.  [0 to 500 / 80 / 1 sheet/step]
1911 028	Duplex Temp.: S2	*EGB	This SP controls when the temperature reduction of SP1911-025 is done.  [0 to 500 / 10 / 1 sheet/step]
1911 029	Duplex Temp.: S3	*EGB	This SP controls when the temperature reduction of SP1911-026 is done.  [0 to 500 / 15 / 1 sheet/step]
1911 040	Dec.Tmp Keep Time	*EGB	Keeps the temperature reduction for the time specified with this SP even the process control interrupts the multiple printing job.  [0 to 500 / 60 / 1 sec/step]

1912	[Fusing Rotat.] Fusing Unit Roller Rotation Control  Paper Type -> TC1: Thick paper 1, TC2: Thick paper 2, OHP, SP: Special, GL: Glossy paper			
	Rotation	*EGB	[0 or 1 / 1 / -] 0: Off 1: On.	
1912 001	When the printer is in the ready condition, the nip between the hot roller and pre roller is in the same position. This may cause deformation of the rollers. Therefore temporary rotation prevents this problem. SP 1912 001 turns this feature on or o SP1912-003 and 004 control this rotation.  Pre-rotation: Fusing idling			
	Prerotat. Speed	*EGB	[0 to 2 / <b>2</b> / -]	
1912 002	O2 Adjusts the speed of the fusing-unit rollers during fusing idling. O: Regular speed, 1: Low speed, 2: 1/3 regular speed			
	Rotation Freque.	*EGB	[1 to 24 / <b>4</b> / 1 hour/step]	
1912 003	Adjusts the frequency of the fusing-unit roller rotation if the machine is in the ready condition for a very long interval.			
1912 004	Rotation Inter.	*EGB	[0 to 25 / <b>0.1</b> / 0.1 sec/step]	

	Adjusts the duration of the fusing-unit roller rotation					
1912 005	Prerotat. Temp.	*EGB	[0 to 200 / <b>100</b> / 1 deg /step]			
	Fusing idling is not done if	the fusing	unit temperature is above this value.			
1012.004	Prerotat. Inter.	*EGB	[0 to 180 / 1 / 1 min/step]			
1912 006	Adjusts the duration of fusi	ng idling ii	mmediately after the power is turned on.			
	Ex. Rotation Time	*EGB	[0 to 10 / 5 / 1 sec/step]			
1912 007			he fusing unit rollers at the end of a job. If the fusing urns off, the temperature can become very high.			
1010 000	Prerotat. Ext.	*EGB	[0 to 255 / <b>0</b> / 1 sec/step]			
1912 008	Adjusts the additional time	for pre-ro	tation of the fusing rollers.			
1912 010	TC1: Rotat. Ext.	*EGB	[0 to 255 / <b>10</b> / 1 sec/step]			
1912010	Adjusts the additional time	of the fusi	ng roller pre-rotation for thick paper 1.			
1912 011	TC2 Rotat. Ext.	*EGB	[0 to 255 / <b>15</b> / 1 sec/step]			
1912 011	Adjusts the additional time	Adjusts the additional time of the fusing roller pre-rotation for thick paper 2.				
1912 012	OHP: Rotat. Ext.	*EGB	[0 to 255 / <b>15</b> / 1 sec/step]			
1912 012	Adjusts the additional time of the fusing roller pre-rotation for OHP.					
1912 013	SP: Rotat. Ext.	*EGB	[0 to 255 / <b>15</b> / 1 sec/step]			
1912 013	Adjusts the additional time	of the fusi	ng roller pre-rotation for special paper.			
1912 014	GL: Rotat. Ext.	*EGB	[0 to 255 / <b>10</b> / 1 sec/step]			
1912 014	Adjusts the additional time of the fusing roller pre-rotation for glossy paper.					
1912 015	LL: RotSpd. Sel	*EGB	[0 or 1 / 1 / 1] 0: OFF, 1: ON			
	Turns on or off the rotation speed switching of the pre-rotation in LL condition.					
	When the "ON" is set, pre	-rotation s	peed is the one-third of normal speed.			
	LM: RotSpd. Select	*EGB	[0 or 1 / 1 / 1]			
1912 016			0: OFF, 1: ON			
	Turns on or off the rotation speed switching of the pre-rotation in LM condition.					

	When the "ON" is set, pre-rotation speed is the one-third of normal speed.			
1912 017	MM/HH: RotSpd. Sel	*EGB	[0 or 1 / 1 / 1] 0: OFF, 1: ON	
	Turns on or off the rotation speed switching of the pre-rotation in MM/HH condition.  When the "ON" is set, pre-rotation speed is the one-third of normal speed.			

1913	[Heating Roller] Heating Roller Control		
1010.000	Stand-by Temp.	*EGB	[0 to 200 / <b>150</b> / 1 deg /step]
1913 002	Adjusts the heating roller temperature when the machine is in the ready condition.		

1916	[Nip Measure] Fusing Nip Width Measurement DFU			
	Nip Measure Exe.		[0 or 1 / <b>0</b> /-]	
1916 001			0: Not execute, 1: Execute	
	Performs the nip width measurement.			
1916 002	Prerotation Time	*EGB	[0 to 60 / <b>10</b> / 1 sec/step]	
	Adjusts the rotation time of the fusing unit rollers before the nip measurement.			

	[Environ. Adapt.] Fusing Idling: Environment Correction			
	The machine automatically adjusts the duration of fusing idling, depending on room temperature measured by the temperature/humidity sensor			
191 <i>7</i>	(Paper Type, Temperature Environment, Value of Temperature/ Rotation Time)			
Paper Type ⇒ N1: Plain paper 1, N2:		2: Plain paper 2, T1: Thick paper 1, T2: Thick paper stable for details on these paper weights)		
	Temperature Environment -> H: High temperature, L: Low temperature			
	Value of Temperature/ Time: Dec.: Decrease, Inc.: Increase			
1917 001	LL/MM Border	*EGB	Adjusts the threshold degree between LL (Low temperature and Low humidity) and MM (Middle temperature and middle humidity).  [0 to 35 / 23 / 1 deg /step]	
1917 002	LM Temp Adj.	*EGB	Adjusts the additional temperature for LM condition. This temperature is added to the fusing temperature of MM condition.	

			[0 to 30 / <b>4</b> / 1 deg /step]
1917 003	H: Rotat. Time Dec.	*EGB	Adjusts the rotation time decrease at high temperature.  [-120 to 0 / 0 / 1 sec/step]
1917 004	N1: H: Temp. Dec.	*EGB	Adjusts the temperature decrease for plain paper 1 at high temperature.  [-50 to 0 / 0 / 1 deg / step]
1917 005	N1: L: Temp. Inc.	*EGB	Adjusts the temperature increase for plain paper 1 at low temperature.  [0 to 30 / 10 / 1deg /step]
1917 006	L: Rotat. Time Inc.	*EGB	Adjusts the rotation time increase at low temperature.  [0 to 120 / 0 / 1 sec/step]
1917 007	H: Standard Temp.	*EGB	Sets the threshold temperature detected as high temperature.  [25 to 40 / 30 / 1 deg / step]
1917 008	L: Standard Temp.	*EGB	Sets the threshold temperature detected as low temperature.  [-15 to 30 / 18 / 1 deg / step]
1917 009	L: Rotation Dec.	*EGB	Adjusts the rotation time decrease at low temperature.  [0 to 100 / 20 / 1 sec/step]
1917 010	N2: H: Temp. Dec.	*EGB	Adjusts the temperature decrease for plain paper 2 at high temperature.  [-50 to 0 / 0 / 1 sec/step]
1917 011	N2: L: Temp. Inc.	*EGB	Adjusts the temperature increase for plain paper 2 at low temperature.  [0 to 30 / 13 / 1deg /step]
1917 012	TN: H: Temp. Dec.	*EGB	Adjusts the temperature decrease for thin paper at high temperature.  [-50 to 0 / 0 / 1 sec/step]
1917 013	TN: L: Temp. Inc.	*EGB	Adjusts the temperature increase for thin paper at low temperature.

			[0 to 30 / <b>10</b> / 1 deg /step]
1917 014	TC1: H: Temp. Dec.	*EGB	Adjusts the temperature decrease for thick paper 1 at high temperature.  [-50 to 0 / 0 / 1 sec/step]
1917 015	TC1: L: Temp. Inc.	*EGB	Adjusts the temperature increase for thick paper 1 at low temperature.  [0 to 30 / 10 / 1 deg / step]
1917 016	TC2: H: Temp. Dec.	*EGB	Adjusts the temperature decrease for thick paper 2 at high temperature.  [-50 to 0 / 0 / 1 sec/step]
1917 017	TC2: L: Temp. Inc.	*EGB	Adjusts the temperature increase for thick paper 2 at low temperature.  [0 to 30 / 10 / 1 deg / step]
1917 018	OHP: H: Temp. Dec.	*EGB	Adjusts the temperature decrease for OHP at high temperature.  [-50 to 0 / 0 / 1 sec/step]
1917019	OHP: L: Temp. Inc.	*EGB	Adjusts the temperature increase for OHP at low temperature.  [0 to 30 / 10 / 1deg /step]
1917 020	SP: H: Temp. Dec.	*EGB	Adjusts the temperature decrease for special paper at high temperature.  [-50 to 0 / 0 / 1 sec/step]
1917 021	SP: L: Temp. Inc.	*EGB	Adjusts the temperature increase for special paper at low temperature.  [0 to 30 / 10 / 1 deg / step]
1917 022	ENV:H:Temp. Inc.	*EGB	Adjusts the temperature increase for envelop at high temperature.  [-50 to 0 / 0 / 1 deg / step]
1917 023	ENV:L:Temp. Inc.	*EGB	Adjusts the temperature increase for envelop at low temperature.  [0 to 30 / 7 / 1 deg / step]
1917 024	GL:H:Temp. Inc.	*EGB	Adjusts the temperature increase for glossary paper at high temperature.

			[-50 to 0 / <b>0</b> / 1 deg / step]
1917 025	GL:L:Temp. Inc.	*EGB	Adjusts the temperature increase for glossary paper at low temperature.  [0 to 30 / 7 / 1 deg /step]

## SP2-XXX (Drum)

	[Color Regist.] Color Registration Correction ([Color], M: Main scan, S: Sub scan)				
2101	You can adjust these SPs if the color registration is not good after the Line Position Adjustment (also known as 'MUSIC') is done. The [K] value (-001) is the standard value in the main scan adjustment. The values other than [k] value are added to [K] value. So, [K] value normally does not need to be adjusted in the main scan adjustment.				
2101 001	[K]: M Regist. Dot	*EGB			
2101 002	[M]: M Regist. Dot	*EGB	Adjusts the side edge registration by a dot for each mode.		
2101 003	[C]: M Regist. Dot	*EGB	[-128 to 127 / <b>0</b> / 1 dot/step]		
2101 004	[Y]: M Regist. Dot	*EGB			
2101 005	[K]: M Reg. SubD	*EGB			
2101 006	[K-M]: M Reg. SubD	*EGB	Adjusts the side edge registration by 1/16 dot.		
2101 007	[K-C]: M Reg. SubD	*EGB	[-15 to 15 / <b>0</b> / 1sub-dot/step]		
2101 008	[K-Y]: M Reg. SubD	*EGB			
2101 013	[K-M]: S Reg. 600	*EGB			
2101 014	[K-C]: S Reg. 600	*EGB			
2101 015	[K-Y]: S Reg. 600	*EGB	[ 120 to 127 / <b>0</b> / 1 line /step]		
2101 016	[K-M]: S Reg. 1200	*EGB	[-128 to 127 / <b>0</b> / 1 line/step]		
2101 017	[K-C]: S Reg. 1200	*EGB			
2101 018	[K-Y]: S Reg. 1200	*EGB			

2102	[Magnifi. Adj.] Magnification Adjustment
------	--

	Color, M Magnifi.: Main scan magnification		
	Adjusts the main scan magnification correction for each color.		
2102 001	[K]:M Magnifi.	*EGB	
2102 002	[M]:M Magnifi.	*EGB	[-1.00 to 1.00 / <b>0.000</b> / 0.001 %/step]
2102 003	[C]:M Magnifi.	*EGB	[-1.00 to 1.00 / <b>0.000</b> / 0.001 %/ step]
2102 004	[Y]:M Magnifi.	*EGB	
2102 005	PLL	*EGB	Adjusts the PLL (phase lock loop). [-1.0 to 1.0 / <b>0.0</b> / 0.1 %/step]

2103	[Trim Adjust.] Erase Margin Adjustment Lead Ed: Leading Edge, Trail. Ed: Trailing Edge, Left/Right Ed: Left/ Right Edge		
2103 001	Lead Ed. Width	*EGB	Adds this value to the leading edge erase margin position in the sub scan direction.  [-127 to 127 / <b>71</b> / 1 line/step]
2103 002	Trail. Ed. Width	*EGB	Adds this value to the trailing edge erase margin position in the sub scan direction.  [-127 to 127 / <b>71</b> / 1 line/step]
2103 003	Left Ed. Width	*EGB	Adds this value to the left edge erase margin position in the main scan direction.  [-127 to 127 / 47 / 1 dot/step]
2103 004	Right Ed. Width	*EGB	Adds this value to the right edge erase margin position in the main scan direction.  [-127 to 127 / 47 / 1 dot/step]
2103 005	Lead Ed.Width/SP1	*EGB	Adds this value to the leading edge erase margin position in the sub scan direction for special paper or thin paper.  [-127 to 127 / 95 / 1 line/step]

2104	[Magnifi. Adj.] Magnification Adjustment				
	([Color], Main Scan Magnification)				
2104 001	[K]: M Magnifi.	*EGB	Adjusts the main scan magnification.		

2104 002	[M]: M Magnifi.	*EGB	
2104 003	[C]: M Magnifi.	*EGB	[-1.00 to 1.00 / <b>0.00</b> / 0.01%/step]
2104 004	[Y]: M Magnifi.	*EGB	

2105	[LD Power Cont.] LD Power C		d -> LS: Low speed, RS: Regular speed
2105 001	[K] O	*EGB	
2105 002	[M] 0	*EGB	Adjusts the LD power.
2105 003	[C] 0	*EGB	[10 to 200 / <b>100</b> / 1%/step] <b>DFU</b>
2105 004	[Y] O	*EGB	
2105 009	[K] 0: LS	*EGB	
2105 010	[M] 0: LS	*EGB	Adjusts the LD power at low speed.
2105 011	[C] 0: LS	*EGB	[10 to 200 / <b>100</b> / 1%/step] <b>DFU</b>
2105 012	[Y] 0: LS	*EGB	

2106	Polygon Motor Stop Time		
2106 001		*EGB	Adjusts the time to stop the polygon motor after job end.  [0 to 180 / 10 / 1 sec/step]

2109	[LD BeamPattern] LD Beam Pattern		
2109 001	Picture Addition	Adds the picture to the LD test pattern.  [0 or 1 / 0 /-]  0: Not execute, 1: Execute	
2109 002	Pattern Select	Selects the LD test pattern.  [0 to 24 / 0 / 1/step]	
2109 004	Color Select	Selects the color for the LD test pattern.  [0 to 4 / 0 / 1/step]	

2111	[Manual Execut.] Manual	Line Positio	on Adjustment Execution
2111 001	Position Adjust.		Performs the line position adjustment.
2111 002	Pro. Position Adj.		Performs an approximate line position adjustment.
2111 003	Skew Adjust.		Performs the skew adjustment.
2111 004	ID S. Adjust.		Tests the ID sensor.
2111 005	Area.Magni.Clr.		Clears the area magnification setting.

2120 [LD Off C	Displays the LD off check state.
----------------	----------------------------------

2143	[ID S. Display] ID Sensor Display  The ID sensor assembly has three sensors: Left, Center, Right		
2143 001	PWM: Left	*EGB	
2143 002	PWM: Center	*EGB	Displays the PWM value for each sensor.  [0 to 512 / <b>0</b> / 1/step]
2143 003	PWM: Right	*EGB	[0 10 0 12 / 0 / 1 / 310 p]
2143 004	Avg: Left	*EGB	
2143 005	Avg: Center	*EGB	Displays the average output from each sensor.  [0.00 to 5.00 / 0.00 / 0.01 volt/step]
2143 006	Avg: Right	*EGB	[5.55 16 5.55 / 6.55 / 5.51 / 5.5]
2143 007	Max: Left	*EGB	
2143 008	Max: Center	*EGB	Displays the maximum output from each sensor.  [0.00 to 5.00 / 0.00 / 0.01 volt/step]
2143 009	Max: Right	*EGB	[2000, 2000,
2143 010	Min: Left	*EGB	
2143 011	Min: Center	*EGB	Displays the minimum output from each sensor.  [0.00 to 5.00 / 0.00 / 0.01 volt/step]
2143 012	Min: Right	*EGB	[2000, 2000,
2143 013	Max2: Left	*EGB	
2143 014	Max2: Center	*EGB	Displays the maximum 2 output from each sensor.  [0.00 to 5.00 / 0.00 / 0.01 volt/step]
2143 015	Max2: Right	*EGB	[
2143 016	Min2: Left	*EGB	Displays the maximum 2 output from each sensor.

2143 0	17	Min2: Center	*EGB	[0.00 to 5.00 / <b>0.00</b> / 0.01 volt/step]
2143 0	18	Min2: Right	*EGB	[[end in close   close

2150	[Area Magni. Cor] A ([Color], Area)	rea Magnificatio	on Correction
2150 001	[K]: Area 1	*EGB	
2150 002	[K]: Area 2	*EGB	_
2150 003	[K]: Area 3	*EGB	-
2150 004	[K]: Area 4	*EGB	-
2150 005	[K]: Area 5	*EGB	-
2150 006	[K]: Area 6	*EGB	Adjusts the magnification correction for each area.
2150 007	[K]: Area 7	*EGB	[-127 to 127 / <b>0</b> / 1 sub-dot/step]
2150 008	[K]: Area 8	*EGB	
2150 009	[K]: Area 9	*EGB	-
2150 010	[K]: Area 10	*EGB	
2150 011	[K]: Area 11	*EGB	-
2150 012	[K]: Area 12	*EGB	-
2150 013	[M]: Area 1	*EGB	
2150 014	[M]: Area 2	*EGB	-
2150 015	[M]: Area 3	*EGB	-
2150 016	[M]: Area 4	*EGB	Adjusts the magnification correction for each
2150 017	[M]: Area 5	*EGB	area.
2150 018	[M]: Area 6	*EGB	[-127 to 127 / <b>0</b> / 1 sub-dot/step]
2150 019	[M]: Area 7	*EGB	_
2150 020	[M]: Area 8	*EGB	
2150 021	[M]: Area 9	*EGB	

2150 022 [M]: Area 10 *EGB 2150 023 [M]: Area 11 *EGB 2150 024 [M]: Area 12 *EGB 2150 025 [C]: Area 1 *EGB 2150 026 [C]: Area 2 *EGB 2150 027 [C]: Area 3 *EGB 2150 028 [C]: Area 4 *EGB 2150 029 [C]: Area 5 *EGB 2150 030 [C]: Area 6 *EGB 2150 031 [C]: Area 7 *EGB 2150 032 [C]: Area 8 *EGB 2150 033 [C]: Area 8 *EGB 2150 033 [C]: Area 9 *EGB 2150 034 [C]: Area 10 *EGB 2150 035 [C]: Area 11 *EGB 2150 036 [C]: Area 12 *EGB 2150 037 [Y]: Area 1 *EGB 2150 038 [Y]: Area 2 *EGB 2150 039 [Y]: Area 3 *EGB 2150 040 [Y]: Area 4 *EGB 2150 041 [Y]: Area 5 *EGB 2150 042 [Y]: Area 6 *EGB 2150 043 [Y]: Area 6 *EGB 2150 043 [Y]: Area 7 *EGB 2150 044 [Y]: Area 6 *EGB 2150 045 [Y]: Area 6 *EGB 2150 043 [Y]: Area 7 *EGB				
2150 024 [M]: Area 12 *EGB  2150 025 [C]: Area 1 *EGB  2150 026 [C]: Area 2 *EGB  2150 027 [C]: Area 3 *EGB  2150 028 [C]: Area 4 *EGB  2150 029 [C]: Area 5 *EGB  2150 030 [C]: Area 6 *EGB  2150 031 [C]: Area 7 *EGB  2150 032 [C]: Area 8 *EGB  2150 033 [C]: Area 9 *EGB  2150 034 [C]: Area 10 *EGB  2150 035 [C]: Area 11 *EGB  2150 036 [C]: Area 12 *EGB  2150 037 [Y]: Area 1 *EGB  2150 038 [Y]: Area 2 *EGB  2150 039 [Y]: Area 3 *EGB  2150 040 [Y]: Area 4 *EGB  2150 041 [Y]: Area 5 *EGB  2170 042 [Y]: Area 6 *EGB  2170 041 [Y]: Area 6 *EGB  2170 042 [Y]: Area 6 *EGB  2170 041 [Y]: Area 6 *EGB  2170 042 [Y]: Area 6 *EGB  2170 041 [Y]: Area 6 *EGB  2170 042 [Y]: Area 6 *EGB	2150 022	[M]: Area 10	*EGB	
2150 025	2150 023	[M]: Area 11	*EGB	
2150 026	2150 024	[M]: Area 12	*EGB	
2150 027	2150 025	[C]: Area 1	*EGB	
2150 028	2150 026	[C]: Area 2	*EGB	
2150 029	2150 027	[C]: Area 3	*EGB	
Adjusts the magnification correction for each area.	2150 028	[C]: Area 4	*EGB	
2150 031 [C]: Area 7 *EGB  2150 032 [C]: Area 8 *EGB  2150 033 [C]: Area 9 *EGB  2150 034 [C]: Area 10 *EGB  2150 035 [C]: Area 11 *EGB  2150 036 [C]: Area 12 *EGB  2150 037 [Y]: Area 1 *EGB  2150 038 [Y]: Area 2 *EGB  2150 040 [Y]: Area 4 *EGB  2150 041 [Y]: Area 5 *EGB  2150 042 [Y]: Area 6 *EGB  Adjusts the magnification correction for each area.	2150 029	[C]: Area 5	*EGB	
2150 031   [C]: Area 7	2150 030	[C]: Area 6	*EGB	
2150 033       [C]: Area 9       *EGB         2150 034       [C]: Area 10       *EGB         2150 035       [C]: Area 11       *EGB         2150 036       [C]: Area 12       *EGB         2150 037       [Y]: Area 1       *EGB         2150 038       [Y]: Area 2       *EGB         2150 039       [Y]: Area 3       *EGB         2150 040       [Y]: Area 4       *EGB         2150 041       [Y]: Area 5       *EGB         2150 042       [Y]: Area 6       *EGB	2150 031	[C]: Area 7	*EGB	
2150 034       [C]: Area 10       *EGB         2150 035       [C]: Area 11       *EGB         2150 036       [C]: Area 12       *EGB         2150 037       [Y]: Area 1       *EGB         2150 038       [Y]: Area 2       *EGB         2150 039       [Y]: Area 3       *EGB         2150 040       [Y]: Area 4       *EGB         2150 041       [Y]: Area 5       *EGB         2150 042       [Y]: Area 6       *EGB	2150 032	[C]: Area 8	*EGB	
2150 035       [C]: Area 11       *EGB         2150 036       [C]: Area 12       *EGB         2150 037       [Y]: Area 1       *EGB         2150 038       [Y]: Area 2       *EGB         2150 039       [Y]: Area 3       *EGB         2150 040       [Y]: Area 4       *EGB         2150 041       [Y]: Area 5       *EGB         2150 042       [Y]: Area 6       *EGB	2150 033	[C]: Area 9	*EGB	
2150 036       [C]: Area 12       *EGB         2150 037       [Y]: Area 1       *EGB         2150 038       [Y]: Area 2       *EGB         2150 039       [Y]: Area 3       *EGB         2150 040       [Y]: Area 4       *EGB         2150 041       [Y]: Area 5       *EGB         2150 042       [Y]: Area 6       *EGB	2150 034	[C]: Area 10	*EGB	
2150 037       [Y]: Area 1       *EGB         2150 038       [Y]: Area 2       *EGB         2150 039       [Y]: Area 3       *EGB         2150 040       [Y]: Area 4       *EGB         2150 041       [Y]: Area 5       *EGB         2150 042       [Y]: Area 6       *EGB    Adjusts the magnification correction for each area.	2150 035	[C]: Area 11	*EGB	
2150 038       [Y]: Area 2       *EGB         2150 039       [Y]: Area 3       *EGB         2150 040       [Y]: Area 4       *EGB         2150 041       [Y]: Area 5       *EGB         2150 042       [Y]: Area 6       *EGB    Adjusts the magnification correction for each area.	2150 036	[C]: Area 12	*EGB	
2150 039       [Y]: Area 3       *EGB         2150 040       [Y]: Area 4       *EGB         2150 041       [Y]: Area 5       *EGB         2150 042       [Y]: Area 6       *EGB    Adjusts the magnification correction for each area.	2150 037	[Y]: Area 1	*EGB	
2150 040 [Y]: Area 4 *EGB  2150 041 [Y]: Area 5 *EGB  2150 042 [Y]: Area 6 *EGB  Adjusts the magnification correction for each area.	2150 038	[Y]: Area 2	*EGB	
2150 041 [Y]: Area 5  2150 042 [Y]: Area 6  *EGB  Adjusts the magnification correction for each area.	2150 039	[Y]: Area 3	*EGB	
Adjusts the magnification correction for each area.	2150 040	[Y]: Area 4	*EGB	
2150 042 [Y]: Area 6 *EGB area.	2150 041	[Y]: Area 5	*EGB	Adjusts the magnification correction for each
2150 043 [Y]: Area 7 *EGB [-127 to 127 / 0 / 1 sub-dot/step]	2150 042	[Y]: Area 6	*EGB	
	2150 043	[Y]: Area 7	*EGB	[-127 to 127 / <b>0</b> / 1 sub-dot/step]
2150 044 [Y]: Area 8 *EGB	2150 044	[Y]: Area 8	*EGB	
2150 045 [Y]: Area 9 *EGB	2150 045	[Y]: Area 9	*EGB	
2150 046 [Y]: Area 10 *EGB	2150 046	[Y]: Area 10	*EGB	
2150 047 [Y]: Area 11 *EGB	2150 047	[Y]: Area 11	*EGB	

2150 048   [Y]: Area 12   *EGB
--------------------------------

2151	[Area Width] Area Width C	orrection	
2151 001	[K]: Area 1	*EGB	
2151 002	[K]: Area 2	*EGB	[0 to 1024 / <b>355</b> / 1 dot/step]
2151 003	[K]: Area 3	*EGB	
2151 004	[K]: Area 4	*EGB	
2151 005	[K]: Area 5	*EGB	
2151 006	[K]: Area 6	*EGB	[0.1. 1004 / 479 / 1 dat/.tan]
2151 007	[K]: Area 7	*EGB	[0 to 1024 / <b>472</b> / 1 dot/step]
2151 008	[K]: Area 8	*EGB	
2151 009	[K]: Area 9	*EGB	
2151 010	[K]: Area 10	*EGB	
2151 011	[K]: Area 11	*EGB	[0 to 1024 / <b>255</b> / 1 dot/ston]
2151 012	[K]: Area 12	*EGB	[0 to 1024 / <b>355</b> / 1 dot/step]
2151 013	[M]: Area 1	*EGB	[0 to 1024 / <b>355</b> / 1 dot/step]
2151 014	[M]: Area 2	*EGB	[0 10 1024 / <b>333</b> / 1 doi/ siep]
2151 015	[M]: Area 3	*EGB	
2151 016	[M]: Area 4	*EGB	
2151 017	[M]: Area 5	*EGB	
2151 018	[M]: Area 6	*EGB	[0 to 1024 / <b>472</b> / 1 dot /stan]
2151 019	[M]: Area 7	*EGB	[0 to 1024 / <b>472</b> / 1 dot/step]
2151 020	[M]: Area 8	*EGB	
2151 021	[M]: Area 9	*EGB	
2151 022	[M]: Area 10	*EGB	

2151 023	[M]: Area 11	*EGB	
2151 024	[M]: Area 12	*EGB	[0 to 1024 / <b>355</b> / 1 dot/step]
2151 025	[C]: Area 1	*EGB	
2151 026	[C]: Area 2	*EGB	[0 to 1024 / <b>355</b> / 1 dot/step]
2151 027	[C]: Area 3	*EGB	
2151 028	[C]: Area 4	*EGB	
2151 029	[C]: Area 5	*EGB	
2151 030	[C]: Area 6	*EGB	[0. 1004 / 4 <b>70</b> / 1   1 / 1
2151 031	[C]: Area 7	*EGB	[0 to 1024 / <b>472</b> / 1 dot/step]
2151 032	[C]: Area 8	*EGB	
2151 033	[C]: Area 9	*EGB	
2151 034	[C]: Area 10	*EGB	
2151 035	[C]: Area 11	*EGB	[0. 1004 / 055 / 1   1/2
2151 036	[C]: Area 12	*EGB	[0 to 1024 / <b>355</b> / 1 dot/step]
2151 037	[Y]: Area 1	*EGB	[0+ 1004 / 255 / 1   + / + - 1
2151 038	[Y]: Area 2	*EGB	[0 to 1024 / <b>355</b> / 1 dot/step]
2151 039	[Y]: Area 3	*EGB	
2151 040	[Y]: Area 4	*EGB	
2151 041	[Y]: Area 5	*EGB	
2151 042	[Y]: Area 6	*EGB	[0, 1004 / 470 / 1   1 / 1
2151 043	[Y]: Area 7	*EGB	[0 to 1024 / <b>472</b> / 1 dot/step]
2151 044	[Y]: Area 8	*EGB	
2151 045	[Y]: Area 9	*EGB	
2151 046	[Y]: Area 10	*EGB	
2151 047	[Y]: Area 11	*EGB	[0+, 1004 / <b>255</b> / 1   + / +   1
2151 048	[Y]: Area 12	*EGB	[0 to 1024 / <b>355</b> / 1 dot/step]

2152	[Area Shading] Area Shading Correction Setting ([Color], Area)		
2152 006	[K]: Area 0	*EGB	
2152 007	[K]: Area 1	*EGB	
2152 008	[K]: Area 2	*EGB	
2152 009	[K]: Area 3	*EGB	
2152 010	[K]: Area 4	*EGB	
2152 011	[K]: Area 5	*EGB	[0.10 to 2.00 / <b>1.00</b> / 0.01/step]
2152 012	[K]: Area 6	*EGB	
2152 013	[K]: Area 7	*EGB	
2152 014	[K]: Area 8	*EGB	
2152 015	[K]: Area 9	*EGB	
2152 016	[K]: Area 10	*EGB	
2152 017	[M]: Area 0	*EGB	
2152 018	[M]: Area 1	*EGB	
2152 019	[M]: Area 2	*EGB	
2152 020	[M]: Area 3	*EGB	
2152 021	[M]: Area 4	*EGB	
2152 022	[M]: Area 5	*EGB	[0.10 to 2.00 / <b>1.00</b> / 0.01/step]
2152 023	[M]: Area 6	*EGB	
2152 024	[M]: Area 7	*EGB	
2152 025	[M]: Area 8	*EGB	
2152 026	[M]: Area 9	*EGB	
2152 027	[M]: Area 10	*EGB	
2152 028	[C]: Area 0	*EGB	[0.10000/1.00/0.03/
2152 029	[C]: Area 1	*EGB	[0.10 to 2.00 / <b>1.00</b> / 0.01/step]

2152 030	[C]: Area 2	*EGB	
2152 031	[C]: Area 3	*EGB	
2152 032	[C]: Area 4	*EGB	
2152 033	[C]: Area 5	*EGB	
2152 034	[C]: Area 6	*EGB	
2152 035	[C]: Area 7	*EGB	
2152 036	[C]: Area 8	*EGB	
2152 037	[C]: Area 9	*EGB	
2152 038	[C]: Area 10	*EGB	
2152 039	[Y]: Area 0	*EGB	
2152 040	[Y]: Area 1	*EGB	
2152 041	[Y]: Area 2	*EGB	
2152 042	[Y]: Area 3	*EGB	
2152 043	[Y]: Area 4	*EGB	
2152 044	[Y]: Area 5	*EGB	[0.10 to 2.00 / <b>1.00</b> / 0.01/step]
2152 045	[Y]: Area 6	*EGB	
2152 046	[Y]: Area 7	*EGB	
2152 047	[Y]: Area 8	*EGB	
2152 048	[Y]: Area 9	*EGB	
2152 049	[Y]: Area 10	*EGB	

2153	[MUSIC Setting] Timing for Automatic Line Position Adjustment (MUSIC)		
2153 001	Auto Execution	*EGB	Enables or disables the automatic line position adjustment. If this SP is 0, the adjustment is never done.  [0 or 1 / 1 / -] Alphanumeric  0: Off, 1: On

2153 002	Process Control	*EGB	Enables or disables the adjustment after process control is done.  [0 or 1 / 1 / -] Alphanumeric  0: Off, 1: On
2153 003	Initialization	*EGB	Enables or disables the adjustment immediately after the power is turned on or when recovering from energy save mode.  [0 or 1 / 1 / -] Alphanumeric  0: Off, 1: On
2153 004	Data In	*EGB	Enables or disables the adjustment immediately after the machine starts to receive print job data. The adjustment is done if one of the conditions set with SP2153-012, -013 and -015 is satisfied.  [0 or 1 / 1 / -] Alphanumeric  0: Off, 1: On
2153 005	Cut In	*EGB	Enables or disables the adjustment during printing. The adjustment is done if one of the conditions set with SP2153-012, -013 and -015 is satisfied.  [0 or 1 / 1 / -] Alphanumeric  0: No, 1: Yes
2153 006	Job End	*EGB	Enables or disables the adjustment after printing.  [0 or 1 / 0 / -] Alphanumeric  0: Off, 1: On
2153 008	Trans. Belt Speed 2	*EGB	Enables or disables the transfer belt speed correction during the adjustment. The transfer belt speed is affected by changes in temperature. A change of the transfer belt speed during the adjustment causes color registration errors. This SP keeps the transfer belt at a constant speed.  [0 or 1 / 1 / -] Alphanumeric  0: Off, 1: On

2153 009	P-P Synch.		Turns on or off the line position adjustment between sheets of paper.  [0 or 1 / 1 / -]  0: OFF, 1: ON
2153 010	Manual Cut In	*EGB	If this number of pages was printed after the previous adjustment was done, then the adjustment is done again. The number of sheets is counted in SP7806-003 and -004.  [10 to 999 / 190 / 1 page/step]
2153 012	MUSIC Temp.	*EGB	If the room temperature changes by this amount or more after the previous adjustment was done, then the adjustment is done again.  [2 to 30 / 5 / 1 deg /step]
2153 013	Passage Time	*EGB	If this amount of time has passed after the previous adjustment was done, then the adjustment is done again.  [0 to 1440 / 360 / 1 min/step]
2153 015	Maginificat. Error	*EGB	Sets the threshold (magnification error) from previous MUSIC for executing MUSIC.  [0 to 10 / 1 / 0.1%/step]

	[MUSIC Result] Result of Automatic Line Position Adjustment ([Color], Value, Unit)			
2181	Value-> Skew, Bent, M. Scan Erro.: Main Scan Error, S. Scan Erro.: Sub Scan Error, M. Cor: Main Scan Correction, S. Cor: Sub Scan Correction			
	Unit-> Dot, SubD.: Sub Dot, 600/ 1200 dpi			
	The following SPs display the result of MUSIC for each mode.			
2181 001	[K]: Skew	*EGB		
2181 002	[K]: Bent	*EGB	[ 5000 to 5000 / 0 / 1 / to]	
2181 003	[K]: M. Scan Erro.	*EGB	[-5000 to 5000 / <b>0</b> / 1 μm/step]	
2181 004	[K]: S. Scan Erro.	*EGB		
2181 005	[K]: M Cor.: Dot	*EGB	[-127 to 127 / <b>0</b> / 1 dot/step]	

2181 006	[K]: M Cor.: SubD.	*EGB	[-127 to 127 / <b>0</b> / 1 sub-dot/step]
2181 007	[K]: S Cor.: 600	*EGB	[-127 to 127 / <b>0</b> / 1 line/step]
2181 008	[K]: S Cor.: 1200	*EGB	[-256 to 256 / <b>0</b> / 1 line/step]
2181 011	[M]: Skew	*EGB	
2181 012	[M]: Bent	*EGB	[ [ [ [ [ [ [ [ [ [ [ [ [ [ [ [ [ [ [ [
2181 013	[M]: M. Scan Erro.	*EGB	[-5000 to 5000 / <b>0</b> / 1 µm /step]
2181 014	[M]: S. Scan Erro.	*EGB	
2181 015	[M]: M Cor.: Dot	*EGB	[-127 to 127 / <b>0</b> / 1 dot/step]
2181 016	[M]: M Cor.: SubD.	*EGB	[-15 to 15 / <b>0</b> / 1 sub-dot/step]
2181 017	[M]: S Cor.: 600	*EGB	[-127 to 127 / <b>0</b> / 1 line/step]
2181 018	[M]: S Cor.: 1200	*EGB	[-256 to 256 / <b>0</b> / 1 line/step]
2181 021	[C]: Skew	*EGB	
2181 022	[C]: Bent	*EGB	[ [ [ [ [ [ [ [ [ [ [ [ [ [ [ [ [ [ [ [
2181 023	[C]: M. Scan Erro.	*EGB	[-5000 to 5000 / <b>0</b> / 1 µm /step]
2181 024	[C]: S. Scan Erro.	*EGB	
2181 025	[C]: M Cor.: Dot	*EGB	[-127 to 127 / <b>0</b> / 1 dot/step]
2181 026	[C]: M Cor.: SubD.	*EGB	[-15 to 15 / <b>0</b> / 1 sub-dot/step]
2181 027	[C]: S Cor.: 600	*EGB	[1071, 107 / 0 / 1   11 / 11 ]
2181 028	[C]: S Cor.: 1200	*EGB	[-127 to 127 / <b>0</b> / 1 line/step]
2181 031	[Y]: Skew	*EGB	
2181 032	[Y]: Bent	*EGB	[ 5000 + 5000 / <b>0</b> / <b>1</b> / · · ]
2181 033	[Y]: M. Scan Erro.	*EGB	[-5000 to 5000 / <b>0</b> / 1 µm /step]
2181 034	[Y]: S. Scan Erro.	*EGB	
2181 035	[Y]: M Cor.: Dot	*EGB	[-127 to 127 / <b>0</b> / 1 dot/step]
2181 036	[Y]: M Cor.: SubD.	*EGB	[-15 to 15 / <b>0</b> / 1 sub-dot/step]
2181 037	[Y]: S Cor.: 600	*EGB	[-127 to 127 / <b>0</b> / 1 line/step]

0104	[MUSIC Record] Automatic Line Position Adjustment Record			
2186	The following SPs display the MUSIC record.			
2186 001	Year	*EGB	[0 to 99 / <b>0</b> / 1 y/step]	
2186 002	Month	*EGB	[1 to 12 / 1 / 1 m/step]	
2186 003	Date	*EGB	[1 to 31 / 1 / 1 d/step]	
2186 004	Time	*EGB	[0 to 23 / <b>0</b> / 1 h/step]	
2186 005	Minute	*EGB	[0 to 59 / <b>0</b> / 1 m/step]	
2186 006	Temperature	*EGB	[0 to 100 / <b>0</b> / 1 deg/step]	
2186 007	Result	*EGB	[0 to 999999 / <b>0</b> / 1 /step]	
2186 008	Execution	*EGB	[0 to 9999 / <b>0</b> / 1 /step]	
2186 009	Failure	*EGB	[0 to 9999 / <b>0</b> / 1 /step]	

	[MUSIC Result] Automatic Line Position Adjustment Result			
2187	The following SPs display the skew adjustment values after the line position adjustment values after the line posi			
2187 001	[K]:Skew Adj.	*EGB		
2187 002	[M]:Skew Adj.	*EGB	[00 to 00 / 0 / 1 aliah /stan]	
2187 003	[C]:Skew Adj.	*EGB	[-99 to 99 / <b>0</b> / 1 click/step]	
2187 004	[Y]:Skew Adj.	*EGB		

2201	[Charge Bias: DC] Charge Roller Voltage: DC (Process Speed, [Color]) Process Speed LS: Low speed, RS: Regular speed			
2201	These SPs adjust the DC vo	se SPs adjust the DC voltage of the drum charge roller. These are used only wh B-501-001 is set to "1".		
2201 001	RS: [K]	*EGB		
2201 002	RS: [M]	*EGB	[200 to 999 / <b>585</b> / 1 V/step]	

2201 003	RS: [C]	*EGB
2201 004	RS: [Y]	*EGB
2201 006	LS: [K]	*EGB
2201 007	LS: [M]	*EGB
2201 008	LS: [C]	*EGB
2201 009	LS: [Y]	*EGB

	[Charge Bias: AC] Charge Roller Voltage: AC			
2202	(Process Speed, [Color]) Process Speed -> LS: Low speed, RS: Regular speed  These SPs adjust the AC voltage of the drum charge roller. These are used only			
	SP2-202-011 is set to "1".			
2202 001	RS: [K]	*EGB		
2202 002	RS: [M]	*EGB		
2202 003	RS: [C]	*EGB		
2202 004	RS: [Y]	*EGB	[0 to 3000 / <b>2000</b> / 1 V/step]	
2202 006	LS: [K]	*EGB	[0 10 3000 / <b>2000</b> / 1 v/siep]	
2202 007	LS: [M]	*EGB		
2202 008	LS: [C]	*EGB		
2202 009	LS: [Y]	*EGB		
2202 01 1	Output Control	*EGB	Selects the method for the charge roller AC bias adjustment.  [0 or 1 / 0 / -]  0: Process Control, 1: Setting	
2202 012	Interval	*EGB	Adjusts the interval for charge roller AC bias adjustment.  [0 to 2000 / 210 / 1 sheet/step]	

	[Charge Bias: AC] Charge Roller Voltage: AC/I
2203	(Process Speed, [Color]) Process Speed -> LS: Low speed, RS: Regular speed

	These SPs adjust the AC/I bias of the drum charge roller. These are used only when SP3-501-001 is set to "1".		
2203 001	RS: [K]	*EGB	[0 to 1.5 / <b>0.30</b> / 0.01 mA/step]
2203 002	RS: [M]	*EGB	[0 to 1.5 / <b>0.30</b> / 0.01 mA/step]
2203 003	RS: [C]	*EGB	[0 to 1.5 / <b>0.30</b> / 0.01 mA/step]
2203 004	RS: [Y]	*EGB	[0 to 1.5 / <b>0.30</b> / 0.01 mA/step]

2204	[Charge Bias] Charge Roller Voltage: Corrections for humidity (Environmental correction, [Color]) For more about the humidity conditions, see SP 2304.		
			oefficients to the charge bias.
2204 001	Environ. : HH: [K]	*EGB	[0 to 255 / <b>204</b> / 1/step]
2204 002	Environ. : HH: [M]	*EGB	[0 to 255 <b>/ 196</b> / 1/step]
2204 003	Environ. : HH: [C]	*EGB	[0 to 255 / <b>197</b> / 1/step]
2204 004	Environ. : HH: [Y]	*EGB	[0 to 255 / <b>191</b> / 1/step]
2204 006	Environ. : H: [K]	*EGB	[0 to 255 / <b>197</b> / 1/step]
2204 007	Environ. : H: [M]	*EGB	[0 to 255 / <b>188</b> / 1/step]
2204 008	Environ. : H: [C]	*EGB	[0 to 255 / <b>190</b> / 1/step]
2204 009	Environ. : H: [Y]	*EGB	[0 to 255 / <b>183</b> / 1/step]
2204 011	Environ. : MM: [K]	*EGB	[0 to 255 / <b>187</b> / 1/step]
2204 012	Environ. : MM: [M]	*EGB	[0 to 255 / <b>179</b> / 1/step]
2204 013	Environ. : MM: [C]	*EGB	[0 to 255 / <b>179</b> / 1/step]
2204 014	Environ. : MM: [Y]	*EGB	[0 to 255 / <b>176</b> / 1/step]
2204 016	Environ. : L: [K]	*EGB	[0 to 255 / <b>195</b> / 1/step]
2204 017	Environ. : L: [M]	*EGB	[0 to 255 / <b>184</b> / 1/step]
2204 018	Environ. : L: [C]	*EGB	[0 to 255 / <b>184</b> / 1/step]
2204 019	Environ. : L: [Y]	*EGB	[0 to 255 / <b>185</b> / 1/step]

2204 021	Environ. : LL: [K]	*EGB	[0 to 255 / <b>202</b> / 1/step]
2204 022	Environ. : LL: [M]	*EGB	[0 to 255 / <b>194</b> / 1/step]
2204 023	Environ. : LL: [C]	*EGB	[0 to 255 / <b>195</b> / 1/step]
2204 024	Environ. : LL: [Y]	*EGB	[0 to 255 / <b>190</b> / 1/step]

2212	[Dev. Bias: DC] Development Bias: DC  (Process Speed, [Color]) Process Speed -> RS: Regular speed, LS: Low speed				
2212	These SPs adjust the development bias. These are used only when SP3-501-001 is set to "1".				
2212 001	RS: [K]	*EGB			
2212 002	RS: [M]	*EGB			
2212 003	RS: [C]	*EGB			
2212 004	RS: [Y]	*EGB	[50 to 800 / <b>350</b> / 1 V/step]		
2212 005	LS: [K]	*EGB	[30 to 600 / <b>330</b> / 1 v / step]		
2212 006	LS: [M]	*EGB			
2212 007	LS: [C]	*EGB			
2212 008	LS: [Y]	*EGB			

2251	[Manual Toner] Forced Toner Supply Execution		
2251 001	[K]		
2251 002	[M]	Manually executes toner supply for each color.  The toner supply procedure is done specified times	
2251 003	[C]	with SP2252 (supplied for one second on and one second off).	
2251 004	[Y]	second onj.	

2252	[Forced Toner] Forced Toner Supply Execution		
2252 001	Repeat: [K]		
2252 002	Repeat: [M]	Adjusts the toner supply times for SP2251.  [0 to 30 / 8 / 1 time/step]	
2252 003	Repeat: [C]	[O IO 30 / O / T IIIIIe/ siep]	

2252 004	Repeat: [Y]	

2302	[Temp./Humidity] Temperature / Humidity Display		
2302 001	Temperature	Displays the temperature. [-128 to 127 / <b>0</b> / 0.1 deg/step]	
2302 002	Relative Humidity	Display the relative humidity.  [0 to 100 / <b>0</b> / 0.1%RH/step]	
2302 003	Absolute Humidity	Display the absolute humidity.  [0 to 100 / <b>0</b> / 0.1 g/m <sup>3</sup> /step]	
2302 004	Current Environ.	Display the current environment.  [0 to 4 / 0 / 1/step]  0: LL, 1: ML, 2: MM, 3: MH, 4: HH	

2303	[Envir. Correct.] Environment Correction		
2303 001	Manual Correct.	*EGB	Manually sets the environment.  [0 to 5 / <b>0</b> / 1/step]  0: OFF, 1: LL, 2: ML, 3: MM, 4: MH, 5: HH

2304	[EC Threshold] Environment Correction Threshold (Humidity, Environment) A. Humidity: Absolute Humidity		
	These SPs adjust the thresh	resholds (absolute humidity) for each environment.	
2304 001	A. Humidity: LL-MM	*EGB	[0 to 100 / <b>5.0</b> / 0.1 g/m <sup>3</sup> /step]
2304 002	A. Humidity: ML-MM	*EGB	[0 to 100 / <b>8.0</b> / 0.1 g/m <sup>3</sup> /step]
2304 003	A. Humidity: MM-MH	*EGB	[0 to 100 / <b>16.0</b> / 0.1 g/m <sup>3</sup> /step]
2304 004	A. Humidity: MH-HH	*EGB	[0 to 100 / <b>26.0</b> / 0.1 g/m <sup>3</sup> /step]

2306	[Vd Link Corre.] Vd Link Correction		
2306 001	Setting	*EGB	Sets the Vd link correction.  [0 or 1 / 0 / -] Alphanumeric  0: Execute, 1: Not execute

2306 (	002	Correction Coef.	*EGB	Adjusts the Vd link correction coefficient.
				[1.00 to 2.50 / <b>1.00</b> / 0.01/step]

2314	[Trans.Belt Bias] Transfer Belt Current at Process Control		
2314 011	Process Cont. [K]	*EGB	Adjusts the transfer belt current at process control for [K].  [O to 60 / 13.0 / 0.1 µA /step]
2314 012	Process Cont. [M]	*EGB	Adjusts the transfer belt current at process control
2314 013	Process Cont. [C]	*EGB	for [M, C]. [0 to 60 / <b>10.0</b> / 0.1 μA /step]
2314 014	Process Cont. [Y]	*EGB	Adjusts the transfer belt current at process control for [Y].  [O to 60 / 13.0 / 0.1 µA /step]

2326	[T.Roll2 Clean.] Transfer Roller Cleaning (Positive or Negative Bias, Process Speed) Process Speed -> RS: Regular speed, LS: Low speed		
2326 002	Posi. Bias: RS	*EGB	Adjusts the positive voltage for transfer roller cleaning.
2326 003	Posi. Bias: LS	*EGB	[0 to 2 / <b>2.0</b> / 0.1 KV/step]
2326 005	Nega. Bias: RS	*EGB	Adjusts the negative voltage for transfer roller
2326 006	Nega. Bias: LS	*EGB	cleaning.   [0 to 60 / <b>60.0</b> / 0.1 V/step]

2352	[Trans.Belt Bias] Transfer Belt Current  ([Color], Process Speed) Process Speed -> RS: Regular speed		
2352 001	[K]: RS	Adjusts the current that is applied to the transfer belt.  [0 to 60 / 17.0 / 0.1 µA /step]	

2353	[Trans.Belt Bias] Transfer Belt Current			
2333	([Color], Process Speed) Process Speed -> LS: Low speed			
2353 001	[K]: LS	*EGB	Adjusts the current that is applied to the transfer belt.	

2357	[Trans.Belt Bias] Transfer Belt Current ([Color], Process Speed) Process Speed -> RS: Regular speed		
2357 001	[FC/ K]: RS	*EGB	Adjusts the current that is applied to the transfer belt.  [0 to 60 / 17.0 / 0.1 µA /step]
2357 002	[FC/M]: RS	*EGB	
2357 003	[FC/C]: RS	*EGB	[0 to 60 / <b>15.0</b> / 0.1 µA /step]
2357 004	[FC/Y]: RS		

2358	[Trans.Belt Bias] Transfer Belt Current ([Color], Process Speed) Process Speed -> LS: Low speed  Adjusts the current that is applied to the transfer belt.		
2358 001	[FC/K]: LS	*EGB	[0 to 60 / <b>7.5</b> / 0.1 µA /step]
2358 002	[FC/M]: LS	*EGB	
2358 003	[FC/ C]: LS	*EGB	[0 to 60 / <b>6.0</b> / 0.1 µA /step]
2358 004	[FC/Y]: LS	*EGB	

	[Normal: [K]] Transfer roller current and discharge plate voltage for the image area of plain paper 1 in B/W mode					
2402	(Process Speed, Paper Sid	(Process Speed, Paper Side, Unit) Process Speed -> RS: Regular speed,				
	Paper Side: 1st or 2nd					
	Unit -> T.Roll2: Transfer roller, Separa.: Discharge plate (paper separation)		ra.: Discharge plate (paper separation)			
2402 007	RS: 1st: T. Roll2	*EGB	Adjusts the transfer roller current.  [0 to 100 / 18.3/15.5 (NA/EU) / 0.1 -µA/step]			
2402 008	RS: 1st: Separa.	*EGB	Adjusts the discharge plate voltage.  [0 to 4 / 2.0 / 0.1 -KV/step]			
2402 012	RS: 2nd: T. Roll2	*EGB	[0 to 100 / <b>18.3/15.3 (NA/EU)</b> / 0.1 -µA /step]			
2402 013	RS: 2nd: Separa.	*EGB	[0 to 4 / <b>2.0</b> / 0.1 -KV/step]			

	[Normal: [K]] Transfer roller current and discharge plate voltage for the image area of plain paper 1 in B/W mode					
2403	(Process Speed, Paper Side) Process Speed -> LS: Low speed,					
	Paper Side: 1st or 2nd					
2403 007	LS: 1st: T. Roll2	*EGB	Adjusts the transfer roller current. [0 to 100 / 15.3/12.5 (NA/EU) / 0.1 -µA /step]			
2403 008	LS: 1st: Separa.	*EGB	Adjusts the discharge plate voltage. [0 to 4 / 2.0 / 0.1 -KV/step]			
2403 012	LS: 2nd: T. Roll2	*EGB	[0 to 100 / <b>15.3/12.5 (NA/EU)</b> / 0.1 -µA /step]			
2403 013	LS: 2nd: Separa.	*EGB	[0 to 4 / 2.0 / 0.1 -KV/step]			

2407	[Normal: [FC]] Transfer roller current and discharge plate voltage for the image area of plain paper 1 in color mode  (Process Speed, Paper Side) Process Speed -> RS: Regular speed,  Paper Side: 1st or 2nd		
2407 013	RS: 1st: T. Roll2	*EGB	Adjusts the transfer roller current.  [0 to 100 / 30.2/27.3 (NA/EU) / 0.1 -µA / step]
2407 014	RS: 1st: Separa.	*EGB	Adjusts the discharge plate voltage.  [0 to 4 / 2.0 / 0.1 -KV/step]
2407 021	RS: 2nd: T. Roll2	*EGB	[0 to 100 / <b>25.5/30.2 (NA/EU)</b> / 0.1 -µA / step]
2407 022	RS: 2nd: Separa.	*EGB	[0 to 4 / 2.0 / 0.1 -KV/step]

2408	[Normal: [FC]] Transfer roller current and discharge plate voltage for the image area of plain paper 1 in color mode (Process Speed, Paper Side) Process Speed -> LS: Low speed, Paper Side: 1st or 2nd		
2408 013	LS: 1st: T. Roll2	*EGB	Adjusts the transfer roller current.  [0 to 100 / 21.3 / 0.1 -µA /step]
2408 014	LS: 1st: Separa.	*EGB	Adjusts the discharge plate voltage.

			[0 to 4 / <b>2.0</b> / 0.1 -KV/step]
2408 021	LS: 2nd: T. Roll2	*EGB	[0 to 100 / <b>18.3/19.5 (NA/EU)</b> / 0.1 -µA / step]
2408 022	LS: 2nd: Separa.	*EGB	[0 to 4 / <b>2.0</b> / 0.1 -KV/step]

0.401	[Normal:[K]:LE] Transfer roller current and discharge plate voltage for the leading edge area of plain paper 1 in B/W mode			
2421	Paper Side: 1st or 2nd			
	Unit -> T.Roll2: Transfer roller, Separation: Discharge plate (paper separation)			
2421 003	Separation	*EGB	[0 to 400 / <b>100</b> / 5%/step]	
2421 007	T.Roll2: 1st	*EGB	The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD	
2421 012	T.Roll2: 2nd	*EGB	actually means 100%.	

2422	[Switch Timing] Switch timing from leading edge to normal, plain paper 1 (Paper Type, Edge) Paper Type -> N: Normal LE: Leading Edge  T. Roll 2: N: LE  *EGB [0 to 200 / 10 / 1 mm/step]		
2422 002			
2422 003	Separation: N: LE	*EGB	[0 to 200 / <b>25</b> / 1 mm/step]

2423	area of plain paper 1 in B, Paper side: 1st or 2nd	/W mode	[O to 400 / 100 / 5%/step]			
2423 003	Separation	*EGB	[0 to 400 / <b>100</b> / 5%/step]			
2423 007	T. KOII Z. TSI LGD   ' '		The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD			
2423 012	T. Roll 2: 2nd	*EGB	actually means 100%.			

2424	[Switch Timing] Switch timing from normal to trailing edge, plain paper 1				
2424	(Paper Type, Edge) Paper Type -> N: Normal, Edge ->TE: Trailing Edge		: Normal, Edge ->TE: Trailing Edge		
2424 002	T. Roll 2: N: TE	*EGB	[0 to 200 / 10 / 1 mm/step]		
2424 003	Separation: N: TE	*EGB	[0 to 200 / <b>30</b> / 1 mm/step]		

2426	[Normal: [FC]: LE] Transfer roller current and discharge plate voltage for the leading edge area of plain paper 1 in color mode Paper side: 1st or 2nd		
2426 003	Separation	*EGB	[0 to 400 / 100 / 5%/step]
2426 007	T. Roll 2: 1st	*EGB	The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD
2426 012	T. Roll 2: 2nd	*EGB	actually means 100%.

2428	[Normal: [FC]: TE] Transfer roller current and discharge plate voltage for the trailing edge area of plain paper 1 in color mode		
2428 003	Separation	*EGB	[0 to 400 / <b>100</b> / 5%/step]
2428 007	T. Roll 2: 1st	*EGB	The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD
2428 012	T. Roll 2: 2nd	*EGB	actually means 100%.

	[Normal2: [K]] Transfer roller current and discharge plate voltage for the image area of plain paper 2 in B/W mode				
2432	(Process Speed, Paper Side, Unit) Process Speed -> RS: Regular speed,				
	Paper Side: 1st or 2nd				
	Unit -> T.Roll2: Transfer roller, Separa.: Discharge plate (paper separation)				
2432 007	RS: 1st: T. Roll 2	*EGB	Adjusts the transfer roller current.  [0 to 100 / 15.5/15.3 (NA/EU) / 0.1 -µA / step]		
2432 008	RS: 1st: Separa.	*EGB	Adjusts the discharge plate voltage.  [0 to 4 / 2.0 / 0.1 -KV/step]		
2432 012	RS: 2nd: T. Roll 2	*EGB	[0 to 100 / <b>15.3</b> / 0.1 -µA /step]		
2432 013	RS: 2nd: Separa.	*EGB	[0 to 4 / 2.0 / 0.1 -KV/step]		

2433	[Normal2: [K]] Transfer roll plain paper 2 in B/W mod (Process Speed, Paper Sid Paper Side: 1st or 2nd	de	and discharge plate voltage for the image area of Speed -> LS: Low speed,
2433 007	LS: 1st: T. Roll 2	*EGB	Adjusts the transfer roller current.

			[0 to 100 / <b>10.0/12.3 (NA/EU)</b> / 0.1 -µA / step]
2433 008	LS: 1st: Separa.	*EGB	Adjusts the discharge plate voltage.  [0 to 4 / 2.0 / 0.1 -KV/step]
2433 012	LS: 2nd: T. Roll 2	*EGB	[0 to 100 / <b>12.5/12.3 (NA/EU)</b> / 0.1 -µA / step]
2433 013	LS: 2nd: Separa.	*EGB	[0 to 4 / <b>2.0</b> / 0.1 -KV/step]

2437	[Normal2: [FC]] Transfer roller current and discharge plate voltage for the image area of plain paper 2 in color mode  (Process Speed, Paper Side) RS: Regular Speed, Paper Side: 1st or 2nd			
2437 013	RS: 1st: T. Roll 2	*EGB	Adjusts the transfer roller current.  [0 to 100 / 24.3/18.3 (NA/EU) / 0.1 -µA / step]	
2437 014	RS: 1st: Separa.	*EGB	Adjusts the discharge plate voltage.  [0 to 4 / 2.0 / 0.1 -KV/step]	
2437 021	RS: 2nd: T. Roll 2	*EGB	[0 to 100 / <b>19.5/21.3 (NA/EU)</b> / 0.1 -µA / step]	
2437 022	RS: 2nd: Separa.	*EGB	[0 to 4 / <b>2.0</b> / 0.1 -KV/step]	

2438	[Normal2: [FC]] Transfer roller current and discharge plate voltage for the image area of plain paper 2 in color mode (Process Speed, Paper Side) LS: Low Speed, Paper Side: 1st or 2nd			
2438 013	LS: 1st: T. Roll 2	*EGB	Adjusts the transfer roller current.  [0 to 100 / 12.3 / 0.1 -µA /step]	
2438 014	LS: 1st: Separa.	*EGB	Adjusts the discharge plate voltage. [0 to 4 / 2.0 / 0.1 -KV/step]	
2438 021	LS: 2nd: T. Roll 2	*EGB	[0 to 100 / <b>13.5/15.3 (NA/EU)</b> / 0.1 -µA / step]	
2438 022	LS: 2nd: Separa.	*EGB	[0 to 4 / <b>2.0</b> / 0.1 -KV/step]	

2451	[Normal2:[K]:LE] Transfer roller current and discharge plate voltage for the leading edge area of plain paper 2 in B/W mode Paper Side: 1st or 2nd Unit -> T.Roll2: Transfer roller, Separation: Discharge plate (paper separation)		
2451 003	Separation	*EGB	[0 to 400 / 100 / 5%/step]
2451 007	Trans.Roll2: 1st	*EGB	The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD
2451 012	Trans.Roll2: 2nd	*EGB	actually means 100%.

2452	[Switch Timing] Switch timing from leading edge to normal, plain paper 2 (Paper Type, Edge) Paper Type -> N: Normal, LE: Leading Edge		
2452 002	T. Roll 2: N2: LE	*EGB	[0 to 200 / <b>10</b> / 1 mm/step]
2452 003	Separation: N2: LE	*EGB	[0 to 200 / <b>25</b> / 1 mm/step]

2453	[Normal2: [K]: TE] Transfer roller current and discharge plate voltage for the trailing edge area of plain paper 2 in B/W mode  Paper side: 1st or 2nd  Unit -> T.Roll2: Transfer roller, Separation: Discharge plate (paper separation)		
2453 003	Separation	*EGB	[0 to 400 / <b>100</b> / 5%/step]
2453 007	T. Roll 2: 1st	*EGB	The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD
2453 012	T. Roll 2: 2nd	*EGB	actually means 100%.

2454	[Switch Timing] Switch timing from normal to trailing edge, plain paper 2 (Paper Type, Edge) Paper Type -> N: Normal, TE: Trailing Edge		
2454 002	T. Roll 2: N2: TE	*EGB	[0 to 200 / <b>10</b> / 1 mm/step]
2454 003	Separation: N2: TE	*EGB	[0 to 200 / <b>30</b> / 1 mm/step]

2456	[Normal2:[FC]:LE] Transferedge area of plain paper 2 Paper Side: 1 st or 2nd		rent and discharge plate voltage for the leading mode
2456 003	Separation	*EGB	[0 to 400 / <b>100</b> / 5%/step]

2456 007	T. Roll 2: 1st	*EGB	The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD
2456 012	T. Roll 2: 2nd		actually means 100%.

2458	[Normal2:[FC]:TE] Transfer roller current and discharge plate voltage for the trailing edgarea of plain paper 2 in color mode Paper Side: 1st or 2nd		
2458 003	Separation	*EGB	[0 to 400 / <b>100</b> / 5%/step]
2458 007	T. Roll 2: 1st	*EGB	The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD
2458 012	T. Roll 2: 2nd	*EGB	actually means 100%.

2462	[Spec1:[K]] Transfer roller current and discharge plate voltage for the leading edge area of special paper 1 in B/W mode Paper Side: 1st or 2nd		
2462 007	RS: 1st: T.Roll2	*EGB	[0 to 100 / <b>15.5</b> / 0.1 -µA /step]
2462 008	RS: 1st:Separa.	*EGB	[0 to 4 / 2 / 0.1 -kV/step]
2462 012	RS: 2nd: T.Roll2	*EGB	[0 to 100 / <b>25.0</b> / 0.1 -µA /step]
2462 013	RS: 2nd: Separa.	*EGB	[0 to 4 / 2 / 0.1 -kV/step]

2463	[Spec1:[K]] Transfer roller current and discharge plate voltage for the trailing edge area of special paper 1 in B/W mode  Paper Side: 1st or 2nd		
2463 007	LS: 1st: T.Roll2	*EGB	[0 to 100 / <b>12.5</b> / 0.1 -µA /step]
2463 008	LS: 1st:Separa.	*EGB	[0 to 4 / 2 / 0.1 -kV/step]
2463 012	LS: 2nd: T.Roll2	*EGB	[0 to 100 / <b>20.0</b> / 0.1 -µA /step]
2463 013	LS: 2nd: Separa.	*EGB	[0 to 4 / 2 / 0.1 -kV/step]

2467	[Spec1:[FC]] Transfer rolled area of special paper 1 in Paper Side: 1st or 2nd		and discharge plate voltage for the leading edge de
2467 013	RS: 1st: T.Roll2	*EGB	[0 to 100 / <b>18.5</b> / 0.1 -µA /step]

2467 014	RS: 1st:Separa.	*EGB	[0 to 4 / 2 / 0.1 -kV/step]
2467 021	RS: 2nd: T.Roll2	*EGB	[0 to 100 / <b>30.0</b> / 0.1 -µA /step]
2467 022	RS: 2nd: Separa.	*EGB	[0 to 4 / <b>2</b> / 0.1 -kV/step]

2468	[Spec1:[FC]] Transfer roller current and discharge plate voltage for the trailing edge area of special paper 1 in color mode  Paper Side: 1st or 2nd		
2468 013	LS: 1st: T.Roll2	*EGB	[0 to 100 / <b>17.5</b> / 0.1 -µA /step]
2468 014	LS: 1st:Separa.	*EGB	[0 to 4 / 2 / 0.1 -kV/step]
2468 021	LS: 2nd: T.Roll2	*EGB	[0 to 100 / <b>25.0</b> / 0.1 -µA /step]
2468 022	LS: 2nd: Separa.	*EGB	[0 to 4 / 2 / 0.1 -kV/step]

2472	[Glossy2:[K]] Transfer roller current and discharge plate voltage for the leading edge area of glossy paper 2 in B/W mode Paper Side: 1st or 2nd		
2472 007	RS: 1st: T.Roll2	*EGB	[0 to 100 / <b>12.5</b> / 0.1 -µA /step]
2472 008	RS: 1st:Separa.	*EGB	[0 to 4 / 2 / 0.1 -kV/step]
2472 012	RS: 2nd: T.Roll2	*EGB	[0 to 100 / <b>13.0</b> / 0.1 -µA /step]
2472 013	RS: 2nd: Separa.	*EGB	[0 to 4 / <b>2</b> / 0.1 -kV/step]

2473	[Glossy2:[K]] Transfer roller current and discharge plate voltage for the trailing edge area of glossy paper 2 in B/W mode Paper Side: 1st or 2nd		
2473 007	LS: 1st: T.Roll2	*EGB	[0 to 100 / 10.0 / 0.1 -µA /step]
2473 008	LS: 1st:Separa.	*EGB	[0 to 4 / 2 / 0.1 -kV/step]
2473 012	LS: 2nd: T.Roll2	*EGB	[0 to 100 / 10.0 / 0.1 -µA/step]
2473 013	LS: 2nd: Separa.	*EGB	[0 to 4 / 2 / 0.1 -kV/step]

2477	[Glossy2:[FC]] Transfer roller current and discharge plate voltage for the leading edge
24//	area of glossy paper 2 in color mode

	Paper Side: 1st or 2nd		
2477 013	RS: 1st: T.Roll2	*EGB	[0 to 100 / <b>15.0</b> / 0.1 -µA/step]
2477 014	RS: 1st:Separa.	*EGB	[0 to 4 / 2 / 0.1 -kV/step]
2477 021	RS: 2nd: T.Roll2	*EGB	[0 to 100 / <b>15.0</b> / 0.1 -µA/step]
2477 022	RS: 2nd: Separa.	*EGB	[0 to 4 / 2 / 0.1 -kV/step]

2478	[Glossy2:[FC]] Transfer roller current and discharge plate voltage for the trailing edge area of glossy paper 2 in color mode Paper Side: 1st or 2nd		
2478 013	LS: 1st: T.Roll2	*EGB	[0 to 100 / <b>10.0</b> / 0.1 -µA /step]
2478 014	LS: 1st: Separa.	*EGB	[0 to 4 / 2 / 0.1 -kV/step]
2478 021	LS: 2nd: T.Roll2	*EGB	[0 to 100 / <b>10.0</b> / 0.1 -µA/step]
2478 022	LS: 2nd: Separa.	*EGB	[0 to 4 / <b>2</b> / 0.1 -kV/step]

2481	[Spec1:[K]:TE] Transfer roller current and discharge plate voltage correction for the leading edge area of special paper 1 in B/W mode  Paper Side: 1st or 2nd		
2481 007	RS: 1st: T.Roll2	*EGB	[0 to 400 / 100 / 5%/step]
2481 012	RS: 2nd: T.Roll2	*EGB	The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD actually means 100%.

2483		[Spec1:[K]:LE] Transfer roller current and discharge plate voltage correction for the trailing edge area of special paper 1 in B/W mode  Paper Side: 1st or 2nd	
2483 007	LS: 1st: T.Roll2	*EGB	[0 to 400 / <b>100</b> / 5%/step]
2483 012	LS: 2nd: T.Roll2	*EGB	The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD actually means 100%.

2486	[Spec1:[FC]:TE] Transfer roller current and discharge plate voltage correction for the
	leading edge area of special paper 1 in color mode

	Paper Side: 1st or 2nd		
2486 007	RS: 1st: T.Roll2	*EGB	[0 to 400 / 100 / 5%/step]
2486 012	RS: 2nd:Separa.	*EGB	The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD actually means 100%.

2488	[Spec1:[FC]:LE] Transfer roller current and discharge plate voltage correction for the trailing edge area of special paper 1 in color mode  Paper Side: 1st or 2nd		
2488 007	LS: 1st: T.Roll2	*EGB	[0 to 400 / <b>100</b> / 5%/step]
2488 012	LS: 1st:Separa.	*EGB	The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD actually means 100%.

2491	[Glossy2:[K]:TE] Transfer roller currentleading edge area of glossy paper 2 Paper Side: 1st or 2nd		nt and discharge plate voltage correction for the 2 in B/W mode
2491 007	RS: 1st: T.Roll2	*EGB	[0 to 400 / <b>100</b> / 5%/step]
2491 012	RS: 2nd: T.Roll2	*EGB	The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD actually means 100%.

2493	[Glossy2:[K]:LE] Transfer roller current and discharge plate voltage correction for the trailing edge area of glossy paper 2 in B/W mode  Paper Side: 1st or 2nd		
2493 007	LS: 1st: T.Roll2	*EGB	[0 to 400 / <b>100</b> / 5%/step]
2493 012	LS: 2nd: T.Roll2	*EGB	The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD actually means 100%.

2496	[Glossy2:[FC]:TE] Transfer leading edge area of glos Paper Side: 1st or 2nd		ent and discharge plate voltage correction for the ? in color mode
2496 007	RS: 1st: T.Roll2	*EGB	[0 to 400 / 100 / 5%/step]

			The value displayed on the LCD is different from
2496 012	RS: 2nd:Separa.	*EGB	these SP's values. For example, "20%" on the LCD
			actually means 100%.

2498	[Glossy2:[FC]:LE] Transfer roller current and discharge plate voltage correction for the trailing edge area of glossy paper 2 in color mode  Paper Side: 1st or 2nd		
2498 007	LS: 1st: T.Roll2	*EGB	[0 to 400 / 100 / 5%/step]
2498 012	LS: 2nd:Separa.	*EGB	The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD actually means 100%.

	[Thick: [K]] Transfer roller current and discharge plate voltage for the image area of thick paper 1 in B/W mode			
2501	Paper Side: 1st or 2nd			
	Unit -> T.Roll2: Transfer ro	ller, Separ	a.: Discharge plate (paper separation)	
2501 007	T. Roll 2: 1 st	*EGB	Adjusts the transfer roller current.  [0 to 100 / 9.2 / 0.1 -µA /step]	
2501 008	Separation: 1st	*EGB	Adjusts the discharge plate voltage.  [0 to 4 / 2.0 / 0.1 -KV/step]	
2501 012	T. Roll 2: 2nd	*EGB	[0 to 100 / <b>12.3</b> / 0.1 -µA /step]	
2501 013	Separation: 2nd	*EGB	[0 to 4 / <b>2.0</b> / 0.1 -KV/step]	

2506	[Thick: [FC]] Transfer roller current and discharge plate voltage for the image area of thick paper 1 in color mode  Paper Side: 1st or 2nd		
2506 013	T. Roll 2: 1 st	*EGB	Adjusts the transfer roller current. [0 to 100 / 12.3 / 0.1 -µA /step]
2506 014	Separation: 1st	*EGB	Adjusts the discharge plate voltage.  [0 to 4 / 2.0 / 0.1 -KV/step]
2506 021	T. Roll 2: 2nd	*EGB	[0 to 100 / <b>18.3</b> / 0.1 -µA /step]
2506 022	Separation: 2nd	*EGB	[0 to 4 / <b>2.0</b> / 0.1 -KV/step]

2521	[Thick: [K]: LE] Transfer roller current and discharge plate voltage correction for the leading edge area of thick paper 1 in B/W mode Paper Side: 1st or 2nd			
2521 003	Separation	*EGB	[0 to 400 / <b>100</b> / 5%/step]	
2521 007	T. Roll 2: 1st	*EGB	The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD	
2521 012	T. Roll 2: 2nd	*EGB	actually means 100%.	

2522	[Switch Timing] Switch timing from leading edge to normal, thick paper 1				
2322	(Paper Type, Edge) Paper Type -> TC: Thick, LE: Leading Edge				
2522 002	T. Roll 2: Thick: LE	*EGB	[0 to 200 / 10 / 1 mm/step]		
2522 003	Separation: TC: LE	*EGB	[0 to 200 / <b>25</b> / 1 mm/step]		

2523	[Thick: [K]: TE] Transfer roller current and discharge plate voltage correction for the trailing edge area of thick paper 1 in B/W mode Paper Side: 1st or 2nd			
2523 003	Separation	*EGB	[0 to 400 / 100 / 5%/step]	
2523 007	T. Roll 2: 1st	*EGB	The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD	
2523 012	T. Roll 2: 2nd	*EGB	actually means 100%.	

2524	[Switch Timing] Switch timing from normal to trailing edge, thick paper 1 (Paper Type, Edge) Paper Type -> TC: Thick, TE: Trailing Edge			
2524 002	T. Roll 2: Thick: TE	*EGB	[0 to 200 / <b>10</b> / 1 mm/step]	
2524 003	Separation: TC: TE	*EGB	[0 to 200 / <b>30</b> / 1 mm/step]	

2526	[Thick: [FC]: LE] Transfer roller current and discharge plate voltage correction for the leading edge area of thick paper 1 in color mode  Paper Side: 1st or 2nd		
2526 003	Separation	*EGB	[0 to 400 / <b>100</b> / 5%/step]
2526 007	T. Roll 2: 1st	*EGB	The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD
2526 012	T. Roll 2: 2nd	*EGB	actually means 100%.

2528	[Thick: [FC]: TE] Transfer roller current and discharge plate voltage correction for the trailing edge area of thick paper 1 in color mode  Paper Side: 1st or 2nd		
2528 003	Separation	*EGB	[0 to 400 / 100 / 5%/step]
2528 007	T. Roll 2: 1st	*EGB	The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD
2528 012	T. Roll 2: 2nd	*EGB	actually means 100%.

2531	[Thick2: [K]] Transfer roller current and discharge plate voltage for the image area thick paper 2 in B/W mode Unit -> T.Roll2: Transfer roller, Separa.: Discharge plate (paper separation)		
2531 007	Transfer Roller 2	*EGB	Adjusts the transfer roller current.  [0 to 100 / 9.2 / 0.1 -µA /step]
2531 008	Separation	*EGB	Adjusts the discharge plate voltage.  [0 to 4 / 2.0 / 0.1 -KV/step]

2536	[Thick2: [FC]] Transfer roller current and discharge plate voltage for the image area of thick paper 2 in color mode			
2536 013	Transfer Roller 2	*EGB	Adjusts the transfer roller current. [0 to 100 / 12.3 / 0.1 -µA /step]	
2536 014	Separation	*EGB	Adjusts the discharge plate voltage.  [0 to 4 / 2.0 / 0.1 -KV/step]	

2551	[Thick2: [K]: LE] Transfer roller current and discharge plate voltage correction for the leading edge area of thick paper 2 in B/W mode			
2551 003	Separation	*EGB	[0 to 400 / <b>100</b> / 5%/step]	
2551 007	Transfer Roller2	*EGB	The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD actually means 100%.	

2552	[Switch Timing] Switch timing from leading edge to normal, thick paper 2 (Paper Type, Edge) Paper Type -> TC2: Thick 2, LE: Leading Edge		
2552 002	T. Roll 2: TC2: LE	*EGB	[0 to 200 / 10 / 1 mm/step]

	2552 003	Separa.: TC2: LE	*EGB	[0 to 200 / <b>25</b> / 1 mm/step]	
--	----------	------------------	------	------------------------------------	--

2553	[Thick2: [K]: TE] Transfer roller current and discharge plate voltage correction for the trailing edge area of thick paper 2 in B/W mode		
2553 003	Separation	*EGB	[0 to 400 / <b>100</b> / 5%/step]
2553 007	Transfer Roller2	*EGB	The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD actually means 100%.

2554	[Switch Timing] Switch timing from normal to trailing edge, thick paper 2			
(Paper Type, Edge) Paper Type -> TC2: Thick 2, TE: Trailing Edge				
2554 002	T. Roll 2: TC2: TE	*EGB	[0 to 200 / 10 / 1 mm/step]	
2554 003	Separa.: TC2: TE	*EGB	[0 to 200 / <b>30</b> / 1 mm/step]	

2556	[Thick2: [FC]: LE] Transfer roller current and discharge plate voltage correction for the leading edge area of thick paper 2 in color mode		
2556 003	Separation	*EGB	[0 to 400 / <b>100</b> / 5%/step]
2556 007	Transfer Roller2	*EGB	The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD actually means 100%.

2558	[Thick2: [FC]: TE] Transfer roller current and discharge plate voltage correction for the trailing edge area of thick paper 2 in color mode			
2558 003	Separation   *EGB   [0 to 400 / 100 / 5%/step]			
2558 007	Transfer Roller2	*EGB	The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD actually means 100%.	

2561	[Special 1: [K]: LE] Transfer roller current and discharge plate voltage correction for the leading edge area of special paper 1 in B/W mode		
2561 003	Separation	*EGB	[0 to 400 / 100 / 5%/step] The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD actually means 100%.

2563	[Special1: [K]: TE] Transfer roller current and discharge plate voltage correction for the trailing edge area of special paper 1 in B/W mode		
2563 003	Separation	*EGB	[0 to 400 / 100 / 5%/step]  The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD actually means 100%.

2566	[Special1: [FC]: LE] Transfer roller current and discharge plate voltage correction for the leading edge area of special paper 1 in color mode		
2566 003	Separation	*EGB	[0 to 400 / 100 / 5%/step]  The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD actually means 100%.

2568	[Special1: [FC]: TE] Transfer roller current and discharge plate voltage correction for the trailing edge area of special paper 1 in color mode		
2568 003	Separation	*EGB	[0 to 400 / 100 / 5%/step] The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD actually means 100%.

2571	[Glossy2: [K]: LE] Transfer roller current and discharge plate voltage correction for the leading edge area of glossy paper 2 in B/W mode		
2571 003	Separation	*EGB	[0 to 400 / 100 / 5%/step] The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD actually means 100%.

2573	[Glossy2: [K]: TE] Transfer roller current and discharge plate voltage correction for the trailing edge area of glossy paper 2 in B/W mode		
2573 003	Separation	*EGB	[0 to 400 / 100 / 5%/step] The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD actually means 100%.

2576	[Glossy2: [FC]: LE] Transfer roller current and discharge plate voltage correction for the leading edge area of glossy paper 2 in color mode		
2576 003	Separation	*EGB	[0 to 400 / 100 / 5%/step]  The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD actually means 100%.

2578	[Glossy2: [FC]: TE] Transfer roller current and discharge plate voltage correction for the trailing edge area of glossy paper 2 in color mode		
2578 003	Separation	*EGB	[0 to 400 / 100 / 5%/step] The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD actually means 100%.

2601	[OHP: [K]] Transfer roller current and discharge plate voltage for the image area of OHP in B/W mode  Unit -> T.Roll2: Transfer roller, Separa.: Discharge plate (paper separation)		
2601 002	Transfer Roller2	*EGB	Adjusts the transfer roller current.  [0 to 100 / 7.5 / 0.1 -µA /step]
2601 003	Separation	*EGB	Adjusts the discharge plate voltage.  [0 to 4 / 2.0 / 0.1 -KV/step]

2606	[OHP: [FC]] Transfer roller current and discharge plate voltage for the image area of OHP in color mode		
2606 005	Transfer Roller2	*EGB	Adjusts the transfer roller current.  [0 to 100 / 21.3 / 0.1 -µA /step
2606 006	Separation	*EGB	Adjusts the discharge plate voltage.  [0 to 4 / 2 / 0.1 -KV/step]

2621	[OHP: [K]: LE] Transfer roller current and discharge plate voltage correction for the leading edge area of OHP in B/W mode		
2621 002	Transfer Roller2		
2621 003	Separation	*EGB	[0 to 400 / <b>100</b> / 5%/step]

The value displayed on the LCD is different from
these SP's values. For example, "20%" on the LCD
actually means 100%.

2622	[Switch Timing] Switch timing from leading edge to normal, OHP (Paper Type, Edge) Paper Type -> OHP, LE: Leading Edge		
2622 002	T. Roll 2: OHP: LE	*EGB	[0 to 200 / 10 / 1 mm/step]
2622 003	Separa.: OHP: LE	*EGB	[0 to 200 / <b>25</b> / 1 mm/step]

2623	[OHP: [K]: TE] Transfer roller current and discharge plate voltage correction for the trailing edge area of OHP in B/W mode		
2623 002	Transfer Roller2	*EGB	[0 to 400 / 100 / 5%/step]
2623 003	Separation	*EGB	The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD actually means 100%.

2624	[Switch Timing] Switch timing from normal to trailing edge, OHP				
2024	(Paper Type, Edge) Paper Type -> OHP, TE: Trailing Edge				
2624 002	T. Roll 2: OHP: TE	*EGB	[0 to 200 / 10 / 1 mm/step]		
2624 003	Separa.: OHP: TE	*EGB	[0 to 200 / <b>30</b> / 1 mm/step]		

2626	[OHP: [FC]: LE] Transfer roller current and discharge plate voltage correction for the leading edge area of OHP in color mode		
2626 002	Transfer Roller2	*EGB	[0 to 400 / <b>100</b> / 5%/step]
2626 003	Separation	*EGB	The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD actually means 100%.

2628	[OHP: [FC]: TE] Transfer roller current and discharge plate voltage correction for the trailing edge area of OHP in B/W mode		
2628 002	Transfer Roller2	*EGB	[0 to 400 / <b>100</b> / 5%/step]
2628 003	Separation	*EGB	The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD actually means 100%.

2631	[Thin: [K]] Transfer roller current and discharge plate voltage for the image area of thin paper in B/W mode Unit -> T.Roll2: Transfer roller, Separa.: Discharge plate (paper separation)		
2631 007	Transfer Roller 2	*EGB	Adjusts the transfer roller current.  [0 to 100 / 18.3 / 0.1 -µA /step]
2631 008	Separation	*EGB	Adjusts the discharge plate voltage.  [0 to 4 / 2.0 / 0.1 -KV/step]

2633	[Thin: [K]] Transfer roller current and discharge plate voltage for the image area of thin paper in B/W mode Process Speed -> LS: Low Speed		
2633 007	T.Roll 2: LS	*EGB	Adjusts the transfer roller current.  [0 to 60 / 12.3 / 0.1 -µA /step]
2633 008	Separation: LS	*EGB	Adjusts the discharge plate voltage.  [0 to 4 / 2.0 / 0.1 -KV/step]

2636	[Thin: [FC]] Transfer roller current and discharge plate voltage for the image area of thin paper in color mode		
2636 013	Transfer Roller 2	*EGB	Adjusts the transfer roller current.  [0 to 100 / 30.2/24.3 (NA/EU) / 0.1 -µA / step]
2636 014	Separation	*EGB	Adjusts the discharge plate voltage.  [0 to 4 / 2.0 / 0.1 -KV/step]

2638	[Thin: [FC]] Transfer roller current and discharge plate voltage for the image area, of thin paper in color mode Process Speed -> LS: Low Speed		
2638 013	T.Roll 2: LS	*EGB	Adjusts the transfer roller current.  [0 to 100 / 21.3/18.3 (NA/EU) / 0.1 -µA / step]
2638 014	Separation: LS	*EGB	Adjusts the discharge plate voltage.  [0 to 4 / 2.0 / 0.1 -KV/step]

2651	[Thin: [K]: LE] Transfer roller current and discharge plate voltage correction for the leading edge area of thin paper in B/W mode		
2651 003	Separation   LGb   · · ·		The value displayed on the LCD is different from these SP's values. For example, "40%" on the LCD
2651 007	Transfer Roller2	*EGB	[0 to 400 / 100 / 5%/step] The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD actually means 100%.

2652	[Switch Timing] Switch timing from leading edge to normal, thin paper (Paper Type, Edge) Paper Type -> TN: Thin, LE: Leading Edge		
2652 002	T. Roll 2: Thin: LE	*EGB	[0 to 200 / <b>10</b> / 1 mm/step]
2652 003	Separation: TN: LE	*EGB	[0 to 200 / <b>25</b> / 1 mm/step]

2653	[Thin: [K]: TE] Transfer roller current and discharge plate voltage correction for the trailing edge area of thin paper in B/W mode		
2653 003	Separation	*EGB	[0 to 400 / 100 / 5%/step]
2653 007	Transfer Roller2	*EGB	The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD actually means 100%.

2654	[Switch Timing] Switch timing from normal to trailing edge, thin paper (Paper Type, Edge) Paper Type -> TN: Thin, TE: Trailing Edge		
2654 002	T. Roll 2: Thin: TE	*EGB	[0 to 200 / 10 / 1 mm/step]
2654 003	Separation: TN: TE	*EGB	[0 to 200 / <b>30</b> / 1 mm/step]

2656	[Thin: [FC]: LE] Transfer rol leading edge area of thin		and discharge plate voltage correction for the olor mode
2656 003	Separation	*EGB	[0 to 400 / <b>200</b> / 5%/step]

			The value displayed on the LCD is different from these SP's values. For example, "40%" on the LCD actually means 200 %.
2656 007	Transfer Roller2	*EGB	[0 to 400 / 100 / 5%/step]  The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD actually means 100%.

2658	[Thin: [FC]: TE] Transfer roller current and discharge plate voltage correction for the trailing edge area of thin paper in color mode		
2658 003	Separation	*EGB	[0 to 400 / <b>100</b> / 5%/step]
2658 007	Transfer Roller2	*EGB	The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD actually means 100%.

2751	[Special3:[K]] Transfer roller current and discharge plate voltage for the image area of special paper 3 in B/W mode Paper Side: 1st or 2nd		
2751 007	T.Roll 2: 1st	*EGB	Adjusts the transfer roller current for 1st side.  [0 to 100 / <b>7.5</b> / 0.1 -µA /step]
2751 008	Separation: 1st	*EGB	Adjusts the discharge plate voltage for 1st side.  [0 to 4 / 2.0 / 0.1 -KV/step]
2751 021	T.Roll2:nd	*EGB	Adjusts the transfer roller current for 2nd side.  [0 to 100 / 10.0 / 0.1 -µA /step]
2751 022	Separation: 2nd	*EGB	Adjusts the discharge plate voltage for 2nd side.  [0 to 4 / 2.0 / 0.1 -KV/step]

2756	[Special3:[FC]] Transfer roller current and discharge plate voltage for the image area of special paper 3 in color mode  Paper Side: 1st or 2nd		
2756 013	T.Roll 2: 1st	*EGB	Adjusts the transfer roller current for 1st side.  [0 to 100 / 10.0 / 0.1 -µA /step]
2756 014	Separation: 1st	*EGB	Adjusts the discharge plate voltage for 1st side.

			[0 to 4 / <b>2.0</b> / 0.1 -KV/step]
2756 021	T.Roll2:nd	*EGB	Adjusts the transfer roller current for 2nd side.  [0 to 100 / 15.0 / 0.1 -µA /step]
2756 022	Separation: 2nd	*EGB	Adjusts the discharge plate voltage for 2nd side.  [0 to 4 / 2.0 / 0.1 -KV/step]

2771	[Special: [K]: LE] Transfer roller current and discharge plate voltage correction for the leading edge area of special paper 3 in B/W mode Paper Side: 1st or 2nd		
2771 003	Separation	*EGB	[0 to 400 / <b>100</b> / 5%/step]
2771 007	T.Roll 2: 1st	*EGB	The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD
2771 012	T.Roll 2: 2nd	*EGB	actually means 100%.

2772	[Switch Timing] Switch timing from normal to leading edge, special paper 3 (Paper Type, Edge) Paper Type -> TN: Thin, TE: Trailing Edge		
2772 002	T. Roll 2: Sp3: TE	*EGB	[0 to 200 / 10 / 1 mm/step]
2772 003	Separation: TN: TE	*EGB	[0 to 200 / <b>25</b> / 1 mm/step]

2773	[Special: [K]: TE] Transfer roller current and discharge plate voltage correction for the trailing edge area of special paper 3 in B/W mode Paper Side: 1st or 2nd		
2773 003	Separation	*EGB	[0 to 400 / <b>100</b> / 5%/step]
2773 007	T.Roll 2: 1st	*EGB	The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD
2773 012	T.Roll 2: 2nd	*EGB	actually means 100%.

2774	[Switch Timing] Switch timing from normal to trailing edge, special paper 3				
2//4	(Paper Type, Edge) Paper	Edge) Paper Type -> TN: Thin, TE: Trailing Edge			
2774 002	T. Roll 2: Sp3: TE	*EGB	[0 to 200 / 10 / 1 mm/step]		
2774 003	Separation: TN: TE	*EGB	[0 to 200 / <b>30</b> / 1 mm/step]		

2776	[SP: [FC]: LE] Transfer roller current and discharge plate voltage correction for the leading edge area of special paper 3 in color mode  Paper Side: 1st or 2nd		
2776 003	Separation	*EGB	[0 to 400 / <b>100</b> / 5%/step]
2776 007	T.Roll 2: 1st	*EGB	The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD
2776 012	T.Roll 2: 2nd	*EGB	actually means 100%.

2778	[SP: [FC]: TE] Transfer roller current and discharge plate voltage correction for the trailing edge area of special paper 3 in color mode  Paper Side: 1 st or 2nd		
2778 003	Separation	*EGB	[0 to 400 / 100 / 5%/step]
2778 007	T.Roll 2: 1st	*EGB	The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD
2778 012	T.Roll 2: 2nd	*EGB	actually means 100%.

	[T2: N: Size 4] Transfer Roller Current: Correction for Humidity, Plain paper 1, Paper width between A5 and A6				
	(Environment, Process Speed, [Color], Paper Side) LS: Low Speed, RS: Regular Speed, Paper Side: 1st or 2nd				
2901					
	Note				
	<ul> <li>The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD actually means 100%.</li> </ul>				
2901 001	LL: RS [K]: 1st	*EGB	[0 to 1275 / <b>160</b> / 5%/step]		
2901 002	LL: RS [K]: 2nd	*EGB	[0 to 1275 / <b>220</b> / 5%/step]		
2901 003	LL: RS [FC]: 1st	*EGB	[0 to 1275 / <b>130</b> / 5%/step]		
2901 004	LL: RS [FC]: 2nd	*EGB	[0 to 1275 / <b>185</b> / 5%/step]		
2901 005	LL: LS [K]: 1st	*EGB	[0 to 1275 / <b>135</b> / 5%/step]		
2901 006	LL: LS [K]: 2nd	*EGB	[0 to 1275 / <b>175</b> / 5%/step]		
2901 007	LL: LS [FC]: 1st	*EGB	[0 to 1275 / <b>165</b> / 5%/step]		
2901 008	LL: LS [FC]: 2nd	*EGB	[0 to 1275 / <b>235</b> / 5%/step]		

2901 009	MM: RS [K]: 1st	*EGB	[0 to 1275 / <b>130</b> / 5%/step]
2901 010	MM: RS [K]: 2nd	*EGB	[0 to 1275 / <b>265</b> / 5%/step]
2901 011	MM: RS [FC]: 1st	*EGB	[0 to 1275 / <b>125</b> / 5%/step]
2901 012	MM: RS [FC]: 2nd	*EGB	[0 to 1275 / <b>310</b> / 5%/step]
2901 013	MM: LS [K]: 1st	*EGB	[0 to 1275 / <b>150</b> / 5%/step]
2901 014	MM: LS [K]: 2nd	*EGB	[0 to 1275 / <b>300</b> / 5%/step]
2901 015	MM: LS [FC]: 1st	*EGB	[0 to 1275 / <b>145</b> / 5%/step]
2901 016	MM: LS [FC]: 2nd	*EGB	[0 to 1275 / <b>350</b> / 5%/step]
2901 017	HH: RS [K]: 1st	*EGB	[0 to 1275 / <b>450</b> / 5%/step]
2901 018	HH: RS [K]: 2nd	*EGB	[0 to 1275 / <b>400</b> / 5%/step]
2901 019	HH: RS [FC]: 1st	*EGB	[0 to 1275 / <b>165</b> / 5%/step]
2901 020	HH: RS [FC]: 2nd	*EGB	[0 to 1275 / <b>310</b> / 5%/step]
2901 021	HH: LS [K]: 1st	*EGB	[0 to 1275 / <b>350</b> / 5%/step]
2901 022	HH: LS [K]: 2nd	*EGB	[0 to 1275 / <b>540/570 (NA/EU)</b> / 5%/step]
2901 023	HH: LS [FC]: 1st	*EGB	[0 to 1275 / <b>290</b> / 5%/step]
2901 024	HH: LS [FC]: 2nd	*EGB	[0 to 1275 / <b>335</b> / 5%/step]

[T2: N: Size 5] Transfer Roller Current: Correction for Humidity, Plain paper 1, Paper width A6 or less (Environment, Process Speed, [Color], Paper Side) LS: Low Speed, RS: Regular Speed, Paper Side: 1st or 2nd 2902 **U** Note • The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD actually means 100%. 2902 001 \*EGB [0 to 1275 / **160** / 5%/step] LL: RS [K]: 1st 2902 002 LL: RS [K]: 2nd \*EGB [0 to 1275 / **290/275 (NA/EU)** / 5%/step] 2902 003 \*EGB [0 to 1275 / **130** / 5%/step] LL: RS [FC]: 1st 2902 004 \*EGB LL: RS [FC]: 2nd [0 to 1275 / **185** / 5%/step]

2902 005	LL: LS [K]: 1st	*EGB	[0 to 1275 / <b>165</b> / 5%/step]
2902 006	LL: LS [K]: 2nd	*EGB	[0 to 1275 / <b>240</b> / 5%/step]
2902 007	LL: LS [FC]: 1st	*EGB	[0 to 1275 / <b>165</b> / 5%/step]
2902 008	LL: LS [FC]: 2nd	*EGB	[0 to 1275 / <b>235</b> / 5%/step]
2902 009	MM: RS [K]: 1st	*EGB	[0 to 1275 / <b>230</b> / 5%/step]
2902 010	MM: RS [K]: 2nd	*EGB	[0 to 1275 / <b>310/325 (NA/EU)</b> / 5%/step]
2902 011	MM: RS [FC]: 1st	*EGB	[0 to 1275 / <b>150</b> / 5%/step]
2902 012	MM: RS [FC]: 2nd	*EGB	[0 to 1275 / <b>310</b> / 5%/step]
2902 013	MM: LS [K]: 1st	*EGB	[0 to 1275 / <b>245</b> / 5%/step]
2902 014	MM: LS [K]: 2nd	*EGB	[0 to 1275 / <b>400</b> / 5%/step]
2902 015	MM: LS [FC]: 1st	*EGB	[0 to 1275 / <b>295</b> / 5%/step]
2902 016	MM: LS [FC]: 2nd	*EGB	[0 to 1275 / <b>350</b> / 5%/step]
2902 017	HH: RS [K]: 1st	*EGB	[0 to 1275 / <b>455</b> / 5%/step]
2902 018	HH: RS [K]: 2nd	*EGB	[0 to 1275 / <b>400</b> / 5%/step]
2902 019	HH: RS [FC]: 1st	*EGB	[0 to 1275 / <b>165</b> / 5%/step]
2902 020	HH: RS [FC]: 2nd	*EGB	[0 to 1275 / <b>310</b> / 5%/step]
2902 021	HH: LS [K]: 1st	*EGB	[0 to 1275 / <b>400</b> / 5%/step]
2902 022	HH: LS [K]: 2nd	*EGB	[0 to 1275 / <b>540/650 (NA/EU)</b> / 5%/step]
2902 023	HH: LS [FC]: 1st	*EGB	[0 to 1275 / <b>290</b> / 5%/step]
2902 024	HH: LS [FC]: 2nd	*EGB	[0 to 1275 / <b>335</b> / 5%/step]
	·		

[T2: N2: Size 4] Transfer Roller Current: Correction for Humidity, Plain paper 2 Paper width between A5 and A6

(Environment, Process Speed, [Color], Paper Side)

LS: Low Speed, RS: Regular Speed, Paper Side: 1st or 2nd



• The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD actually means 100%.

2903

2903 001	LL: RS [K]: 1st	*EGB	[0 to 1275 / <b>160</b> / 5%/step]
2903 002	LL: RS [K]: 2nd	*EGB	[0 to 1275 / <b>220</b> / 5%/step]
2903 003	LL: RS [FC]: 1st	*EGB	[0 to 1275 / <b>130</b> / 5%/step]
2903 004	LL: RS [FC]: 2nd	*EGB	[0 to 1275 / <b>185</b> / 5%/step]
2903 005	LL: LS [K]: 1st	*EGB	[0 to 1275 / <b>135</b> / 5%/step]
2903 006	LL: LS [K]: 2nd	*EGB	[0 to 1275 / <b>175</b> / 5%/step]
2903 007	LL: LS [FC]: 1st	*EGB	[0 to 1275 / <b>165</b> / 5%/step]
2903 008	LL: LS [FC]: 2nd	*EGB	[0 to 1275 / <b>235</b> / 5%/step]
2903 009	MM: RS [K]: 1st	*EGB	[0 to 1275 / <b>130</b> / 5%/step]
2903 010	MM: RS [K]: 2nd	*EGB	[0 to 1275 / <b>265</b> / 5%/step]
2903 011	MM: RS [FC]: 1st	*EGB	[0 to 1275 / <b>125</b> / 5%/step]
2903 012	MM: RS [FC]: 2nd	*EGB	[0 to 1275 / <b>310</b> / 5%/step]
2903 013	MM: LS [K]: 1st	*EGB	[0 to 1275 / <b>150</b> / 5%/step]
2903 014	MM: LS [K]: 2nd	*EGB	[0 to 1275 / <b>335</b> / 5%/step]
2903 015	MM: LS [FC]: 1st	*EGB	[0 to 1275 / <b>145</b> / 5%/step]
2903 016	MM: LS [FC]: 2nd	*EGB	[0 to 1275 / <b>350</b> / 5%/step]
2903 017	HH: RS [K]: 1st	*EGB	[0 to 1275 / <b>450</b> / 5%/step]
2903 018	HH: RS [K]: 2nd	*EGB	[0 to 1275 / <b>400</b> / 5%/step]
2903 019	HH: RS [FC]: 1st	*EGB	[0 to 1275 / <b>165</b> / 5%/step]
2903 020	HH: RS [FC]: 2nd	*EGB	[0 to 1275 / <b>310</b> / 5%/step]
2903 021	HH: LS [K]: 1st	*EGB	[0 to 1275 / <b>350</b> / 5%/step]
2903 022	HH: LS [K]: 2nd	*EGB	[0 to 1275 / <b>540/535 (NA/EU)</b> / 5%/step]
2903 023	HH: LS [FC]: 1st	*EGB	[0 to 1275 / <b>290</b> / 5%/step]
2903 024	HH: LS [FC]: 2nd	*EGB	[0 to 1275 / <b>335</b> / 5%/step]

2904 [T2: N2: Size 5] Transfer Roller Current: Correction for Humidity, Plain paper 2, Paper width A6 or less

(Environment, Process Speed, [Color], Paper Side)

LS: Low Speed, RS: Regular Speed, Paper Side: 1st or 2nd



• The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD actually means 100%.

	20% Off file LCD do	Journy Illec	1115 10076.
2904 001	LL: RS [K]: 1st	*EGB	[0 to 1275 / <b>160</b> / 5%/step]
2904 002	LL: RS [K]: 2nd	*EGB	[0 to 1275 / <b>265/225 (NA/EU)</b> / 5%/step]
2904 003	LL: RS [FC]: 1st	*EGB	[0 to 1275 / <b>130</b> / 5%/step]
2904 004	LL: RS [FC]: 2nd	*EGB	[0 to 1275 / <b>185</b> / 5%/step]
2904 005	LL: LS [K]: 1st	*EGB	[0 to 1275 / <b>165</b> / 5%/step]
2904 006	LL: LS [K]: 2nd	*EGB	[0 to 1275 / <b>240</b> / 5%/step]
2904 007	LL: LS [FC]: 1st	*EGB	[0 to 1275 / <b>165</b> / 5%/step]
2904 008	LL: LS [FC]: 2nd	*EGB	[0 to 1275 / <b>235</b> / 5%/step]
2904 009	MM: RS [K]: 1st	*EGB	[0 to 1275 / <b>230</b> / 5%/step]
2904 010	MM: RS [K]: 2nd	*EGB	[0 to 1275 / <b>345</b> / 5%/step]
2904 011	MM: RS [FC]: 1st	*EGB	[0 to 1275 / <b>150</b> / 5%/step]
2904 012	MM: RS [FC]: 2nd	*EGB	[0 to 1275 / <b>310</b> / 5%/step]
2904 013	MM: LS [K]: 1st	*EGB	[0 to 1275 / <b>245</b> / 5%/step]
2904 014	MM: LS [K]: 2nd	*EGB	[0 to 1275 / <b>375</b> / 5%/step]
2904 015	MM: LS [FC]: 1st	*EGB	[0 to 1275 / <b>295</b> / 5%/step]
2904 016	MM: LS [FC]: 2nd	*EGB	[0 to 1275 / <b>350</b> / 5%/step]
2904 017	HH: RS [K]: 1st	*EGB	[0 to 1275 / <b>455</b> / 5%/step]
2904 018	HH: RS [K]: 2nd	*EGB	[0 to 1275 / <b>400</b> / 5%/step]
2904 019	HH: RS [FC]: 1st	*EGB	[0 to 1275 / <b>165</b> / 5%/step]
2904 020	HH: RS [FC]: 2nd	*EGB	[0 to 1275 / <b>310</b> / 5%/step]
2904 021	HH: LS [K]: 1st	*EGB	[0 to 1275 / <b>400</b> / 5%/step]
2904 022	HH: LS [K]: 2nd	*EGB	[0 to 1275 / <b>540/535 (NA/EU)</b> / 5%/step]

2904 023	HH: LS [FC]: 1st	*EGB	[0 to 1275 / <b>290</b> / 5%/step]
2904 024	HH: LS [FC]: 2nd	*EGB	[0 to 1275 / <b>335</b> / 5%/step]

2905	[T2: Thin: Size4] Transfer Roller Current: Correction for Humidity, Thin Paper, Paper width between A5 and A6  (Environment, Process Speed, [Color]) LS: Low Speed, RS: Regular Speed  Note  The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD actually means 100%.			
2905 001	LL: RS [K]	*EGB	[0 to 1275 / <b>160</b> / 5%/step]	
2905 002	LL: RS [FC]	*EGB	[0 to 1275 / <b>130</b> / 5%/step]	
2905 003	LL: LS [K]	*EGB	[0 to 1275 / <b>135</b> / 5%/step]	
2905 004	LL: LS [FC]	*EGB	[0 to 1275 / <b>165</b> / 5%/step]	
2905 005	MM: RS [K]	*EGB	[0 to 1275 / <b>130</b> / 5%/step]	
2905 006	MM: RS [FC]	*EGB	[0 to 1275 / <b>125</b> / 5%/step]	
2905 007	MM: LS [K]	*EGB	[0 to 1275 / <b>150</b> / 5%/step]	
2905 008	MM: LS [FC]	*EGB	[0 to 1275 / <b>145</b> / 5%/step]	
2905 009	HH: RS [K]	*EGB	[0 to 1275 / <b>450</b> / 5%/step]	
2905 010	HH: RS [FC]	*EGB	[0 to 1275 / <b>165</b> / 5%/step]	
2905 011	HH: LS [K]	*EGB	[0 to 1275 / <b>350</b> / 5%/step]	
2905 012	HH: LS [FC]	*EGB	[0 to 1275 / <b>290</b> / 5%/step]	

	[T2: Thin: Size5] Transfer Roller Current: Correction for Humidity, Thin paper, Paper width A6 or less				
2906	(Environment, Process Speed, [Color]) LS: Low Speed, RS: Regular Speed				
2700	Note				
	The value displayed of "20%" on the LCD actions		is different from these SP's values. For example, ns 100%.		
2906 001	LL: RS [K]	*EGB	[0 to 1275 / <b>160</b> / 5%/step]		

2906 002	LL: RS [FC]	*EGB	[0 to 1275 / <b>130</b> / 5%/step]
2906 003	LL: LS [K]	*EGB	[0 to 1275 / <b>165</b> / 5%/step]
2906 004	LL: LS [FC]	*EGB	[0 to 1275 / <b>165</b> / 5%/step]
2906 005	MM: RS [K]	*EGB	[0 to 1275 / <b>230</b> / 5%/step]
2906 006	MM: RS [FC]	*EGB	[0 to 1275 / <b>150</b> / 5%/step]
2906 007	MM: LS [K]	*EGB	[0 to 1275 / <b>245</b> / 5%/step]
2906 008	MM: LS [FC]	*EGB	[0 to 1275 / <b>295</b> / 5%/step]
2906 009	HH: RS [K]	*EGB	[0 to 1275 / <b>455</b> / 5%/step]
2906 010	HH: RS [FC]	*EGB	[0 to 1275 / <b>165</b> / 5%/step]
2906 011	HH: LS [K]	*EGB	[0 to 1275 / <b>400</b> / 5%/step]
2906 012	HH: LS [FC]	*EGB	[0 to 1275 / <b>290</b> / 5%/step]

	[T2: TC: Size4] Transfer Roller Current: Correction for Humidity, Thick Paper 1, Paper width between A5 and A6			
	(Environment, Process Speed, [Color], Paper Side)			
2907	LS: Low Speed, RS: Regular Speed, Paper Side: 1st or 2nd			
	Note			
	The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD actually means 100%.			
2907 001	LL: LS [K]: 1st	*EGB	[0 to 1275 / <b>150</b> / 5%/step]	
2907 002	LL: LS [K]: 2nd	*EGB	[0 to 1275 / <b>255</b> / 5%/step]	
2907 003	LL: LS [FC]: 1st	*EGB	[0 to 1275 / <b>130</b> / 5%/step]	
2907 004	LL: LS [FC]: 2nd	*EGB	[0 to 1275 / <b>250</b> / 5%/step]	
2907 005	MM: LS [K]: 1st	*EGB	[0 to 1275 / <b>180</b> / 5%/step]	
2907 006	MM: LS [K]: 2nd	*EGB	[0 to 1275 / <b>335</b> / 5%/step]	
2907 007	MM: LS [FC]: 1st	*EGB	[0 to 1275 / <b>150</b> / 5%/step]	
2907 008	MM: LS [FC]: 2nd	*EGB	[0 to 1275 / <b>270</b> / 5%/step]	
2907 009	HH: LS [K]: 1st	*EGB	[0 to 1275 / <b>170</b> / 5%/step]	

2907 010	HH: LS [K]: 2nd	*EGB	[0 to 1275 / <b>320</b> / 5%/step]
2907 011	HH: LS [FC]: 1st	*EGB	[0 to 1275 / <b>150</b> / 5%/step]
2907 012	HH: LS [FC]: 2nd	*EGB	[0 to 1275 / <b>270</b> / 5%/step]

	[T2: TC: Size5] Transfer Roller Current: Correction for Humidity, Thick paper 1, Paper width A6 or less			
	(Environment, Process Speed, [Color], Paper Side)			
2908 LS: Low Speed, RS: Regular Speed, Paper Side: 1st or 2nd  •• Note				
2908 001	LL: LS [K]: 1st	*EGB	[0 to 1275 / <b>205</b> / 5%/step]	
2908 002	LL: LS [K]: 2nd	*EGB	[0 to 1275 / <b>410</b> / 5%/step]	
2908 003	LL: LS [FC]: 1st	*EGB	[0 to 1275 / <b>165</b> / 5%/step]	
2908 004	LL: LS [FC]: 2nd	*EGB	[0 to 1275 / <b>400</b> / 5%/step]	
2908 005	MM: LS [K]: 1st	*EGB	[0 to 1275 / <b>265</b> / 5%/step]	
2908 006	MM: LS [K]: 2nd	*EGB	[0 to 1275 / <b>500</b> / 5%/step]	
2908 007	MM: LS [FC]: 1st	*EGB	[0 to 1275 / <b>200</b> / 5%/step]	
2908 008	MM: LS [FC]: 2nd	*EGB	[0 to 1275 / <b>435</b> / 5%/step]	
2908 009	HH: LS [K]: 1st	*EGB	[0 to 1275 / <b>245</b> / 5%/step]	
2908 010	HH: LS [K]: 2nd	*EGB	[0 to 1275 / <b>535</b> / 5%/step]	
2908 011	HH: LS [FC]: 1st	*EGB	[0 to 1275 / <b>200</b> / 5%/step]	
2908 012	HH: LS [FC]: 2nd	*EGB	[0 to 1275 / <b>445</b> / 5%/step]	

2909	[T2: TC2: Size4] Transfer Roller Current: Correction for Humidity, Thick Paper 2, Paper width between A5 and A6
	(Environment, Process Speed, [Color]) LS: Low Speed, RS: Regular Speed

	<b>U</b> Note			
	The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD actually means 100%.			
2909 001	LL: LS [K]	*EGB	[0 to 1275 / <b>150</b> / 5%/step]	
2909 002	LL: LS [FC]	*EGB	[0 to 1275 / <b>130</b> / 5%/step]	
2909 003	MM: LS [K]	*EGB	[0 to 1275 / <b>180</b> / 5%/step]	
2909 004	MM: LS [FC]	*EGB	[0 to 1275 / <b>150</b> / 5%/step]	
2909 005	HH: LS [K]	*EGB	[0 to 1275 / <b>170</b> / 5%/step]	
2909 006	HH: LS [FC]	*EGB	[0 to 1275 / <b>150</b> / 5%/step]	

	[T2: TC2: Size5] Transfer Roller Current: Correction for Humidity, Thick paper 2, Paper width A6 or less			
(Environment, Process Speed, [Color]) LS: Low Speed, RS: Regular Speed, Note			LS: Low Speed, RS: Regular Speed	
	The value displayed on the LCD is different from these SP's values. For example "20%" on the LCD actually means 100%.			
2910 001	LL: LS [K]	*EGB	[0 to 1275 / <b>205</b> / 5%/step]	
2910 002	LL: LS [FC]	*EGB	[0 to 1275 / <b>165</b> / 5%/step]	
2910 003	MM: LS [K]	*EGB	[0 to 1275 / <b>265</b> / 5%/step]	
2910 004	MM: LS [FC]	*EGB	[0 to 1275 / <b>200</b> / 5%/step]	
2910 005	HH: LS [K]	*EGB	[0 to 1275 / <b>245</b> / 5%/step]	
2910 006	HH: LS [FC]	*EGB	[0 to 1275 / <b>200</b> / 5%/step]	

2911	<ul> <li>[T2: SP Size4] Transfer Roller Current: Correction for Humidity, Special paper, Paper width between A5 and A6</li> <li>(Environment, Process Speed, [Color]) LS: Low Speed, RS: Regular Speed</li> <li>◆ Note</li> <li>• The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD actually means 100%.</li> </ul>			
2911 001	LL: LS [K]	*EGB	[0 to 1275 / <b>150</b> / 5%/step]	

2911 002	LL: LS [FC]	*EGB	[0 to 1275 / <b>130</b> / 5%/step]
2911 003	MM: LS [K]	*EGB	[0 to 1275 / <b>180</b> / 5%/step]
2911 004	MM: LS [FC]	*EGB	[0 to 1275 / <b>150</b> / 5%/step]
2911 005	HH: LS [K]	*EGB	[0 to 1275 / <b>170</b> / 5%/step]
2911 006	HH: LS [FC]	*EGB	[0 to 1275 / <b>150</b> / 5%/step]
101-106	These are used for 2nd side	of the pap	per.
2911 101	LL: LS: [K]	*EGB	[0 to 1275 / <b>320</b> / 5%/step]
2911 102	LL: LS: [FC]	*EGB	[0 to 1275 / <b>250</b> / 5%/step]
2911 103	MM: LS: [K]	*EGB	[0 to 1275 / <b>355 (NA/EU)150</b> / 5%/step]
2911 104	MM: LS: [FC]	*EGB	[0 to 1275 / <b>270</b> / 5%/step]
2911 105	HH: LS: [K]	*EGB	[0 to 1275 / <b>320</b> / 5%/step]
2911 106	HH: LS: [FC]	*EGB	[0 to 1275 / <b>270</b> / 5%/step]

	[T2: SP: Size5] Transfer Roller Current: Correction for Humidity, Special paper, Paper width A6 or less			
2912	(Environment, Process Speed, [Color]) LS: Low Speed, RS: Regular Speed			
	<ul> <li>Note</li> <li>The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD actually means 100%.</li> </ul>			
2912 001	LL: LS [K]	*EGB	[0 to 1275 / <b>205</b> / 5%/step]	
2912 002	LL: LS [FC]	*EGB	[0 to 1275 / <b>165</b> / 5%/step]	
2912 003	MM: LS [K]	*EGB	[0 to 1275 / <b>265</b> / 5%/step]	
2912 004	MM: LS [FC]	*EGB	[0 to 1275 / <b>200</b> / 5%/step]	
2912 005	HH: LS [K]	*EGB	[0 to 1275 / <b>245</b> / 5%/step]	
2912 006	HH: LS [FC]	*EGB	[0 to 1275 / <b>200</b> / 5%/step]	
101-106	These are used for 2nd side of the paper.			
2912 101	LL: LS: [K]	*EGB	[0 to 1275 / <b>535</b> / 5%/step]	

2912 102	LL: LS: [FC]	*EGB	[0 to 1275 / <b>400</b> / 5%/step]
2912 103	MM: LS: [K]	*EGB	[0 to 1275 / <b>510</b> / 5%/step]
2912 104	MM: LS: [FC]	*EGB	[0 to 1275 / <b>435</b> / 5%/step]
2912 105	HH: LS: [K]	*EGB	[0 to 1275 / <b>535</b> / 5%/step]
2912 106	HH: LS: [FC]	*EGB	[0 to 1275 / <b>445</b> / 5%/step]

	[T2: SP1: Size4] Transfer Roller Current: Correction for Humidity, Special paper 1, Pape width between A5 and A6		
2913	(Environment, Process Speed, [Color]) LS: Low Speed, RS: Regular Speed  Note  The value displayed on the LCD is different from these SP's values. For example "20%" on the LCD actually means 100%.		
2913 001	LL: RS [K]: 1st	*EGB	[0 to 1275 / <b>160</b> / 5%/step]
2913 002	LL: RS [K]: 2nd	*EGB	[0 to 1275 / <b>220</b> / 5%/step]
2913 003	LL: RS [FC]: 1st	*EGB	[0 to 1275 / <b>130</b> / 5%/step]
2913 004	LL: RS [FC]: 2nd	*EGB	[0 to 1275 / <b>185</b> / 5%/step]
2913 005	LL: LS [K]: 1st	*EGB	[0 to 1275 / <b>135</b> / 5%/step]
2913 006	LL: LS [K]: 2nd	*EGB	[0 to 1275 / <b>175</b> / 5%/step]
2913 007	LL: LS [FC]: 1st	*EGB	[0 to 1275 / <b>165</b> / 5%/step]
2913 008	LL: LS [FC]: 2nd	*EGB	[0 to 1275 / <b>235</b> / 5%/step]
2913 009	MM: RS [K]: 1st	*EGB	[0 to 1275 / <b>130</b> / 5%/step]
2913 010	MM: RS [K]: 2nd	*EGB	[0 to 1275 / <b>265</b> / 5%/step]
2913 011	MM: RS [FC]: 1 st	*EGB	[0 to 1275 / <b>125</b> / 5%/step]
2913 012	MM: RS [FC]: 2nd	*EGB	[0 to 1275 / <b>310</b> / 5%/step]
2913 013	MM: LS [K]: 1st	*EGB	[0 to 1275 / <b>150</b> / 5%/step]
2913 014	MM: LS [K]: 2nd	*EGB	[0 to 1275 / <b>300</b> / 5%/step]
2913 015	MM: LS [FC]: 1st	*EGB	[0 to 1275 / <b>145</b> / 5%/step]

2913 016	MM: LS [FC]: 2nd	*EGB	[0 to 1275 / <b>350</b> / 5%/step]
2913 017	HH: RS [K]: 1st	*EGB	[0 to 1275 / <b>450</b> / 5%/step]
2913 018	HH: RS [K]: 2nd	*EGB	[0 to 1275 / <b>400</b> / 5%/step]
2913 019	HH: RS [FC]: 1st	*EGB	[0 to 1275 / <b>165</b> / 5%/step]
2913 020	HH: RS [FC]: 2nd	*EGB	[0 to 1275 / <b>310</b> / 5%/step]
2913 021	HH: LS [K]: 1st	*EGB	[0 to 1275 / <b>350</b> / 5%/step]
2913 022	HH: LS [K]: 2nd	*EGB	[0 to 1275 / <b>455</b> / 5%/step]
2913 023	HH: LS [FC]: 1st	*EGB	[0 to 1275 / <b>290</b> / 5%/step]
2913 024	HH: LS [FC]: 2nd	*EGB	[0 to 1275 / <b>335</b> / 5%/step]

[T2: SP1: Size5] Transfer Roller Current: Correction for Humidity, Special paywidth A6 or less			: Correction for Humidity, Special paper 1, Paper	
2914	(Environment, Process Speed, [Color]) LS: Low Speed, RS: Regular Speed			
	<ul> <li>Note</li> <li>The value displayed on the LCD is different from these SP's values. For exam</li> </ul>			
	"20%" on the LCD actu			
2914 001	LL: RS [K]: 1st	*EGB	[0 to 1275 / <b>160</b> / 5%/step]	
2914 002	LL: RS [K]: 2nd	*EGB	[0 to 1275 / <b>260</b> / 5%/step]	
2914 003	LL: RS [FC]: 1st	*EGB	[0 to 1275 / <b>130</b> / 5%/step]	
2914 004	LL: RS [FC]: 2nd	*EGB	[0 to 1275 / <b>185</b> / 5%/step]	
2914 005	LL: LS [K]: 1st	*EGB	[0 to 1275 / <b>165</b> / 5%/step]	
2914 006	LL: LS [K]: 2nd	*EGB	[0 to 1275 / <b>240</b> / 5%/step]	
2914 007	LL: LS [FC]: 1st	*EGB	[0 to 1275 / <b>165</b> / 5%/step]	
2914 008	LL: LS [FC]: 2nd	*EGB	[0 to 1275 / <b>235</b> / 5%/step]	
2914 009	MM: RS [K]: 1st	*EGB	[0 to 1275 / <b>230</b> / 5%/step]	
2914 010	MM: RS [K]: 2nd	*EGB	[0 to 1275 / <b>325</b> / 5%/step]	
2914 011	MM: RS [FC]: 1st	*EGB	[0 to 1275 / <b>150</b> / 5%/step]	

2914 012	MM: RS [FC]: 2nd	*EGB	[0 to 1275 / <b>310</b> / 5%/step]
2914 013	MM: LS [K]: 1st	*EGB	[0 to 1275 / <b>245</b> / 5%/step]
2914 014	MM: LS [K]: 2nd	*EGB	[0 to 1275 / <b>400</b> / 5%/step]
2914 015	MM: LS [FC]: 1st	*EGB	[0 to 1275 / <b>295</b> / 5%/step]
2914 016	MM: LS [FC]: 2nd	*EGB	[0 to 1275 / <b>350</b> / 5%/step]
2914017	HH: RS [K]: 1st	*EGB	[0 to 1275 / <b>455</b> / 5%/step]
2914 018	HH: RS [K]: 2nd	*EGB	[0 to 1275 / <b>400</b> / 5%/step]
2914019	HH: RS [FC]: 1st	*EGB	[0 to 1275 / <b>165</b> / 5%/step]
2914 020	HH: RS [FC]: 2nd	*EGB	[0 to 1275 / <b>310</b> / 5%/step]
2914 021	HH: LS [K]: 1st	*EGB	[0 to 1275 / <b>400</b> / 5%/step]
2914 022	HH: LS [K]: 2nd	*EGB	[0 to 1275 / <b>455</b> / 5%/step]
2914 023	HH: LS [FC]: 1st	*EGB	[0 to 1275 / <b>290</b> / 5%/step]
2914 024	HH: LS [FC]: 2nd	*EGB	[0 to 1275 / <b>335</b> / 5%/step]

	[T2:GL2:Size4] Transfer Roller Current: Correction for Humidity, Glossary paper2, Paper width between A5 and A6  (Environment, Process Speed, [Color]) LS: Low Speed, RS: Regular Speed  Note  • The value displayed on the LCD is different from these SP's values. For example "20%" on the LCD actually means 100%.		
2915			
2915 001	LL: RS [K]: 1st	*EGB	[0 to 1275 / <b>160</b> / 5%/step]
2915 002	LL: RS [K]: 2nd	*EGB	[0 to 1275 / <b>220</b> / 5%/step]
2915 003	LL: RS [FC]: 1st	*EGB	[0 to 1275 / <b>130</b> / 5%/step]
2915 004	LL: RS [FC]: 2nd	*EGB	[0 to 1275 / <b>185</b> / 5%/step]
2915 005	LL: LS [K]: 1st	*EGB	[0 to 1275 / <b>135</b> / 5%/step]
2915 006	LL: LS [K]: 2nd	*EGB	[0 to 1275 / <b>175</b> / 5%/step]
2915 007	LL: LS [FC]: 1st	*EGB	[0 to 1275 / <b>165</b> / 5%/step]

LL: LS [FC]: 2nd	*EGB	[0 to 1275 / <b>235</b> / 5%/step]
MM: RS [K]: 1 st	*EGB	[0 to 1275 / <b>130</b> / 5%/step]
MM: RS [K]: 2nd	*EGB	[0 to 1275 / <b>265</b> / 5%/step]
MM: RS [FC]: 1st	*EGB	[0 to 1275 / <b>125</b> / 5%/step]
MM: RS [FC]: 2nd	*EGB	[0 to 1275 / <b>310</b> / 5%/step]
MM: LS [K]: 1st	*EGB	[0 to 1275 / <b>150</b> / 5%/step]
MM: LS [K]: 2nd	*EGB	[0 to 1275 / <b>300</b> / 5%/step]
MM: LS [FC]: 1st	*EGB	[0 to 1275 / <b>145</b> / 5%/step]
MM: LS [FC]: 2nd	*EGB	[0 to 1275 / <b>350</b> / 5%/step]
HH: RS [K]: 1st	*EGB	[0 to 1275 / <b>450</b> / 5%/step]
HH: RS [K]: 2nd	*EGB	[0 to 1275 / <b>400</b> / 5%/step]
HH: RS [FC]: 1st	*EGB	[0 to 1275 / <b>165</b> / 5%/step]
HH: RS [FC]: 2nd	*EGB	[0 to 1275 / <b>310</b> / 5%/step]
HH: LS [K]: 1st	*EGB	[0 to 1275 / <b>350</b> / 5%/step]
HH: LS [K]: 2nd	*EGB	[0 to 1275 / <b>465</b> / 5%/step]
HH: LS [FC]: 1st	*EGB	[0 to 1275 / <b>290</b> / 5%/step]
HH: LS [FC]: 2nd	*EGB	[0 to 1275 / <b>335</b> / 5%/step]
	MM: RS [K]: 1st  MM: RS [K]: 2nd  MM: RS [FC]: 1st  MM: RS [FC]: 2nd  MM: LS [K]: 1st  MM: LS [K]: 2nd  MM: LS [FC]: 1st  MM: LS [FC]: 1st  HH: RS [K]: 2nd  HH: RS [K]: 2nd  HH: RS [K]: 2nd  HH: RS [FC]: 1st  HH: RS [FC]: 1st  HH: LS [FC]: 1st  HH: LS [FC]: 2nd  HH: LS [FC]: 1st	MM: RS [K]: 1st       *EGB         MM: RS [K]: 2nd       *EGB         MM: RS [FC]: 1st       *EGB         MM: RS [FC]: 2nd       *EGB         MM: LS [K]: 1st       *EGB         MM: LS [K]: 2nd       *EGB         MM: LS [FC]: 1st       *EGB         MM: LS [FC]: 2nd       *EGB         HH: RS [K]: 2nd       *EGB         HH: RS [FC]: 1st       *EGB         HH: RS [FC]: 2nd       *EGB         HH: LS [K]: 1st       *EGB         HH: LS [K]: 2nd       *EGB         HH: LS [K]: 2nd       *EGB         HH: LS [K]: 2nd       *EGB         HH: LS [FC]: 1st       *EGB

	[T2:GL2:Size5] Transfer Roller Current: Correction for Humidity, Glossary paper2, Paper width A6 or less				
2916	(Environment, Process Speed, [Color]) LS: Low Speed, RS: Regular Speed  Note				
The value displayed on the LCD is different from these SP's value on the LCD actually means 100%.		• •			
2916 001	LL: RS [K]: 1st	*EGB	[0 to 1275 / <b>160</b> / 5%/step]		
2916 002	LL: RS [K]: 2nd	*EGB	[0 to 1275 / <b>235</b> / 5%/step]		
2916 003	LL: RS [FC]: 1st	*EGB	[0 to 1275 / <b>130</b> / 5%/step]		

2916 004	LL: RS [FC]: 2nd	*EGB	[0 to 1275 / <b>185</b> / 5%/step]
2916 005	LL: LS [K]: 1st	*EGB	[0 to 1275 / <b>165</b> / 5%/step]
2916 006	LL: LS [K]: 2nd	*EGB	[0 to 1275 / <b>240</b> / 5%/step]
2916 007	LL: LS [FC]: 1st	*EGB	[0 to 1275 / <b>165</b> / 5%/step]
2916 008	LL: LS [FC]: 2nd	*EGB	[0 to 1275 / <b>235</b> / 5%/step]
2916 009	MM: RS [K]: 1st	*EGB	[0 to 1275 / <b>230</b> / 5%/step]
2916 010	MM: RS [K]: 2nd	*EGB	[0 to 1275 / <b>345</b> / 5%/step]
2916 011	MM: RS [FC]: 1st	*EGB	[0 to 1275 / <b>150</b> / 5%/step]
2916 012	MM: RS [FC]: 2nd	*EGB	[0 to 1275 / <b>310</b> / 5%/step]
2916 013	MM: LS [K]: 1st	*EGB	[0 to 1275 / <b>245</b> / 5%/step]
2916 014	MM: LS [K]: 2nd	*EGB	[0 to 1275 / <b>350</b> / 5%/step]
2916 015	MM: LS [FC]: 1st	*EGB	[0 to 1275 / <b>295</b> / 5%/step]
2916 016	MM: LS [FC]: 2nd	*EGB	[0 to 1275 / <b>350</b> / 5%/step]
2916 017	HH: RS [K]: 1st	*EGB	[0 to 1275 / <b>455</b> / 5%/step]
2916 018	HH: RS [K]: 2nd	*EGB	[0 to 1275 / <b>400</b> / 5%/step]
2916 019	HH: RS [FC]: 1st	*EGB	[0 to 1275 / <b>165</b> / 5%/step]
2916 020	HH: RS [FC]: 2nd	*EGB	[0 to 1275 / <b>310</b> / 5%/step]
2916 021	HH: LS [K]: 1st	*EGB	[0 to 1275 / <b>400</b> / 5%/step]
2916 022	HH: LS [K]: 2nd	*EGB	[0 to 1275 / <b>465</b> / 5%/step]
2916 023	HH: LS [FC]: 1st	*EGB	[0 to 1275 / <b>290</b> / 5%/step]
2916 024	HH: LS [FC]: 2nd	*EGB	[0 to 1275 / <b>335</b> / 5%/step]

2920	[S: HH SP: 1st] Smaller than A5 HH Special paper, 1st side		
2920 001	T2 Switch Timing	*EGB	[0 to 200 / <b>15</b> / 1 mm/step]
2920 002	T2 Correction	*EGB	[0 to 1275 / <b>20</b> / 5%/step]

The value displayed on the LCD is different from
these SP's values. For example, "4%" on the
LCD actually means 20 %.

2921	[S: HH SP: 2nd] Smaller than A5 HH Special paper, 2nd side		
2921 001	T2 Switch Timing	*EGB	[0 to 200 / <b>15</b> / 1 mm/step]
2921 002	T2 Correction	*EGB	[0 to 1275 / <b>0</b> / 5%/step]  The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD actually means 100%.

	[Separa.: LE: HH] Separa	ıtion Voltag	e: Correction for HH Humidity at the Leading Edge			
	(Paper Type, Process Spe	(Paper Type, Process Speed, [Color]) Paper Type -> Normal, Thin				
2930	Process Speed -> LS: Low speed, RS: Regular speed  Note					
2730						
	• The value displayed "20%" on the LCD as		is different from these SP's values. For example, ins 100%.			
2930 001	Normal: RS: [K]	*EGB				
2930 002	Normal: RS: [FC]	*EGB				
2930 003	Normal: LS: [K]	*EGB				
2930 004	Normal: LS: [FC]	*EGB				
2930 005	Normal 2: RS: [K]	*EGB				
2930 006	Normal 2: RS: [FC]	*EGB	[0 to 400 / <b>200</b> / 5%/step]			
2930 007	Normal 2: LS: [K]	*EGB	[0 10 400 / <b>200</b> / 3 %/ step]			
2930 008	Normal 2: LS: [FC]	*EGB				
2930 009	Thin: RS: [K]	*EGB				
2930 010	Thin: RS: [FC]	*EGB				
2930 011	Thin: LS: [K]	*EGB				
2930 012	Thin: LS: [FC]	*EGB				

	[T2:LL:SP1] Transfer Roller Current: Correction for Humidity, LL Environment, Special paper 1,			
2938	(Process Speed, [Color]) LS	: Low Spee	ed, RS: Regular Speed	
2736	<ul> <li>Note</li> <li>The value displayed on the LCD is different from these SP's values. For examp "20%" on the LCD actually means 100%.</li> </ul>			
2938 001	RS [K]: 1st	*EGB	[0 to 1275 / <b>80</b> / 5%/step]	
2938 002	RS [K]: 2nd	*EGB	[0 to 1275 / <b>80</b> / 5%/step]	
2938 003	RS [FC]: 1st	*EGB	[0 to 1275 / <b>90</b> / 5%/step]	
2938 004	RS [FC]: 2nd	*EGB	[0 to 1275 / <b>95</b> / 5%/step]	
2938 005	LS [K]: 1st	*EGB	[0 to 1275 / <b>100</b> / 5%/step]	
2938 006	LS [K]: 2nd	*EGB	[0 to 1275 / <b>65</b> / 5%/step]	
2938 007	LS [FC]: 1st	*EGB	[0 to 1275 / <b>75</b> / 5%/step]	
2938 008	LS [FC]: 2nd	*EGB	[0 to 1275 / <b>80</b> / 5%/step]	

2939	[T2:LL:GL2] Transfer Roller Current: Correction for Humidity, LL Environment, Glossary paper2,  (Process Speed, [Color]) LS: Low Speed, RS: Regular Speed  ◆ Note  • The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD actually means 100%.		
2939 001	RS [K]: 1st	*EGB	[0 to 1275 / <b>80</b> / 5%/step]
2939 002	RS [K]: 2nd	*EGB	[0 to 1275 / <b>90</b> / 5%/step]
2939 003	RS [FC]: 1st	*EGB	[0 to 1275 / <b>85</b> / 5%/step]
2939 004	RS [FC]: 2nd	*EGB	[0 to 1275 / <b>100</b> / 5%/step]
2939 005	LS [K]: 1st	*EGB	[0 to 1275 / <b>50</b> / 5%/step]
2939 006	LS [K]: 2nd	*EGB	[0 to 1275 / <b>90</b> / 5%/step]
2939 007	LS [FC]: 1st	*EGB	[0 to 1275 / <b>75</b> / 5%/step]
2939 008	LS [FC]: 2nd	*EGB	[0 to 1275 / <b>100</b> / 5%/step]

[T2:ML:SP1] Transfer Roller Current: Correction for Humidity, ML Environment, Special paper1, (Process Speed, [Color]) LS: Low Speed, RS: Regular Speed 2948 **U** Note • The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD actually means 100%. \*EGB [0 to 1275 / **90** / 5%/step] 2948 001 RS [K]: 1st 2948 002 RS [K]: 2nd \*EGB [0 to 1275 / **90** / 5%/step] 2948 003 \*EGB [0 to 1275 / **95** / 5%/step] RS [FC]: 1st \*EGB 2948 004 RS [FC]: 2nd [0 to 1275 / **100** / 5%/step] \*EGB 2948 005 [0 to 1275 / 100 / 5%/step] LS [K]: 1st \*EGB 2948 006 LS [K]: 2nd [0 to 1275 / **85** / 5%/step] 2948 007 \*EGB [0 to 1275 / **90** / 5%/step] LS [FC]: 1st 2948 008 LS [FC]: 2nd \*EGB [0 to 1275 / **90** / 5%/step]

	[T2:ML:GL2] Transfer Roller Current: Correction for Humidity, ML Environment, Glossary paper2,			
2949	(Process Speed, [Color]) LS: Low Speed, RS: Regular Speed			
	<ul> <li>• The value displayed on the LCD is different from these SP's values. For example "20%" on the LCD actually means 100%.</li> </ul>			
2949 001	RS [K]: 1 st	*EGB	[0 to 1275 / <b>90</b> / 5%/step]	
2949 002	RS [K]: 2nd	*EGB	[0 to 1275 / <b>95</b> / 5%/step]	
2949 003	RS [FC]: 1st	*EGB	[0 to 1275 / <b>95</b> / 5%/step]	
2949 004	RS [FC]: 2nd	*EGB	[0 to 1275 / <b>100</b> / 5%/step]	
2949 005	LS [K]: 1st	*EGB	[0 to 1275 / <b>75</b> / 5%/step]	
2949 006	LS [K]: 2nd	*EGB	[0 to 1275 / <b>95</b> / 5%/step]	
2949 007	LS [FC]: 1st	*EGB	[0 to 1275 / <b>90</b> / 5%/step]	
2949 008	LS [FC]: 2nd	*EGB	[0 to 1275 / <b>100</b> / 5%/step]	

2958	[T2:MH:SP1] Transfer Roller Current: Correction for Humidity, MH Environment, Special paper 1,  (Process Speed, [Color]) LS: Low Speed, RS: Regular Speed  Note		
	<ul> <li>The value displayed on the LCD is different from these SP's values. For exa "20%" on the LCD actually means 100%.</li> </ul>		
2958 001	RS [K]: 1st	*EGB	[0 to 1275 / <b>100</b> / 5%/step]
2958 002	RS [K]: 2nd	*EGB	[0 to 1275 / <b>100</b> / 5%/step]
2958 003	RS [FC]: 1st	*EGB	[0 to 1275 / <b>175</b> / 5%/step]
2958 004	RS [FC]: 2nd	*EGB	[0 to 1275 / <b>115</b> / 5%/step]
2958 005	LS [K]: 1st	*EGB	[0 to 1275 / <b>110</b> / 5%/step]
2958 006	LS [K]: 2nd	*EGB	[0 to 1275 / <b>110</b> / 5%/step]
2958 007	LS [FC]: 1st	*EGB	[0 to 1275 / <b>120</b> / 5%/step]
2958 008	LS [FC]: 2nd	*EGB	[0 to 1275 / <b>120</b> / 5%/step]

2959	[T2:MH:GL2] Transfer Roller Current: Correction for Humidity, MH Environment, Glossary paper2, (Process Speed, [Color]) LS: Low Speed, RS: Regular Speed  ◆ Note  • The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD actually means 100%.		
2959 001	RS [K]: 1st	*EGB	[0 to 1275 / <b>100</b> / 5%/step]
2959 002	RS [K]: 2nd	*EGB	[0 to 1275 / <b>115</b> / 5%/step]
2959 003	RS [FC]: 1st	*EGB	[0 to 1275 / <b>130</b> / 5%/step]
2959 004	RS [FC]: 2nd	*EGB	[0 to 1275 / <b>130</b> / 5%/step]
2959 005	LS [K]: 1st	*EGB	[0 to 1275 / <b>115</b> / 5%/step]
2959 006	LS [K]: 2nd	*EGB	[0 to 1275 / <b>125</b> / 5%/step]
2959 007	LS [FC]: 1st	*EGB	[0 to 1275 / <b>160</b> / 5%/step]
2959 008	LS [FC]: 2nd	*EGB	[0 to 1275 / <b>175</b> / 5%/step]

[T2:HH:SP1] Transfer Roller Current: Correction for Humidity, HH Environment, Special paper1, (Process Speed, [Color]) LS: Low Speed, RS: Regular Speed 2968 **U** Note • The value displayed on the LCD is different from these SP's values. For example, "20%" on the LCD actually means 100%. \*EGB 2968 001 RS [K]: 1st [0 to 1275 / **115** / 5%/step] 2968 002 RS [K]: 2nd \*EGB [0 to 1275 / **115** / 5%/step] 2968 003 \*EGB [0 to 1275 / **205** / 5%/step] RS [FC]: 1st \*EGB 2968 004 RS [FC]: 2nd [0 to 1275 / **125** / 5%/step] \*EGB 2968 005 [0 to 1275 / **120** / 5%/step] LS [K]: 1st \*EGB 2968 006 LS [K]: 2nd [0 to 1275 / **120** / 5%/step] 2968 007 \*EGB [0 to 1275 / **140** / 5%/step] LS [FC]: 1st 2968 008 LS [FC]: 2nd \*EGB [0 to 1275 / **135** / 5%/step]

	[T2:HH:GL2] Transfer Roller Current: Correction for Humidity, HH Environment, Glossary paper2,			
2969	(Process Speed, [Color]) LS: Low Speed, RS: Regular Speed			
	Note  The value displayed or	a tha ICD i	is different from these SP's values. For example	
	<ul> <li>The value displayed on the LCD is different from these SP's values. For ex "20%" on the LCD actually means 100%.</li> </ul>			
2969 001	RS [K]: 1 st	*EGB	[0 to 1275 / <b>120</b> / 5%/step]	
2969 002	RS [K]: 2nd	*EGB	[0 to 1275 / <b>135</b> / 5%/step]	
2969 003	RS [FC]: 1st	*EGB	[0 to 1275 / <b>150</b> / 5%/step]	
2969 004	RS [FC]: 2nd	*EGB	[0 to 1275 / <b>165</b> / 5%/step]	
2969 005	LS [K]: 1st	*EGB	[0 to 1275 / <b>125</b> / 5%/step]	
2969 006	LS [K]: 2nd	*EGB	[0 to 1275 / <b>150</b> / 5%/step]	
2969 007	LS [FC]: 1st	*EGB	[0 to 1275 / <b>185</b> / 5%/step]	
2969 008	LS [FC]: 2nd	*EGB	[0 to 1275 / <b>200</b> / 5%/step]	

2971	[T2:Size3] Transfer Roller Current: Correction for Humidity, Size3 (Process Speed, [Color]) LS: Low Speed, RS: Regular Speed				
2971 001	LL/1st *EGB [0 to 100 / 100 / 1%/step]				
2971 002	LL/2nd	*EGB	[0 to 100 / <b>70</b> / 1%/step]		
2971 003	MM/1st	*EGB	[0 to 100 / <b>100</b> / 1%/step]		
2971 004	MM/2nd	*EGB	[0 to 100 / <b>60</b> / 1%/step]		
2971 005	HH/1st	*EGB	[0 to 100 / <b>100</b> / 1%/step]		
2971 006	HH/2nd	*EGB	[0 to 100 / <b>65</b> / 1%/step]		

## SP3-XXX (Process)

3001	[Vt Display] Vt Display ([Color])			
3001 001	[K]			
3001 002	[M]	*EGB	Displays the output voltage of TD sensor for each color.	
3001 003	[C]	*EGB	[0.00 to 5.00 / <b>0.01</b> / 0.01 V/step]	
3001 004	[Y]	*EGB		

3002	[Vcnt Current] Current Vcnt Display ([Color])		
3002 001	[K]	*EGB	
3002 002	[M]	*EGB	Displays the current Vcnt for each color.
3002 003	[C]	*EGB	[0.00 to 5.00 / <b>3.00</b> / 0.01 V/step]
3002 004	[Y]	*EGB	
	[Vcnt Initial] Initial Vcnt Display ([Color])		
3002 005	[K]	*EGB	
3002 006	[M]	*EGB	Displays the initial Vcnt for each color.
3002 007	[C]	*EGB	[0.00 to 5.00 / <b>3.00</b> / 0.01 V/step]
3002 008	[Y]	*EGB	

3003	[Vtref Current] Current Vtref Display ([Color])			
3003 001	[K]	*EGB		
3003 002	[M]	*EGB	Displays the current Vtref for each color.	
3003 003	[C]	*EGB	[0.00 to 5.00 / <b>3.00</b> / 0.01 V/step]	
3003 004	[Y]	*EGB		
	[Vtref Initial] Initial Vtref Display ([Color])			
3003 005	[K]	*EGB		
3003 006	[M]	*EGB	Displays the initial Vtref for each color.	
3003 007	[C]	*EGB	[0.00 to 5.00 / <b>3.00</b> / 0.01 V/step]	
3003 008	[Y]	*EGB		

3011	[T. Sensor Init.] Toner Density Sensor Initial Setting (Agitation Time, TS Target: Toner Sensor Target Value, [Color])		
3011 001 3011 002	Agitation: [K] Agitation: [M]	*EGB	Adjusts the agitation time for the developer for each color.
3011 003	Agitation: [C] Agitation: [Y]	*EGB	[0 to 300 / <b>65</b> / 1 sec/step]
3011 005	TD Target: [K] TD Target: [M]	*EGB	Adjusts the TS initial target voltage for each color.
3011 007	TD Target: [C] TD Target: [Y]	*EGB	[0.00 to 5.00 / <b>2.80</b> / 0.01 V/step]

3021	[Vt Shift] Vt Shift Setting ([Color])		
3021 001	[K]	*EGB	
3021 002	[M]	*EGB	Adjusts the Vt shift rate for each color.
3021 003	[C]	*EGB	[0.00 to 5.00 / <b>0.90</b> / 0.01 V/step]
3021 004	[Y]	*EGB	

3032	[Vcnt Response] DFU		
3032 001	[K]	*EGB	
3032 002	[M]	*EGB	Adjusts the Vcnt correction coefficient for each color.
3032 003	[C]	*EGB	[1.00 to 5.00 / <b>3.71</b> / 0.01 V/step]
3032 004	[Y]	*EGB	
3032 005	Max	*EGB	Adjusts the maximum Vcnt correction coefficient. [1.00 to 5.00 / <b>4.30</b> / 0.01 V/step]
3032 006	Min	*EGB	Adjusts the minimum Vcnt correction coefficient.  [1.00 to 5.00 / 3.50 / 0.01 V/step]

3041	[Vtref] Vtref Setting ([Color])			
3041 001	Lower Limit: [K]	*EGB		
3041 002	Lower Limit: [M]	*EGB	Sets the lower limit Vtref voltage for each color.	
3041 003	Lower Limit: [C]	*EGB	[0.10 to 5.00 / <b>1.60</b> / 0.01 V/step]	
3041 004	Lower Limit: [Y]	*EGB		
3041 005	Upper Limit: [K]	*EGB	DFU	
3041 006	Upper Limit: [M]	*EGB		
3041 007	Upper Limit: [C]	*EGB	Sets the maximum limit Vtref voltage for each color.  [0.10 to 5.00 / 3.50 / 0.01 V/step]	
3041 008	Upper Limit: [Y]	*EGB	[0.10 10 0.00 / 0.00 / 0.01 4/ siep]	

3042	[Vtref] Vtref Correction Setting ([Color]) DFU		
3042 001	Mode	*EGB	Sets the Vtref correction.  [0 or 1 / 0 / -] Alphanumeric  0: On, 1: Off
3042 002	Step [K]	*EGB	
3042 003	Step [M]	*EGB	Adjusts the Vtref correction step for each color.
3042 004	Step [C]	*EGB	[0.00 to 1.00 / <b>0.10</b> / 0.01 V/step]

3042 005	Step [Y]	*EGB	
3042 006	Adj. Remain: [K]		
3042 007	Adj. Remain: [M]		Displays the remaining Vtref value for each color.
3042 008	Adj. Remain: [C]		[-5.00 to 5.00 / - / 0.01 V/step]
3042 009	Adj. Remain: [Y]		
3042 014	Change Step: [K]	*EGB	
3042 015	Change Step: [M]	*EGB	Adjusts the density change rate of the ID sensor pattern for each color.
3042 016	Change Step: [C]	*EGB	[0 to 100 / <b>15</b> / 1%/step]
3042 017	Change Step: [Y]	*EGB	

3051	[Vt Thr.Setting] Vt Threshold Setting ([Color])			
3051 001	Low Vt Thr.:[K]	*EGB		
3051 002	Low Vt Thr.:[M]	*EGB	Sets the threshold of the lower limit Vt voltage for each color.	
3051 003	Low Vt Thr.:[C]	*EGB	[0.10 to 5.00 / <b>2.00</b> / 0.01 V/step]	
3051 004	Low Vt Thr.:[Y]	*EGB		
3051 005	High Vt Thr.:[K]	*EGB	DFU	
3051 006	High Vt Thr.:[M]	*EGB	Sets the threshold of the upper limit Vt voltage for	
3051 007	High Vt Thr.:[C]	*EGB	each color.	
3051 008	High Vt Thr.:[Y]	*EGB	[0.10 to 5.00 / <b>3.00</b> / 0.01 V/step]	

3101	[P. Sensor Patt.] ID Sensor Pattern Setting ([Color])		
3101 001	Change Value: [K]	*EGB	
3101 002	Change Value: [M]	*EGB	Displays the density change rate of the ID sensor pattern for each color.
3101 003	Change Value: [C]	*EGB	[-100 to 100 / <b>0</b> / 1%/step]
3101 004	Change Value: [Y]	*EGB	

3102	[P. Sensor Patt.] ID Sensor Pattern Setting ([Color])
------	---

3102 001	Change Value: [K]	*EGB	
3102 002	Change Value: [M]	*EGB	Displays the toner amount change of the ID sensor pattern for each color.
3102 003	Change Value: [C]	*EGB	[-1.000 to 1.000 / <b>0</b> / 0.001 mg/cm <sup>2</sup> /step]
3102 004	Change Value: [Y]	*EGB	

3103	[P. Sensor Patt.] ID Sensor Pattern Setting ([Color]) DFU		
3103 001	Pot.Corr.Val: [K]	*EGB	
3103 002	Pot.Corr.Val: [M]	*EGB	Stores the delta Vcnt (current Vcnt - initial Vcnt)
3103 003	Pot.Corr.Val: [C]	*EGB	[-500 to 500 / <b>0</b> / 1 V/step]
3103 004	Pot.Corr.Val: [Y]	*EGB	

3104	[P. Sensor Patt.] ID Sensor Pattern Setting ([Color]) DFU		
3104 001	m/a Corr.Step:[K]	*EGB	
3104 002	m/a Corr.Step:[M]	*EGB	Adjusts the change amount of toner at the density change rate of the ID sensor pattern.
3104 003	m/a Corr.Step:[C]	*EGB	[0 to 0.250 / <b>0.015</b> / 0.001 mg/cm <sup>2</sup> /step]
3104 004	m/a Corr.Step:[Y]	*EGB	

3111	[Voff Display] Vsp-offset Display		
3111 001	Regular	*EGB	Displays the Vsp-offset regular voltage. [0.00 to 5.00 / 0.00 / 0.01 V/step]
3111 002	Diffusion	*EGB	Displays the Vsp-offset diffusion voltage. [0.00 to 5.00 / 0.00 / 0.01 V/step]

3121	[Vsg Display] Vsg Display		
3121 001	Regular	*EGB	Displays the Vsp regular voltage.  [0.00 to 5.00 / 0.00 / 0.01 V/step]
3121 002	Diffusion		Displays the Vsp diffusion voltage.  [0.00 to 5.00 / 0.00 / 0.01 V/step]

3131	[Lps Display] Lps Display		
3131 001	Lps	*EGB	Displays the value of lps.  [0 to 511 / 0 / 1/step]

3141	[Vmin Display]		
3141 001	[K]	*EGB	Displays the Vmin voltage for each color.
3141 005	[Cl]	*EGB	[0.00 to 5.00 / <b>0.00</b> / 0.01 V/step]

3142	[Kx Display]		
3142 001	Min	*EGB	Displays the minimum Kx. [0.0000 to 1.0000 / <b>0.0000</b> / 0.0001/step]

3143	[K5 Display] ([Color])		
3143 002	[M]	*EGB	
3143 003	[C]	*EGB	Displays the P.sensor K5 for each color. [0.0000 to 5.0000 / 1.2500 / 0.0001/step]
3143 004	[Y]	*EGB	[[0.0000

3145	[Vmin]		
3145 001	Upper Limit	*EGB	DFU Adjusts the maximum Vmin. [0.00 to 5.00 / 0.05 / 0.01 V/step]

3146	[K2]		
3146 001	Upper Limit	*EGB	DFU Adjusts the upper limit. [0.0000 to 1.0000 / 0.1500 / 0.0001/step]
3146 002	Lower Limit	*EGB	DFU Adjusts the lower limit. [0.0000 to 1.0000 / 0.0500 / 0.0001/step]

3147	[K5]		
3147 001	Upper Limit	*EGB	DFU Adjusts the upper limit. [0.0000 to 5.0000 / 2.5000 / 0.0001/step]
3147 002	Lower Limit	*EGB	DFU Adjusts the lower limit.  [0.0000 to 5.0000 / 0.7500 / 0.0001/step]

3148	[P sensor Prm.] ID sensor Parameter		
3148 001	setting	*EGB	DFU
			[0 to 8.0000 / <b>4.600</b> / 0.001/step]

3151	[Vsg Display] ([Color])		
3151 001	Regular: [K]	*EGB	
3151 002	Regular: [M]	*EGB	Displays the Vsg output from ID sensor for each mode.
3151 003	Regular: [C]	*EGB	[0.00 to 5.00 / <b>0.00</b> / 0.01 V/step]
3151 004	Regular: [Y]	*EGB	
3151 005	Diffusion: [K]	*EGB	
3151 006	Diffusion: [M]	*EGB	Displays the Vsg output from ID sensor for each mode.
3151 007	Diffusion: [C]	*EGB	[0.00 to 5.00 / <b>0.00</b> / 0.01 V/step]
3151 008	Diffusion: [Y]	*EGB	

3161	[P. Pattern] ID Sensor Pattern Setting ([Color]) DFU		
3161 001	Target Value: [K]	*EGB	
3161 002	Target Value: [M]	*EGB	Adjusts the target density of ID sensor pattern for each mode.
3161 003	Target Value: [C]	*EGB	[0 to 100 / <b>50</b> / 1%/step]
3161 004	Target Value: [Y]	*EGB	
3161 005	Target Switch	*EGB	[0 or 1 / <b>0</b> / - ] <b>Not used</b>

3162	[P. Pattern] ID Sensor Pattern Setting ([Color])		
3162 001	M/A: [K]	*EGB	
3162 002	M/A: [M]	*EGB	Displays the toner amount of the ID sensor pattern for each mode.
3162 003	M/A: [C]	*EGB	[0 to 1.000 / <b>0</b> / 0.001 mg/cm <sup>2</sup> /step]
3162 004	M/A: [Y]	*EGB	

3171	[P. Pattern] ID Sensor Pattern Setting ([Color]) DFU		
3171 001	Interval: [K]	*EGB	Adjusts the interval of making the ID sensor pattern.  [0 to 200 / 150 / 1 sheet/step]
3171 002	Interval: [MCY]	*EGB	[0 to 200 / <b>200</b> / 1 sheet/step]

3202	[Toner Near End] Toner Near End ([Color])		
3202 001	Counter: [K]	*EGB	
3202 002	Counter: [M]	*EGB	Displays the counter of the toner near end for each mode.
3202 003	Counter: [C]	*EGB	[0 to 30 / <b>0</b> / 1/step]
3202 004	Counter: [Y]	*EGB	

3301	[Toner Mode] Toner Supply Control ([Color])		
3301 001	[K]	*EGB	Selects the method of the toner suppy for each
3301 002	[M]	*EGB	mode. [0 to 3 / <b>3</b> / 1/step]
3301 003	[C]	*EGB	0: Fixed, 1: Coefficient (Pixel),
3301 004	[Y]	*EGB	2: Coefficient (TD sensor), 3: Hybrid  See 'Detailed Section Descriptions – Process  Control – Toner Near-end/Toner End Detection'

3302	[Toner Mode] Toner Supply Control ([Color])		
3302 001	Fixed Rate: [K]	*EGB	Adjusts the toner supply rate for each mode. These
3302 002	Fixed Rate: [M]	*EGB	SPs are enabled only when SP3301 for each color is set to "0".
			[0 to 100 / <b>5</b> / 1%/step]

3302 003	Fixed Rate: [C]	*EGB
3302 004	Fixed Rate: [Y]	*EGB

3303	[Toner Mode] Toner Supply Control ([Color])		
3303 001	T. Supply Rate: [K]	*EGB	
3303 002	T. Supply Rate: [M]	*EGB	Displays the toner supply rate for each mode.
3303 003	T. Supply Rate: [C]	*EGB	[0 to 100 / 0 / 1%/step]
3303 004	T. Supply Rate: [Y]	*EGB	

3304	[Toner Mode] Toner Supply Control ([Color])		
3304 001	Upper Limit: [K]	*EGB	
3304 002	Upper Limit: [M]	*EGB	Adjusts the upper limit of toner supply rate for each mode.
3304 003	Upper Limit: [C]	*EGB	[0 to 100 / <b>100</b> / 1%/step]
3304 004	Upper Limit: [Y]	*EGB	
3304 005	Lower Limit: [K]	*EGB	
3304 006	Lower Limit: [M]	*EGB	Adjusts the lower limit of toner supply rate for each mode.
3304 007	Lower Limit: [C]	*EGB	[0 to 800/100 / 10 msec/step]
3304 008	Lower Limit: [Y]	*EGB	

3305	[Toner Mode] Toner Supply Control ([Color])				
3305 001	Convert Time: [K]	*EGB			
3305 002	Convert Time: [M]	*EGB	Adjusts the coefficient for calculating the toner supply time.		
3305 003	Convert Time: [C]	*EGB	[1.0 to 20.0 / <b>3.45</b> / 0.01 msec/mg /step]		
3305 004	Convert Time: [Y]	*EGB			

3306	[Toner Mode] Toner Supply Control ([Color])		
3306 001	Coefficient 1: [K]	LOD	Adjusts the time of the toner supply in proportional control mode (Pixel).

3306 002	Coefficient 1: [M]	*EGB	
3306 003	Coefficient 1: [C]	*EGB	[0.10 to 5.00 / <b>1.00</b> / 0.01/step]
3306 004	Coefficient 1: [Y]	*EGB	
3306 005	Coefficient 2: [K]	*EGB	
3306 006	Coefficient 2: [M]	*EGB	Adjusts the time of the toner supply in proportional control mode (TD sensor).
3306 007	Coefficient 2: [C]	*EGB	[0.10 to 5.00 / <b>0.3</b> / 0.01/step]
3306 008	Coefficient 2: [Y]	*EGB	
3306 009	Coefficient 3: [K]	*EGB	
3306 010	Coefficient 3: [M]	*EGB	Adjusts the time of the toner supply in hybrid control mode.
3306 011	Coefficient 3: [C]	*EGB	[0.10 to 5.00 / <b>0.1</b> / 0.01/step]
3306 012	Coefficient 3: [Y]	*EGB	
3306 013	Coefficient 4: [K]	*EGB	
3306 014	Coefficient 4: [M]	*EGB	Adjusts the time of the toner supply in hybrid control mode.
3306 015	Coefficient 4: [C]	*EGB	[0.10 to 5.00 / <b>0.1</b> / 0.01/step]
3306 016	Coefficient 4: [Y]	*EGB	
3306 017	Coefficient 5: [K]	*EGB	
3306 018	Coefficient 5: [M]	*EGB	Adjusts the time of the toner supply in hybrid control mode.
3306 019	Coefficient 5: [C]	*EGB	[0.10 to 5.00 / <b>1.21</b> / 0.01/step]
3306 020	Coefficient 5: [Y]	*EGB	

3401	[Toner End Detec] Toner End Detection		
3401 001		*FGB	[0 or 1 / <b>0</b> / -] 0: Detected, 1: Not detected

3411	[Toner Near End] ([Color]) DFU		
3411 001	Min. Print: [K]	*EGB	Minimum: This is the minimum number of prints after
3411 002	Min. Print: [CI]	*EGB	the toner end sensor detects toner end.

3411 003	Max. Print: [K]	*EGB	Maximum: For low image coverage, more sheets can be printed. This sets the maximum that can be
3411 004	Max. Print: [Cl]	*EGB	printed after toner end is detected.  [0 to 750 / 0 / 1/step] <b>DFU</b>
3411 005	Pixel: [K]	*EGB	Adjusts the number of sheets (A4), which the pixel
3411 006	Pixel: [Cl]	*EGB	area is converted into for the toner end after detecting the toner near end.  [0 to 100 / 0 / 1 sheet/step]

3501	[Process Cont.] Process Control			
3501 001	ON/ OFF	*EGB	Sets the method of the process control.  [0 to 3 / 0 / 1/step]  0: Auto, 1: Fixed	
			2: Auto + LS, 3: Auto (Table fixed)	
			Do not use settings 2 and 3.	

3511	[Pntr. Display] Process Control Table Display ([Color])			
3511 001	[K]	*EGB		
3511 002	[M]	*EGB	Displays the current process control table for each mode.	
3511 003	[C]	*EGB	[1 to 30 / 15 / 1/step]	
3511 004	[Y]	*EGB		

3521	[DEV.Potential] Development Potential Setting ([Color])		
3521 001	[K]	*EGB	
3521 002	[M]	*EGB	Displays the development bias for each color.
3521 003	[C]	*EGB	[1 to 800 / <b>0</b> / 1 V/step]
3521 004	[Y]	*EGB	

;	3522	[DEV.Potential] Development Potential Setting ([Color])		
;	3522 001	MAX [K]	*EGB	Adjusts the maximum development bias for each
;	3522 002	MAX [M]	*EGB	color.

3522 003	MAX [C]	*EGB	[1 to 800 / <b>450</b> / 1 V/step]	
3522 004	MAX [Y]	*EGB	[1.16 666) 166) 1 (7.66p]	

3523	[DEV.Potential] Development Potential Setting ([Color])			
3523 001	MIN [K]	*EGB		
3523 002	MIN [M]	*EGB	Adjusts the minimum development bias for each color.	
3523 003	MIN [C]	*EGB	[1 to 800 / <b>150</b> / 1 V/step]	
3523 004	MIN [Y]	*EGB		

3531	[M/A Target] ([Color])		
3531 001	[K]	*EGB	Adjusts the maximum toner target M/A for each mode.  [0.000 to 1.000 / 0.53 / 0.001 mg/step]
3531 002	[M]	*EGB [0.000 to 1.000 / <b>0.500</b> / 0.001 mg/s	
3531 003	[C]		[0.000 to 1.000 / <b>0.500</b> / 0.001 mg/step]
3531 004	[Y]	*EGB	

3541	[TD Setting] Toner Density Adjustment Setting		
3541 001		*EGB	[ 0 or 1 / <b>0</b> / -] 0: On, 1: Off

3551	[PC SelfChk] Process Control Self-check		
3551 001	Job End 1: [K]	*EGB	At the end of a job, process control is done after the
3551 002	Job End 1: [Cl]	*EGB	interval of time that is set with SP 3555 001, if this number of pages was printed after the previous process control.  [0 to 2000 / 450 / 1 page/step]
3551 003	Job End 2: [K]	*EGB	At the end of a job, process control is done
3551 004	Job End 2: [Cl]	*EGB	immediately, if this number of pages was printed after the previous process control.  [0 to 2000 / 450 / 1 page/step]

3551 005	Job End 3: [K]	*EGB	In the middle of a job, printing stops and process
3551 006	Job End 3: [CI]	^EGB	control is done if the number of pages in the job gets to this number.
			[0 to 2000 / <b>500</b> / 1 page/step]

3553	[PC SelfChk]		
3553 001	Idle Time	*EGB	Adjusts the threshold time for the self check without the machine operation.  [0 to 24 / 6 / 0.1 Hour/step]

3554	[Pow. ON SelfChk] Power On Self-check			
3554 001	Time	*EGB	Adjusts the threshold (Time) of the process control from turning the power on.  [0 to 24 / 6.0 / 0.1 H/step]	
3554 002	Temp./ Humidity	*EGB	Adjusts the threshold (Temperature/ Humidity) of the process control.  [0 to 100 / 6 / 0.1 g/m <sup>3</sup> /step]	
3554 003	Time 2	*EGB	Adjusts the threshold (Time) for developer mixing after turning the power on.  [0 to 200.0 / 36.0 / 0.1 H/step]	
3554 004	Temp./ Humidity 2	*EGB	Adjusts the threshold (Temperature/ Humidity) for developer mixing after turning the power on.  [0 to 100 / 6.0 / 0.1 g/m <sup>3</sup> /step]	

3555	[S.Chk Stand-by] Process Control Self-check Stand-by Time			
3555 001		*EGB	Waiting time for the next job command after job end. If the next job command comes before this interval expires, the "JOB END 1" process control is not done. (SP3551 001 and 002)  [0 to 30 / 0 / 1 / sec]	

3556	[Image Process.] Display the Time of Last Image Processing		
3556 001	Time (Year)	*EGB	[0 to 99 / <b>0</b> / 1 year/step]

3556 002	Time (Month)	*EGB	[1 to 12 / 1 / 1 month/step]
3556 003	Time (Date)	*EGB	[1 to 31 / <b>1</b> / 1 day/step]
3556 004	Time (Hour)	*EGB	[0 to 23 / <b>0</b> / 1 hour/step]
3556 005	Time (Minute)	*EGB	[0 to 59 / <b>0</b> / 1 minute/step]

3557	[Image Process.] Image Processing		
3557 001	Temperature	*EGB	[-127 to 127 / <b>0.0</b> / 0.1°C/step]
3557 002	Humidity	*EGB	[0 to 100 / 0 / <b>0.1</b> % RH/step]
3557 003	A. Humidity	*EGB	[0 to 100 / 0 / <b>0.1</b> g/m <sup>3</sup> /step]/step]

3558	[No Use SelfChk] No Use Self-check		
3558 001	Maximum Repeat	*EGB	Adjusts the maximum repeat times of the process control.  [0 to 100 / 10 / 1 time/step]

3561	[Dev g Display] Development gamma Display ([Color])		
3561 001	[K]	*EGB	
3561 002	[M]	*EGB	Displays the development gamma measured during the process control self-check.
3561 003	[C]	*EGB	[0.00 to 5.00 / <b>0.00</b> / 0.01/step]
3561 004	[Y]	*EGB	

3562	[Vk Display] ([Color])		
3562 001	[K]	*EGB	
3562 002	[M]	*EGB	Displays the current Vk value.
3562 003	[C]	*EGB	[-300 to 300 / <b>0</b> / 1 V/step]
3562 004	[Y]	*EGB	

3573	[Vd Display] ([Color])		
3573 001	[K]	*EGB	Displays the current Vd value.

3573 002	[M]	*EGB	
3573 003	[C]	*EGB	[0 to 1000 / <b>0</b> / 1 V/step]
3573 004	[Y]	*EGB	

3574	[VI Display] ([Color])		
3574 001	[K]	*EGB	
3574 002	[M]	*EGB	Displays the current VI value.
3574 003	[C]	*EGB	[0 to 1000 / <b>0</b> / 1 V/step]
3574 004	[Y]	*EGB	

3575	[Vb Display] (Process Speed,[Color]) RS: Regular speed, LS: Low speed		
3575 001	RS: [K]	*EGB	
3575 002	RS: [M]	*EGB	
3575 003	RS: [C]	*EGB	
3575 004	RS: [Y]	*EGB	Displays the current Vb value for each mode.
3575 005	LS: [K]	*EGB	[0 to 800 / <b>350</b> / 1 V/step]
3575 006	LS: [M]	*EGB	
3575 007	LS: [C]	*EGB	
3575 008	LS: [Y]	*EGB	

3576	[Charge Bias] Charge Roller Bias			
3370	(DC, Process Speed,[Color]) RS: Regular speed, LS: Low speed			
3576 001	DC: RS: [K]	*EGB		
3576 002	DC: RS: [M]	*EGB	Displays the current charge roller DC bias of the development unit for each mode.	
3576 003	DC: RS: [C]	*EGB	[0 to 999 / <b>585</b> / 1 V/step]	
3576 004	DC: RS: [Y]	*EGB		

3576 005	DC: LS: [K]	*EGB
3576 006	DC: LS: [M]	*EGB
3576 007	DC: LS: [C]	*EGB
3576 008	DC: LS: [Y]	*EGB

3577	[Charge Bias] Charge Roller Bias  (AC, Process Speed,[Color]) RS: Regular speed, LS: Low speed		
3577 001	AC: RS: [K]	*EGB	
3577 002	AC: RS: [M]	*EGB	
3577 003	AC: RS: [C]	*EGB	
3577 004	AC: RS: [Y]	*EGB	Displays the current charge roller AC bias of the development unit for each mode.
3577 005	AC: LS: [K]	*EGB	[0.0 to 3.0 / <b>1.9</b> / 0.001 kV/step]
3577 006	AC: LS: [M]	*EGB	
3577 007	AC: LS: [C]	*EGB	
3577 008	AC: LS: [Y]	*EGB	

3581	[LD Control] LD Power Control			
	Displays the current LD power rate for each mode.			
3581 001	LD: RS: [K]	*EGB		
3581 002	LD: RS: [M]	*EGB		
3581 003	LD: RS: [C]	*EGB		
3581 004	LD: RS: [Y]	*EGB	[10 + 200 / 100 / 19/ / +]	
3581 005	LD: LS: [K]	*EGB	[10 to 200 / <b>100</b> / 1%/step]	
3581 006	LD: LS: [M]	*EGB		
3581 007	LD: LS: [C]	*EGB		
3581 008	LD: LS: [Y]	*EGB		

	[Dev. Setup] Developer Initialization Setting				
3601	Adjusts the number of the sheet for the developer free run at the developer initializing feach color.				
3601 001	SheetSet: [K]	*EGB			
3601 002	SheetSet: [M]	*EGB	[0 to 100 / <b>20</b> / 1 shoot/storn]		
3601 003	SheetSet: [C]	*EGB	[0 to 100 / <b>20</b> / 1 sheet/step]		
3601 004	SheetSet: [Y]	*EGB			

3602	[Dev. Setup] Developer Initialization Setting			
	Adjusts the toner supply times for the developer initializing for each color.			
3602 001	SupplySet: [K]	*EGB		
3602 002	SupplySet: [M]	*EGB	[0. 20 / 20 / 1 / . ]	
3602 003	SupplySet: [C]	*EGB	[0 to 30 / <b>20</b> / 1 /step]	
3602 004	SupplySet: [Y]	*EGB		

3606	[Dev. Setup] Developer Initialization Setting DFU		
	Specifies the maximum times of developer initialization to adjust the proper toner density.		
3606 001	Repeat	*EGB	[1 to 20 / 5 / 1 /step]

3611	[Supply Thresh]			
3011	Adjusts the toner supply th	oner supply threshold for the toner density adjustment.		
3611 001	Normal: [K]	*EGB		
3611 002	Normal: [M]	*EGB	[1 to 800 / <b>420</b> / 1 V/step]	
3611 003	Normal: [C]	*EGB	[1 10 000 / <b>420</b> / 1 v / siep]	
3611 004	Normal: [Y]	*EGB		
3611 005	High Vt:[K]	*EGB	[], 000 (000 (1))(), 1	
3611 006	High Vt [M]	*EGB	[1 to 800 / <b>380</b> / 1 V/step]	

3611 007	High Vt [C]	*EGB
3611 008	High Vt [Y]	*EGB
3611 009	DEV.SetUp: [K]	*EGB
3611 010	DEV.SetUp [M]	*EGB
3611 011	DEV.SetUp [C]	*EGB
3611 012	DEV.SetUp [Y]	*EGB

3612	[Consume Thresh]				
3012	Adjusts the toner consume threshold for the toner density adjustment.				
3612 001	Normal: [M]	*EGB			
3612 002	Normal: [C]	*EGB	[1+- 900 / 220 / 1 \/ /+1		
3612 003	Normal: [Y]	*EGB	[1 to 800 / <b>220</b> / 1 V/step]		
3612 004	Normal:[K]	*EGB			
3612 005	Low Vt: [K]	*EGB			
3612 006	Low Vt: [M]	*EGB			
3612 007	Low Vt: [C]	*EGB			
3612 008	Low Vt: [Y]	*EGB	[1 to 900 / 250 / 1 V/ston]		
3612 009	DEV.SetUp: [K]	*EGB	[1 to 800 / <b>250</b> / 1 V/step]		
3612 010	DEV.SetUp [M]	*EGB			
3612 011	DEV.SetUp [C]	*EGB			
3612 012	DEV.SetUp [Y]	*EGB			

## [Low Resolution] (Threshold, [Color]) SP 3701-001 controls if the pixel count is used in hybrid toner supply mode or not. If this SP is 'on', it is used if the image coverage ratio for the page is below a threshold value (if the coverage is above this ratio, then the TD sensor is used). If this SP is 'off', then the TD sensor is always used. SP3701-002 to 005 control the threshold values for the image coverage ratio.

3701 001	Low Resolution	*EGB	[0 to 1 / <b>0</b> / -] 0: Off, 1: On
3701 002	Threshold: [K]	*EGB	
3701 003	Threshold: [M]	*EGB	[0 100 / 1 / 19/ /]
3701 004	Threshold: [C]	*EGB	[0 to 100 / <b>1</b> / 1%/step]
3701 005	Threshold: [Y]	*EGB	

3721	[Low Resolution] Toner Re	fresh Moc	le Setting in Low Image Coverage Ratio
3721 001	Toner Refresh Mode	*EGB	Enables or disables the toner refresh mode.  [0 or 1 / 0 / -]  0: On. 1: Off
3721 002	S: Toner Refresh	*EGB	Toner refresh mode is done if the percentage of pages that have low image coverage is larger than this threshold value.  [0 to 50 / 20 / 1%/step]
3721 003	Toner refresh coef.	*EGB	Toner refreshing coefficient: <b>DFU</b> [0 to 100 / 100 / 1%/step]
3721 004	Interval Bk	*EGB	Specifies the interval of the process control at low
3721 005	Interval Col	*EGB	coverage printing.  [0 to 65535 / <b>0</b> / 1 sheet/step]

3 <i>7</i> 31	[SUM.ImageArea]		
3731 001	[Bk]	*EGB	
3731 002	[M]	*EGB	Displays the total coverage for each color after the process control execution. This SP is cleared when
3731 003	[C]	*EGB	the process control is done.
3731 004	[Y]	*EGB	Value: pixel

3741	[Thr.SplyMthod]		
3741 001	[Bk]	*EGB	Adjusts the threshold for low coverage printing.
3741 002	[M]	*EGB	[0 to 255 / 1 / 1%/step]

3741 003	[C]	*EGB
3741 004	[Y]	*EGB

3801	[TD Initial] TD sensor Initialization ([Color]) DFU		
3801 001	[AII]		
3801 002	[CI]		
3801 003	[K]		Initializes the developer for each mode.
3801 004	[M]		Press the Enter key to execute the initialization after the machine asks "Execute?"
3801 005	[C]		
3801 006	[Y]		

3811	[Developer] Developer Initialization		
3811 001	All		Initializes all the developers.

3820	[Process Cont.] Process Control		
3820 001			Executes the process control.  Press the Enter key to execute the initialization after the machine asks "Execute?"

3821	[P Ctl Result] Process Cont	trol Result	
3821 001	1	*EGB	
3821 002	2	*EGB	
3821 003	3	*EGB	
3821 004	4	*EGB	Displays each logged process control result.  The ten most recent ones are shown. 3821 001 is
3821 005	5	*EGB	the most recent.
3821 006	6	*EGB	See 'Troubleshooting – Process Control Results'.
3821 007	7	*EGB	
3821 008	8	*EGB	

3821 009	9	*EGB
3821 010	10	*EGB

## SP5-XXX (Mode)

5001	[All Indicators On]		
5001 001		*CTL	Checks the LED on the operation panel.  O: Normal, 1: All lit

5024 [mm/inchDisplay]			
5024 001		*CTL	Sets units (mm or inch) for custom paper sizes.  [0 or 1 / 1 /-]  0: mm (EU/AS), 1: inch (NA)

5045	[Accounting count]		
5045 001	Counter Method	*CTL	Selects the counting method if the meter charge mode is enabled with SP5-930-001.  [0 to 2 / 1 / -]  O: Developments, 1: Pages, 2:Coverage range

5051	[Refill Toner Disp] Toner Refill Display		
5051 001	Refill Toner Disp	*CTL	Enable or disable the warning display when you install a toner bottle that was refilled by third party venders.  [O or 1 / 0 / -]  O: Enable, 1: Disable

5055	[Display IP address]		
5055 001	Display IP address	*CTL	Display or does not display the IP address on the LCD.  [0 or 1 / 0 / -]  0: Not display, 1: Display

5056	[Coverage Counter]		
5056 001	Coverage Counter	*CTL	Display or does not display the coverage counter.  [0 or 1 / 0 / -]  0: Not display, 1: Display

5150	[Bypass Long Paper] By-pass Long Paper		
5150 001	0: OFF, 1: ON	-	Lets or does not let the by-pass tray feed extra long paper (up to 1260 mm).  [0 or 1 / 0 / -]  0: Off, 1: On

5169	[CE Login]		
5169 001	CE Login	*CTL	Enables or disables the CE login.  [0 or 1 / 0 / -]  0: Off, 1: On

5302	[Set Time]		
5302 002	Time difference	*CTL#	Adjusts the RTC (real time clock) time setting for the local time zone.  [-1440 to 1440 / NA, EU, CH / 1 minute/step]  NA: -300, EU: 60, CH: 480

5307	[Summer Time]		
5307 001	ON/OFF	-	Enables or disables the summer time mode.  [0 to 1 / 0 / -]  0: Off, 1: On
5307 003	Rule Set(Start)	-	NA: <b>04100010</b> , EU: <b>035(4)00010</b> , ASIA: <b>105(4)00010</b>
	Specifies the start setting for the summer time mode.  1st and 2nd digits: The month. [1 to 12]  3rd digit: The week of the month. [1 to 5]  4th digit: The day of the week. [0 to 6 = Sunday to Saturday]		12] to 5]

	5th and 6th digits: The ho	ur. [00 to	23]			
	7th digit: The length of the advanced time. [0 to 9 / 1 hour /step]					
	8th digit: The length of the advanced time. [0 to $5 / 10$ minutes /step]					
	For example: 3500010 (EU default)					
	The timer is advanced by 1 hour at am 0:00 on the 5th Sunday in March					
	The digits are counted from the left.					
	Make sure that SP5-	307-1 is s	et to "1".			
5307 004	Rule Set(End)	-	NA: 105(4)60000, EU: 105(4)00000, ASIA: 03100000			
	Specifies the end setting for	or the sum	mer time mode.			
	There are 8 digits in this SP.					
	1st and 2nd digits: The month. [1 to 12]					
	3rd digit: The week of the month. [0 to 5]					
	4th digit: The day of the week. [0 to 6 = Sunday to Saturday]					
	5th and 6th digits: The ho	ur. [00 to :	23]			
	The 7th and 8 digits must	be set to "	00".			
	The digits are counter	d from the	e left.			
	Make sure that SP5-	307-1 is s	et to "1".			
	1					

5401	[Access Control]		
5401 200	SDK1 Unique ID	*CTL	"SDK" is the "Software Development Kit". These
5401 201	SDK1 Certification Method	*CTL	data can be converted from SAS (VAS) when installed or uninstalled. <b>DFU</b>
5401 210	SDK2 Unique ID	*CTL	
5401 211	SDK2 Certification Method	*CTL	
5401 220	SDK3 Unique ID	*CTL	
5401 221	SDK3 Certification Method	*CTL	

5404	[User Code Clear] User Code Counter Clear
------	---

5404 001 User Code Clear] -	Clears all counters for users.
-----------------------------	--------------------------------

5501	[PM Alarm Interval] PM Alarm Interval		
			Sets the PM alarm Interval. [0 to 9999 / 0 / 1k prints/step]
5501 001	Printout	*CTL	The alert is sent to the e-mail address that is specified for the system administrator using a browser and the built-in web server (Web Image Monitor).
			0: Disables the PM alarm
			When SP5-866-001 is set to "1", this SP is enabled.

5504	[Jam Alarm]		
5504 001	Jam Alarm	*CTL	Sets the jam alarm level. If a paper jam occurs, the jam alarm counter increases by +1. If no paper jam occurs while the set number of paper is output, the jam alarm counter decreases by -1. The jam alarm occurs when the jam alarm counter gets to +10.  [0 to 3 / 3 / 1/step]  0: Disables the jam alarm  1: 1.5K, 2: 3K, 3: 6K  The alert is sent to the e-mail address that is specified for the system administrator using a browser and the built-in web server (Web Image Monitor).  When SP5-866-001 is set to "1", this SP is enabled.

5505	[Error Alarm]		
5505 001	Error Alarm	*CTL	Sets the error alarm level. If an SC code occurs, the error alarm counter increases by +1. If no SC code occurs while the set number of paper is output, the jam alarm counter decreases by -1. The error alarm occurs when the error alarm counter reaches +5.  [0 to 255 / 30 / 1/step]  0: Disables the PM alarm  The alert is sent to the e-mail address that is specified for the system administrator using a browser and the built-in web server (Web Image Monitor).

When SP5-866-001 is set to "1", this SP is enabl	led.
--	------

5507	[Supply Alarm]		
5507 001	Paper Size	*CTL	Enables or disables the supply alarm.
5507 003	Toner	-	[0 to 1 / <b>0</b> / -] 0: Off, 1: On
5507 004	Maintenance Kit S		
5507 005	Drum Life Remain S		
5507 006	Waste Toner Bottle		
5507 007	Tensya Supply Al		
5507 128	Interval: Others	*CTL	Sets the paper supply alarm level. A paper supply
5507 133	Interval: A4	*CTL	alarm counter increases by +1 when a sheet of the related size is used. The paper supply alarm occurs
5507 134	Interval: A5	*CTL	when one of the paper supply alarm counters gets to the set value.
5507 142	Interval: B5	*CTL	[250 to 10000 / <b>1000</b> / 1/step]
5507 164	Interval: LG	*CTL	The alert is sent to the e-mail address that is specified
5507 166	Interval: LT	*CTL	for the system administrator using a browser and the built-in web server (Web Image Monitor).
5507 172	Interval: HLT	*CTL	When SP5-866-001 is set to "1", this SP is enabled.

	[SC/Alarm Setting]			
5515	Turns on or off the following SC alarm settings. These SP's are active when the CSS or NRS is enabled.			
5515 001	SC Call	*CTL	[0 or 1 / <b>0</b> / - ] 0: OFF, 1: ON	
5515 002	Service Parts Ne	*CTL	This SP activates the service parts near end call.  [0 or 1 / 0 / -] 0: OFF, 1: ON	
5515 003	Service Parts En	*CTL	This SP activates the service parts end call.  [0 or 1 / 0 / - ] 0: OFF, 1: ON	
5515 004	User Call	*CTL	[0 or 1 / 1 / - ] 0: OFF, 1: ON	
5515 006	Communication Te	*CTL	This SP activates the communication test call.	

			[0 or 1 / 1 / - ] 0: OFF, 1: ON
5515 007	Machine Infomat	*CTL	This SP activates the machine information call.  [0 or 1 / 1 / -] 0: OFF, 1: ON
5515 008	Alarm Notice	*CTL	[0 or 1 / <b>0</b> / - ] 0: OFF, 1: ON
5515 009	Non Genuine Tonn	*CTL	This SP activates the non genuine toner bottle call.  [0 or 1 / 1 / -] 0: OFF, 1: ON
5515 010	Supply Automatic	*CTL	This SP activates the automatic supply order call.  [0 or 1 / 0 / -] 0: OFF, 1: ON
5515 011	Supply Managemen	*CTL	This SP activates the supply management call.  [0 or 1 / 0 / - ] 0: OFF, 1: ON

5801	[Memory Clear]	[Memory Clear]		
5801 001	All	-	Resets the SP5801-002 through 016 except the security related data in 003, 010, 011 and 015. These cannot be reset with SP mode.	
5801 002	Engine	-	Resets or deletes the engine-related data.	
5801 003	SCS	-	Clears the system settings.	
5801 004	IMH	-	Clears IMH data. <b>DFU</b>	
5801 005	MCS	-	Clears MCS data. <b>DFU</b>	
5801 008	Printer	-	Clears the printer application settings.	
5801 010	GWWS/NFA	-	Clears the web service data and the network application data.	
5801 011	NCS	-	Initializes the system default and interface settings (IP address also), SmartNetMonitor for Admin, WebStatusMonitor settings, and the TELNET settings.	
5801 014	DCS Setting	-	Resets or deletes the DCS-related data.	
5801 015	Clear UCS Setting	-	Resets or deletes the UCS-related data.	
5801 016	MIRS Setting	-	Resets or deletes the MIRS-related data.	
5801 017	ccs	-	Resets or deletes the CSS-related data. <b>FA</b>	

5801 01	SRM Memory Clr	-	Resets or deletes the SRM-related data.
5801 01	LCS	-	Resets or deletes the LCS-related data.

5802	[Engine Free Run]	
5802 001		Performs a free run on the printer engine.  • The machine starts free run in the same condition as the sequence of A4/LT printing from the 1st tray. Therefore, paper should be loaded in the 1st tray, but paper is not fed.  • The main switch has to be turned off and on after using the free run mode for a test.

5803	[Input Check]	
	See 'Input Check Table'	

5804	[Output Check]	
	See 'Output Check Table'	

5808	[Destination] Destination Code Display		
5808 001	Destin. Code Disp	*EGB	Displays the destination code.  [0 to 4 / 0 / 1/step] Alphanumeric  0: DOM (Japan), 1: OTHER, 2: ASIA  3: ERP (Europe). 4: USA

5810	[Fusing SC Reset]	
5810 001	Fusing SC Reset	Resets a type A service call condition. Turn the main power switch off and on after resetting the SC code.

5811	[Serial No.] Machine Serial No. Setting		
5811 001	Setting	*EGB	[SSP]

			Sets the machine serial number.
5811 002	Display	*EGB	Displays the machine serial number.


5812	[Service TEL]	[Service TEL]			
5812 001	Telephone	*CTL	Sets the telephone number for a service representative. This number is printed on the Counter List, which can be printed with the user's "Counter" menu. This can be up to 19 characters (both numbers and alphabetic characters can be input).		
5812 002	Facsimile	*CTL	Sets the fax or telephone number for a service representative. This number is printed on the Counter List, which can be printed with the user's "Counter" menu if the Meter Charge mode is selected with SP5-930-1. This can be up to 19 characters (both numbers and alphabetic characters can be input).		

5813	[Power Frequency]		
5813 001		-	Displays the power frequency.  [0 to 100 / 0 / 1 Hz/step] Not used

5814	[Power Voltage]		
5814 001	Detected Voltage	-	Displays the detected power voltage.  [0 to 400 / 0 / 1 V/step] Not used

5816	[NRS Function] These settings are used for NRS.			
5816 001	I/F Setting	*CTL	[0 to 2 / 2 / 1/step] Alphanumeric 0: Off, 1: CSS (Not used) 2: Network (The remote service function is on.)	
5816 002	CE Call	*CTL	[0 or 1 / 1 / 1/step] 0: Start, 1: End	
5816 003	Function Flag	*CTL	[0 or 1 / 0 / 1/step] 0: Off (The remote service function is disabled.)	

			1: On (The remote service function is enabled.)		
5816 007	SSL Disable	*CTL	[0 to 1 / 0 / 1/step] 0: On, 1: Off		
5816 008	RCG Connect T/O	*CTL	Sets the timeout counter for the remote connection.  [1 to 90 / 10 / 1 second/step]		
5816 009	RCG Write Timeout	*CTL	Sets the timeout counter for writing processing.  [0 to 100 / 60 / 1 second/step]		
5816 010	RCG Read Timeout	*CTL	Sets the timeout counter for reading processing.  [0 to 100 / 60 / 1 second/step]		
5816 011	Port 80	*CTL	Enables or disables access to the SOAP method via port 80.  [0 to 1 / 0 / 1/step]  0: Disables, 1: Enables		
5816 021	Function Flag	*CTL	[0 or 1 / <b>0</b> / -] 0: Not registered, 1: Registered		
5816 022	Install Status	*CTL	This SP displays the Cumin installation status.  O: Basil not registered  1: Basil registered  2: Device registered		
	Connect Mode (N/M)	*CTL			
5816 023	This SP displays and selects the Cumin connection method.  O: Internet connection  1: Dial-up connection				
5017.071	NotiTime ExpTime	*CTL			
5816 061	Proximity of the expiration of the certification.				
	HTTP Proxy use	*CTL			
5816 062	This SP setting determines if the proxy server is used when the machine communicates with the service center.				
5816 063	HTTP Proxy Host	*CTL			

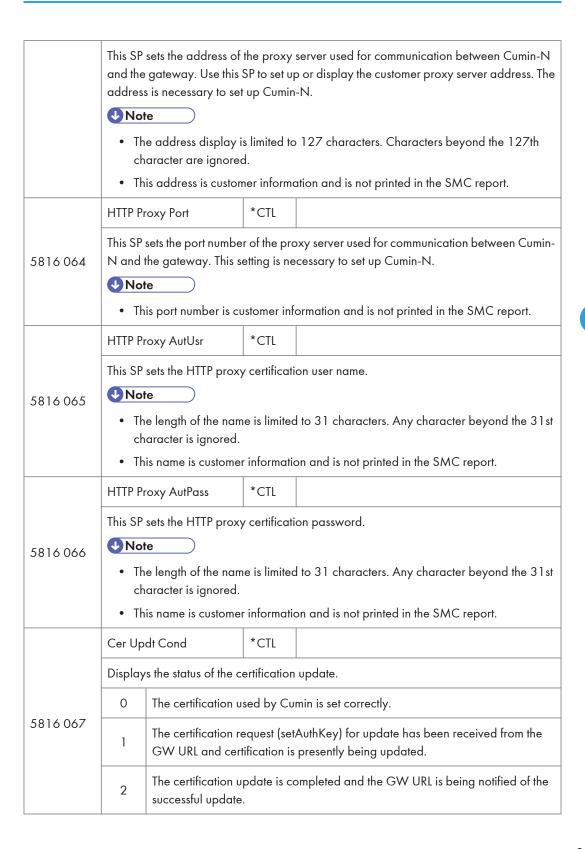

	3	The certification u	The certification update failed, and the GW URL is being notified of the failed update.				
	4	1 '	The period of the certification has expired and new request for an update is being sent to the GW URL.				
	11	A rescue update for certification has been issued and a rescue certification setting is in progress for the rescue GW connection.					
	12	The rescue certific		ng is completed and the GW URL is being notified quest.			
	13			t for certification update has completed successfully, the certification update request from the rescue GW			
	14			cation request has been received from the rescue ification is being stored.			
	15		The certification has been stored, and the GW URL is being notified of the successful completion of this event.				
	16	The storing of the certification has failed, and the GW URL is being notified of the failure of this event.					
	17	The certification update request has been received from the GW URL, the GW URL was notified of the results of the update after it was completed, but an certification error has been received, and the rescue certification is being recorded.					
	18	The rescue certification of No. 17 has been recorded, and the GW URL is being notified of the failure of the certification update.					
	Cer Ab	nml Cause	*CTL				
	Display certifico		at describ	es the reason for the request for update of the			
	0	Normal. There is no request for certification update in progress.					
5816 068	1	Request for certific	ation updo	ate in progress. The current certification has expired.			
	2	An SSL error notification has been issued. Issued after the certification has expired.					
	3	Notification of shi	ft from a co	ommon authentication to an individual certification.			
	4	Notification of a c	ommon ce	ertification without ID2.			

	5 Notification that no certification was issued.				
	6	Notification that (	GW URL d	oes not exist.	
501 ( 0 : 5	Cer Up	dt ReqID	*CTL		
5816 069	The ID	of the request for ce	ertification.		
5017.000	Firm Up	odating	*CTL		
5816 083	Display	s the status of the fi	rmware up	odate.	
5017.004	Firm Up	oFlg NoHDD	*CTL		
5816 084	This set	ting determines if th	e firmware	e can be updated, even without the HDD installed.	
	Firm Up	oUsr Conf	*CTL		
5816 085	This SP setting determines if the operator can confirm the previous version of the firmware before the firmware update execution. If the option to confirm the previous version is selected, a notification is sent to the system manager and the firmware update is done with the firmware files from the URL.				
	Firmwa	re Size	*CTL		
5816 086		Allows the service technician to confirm the size of the firmware data files during the firmware update execution.			
5014 007	CERT: I	MacroVsn	*CTL		
5816 087	Display	Displays the macro version of the NRS certification.			
5816 088	CERT: F	PAC Vsn	*CTL		
3810 088	Displays the PAC version of the NRS certification.				
	CERT: I	D2 Code	*CTL		
5816 089	Displays ID2 for the NRS certification. Spaces are displayed as underscores (_). Asteriskes () indicate that no NRS certification exists.				
	CERT: S	Subject	*CTL		
5816 090	Displays the common name of the NRS certification subject. CN = the following 17 bytes.  Spaces are displayed as underscores (_). Asterisks () indicate that no DESS exists.				
5017.001	CERT: S	SeriNum	*CTL		
5816 091	Displays serial number for the NRS certification. Asterisks () indicate that no DESS exists.				

	CERT: Issuer	*CTL			
5816 092	Displays the common name of the issuer of the NRS certification. CN = the following 30 bytes. Asteriskes () indicate that no DESS exists.				
501/000	CERT: St ExpTime	*CTL			
5816 093	Displays the start time of th	e period f	or which the current NRS certification is enabled.		
5017.004	CERT: End ExpTime	*CTL			
5816 094	Displays the end time of th	e period fo	or which the current NRS certification is enabled.		
5017.000	Poling Man Exc	*CTL			
5816 200	No information is availabl	e at this tin	ne.		
	Instl: Condition	*CTL			
5816 201	Displays a number that indicates the status of the NRS service device.  0: Neither the NRS device nor Cumin device are set.  1: The Cumin device is being set. Only Box registration is completed. In this status the Basil unit cannot answer a polling request.  2: The Cumin device is set. In this status the Basil unit cannot answer a polling request.				
	3: The NRS device is being set. In this status the Cumin device cannot be set.				
	4: The NRS module has not started.				
5816 202	Instl: ID #	*CTL			
	Allows entry of the number of the request needed for the Cumin device.				
5816 203	Instl: Reference	*CTL			
3610 203	Executes the inquiry request to the NRS GW URL.				
	Instl: Ref Rslt	*CTL			
	Displays a number that indicates the result of the inquiry executed with SP5816-203.				
5816 204	O: Succeeded  1: Inquiry number error  2: Registration in progress  3: Proxy error (proxy enals)  4: Proxy error (proxy disal)	oled)			
	5: Proxy error (Illegal user	name or p	password)		

	6: Communication error				
	7: Certification update error				
	8: Other error				
	9: Inquiry executing				
	Instl: Ref Section	*CTL			
5816 205					
5816 206	Instl: Rgstltn	*CTL			
3616 206	Executes Cumin Reg	istration.			
	Instl: Rgstltn Rst	*CTL			
	Displays a number tl	nat indicates	the registration result.		
	0: Succeeded				
	2: Registration in progress				
	3: Proxy error (proxy	y enabled)			
5816 207	4: Proxy error (proxy disabled)				
	5: Proxy error (Illegal user name or password)				
	6: Communication error				
	7: Certification update error				
	8: Other error				
	9: Registration executing				
	Error Code				
	Displays a number that describes the error code that was issued when either SP5816-204 or SP5816-207 was executed.				
	Cause	Code	Meaning		
5816 208		-11001	Chat parameter error		
	Illegal Modem Parameter	-11002	Chat execution error		
		-11003	Unexpected error		
	Operation Error, Incorrect Setting	-12002	Inquiry, registration attempted without acquiring device status.		

		-12003	Attempted registration without execution of an inquiry and no previous registration.
		-12004	Attempted setting with illegal entries for certification and ID2.
		-2385	Attempted dial up overseas without the correct international prefix for the telephone number.
		-2387	Not supported at the Service Center
		-2389	Database out of service
		-2390	Program out of service
		-2391	Two registrations for same device
	Error Caused by Response from GW	-2392	Parameter error
	URL	-2393	Basil not managed
		-2394	Device not managed
		-2395	Box ID for Basil is illegal
		-2396	Device ID for Basil is illegal
		-2397	Incorrect ID2 format
		-2398	Incorrect request number format
5816 209	Instl Clear	*CTL	
3010 209	Releases a machine	from its Cumi	n setup.
5816 250	Print Com Log	*CTL	
3610 230	Prints the communico	ation log.	

5821	[NRS Address]			
5821 001	CSS-PI Device	*CTL	[0 to 4 / 0 / 1/step] <b>DFU</b>	
5821 002	RCG IP Address (used for NRS)	*CTL	Sets the IP address of the RCG (Remote Communication Gate).  [00000000h to FFFFFFFFh / 00000000h / 1/step]	

5824	[NVRAM Upload]		
5824 001	NVRAM Upload	#	Uploads the UP and SP mode data (except for counters and the serial number) from the NVRAM to an SD card.

5825	[NVRAM Download]		
5825 001	NVRAM Download	#	Downloads the UP and SP mode data from an SD card to the NVRAM.

5828	[Network Setting] Job spo	[Network Setting] Job spool settings/ Interface selection for Ethernet and wireless LAN			
			Switches Centronics IEEE1284 compatibility on/off for the network.  [ 0 or 1 / 1 / - ]		
5828 050	1284 Compatible	*CTL	0: Disabled, 1: Enabled		
			<ul> <li>Note</li> <li>Selecting "0" disables bi-directional data transmission.</li> </ul>		
5828 052	ECP	*CTL	Switches the ECP setting for Centronics off/on.  [0 or 1 / 1 / -]  0: Disabled, 1: Enabled  • Wote  • With "1" selected, SP5-828-050 must be enabled for 1284 mode compatibility.		
5828 065	Job Spool	*CTL	Switches the job spool on/off.  [0 or 1 / 0 / -]  0: Disabled, 1: Enabled		
5828 066	HD job Clear	*CTL	Selects the treatment of the job when a spooled job exists at power on.  [0 or 1 / 1 / 1/step]  0: Data is cleared, 1: Automatically printed		
5828 069	Job Spool (Protocol)	*CTL	Switches job spooling off or on and enables settings for job spooling protocols.  [0 or 1 / 1 / 1/step]		

			O: Off, 1: On Bit switches:  • Bit O: LPR  • Bit 1: FPT  • Bit 2: IPP
			<ul> <li>Bit 3: SMB</li> <li>Bit 4: Not used.</li> <li>Bit 5: DIPRINT</li> <li>Bits 6 and 7: Reserved</li> </ul>
5828 090	TELNET (0: OFF, 1: ON)	*CTL	Enables or disables Telnet.  [0 or 1 / 1 / 1/step]  0: Disabled, 1: Enabled
5828 091	Web (0: OFF, 1: ON)	*CTL	Enables or disables the Web monitor.  [O or 1 / 1 / 1/step]  O: Disabled, 1: Enabled
5828 145	Active IPv6 Link		Displays the IPv6 link local address for the wireless LAN or Ethernet.
5828 147	Active IPv6 Stat (1)		
5828 149	Active IPv6 Stat (2)		
5828 151	Active IPv6 Stat (3)		Displays the IPv6 stateless address 1 to 5 for the wireless LAN or Ethernet.
5828 153	Active IPv6 Stat (4)		
5828 155	Active IPv6 Stat (5)		
5828 156	IPv6 Manual Addr		Displays the IPv6 manual setting address for the wireless LAN or Ethernet.
5828 158	IPv6 Gateway Add		Displays the IPv6 gateway address for the wireless LAN or Ethernet.

5832	[HDD] HDD Initialization		
5832 001		#	Prepares the hard disk. Use this SP mode only when there is a hard disk error.

5839	[IEEE 1394]		
5839 007	Cycle Master	*CTL	[0 or 1 / 1 /-] 0: Off, 1: On
5839 008	BCR mode	*CTL	[0 to 3 / 3 / 1/step] 0: Standard, 1: IRM Color Copy 2: Reserved, 3: Always Effective
5839 009	IRM 1394a Check	*CTL	[0 or 1 / <b>0</b> /-] 0: Off, 1: On
5839 010	Unique ID	*CTL	[0 or 1 / 1 /-] 0: Off, 1: On
5839 011	Logout	*CTL	[0 or 1 / 1 /-] 0: Off, 1: On
5839 012	Login	*CTL	[0 or 1 / <b>0</b> /-] 0: Off, 1: On
5839 013	Login MAX	*CTL	[0 to 63 / <b>8</b> / 1/step]

5840	[IEEE 802.11]		
5840 006	Channel MAX	*CTL	Sets the maximum number of channels available for data transmission via the wireless LAN. The number of channels available varies according to location. The default settings are set for the maximum end of the range for each area. Adjust the upper 4 bits to set the maximum number of channels.  EU: [1 to 13 / 13 / 1/step]  NA/ AS: [1 to 11 / 11 / 1/step]
5840 007	Channel MIN	*CTL	Sets the minimum number of channels available for data transmission via the wireless LAN. The number of channels available varies according to location. The default settings are set for the minimum end of the range for each area. Adjust the lower 4 bits to set the minimum number of channels.  EU: [1 to 13 / 1 / 1/step]

			NA/ AS: [1 to 11 / 1 / 1/step]
			[0 x 00 to 0 x FF / <b>0 x FF to Auto</b> / -]
			0 x FF to Auto [Default]
			0 x 11 - 55M Fix
			0 x 10 - 48M Fix
			0 x 0F - 36M Fix
			0 x 0E - 18M Fix
			0 x 0D - 12M Fix
5840 008	Transmission Speed	*CTL	0 x OB - 9M Fix
			0 x 0A - 6M Fix
			0 x 07 - 11M Fix
			0 x 05 - 5.5M Fix
			0 x 08 - 1 M Fix
			0 x 13 - 0 x FE (reserved)
			0 x 12 - 72M (reserved)
			0 x 09 - 22M (reserved)
			Selects the WEP key.
			[00 to 11 / <b>00</b> / 1 binary]
5040011	\\/FD\/C_l	*CTL	00: Key #1
5840 011	WEP Key Select	CIL	01: Key #2 (Reserved)
			10: Key #3 (Reserved)
			11: Key #4 (Reserved)
			Adjusts the fragment threshold for the IEEE802.11 card.
5804 042	Fragment Thresh	*CTL	[256 to 2346 / <b>2346</b> / 1]
			This SP is displayed only when the IEEE802.11 card is installed.
			Determines whether the CTS self function is turned on or off.
5804 043	11g CTS to Self	*CTL	[0 to 1 / 1 / 1] 0: Off, 1: On
			This SP is displayed only when the IEEE802.11 card is installed.

5804 044	11g Slot Time	*CTL	Selects the slot time for IEEE802.11. [0 to 1 / $0$ / 1] 0: 20 $\mu$ m, 1: 9 $\mu$ m This SP is displayed only when the IEEE802.11 card is installed.
5804 045	5804 045 WPA Debug Lvl	*CTL	Selects the debug level for WPA authentication application.  [1 to 3 / 3 / 1] 1: Info, 2: warning, 3: error  This SP is displayed only when the IEEE802.11
			card is installed.

5842	[GWWS Analysis] Net File Application Analysis			
5842 001	Setting 1	*CTL	Prints or does not print the module log for each bit.  [0 or 1 / 1 / 1/step]  0: Prints, 1: Not print  Bit switches:  • Bit 0: System or other related application.  • Bit 1: Captured related application  • Bit 2: Certification related application  • Bit 3: Address related application  • Bit 4: Control devices or transmission logs related application  • Bit 5: Output (print, fax or transmission) related application  • Bit 6: Documents related application in bit 7, 0: Not printed, 1: Printed  • Bit 7: MSB related application	
5842 002	Setting 2	*CTL	Selects the stamp type for the log of Net File Application Analysis.  Bit switches:  Bit 0 to 6: Not used. Bit 7  O: Minute/second/micro second  1: Date/hour/minute/second	

5844	[USB]		
5844 001	Transfer Rate	*CTL	Adjusts the USB transfer rate.  [0001 or 0004 / <b>0004</b> / -]  0001: Full speed, 0004: Auto Change
5844 002	Vendor ID	*CTL	Displays the vendor ID.
5844 003	Product ID	*CTL	Displays the product ID.
5844 004	Dev Release Num	*CTL	Displays the device release version number.

5845	[Delivery Srv] Delivery Server Setting			
5845 003	DeliErr DisplTime	*CTL	Specifies the retry interval.  [60 to 900 / 300 / 1 second/step]	
5845 004	Delivery Options	*CTL	Specifies the maximum number of retries. [0 to 99 / 3 / 1/step]	
5845 022	Instant Trans Off	*CTL	Switches instant transmission off/on.  [0 to 1/1/1]  1: Off. Instant transmission not possible with network setting errors.  0: On. Instant transmission possible with network setting errors.  • Note  • The machine will continue to transmit over the network, even if the network settings are incorrect. (This causes multiple errors, of course.)  • With this SP off, the machine will stop communicating with the network if the settings are wrong. This reduces the amount of spurious network traffic caused by errors due to incorrect settings.	

5846	[UCS Setting]		
5846 010	LDAP Search TOut	*CTL	[1 to 255 / <b>60</b> / 1 /step]

	Sets the length of the timeout for the search of the LDAP server.				
	AddtB Acl Info	*CTL			
5846 041	This SP must be executed immediately after installation of an HDD unit in a basic machine that previously had no HDD. The first time the machine is powered on with the new HDD installed, the system automatically takes the address book from the NVRAM and writes it onto the new HDD. However, the new address book on the HDD can be accessed only by the system administrator at this stage. Executing this SP by the service technician immediately after power on grants full address book access to all users.				
			Displays the slot number where an address book data is in.		
			[0 to 30 / - /1]		
			0: Unconfirmed		
5846 043	AddrB Media	*CTL	1: SD Slot 1		
			2: SD Slot 2		
			4: USB Flash ROM		
			20: HDD		
			30: Nothing		
	IniSet/All AddrB	*CTL			
5846 046	This SP clears all the setting information managed in UCS and address book information (local, delivery, LDAP) and restores these settings to their default values. Use this SP to initial the account information (user codes and passwords) for system managers and users as well.				
	Ini Local AddrB	*CTL			
5846 047	Clears the local address b	ook inforr	nation, including the user code.		
5044.040	Ini LDAP AddrB	*CTL			
5846 049	Clears the LDAP address book information, except the user code.				
	Init All AddrB	*CTL	Initializes all address information data except the administration account.		
5846 050	Clears all directory information managed by UCS, including all user codes.  Turn off and on the main power switch after executing this SP.				
5846 051	Bkup All AddrB	*CTL	·		

	Uploads all directory info	rmation to	the SD card.	
5846 052	Restr All AddrB	*CTL		
	Downloads all directory in	nformation	n from the SD card.	
	Clear Backup Info	*CTL		
	Deletes the address book	data from	the SD card in the service slot.	
	Deletes only the files that were uploaded from this machine.			
5846 053	This feature does not work	if the car	d is write-protected.	
	●Note			
	1	-	the SP mode, and then turn the power off. Do not ower LED stops flashing.	
	Search option	*CTL		
	This SP uses bit switches to	set up the	fuzzy search options for the UCS local address book.	
5846 060	Bit: Meaning			
3840 000	BitO: Checks both upper/lower case characters			
	Bit1: Japan Only			
	Bit2 to 7			
	Compl Opt1	*CTL	[0 to 32 / <b>0</b> / 1 /step]	
5846 062	Use this SP to set the conditions for password entry to access the local address book. Specifically, this SP limits the password entry to <b>upper case</b> and sets the length of the password.			
	<b>₩Note</b>			
	This SP does not normally require adjustment.			
	<ul> <li>This SP is enabled only after the system administrator has set up a group password policy to control access to the address book.</li> </ul>			
	Compl Opt2	*CTL	[0 to 32 / <b>0</b> / 1 /step]	
5846 063	Use this SP to set the conditions for password entry to access the local address book. Specifically, this SP limits the password entry to <b>lower case</b> and defines the length of the password.			
	<b>U</b> Note			
	This SP does not norr	mally requ	ire adjustment.	

	This SP is enabled only after the system administrator has set up a group password policy to control access to the address book.			
	Compl Opt3	*CTL	[0 to 32 / <b>0</b> / 1 /step]	
5846 064	Use this SP to set the conditions for password entry to access the local address book.  Specifically, this SP limits the password entry to <b>numbers</b> and defines the length of the password.  Note			
	This SP does not norr	mally requ	ire adjustment.	
	This SP is enabled only after the system administrator has set up a group password policy to control access to the address book.			
	Compl Opt4	*CTL	[0 to 32 / <b>0</b> / 1 /step]	
5846 065	Use this SP to set the conditions for password entry to access the local address book. Specifically, this SP limits the password entry to <b>symbols</b> and defines the length of the password.			
	<b>V</b> Note			
	This SP does not normally require adjustment.			
	<ul> <li>This SP is enabled only after the system administrator has set up a group passworp policy to control access to the address book.</li> </ul>			
5044.004	Encryption Stat	*CTL	[0 to 255 / - / 1 /step] No default	
Shows the status of the encryption function of the address book on the		unction of the address book on the LDAP server.		

5848	[Web Service]		
5848 004	ac: UD	*CTL	Enables or disables the undirectory access limitation. 0000: Disabled, 0001: Enabled
5848 009	ac: Job Ctrl		
5848 011	ac: Dev Mng	*CTL Switches access control on and off.	Switches access control on and off.  - 0000: OFF, 0001: ON
5848 022	ac:Uadmin	*CTL	0000. 011, 0001. 014
5848 210	LogType: Job 1	*CTL	Displays the log server settings.
5848 211	LogType: Job 2	*CTL	These can be adjusted with the Web Image
5848 212	LogType: Access	*CTL	Monitor.

5848 213	PrimarySrv	*CTL	
5848 214	SecondarySrv	*CTL	
5848 215	Start Time	*CTL	
	Interval Time	*CTL	[1 to 1000 / <b>1</b> / 1 hour/step]
5848 216	Specifies the interval of transmitting I SP5848-217 is set to "2".		log information. This SP is activated only when the
5848 217	Timing	*CTL	[0 to 2 / <b>0</b> / 1 /step]
	Selects the method for transmitting log information.		
	0: Transmitting OFF, 1: Always Transmitting, 2: Interval Transmitting		

5849	[Installation Date]		
5849 001	Display	*CTL	Enables or disables the udirectory access limitation. 0000: Disabled, 0001: Enabled
5849 002	Print	*CTL	Determines whether the installation date is printed on the printout for the total counter.  [0 to 1/1]  0: No Print  1: Print
5849 003	Total Counter	*CTL	

5851	[Bluetooth]		
5851 001	Mode	*CTL	Adjusts the Bluetooth setting.  [O or 1 / 0 / -]  O: Public, 1: Private

5856	[Remote ROM Update]		
5856 002	Local Port		Allows the technician to update the firmware using a parallel cable.  [0 or 1 / 0 / 1/step]  0: Disable, 1: Enable

5857	[Debug Log Save]		
5857 001	ON/ OFF	*CTL	Enables Or Disables The Debug Log Saving Function.  [0 or 1 / 0 / 1/Step] Alphanumeric  0: OFF, 1: ON
5857 002	Target	*CTL	Sets the storage location for the debug log.  [2 or 3 / 2 / 1/step]  2: HDD, 3: SD
5857 005	Save to HDD	*CTL	Sets the key number of the debug log.
5857 006	Save to SD Card	*CTL	Sets the key number of the debug log.
5857 009	HDD to SD Latest	*CTL	Copies the most recent 4 MB of the debug log from the hard disk to the SD card.
5857 010	HDD to SD Any	*CTL	Sets the key number of the debug log copied from the hard disk to the SD card.
5857 011	Erase HDD Debug	*CTL	Deletes the debug log from the hard disk.
5857 012	Erase SD Debug	*CTL	Deletes the debug log from the SD card.
5857 013	Dsply-SD Space	*CTL	Shows the free space on the SD card.
5857 014	SD to SD Latest	*CTL	Copies the most recent 4 MB of the debug log from an SD card to a different SD card.
5857 015	SD to SD Any	*CTL	Sets the key number of the debug log copied from an SD card to a different SD card.
5857 016	Make HDD Debug File	*CTL	Makes a log file on the HDD to save debug logs.
5857 017	Make SD Debug File	*CTL	To save debug logs, the controller makes a log file first, then writes data in the file. This procedure can use much time. The user can switch off the main power switch before the log is written in the file. To prevent this possible problem, you can prepare a log file in advance. If you do this, the controller uses less time to save logs because the log file is prepared.

5858
------

5858 001	Engine SC	*CTL	Collects debug logs when an engine-related SC code occurs.  [0 or 1 / 0 / 1/step]  0: OFF, 1: ON
5858 002	Controller SC	*CTL	Collects debug logs when a controller-related SC code occurs.  [0 or 1 / 0 / 1/step]  0: OFF, 1: ON
5858 003	Any SC	*CTL	Sets the SC code whose logs are collected.  [00000 to 65535 / <b>0</b> / 1/step]
5858 004	Jam	*CTL	Collects debug logs when a paper jam occurs.  [0 or 1 / 0 / 1/step]  0: OFF, 1: ON

5859	[Debug Log Save Key]		
5859 001	Key 1	*CTL	
5859 002	Key 2	*CTL	
5859 003	Key 3	*CTL	Sets the key number of a specific event (see the note below) whose logs are saved in the specified
5859 004	Key 4	*CTL	storage place (see the note below). When multiple
5859 005	Key 5	*CTL	key numbers are assigned, the logs are collected in this order: Key 1, Key 2,, Key 9, Key 10.
5859 006	Key 6	*CTL	<b>↓</b> Note
5859 007	Key 7	*CTL	• The event is set with SP5-857-2. The storage is set with SP5-858.
5859 008	Key 8	*CTL	[0000000 to 9999999 / <b>0</b> / 1/step]
5859 009	Key 9	*CTL	
5859 010	Key 10	*CTL	

5860	[SMTP/POP3/IMAP4]		
5860 002	SMTP Srv Port No.	*CTL	Adjusts the number of the SMTP server ports.  [1 to 65535 / 25 / 1/step]

5860 003	SMTP Auth.	*CTL	Enables or disables the SMTP authentication for mail transfers.  [0 or 1 / 0 / 1/step]  0: Disable, 1: Enable
5860 006	SMTP Auth Encryp	*CTL	Encrypts or does not encrypt passwords for POP3/IMAP4 authentications.  [0 to 2 / 0 / 1/step]  0: Automatic, 1: Not encrypt, 2: Encrypt
5860 007	POP before SMTP	*CTL	Enables or disables the authentication that is executed on the POP server before the communication is established with the SMTP server to transfer mails.  [0 or 1 / 0 / 1/step]  0: Disable, 1: Enable
5860 008	POP to SMTP Wait	*CTL	Adjusts the waiting time to access the SMTP server after the authentication on the POP server.  [0 to 10000 / 300 / 1 ms/step]
5860 009	Mail Receive Pro	*CTL	Sets the protocol of receiving e-mail.  [1 to 3 / 1 / 1/step]  1: POP3, 2: IMAP4, 3: SMTP
5860 013	POP3/IMAP4 Auth.	*CTL	Encrypts or does not encrypt passwords for POP3/IMAP4 authentications.  [0 to 2 / 0 / 1/step]  0: Automatic, 1: Not encrypt, 2: Encrypt
5860 014	POP3 Srvr Port No.	*CTL	Adjusts the port number of the POP server.  [1 to 65535 / 110 / 1/step]
5860 015	IMAP4 Srv Port	*CTL	Adjusts the port number of the IMAP4 server.  [1 to 65535 / 143 / 1/step]
5860 016	SMTP Rx Port No	*CTL	Adjusts the port number of the SMTP server.  [1 to 65535 / 25 / 1/step]
5860 017	Mail Rx Interval	*CTL	Adjusts the interval of receiving an e-mail.  [2 to 1440 / 3 / 1 minute/step]

5860 019	Mail Keep Setting  ParMail Rec TOut	*CTL	Sets the way of keeping the e-mail in the server.  [0 to 2 / 0 / 1/step]  0: Not keeping  1: Keeping All  2: Keeping the only error e-mail  Adjusts the time for keeping the partial e-mails. If the partial e-mails are not received during the set time, these are deleted.  [1 to 168 / 72 / 1 h/step]
5860 021	MDN Res RFC2298	*CTL	Determines whether RFC2298compliance is switched on for MDN reply mail.  [0 or 1 / 1 / -]  0: No, 1: Yes
5860 022	SMTP Aut FileldRep	*CTL	Determines whether the FROM item of the mail header is switched to the validated account after the SMTP server is validated.  [0 or 1 / 0 / 1/step]  0: No. "From" item not switched,  1: Yes. "From" item switched.
5860 025	SMTP Auth DirectSet	*CTL	Selects directly the way of SMTP authentication if all SMTP authentications fail due to the error in the SP5860-006.  This SP is activated only when SP5860-003 is set to "Enable".  Bit switch 0: LOGIN  Bit switch 1: PLAIN  Bit switch 2: CRAM MD5  Bit switch 3: DIGEST MD  Bit switch 4 - 7: Not used
5860 026	S/MIVE: MIME Header Setting	*CTL	Selects the MIME header type of an E-mail sent by S/MIME.  [0 to 2 / 0 / 1]  0: Microsoft Outlook Express standard  1: Internet Draft standard

		2: RFC standard

5866	[E-Mail Report]		
5866 001	Report Validity	*CTL	Disables and re-enables the email notification feature.  [O or 1/O/1/step]  O: Enable, 1: Disable
5866 005	Add DataFiled	*CTL	Enables or disables to add the date field on the alert notice e-mail.  [0 or 1 / 0 / 1/step]  0: Off, 1: On

5869	[RAM Disk Setting]		
5869 001	Mail Function	*CTL#	Enables or disables the e-mail transfer function. This SP sets the RAM disk size for the e-mail transfer function.  [0 or 1 / 0 / 1/step]  0: On, 1: Off

5870	[Common Key Info Writi] Common Key Information Writing		
5870 001	Writing	*CTL	Writes the authentication data (used for NRS) in the memory.
5870 003	Initialize	*CTL	Initializes the authentication data in the memory.

5873	[SD Card Appli Move]		
5873 001	Move Exec		See 'SD Card Appli Move'.
5873 002	Undo Exec		See 'SD Card Appli Move'.

5878	[Option Setup]		
5878 001	Data Overwrite Security		Executes the setup for the Data Overwrite Security Unit.
5878 002	HDD Encryption		Executes the setup for the HDD Encryption Unit.

5887	[SD Get Counter]
	This SP sends a text file to an SD card inserted in SD card Slot 2. The operation stores. The file is stored in a folder created in the root directory of the SD card called SD_COUNTER. The file is saved as a text file (*.txt) prefixed with the number of the machine.
	1. Insert the SD card in SD card Slot 2 (lower slot).
	2. Select SP5887 then touch [EXECUTE].
	3. Touch [Execute] in the message when you are prompted.

	[Personal Information Protect]
5888*	Selects the protection level for logs.
3000	[0 to 1 / 0 / 1]  0: No authentication, No protection for logs
	1: No authentication, Protected logs (only an administrator can see the logs)

SP5907 RTB 11

5907	[Plug/ Play] Plug/Play I	Name Selection
		[0 to 8 / <b>0</b> / 1/step]
		0: Ricoh, Aficio SP C411DN
		1: Ricoh, Aficio SP C410DN
		2: SAVIN, CLP31DN
		3: SAVIN, CLP27DN
		4: Gestetner, C7531dn
5907 001	*CTL	5: Gestetner, C7526dn
		6: NRG, C411DN
		7: NRG, C410DN
		8: infotec, IPC 3030DN
		9: infotec, IPC 2525DN
		10: LANIER, LP231cn/SP C411DN
		11: LANIER, LP226cn/SP C410DN

5924	[SDK Apli Display] SDK Application Display		
5924 001	SDK Appli Display	*CTL	Enables or disables the LCD display of the SDK application.  [0 or 1 / 0 / 1/step]  0: Not display, 1: Display

5930	[Meter Click Ch.] Meter C	[Meter Click Ch.] Meter Click Charge		
5930 001	Meter Click Ch.	*EGB	Enables or disables the Meter Charge mode. When enabling the Meter Charge mode, the "Counter" menu is added to the user menu.  [0 or 1 / 0 / -]  0: OFF, 1: ON	
5930 010	PCU	*EGB	Displays or does not display the end display for the PCU. This SP is activated only when the SP5930-001 is set to "1".  [0 or 1 / 0 / -]  0: OFF, 1: ON	
5930 014	Mid Trans Unit	*EGB	Displays or does not display the end display for the transfer belt unit. This SP is activated only when the SP5930-001 is set to "1".  [0 or 1 / 0 / -]  0: OFF, 1: ON	
5930 016	Fusing Unit.	*EGB	Displays or does not display the end display for the fusing unit. This SP is activated only when the SP5930-001 is set to "1".  [0 or 1 / 0 / -]  0: OFF, 1: ON	

5990	[SP Print Mode]		
5990 001	All (Data List)		Does SP5-990-002, 004, 005, 006, and 007.
5990 002	SP (Mode Data List)		Prints an SMC report on all SP modes.
5990 004	Logging Data		Prints an SMC report on the SPs that save logs.

5990 005	Diagnosic Report	Prints the Self-Diagnostic Report.
5990 006	Non-Default	Prints an SMC report on the SPs that have settings, which are different from the defaults.
5990 007	NIB Summary	Prints the network configuration report.

## SP7-XXX (Data Log)

7401	[Total SC Counter]		
7401 001	Total SC Counter	*CTL	Displays the number of SC codes detected.  [0 to 9999 / 0 / 1/step]

7403	[SC History]		
7403 001	Latest	*CTL	
7403 002	Latest 1	*CTL	
7403 003	Latest 2	*CTL	
7403 004	Latest 3	*CTL	Dividence the SC control to the
7403 005	Latest 4	*CTL	Displays the SC codes detected.  The 10 most recently detected SC Codes are
7403 006	Latest 5	*CTL	displayed on the screen, and also can be seen on
7403 007	Latest 6	*CTL	the SMC (logging) outputs.
7403 008	Latest 7	*CTL	
7403 009	Latest 8	*CTL	
7403 010	Latest 9	*CTL	

<i>7</i> 502	[Counter Paper Jam]		
7502 001	Counter Paper Jam	*CTL	Displays the total number of jams detected.  [0 to 9999 / 0 / 1 sheet/step]

7504	[Paper Jam/Loc] Paper Jam Location
	Displays the number of jams according to the location where jams were detected.

7504 001	At Power On	*CTL	Not used
7504 003	Tray 1: Non-feed	*CTL	Tray 1: Paper is not fed.
7504 004	Tray 2: Non-feed	*CTL	Tray 2: Paper is not fed.
7504 005	Tray 3: Non-feed	*CTL	Tray 3/LCT: Paper is not fed.
7504 006	By-pass: Non-feed	*CTL	By-pass: Paper is not fed.
7504 007	Duplex: Non-feed	*CTL	Duplex: Paper is not fed.
7504 008	Registration	*CTL	Registration Senor does not get "ON".
7504 009	Fusing Exit	*CTL	Fusing Exit Sensor does not get "ON".
7504 010	Exit	*CTL	Paper Exit Sensor does not get "ON".
7504 011	Inverter (F)	*CTL	Duplex: ON
7504 012	Inverter (R)	*CTL	Duplex Jam Sensor 1 does not get "ON".
7504 013	Duplex Exit	*CTL	Duplex Jam Sensor 2 does not get "ON".
7504 015	Bank Paper Feed	*CTL	Optional Paper Feed Sensor does not get "ON".
7504 016	Fusing Entrance	*CTL	Fusing Entrance Sensor does not get "ON".
7504 017	Tray4: Non-feed	*CTL	
7504 018	Bank Paper feed2	*CTL	
7504 061	Regist: Stay	*CTL	Registration Sensor does not get "OFF"
7504 063	Exit: Stay	*CTL	Paper Exit Sensor does not get "OFF".
7504 065	Inverter (F): Stay	*CTL	Duplex: OFF
7504 066	Inverter (R): Stay	*CTL	Duplex Exit 1: OFF
7504 070	Bank Paper 1: Stay	*CTL	Not used
7504 071	Bank Paper 2: Stay	*CTL	Not used
7504 072	Bank Paper 3: Stay	*CTL	

7506	[Paper Jam/Size]		
7506 006	A5 LEF	*CTL	Displays the number of jams according to the paper size.

7506 044	HLT LEF	*CTL	
7506 133	A4 SEF	*CTL	
7506 134	A5 SEF	*CTL	
7506 142	B5 SEF	*CTL	[0 to 9999 / <b>0</b> / 1 sheet/step]
7506 164	LG SEF	*CTL	
7506 166	LT SEF	*CTL	
7506 172	HLT SEF	*CTL	
7506 255	Others	*CTL	

7507	[Dsply-P Jam Hist] Paper Jam History Display			
7507 001	Latest	*CTL		
7507 002	Latest 1	*CTL		
7507 003	Latest 2	*CTL		
7507 004	Latest 3	*CTL		
7507 005	Latest 4	*CTL	Diameter 10	
7507 006	Latest 5	*CTL	Displays the 10 most recently detected paper jams.	
7507 007	Latest 6	*CTL		
7507 008	Latest 7	*CTL		
7507 009	Latest 8	*CTL		
7507 010	Latest 9	*CTL		

<b>7</b> 801	[Memory/Version/PN] Memory Version and Part Number Display			
7801 250	Memory/Version/PN	*CTL	Displays the part number and version of all ROMs in the machine.	

	[PM Counter] Preventive Maintenance Counter Display			
7803 (Sheets or Rotations (%), Unit, [Color]) Trans Belt Unit: Transfer Belt Unit				
	T. Roll 2: Transfer Roller 2, Waste Toner: Waste Toner Bottles			

	Displays the PM counte	r for each ur	nit.
7803 001	Paper	*EGB	
7803 002	S: PCU: [K]	*EGB	
7803 003	S: PCU: [M]	*EGB	
7803 004	S: PCU: [C]	*EGB	Displays the number of sheets printed for each current maintenance unit. When a unit is replaced,
7803 005	S: PCU: [Y]	*EGB	the machine automatically detects that the new unit
7803 009	S: Transfer Belt Unit	*EGB	is installed. Then, the current PM counter value is automatically moved to the PM Counter - Previous
7803 010	S: T. Roll 2	*EGB	(SP7-906-1 to 10) and is reset to "0".
7803 011	S: Fusing Unit	*EGB	The total number of sheets printed with the last unit replaced can be checked with SP7-906-1 to 10.
7803 012	S: By-pass	*EGB	SP7-803-001: This shows the number of pages
7803 013	S: Tray 1	*EGB	printed. [0 to 9999999 / <b>0</b> / 1 sheet/step]
7803 014	S: Tray 2	*EGB	
7803 015	S: Tray 3	*EGB	
7803 016	S: Tray 4	*EGB	
7803 017	R: PCU: [K]	*EGB	Displays the number of revolutions of motors or
7803 018	R: PCU: [M]	*EGB	clutches for each current maintenance unit.  [0 to 9999999 / 0 / 1 revolution/step]
7803 019	R: PCU: [C]	*EGB	When a unit is replaced, the machine automatically
7803 020	R: PCU: [Y]	*EGB	detects that the new unit is installed. Then, the current PM counter value is automatically moved to
7803 025	R: Trans Belt Unit	*EGB	the PM Counter - Previous (SP7-906-11 to 20) and
7803 026	R: T. Roll 2	*EGB	is reset to "0". The total number of revolutions made with the last unit replaced can be checked with
7803 027	R: Fusing Unit	*EGB	SP7-906-11 to 20. [0 to 9999999 / <b>0</b> / 1 rotation/step]
7803 033	Toner Supply: [K]	*EGB	
7803 034	Toner Supply: [M]	*EGB	Displays the number of sheets printed until the waste toner bottle becomes full or toner runs out.
7803 035	Toner Supply: [C]	*EGB	[0 to 9999999 / <b>0</b> / 1 /step]
7803 036	Toner Supply: [Y]	*EGB	

7803 037	R%: PCU: [K]	*EGB	Displays the value given by the following formula:
7803 038	R%: PCU: [M]	*EGB	(Current revolution / Target revolution) × 100, where "Current revolution" is the current value for
7803 039	R%: PCU: [C]	*EGB	the counter of the part, and "Target revolution" is
7803 040	R%: PCU: [Y]	*EGB	the values of SP7-803-17 through 27. This shows how much of the unit's expected lifetime has been
7803 045	R%: Trans Belt Unit	*EGB	used up.
7803 046	R%: T. Roll 2	*EGB	The R% counter is based on rotations, not prints. If the number of rotations reaches the limit, the
7803 047	R%: Fusing Unit	*EGB	machine enters the end condition for that unit. If the print count lifetime is reached first, the machine also enters the end condition, even though the R% counter is still less than 100%.  [O to 999 / O / 1 rotation%/step]
7803 050	PCU Life: [K]	*EGB	Displays the PCU unit life.
7803 051	PCU Life: [Col]	*EGB	[-999 to 999 / <b>100</b> / 1/step]
7803 052	reserved	*EGB	
7803 053	reserved	*EGB	
7803 054	TransBeltU.Life	*EGB	Displays the transfer belt unit life. [-999 to 999 / 100 / 1/step]
7803 055	T.Roll2 Life	*EGB	Displays the paper transfer unit life.  [-999 to 999 / 100 / 1/step]
7803 056	FusingUnit Life	*EGB	Displays the fusing unit life. [-999 to 999 / 100 / 1/step]

7804	[PM Counter Reset] Preventive Maintenance Counter Reset (Sheets, Unit, [Color]) Trans Belt Unit: Transfer Belt Unit, T. Roll 2: Transfer Roller 2, W. Toner: Waste Toner Bottle, Toner: Toner Bottles		
	Clears the PM counter for each unit.		
7804 001	Paper		
7804 002	PCU: [K]	-	Clears the PM counter.
7804 003	PCU: [M]	-	Press the Enter key after the machine asks "Execute?".

7804 004	PCU: [C]	-
7804 005	PCU: [Y]	-
7804 009	Trans Belt Unit	-
7804 010	Transfer Roller 2	-
7804 011	Fusing Unit	-
7804 012	S: By-pass	-
7804 013	S: Tray 1	-
7804 014	S: Tray 2	-
7804 015	S: Tray 3	-
7804 017	S: Toner: [K]	-
7804 018	S: Toner: [M]	-
7804 019	S: Toner: [C]	-
7804 020	S: Toner: [Y]	-
7804 021	Toner Supply: [K]	-
7804 022	Toner Supply: [M]	-
7804 023	Toner Supply: [C]	-
7804 024	Toner Supply: [Y]	-
7804 025	S: Tray 4	
7804 050	All	

When a unit is replaced, the machine automatically detects that the new unit is installed. Then, the current PM counter value is automatically moved to the PM Counter-Previous (SP7-906-1 to 40) and is reset to "0".

7806	[Procon Counter] Process Control Counter ([Color])		
7806 001	[K]	*EGB	[0.4-2000 / 0. / 1 /-4]
7806 002	[CI]	*EGB [0 to 2000 / <b>0</b> / 1/step]	
	[MUSIC Counter] ([Color])		
7806 003	[K]	*EGB	Counts the paper printed after previous MUSIC.
7806 004	[CI]	*EGB	[0 to 999 / <b>0</b> / 1/step]

	[P. Pattern Coun.] P. Sensor Pattern Counter ([Color])			
7806 005	[K]	*EGB	[0.4- 0.55 / 0 / 1 /]	
7806 006	[CI]	*EGB	[0 to 255 / <b>0</b> / 1/step]	
	[Low Resolution] Low Resolution Counter ([Color])			
7806 007	Sheets: [K]	*EGB		
7806 008	Sheets: [M]	*EGB	[0 255 / 0. / 1 /]	
7806 009	Sheets: [C]	*EGB	[0 to 255 / <b>0</b> / 1/step]	
7806 010	Sheets: [Y]	*EGB		
7806 011	Counter	*EGB	[0 to 2000 / - / 1 /step]	

7807	[SC/ Jam Counter Reset]		
7807 001	SC/ Jam Counter Reset	-	Clears the all counters related to SC codes and paper jams.

<i>7</i> 810	[Engine Cnt Reset] Engine Counter Reset		
7810 001	All Clear	-	Clears the all Engine counters other than the total counter (SP7812).

7812	[Total Cnt. Rst.] Total Counter Reset		
7812 001	Color Counter	-	Clears the total color counter.
7812 002	Black Counter	-	Clears the total black counter.
7812 100	All Reset	-	Clears the total all counter.

7815	[Rep. Cnter Reset] Replacement Counter Reset (Sheets, Unit, [Color]) Trans Belt Unit: Transfer Belt unit, Waste Toner: Waste Toner Bottle, Toner: Toner Bottle		
7815 001	PCU: [K]	-	Clears the replacement counter and the previous unit counter of the black PCU.
7815 002	PCU: [M]	-	Clears the replacement counter and the previous unit counter of the magenta PCU.

7815 003	PCU: [C]	-	Clears the replacement counter and the previous unit counter of the cyan PCU.
7815 004	PCU: [Y]	-	Clears the replacement counter and the previous unit counter of the yellow PCU.
7815 005	Trans Belt Unit	-	Clears the replacement counter and the previous unit counter of the Transfer belt unit.
7815 006	Transfer Roller 2	-	Clears the replacement counter and the previous unit counter of the Transfer Roller.
7815 007	Fusing Unit	-	Clears the replacement counter and the previous unit counter of the Fusing unit.
7815 008	S: By-pass	-	Clears the replacement counter and the previous unit counter of the Paper pick up roller at by-pass.
7815 009	S: Tray 1	-	Clears the replacement counter and the previous unit counter of the Paper pick up roller at tray 1.
7815 010	S: Tray 2	-	Clears the replacement counter and the previous unit counter of the Paper pick up roller at tray 2.
7815 011	S: Tray 3	-	Clears the replacement counter and the previous unit counter of the Paper pick up roller at tray 3.
7815 012	S: Tray 4	-	Clears the replacement counter and the previous unit counter of the Paper pick up roller at tray 4.
7815 029	Toner: [K]	-	Clears the replacement counter and the previous unit counter of the black toner bottle
7815 030	Toner: [M]	-	Clears the replacement counter and the previous unit counter of the magenta toner bottle
7815 031	Toner: [C]	-	Clears the replacement counter and the previous unit counter of the cyan toner bottle
7815 032	Toner: [Y]	-	Clears the replacement counter and the previous unit counter of the yellow toner bottle
7815 100	All	-	Clears the all replacement and the previous unit counters.

<i>7</i> 81 <i>7</i>	[Rep Cnter Reset] Replacement Counter Reset
----------------------	---

7817 100 All Clear -	Clears the all adjustment counters.
----------------------	-------------------------------------

7832	[Display-Self-Diag] Displa	ay Self-Dia	gnostic Result
7832 001	Display-Self-Diag	-	Displays the result of the diagnostics. To scroll the return codes, press the up-arrow key or the downarrow key.

7834	[Cov. Counter] Coverage Counter		
7834 255	All Clear	-	Clears the all coverage counters.

7836	[Resident Memory]		
7836 001		-	Shows the total storage size.

	[Rep. Count. Disp] Replac	ement Co	unter Display
7853	(Sheets, Unit, [Color]) Trai Toner: Toner Bottle	ns Belt Unit	t: Transfer Belt unit, Waste Toner: Waste Toner Bottle,
7853 002	PCU: [K]	*EGB	
7853 003	PCU: [M]	*EGB	
7853 004	PCU: [C]	*EGB	
7853 005	PCU: [Y]	*EGB	
7853 009	Trans Belt Unit	*EGB	
7853 010	Transfer Roller 2	*EGB	
7853 011	Fusing Unit	*EGB	Displays the replacement counter for each unit. [0 to 9999999 / 0 / 1/step]
7853 012	S: By-pass	*EGB	[[[0] [[0] [[0] [[0] [[0] [[0] [[0] [[0
7853 013	S: Tray 1	*EGB	
7853 014	S: Tray 2	*EGB	
7853 015	S: Tray 3	*EGB	
7853 016	S: Tray 4	*EGB	
7853 028	Waste Toner	*EGB	

#### [Coverage Range]

Sets the color coverage threshold.

Coverage rate = Coverage per page / A4 full coverage (dots) x 100

There are three coverage counters: Color 1, Color 2, and Color 3

- [A] 5 % (default) is adjustable with SP7855-001.
- [B] 20 % (default) is adjustable with SP7855-002.

7855





• The setting value [B] must be set larger than [A].

The total numbers of printouts (BW printing plus color printing) for each coverage range are displayed with the following SPs.

Color1 counter: SP8601-021Color2 counter: SP8601-022

• Color3 counter: SP8601-023

7855 001	Coverage Range 1	*CTL	[1 to 200 / <b>5</b> / 1]
7805 002	Coverage Range 2	*CTL	[1 to 200 / <b>20</b> / 1]

7901	[Assert Info]		
7901 001	File Name	*CTL	Records the location where a problem is detected
7901 002	Number of Lines	*CTL	in the program. The data stored in this SP is used
7901 003	Location	*CTL	for problem analysis.

	[PM Counter-PREV] Previo	[PM Counter-PREV] Previous Preventive Maintenance Counter Display		
7906	(Sheets or Rotation (%), Unit, [Color]) Trans Belt Unit: Transfer Belt Unit, T. Roll 2: Transfe Roller 2, Waste Toner: Waste Toner Bottle, Toner: Toner Bottles			
7906 001	S: PCU: [K]	*EGB	Displays the number of sheets printed with the	
7906 002	S: PCU: [M]	*EGB	previous maintenance units.	
7906 003	S: PCU: [C]	*EGB	[0 to 9999999 / <b>0</b> / 1 / step]	

	1		
7906 004	S: PCU: [Y]	*EGB	
7906 008	S: Trans Belt Unit	*EGB	
7906 009	S: T. Roll 2	*EGB	
7906 010	S: Fusing Unit	*EGB	
7906 011	R: PCU: [K]	*EGB	
7906 012	R: PCU: [M]	*EGB	
7906 013	R: PCU: [C]	*EGB	Displays the number of revolutions for each unit in
7906 014	R: PCU: [Y]	*EGB	the previous maintenance units.
7906 018	R: Trans Belt Unit	*EGB	[0 to 9999999 / <b>0</b> / 1 revolution/step]
7906 019	R: Paper Trans	*EGB	
7906 020	R: Fusing Unit	*EGB	
7906 026	Toner Supply: [K]	*EGB	
7906 027	Toner Supply: [M]	*EGB	Displays the toner supply time for each color in the previous toner bottles.
7906 028	Toner Supply: [C]	*EGB	[0 to 9999999 / <b>0</b> / 1/step]
7906 029	Toner Supply: [Y]	*EGB	
7906 030	R%: PCU: [K]	*EGB	
7906 031	R%: PCU: [M]	*EGB	Displays the value given by the following formula:
7906 032	R%: PCU: [C]	*EGB	(Current count / Yield count) x 100, where
7906 033	R%: PCU: [Y]	*EGB	"Current count" is the current values in the counter for the part, and "Yield count" is the recommended
7906 034	R%: Trans Belt Unit	*EGB	yield.
7906 035	R%: T. Roll 2	*EGB	[0 to 999 / <b>0</b> / 1%/step]
7906 036	R%: Fusing Unit	*EGB	
7906 037	S: By-pass	*EGB	
7906 038	S: Tray 1	*EGB	Displays the number of sheets fed with the previous
7906 039	S: Tray 2	*EGB	maintenance unit. [0 to 9999999 / <b>0</b> / 1/step]
7906 040	S: Tray 3	*EGB	

|--|

7931	[Toner Info [K]] Toner Bottle Information [K]		
/931	(R: Replacement or E: Enc	E: End)	
7931 001	Model ID	*EGB	
7931 002	Cartridge Ver	*EGB	
7931 003	Brand ID	*EGB	
7931 004	Area ID	*EGB	
7931 005	Production ID	*EGB	
7931 006	Color ID	*EGB	Displays the information number for each category.
7931 007	Maintenance ID	*EGB	
7931 008	New	*EGB	
7931 009	Recycle Count	*EGB	
7931 010	Prod. Date	*EGB	
7931 011	Serial No.	*EGB	
7931 012	Remaining Toner	*EGB	Displays the remaining toner rate.  [0 to 100 / 100 / 1%/step]
7931 013	Toner End	*EGB	Displays the toner end record.
7931 014	Refill Flag	*EGB	Displays the refilling record.
7931 015	R: Total Counter	*EGB	Displays the total number of sheets when replacing
7931 016	R: Color Counter	*EGB	the new toner bottle for the b/w mode or the full color mode.  [0 to 9999999 / 0 / 1/step]
7931 017	E: Total Counter	*EGB	Displays the total number of sheets when detecting
7931 018	E: Color Counter	*EGB	the toner end for the b/w mode or the full color mode.  [0 to 9999999 / 0 / 1/step]
7931 019	Near End	*EGB	Displays the toner near end record.  [0 to 3 / 0 / 1/step]

7931 020	Install Date	*EGB	Displays the date of the install the toner bottle.
7931 021	Toner End Date	*EGB	Displays the date of the toner end.

7932	[Toner Info [M]] Toner Bottle Information [M]		
	(R: Replacement or E: End)		
7932 001	Model ID	*EGB	
7932 002	Cartridge Ver	*EGB	
7932 003	Brand ID	*EGB	
7932 004	Area ID	*EGB	
7932 005	Production ID	*EGB	
7932 006	Color ID	*EGB	Displays the information number for each category.
7932 007	Maintenance ID	*EGB	
7932 008	New	*EGB	
7932 009	Recycle Count	*EGB	
7932 010	Prod. Date	*EGB	
7932 011	Serial No.	*EGB	
7932 012	Remaining Toner	*EGB	Displays the remaining toner rate.  [0 to 100 / 100 / 1%/step]
7932 013	Toner End	*EGB	Displays the toner end record.
7932 014	Refill Flag	*EGB	Displays the refilling record.
7932 015	R: Total Counter	*EGB	Displays the total number of sheets when replacing
7932 016	R: Color Counter	*EGB	the new toner bottle for the b/w mode or the full color mode.  [0 to 9999999 / 0 / 1/step]
7932 017	E: Total Counter	*EGB	Displays the total number of sheets when detecting
7932 018	E: Color Counter	*EGB	the toner end for the b/w mode or the full color mode.  [0 to 9999999 / 0 / 1/step]
7932 019	Near End	*EGB	Displays the toner near end record.

			[0 to 3 / <b>0</b> / 1/step]
7932 020	Install Date	*EGB	Displays the date of the install the toner bottle.
7932 021	Toner End Date	*EGB	Displays the date of the toner end.

7933	[Toner Info [C]] Toner Bottle Information [C] (R: Replacement or E: End)		
7933 001	Model ID	*EGB	
7933 002	Cartridge Ver	*EGB	
7933 003	Brand ID	*EGB	
7933 004	Area ID	*EGB	
7933 005	Production ID	*EGB	
7933 006	Color ID	*EGB	Displays the information number for each category.
7933 007	Maintenance ID	*EGB	
7933 008	New	*EGB	
7933 009	Recycle Count	*EGB	
7933 010	Prod. Date	*EGB	
7933 011	Serial No.	*EGB	
7933 012	Remaining Toner	*EGB	Displays the remaining toner rate.  [0 to 100 / 100 / 1%/step]
7933 013	Toner End	*EGB	Displays the toner end record.
7933 014	Refill Flag	*EGB	Displays the refilling record.
7933 015	R: Total Counter	*EGB	Displays the total number of sheets when replacing
7933 016	R: Color Counter	*EGB	the new toner bottle for the b/w mode or the full color mode.  [0 to 9999999 / 0 / 1/step]
7933 017	E: Total Counter	*EGB	Displays the total number of sheets when detecting
7933 018	E: Color Counter	*EGB	the toner end for the b/w mode or the full color mode.  [0 to 9999999 / 0 / 1/step]

7933 019	Near End	*EGB	Displays the toner near end record.  [0 to 3 / 0 / 1/step]
7933 020	Install Date	*EGB	Displays the date of the install the toner bottle.
7933 021	Toner End Date	*EGB	Displays the date of the toner end.

7934	[Toner Info [Y]] Toner Bottle Information [Y]			
7934	(R: Replacement or E: End times)			
7934 001	Model ID	*EGB		
7934 002	Cartridge Ver	*EGB		
7934 003	Brand ID	*EGB		
7934 004	Area ID	*EGB		
7934 005	Production ID	*EGB		
7934 006	Color ID	*EGB	Displays the information number for each category.	
7934 007	Maintenance ID	*EGB		
7934 008	New	*EGB		
7934 009	Recycle Count	*EGB		
7934 010	Prod. Date	*EGB		
7934 011	Serial No.	*EGB		
7934 012	Remaining Toner	*EGB	Displays the remaining toner rate.  [0 to 100 / 100 / 1%/step]	
7934 013	Toner End	*EGB	Displays the toner end record.	
7934 014	Refill Flag	*EGB	Displays the refilling record.	
7934 015	R: Total Counter	*EGB	Displays the total number of sheets when replacing	
7934 016	R: Color Counter	*EGB	the new toner bottle for the b/w mode or the full color mode.  [0 to 9999999 / 0 / 1/step]	
7934 017	E: Total Counter	*EGB	Displays the total number of sheets when detecting	
7934 018	E: Color Counter	*EGB	the toner end for the b/w mode or the full color mode.	

			[0 to 9999999 / <b>0</b> / 1/step]
7934 019	Near End	*EGB	Displays the toner near end record.  [0 to 3 / 0 / 1/step]
7934 020	Install Date	*EGB	Displays the date of the install the toner bottle.
7934 021	Toner End Date	*EGB	Displays the date of the toner end.

7935	[PM Interval] Preventive Maintenance Interval (Sheets or Rotations, Unit)		
7935 004	R: Trans. Belt	*EGB	[0 to 500.00 / <b>106.32</b> / 0.01 Km/step]
7935 005	S: Fusing	*EGB	[0 to 255 / <b>100</b> / 1 K/step]
7935 006	R: Fusing	*EGB	[0 to 200.00 / <b>170.54</b> / 0.01 Km/step]

7936	[PM Count. Reset] Preven	A Count. Reset] Preventive Maintenance Counter Reset			
		Resets the following SP counters.			
		• SP3251-001 to -004			
		• SP3303-001 to -004			
		• SP3821-001 to -010			
		• SP7931-001 to -021			
	All	• SP7932-001 to -021			
7024 001		• SP7933-001 to -021			
7936 001		• SP7934-001 to -021			
		• SP9001-001 to -024			
		• SP9001-029 to -032			
		• SP9001-059 to -061			
		• SP9001-075 to -077			
		• SP9901-001, 002			
		• SP9914-005 to -006			

7941	[TonerLog1 [K]] Toner Bottle Log Data 1 [K] (R: Replacement or E: End)		
7941 001	S/N	*EGB	Displays the serial number of the previous bottle.

7941 002	Installed Date	*EGB	Displays the installed date of the previous bottle.
7941 003	Total Count	*EGB	Displays the total counter of the previous bottle.
7741000		LOB	Displays the lolar counter of the previous bothe.
	[TonerLog2 [K]]	1	
7941 004	s/N	*EGB	Displays the serial number of the one before the previous bottle.
7941 005	Installed Date	*EGB	Displays the installed date of the one before the previous bottle.
7941 006	Total Count	*EGB	Displays the total counter of the one before the previous bottle.
	[TonerLog3 [K]]		
7941 007	s/N	*EGB	Displays the serial number of the one before the second previous bottle.
7941 008	Installed Date	*EGB	Displays the installed date of the one before the second previous bottle.
7941 009	Total Count	*EGB	Displays the total counter of the one before the second previous bottle.
	[TonerLog4 [K]]		
7941 010	s/N	*EGB	Displays the serial number of the third previous bottle.
7941 011	Installed Date	*EGB	Displays the installed date of the third previous bottle.
7941 012	Total Count	*EGB	Displays the total counter of the third previous bottle.
	[TonerLog5 [K]]		
7941 013	s/N	*EGB	Displays the serial number of the fourth previous bottle.
7941 014	Installed Date	*EGB	Displays the installed date of the fourth previous bottle.
7941 015	Total Count	*EGB	Displays the total counter of the fourth previous bottle.

7942	[TonerLog1 [M]] Toner Bottle Log Data 1 [K]				
7942	(R: Replacement or E: E	nd)			
7942 001	S/N	*EGB	Displays the serial number of the previous bottle.		
7942 002	Installed Date	*EGB	Displays the installed date of the previous bottle.		
7942 003	Total Counter	*EGB	Displays the total counter of the previous bottle.		
	[TonerLog2 [M]]	1			
7942 004	S/N	*EGB	Displays the serial number of the one before the previous bottle.		
7942 005	Installed Date	*EGB	Displays the installed date of the one before the previous bottle.		
7942 006	Total Counter	*EGB	Displays the total counter of the one before the previous bottle.		
	[TonerLog3 [M]]	,			
7942 007	S/N	*EGB	Displays the serial number of the one before the second previous bottle.		
7942 008	Installed Date	*EGB	Displays the installed date of the one before the second previous bottle.		
7942 009	Total Counter	*EGB	Displays the total counter of the one before the second previous bottle.		
	[TonerLog4 [M]]				
7942 010	S/N	*EGB	Displays the serial number of the third previous bottle.		
7942 011	Installed Date	*EGB	Displays the installed date of the third previous bottle.		
7942 012	Total Counter	*EGB	Displays the total counter of the third previous bottle.		
	[TonerLog5 [M]]				
7942 013	S/N	*EGB	Displays the serial number of the fourth previous bottle.		

7942 014	Installed Date	*EGB	Displays the installed date of the fourth previous bottle.
7942 015	Total Count	*EGB	Displays the total counter of the fourth previous bottle.

7943	[TonerLog1 [C]] Toner Bottle Log Data 1 [K] (R: Replacement or E: End)			
7943 001	S/N	*EGB	Displays the serial number of the previous bottle.	
7943 002	Installed Date	*EGB	Displays the installed date of the previous bottle.	
7943 003	Total Counter	*EGB	Displays the total counter of the previous bottle.	
	[TonerLog2 [C]]			
7943 004	S/N	*EGB	Displays the serial number of the one before the previous bottle.	
7943 005	Installed Date	*EGB	Displays the installed date of the one before the previous bottle.	
7943 006	Total Counter	*EGB	Displays the total counter of the one before the previous bottle.	
	[TonerLog3 [C]]			
7943 007	S/N	*EGB	Displays the serial number of the one before the second previous bottle.	
7943 008	Installed Date	*EGB	Displays the installed date of the one before the second previous bottle.	
7943 009	Total Counter	*EGB	Displays the total counter of the one before the second previous bottle.	
	[TonerLog4 [C]]	g4 [C]]		
7943 010	s/N	*EGB	Displays the serial number of the third previous bottle.	
7943 011	Installed Date	*EGB	Displays the installed date of the third previous bottle.	
7943 012	Total Counter	*EGB	Displays the total counter of the third previous bottle.	

	[TonerLog5 [C]]		
7943 013	S/N	*EGB	Displays the serial number of the fourth previous bottle.
7943 014	Installed Date	*EGB	Displays the installed date of the fourth previous bottle.
7943 015	Total Count	*EGB	Displays the total counter of the fourth previous bottle.

7944	[TonerLog1 [Y]] Toner Bo	•	ata 1 [K]
7944 001	S/N	*EGB	Displays the serial number of the previous bottle.
7944 002	Installed Date	*EGB	Displays the installed date of the previous bottle.
7944 003	Total Counter	*EGB	Displays the total counter of the previous bottle.
	[TonerLog2 [Y]]		
7944 004	S/N	*EGB	Displays the serial number of the one before the previous bottle.
7944 005	Installed Date	*EGB	Displays the installed date of the one before the previous bottle.
7944 006	Total Counter	*EGB	Displays the total counter of the one before the previous bottle.
	[TonerLog3 [Y]]	1	
7944 007	S/N	*EGB	Displays the serial number of the one before the second previous bottle.
7944 008	Installed Date	*EGB	Displays the installed date of the one before the second previous bottle.
7944 009	Total Counter	*EGB	Displays the total counter of the one before the second previous bottle.
	[TonerLog4 [Y]]	1	
7944 010	S/N	*EGB	Displays the serial number of the third previous bottle.

7944 011	Installed Date	*EGB	Displays the installed date of the third previous bottle.
7944 012	Total Counter	*EGB	Displays the total counter of the third previous bottle.
	[TonerLog5 [Y]]		
7944 013	S/N	*EGB	Displays the serial number of the fourth previous bottle.
7944 014	Installed Date	*EGB	Displays the installed date of the fourth previous bottle.
7944 015	Total Count	*EGB	Displays the total counter of the fourth previous bottle.

### SP8-XXX (Data Log 2)

The counters in Data Log 2 are commonly used in multiple machines. Data Log 2 includes the counters of the functions or units that are not supported by Model G-P1a and P1b. The counters in Data Log 2 are cleared by SP5-801 (Memory Clear) or SP7-808 (Counter Reset).

Keys and abbreviations in Data Log 2

Program-related keys and abbreviations				
T:	The grand total of the counters of all application programs			
P:	The counter of the printer application program excluding the events related to the document server			
O:	The counter of other application programs including remote application programs			

8001	[T: Total Jobs]	*CTL	Tatal inha
8004	[P: Total Jobs]	*CTL	Total jobs
	The number of times the application program starts a job [0 to 9999999/ 0 / 1]		

- The jobs interrupted by paper jams or some other errors are also counted.
- The jobs executed by SPs are not counted.

8021	[T: Pjob/LS]	*CTL	Print job	
------	--------------	------	-----------	--

8024	[P: Pjob/LS]	*CTL	/ Local storage; document server
8027	[O: Pjob/LS]	*CTL	, , , , , , , , , , , , , , , , , , , ,
	The number of times the application program stores data on the document server [0 to 9999999 / 0 / 1]		

• When images stored on the document server by a network application (including Palm 2), are printed with another application, the O: counter increments.

8031	[T: Pjob/DesApl]	*CTL		
8034	[P: Pjob/DesApl	*CTL	Print job/ Designated application program	
803 <i>7</i>	[O: Pjob/DesApl]	*CTL		
	The number of times the application program retrieves data from the document server [0 to 9999999 / 0 / 1]			

• When documents already stored on the document server are printed, the counter of the application program that executes the print job increases.

[T: FIN Jobs]	*CTL		
[P: FIN Jobs]	*CTL	Finish, post-print processing jobs	
[O: FIN Jobs]	*CTL		
The number of times the app [0 to 9999999/ 0 / 1]	plication program uses the finisher		
Sort	The number of times the application program starts the sort mode		
Stack	The number of times the application program starts the stack mode		
Staple	The number of times the application program starts the stapl mode		
Booklet	The number of times the application program starts the boomode  Note  The counter of the staple mode (003) can also increase.		
	[P: FIN Jobs]  [O: FIN Jobs]  The number of times the application [0 to 9999999/0/1]  Sort  Stack  Staple	[P: FIN Jobs] *CTL  [O: FIN Jobs] *CTL  The number of times the application properties of times the ap	

005	Z-Fold	The number of times the application program starts the Z-fold mode  Note
		The booklet mode is not included.
		The number of times the application program starts the punch mode
006	Punch	Note
		The counter of the printer application program (P:) can also increase.
007	Other	(Reserved)

8071	[T: Jobs/PGS]	*CTL		
8074	[P: Jobs/PGS] *CTL		Jobs/ Pages	
8077	[O: Jobs/PGS]	*CTL		
	The number of jobs that try [0 to 9999999/ 0 / 1]	to output o	a specific num	ber of pages
-001	1 Page		-008	21 to 50 Pages
-002	2 Pages		-009	51 to 100 Pages
-003	3 Pages		-010	101 to 300 Pages
-004	4 Pages		-011	301 to 500 Pages
-005	5 Pages		-012	501 to 700 Pages
-006	6 to 10 Pages		-013	701 to 1000 Pages
-007	11 to 20 Pages		-014	1001 to Pages

- The jobs interrupted by paper jams or some other errors are also counted.
- If a job is suspended and restarted later, the job is seen as one job.

8381	[T: Total PrtPGS]	*CTL	
8384	[P: Total PrtPGS]	*CTL	Total print pages
8387	[O: Total PrtPGS]	*CTL	

The number of sheets that the application program tries to print (excluding the pages printed in the SP mode)

[0 to 9999999/0/1]

The following pages are not counted as printed pages:

- Blank pages in a duplex printing job
- Blank pages inserted as document covers, chapter title sheets, and slip sheets
- Reports printed to confirm counts
- All reports done in the service mode (service summaries, engine maintenance reports, etc.)
- Test prints for machine image adjustment
- Error notification reports
- Partially printed pages as the result of a printer jam

8391	[LSize PrtPGS]		
	Large size print pages	*CTL	The number of sheets printed on A3/DLT and larger sizes [0 to 9999999/0/1]

8411	[Prints/Duplex]		
	Prints/Duplex	*CTL	The number of sheets used in duplex printing [0 to 9999999/ 0 / 1]

• The counter increases by +1 when both sides (front/back) are printed. The counter does not increase when one of the two sides is not printed (e.g., the last page of the documents that have three pages, five pages, seven pages, and so on).

8421	[T: PrtPGS/Dup Comb]	*CTL			
8424	[P: PrtPGS/Dup Comb]	*CTL	Print pages/ Duplex printing combine		
8427	[O: PrtPGS/Dup Comb]	*CTL			
	The number of sheets used in binding and combining [0 to 9999999 / 0 / 1]				
001	Simplex> Duplex	*CTL			
004	Simplex Combine	*CTL			

005	Duplex Combine	*CTL	
006	2>	*CTL	2 pages on 1 side (2-Up)
007	4>	*CTL	4 pages on 1 side (4-Up)
008	6>	*CTL	6 pages on 1 side (6-Up)
009	8>	*CTL	8 pages on 1 side (8-Up)
010	9>	*CTL	9 pages on 1 side (9-Up)
011	16>	*CTL	16 pages on 1 side (16-Up)
012	Booklet	*CTL	
013	Magazine	*CTL	

- These counters are useful for the users who want to know how much paper they have saved.
- Partially printed sheets are also counted as 1 page (e.g, the last page in the 4-Up mode is only partially printed when the documents have 5, 6, or 7 pages, 9, 10, or 11 pages, 13, 14, or 15 pages, and so on.).
- Here is a summary of how the counters work in the booklet and magazine modes.

Вос	klet	Magazine		
Original Pages	Count	Original Pages	Count	
1	1	1	1	
2	2	2	2	
3	2	3	2	
4	2	4	2	
5	3	5	4	
6	4	6	4	
7	4	7	4	
8	4	8	4	

8431	[T: PrtPGS/ImgEdt]	*CTL	Print pages/ Image editing performed on the
8434	[P: PrtPGS/ImgEdt]		original with the copier GUI

8437	[O: PrtPGS/ImgEdt]	*CTL			
	The number of pages that the application program handles in a specific way [0 to 9999999 / 0 / 1]				
001	Cover/Slip Sheet	*CTL	The number of cover sheets or slip sheets inserted  Note  A duplex-printed cover is counted as two.		
002	Series/Book	*CTL	The number of pages printed in series (one side) or in the booklet mode		
003	User Stamp	*CTL	The number of pages where stamps were applied (including page numbering and date stamping)		

8441	[T: PrtPGS/Ppr Size]	*CTL		
8444	[P: PrtPGS/Ppr Size]	*CTL	Print page	s/ Paper size
8447	[O: PrtPGS/Ppr Size]	*CTL		
	The number of sheets of a s [0 to 9999999/ 0 / 1]	pecific p	aper size tha	t the application program uses
001	A3		007	LG
002	A4		800	LT
003	A5		009	HLT
004	B4		010	Full Bleed
005	B5	5		Other (Standard)
006	DLT		255	Other (Custom)

These counters do not distinguish between LEF and SEF.

8451	[PrtPGS/Ppr Tray]	*CTL	Print pages/ Paper tray		
	The number of sheets fed for [0 to 9999999/ 0 / 1]	er of sheets fed from a specific tray 2999/0/1]			
8451 001	Bypass Tray	*CTL	By-pass Tray		

8451 002	Tray 1	*CTL	Printer
8451 003	Tray 2	*CTL	Paper Tray Unit/LCT (Optional)
8451 004	Tray 3	*CTL	Paper Tray Unit (Optional)
8451 005	Tray 4	*CTL	(Not used)
8451 006	Tray 5	*CTL	(Not used)
8451 007	Tray 6	*CTL	(Not used)
8451 008	Tray 7	*CTL	(Not used)
8451 009	Tray 8	*CTL	(Not used)
8451 010	Tray 9	*CTL	(Not used)

8461	[T: PrtPGS/Ppr Type]	*CTL	Duinton	/ D
8464	[P: PrtPGS/Ppr Type]	*CTL	- Frint po	ages/Paper type
	The number of sheets of spe [0 to 9999999/ 0 / 1]	ecific pap	er types	
001	Normal	00	5	Normal (Back)
002	Recycled	00	6	Thick (Back)
003	Special	00	7	ОНР
004	Thick	00	8	Other

- These counters increase when the paper is output. On the other hand, the PM counter increases (to measure the service life of each feed roller) when the paper is fed.
- Blank sheets (covers, chapter covers, slip sheets) are also counted.
- During duplex printing, a sheet printed on two sides and a sheet printed on one side are both counted as 1.

8471	[PrtPGS/Mag]	*CTL	Print pag	jes/ Magnification
	The number of pages magnified or reduced [0 to 9999999/ 0 / 1]			
8471 001	to 49%	847	71 004	101% to 200%

8471 002	50% to 99%	8471 005	201% to
8471 003	100%		

- Some application programs (on the computer) can specify the magnification setting of the printer driver (e.g., MS Excel). In a case like this, SP8-471 recognizes the setting and increases the corresponding counter. Other application programs can magnify or reduce the print images on their own. In a case like this, SP8-471 does not recognize the magnification setting of the application programs and increase the counter of 100%.
- Magnification adjustment conducted on the document server is not counted.
- Blank cover sheets and slip sheets are regarded as 100%.

8481	[T: PrtPGS/TonSave]	*CTL	Print pages/Toner save			
8484	[P: PrtPGS/TonSave]	*CTL	Trilli pages/ Toller save			
	The number of pages printed with the toner save feature activated [0 to 9999999 / 0 / 1]					

• These counters display the same result.

8501	[T: PrtPGS/Col Mode]	*CTL	Drint no	ages/ Color mode
8504	[P: PrtPGS/Col Mode]	*CTL	riiii pe	ages/ Color mode
8507	[O: PrtPGS/Col Mode]			
	The number of pages printed in a specific color mode [0 to 9999999 / 0 / 1]			
001	B/W	0	04	Single Color
002	Single Color	0	05	Two Color
003	Full Color			

8511	[T: PrtPGS/Emul]	*CTL	Print pages/ Emulation			
8514	[P: PrtPGS/Emul]	*CTL	Film pages/ Emolation			
	The number of pages printed by the printer emulation mode [0 to 9999999 / 0 / 1]					

001	RPCS	008	RTIFF
002	RPDL	009	PDF
003	PS3	010	PCL5e/5c
004	R98	011	PCL XL
005	R16	012	IPDL-C
006	GL/GL2	013	BM-Links (for local models only)
007	R55	014	Other

• These counters display the same result.

8521	[T: PrtPGS/FIN]	*CTL	Drint n	ages/ Finish post-print processing
8524	[P: PrtPGS/FIN]	*CTL	Trini po	ages/ rimsn posi-prim processing
	The number of pages proce [0 to 9999999/ 0 / 1]	essed by	the finishe	ir
001	Sort	00	)5	Z-Fold
002	Stack	00	)6	Punch
003	Staple	00	)7	Other
004	Booklet			

- Even if the pages are too many for the finisher to staple, all pages are counted (including unstapled pages).
- The counter of stapling (003) increases by +1 when the paper is transported from the printer to the tray of the finisher. Even if a paper jam occurs on this path, the counter (003) increases. If the same job is retried, the counter (003) increases once again.

8531	[Staples]	*CTL	Staples	
	The number of staples			
	[0 to 9999999/ 0 / 1]			

8581	[T: Counter]	*CTL	Total counter		
	The number of outputs in a specific color mode				

	[0 to 9999999/ 0 / 1]				
001	Total	010	Total: Color		
002	Total: Full Colo	011	Total: B/W		
003	B&W/Single Color	012	Full Colour: A3		
004	Development: CMY	013	Full Colour: B4		
005	Development: K	014	Full Colour Print		
008	Print: Color	015	Mono Colour Print		
009	Print: B/W				

8584	[P: Counter]	*CTL	Print cou	nter
	The number of outputs in c	a specific o	color mod	e
8584 001	B/W	858	34 004	Single Color
8584 002	Mono Color	858	34 005	Two Color
8584 003	Full Color			

8591	[O: Counter]	*CTL	Other co	ounter
	The number of A3/DLT, duplex printing, or sta [0 to 9999999/ 0 / 1]			aples
8591 001	A3/DLT	859	71 002	Duplex

• Note that these counters are not for the printer application program.

8601	[CvgCounter]	*CTL			
	The coverage rate of B/W printing or Color printing [0 to 9999999/ 0 / 1]				
8601 001	Cvg: BW %	860	01 021	CvgCounter 1	
8601 002	Cvg: FC %	860	01 022	CvgCounter 2	

8601 011	Cvg: BW Pages	8601 023	CvgCounter 3
8601 012	Cvg: FC Pages		

8771	[Dev Counter]	*CTL	Develop	ment counter	
	The number of rotations of [0 to 9999999/ 0 / 1]	f rotations of the development rollers			
8771 001	Total	877	71 004	М	
8771 002	К	877	71 005	С	
8771 003	Υ				

8781	[TonerBotolInfo] Toner Bottle Information			
8781 001	Last [BK]	*EGB		
8781 002	Last [Y]	*EGB	The number of toner bottles (bottles) already replaced	
8781 003	Last [M]	*EGB	[0 to 9999999/ 0 / 1]	
8781 004	Last [C]	*EGB		

8801	[Toner Remain]	*CTL	Toner remain
8801 001	К	*CTL	
8801 001	Υ	*CTL	The percentage of the remaining toner
8801 001	М	*CTL	[0 to 100/0/1]
8801 001	С	*CTL	

8851	[Cvr Cnt: 0-10%] Coverage Counter (Sheets, [Color]) S: Sheets			
	[0 to 9999999 / 0 / 1 sheet/step] (*EGB)			
8851 011	0 - 2%: BK	8851 031	5 - 7%: Bk	
8851 012	0 - 2%: Y	8851 032	5 - 7%: Y	
8851 013	0 - 2%: M	8851 033	5 - 7%: M	

8851 014	0 - 2%: C	8851 034	5 - 7%: C
8851 021	3 - 4%: BK	8851 041	8 - 10%: Bk
8851 022	3 - 4%: Y	8851 042	8 - 10%: Y
8851 023	3 - 4%: M	8851 043	8 - 10%: M
8851 024	3 - 4%: C	8851 044	8 - 10%: C

8861	[Cvr Cnt: 11-20%] Coverage Counter (Sheets, [Color]) S: Sheets			
8871	[Cvr Cnt: 21-30%] Coverage Counter (Sheets, [Color]) S: Sheets			
8881	[Cvr Cnt: 31%-] Coverage Counter (Sheets, [Color]) S: Sheets			
001	[K]	*EGB		
002	[Y]	*EGB	The number of printed sheets of a specific coverage ratio	
003	[M]	*EGB	[0 to 9999999/ 0 / 1]	
004	[C]	*EGB		

• For example, SP8-851-001 displays the number of printed sheets whose black-coverage ratio is 0 percent through 10 percent. SP8-881-004 displays the number of scanned sheets whose cyan-coverage ratio is 31 percent or higher.

8891	[Page/Toner Bottle] (Sheets, [Color]) S: Sheets			
8891 001	[K]	*EGB		
8891 002	[Y]	*EGB	The number of printed sheets	
8891 003	[M]	*EGB	[0 to 9999999/ 0 / 1]	
8891 004	[C]	*EGB		

8901
------

8901 001	[K]	*EGB	
8901 002	[Y]	*EGB	The number of printed sheets with the previously replaced units
8901 003	[M]	*EGB	[0 to 9999999/ 0 / 1]
8901 004	[C]	*EGB	

8911	[Page/Ink Prev2]		
8911 001	[K]	*EGB	
8911 002	[Y]	*EGB	The number of printed sheets with the units that was replaced before the previous unit.
8911 003	[M]	*EGB	[0 to 9999999/ 0 / 1]
8911 004	[C]	*EGB	

8921	[Cvr Cnt/Total]	*CTL	Coverage Counter Total
8921 001	Coverage (%): Bk	*CTL	
8921 002	Coverage (%): Y	*CTL	
8921 003	Coverage (%): M	*CTL	
8921 004	Coverage (%): C	*CTL	The amount of total coverage rate and printouts in each coverage rate
8921 011	Coverage/P: Bk	*CTL	[0 to 9999999/ 0 / 1]
8921 012	Coverage/P: Y	*CTL	
8921 013	Coverage/P: M	*CTL	
8921 014	Coverage/P: C	*CTL	

	[Machine Status]	*CTL	Machine status	
8941	The amount of time the machine spends in a specific mode  [0 to 9999999/ 0 / 1]			
8941 001	Operation Time	*CTL	The engine is operating. The counter does not include the time when the data is being saved in the HDD (while engine is not operating).	
8941 002	Standby Time	*CTL	The engine is not operating. The counter includes the time when the data is being saved in the HDD.	

			The counter does not include the time when the machine is n the Energy Saver Mode, the Low Power Mode, or the Off Mode.
8941 003	Energy Save Time	*CTL	The machine is in the Energy Saver Mode. The counter includes the time when the background printing is being executed.
8941 004	Low Power Time	*CTL	The machine is in the Low Power Mode. The counter includes the time when the engine is on in the Energy Saver Mode. The counter also includes the time when the background printing is being executed.
8941 005	Off Mode Time	*CTL	The machine is in the Off Mode. The counter includes the time when the background printing is being executed. The counter does not include the time when the main power switch is off.
8941 006	SC	*CTL	The total downtime caused by SC codes
8941 007	PrtJam	*CTL	The total downtime caused by paper jams
8941 008	OrgJam	*CTL	The total downtime caused by original jams
8941 009	Supply PM Unit E	*CTL	The total downtime caused by toner ends

8999	[AdminCounter]	*CTL	Coverage Counter Total
8999 001	Total	*CTL	
8999 006	Printer: FC	*CTL	
8999 007	Printer: FC	*CTL	
8999 008	Printer: OneC	*CTL	
8999 009	Printer: TwoC	*CTL	Displays the administrator counter in the UP mode.
8999 013	Duplex	*CTL	[0 to 9999999/ 0 / 1]
8999 014	Cvg:FC %	*CTL	
8999 015	Cvg:BW %	*CTL	
8999 016	Cvg:FC Pges		
8999 017	Cvg:BW Pages		

### SP9-XXX

9001			
	[Shutter Motor]		
9001 064	Open Time	*EGB	Adjusts the open shutter time.  [0 to 990 / 210 / 10 ms/step]
9001 065	Close Time	*EGB	Adjusts the closed shutter time.  [0 to 990 / 100 / 10 ms/step]
	[Filming Remov.] Filming I	Removal	
9001 074	Interval: [k]	*EGB	Adjusts the threshold for filming removal. This SP is executed even the print job is proceeding.
	P.d. 101Vd D	0 1	[0 to 65535 / <b>150</b> / 1/step]
	[Vb: LS] Vb at Low Proces	T .	T
9001 083	Vb Shift	*EGB	[0 to 65535 / <b>10</b> / 1/step]
	[Vc: LS] Vc at Low Proces	s Speed	
9001 084	Vc Shift	*EGB	[0 to 65535 / <b>0</b> / 1/step]
	[Filming Remov.] Filming Removal: Job end		
9001 099	Interval (E): [K]	*EGB	Displays the counter that counts the number of sheets in black and white printing mode from previous filming removal.
			[0 to 65535 / <b>0</b> / 1/step]
9001 100	Interval (E): [FC]	*EGB	Displays the counter that counts the number of sheets in full color printing mode from previous filming removal.
			[0 to 65535 / <b>0</b> / 1/step]
9001 101	Interval: [end]	*EGB	Adjusts the threshold for job end filming removal. This SP is not executed until the print job has ended. [0 to 65535 / <b>75</b> / 1/step]
9001 102	Vk Coef.		[0.00 to 1.00 / <b>0.00</b> / 0.01 /step]
9001 103			[0 to 100 / <b>100</b> / 1%/step]

0000	[Time Adjust.] Time Adjustment				
9003 Adjusts the current yea		ır, month, date, hour, and minute.			
9003 001	Year	-	[0 to 99 / <b>0</b> / 1 y/step]		
9003 002	Month	-	[1 to 12 / 1 / 1 m/step]		
9003 003	Date	-	[1 to 31 / 1 / 1 d/step]		
9003 004	Hour	-	[0 to 23 / <b>0</b> / 1 hour/step]		
9003 005	Minute	-	[0 to 59 / <b>0</b> / 1 m/step]		

9903	[Gamma] Gamma Table (Process Speed, [Color]) RS: Regular Speed, LS: Low Speed  Adjusts the gamma table lists for each mode.		
9903 028	OHP: K3	*EGB	
9903 031	OHP: M3	*EGB	[0. 01 /7 /1/. ]
9903 034	OHP: C3	*EGB	[0 to 31 / <b>7</b> / 1/step]
9903 037	OHP: Y3	*EGB	

0004	[Vpp]					
9906	Adjusts the AC charge bio	Adjusts the AC charge bias correction for each environment.				
9906 001	Vpp1: LL	*EGB	[0 to 3000 / <b>1950</b> / 1 V/step]			
9906 002	Vpp2: LL	*EGB	[0 to 3000 / <b>2200</b> / 1 V/step]			
9906 003	Vpp1: ML	*EGB	[0 to 3000 / <b>1780</b> / 1 V/step]			
9906 004	Vpp2: ML	*EGB	[0 to 3000 / <b>2030</b> / 1 V/step]			
9906 005	Vpp1: MM	*EGB	[0 to 3000 / <b>1770</b> / 1 V/step]			
9906 006	Vpp2: MM	*EGB	[0 to 3000 / <b>2020</b> / 1 V/step]			

9906 007	Vpp1: MH	*EGB	[0 to 3000 / <b>1810</b> / 1 V/step]
9906 008	Vpp2: MH	*EGB	[0 to 3000 / <b>2060</b> / 1 V/step]
9906 009	Vpp1: HH	*EGB	[0 to 3000 / <b>1770</b> / 1 V/step]
9906 010	Vpp2: HH	*EGB	[0 to 3000 / <b>2020</b> / 1 V/step]

9908	[Background Po.] Background Potential				
7700	Adjusts the upper or lower threshold for disabling the charge bias.				
9908 001	Upper Limit	*EGB	[0.1.200./120./1./]		
9908 002	Lower Limit	*EGB	[0 to 300 / <b>130</b> / 1/step]		

9910	[Factory Adj.]		
9910 001	Charge Output	*EGB	Performs the charge output.
9910 003	[All] TC Initial	*EGB	Performs the toner supply for all colors.
9910 004	[All] TC Initial	*EGB	Performs the developer initializing for all colors.
9910 005	[K] TC Initial	*EGB	Performs the developer initializing for black.
9910 006	[M] TC Initial	*EGB	Performs the developer initializing for magenta.
9910 007	[C] TC Initial	*EGB	Performs the developer initializing for cyan.
9910 008	[Y] TC Initial	*EGB	Performs the developer initializing for yellow.
9910010	[K] Toner FillUP	*EGB	Fills up the black toner.
9910011	[M] Toner FillUP	*EGB	Fills up the magenta toner.
9910012	[C] Toner FillUP	*EGB	Fills up the cyan toner.
9910013	[Y] Toner FillUP	*EGB	Fills up the yellow toner.
9910 020	Upper Limit	*EGB	Specifies the threshold for completing the toner filled up. When the toner is detected three times, the filling up the toner ends.  [0 to 5/3/1/step]
9910 021	MUSIC Vsg Adj.	*EGB	Selects the Vsg adjustment execution when the line position adjustment is manually done.

	[1	to 3 / <b>3</b> / 1 /step]
		: Normal (ON except the line position adjustment t printout interval)
	2:	: Always ON
	3:	: Always OFF

9911	[TC Initial]				
9911 001	Maximum Repeat	*EGB	Adjusts the maximum toner cartridge initializing time.  [1 to 30 / 15 / 1 / step]		
9911 002	Threshold	*EGB	Adjusts the threshold for toner cartridge initializing. [1 to 100 / 20 / 0.01 V/step]		

9912	[ST Sensor]		
9912 001	read	*EGB	Adjusts the Vcnt. <b>DFU</b>

9914	[Waste Toner NF] Waste Toner Near Full					
9914	Specifies the number of sheets to be printed after waste toner near full.					
9914 001	Print 1	*EGB	[0 to 5000 / <b>1250</b> / 1/step]			
9914 002	Print 2	*EGB	[0 to 5000 / <b>250</b> / 1/step]			
9914 003	Print 3	*EGB	[0 to 5000 / <b>125</b> / 1/step]			
9914 004	Print 4	*EGB	Specifies the number of sheets to be printed after replacing the waste toner bottle.  [0 to 5000 / 2500 / 1/step]			
9914 005	Detection Times	*EGB	Displays the times of waste toner near full.  [0 to 50 / 0 / 1 /step]			
9914 006	Near Full Count.	*EGB	Displays the total counter for waste toner near full.  [0 to 100000 / 0 / 1 /step]			

9918	[LD Pow. Change] LDB Po	wer Chan	ge
9918 001		*EGB	[0 or 1 / 0 / -] Alphanumeric

0000	[Vt ShiftAdj Mode]						
9923	These SP's measure the Vt values at regular speed or low speed. <b>DFU</b>						
9923 001	Vt ShiftAdj Mode	*EGB					
9923 002	[K]Vt Shift	*EGB					
9923 003	[M]Vt Shift	*EGB					
9923 004	[C]Vt Shift	*EGB					
9923 005	[Y]Vt Shift	*EGB					
9923 006	[K]Vt Normal Speed	*EGB					
9923 007	[M]Vt Normal Speed	*EGB					
9923 008	[C]Vt Normal Speed	*EGB					
9923 009	[Y]Vt Normal Speed	*EGB					
9923 010	[K]Vt Half Speed	*EGB					
9923 011	[M]Vt Half Speed	*EGB					
9923 012	[C]Vt Half Speed	*EGB					
9923 013	[Y]Vt Half Speed	*EGB					
9923 014	Agitate Time: STD	*EGB					
9923 015	Agitate Time: HALF	*EGB					

9924	[ACS Setting]					
9923 001	ON/OFF	*EGB	Turns on or off the ASC.  [0 or 1 / <b>0</b> / 1/step]  0: OFF, 1: ON			
9923 002	Switching	*EGB	Specifies the threshold of changing mode from color to BW when ACS is set to "0: OFF" with SP9923-001.  [0 to 255 / 0 / 1 sheet/step:			

## Input Check Table

When entering the Input Check mode, 8 digits display the result for a section. Each digit corresponds to a different device as shown in the table.

Bit No.	7	6	5	4	3	2	1	0
Result	0 or 1							

SP5-803	Bit	Description	Rea	ding				
-XXX			0	1				
001	Input Check 1							
001	Not used							
	Input	Check 2						
	0	Color OPC Motor	Locked	Not locked				
	1	Black OPC/ Development Motor	Locked	Not locked				
	2	Color Development Motor	Locked	Not locked				
002	3	Paper Feed/ Fusing Motor	Locked	Not locked				
	4	Registration Sensor	Paper detected	Paper not detected				
	5	Paper Exit Sensor	Paper not detected	Paper detected				
	6	Interlock Switch 5V	Open	Close				
	7	Top Cover Sensor	Close	Open				
003	Input Check 3							
003	Not used							
	Input Check 4							
	0-3	Not used	-	-				
004	4	Polygon Motor Fan	Locked	Not locked				
	5	Color Drum Gear Position Sensor	Activated (Actuator inside sensor)	Deactivated				

SP5-803	D.:	D	Rea	ding		
-XXX	Bit	Description	0	1		
	6 Black Drum Gear Position Sensor		Activated (Actuator inside sensor)	Deactivated		
			Opened	Closed		
005	Input	Check 5				
005	Not	used				
004	Input	Check 6				
006	Not	used				
	Input	Check 11				
	0	Paper Size Sensor 1	Pushed	Not Pushed		
	1	Paper Size Sensor 2	Pushed	Not Pushed		
	2	Paper Size Sensor 3	Pushed	Not Pushed		
011	3	Paper Size Sensor 4	Pushed	Not Pushed		
	4	Paper Width Sensor	Pushed	Not Pushed		
	5	Paper Height Sensor 1	Pushed	Not Pushed		
	6	Paper Height Sensor 2	Pushed	Not Pushed		
	7	Paper End Sensor	Not End	End		
	Input Check 12					
	0	Transfer Belt Contact Sensor	Not Contact	Contact		
	1	Transfer Roller Contact Sensor	Not Contact	Contact		
012	2	Duplex Jam Sensor 1	Paper detected	Paper not detected		
	3	Duplex Jam Sensor 1	Paper detected	Paper not detected		
	4	Fusing New Unit Sensor	New	Old		
	5	Fusing Unit Set Sensor P1	Set	Not Set		

SP5-803 -XXX	Bit	Description	Reading		
			0	1	
	6	Fusing Unit Set Sensor P2	Set	Not Set	
	7	Not Used	-	-	
	Input Check 13				
	0	Paper Overflow Sensor	Overflow	Not overflow	
	1	Fusing Exit Sensor	Paper detected	Paper not detected	
	2	Inverter Sensor	Paper detected	Paper not detected	
013	3	Fusing Unit Fan	Locked	Not locked	
	4	PSU Fan	Locked	Not locked	
	5	Drive Unit Fan	Locked	Not locked	
	6	Paper Exit Fan	Locked	Not locked	
	7	Not used			
	Input Check 14				
	0	Toner End Sensor [Y]	End	Not end	
	1	Toner End Sensor [C]	End	Not end	
014	2	Toner End Sensor [M]	End	Not end	
	3	Toner End Sensor [K]	End	Not end	
	4	New PCU Detection [Y]	New	Old	
	5	New PCU Detection [C]	New	Old	
	6	New PCU Detection [M]	New	Old	
	7	New PCU Detection [K]	New	Old	
015	Input Check 15				
	0	LDU Shutter Sensor	Close	Open	
	1	Left Cover Sensor	Close	Open	
	2	Waste Toner Overflow Sensor	Not overflow	Overflow	

SP5-803 -XXX	Bit	Description	Reading		
			0	1	
	3	By-pass Paper Detection Sensor	Paper detected	Paper not detected	
	4	By-pass Paper Size Sensor 1	Not used		
	5	By-pass Paper Size Sensor 2	Not used		
	6	By-pass Paper Size Sensor 3	Not used		
	7	By-pass Paper Size Sensor 4	Not used		
	Input Check 16				
016	0-2	Not used	-	-	
	3	Fusing Entrance Sensor	Paper detected	Paper not detected	
	4	Transfer Belt New Unit Detection	New	Old	
	5-7	Not used	-	-	
	Input Check 17				
017	0-4	Not used	-	-	
017	5	Front Door Sensor	Close	Open	
	6-7	Not used	-	-	
	Input Check 20				
	0	Tray 2 Paper Near End Sensor 1	Pushed	Not Pushed	
	1	Tray 2 Paper Near End Sensor 2	Pushed	Not Pushed	
020	2	Tray 2 Paper End Sensor	End	Not end	
	3	Tray 2 Paper Feed Sensor	Paper detected	Paper not detected	
	4	Tray 2 Paper Size 4	Pushed	Not Pushed	
	5	Tray 2 Paper Size 3	Pushed	Not Pushed	
	6	Tray 2 Paper Size 2	Pushed	Not Pushed	
	7	Tray 2 Paper Size 1	Pushed	Not Pushed	
021	Input Check 21				

SP5-803 -XXX	Bit	Description	Reading	
			0	1
	0	Tray 3 Paper Near End Sensor 1	Pushed	Not Pushed
	1	Tray 3 Paper Near End Sensor 2	Pushed	Not Pushed
	2	Tray 3 Paper End Sensor	End	Not end
	3	Tray 3 Paper Feed Sensor	Paper detected	Paper not detected
	4	Tray 3 Paper Size 4	Pushed	Not Pushed
	5 Tray 3 Paper Size 3	Pushed	Not Pushed	
	6	Tray 3 Paper Size 2	Pushed	Not Pushed
	7	Tray 3 Paper Size 1	Pushed	Not Pushed

# Output Check Table

5804	[Output Check]	
5804 001	Fusing Fan H	Fusing Unit Fan: High speed
5804 002	Fusing Fan L	Fusing Unit Fan: Low speed
5804 003	PSU Fan	PSU Fan
5804 005	Polygon Fan	Polygon Motor Fan
5804 007	PSU Inner Fan	PSU Inner Fan
5804 008	Drive Fan	Drive Unit Fan
5804 009	Exit Paper Fan H	Paper Exit Fan: High speed
5804 010	Polyg. Mir. Motor	Polygon Mirror Motor
5804 011	Exit Paper Fan L	Paper Exit Fan: Low speed
5804 012	Duplex Fan	Duplex Motor
5804 020	Paper Feed Motor	Paper Feed/ Fusing Motor
5804 022	Mono. PCU Motor	Black OPC/ Development Motor

5804 024	Color PCU Motor	Color OPC Motor
5804 026	Color Dev. Motor	Color Development Motor
5804 030	[Y] Toner Motor	Toner Supply Motor [Y]
5804 031	[C] Toner Motor	Toner Supply Motor [C]
5804 032	[M] Toner Motor	Toner Supply Motor [M]
5804 033	[K] Toner Motor	Toner Supply Motor [K]
5804 034	T. Belt Contact M	Transfer Belt Contact Motor
5804 035	T. Roll 2 Contact M	Transfer Roller Contact Motor
5804 036	LDU Shutter Motor	LDU Shutter Motor
5804 040	Trans. Belt Motor	Transfer Belt Unit Motor
5804 042	Duplex In Motor	Inverter Motor
5804 044	Duplex Exit Motor	Duplex Motor
5804 060	Paper Feed Clutch	Paper Feed Clutch
5804 061	Relay Clutch	Relay Transport Clutch
5804 062	Regist. Clutch	Registration Clutch
5804 063	Develop. Clutch	Development Clutch
5804 064	By-pass Solenoid	By-pass Solenoid
5804 065	Duplex Solenoid	Junction Gate Solenoid
5804 100	[Y]: Charge DC	Charge Roller DC: Yellow PCU
5804 102	[C]: Charge DC	Charge Roller DC: Cyan PCU
5804 104	[M]: Charge DC	Charge Roller DC: Magenta PCU
5804 106	[K]: Charge DC	Charge Roller DC: Black PCU
5804 110	[Y]: Charge AC	Charge Roller AC: Yellow PCU
5804 112	[C]: Charge AC	Charge Roller AC: Cyan PCU
5804 114	[M]: Charge AC	Charge Roller AC: Magenta PCU
5804 116	[K]: Charge AC	Charge Roller AC: Black PCU

5804 118	Charge AC Trigger	Charge Roller AC Trigger
5804 120	[Y]: Develop. DC	Development DC: Yellow
5804 122	[C]: Develop. DC	Development DC: Cyan
5804 124	[M]: Develop. DC	Development DC: Magenta
5804 126	[K]: Develop. DC	Development DC: Black
5804 130	[Y]: Transfer Belt	Transfer Belt Bias: Yellow
5804 132	[C]: Transfer Belt	Transfer Belt Bias: Cyan
5804 134	[M]: Transfer Belt	Transfer Belt Bias: Magenta
5804 136	[K]: Transfer Belt	Transfer Belt Bias: Black
5804 140	T. Roll 2 Posi.	Transfer Roller: Positive Voltage
5804 142	T. Roll 2 Nega.	Transfer Roller: Negative Voltage
5804 200	[Y]: TD. Sensor Vcnt	TD Sensor Vcnt: Yellow
5804 201	[C]: TD. Sensor Vcnt	TD Sensor Vcnt: Cyan
5804 202	[M]: TD. Sensor Vcnt	TD Sensor Vcnt: Magenta
5804 203	[K]: TD. Sensor Vcnt	TD Sensor Vcnt: Black
5804 204	ID. Sensor LED	ID Sensor LED
5804 205	Toner End Sensor	Toner End Sensor
5804 210	ID. Sensor Left	ID. Sensor Left
5804 211	ID. Sensor Center	ID. Sensor Center
5804 212	ID. Sensor Right	ID. Sensor Right
5804 220	Color PCL	Color PCL
5804 221	Mono. PCL	Monochrome PCL
5804 230	PFU 1 Motor	Optional paper tray unit 1 Motor
5804 231	PFU 1 Clutch	Optional paper tray unit 1 Clutch
5804 240	PFU 2 Motor	Optional paper tray unit 2 Motor
5804 241	PFU 2 Clutch	Optional paper tray unit 2 Clutch

# Firmware Update

To update the firmware for this machine, you must have the new version of the firmware downloaded onto an SD (Secure Digital) Card. The SD Card is inserted into SD Card Slot 2 on the left side of the controller box.

## Type of Firmware

There are 12 types of firmware as shown below.

Type of firmware	Function	Location of firmware	Message shown
Engine	Printer engine control	EGB Flash ROM	Engine
System	Operating system		System
Net File	Feature application		NetworkDocBox
Printer	Feature application		Printer
NIB	Network Interface		Network Support
WebSystem	Web Service application	Controller flash ROM	Web Support
FONT	Page description language (PostScript3)		PS3 Font
FONT1	Font		Fonr
DESS	Security control		Security Module
PictBridge	PictBridge control	PictBridge SD card	Option PctBrgd

## **Before You Begin**

An SD card is a precision device. Always observe the following precautions when you handle SD cards:

- Always switch the machine off before you insert an SD card. Never insert the SD card into the slot with the power on.
- Do not remove the SD card from the service slot after the power has been switched on.
- Never switch the machine off while the firmware is downloading from the SD card.
- Keep SD cards in a safe location where they are not exposed to high temperature, high humidity, or exposure to direct sunlight.

- Always handle SD cards with care. Do not bend or scratch them. Do not let the SD card get exposed
  to shock or vibration.
- Make sure that the write protection of an SD card is unlocked when you download an application to
  it. If not, downloading fails and a download error (e.g. Error Code 44) occurs during a firmware
  upgrade.

Keep the following points in mind when you use the firmware update software:

- "Upload" means to send data from the machine to the SD card. "Download" means to send data from the SD card to the machine.
- To select an item on the LCD, press the appropriate key on the operation panel.
- Make sure that the machine is disconnected from the network to prevent a print job for arriving while the firmware update is in progress before you start the firmware update procedure.

### **Updating Firmware**

#### File Arrangement

#### How the Program Works:

The firmware-update program for this machine searches the folder romdata for necessary firmware. When you save the firmware in an SD card, make the folder 'romdata'. You must not make the folder 'romdata' in another folder.




- Do not make another firmware-update program folder in the folder 'romdata'.
- Otherwise, it may cause a malfunction for the firmware updating. You just keep only one firmware update program folder in the folder 'romdata'.

The firmware program contains the file information. Before downloading the firmware from an SD card, the firmware-update program reads the file information. The firmware is downloaded only when the file information is correct.



 The file information can identify the firmware, but this information does not guarantee that the data is not corrupted.

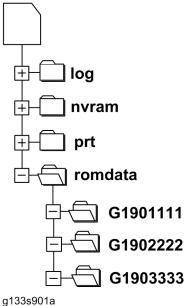

When you save the firmware, we recommend that you arrange folders and files as follows:

- In the folder romdata, make only one folder and use this folder for one model. Use the machine code as the name of this folder.
- When you save some files other than firmware, make a new folder outside romdata. Save the files in
  this folder. Do not save any file outside the folders. (The diagram shows an example. Three folders,
  log, nvramdata, and prt, are outside romdata. These folders can store debug logs, NVRAM data,
  and captured files respectively.)


#### **Update Procedure**

- 1. Turn off the main power switch.
- 2. Disconnect the printer from the network.
- 3. Remove the slot cover from slot 2 ( F x 1).



- Do not use slot 1. Slot 1 is for customer use.
- 4. Turn the SD card face to the rear side of the printer, and insert it into slot 2.
- 5. Slowly push the SD card into the slot until it clicks.
- 6. Make sure that the SD card is locked in place.



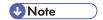

- To remove the SD card, push it in until it clicks, and release it slowly. The slot pushes out the SD card
- 7. Turn on the main power switch.
- 8. Wait until a firmware name is shown on the display (about 1 minute).



- The firmware name is read from inside the firmware. The firmware name is not changed even if you change the file name on your PC.
- 9. If the necessary firmware name is shown on the display, check the firmware version with the left-arrow or right-arrow keys. Pressing the left or right-arrow key shows a firmware name, firmware version and serial number in order.
- 10. To use a different firmware, push the up-arrow key or the down-arrow key to find the necessary firmware.



- Controller, engine and operation panel firmware cannot be updated at the same time. It is recommended to update firmware modules one by one.
- 11. To select the firmware, push the OK key. Make sure that the selected firmware is high-lighted.
- 12. If you update more than one firmware program at the same time, find each of them and select each of them. Make sure that the selected firmware is high-lighted.



- If the customer has used all of the slots, you have to keep an empty slot for this procedure. Ask the customer to temporarily remove the SD card in slot 2.
- 13. To start firmware update, push the "UpDate" key. While each firmware is downloaded, the underscores on the operation panel are replaced by stars.
- 14. Wait until the message "Update done" is shown.
- 15. Turn off the main power switch.
- 16. Remove the SD card from the slot 2.
- 17. Attach the slot cover to the SD card slot 2 ( \*x 1).
- 18. Connect the printer to the network physically.
- 19. Turn on the main power switch.
- Print the Configuration Page to check that the every firmware is correctly updated: Menu > List/Test
   Print > Config. Page

An error code is shown if an error occurs during the download. Error codes have the letter "E" and a number. If an error occurs, the firmware is not correctly downloaded; see the error code table ( Handling Firmware Update Errors) and do the necessary steps. After this, download the firmware again.

#### **Power Failure**

If firmware update is interrupted by power failure, the firmware is not correctly downloaded. In this condition, machine operation is not guaranteed. You have to download the firmware again.

## **NVRAM Data Upload/Download**

## **CAUTION**

 Turn off the main power switch before you insert or remove an SD card. Make sure that the controller and the EGB are correctly connected.

#### **Uploading NVRAM Data**

Copy the data from the NVRAM to an SD card (referred to as "to upload NVRAM data" in this section) before you replace the NVRAM. If you cannot upload NVRAM data, manually input the necessary settings referring to the factory settings sheet stored inside the front door of the mainframe after replacing the NVRAM.

- 1. Prepare a formatted SD card.
- 2. Make sure that the write-protection on the SD card is off.
- 3. Start the SP mode.
- 4. Select SP5990-001 (ALL (Data List)).
- 5. Do the SP.
- 6. See if the SMC Report is correctly output.



- You may need the SMC Report when the machine did not complete an NVRAM data upload
  or download ( "Downloading NVRAM Data") correctly.
- 7. Go out of the SP mode.
- 8. Turn off the main power switch.
- 9. Insert an SD card into SD card slot 2.
- 10. Turn on the main power switch.
- 11. Start the SP mode.

5

- 12. Select SP5-824-001(NVRAM Upload).
- 13. Push the "OK" key. The upload starts.
  - When uploading ends correctly, the following file is made: NVRAM\serial\_number.NV where
    "NVRAM" is the folder name in the SD card and "serial\_number.NV" is the file name with the
    extension ".NV". The serial number of the printer is used as the file name. For example, if the
    serial number is G1330017, the file name is "G1330017.NV".
- 14. Go out of the SP mode.
- 15. Turn off the main power switch.
- 16. Remove the SD card from SD card slot 2.
- 17. Install the SD slot cover to SD card slot 2.
- Mark the SD card with, for example, the machine code. You need this SD card when you download NVRAM data ( "Downloading NVRAM Data").



One SD card can store the NVRAM data from two or more machines.

#### **Downloading NVRAM Data**

Copy the data from the SD card to the NVRAM (referred to as "to download NVRAM data" in this section) after you replace the NVRAM. If you cannot download NVRAM data, manually input the necessary settings referring to the factory settings sheet stored inside the front door of the mainframe.

- 1. Make sure that the main power switch is off. If it is on, turn it off.
- 2. Make sure that you have the correct SD card that contains the necessary NVRAM data.
- 3. Insert the SD card into SD card slot 2.
- 4. Turn on the main power switch.
- 5. Start the SP mode.
- 6. Select SP5-825-001 (NVRAM Download).
- 7. Push the "OK" key. The download starts.



- The machine cannot do the download if the file name in the SD card is different from the serial number of the printer ( "Uploading NVRAM Data").
- 8. Go out of the SP mode.
- 9. Turn off the main power switch.
- 10. Remove the SD card from SD card slot 2.
- 11. Install the SD slot cover on SD card slot 2.
- 12. Turn on the main power switch.

13. Check that the NVRAM data is correctly downloaded.



- This procedure does not download the following data to the NVRAM:
  - Total Count
  - Serial Number

## Address Book Upload/Download

#### Download

- 1. Prepare a formatted SD card.
- 2. Make sure that the write-protection on the SD card is off.
- 3. Turn off the main power switch of the main machine.
- 4. Remove the SD slot cover from SD card slot 2 at the left rear side of the machine ( $\mathcal{F} \times 1$ ).
- 5. Install the SD card into SD card slot 2 (for service use).
- 6. Turn on the main power switch.
- 7. Enter the SP mode.
- 8. Do SP5-846-051 (Backup All Addr Book).
- 9. Exit the SP mode, and then turn off the main power switch.
- 10. Remove the SD card from SD card slot 2.
- 11. Install the SD slot cover on SD card slot 2.



- If the capacity of SD card is not enough to store the local user information, an error message is displayed.
- Carefully handle the SD card, which contains user information. Do not take it back to your location.

#### Upload

- 1. Turn off the main power switch of the main machine.
- 2. Remove the SD slot cover from SD card slot 2 at the left rear side of the machine ( $\mathscr{F}$  x 1).
- 3. Install the SD card, which has already been uploaded, into the SD card slot 2.
- 4. Turn on the main power switch.
- 5. Enter the SP mode.

- 6. Do SP5-846-052 (Restore All Addr Book).
- 7. Exit the SP mode, and then turn off the main power switch.
- 8. Remove the SD card from SD card slot 2.
- 9. Install the SD slot cover on SD card slot 2.



- The counter in the user code information is initialized after uploading.
- The information of an administrator and supervisor cannot be downloaded nor uploaded.
- If there is no data of address book information in the SD card, an error message is displayed.

## **Handling Firmware Update Errors**

An error message shows in the first line if an error occurs during a download. The error code consists of the letter "E" and a number ("E20", for example).

#### **Error Message Table**

Code	Meaning	Solution
20	Cannot map logical address	Make sure the SD card is inserted correctly.
21	Cannot access memory	HDD connection incorrect or replace hard disks.
22	Cannot decompress compressed data	Incorrect ROM data on the SD card or data is corrupted.
23	Error occurred when ROM update program started	Controller program abnormal. If the second attempt fails, replace controller board.
24	SD card access error	Make sure SD card inserted correctly, or use another SD card.
30	No HDD available for stamp data download	HDD connection incorrect or replace hard disks.
31	Data incorrect for continuous download	Insert the SD card with the remaining data required for the download, the re-start the procedure.
32	Data incorrect after download interrupted	Execute the recovery procedure for the intended module download, then repeat the installation procedure.

33	Incorrect SD card version	Incorrect ROM data on the SD card, or data is corrupted.
34	Module mismatch - Correct module is not on the SD card)	SD update data is incorrect. Acquire the correct data (Japan, Overseas, OEM, etc.) then install again.
35	Module mismatch – Module on SD card is not for this machine	SD update data is incorrect. The data on the SD card is for another machine. Acquire correct update data then install again.
36	Cannot write module – Cause other than E34, E35	SD update data is incorrect. The data on the SD card is for another machine. Acquire correct update data then install again.
40	Engine module download failed	Replace the update data for the module on the SD card and try again, or replace the EGB board.
42	Operation panel module download failed	Replace the update data for the module on the SD card and try again, or replace the LCDC.
43	Stamp data module download failed	Replace the update data for the module on the SD card and try again, or replace the hard disks.
44	Controller module download failed	Replace the update data for the module on the SD card and tray again, or replace controller board.
50	Electronic confirmation check failed	SD update data is incorrect. The data on the SD card is for another machine. Acquire correct update data then install again.

## 5


# **Controller Self-Diagnostics**


#### Overview

There are two types of self-diagnostics for the controller.

- 1. Power-on self-diagnostics: The machine automatically starts the self-diagnostics just after the power has been turned on.
- 2. SC detection: The machine automatically detects SC conditions at power-on or during operation.

The following shows the workflow of the power-on and detailed self-diagnostics.

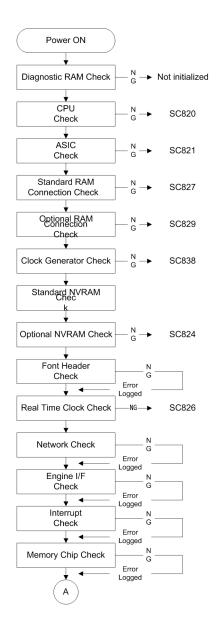

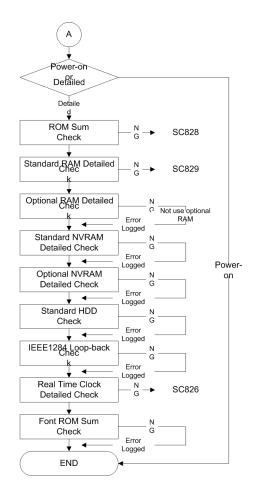

g133t933a

## 5

# **Using the Debug Log**

This machine provides a Save Debug Log feature that allows the Customer Engineer to save and retrieve error information for analysis.

Every time an error occurs, debug information is recorded in volatile memory. But this information is lost when the machine is switched off and on.

To capture this debug information, the Save Debug Log feature provides two main features:

- Switching on the debug feature so error information is saved directly to the HDD for later retrieval.
- Copying the error information from the HDD to an SD card.

Do the following procedure below to set up the machine so the error information is saved automatically to the HDD when a user has problems with the machine. Then ask the user to reproduce the problem.

## Switching On and Setting Up Save Debug Log

The debug information cannot be saved until the "Save Debug Log" function has been switched on and a target has been selected.

- 1. Enter the SP mode and switch the Save Debug Log feature on.
- On the LCD panel, open SP5857.
- 1. Under "5857 Save Debug Log", select "1" with the ▲ or ▼ key.
- 2. On the control panel keypad, press "1". Then press "OK" key. This switches the Save Debug Log feature on.



- The default setting is "0" (OFF). This feature must be switched on in order for the debug information to be saved.
- Select the target destination where the debug information will be saved. Under "5857 Save Debug Log", select "2 Target", enter "2" with the operation panel key with the ▲ or ▼ key to select the hard disk as the target destination. Then press "OK".



- Select "3 SD Card" to save the debug information directly to the SD card if it is inserted in the service slot.
- 4. Now select "SP5858" and specify the events that you want to record in the debug log. SP5858 (Debug Save When) provides the following items for selection.

1	Engine SC Error	Saves data when an engine-related SC code is generated.
---	-----------------	---

2	Controller SC Error	Saves debug data when a controller-related SC Code is generated.
3	Any SC Error	Saves data only for the SC code that you specify by entering code number.
4	Jam	Saves data for jams.



- More than one event can be selected.
- Example 1: To Select Items 1, 2, 4
- Push the ▲ or ▼ key to select the appropriate items(s). Press the "OK" key for each selection. This example shows "Engine SC Error" selected.
- Example 2: To Specify an SC Code
- Push the ▲ or ▼ key to select "3 Any SC Error", enter the 3-digit SC code number with the
   ▲ or ▼ key. Then press"OK" key. This example shows an entry for SC670.



- For details about SC code numbers, please refer to the SC tables in Chpater 4. "Troubleshooting".
- 5. Select one or more memory modules for reading and recording debug information. Select "SP5859".
  Under "5859" press the necessary key item for the module that you want to record.
  Enter the appropriate 4-digit number with the ▲ or ▼ key. Then press"OK".



• Refer to the two tables below for the 4-digit numbers to enter for each key.

The following keys can be set with the corresponding numbers. (The initials in parentheses indicate the names of the modules.)

#### 4-Digit Entries for Keys 1 to 10

Key No.	Printer
1	2222 (SCS)
2	14000 (SRM)
3	256 (IMH)
4	1000 (ECS)
5	1025 (MCS)

6	4400 (GPS)
7	4500 (PDL)
8	4600 (GPS-PM)
9	2000 (NCS)
10	2224 (BCU)



• The default settings for Keys 1 to 10 are all zero ("0").

#### Key to Acronyms

Acronym	Meaning	Acronym	Meaning
ECS	Engine Control Service	NFA	Net File Application
GPS	GW Print Service	PDL	Printer Design Language
GSP-PM	GW Print Service – Print Module	PTS	Print Server
IMH	Image Memory Handler	SCS	System Control Service
MCS	Memory Control Service	SRM	System Resource Management
NCS	Network Control Service	WebDB	Web Document Box (Document Server)

The machine is now set to record the debugging information automatically on the HDD (the target selected with SP5857-002) for the events that you selected with SP5858 and the memory modules selected with SP5859.

Please keep the following important points in mind when you do this setting:

- The initial settings are all zero.
- These settings remain in effect until you change them. Be sure to check all the settings, especially the settings for Keys 6 to 10. To switch off a key setting, enter a zero for that key.
- You can select any number of keys from 1 to 10 (or all) by entering the corresponding 4-digit numbers from the table.
- One area of the disk is reserved to store the debug log. The size of this area is limited to 4 MB.

## Retrieving the Debug Log from the HDD

Retrieve the debug log by copying it from the hard disk to an SD card.

- 1. Insert the SD card into the service slot of the printer.
- Enter the SP mode and execute SP5857-009 (Copy HDD to SD Card (Latest 4 MB)) to write the debugging data to the SD card.
- 3. Use a card reader to copy the file and send it for analysis to your local Ricoh representative by email. You can also send the SD card by regular mail if you want.

## **Debug Log Codes**

#### SP5857-015 Copy SD Card-to-SD Card: Any Desired Key

This SP copies the log on an SD card (the file that contains the information written directly from shared memory) to a log specified by key number. The copy operation is executed in the log directory of the SD card inserted in the same slot. (This function does not copy from one slot to another.) Each SD card can hold up to 4 MB of file data. Unique file names are created for the data during the copy operation to prevent overwriting files of the same name. This means that log data from more than one machine can be copied onto the same SC card. This command does not execute if there is no log on the HDD for the name of the specified key.

#### SP5857-016 Create a File on HDD to Store a Log

This SP creates a 32 MB file to store a log on the HDD. However, this is not a completely empty file. The created file will hold the number "2225" as the SCS key number and other non-volatile information. Even if this SP is not executed, a file is created on the HDD when the first log is stored on the HDD (it takes some time to complete this operation). This creates the possibility that the machine may be switched off and on before the log can be created completely. If you execute this SP to create the log file beforehand, this will greatly reduce the amount of time required to acquire the log information and save onto the HDD. With the file already created on the HDD for the log file, the data only needs to be recorded. A new log file does not need to be created. To create a new log file, do SP5857-011 to delete the debug log data from the HDD. Then do SP5857-016.

#### SP5857-017 Create a File on SD Card to Store a Log

This SP creates a 4 MB file to store a log on an SD card. However, this is not a completely empty file. The created file will hold the number "2225" as the SCS key number and other non-volatile information. Even if this SP is not executed, a file is created on the SD card when the first log is stored on the SD card (it takes some time to complete this operation). This creates the possibility that the machine may be switched off and on before the log can be created completely. If you execute this SP to create the log file beforehand, this

5

5

will greatly reduce the amount of time required to acquire the log information and save onto the SD card. With the file already created on the SD card for the log file, the data only needs to be recorded; a new log file does not require creation. To create a new log file, do SP5857-012 to delete the debug log data from the SD card. Then do SP5857-017.

# **DIP Switches**

## **Controller Board**

Factory Use Only: Do not change the switch settings.


DIP SW No.	Default
1	ON
2	
3	OFF
4	

5

# 6. Detailed Function Descriptions

## **Overview**


## **Component Layout**

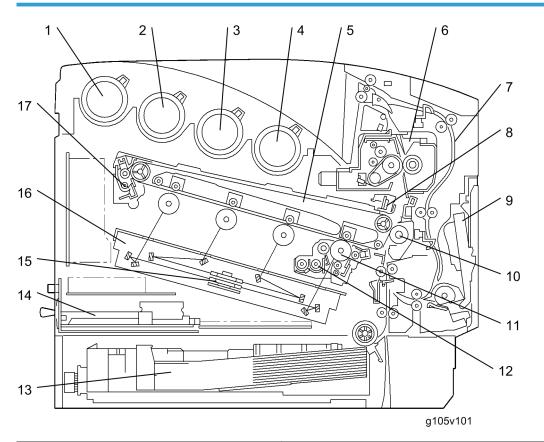

- 1. Toner bottle [Y]
- 2. Toner bottle [C]
- 3. Toner bottle [M]
- 4. Toner bottle [K]
- 5. Transfer Belt Unit
- 6. Fusing Unit
- 7. Duplex Unit
- 8. ID sensor

- 10. Transfer roller
- 11. PCU (Photo Conductor Unit)
- 12. Development Unit
- 13. Standard tray
- 14. PSU (Power Supply Unit)
- 15. Polygon Mirror Motor
- 16. LDU
- 17. Transfer Belt Cleaning Unit

## **Paper Path**

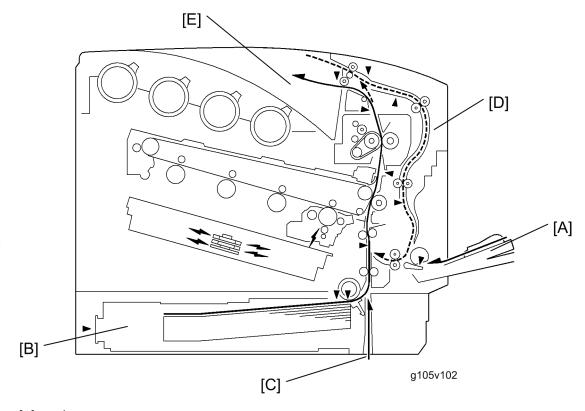

[A]: Duplex Unit

[B]: By-pass Feed Table


[C]: 1 Tray Paper Feed Unit, 2 Tray Paper Feed Unit

[D]: Standard tray

[E]: Standard Paper Exit Tray

4

## **Drive Layout**

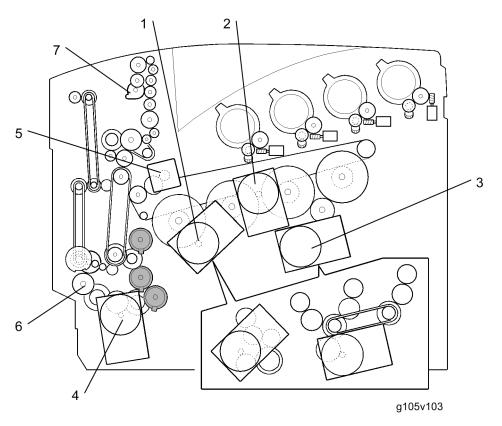

1. Black OPC/ Development Motor:

This controls the black OPC and development unit for black.

2. Color OPC Motor:

This controls the OPCs for magenta, cyan, and yellow.

3. Color Development Motor:

This controls the color development units (magenta/cyan/yellow).

4. Paper Feed/Fusing Motor:

This controls the paper feed mechanisms (tray 1/by-pass tray), fusing unit, paper, registration roller, transport relay roller and paper exit roller.

5. Transfer Belt Unit Motor:

This controls the transfer belt unit and the transfer roller.


6. Duplex Motor:

This controls the duplex exit, relay and exit rollers.

7. Inverter Motor:

This controls the inverter roller.

#### **Board Structure**

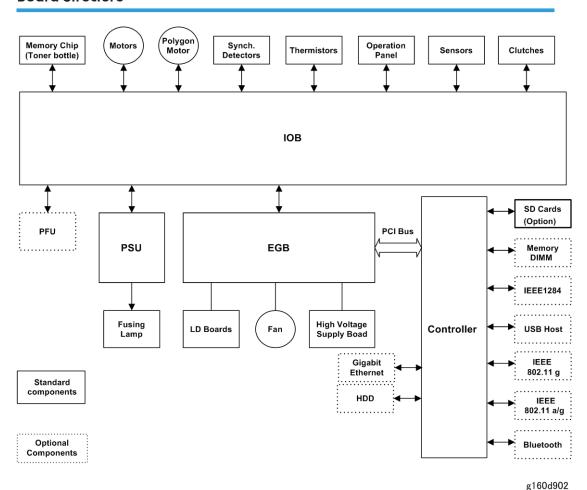

The EGB (Engine Board) controls machine functions along with the CTL (Controller). The IOB (In/Out Board) controls input/output, drivers and input/output connections. The IOB is part of the EGB expansion board.

One of the following options can be installed in the I/F slot: (IEEE1284, IEEE802.11a/g, g, Bluetooth, and Gigabit Ethernet).

The controller connects to the EGB through the PCI Bus (Peripheral Component Interconnect Bus).

- 1. EGB (Engine Board):
  - This controls the Engine, the controller interface, image processing, MUSIC (Mirror Unit for Skew and Interval Correction), and input/output. MUSIC is also called Automatic Line Position Adjustment).
- 2. IOB (Input/Output Board):

This controls input/output, and the interfaces with the optional units, and the operation panel.

#### 3. Controller:

The controller board controls the following functions:

- SD card (Option/Service)
- Memory DIMM
- IEEE1284
- IEEE802.11a/g
- IEEE802.11g
- Bluetooth
- Gigabit Ethernet
- NVRAM
- HDD
- PictBridge

#### 4. LD Drive Board:

This is the laser diode drive circuit board.

#### 5. HDD Unit (Option):

The HDD unit stores data for the following.

- Additional software fonts
- Collation
- · Locked print
- Sample print
- Downloaded forms for form overlay

## 6. Memory DIMM (Resident: 256MB DRAM, Option: 128/256MB DRAM):

This increases printer processing memory, and is also used for collation and for soft fonts.

#### 7. Operation Panel Board:

Controls the display panel, the LED, and the keypad.

#### 8. IEEE1284 Interface (Option):

This is a parallel printer port.

#### 9. USB 2.0:

Lets you connect the machine to a computer.

#### 10. Bluetooth (Option):

Lets you connect the machine to a computer with a wireless connection.


#### 11. IEEE802.11a/g or g wireless LAN (Option):

Lets you connect the machine to a computer with a wireless connection.

#### 12. Gigabit Ethernet (Option):

This lets computers connect to the machine with a Gigabit Ethernet interface.

## **Printing Process**

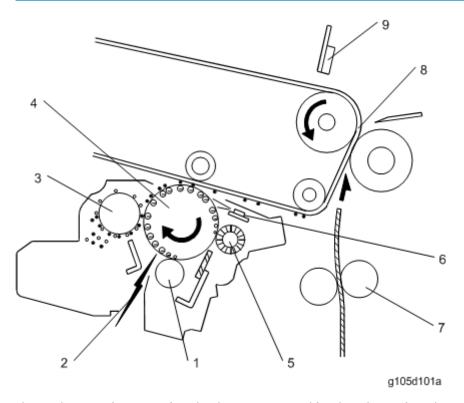

This machine uses four PCUs, four development units, and four laser beams for color printing. Each PCU contains a drum, charge roller, cleaning brush, and blade.

The toner image on each drum is moved to the transfer belt. The four colors are put on the belt. All four toners are put on the belt at the same time. Then the completed four-color image is moved to the paper.

#### 1. Drum charge:

The charge roller gives the drum a negative charge

#### 2. Laser exposure:

The laser beam from the laser diode (LD) goes through the lens and mirrors and to the drum. To make a latent image on the drum, the machine turns the laser beam on and off.

#### 3. Development:

The development roller moves negatively-charged toner to the latent image on the drum surface. This machine uses four development units (one for each color).

#### 4. Image transfer:

The charge that is applied to the transfer roller pulls the toner from the drum to the transfer belt. Four toner images are put on the paper.

#### 5. Cleaning for OPC drum:

The cleaning brush and blade remove remaining toner on the drum surface after image transfer to the paper.

#### 6. Quenching for OPC drum:

Quenching is done at the end of each page with a quenching lamp (LED array) in the PCU.

#### 7. Paper registration:

The registration roller controls the paper feed timing to make sure that the image transfers to the correct location on the paper. It also removes skew.

#### 8. Paper Transfer and Separation:


Toner transfers from the transfer belt to the paper when the paper is fed between the transfer belt and transfer roller. At this time, the paper also separates from the transfer belt, because of a discharge plate immediately after the transfer roller.

#### 9. ID sensor:

The ID sensor board contains three ID sensors (one at the left, one at the center, and one at the right). The ID sensor detects the density of the ID sensor pattern on the transfer belt. The ID sensor output is used for process control and for automatic line-position adjustment, skew, and color registration adjustments for the latent image.

## **Process Control**

#### Overview

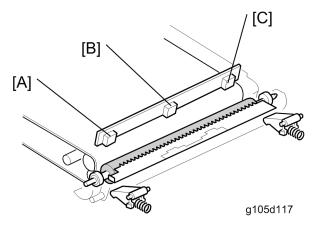

This machine has the following two forms of process control:

- Potential control
- Toner supply control

Process control uses the following components:

- Three ID (image density) sensors (left [A], center [B], and right [C]). Only the center ID sensor is used
  for process control. The left, center, and right ID sensors are used for line positioning and other
  adjustments.
- TD (toner density) sensor in each development unit.

#### **Potential Control**

#### Overview

Potential control controls development to keep the toner images on the drums at the same density. It does this by compensating for variations in drum chargeability and toner density.

The machine uses the ID sensor to measure the reflectivity of the transfer belt and the density of a standard sensor pattern. This is done during the process control self-check.

The machine measures these values from the ID sensor output and a reference table in memory.

- V<sub>D</sub>: Drum potential without exposure to adjust this, the machine adjusts the charge roller voltage.
- V<sub>B</sub>: Development bias
- V<sub>L</sub>: Drum potential at the strongest exposure to adjust this, the machine adjusts the laser power.

6

(Also, V<sub>REF</sub> is corrected. This is used for toner supply control.)

This controls the development potential to make sure that the maximum quantity of toner applied to the drum is constant.

If SP 3501 1 is set to "1" (Fixed), the machine does not do the potential control, but uses the following parameters:

- Development bias adjusted with SP 2212 1 to 8
- Charge roller voltage adjusted with SP 2201 1 to 9
- Laser power selected with SP 2105 1 to 12.

These SPs are not normally adjusted in the field.

#### Process Control Self-check

This machine does potential control with a procedure that is known as the process control self-check. This procedure is done at these 9 times.

#### 1. Initial

This starts automatically at the following times:

- Immediately after the power is turned on
- When the machine comes back from energy saver mode
- 6 hours after the power was turned on (adjusted with SP 3554 1)
- If absolute humidity changes more than ± 6 g/m<sup>3</sup> (e.g. changes from 23°C/50% to 27°C/70%). The humidity threshold can be changed with SP 3554 2.

#### 2. Interval: lob End

At the end of a job, process control is done after the interval of time that is set with SP 3555 1, if more than 450 prints were made after the previous process control (this number can be adjusted with SP 3551 1 and 2).

At the end of a job, process control is done immediately, if more than 450 prints were made after the previous process control (this number can be adjusted with SP 3551 3 and 4).

The default setting of SP 3555 1 is "0". Because of this, there is no difference between these two processes, and the 450-print setting is not used.

After process control is done (except for forced process control), the counters are reset to "O."

3. Interval: Interrupt (default: 500)

If the machine makes a sequence of 500 or more color prints in the same job, printing stops and process control is done. After it is completed, the machine continues to make prints. The default value of 500 can be adjusted with SP 3551 5 to 6

4. Non-use Time (6 hours)

This starts before the next print job if the machine has no job for 6 hours. If the non-use time process control is done (N) times after the user turns on the power, it will not be done. N is adjusted with SP 3558.

#### 5. Installation

This starts only when this machine turns on at first installation. The machine does this if SP 5950 1 is set to "1" (set in the factory).

#### 6. After Toner End Recovery

This starts after recovery from a toner end condition.

#### 7. After Developer Initialization

This starts after a developer initialization is done. Developer initialization occurs automatically after a new PCU is installed.

#### 8. After Transfer Belt Unit Initialization

This starts after a transfer belt unit initialization is done. Transfer belt unit initialization occurs automatically after a new transfer belt unit is installed.

#### 9. Forced

This is done when SP 3820 1 is used.

#### **Process Control Self-Check Procedure**

#### Step 1: VSG Adjustment

This machine uses three ID sensors (direct-reflection type). They are located at the left, center, and right of the transfer unit. Only the center ID sensor is used for process control. The ID sensor checks the bare transfer belt's reflectivity and the machine calibrates the ID sensor until its output (known as  $V_{SG}$ ) is as follows.

• 
$$V_{SG} = 4.0 \pm 0.5 \text{ Volts}$$

This calibration adjusts for the transfer belt's condition and the ID sensor condition, for example, dirt on the belt or ID sensor

#### Step 2: ID Sensor Solid Pattern Generation

The machine mixes the developer and then makes a gradation pattern on the transfer belt for each toner color. The pattern has one square (the sequence is as follows: one black square, one magenta square, one cyan square and one yellow square). Each of the squares is 15.03 mm x 12.23 mm, and is a solid-color square. To make the squares, the machine changes the development bias and charge roller voltage. The difference between development bias and charge roller voltage is always the same.


#### Step 3: Sensor Pattern Detection

The ID sensor detects the densities of the one solid-color square for each color. This data goes to memory.

#### Step 4: Toner Amount Calculation

The quantity of toner on the transfer belt (M/A, mass per unit area, mg/cm<sup>2</sup>) is calculated for each of the 10 gradations of the sensor pattern. To do this, the machine uses the ID sensor output value from each gradation of the pattern.

Step 5: V<sub>D</sub>, V<sub>B</sub>, V<sub>L</sub> Selection and V<sub>REF</sub> Adjustment

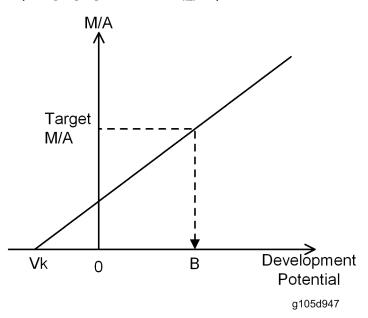

The machine makes a plot of the 10 values of M/A against the development potential that was used to make each of the gradations. Then it makes a line through the 10 points.

Then, it finds the development potential that is necessary to put the 'target M/A' of toner on the OPC.

This development potential is then used to find the best values of development bias, charge roller voltage and laser power for the machine in its current condition. To do this, it refers to a table in memory.

The machine also adjusts  $V_{REF}$  (toner density target) at the same time. As a result, the development gamma detected by process control will be the value stored in SP 3561 1 to 4 (do not adjust in the field unless told to do this).

After that, the transfer belt cleaning unit cleans the transfer belt.

## **Toner Supply Control**

#### **Toner Supply Control Modes**

This machine has four toner supply control modes. They are selected with SP 3301-1 to 4. (Default: SP3301-4)

1. Fixed supply mode

This mode is used when the TD sensor becomes defective. The amount of toner supply can be adjusted with SP 3302 1-4 if the image density is incorrect (the default setting is 5%).

2. Proportional control mode 1 (Pixel)

This mode is used when the TD sensor becomes defective. Only the pixel count is used to control toner supply. The amount of toner supply can be adjusted with SP 3306 1 to 4.

3. Proportional control mode 2 (TD sensor)

This mode is used when the ID sensor at the center becomes defective. Only the TD sensor is used to control toner supply. The amount of toner supply can be adjusted with SP 3306 5 to 8.

4. Hybrid control mode

This is the default toner supply control mode. The TD sensor or the pixel count are used in this mode.

- If the image coverage ratio is less than the value of SP 3701 2 to 5, pixel count is used.
- If the image coverage ratio is more than the value of SP 3701 2 to 5, the TD sensor is used.
- But, if SP 3701 1 is "off", then the TD sensor is always used. The default setting for this SP is "off".
   Because of this, pixel count is not used.

The amount of toner supply can be adjusted with SP 3306 9 to 20.

The TD sensor is in the PCU. If the TD sensor becomes defective, the technician must replace the PCU. But if this is not possible, the technician can change the toner supply mode with SP 3301 1 to 4.

#### Low Image Coverage

After process control, toner refresh mode is done (this can be switched off with SP3721-1).

- It is only done if the percentage of pages (after the previous process control) that had low image coverage is more than the value of SP3721-2.
- SP 3701-2 to-5 control the limits that the machine uses to detect if the image coverage is low.


Toner refresh mode supplies new toner, because there is old toner in the developer after printing many pages that have low image coverage.

During toner refresh mode, the machine does the following:

- 1. Mixes the developer for 5 seconds.
- 2. Performs an engine free run, which simulates printing of 10 sheets of A4 size paper with the image data (2 by 2) and normal toner supply.
- 3. Mixes the developer for 10 seconds.

## 6

## **Toner Near End/Toner End Detection**

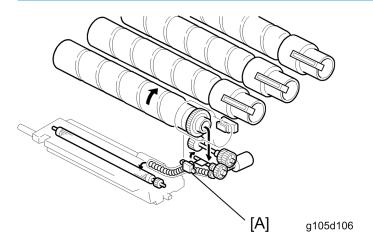

#### Introduction

#### Toner Near End

To detect toner near-end the machine uses:

• Pixel count (memory chip on the toner bottle)

#### Toner End


To detect toner end the machine uses:

• Output from the toner end sensor [A]

#### **Toner Near End Detection**

The machine uses the pixel count.

- 1. The controller counts the printed pixels. Then, it calculates the remaining toner quantity from the record in the ID chip for each toner bottle.
- 2. If the remaining toner quantity is less than 10% of a full bottle, the machine detects toner near-end.
- 3. The remaining toner quantity and "Toner near end" are recorded in the ID chip.
- 4. Toner near-end is displayed.

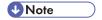

Toner near-end detection uses the pixel counter in the ID chip. If new toner is added to the empty
toner bottle, the contents of the ID chip are not reset, so the toner near-end or end condition is
not reset. Also, near-end detection cannot be done.

The machine detects toner end when the toner end sensor detects toner end 3 times in a row 3.1 seconds after toner was supplied. At this time, "Toner end" is recorded in the ID chip.

#### **Toner End Recovery**

The machine detects that the toner bottle was replaced if one of the following events occurs during a toner end condition:

- The top cover is opened and closed.
- The main switch is turned off and on.

The machine then starts to supply toner to the development unit. After this, the machine resets the toner end condition.



When "Toner near end" is detected, "Toner end recovery" is not done. If there is no "Toner end"
information in the ID chip, the machine detects that there is toner in the toner bottle and "Toner end
recovery" is done.

## **Developer Initialization**

When the machine detects that a new PCU was installed, it initializes the developer.


To do this, the machine mixes the developer for a few seconds, and adjusts  $V_{CNT}$  (control voltage for TD sensor) to make  $V_{T}$  (TD sensor output) equal to 2.5 ± 0.1 volts. The machine stores this  $V_{T}$  as  $V_{REF}$ .

During PCU initialization, the machine automatically supplies toner because there is no toner in the toner supply pipe at installation. Then the machine does the process control self-check.

6

# **Paper Feed**


## Overview

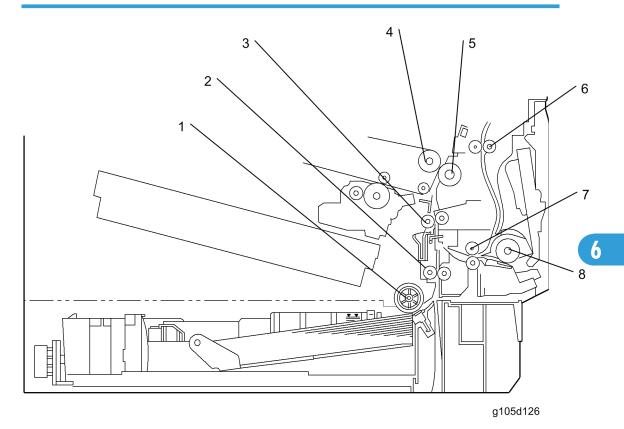

1. Paper feed roller	5. Transfer roller
2. Relay transport roller	6. Duplex relay roller
3. Registration roller	7. Duplex exit roller
4. Transfer belt drive roller	8. By-pass feed roller

The machine has a paper tray (550 sheets) and a by-pass paper feed table (100 sheets).

The paper feed mechanism uses a friction pad system.

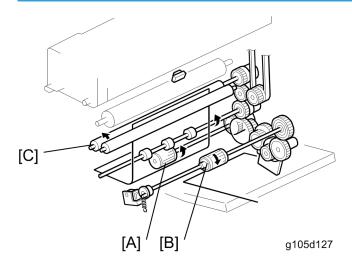


The paper feed and fusing motor controls the paper feed roller [A], by-pass feed roller [B] and registration roller [C] with clutches and gears. The paper feed roller and by-pass feed roller feed a sheet of paper to the registration roller.

The machine makes a paper buckle at the registration roller to correct paper skew. The paper buckle can be adjusted with SP1-003-001 to -045.


## **Paper Tray**

### **Paper Lift**

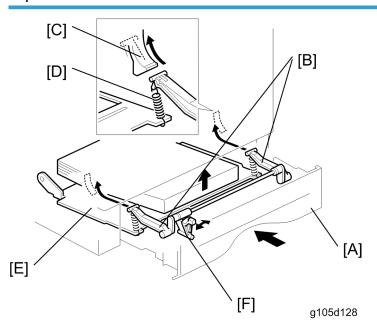

When the tray [A] is put in the machine, the tray arms [B] move along the guide slopes [C] of the main frame. This makes the springs [D] lift the bottom plate. The bottom plate [E] pushes the paper against the paper feed roller and keeps the top sheet of paper at the correct height.


The paper pressure switch [F] adjusts the bottom plate pressure. When you use thick paper of  $75g/m^2$  or more, move this switch to the left.

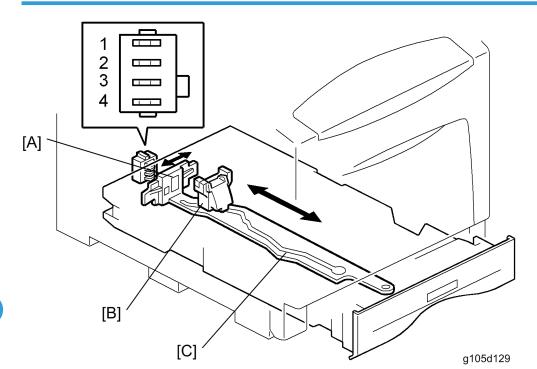

The paper size sensor is at the rear of the tray. This sensor has four switches. The outputs from the switches detect the paper size, as shown in the table. The actuators are on the side plate [A]. The side plate is moved by the end plate [B] through a cam [C].

Paper Size	Switch Location					
	1	2	3	4		
LG SEF	Pushed	Pushed	-	-		
A4 SEF	-	Pushed	Pushed	-		
LT SEF	Pushed	Pushed	Pushed	Pushed		
US. EXE SEF	Pushed	-	-	-		
B5 SEF	Pushed	-	-	-		
A5 SEF/ HLT SEF	-	Pushed	Pushed	Pushed		
A5 LEF/ HLT LEF	-	-	Pushed	Pushed		

# Paper Near End/End Detection

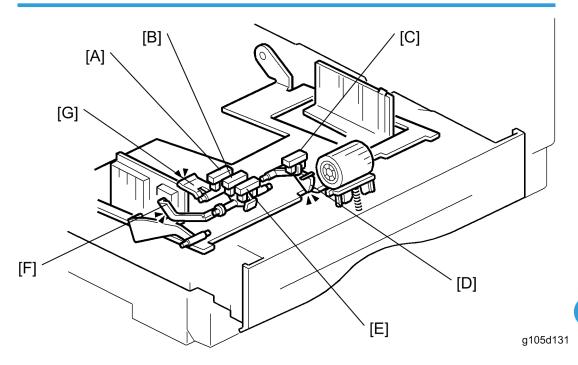

There are four sensors in tray 1: the two near end sensors [B] [E], the end sensor [C] and the paper width sensor [A].

#### Near-end detection

Two near end sensors detect the amount of paper in the tray.

When the quantity of paper decreases, the bottom-plate-pressure lever moves up and the actuator [F] (on the pressure-lever drive shaft) turns.

Remaining paper	Near end sensor 1 [E]	Near end sensor 2 [B]
Full ~ 450	ON	OFF
450 ~ 250	ON	ON
250 ~ 50	OFF	ON
50 ~ 0	OFF	OFF

OFF: No actuator


## **End detection**

When the paper tray is empty, the actuator [D] goes into the end sensor. The sensor detects paper end.

## Paper width sensor

When paper with a small width (less than A5) is put in the tray, it does not lift the actuator [G] of the paper width sensor. Because of this, the paper width sensor detects the paper that has a width less than A5.

# By-pass Tray Feed and Size Detection

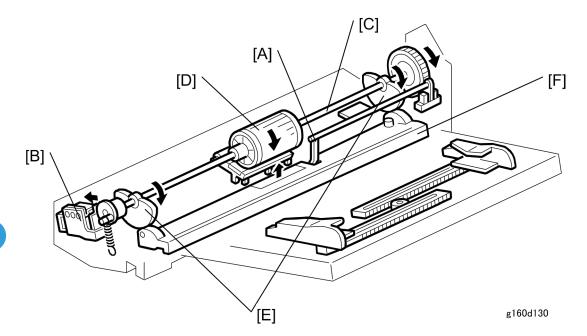

## Paper Feed Mechanism


When the paper detection feeler [A] detects a sheet of paper, the by-pass solenoid [B] unlocks the feed shaft stopper at the left end of the by-pass feed shaft [C].

The by-pass feed shaft has the feed roller [D] and two cams [E]. These cams move the paper support plate [F] up and down and pushes the sheets of paper against the feed roller.

## Paper Size Detection Mechanism


There is no paper size detection mechanism on the by-pass tray in this printer. Paper size on the by-pass tray can be adjusted with the operation panel or printer driver.

# Duplex

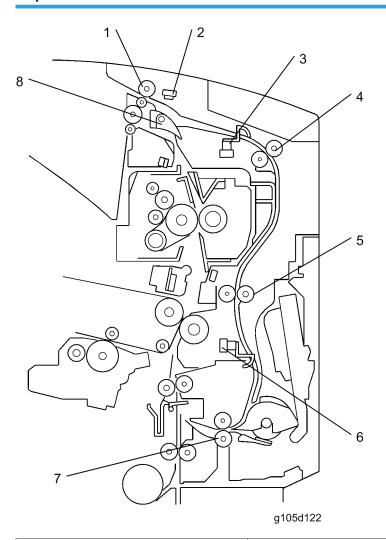

- 1. Inverter roller
- 2. Inverter sensor
- 3. Duplex jam sensor 1
- 4. Duplex entrance roller


- 5. Duplex relay roller
- 6. Duplex jam sensor 2
- 7. Duplex exit sensor
- 8. Junction gate

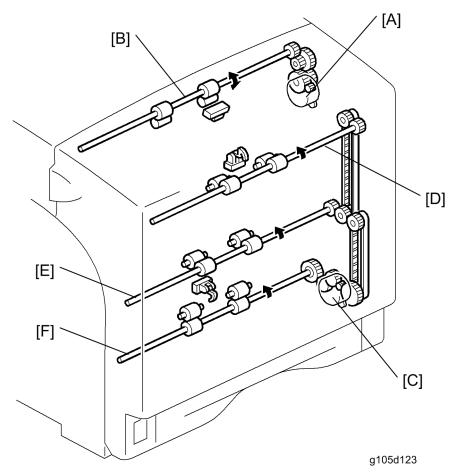

The inverter motor [A] controls the inverter roller [B] that feeds the sheet of paper to the duplex unit.

The duplex motor [C] controls the duplex entrance roller [D], duplex relay roller [E] and duplex exit roller [F] that feed the sheet of paper to the registration roller.

# Interleaving

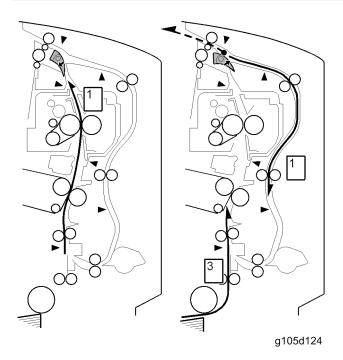

Step 1:

This duplex unit uses the interleaving mechanism. This decreases the total time of duplex printing.

The machine prints on side [1]. Then, the first sheet of paper is fed out of the exit, but not fully.

Then the exit roller changes direction and the paper goes to the duplex feed path. At the same time, the second sheet of paper is fed between the transfer belt and the transfer roller, and side [3] is printed.

Step 2:

The machine prints side [3] on the second sheet of paper.


The second sheet of paper is fed to the paper exit, and into the duplex feed path. At the same time, the first sheet of paper is fed between the transfer belt and the transfer roller, and side [2] is printed.

The second sheet of paper immediately follows the first sheet of paper in the duplex feed path. Then side [4] is printed.

6

# Laser Exposure

## Overview

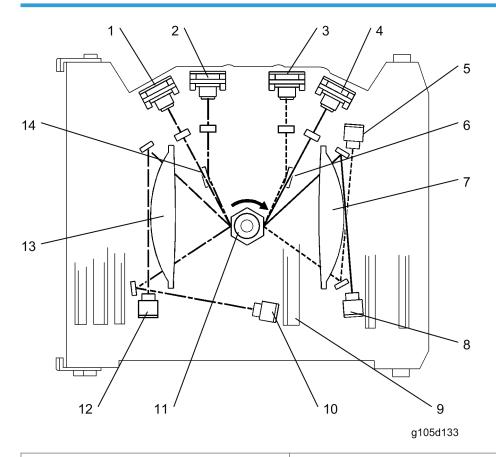

- 1. LDB unit-C
- 2. LDB unit-Y
- 3. LDB unit-K
- 4. LDB unit-M
- 5. Synchronizing detector board-M, K-E
- 6. LD Mirror-K
- 7. F-theta lens-M, K


- 8. Synchronizing detector board-M, K-S
- 9. Mirror
- 10. Synchronizing detector board-Y, C-S
- 11. Polygon mirror motor
- 12. Synchronizing detector board-Y, C-E
- 13. F-theta lens-Y, C
- 14. LD Mirror-Y

This machine uses four LDB units and one polygon mirror motor to produce latent images on four OPC drums (one drum for each color toner).

There are two hexagonal mirrors. Each mirror reflects beams from two LDB units.

Laser exposure for yellow and cyan starts from the right side of the drum, but for magenta and black it starts from the left side of the drum. This is because the units for yellow and cyan are on the other side of the polygon mirror from the units for magenta and black.

# **Optical Path**

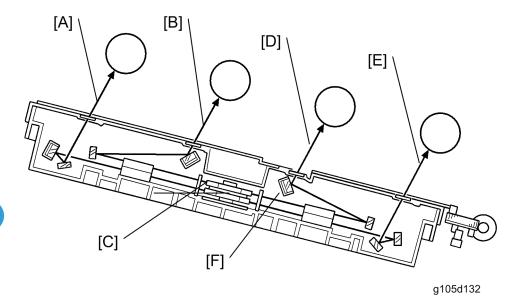

The laser beams for cyan [B] and magenta [D] are sent to the upper part of the polygon mirror [C]. The laser beams for yellow [A] and black [E] are sent to the lower part of the polygon mirror. The LD mirrors (see the previous page) reflect the laser beams for yellow and black to the lower polygon mirror.


The mirror [F] corrects the main scan line. Without this mirror, the line bends at the middle of the main scan. The central bend of the mirror is adjusted in the factory.

The speed of the polygon mirror depends on the selected mode (see below).

Mode	Resolution (dpi)	Polygon motor speed (rpm)	Process line speed (mm/s)	Print speed (ppm)
B/W (except OHP/ Thick paper)	600 x 600 1,200 x 600	42993	182	30
	1,200 x 1,200	42993	91	15
Color (except OHP/ Thick paper)	600 x 600 1,200 x 600	42993	182	30
	1,200 x 1,200	42993	91	15

	600 x 600			
OHP/Thick	1,200 x 600	42993	91	15
	1,200 x 1,200			

# Laser Synchronizing Detector

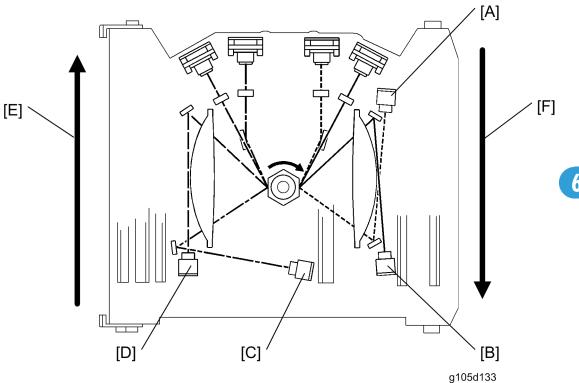

#### Overview

The machine has four laser synchronizing detector boards (LSD) as shown above. Each pair of boards detects two colors. The machine knows each color from the time that they are detected. The two LSDs [A] [B] are used for magenta and black, and the two [C] [D] are used for yellow and cyan.

## **Main Scan Start Detection**

For magenta and black, the LSD [B] detects the start of the main scan. For yellow and cyan, the LSD [C] detects the start of the main scan. The arrows [E] [F] show the direction of the laser scan.

**EGB** 

+5VE2

**PSU** 

A safety switch turns off when the front cover or the right door is opened. As a result, the relay on the PSU cuts off the power supply (+5V) to the four LD boards. (The electric circuits go through the EGB and IOB.) The LD safety switch system stops the laser beam when the cover is open.

Door SW


IOB

# **Automatic Line Position Adjustment**

#### Overview

YY, KK, CC, MM: Spaces between two lines of the same color

KY, KC, KM: Spaces between a black line and a color line

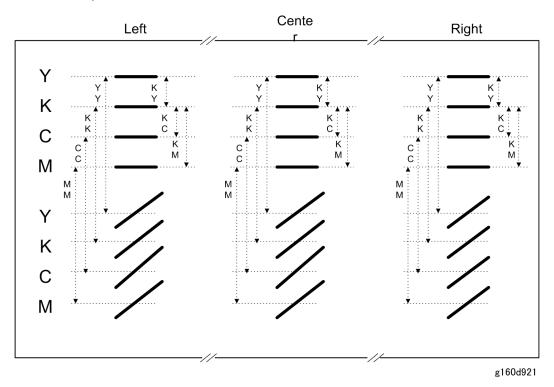

During automatic line position adjustment, the line patterns above are made eight times on the transfer belt. The spaces between the lines (YY, KK, CC, MM, KY, KC, KM) are measured by the left, center, and right ID sensors. The controller reads the average of the spaces, and adjusts the following items:

- Sub scan line position for YCM
- Main scan line position for KYCM
- Magnification ratio for KYCM
- Skew for YCM (see the note below)



• In this procedure, only the skew for YCM is measured. If you want to adjust it, do the main skew adjustment procedure. (See 'Replacements and Adjustments – Laser Optics – LD Unit')

The transfer-belt-cleaning unit cleans the transfer belt after the patterns are measured.

# Summary of Each Adjustment

#### Sub scan line position for YCM

The adjustment of the sub-scan line position for YCM uses the line position for K (color registration). The machine measures the gaps between the lines of each color in the pattern on the transfer belt. If the gaps for a color are not correct, the machine moves the image of the color up or down the sub scan axis. To do this, it changes the laser write timing for that color.

## Main scan line position for KYCM

If the machine detects that the image is out of position in the main scan direction, it changes the laser-writestart timing for each scan line.

#### Magnification adjustment for KYCM

If the machine detects that magnification adjustment is necessary, it changes the LD clock frequency for the necessary color.

#### Skew for YCM

The adjustment of the skew for YCM uses the line position for K.

# Adjustment Conditions

If SP 2153 1 is set to "1 (ON)", then automatic line position adjustment is done at the times shown below.

#### After process control is done

If SP 2153 2 is set to "1 (ON)", then the adjustment is done when the following types of process control are successfully done.

- Initial process control
- Interval process control
- No-use time process control

#### Initialization

If SP2153 3 is set to "1 (ON)", then the adjustment is done when the main power is turned on or the machine comes back from the standby mode, but only if one of the following conditions occurs.

- At a set time after the previous adjustment. The default value is 360 minutes. You can adjust the time with SP 2153 13.
- When the temperature changes after a previous adjustment by more than a set value. The default
  value is "5°C". You can adjust the temperature change value with SP 2153 12.

#### Printing

If SP 2153 4 is set to "1 (ON)", then the adjustment is done when the machine gets print job data, but only if one of the following conditions occurs.

 At a set time after the previous adjustment. The default value is 360 minutes. You can adjust the time with SP 2153 13.

6

- When the temperature changed after a previous adjustment by more than a set value. The default
  value is "5°C". You can adjust the temperature change value with SP 2153 12.
- When the magnification changed after a previous adjustment by more than a set value. The default value is "1%". You can adjust the magnification change value with SP 2153 15.

#### Interrupt

If SP 2153 5 is set to "1 (Yes)", then the adjustment is done when the one of the following conditions occurs during a print job with many pages.

- When the number of printed pages after the previous adjustment becomes more than a set number.
  The number of pages includes black and color printing. The default value is 190 pages. (If this
  condition occurs, automatic line position adjustment after the next interval process control will not be
  cancelled.) You can adjust the default value with SP 2153 10.
- When the temperature changed after a previous adjustment by more than a set value. The default value is "5°C". You can adjust the temperature change value with SP 2153 12.
- When the magnification changed after a previous adjustment by more than a set value. The default value is "1%". You can adjust the magnification change value with SP 2153 15.

## Summary Table

The below table shows when the automatic line position adjustment is done. It also shows the main SPs that control the timing of the adjustment. If SP 2153 1 is "Off", then the automatic adjustment is never done. Note that the adjustments for the sub-scan line position, main scan line position, and magnification are done at the same time.


Enabled/ Disabled (SP 2153 1)	After Process Control (SP 2153 2)	Initialization (SP 2153 3)	Printing (SP 2153 4)	Interrupt (SP 2153 5)	Remarks
	ON	On	ON	On	Default
				Off	
On			Off	On	
				Off	
			ON	On	
		Off		Off	
		Off	Off	On	
				Off	
	Off	On	ON	On	

Enabled/ Disabled (SP 2153 1)	After Process Control (SP 2153 2)	Initialization (SP 2153 3)	Printing (SP 2153 4)	Interrupt (SP 2153 5)	Remarks
				Off	
			Off	On	
			Oll	Off	
		Off	ON	On	
			ON	Off	
			Off	On	
			Oii	Off	
Off	-	-	-	-	No Adjustment



• You can also do the automatic line position adjustment manually with SP 2111 1.


# Main Scan Skew Adjustment

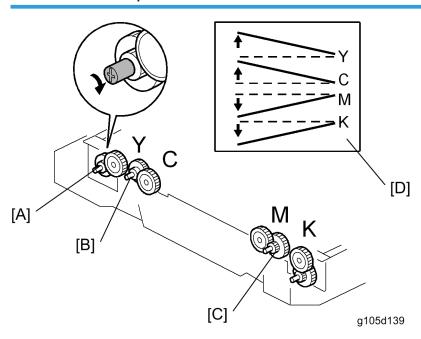

You can adjust the mirror adjustment cam for magenta [C], cyan [B], and yellow [A] with a screwdriver. This mechanism corrects the main scan skew. The diagram shows the effect on line skew [D] when you turn the cam in a counterclockwise direction.

For more about this adjustment, ( LD unit).


## **LDU Shutter**

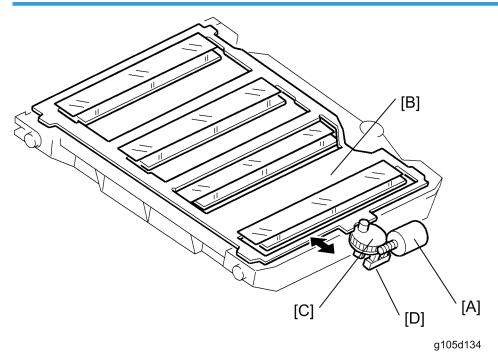

The LD unit has a shutter. As a result, toner and other dust does not fall on the LDU glass. The shutter motor [A] moves the shutter [B] in the direction of the arrow with the gear [C]. SC270 occurs if the output of the LDU shutter sensor [D] does not change 1 second after the LDU shutter motor turned on.

**Photoconductor Unit** 

# 6

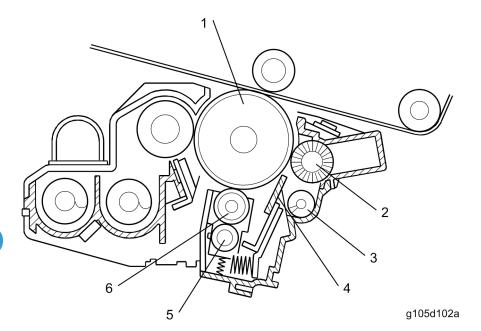


- 1. OPC drum
- 2. Cleaning brush
- 3. Waste toner collection coil

- 4. Cleaning blade
- 5. Cleaning brush roller
- 6. Charge roller

This machine has four PCUs, one for each color. Each PCU contains an OPC drum, charge roller, cleaning brush, and cleaning blade. The diameter of the drum is 30 mm (circumference: about 94.2 mm).

The photoconductor gap between each PCU and development roller is set by the drum positioning plate and the rear shaft. It is not adjustable in the field.

# **Drive and Drive Gear Position Sensor**

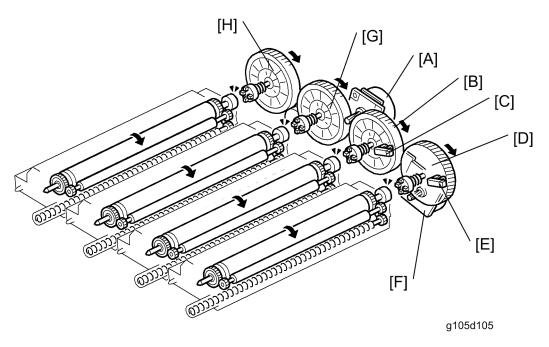


The black OPC/development motor [F] controls the PCU for black.

The color development motor [A] controls the PCUs for magenta, cyan, and yellow. One motor controls these three drums to help reduce the CMY color registration errors.

#### Mechanism

The machine uses the drum gear position sensors to detect if the drum motors turn. SC380 occurs when it detects that the drum motor does not move. These sensors also help the machine to initialize the positions of the gears when the main switch is turned on and at initialization. This prevents changes between printouts in how the gears engage. This can cause changes in copy quality.

There is an actuator on each of the black [D] and magenta [B] drum gears. The drum gear position sensors [C][E] detect the positions of these actuators. The sensors check that the two actuators are parallel. This mechanism makes sure that output quality does not change. The cyan [G] and yellow [H] drum gears operate with the magenta drum gear because these three drum gears are connected through other gears.

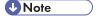

• In the ready condition, the two actuators are parallel. If they are not in a parallel position, the machine adjusts the position of the black drum gear.

When a drum gear position sensor has found an error, SC code 396 or 397 is shown. The table shows the steps of the initialization procedure, possible errors, and corresponding SC codes.


	Initialization process	Possible error	SC code
Step 1	The four drums turn at the same time for seven seconds. The two drum position sensors detect the two drum gear interrupters several times.	The black drum gear actuator is not detected.	396
		The color drum gear actuator is not detected.	397
		Both black and yellow drum gear actuators are not detected.	396
Step 2	The time lags between detection of the black drum gear interrupter and detection of the color drum gear interrupter are checked. The average time lag is calculated.		
Step 3	The black drum turns. The position of the gear is adjusted for the average time difference.	The black drum gear actuator is not detected. (Refer to the following note.)	396



• If the connector of the black drum position sensor is connected to the yellow drum position sensor (and the connector of the yellow drum position sensor is connected to the black drum position sensor), no error occurs in step 1 and step 2.

6

# **Drum Charge and Quenching**

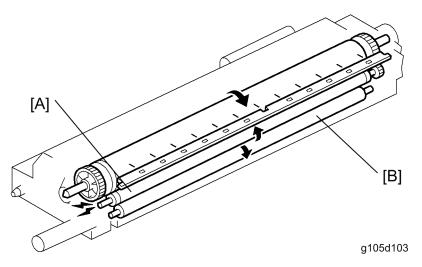


This machine uses a charge roller [A]. The charge roller gives the drum surface a negative charge. The high voltage supply board, which is at the rear of the machine, applies a dc and ac voltage (at a constant current) to the roller. The ac voltage helps to make sure that the charge given to the drum is as constant as possible.

The machine automatically controls the charge roller voltage if automatic process control is enabled (that is, if SP3-501-001 is set to 0). However, if process control is turned off, (that is, if SP3-501-001 is set to 1), the dc voltage is the value stored in SP2-201-001 to -004 or SP2-201-006 to -009 (do not adjust in the field unless told to do this).

The diameter of the roller is 30 mm (the circumference is about 94.2 mm).


The cleaning brush roller [B], which always touches the charge roller, cleans the charge roller.

For quenching at the end of every job, light from the quenching lamp (LED array in the PCU) hits the full area of the drum.

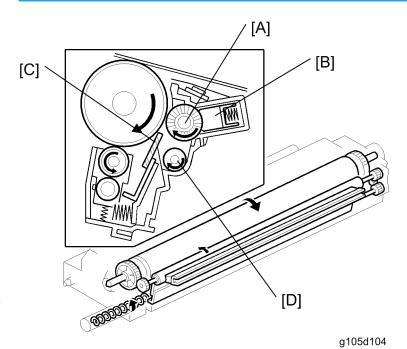

The cleaning brush [A] makes flat the waste toner on the drum. The lubricant bar [B] lubricates the brush. The cleaning blade [C] then removes the waste toner. The toner collection coil [D] moves the toner to the waste toner collection duct.

## **Waste Toner Collection**

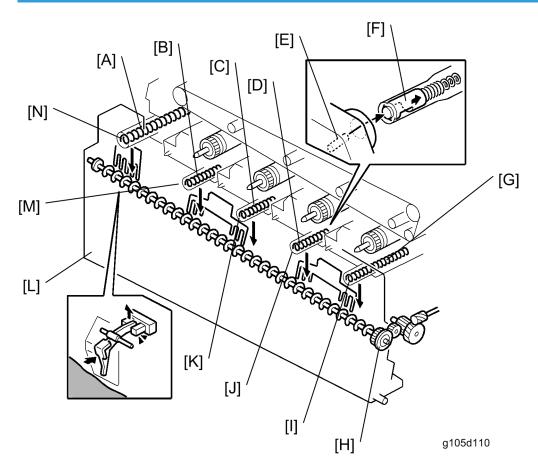

The waste toner from the collection coils in the four PCUs falls into the waste-toner collection bottle from the four openings [I][J][K][M] at the rear of the PCUs. The toner collection coils [B][C][D][G] move this waste toner to the waste toner bottle [L].

Coils [B][C][D] are controlled by the color development motor and coil [G] is controlled by the black OPC/development motor.



• The openings [I] to [M] are for these PCUs: black  $\rightarrow$  [I], cyan  $\rightarrow$  [J], magenta  $\rightarrow$  [K], yellow  $\rightarrow$  [M].


The waste toner from the transfer-belt cleaning unit falls into the waste toner collection bottle from a different opening [N]. The toner collection coil [A] moves this waste toner to the waste toner bottle.

The waste toner collection coil [H] is controlled by the transfer roller contact motor.

The waste toner bottle has five seals (one at each entrance). These prevent scattering waste toner.

The pin [E] at the waste toner entrance pushes the shutter spring [F] in the rear of the PCU. Because of this, waste toner can fall into the waste toner bottle. If the left cover is open, the waste toner does not come out from the rear of the PCUs.

## Waste Toner Bottle Full Detection and Set Detection

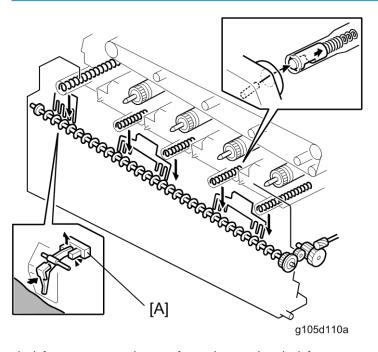

The left cover sensor in the main frame detects when the left cover is open. It also detects if the waste toner bottle is put in the machine. If the "Close Front/Left Cover" shows on the LCD when the cover is closed, check if the waste toner bottle is in the machine.

The waste toner sensor [A] detects when the bottle is almost full.


When the bottle contains a set quantity of waste toner, the sensor turns off. The machine detects that the waste toner bottle is almost full.

After that, the machine can print approximately 1250 more sheets. After printing 1250 sheets, it shows "Replace Waste Toner bottle" and after the end of the job, the printer cannot be used until the bottle is replaced or emptied.



 The number of sheets is calculated for a paper size of A4 and an image coverage ratio for each color of 5%.

# PCU Detection (Development Unit Detection)

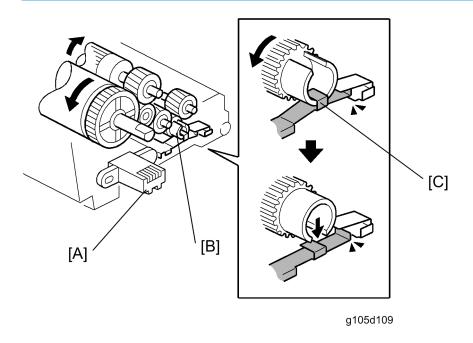

#### **Unit Set Detection Pins**

Each PCU has a connector [A]. The machine uses this to detect if the PCUs and development units are in the machine. Each PCU is detected through this connector when the drum positioning plate is closed.

#### **New Unit Detection**

Each PCU also has a circular hook [B]. The machine uses this to detect when a new PCU is installed.

On a new unit, the hook holds up the terminal [C]. This hook turns the switch on, and the machine detects that the unit is new.

When the unit operates for the first time, the hook turns and releases the terminal and the switch turns off. The hook cannot pick up the terminal again. Because of this, the machine detects that this PCU is not new.

#### **Error Message**

When the machine cannot detect a PCU, it outputs the first message, "Reset PCU Correctly," and the second message, "Xxxxxx"; where "Xxxxxx" is a color, for example "Magenta".


The operation panel shows the first message and then shows the second message, and then back to the first. Each message is shown for 3 seconds.

0

If two or more PCUs are not detected, the second message shows those colors, for example "Yellow/Cyan" and "Yellow/Magenta Black.

# **Development**

## Overview

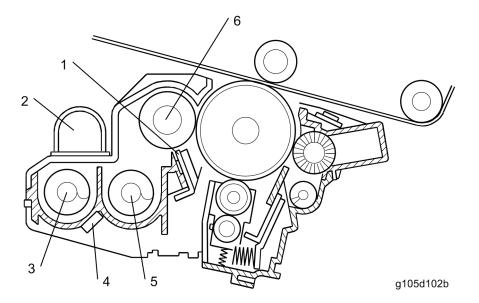


1. Doctor blade	4. TD sensor
2. Developer hopper	5. Mixing coil (right)
3. Mixing coil (left)	6. Development roller

This machine has four development units, one for each color. The developer in each unit is supplied to the development roller by the two mixing coils. Electrostatic attraction moves the developer to the surface of the roller.

The drum positioning plate and the rear shaft set the photoconductor gap between the PCU and development roller. It is not adjustable in the field.

The TD sensor detects toner density. Each development unit has a TD sensor.

The diameter of the development roller is 18 mm (the circumference is approximately 56.5 mm).

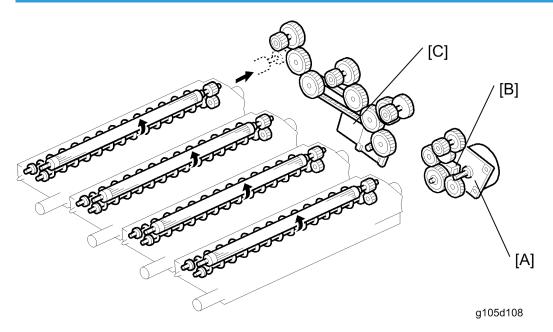


The black development motor [A] drives the development roller and the photoconductor for black through gears and the development clutch [B].

 $The color development\ motor\ [C]\ drives\ the\ development\ unit\ for\ magenta,\ cyan,\ and\ yellow\ through\ gears.$ 

The machine only contains one development clutch, and it is only used for black.

# **Developer Mixing**

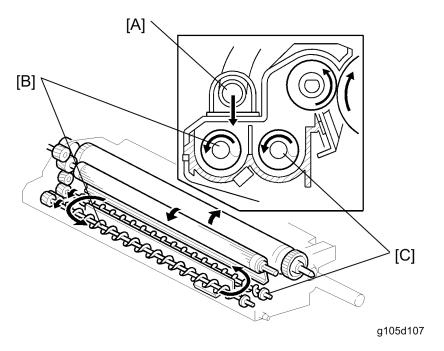

The toner is supplied from the hopper [A]. Two mixing coils [B and C] move the developer forward and rearward to mix the developer.

This occurs at these times:

- Immediately after a new PCU is installed.
- During the process control self check
- During toner supply
- During development.
- Every 36 hours (can be changed with SP 3554 003)
- If absolute humidity changes more than ± 6 g/m³ (e.g. 23°C/50% → 27°C/70%). The humidity threshold can be changed with SP 3554 004.

# **Development Bias**


The high voltage supply board #2 supplies development bias to the development roller through the receptacle at the rear of each development unit.

There are ac and dc bias voltages. The ac bias improves toner transfer to the drum.

The machine automatically controls the dc bias, if automatic process control is enabled. However, if process control is turned off, (that is, if SP3-501-001 is set to 1), the dc bias is the value stored in SP2212-001 to -009 (do not adjust in the field unless told to do this).

# **Toner Supply Mechanism**

#### Overview

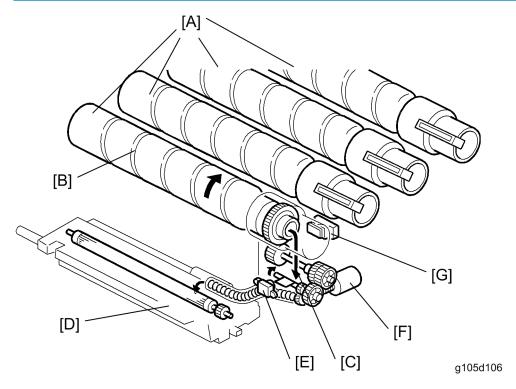

This machine uses four toner bottles [A]. Each bottle has a spiral groove [B] in it. The toner supply motor [F] turns the toner bottle (each bottle has a separate motor).

When the toner supply drive-mechanism starts, the toner bottles turn and the groove moves toner to the mouth of the bottle. Here, toner spills into a hopper [C]. Mylar blades turn and move the toner to an opening in the side of the hopper and the toner falls into the development unit [D]. The quantity of toner that is added is controlled by the length of time that the toner supply mechanism turns.

#### Toner Near End Detection:


Toner end sensors [E] detect toner end conditions ( Toner near end/toner end detection).

## **Toner Bottle Detection:**

Each toner bottle is detected by connection to the ID chip connector [G].

# **Image Transfer**

## Overview

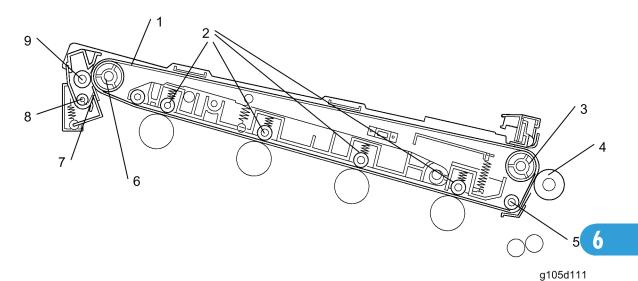


- 1. Transfer belt
- 2. Belt transfer roller
- 3. Transfer belt drive roller
- 4. Transfer roller
- 5. Belt entrance roller

- 6. Transfer belt tension roller
- 7. Cleaning blade
- 8. Toner collection coil
- 9. Cleaning brush

The toner is moved from the four OPC drums to the transfer belt. For a full color print, all four colors are moved from the PCUs to the transfer belt at the same time.

The transfer roller then moves the four-colour toner image from the transfer belt to the paper.

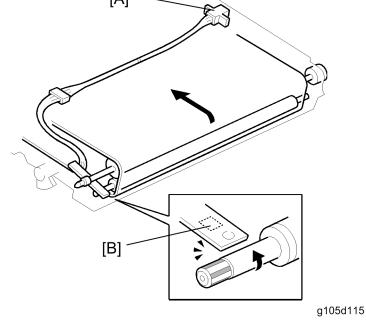

#### Transfer belt unit detection:

The transfer belt unit is detected when the connector [A] is connected.

The transfer belt rotation sensor [B] detects when the transfer belt entrance roller turns. It also detects the belt speed. To do this, it monitors the black and white stripes on the shaft. If the sensor detects that the rotation speed is out of specification, the machine shows SC443.


Changes in temperature have an effect on the transfer belt drive roller. This can cause changes in belt speed. Color registration errors occur if belt speed is not constant. The rotation sensor detects the speed change and the machine keeps the transfer belt speed constant. You can enable or disable this belt speed correction with SP 2153 8.

## New transfer belt unit detection:

The transfer belt rotation sensor has a fuse when the transfer belt unit is new. The fuse is blown when the machine is turned on. At this time, it is detected as a new unit.

6


# **Drive and Transfer Belt Roller Voltage**

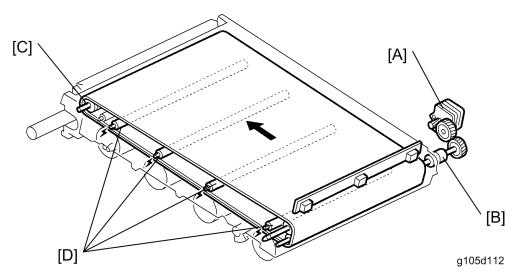

The transfer belt motor [A] controls the transfer belt drive roller [B]. The belt tension roller [C] adds tension to the transfer belt to help to turn this belt. The speed of transfer belt drive is set by the process line speed. The belt transfer rollers [D] are charged from the terminal plates to move the toner from the PCUs to the

## Transfer belt contact

transfer belt.

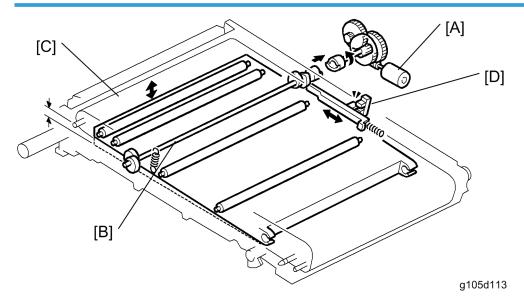


The transfer belt does not touch the color PCUs (cyan, magenta and yellow) when the machine makes a black and white print.

The transfer belt contact motor [A] turns the CMY contact cam shaft [B] when the machine starts to make a color print. The CMY contact cam lifts the belt transfer roller unit for CMY [C] to the transfer belt. Because of this mechanism, the life of the transfer belt is longer (it is not necessary for the transfer belt to touch the color PCUs when the machine makes a black and white print).

The transfer belt contact sensor [D] detects if the transfer roller unit for CMY touches the transfer belt. If it does not touch the transfer belt during color printing, the machine stops and shows SC 442.


## **Transfer Belt Cleaning**

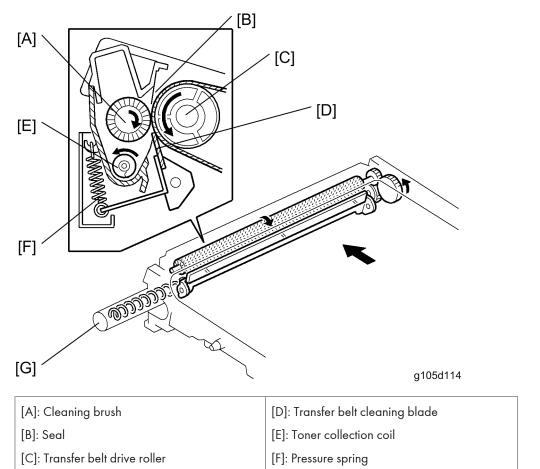

The transfer belt cleaning blade [A] removes remaining toner from the transfer belt to prevent "ghosting" on the next print. This blade is included in the blade holder. The pressure spring applies pressure to the center of the blade holder. This blade gets constant pressure because of the pressure spring [F].

The toner collection coil [E] moves the remaining toner to the waste toner bottle from its opening [G].

## Transfer Roller Unit

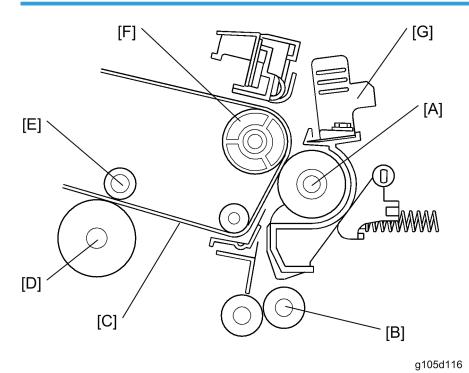

[A]: Transfer roller

[B]: Registration roller

[C]: Transfer belt

[D]: OPC

[E]: Belt transfer roller

[F]: Transfer belt drive roller

[G]: Discharge plate

#### Transfer from the belt:


The belt transfer roller [E] is given a positive voltage, and this pulls the toner from OPC [D] to the transfer belt

After all four layers of toner are transferred to the transfer belt [C], the registration roller [B] turns on and feeds the paper to the transfer roller [A]. Paper feed is timed to align the leading edge of the toner image on the belt at 4 mm from the leading edge of the paper. The paper moves at the same speed as the transfer belt.

#### Image transfer:

Charged with a negative voltage, the transfer belt drive roller [F] pushes out the toner from the transfer belt to the paper. This voltage is automatically corrected for the ambient temperature and humidity, print speed, and paper type.


# Discharge

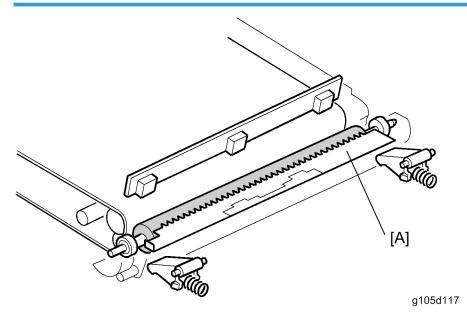

The discharge plate [A] removes remaining voltage from the printed paper. This is given a positive voltage. As a result, the voltage is cancelled and paper separation from the transfer belt occurs.

6


## **Transfer Roller Contact**

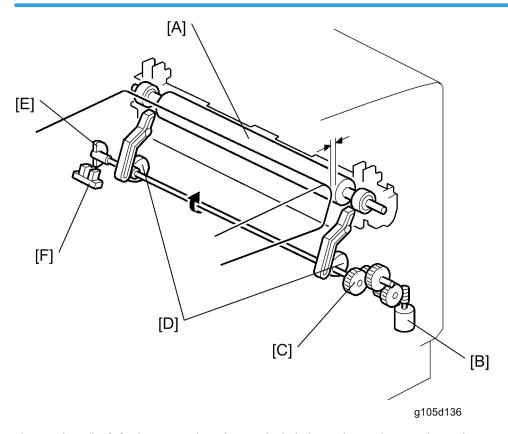

The transfer roller [A] is kept away from the transfer belt during the machine ready condition.

When printing starts, the transfer roller contact motor [B] turns the cam shaft [C]. This shaft has two cams [D] and an actuator [E]. The two cams push the transfer roller contact levers and these push the transfer roller against the transfer belt. The actuator turns on the transfer roller contact sensor [F] when the cam shaft turns. Then, the machine detects that the transfer roller touches the transfer belt.

### Overview

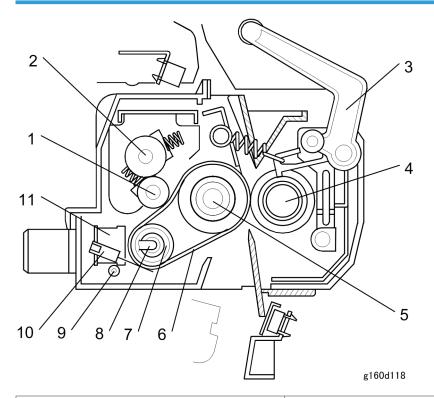

- 1. Fusing tension roller
- 2. Cleaning roller
- 3. Pressure lever
- 4. Pressure roller
- 5. Hot roller
- 6. Fusing belt


- 7. Heating roller
- 8. Heating lamp
- 9. New fusing unit detection fuse
- 10. Thermistor
- 11. Thermostat
- A belt fusing system is used. This has a faster warm-up time than a standard hot and pressure roller system.
- The heating roller is made of aluminum to increase the temperature of the fusing belt quickly.
- The hot roller is made of sponge, which becomes a little flat, and this increases the fusing nip. This roller does not contain a heating lamp.
- The heating roller thermistor controls the temperature of the lamp.

6

• Each new fusing unit contains a fuse. A short time after a new fusing unit is installed, this fuse blows. When this occurs, the machine detects that a new fusing unit is installed.

## **Fusing Temperature Control**

#### **Overall Procedure**

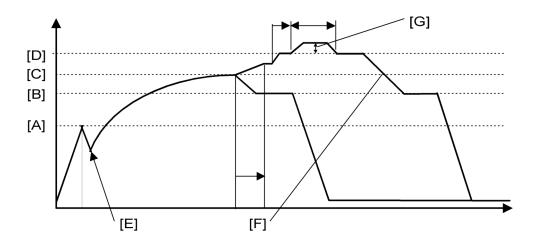

The machine starts to warm up the fusing unit to get the print ready condition. When the heating roller temperature gets to the idling ready temperature [A], the idling procedure starts to warm up the heating roller. The temperature becomes higher than the machine ready temperature [B] and gets to the print ready temperature [C] after the heating roller completes the idling.

The temperature increases to the target printing temperature. Then printing starts. If the temperature does not get to the target printing temperature before 30 seconds (SP 1104 22), printing starts.

The temperature increases to the first print temperature [G] when the first sheet of paper is printed, but this is only for the first page.

After the printing job, the machine turns the heating roller to prevent overheating [F]. You can adjust the fusing temperature settings.

## **Fusing Roller Idling**

This is done at the following three times:

- 1. Immediately after the power is turned on, or when the machine comes back from energy saver mode, if the fusing unit temperature is less than 100°C.
  - This is [E] on the diagram.

6

- This idling keeps the heating roller warmed up equally while it is heated. This temperature is controlled with SP 1912 5, and the durations of fusing idling are controlled with SP 1912 6, and 8 to 14
- You can also adjust this with SP 1912 2 and SP 1105 43
- 2. At the end of a job: [F]
  - This prevents the heating roller's overheating. After printing, the machine turns the heating roller with no heating. You can adjust the setting with SP 1912 7
- 3. At intervals of 4 hours if the machine is not used for a long time
  - This prevents the deformation of the hot roller and pressure roller.
  - Controlled by SP 1912 3 (interval) and 4 (duration)
  - Enable/disable this idling feature: SP 1912 1

For fusing idling at the start of a job, the duration and the fusing unit temperature during idling are also corrected for ambient temperature. SP 1917 controls all the corrections. The temperature/humidity sensor measures the room temperature. Corrections are made at the following times:

- Room temperature is below 18°C (L threshold, controlled by SP 1917 8)
- Room temperature is above 30°C (H threshold, controlled by SP 1917 7)

## Idling Ready Temperature before First Print Job: [A]

This is the idling ready temperature for the heating roller before the first print job. You can adjust the setting with SP 1912 5. The default is 100°C. If the heating roller temperature does not reach this temperature within 15 seconds after the heating lamp turns on, SC 542 occurs.

## Machine Ready Temperature: [B]

You can adjust the setting with SP 1913 2. The default is 150°C.

## Print ready temperature: [C]

You can adjust the setting with SP 1105 22. The default is 160°C.

## Target Printing Temperature: [D]

This is adjusted by the value stored in SP 1104 23. This value is added to the print ready temperature. The default is "10°C".

## First Print Temperature: [G]

**RTB 15** 

information

New

When the machine prints the first page, the heating roller temperature can easily decrease. If necessary, you can increase the temperature for the first page. This is a good adjustment for cold environments.

If fusing is not sufficient for the first page of a job, adjust these SPs:

- Temperature increase for the first page of a job: SP 1104 25 This value is added to the target printing temperature. The default is "8°C".
- Duration for application of the temperature increase: SP 1104 26
- The increase is applied if the interval between jobs is greater than these values:
  - OHP, Thick paper, or 1200 x 1200 dpi: SP 1104 24
  - Other types of job: SP 1104 27

## Corrections for Small Paper Sizes (less than A5)

These corrections prevent too much heating of the fusing unit when paper widths less than A5 are used. In multi-page printing with this size of paper, the heating roller's temperature is not the same in all areas because the small size paper does not go through the two ends of the heating roller. The temperature of locations that do not touch the paper becomes higher than other locations during multi-page printing. The following corrections decrease this problem.

- Print speed: This is decreased after 15 pages. Then, 30 seconds after this, the print speed increases to the standard temperature again. You can adjust this with SP 1911 1 to 3.
- Fusing temperature: This is decreased in three stages, as shown below.
  - Decreased by 2°C after 25 pages are printed (controlled by SP 1911 4 and 14)
  - Decreased by 5°C again after 10 more pages are printed (controlled by SP 1911 6 and 16)
  - Reduced by 5°C again after 15 more pages are printed (controlled by SP 1911 8 and 18)

There are also temperature reductions for one-sided printing and two-sided printing.

- One sided printing: The temperature is decreased in two steps as shown below
  - After 100 pages, decreased by 2°C (controlled by SP 1911 21 and 23)
  - After 10 more pages, decreased by 5°C (controlled by SP 1911 22 and 24)
- Duplex printing: The temperature is decreased in two steps as shown below
  - After 80 pages, decreased by 2°C (controlled by SP 1911 25 and 27)
  - After 10 more pages, decreased by 5°C (controlled by SP 1911 26 and 28)

#### **Overheat Protection**


• If the heating roller temperature becomes higher than 230°C, the CPU cuts off the power to the heating lamp and SC543 shows.

If 250°C is detected, the thermostat is opened, and then the heating lamp power is cut off. SC545 shows.



- If the thermistor output is less than 0°C for six seconds, SC541 occurs.
- If the heating lamp gets full power for 8 seconds after the heating roller gets to the print ready temperature, SC545 occurs.


#### **Drive**

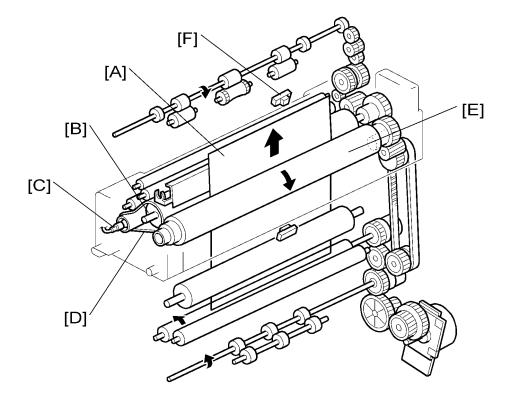

After the toner image is transferred to the paper [A], it goes through the fusing unit. The fusing unit contains the heating roller [B]. The heating lamp [C] applies heat to the heat roller. The heat roller applies heat to the fusing belt [D] to melt the toner on the paper. The paper receives pressure between the fusing belt and the pressure roller [E], and melted toner bonds to the paper.

When the paper goes out of the fusing unit, it goes to the exit tray. The fusing exit sensor [F] detects paper jams.

## Controller

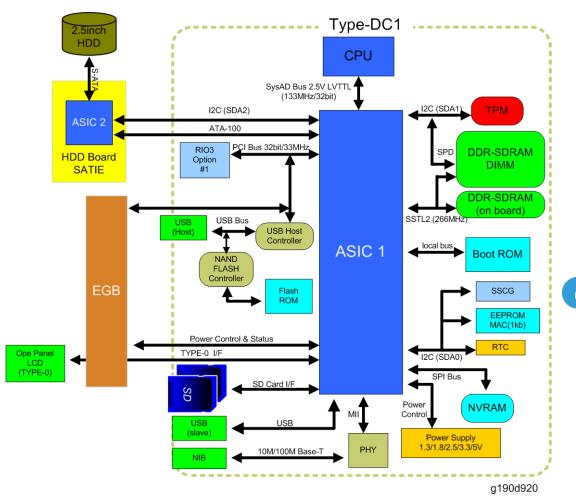

The controller uses GW (Ground Work) architecture.

- ASCI 1. GW architecture ASIC
- CPU. (RM7935-835MHz). The central processing unit that controls the operation of the controller board.
- DDR SDRAM. The image memory (Resident: 256MB, Optional: 128MB or 256MB) image compression, image rotation and other operations are done.
- SD. This is the interface for SD card slots 1 and 2. Slot 2 is for optional applications or service slot for firmware version updates, moving. applications to other SD cards, and downloading/uploading NVRAM contents

- Board Option Slot. Only one of the following options can be installed in either I/F Slot: IEEE1284 Interface Board (Centronics), IEEE802.11a/g, g (Wireless LAN), Bluetooth Interface Unit, Gigabit Ethernet Interface Board.
- Flash ROM. Firmware area, work area for PDF direct print, VM card. Maximum capacity: 128 MB.
- USB. The interface for USB 2.0 devices. Supports both low-speed and high-speed modes. USB support is built-into the controller. No installation is required for the USB function.
- **NIB.** The Ethernet interface connection. Network support is built-into the controller. No installation is required for the network function.
- Boot ROM. Stores the boot program.
- NVRAM. The memory that stores the system configuration and user code.
- HDD. 2.5 inches HDD (option)

# 7. Specifications

## **Specifications**

## General Specifications

	G190
Configuration:	Desktop
Print Process:	Laser beam scanning and electro-photographic printing 4 drums tandem method
Printer Languages:	PictBridge, RPCS (Refined Printing Command Stream), PCL5c, PCL6, Adobe PostScript 3, PDF
Resolution:	
RPCS:	1200 x 1200 dpi, 1200 x 600 dpi, 600 x 600 dpi
PCL5c:	600 x 600 dpi 300 x 300 dpi
PCL-6:	1200 x 1200 dpi, 1200 x 600 dpi, 600 x 600 dpi
Adobe PS 3:	1200 x 1200 dpi, 1200 x 600 dpi, 600 x 600 dpi
PDF:	1200 x 1200 dpi, 1200 x 600 dpi, 600 x 600 dpi
PictBridge:	1200 x 1200 dpi, 1200 x 600 dpi
Gradations:	1 bit, 256 gradations

	G190				
Printing Speeds [Monochrome]	Plain Paper	Thick/OHP			
600 x 600 dpi (ppm)	30	15			
1200 x 600 dpi (ppm)	30	15			
1200 x 1200 dpi (ppm)	15	15			
Printing Speeds [Color]	Plain Paper	Thick/OHP			

600 x 600 dpi (ppm)	30	15
1200 x 600 dpi (ppm)	30	15
1200 x 1200 dpi (ppm)	15	15

	G190			
Resident Fonts:	PCL5c:  • 45 Manager Intelli fonts  • 13 TrueType fonts  • 4 Bitmap fonts			
	Adobe PostScript 3:  • 136 fonts (24 Type 2 fonts, 112 Type 14 fonts)			
Host Interfaces:	<ul> <li>Ethernet (10/100 Base-TX): Standard</li> <li>USB2.0: Standard</li> <li>IEEE802.11a/g,11g (Wireless LAN): Optional</li> <li>Parallel (IEEE1284: Optional): Optional</li> <li>Bluetooth (Wireless): Optional</li> <li>USB Host: Standard</li> <li>Gigabit Ethernet: Optional</li> </ul>			
Network Protocols:	TCP/IP, IPX/SPX, NetBEUI, AppleTalk, RHPP			
First Print Speed:	<ul> <li>Color: 15 seconds or less (from tray 1)</li> <li>Black and White: 10 seconds or less (from tray 1)</li> </ul>			
Warm-up Time	Less than 30 seconds (at 23°C/50%)			
Print Paper Capacity: (80 g/m², 20lb)	<ul> <li>Standard tray: 550 sheets</li> <li>By-pass tray: 100 sheets</li> <li>Optional paper feed tray: 550 sheets</li> </ul>			
Print Paper Size:	(See "Supported Paper Sizes".)			
Standard Tray	A4 / B5 / 8.5" x 11" / 8.5" x 14" (SEF)			
By-pass: Minimum	90 x 148 mm			
By-pass: Maximum	216 x 356 mm			

Optional Tray	A4 / B5 / 8.5" x 11" / 8.5" x 14" (SEF)		
Printing Paper Weight:	Standard tray, Optional paper tray, and bypass tray:  • One-sided: 52-216 g/m² (16-55 lb)  Duplex:  • 60-157 g/m² (16-43 lb)  Paper weight settings at printer driver and operation panel:  • Thin: 52 – 60.2 g/m²  • Plain paper 1 (Plain): 60.2 – 90.2 g/m²  • Plain paper 2 (Plain and Recycled): 90.2 – 104.7 g/m²  • Thick paper 1: 104.7 – 157 g/m²  • Thick paper 2: 157 – 216 g/m²		
Output Paper Capacity:	Standard exit tray: 500 sheets (face down)		
Memory:	Standard 256 MB  Up to 512 MB with optional Memory Unit		
Power Source:	120 V, 60 Hz: More than 11 A (for North America) 220 V - 240 V, 50/60 Hz: More than 6 A (for Europe/Asia)		
Power Consumption:	<ul> <li>120 V: 990 W or less</li> <li>220-240 V: 1200 W or less</li> <li>Energy Saver: 6 W or less</li> </ul>		
Noise Emission: (Sound Power Level, The measurements were made in accordance with ISO9296 at the operator position.)	Printing  • Mainframe Only: 63 dB or less  • Full System: 67 dB or less  Stand-by  • Mainframe Only: 40 dB or less  • Full System: 40 dB or less		
Dimensions (W x D x H):	446 x 589.5 x 487 mm (17.4" x 23.2" x 19.2")		
Weight:	Less than 50 kg (110.3 lb)		

## Supported Paper Sizes

D	S: (\\/  \	Main Tray		PF	:U	Ву-ро	ass Tray	Durley
Paper	Size (W x L)	NA	E/A	NA	E/A	NA	E/A	Duplex
A3	297 x 420 mm	Ν	N	N	N	Ν	N	N
A4 SEF	210 x 297 mm	Υ	Υ	Υ	Υ	Y#	Y#	Υ
A4 LEF	297 x 210 mm	Ν	N	N	N	Ν	N	N
A5 SEF	148 x 210 mm	Y#	Υ	Y#	Υ	Y#	Y#	Y
A5 LEF	210 x 148 mm	Ν	N	N	N	Ν	N	N
A6 SEF	105 x 148 mm	Y#	Υ	N	N	Y#	Y#	Y
B4 SEF	257 x 364 mm	N	N	N	N	Ν	N	N
B5 SEF	182 x 257 mm	Y#	Y#	Y#	Y#	Y#	Y#	Υ
B5 LEF	257 x 182 mm	N	N	N	N	Ν	N	N
B6 SEF	128 x 182 mm	Y#	Y#	Y#	Y#	Y#	Y#	Υ
Ledger	11" x 17"	N	N	N	N	Ν	N	N
Letter SEF	8.5" x 11"	Υ	Y	Υ	Y	Y#	Y#	Y
Letter LEF	11" x 8.5"	Ν	N	N	N	Ν	N	N
Legal SEF	8.5" x 14"	Υ	Υ	Y	Υ	Y#	Y#	Υ
Half Letter SEF	5.5" x 8.5"	Υ	Y#	Υ	Y#	Y#	Y#	Y
Executive SEF	7.25" x 10.5"	Υ	Y	Υ	Υ	Y#	Y#	Υ
Executive LEF	10.5" x 7.25"	Ν	N	N	N	Ν	N	N
F SEF	8" x 13"	Y#	Y#	Y#	Y#	Y#	Y#	Y
Foolscap SEF	8.5" x 13"	Y#	Y#	Y#	Y#	Y#	Y#	Y
Folio SEF	8.25" x 13"	Y#	Y#	Y#	Y#	Y#	Y#	Υ
8K	267 x 390 mm	Ν	N	Ν	N	Ν	N	N
16K SEF	195 x 267 mm	Y#	Y#	Y#	Y#	Y#	Y#	Y

/

D	Paper Size (W x L)		n Tray	PF	U	Ву-ро	ass Tray	Duralan
Paper	Size (VV X L)	NA	E/A	NA	E/A	NA	E/A	Duplex
16K LEF	267 x 195 mm	Ν	N	Ν	Ν	Ν	N	Ν
Custom (Width)	70 x 216 mm *1	Y#	Y#	Y#	Y#	Y#	Y#	Ν
Custom (Longeth)	5.5" x 14" *2	Y#	Y#	Y#	Y#	Y#	Y#	Ν
Custom (Length)	14" ~ 900 mm	Ν	N	Ν	Ν	Y#	Y#	N
Postcard	100 x 148 mm	Y#	Y#	Ν	Ν	Y#	Y#	Ν
Double postal card	200 x 148 mm	Y#	Y#	Y#	Y#	Y#	Y#	Ν
Com 10 Env.	4.125" x 9.5"	Y#	Y#	Y#	Y#	Y#	Y#	N
Monarch Env.	3.875" x 7.5"	Y#	Y#	Y#	Y#	Y#	Y#	Ν
C6 Env.	114 x 162 mm	Y#	Y#	Y#	Y#	Y#	Y#	N
C5 Env.	162 x 229 mm	Y#	Y#	Y#	Y#	Y#	Y#	N
DL Env.	110 x 220 mm	Y#	Y#	Y#	Y#	Y#	Y#	N

<sup>\* 1:</sup> This size is only for the by-pass tray. The size for the main tray and OPU is 98 mm.

Y#: Supported: the user specifies the paper size.

N: Not supported

## **Software Accessories**

The printer drivers and utility software are provided on one CD-ROM. An auto-run installer allows you to select which components to install.

#### **Printer Drivers**

Printer Language	Windows 2000	Windows XP	Vista	Macintosh
PCL 5c/6	Yes	Yes	Yes	No

<sup>\*2:</sup> This size is only for the main tray and by-pass tray. The size for OPU is 148 mm.

Y: Supported: the sensor detects the paper size.

Printer Language	Windows 2000	Windows XP	Vista	Macintosh
PS3	Yes	Yes	Yes	Yes
RPCS	Yes	Yes	Yes	No

## **U** Note

- The PS3 drivers are all genuine AdobePS drivers, except for Windows 2000, which uses Microsoft PS. A PPD file for each operating system is provided with the driver.
- The PS3 driver for Macintosh supports Mac OS 7.6 or later versions.

## **Utility Software**

Software	Description		
Font Manager 2000 (2000, XP, Server2003)	A font management utility with screen fonts for the printer		
Smart Device Monitor for Admin (Win2000, XP, Vista, Server2003)	A printer management utility for administrator.		
DeskTopBinder Lite Ver.5, Professional Ver.5 (Win2000, XP, Vista, Server2003)	DeskTopBinder itself can be used as personal document management software and can manage both image data converted from paper documents and application files saves in each client's PC.		
Web Smart Device Monitor Ver.2 (Win2000, XP, Server2003)	A printer management, Account/Logging management for administrator.		

## **Machine Configuration**

ltem	Machine Code	Remarks
Main Unit	G190	
Paper Feed Unit	G392	Up to three tray units can be installed.

	i .	
128 MB DIMM Memory	M345-21	
256 MB DIMM Memory	D362-21	
IEEE1284 I/F Board	B679	Common with model G-P1/G-P2
IEEE802.11a/g Board	EU/ASIA: M344-02 NA: M344-01	
IEEE802.11g Board	EU/ASIA: M344-08	
HDD Encryption Unit	M344-05	
VM Card	EU/ASIA: G344-09 NA: M344-07	
Bluetooth Board	B826	Common with model G-P2
Gigabit Ethernet	G874-01	Common with model G-P2
HDD Type 420	M344-00	40GB
Data Overwrite Security Unit	M344-06	
PictBridge	M344-03	
Data Storage Card	G874-36	Common with model G-P2

MEMO

MEMO

MEMO

