Information

Introduction

This manual contains detailed instructions and notes on the operation and use of this machine. For your safety and benefit, read this manual carefully before using the machine. Keep this manual in a handy place for quick reference.

Important

Contents of this manual are subject to change without prior notice. In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

Notes

Some illustrations in this manual might be slightly different from the machine.

Certain options might not be available in some countries. For details, please contact your local dealer.

Depending on which country you are in, certain units may be optional. For details, please contact your local dealer.

Two kinds of size notation are employed in this manual. With this machine refer to the metric version.

Caution

For good print quality, the supplier recommends that you use genuine toner from the supplier.

The supplier shall not be responsible for any damage or expense that might result from the use of parts other than genuine parts from the supplier with your office products.

Power Source

220-240 V, 50/60 Hz, 7 A or more

Please be sure to connect the power cord to a power source as above.

Laws and Regulations

Legal Prohibition

Do not copy or print any item for which reproduction is prohibited by law.

Copying or printing the following items is generally prohibited by local law:

bank notes, revenue stamps, bonds, stock certificates, bank drafts, checks, passports, driver's licenses.

The preceding list is meant as a guide only and is not inclusive. We assume no responsibility for its completeness or accuracy. If you have any questions concerning the legality of copying or printing certain items, consult with your legal advisor.

This machine is equipped with a function that prevents making counterfeit bank bills. Due to this function the original images similar to bank bills may not be copied properly.

Laser Safety

This machine is considered class 1 laser device, safe for office / EDP use. The machine contains eight AlGaInP laser diodes, 9 milliwatt, 648 - 663 nanometer wavelength for each emitter.

Direct (or indirect reflected) eye contact with the laser beam might cause serious eye damage. Safety precautions and interlock mechanisms have been designed to prevent any possible laser beam exposure to the operator.

The following label is attached on rear side of the printer.



A CAUTION:

Use of controls or adjustments or performance of procedures other than those specified in this manual might result in hazardous radiation exposure.

User Information on Electrical & Electronic Equipment

Users in the EU, Switzerland and Norway

Our Products contain high quality components and are designed to facilitate recycling.

Our products or product packaging are marked with the symbol below.



The symbol indicates that the product must not be treated as municipal waste. It must be disposed of separately via the appropriate return and collection systems available. By following these instructions you ensure that this product is treated correctly and help to reduce potential impacts on the environment and human health, which could otherwise result from inappropriate handling. Recycling of products helps to conserve natural resources and protect the environment.

For more detailed information on collection and recycling systems for this product, please contact the shop where you purchased it, your local dealer or sales/service representatives.

All Other Users

If you wish to discard this product, please contact your local authorities, the shop where you bought this product, your local dealer or sales/service representatives.

Note for the Battery and/or Accumulator Symbol (For EU countries only)



In accordance with the Battery Directive 2006/66/EC Article 20 Information for end-users Annex II, the above symbol is printed on batteries and accumulators.

This symbol means that in the European Union, used batteries and accumulators should be disposed of separately from your household waste.

In the EU, there are separate collection systems for not only used electrical and electronic products but also batteries and accumulators.

Please dispose of them correctly at your local community waste collection/recycling centre.

Safety Information

When using your printer, the following safety precautions should always be followed.

In this manual, the following important symbols are used:

MARNING:

Indicates a potentially hazardous situation which, if instructions are not followed, could result in death or serious injury.

ACAUTION:

Indicates a potentially hazardous situation which, if instructions are not followed, may result in minor or moderate injury or damage to property.

Environments Where the Machine Can be Used

↑ WARNING:

• Keep the machine away from flammable liquids, gases, and aerosols. A fire or an electric shock might occur.

↑ CAUTION:

- Keep the machine away from humidity and dust. Otherwise a fire or an electric shock might occur.
- Do not place the machine on an unstable or tilted surface. If it topples over, an injury might occur.
- Make sure the room where you are using the machine is well ventilated and spacious. Good ventilation is especially important when the machine is used heavily.
- Place the machine on a strong and level surface. Otherwise, it might fall and injure someone.
- Keep the machine in an area that is within optimum environmental conditions. Operating the machine in an environment that is outside the recommended ranges of humidity and temperature can cause an electrical fire hazard. Keep the area around the socket free of dust. Accumulated dust can become an electrical fire hazard.
- Place no objects on the cover.

Note

- ☐ Depending on the ambient temperature and humidity, steam may come from the exhaust vent behind the control panel during printing. This is water vapor from the paper, not a sign of malfunction.
- ☐ To avoid possible build-up of ozone, locate this machine in a large well ventilated room that has an air turnover of more than 30 m³/hr/person.

Handling Power Cords and Power Plugs

↑ WARNING:

- The supplied power cord is for use with this equipment only. Do not use with other appliances. Doing so may result in fire, electric shock, or injury.
- Disconnect the power plug (by pulling the plug, not the cable) if the power cable or plug becomes frayed or otherwise damaged.
- If the power cord is damaged (exposure of the core, disconnection, etc.), contact your service representative to change to a new one. Operating the machine with a damaged power cord may cause an electric shock or fire.
- It is dangerous to handle the plug with wet hands. Doing this may result in receiving an electric shock.
- Confirm the wall outlet is near the machine and freely accessible, so that in the event of emergency, it can be unplugged easily.
- Avoid connecting multiple devices including this printer to the same power source.
- Connect the machine only to the power source described in "Information" in the HTML manual or "Safety Information" (the printed manual). Connect the power cord directly into a wall outlet and do not use an extension cord.
- Power cords that are damaged, broken, modified, trapped under heavy objects, pulled hard, or bent severely are electric shock and fire hazards.

A CAUTION:

- To disconnect the power cord, pull it out by plug. Do not drag the cord itself.
 Doing so may result in damage to the cord, leading to fire or electric shock.
- For safety reason, unplug the power cord from the wall outlet if the machine will not be used for an extended period of time such as holidays.

Handling the Main Machine

MARNING:

- Turn off the power and disconnect the power plug (by pulling the plug, not the cable) if any of the following occurs:
 - · You spill something into the machine.
 - You suspect that your machine needs service or repair.
 - The external housing of your machine has been damaged.

↑ CAUTION:

- Unplug the power cord from the wall outlet before you move the machine.
 While moving the machine, you should take care that the power cord will not be damaged under the machine.
- For environmental reasons, do not dispose of the machine or expended supply waste at household waste collection points. Disposal can take place at an authorized dealer.
- Before moving the machine, unplug the power cord from the wall outlet. If the cord is unplugged abruptly, it could become damaged. Damaged plugs or cords can cause an electrical or fire hazard.
- When moving the printer after use, do not take out toner and black drum unit/colour drum units to prevent toner spill inside the machine.
- When moving the machine, hold the handles at both sides, and then lift the printer slowly. Lifting it carelessly or dropping it may cause an injury.
- After you move the machine, use the caster fixture to fix it in place. Otherwise the machine might move or come down to cause an injury.
- Contact your service representative if you need to lift the machine (such as when relocating it to another floor). Do not attempt to lift the machine without the assistance of your service representative. The machine will be damaged if it topples or is dropped, resulting in malfunction and risk of injury to users. The machine's various handling areas are for service engineer use only. Do not touch these areas.
- Do not allow paper clips, staples, or other small metallic objects to fall inside the machine.
- Do not look into the lamp. It can damage your eyes.

∰lm	po	rta	nt
750	P٧		•••

- ☐ Rating voltage of the connector for options: Max. DC 24 V.
- \square Voltage must not fluctuate more than 10%.

Handling the Machine's Interior

MARNING:

- To avoid hazardous electric shock or laser radiation exposure, do not remove any covers or screws other than those specified in this manual.
- Do not take apart or attempt any modifications to this machine. There
 is a risk of fire, electric shock, explosion or loss of sight. If the machine has laser systems, there is a risk of serious eye damage.

↑ CAUTION:

- The fusing section of this machine might be very hot. Caution should be taken when removing misfed paper.
- The inside of this printer becomes very hot. Do not touch parts labeled "\(\triangle \)" (indicating a hot surface). Touching these parts will result in burns.
- When removing misfed paper, do not touch the fusing unit because it could be very hot.
- Do not touch the inside of the controller board compartment. It may cause a machine malfunction or a burn.
- Wait at least one hour after power off before replacing parts. Not allowing the printer to cool may result in burns.
- Before installing options, the machine should be turned off and unplugged for at least half an hour. Components inside the machine become very hot, and can cause a burn if touched.
- During operation, rollers for transporting the paper revolve. A safety device
 is being installed so that the machine can be operated safely. But take care
 not to touch the machine during operation. An injury might occur.
- When loading paper, take care not to trap or injure your fingers.
- Fire and breakdown can result from heavy accumulation of dust inside this machine. Consult your service representative for details about and charges for cleaning the machine's interior.
- Do not pull out the paper tray forcefully. If you do, the tray might fall and cause an injury.
- Keep your hands clear of the booklet finisher tray when pulling out or pushing in the finisher's staple unit. You can trap your fingers if you do not.
- Lifting the paper feed unit carelessly or dropping it may cause injury.

Handling the Machine's Supplies

↑ WARNING:

- Do not incinerate used toner or toner container. Toner dust might ignite when exposed to an open flame.
- Dispose of used toner containers in accordance with local regulations.
- Do not incinerate the black drum unit/colour drum units. Toner dust might ignite when exposed to an open flame. Dispose of the used black drum unit/colour drum units in accordance with local regulations.
- Do not store toner, used toner, or toner containers in a place with an open flame. The toner might ignite and cause burns or a fire.

↑ CAUTION:

- Do not use aluminum foil, carbon paper, or similar conductive paper to avoid a fire or machine failure.
- Keep toner (used or unused) and the toner container out of reach of children.
- If toner or used toner is inhaled, gargle with plenty of water and move into a fresh air environment. Consult a doctor if necessary.
- If toner or used toner gets into your eyes, flush immediately with large amounts of water. Consult a doctor if necessary.
- If toner or used toner is swallowed, dilute by drinking a large amount of water. Consult a doctor if necessary.
- Avoid getting toner on your clothes or skin when removing a paper jam or replacing toner. If your skin comes into contact with toner, wash the affected area thoroughly with soap and water.
- If toner gets on your clothing, wash with cold water. Hot water will set the toner into the fabric and may make removing the stain impossible.
- Do not open toner containers forcefully. Toner can spill, dirtying your clothes or hands, and possibly resulting in accidental ingestion.
- Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.
- Keep SD cards out of reach of children. If a child swallows a SD card, consult a doctor immediately.


Note

☐ Our products are engineered to meet the highest standards of quality and functionality. When purchasing expendable supplies, we recommend using only those specified by an authorized dealer.

Safety Labels of This Machine

Positions of MARNING and MCAUTION labels

This machine has labels for <u>AWARNING</u> and <u>ACAUTION</u> at the positions shown below. For safety, please follow the instructions and handle the machine as indicated.

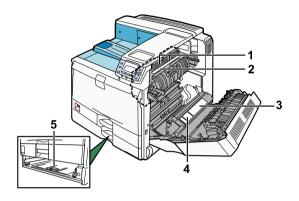

BMW036S

1





Do not touch the parts a label indicates. The inside of the machine could be very hot. Caution should be taken when removing misfed paper.

2




High temperature parts. Wait a while to allow the Fusing Unit to cool down before removing misfed paper.

3



Do not touch the parts a label indicates. The inside of the machine could be very hot. Caution should be taken when removing misfed paper.

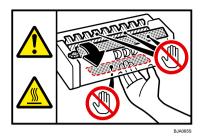


Do not touch the parts a label indicates. The inside of the machine could be very hot. Caution should be taken when removing misfed paper.

5




The inside of the machine could be very hot. Do not touch the parts which a label is put on. Otherwise, an injury might occur.

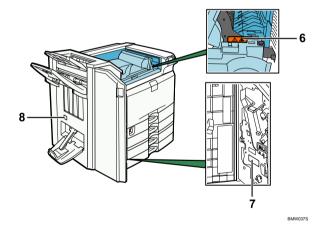

6



Do not touch! Surface may be very hot.

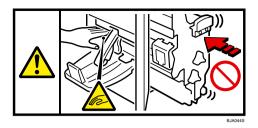

Keep your hands clear of the booklet finisher tray when pulling out or pushing in the finisher's staple unit, or removing paper jam. You might trap your fingers if you do not. Take care not to touch the booklet finisher tray during operation. Otherwise, an injury might occur.





Keep your hands clear of the booklet finisher tray when pulling out or pushing in the finisher's staple unit, or removing paper jam. You might trap your fingers if you do not.

Power Switch Symbols

The meanings of the symbols for the switches on this machine are as follows:

- I :POWER ON.
- O:POWER OFF.
- U:STANDBY.

Noise Emission *1

❖ Sound Power Level

	Main unit only
During Printing	colour print:
	• 67 dB (A) or less (Basic model)
	• 68 dB (A) or less (HDD standard model)
	Black & white print:
	• 65 dB (A) or less (Basic model)
	• 66 dB (A) or less (HDD standard model)
Standby	40 dB (A) or less

❖ Sound Pressure level *2

	Main unit only
During Printing	colour print:
	• 53 dB (A) or less (Basic model)
	• 54 dB (A) or less (HDD standard model)
	Black & white print:
	51 dB (A) or less (Basic model/HDD standard model)
Standby	26 dB (A) or less

The preceding measurements made in accordance with ISO7779 are actual values.
 Measured at the position of a bystander.

ENERGY STAR Program

ENERGY STAR® Program Requirements for Imaging Equipment



The ENERGY STAR® Program Requirements for Imaging Equipment encourage energy conservation by promoting energy efficient computers and other office equipment.

The program backs the development and dissemination of products that feature energy saving functions.

It is an open program in which manufacturers participate voluntarily.

Targeted products are computers, monitors, printers, facsimiles, copiers, scanners, and multifunction devices. Energy Star standards and logos are internationally uniform.

Energy Saver mode

This printer automatically lowers its power consumption 20 minutes after the last operation has been completed. To exit Energy Saver mode, press any key on the control panel. For more information about how to configure Energy Saver mode, see "Making Printer Settings Using the Control Panel" Software Guide as a HTML file on the CD-ROM.

Specifications

Power Consumption	2.7 W
Default Interval	20 minutes
Recovery Time	Basic model:
	Approximately 31 seconds
	HDD standard model:
	Approximately 45 seconds

Recycled Paper

We recommend use of recycled paper which is environment friendly. Please contact your sales representative for recommended paper.

MEMO

Copyright © 2008 Printed in France GB GB G189-6629

