

Notes for Users

Please note the following corrections to this manual.

Operating Instructions/User Guide

Topic	Error	Correction
Operating Instructions Printing > Loading Paper > Loading Envelopes User Guide p.66	"Types of Envelopes" in the table: Side-opening envelopes	"Types of Envelopes" in the table: <u>Envelopes</u>
Operating Instructions Printing > Loading Paper > Notes about Supported Paper Types	When loading label paper: It is recommended to place one sheet at a time.	When loading label paper: <u>Place one sheet at a time on the bypass tray.</u>
Operating Instructions Maintenance and Specifica- tions > Paper Specifications > Supported Paper for Each Input Tray > Bypass Tray User Guide p.62	Paper capacity: • Label Paper: 30 sheets	Paper capacity: • Label Paper: <u>1 sheet</u>
Operating Instructions Maintenance and Specifica- tions > Specifications > Specifi- cations for Mailbox	Weight: Approx. 7 kg (15.5 lb)	Weight: Approx. <u>8 kg (17.6 lb)</u>

Security Guide

Topic: P.223 "Edit Home"

Error:

Settings	User	Mach	N/W	File	Unset	Set
Edit Icons	-	R/W	-	-	R/W	-
Insert Image	-	R/W	-	-	R/W	-

Correction:

Settings	User	Mach	N/W	File	Unset	Set
Move Icon	R	R/W	R	R	R/W	R
Delete Icon	R	R/W	R	R	R/W	R
Add Icon	-	R/W	-	-	R/W	-
Restore Default Icon Display	-	R/W	-	-	R/W	-
Insert Image on Home Screen	-	R/W	-	-	R/W	-

© 2012

Printed in China

EN (GB) EN (US) EN (AU)

M124-8546



M1248546