



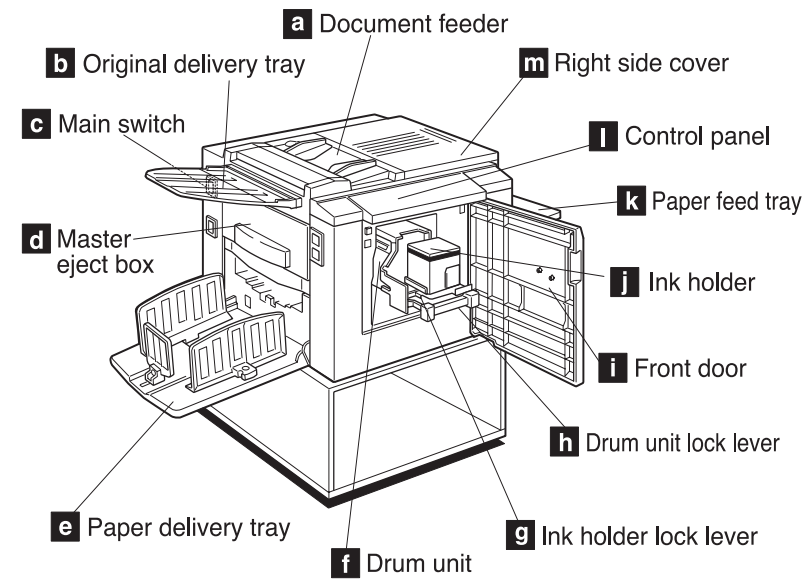


# Easy Operation Guide


## Standard Printing

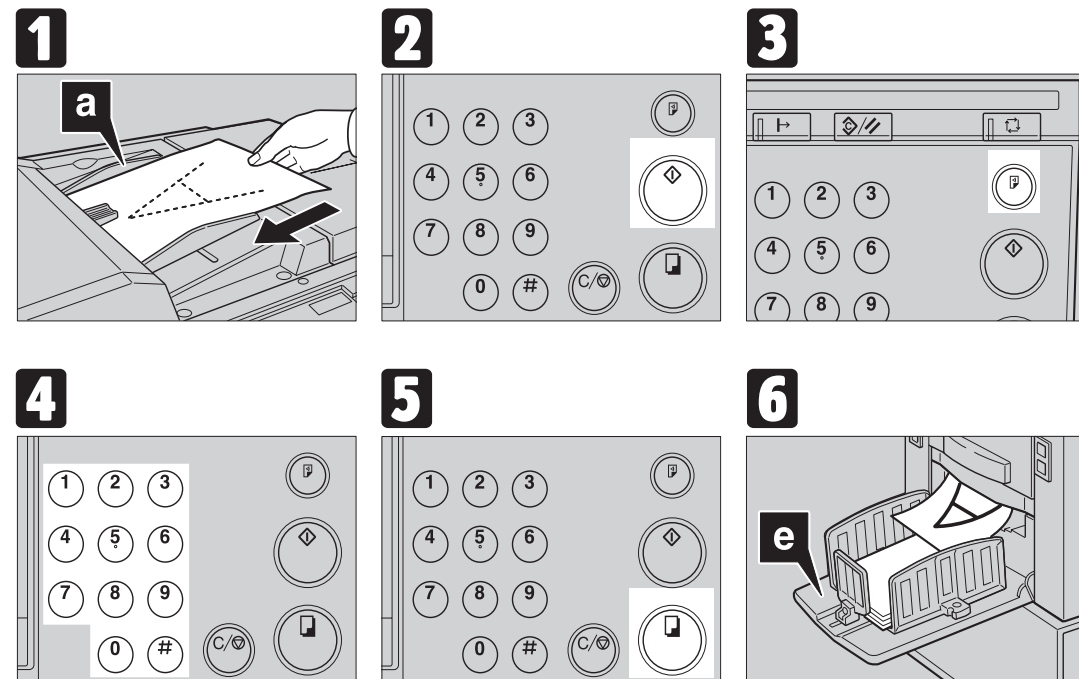


## Load New Ink

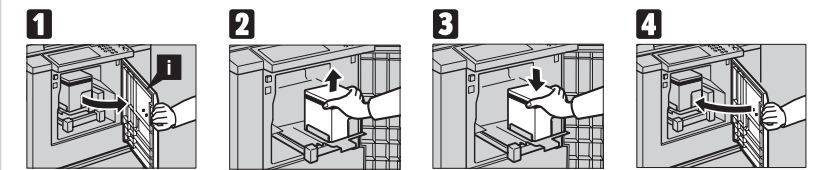


## Load New Master Roll

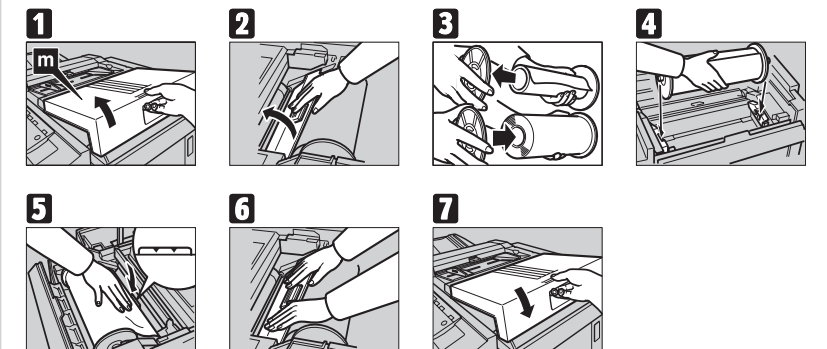


## Empty the Master Eject Box

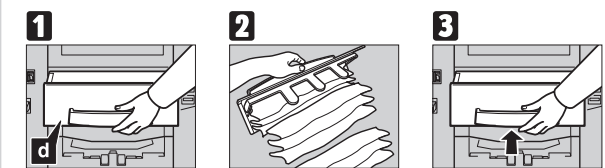

## + A Load More Paper

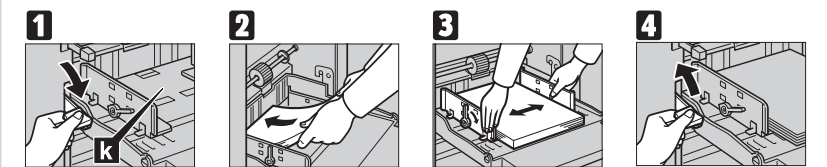

## Cover or Unit Door is Open

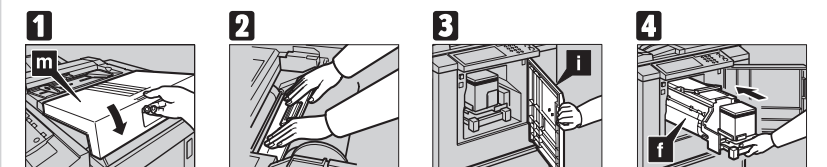

For details, see *Operating Instructions* on the CD.

## Clearing Misfeeds

