 


Easy Operation Guide


Standard Printing




Loading Paper



Adding Ink

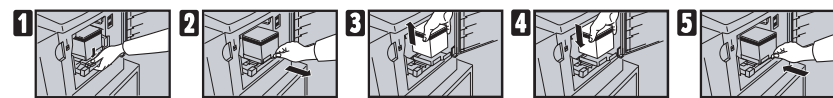


Replacing the Master Roll

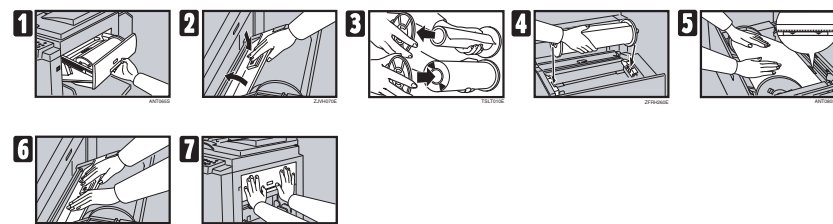


Removing the Used Master




Control Panel

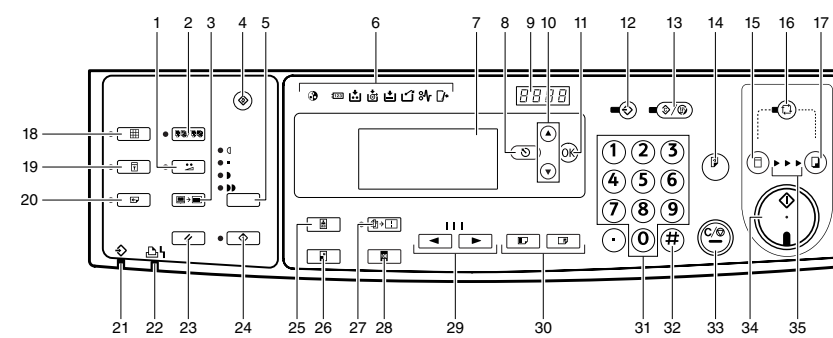

- | | | |
|-------------------------------|-------------------------------------|-----------------------------------|
| 1. [Economy] key | 13. [Clear Modes/Energy Saver] key | 25. [Original Type] key |
| 2. [Memory/Class] key | 14. [Proof] key | 26. [Reduce/Enlarge] key |
| 3. [Erase Border] key | 15. [Master Making] mode select key | 27. [Combine/Repeat] key |
| 4. [User Tools] keys | 16. [Auto Cycle] key | 28. [Full Size] key |
| 5. [Master Making Densty] key | 17. [Print] mode select key | 29. [◀] and [▶] keys (Speed keys) |
| 6. Indicators | 18. [Fine] keys | 30. [Image Position] key |
| 7. Panel Display | 19. [Security] key | 31. Number keys |
| 8. [Escape] key | 20. [Skip Feed] key | 32. [#] key |
| 9. Counter | 21. Data In indicator (Green) | 33. [Clear/Stop] key |
| 10. [▲][▼] key | 22. Error indicator (Red) | 34. [Start] key |
| 11. [OK] key | 23. [Job Reset] key | 35. Processing indicators |
| 12. [Program] key | 24. [Hold Data-in] key | |

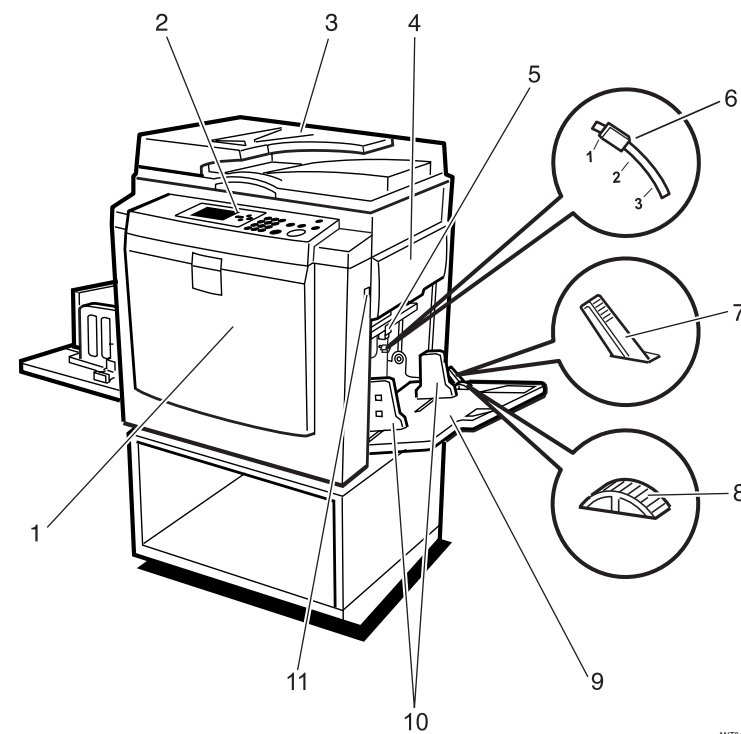


- | | |
|----------------------------------|-------------------------------------|
| 1. Front cover | 7. Paper feed side plate lock lever |
| 2. Control panel | 8. Side tray fine adjusting dial |
| 3. Auto Document Feeder (option) | 9. Paper feed tray |
| 4. Master tray | 10. Paper feed side plates |
| 5. Feed roller pressure lever | 11. Paper feed tray down key |
| 6. Separation pressure lever | |

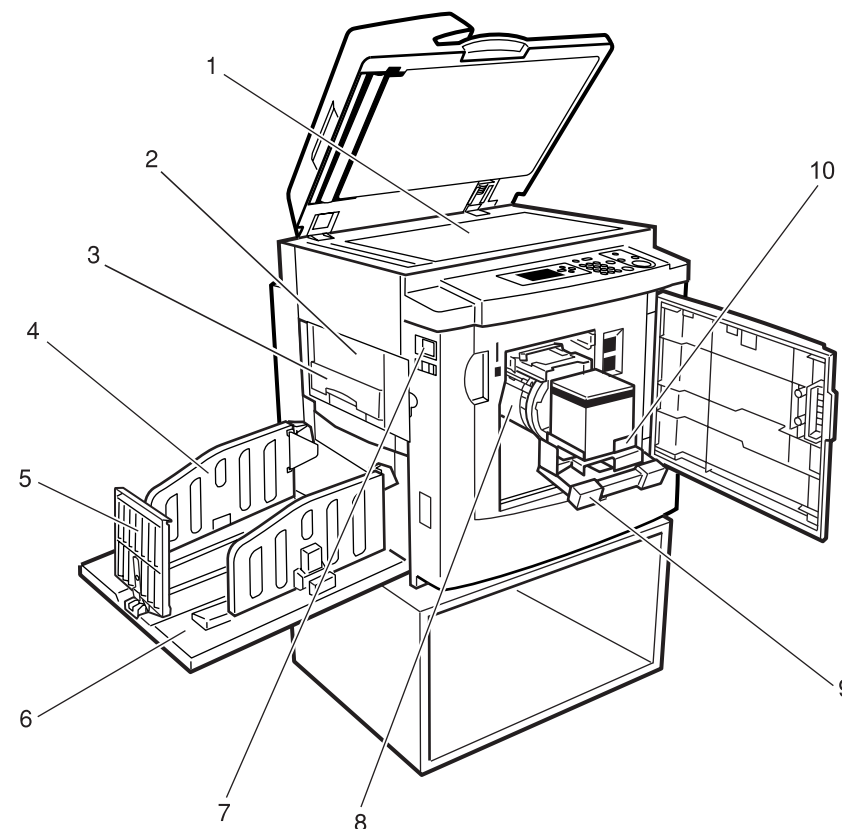


- | | |
|-------------------------------|-------------------------|
| 1. Exposure glass | 6. Paper delivery tray |
| 2. Master eject unit | 7. Main switch |
| 3. Master eject box | 8. Drum unit |
| 4. Paper delivery side plates | 9. Drum unit lock lever |
| 5. Paper delivery end plate | 10. Ink holder |

When the Open Cover/Unit Indicator Lights

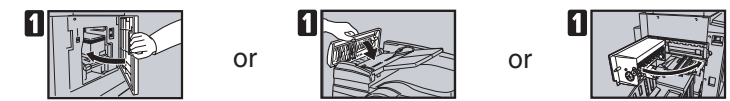


Clearing Misfeeds

Paper Misfeeds in the Paper Feed Section

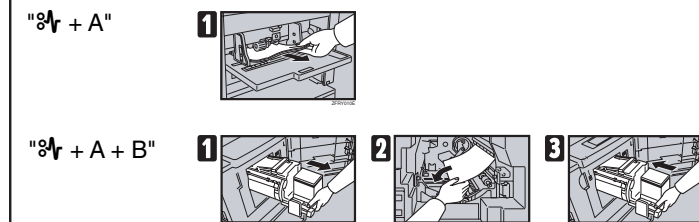


Paper Wrapped Around the Drum

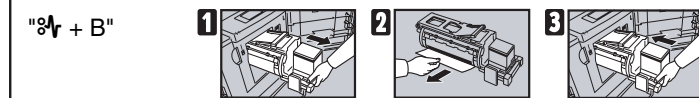


Paper Misfeeds in the Paper Exit Section



Master Misfeeds in the Master Feed Section

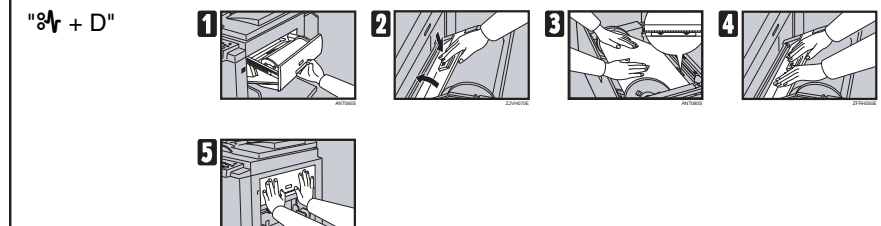

Master Misfeeds in the Master Eject Section

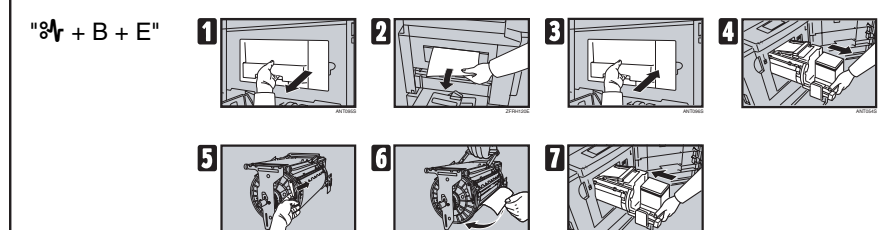

Original Misfeeds in the ADF



For details, see *Operating Instructions* on the CD.