



Easy Operation Guide

Control Panel

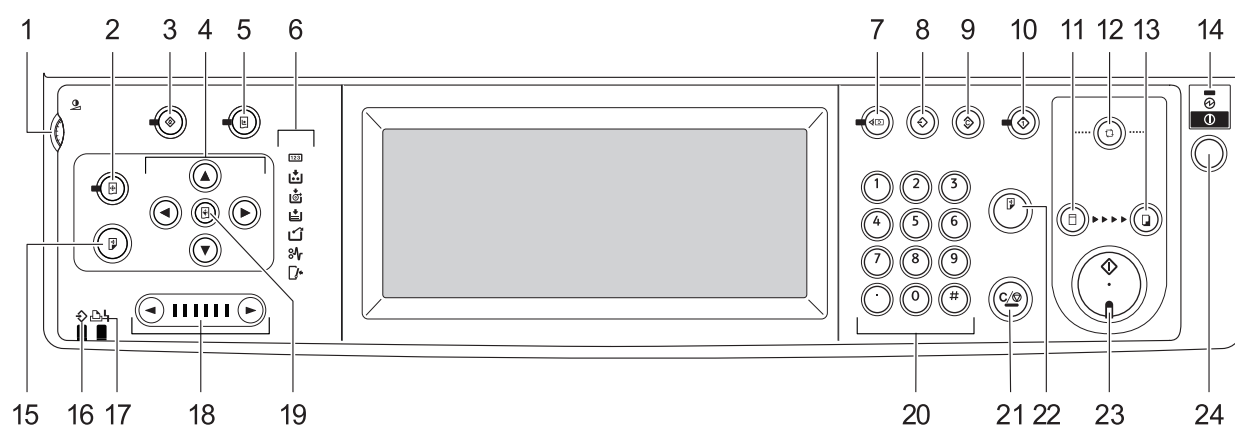


1. Screen contrast knob
2. [Image Position] key
3. [User Tools] key
4. Position Setting keys
5. [Printer Settings] key
6. Indicators
7. [Check Modes] key
8. [Program] key
9. [Clear Modes] key
10. [Hold Data-in] key
11. [Master Making] mode select key
12. [Auto Cycle] key
13. [Print] mode select key
14. Main power indicator
15. [Proof] key
16. Data In indicator
17. Error indicator
18. Speed Setting keys
19. [Initial Position] key
20. Number keys
21. [Clear/Stop] key
22. [Proof] key
23. [Start] key
24. Operation switch

Guide To Components

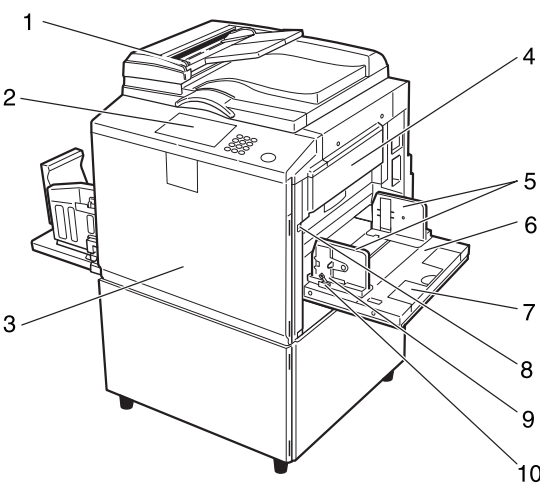



1. ARDF(Optional)
2. Control panel
3. Front cover
4. Master making unit
5. Paper feed side plates

6. Paper feed tray
7. Extender
8. Paper feed tray down key
9. Paper feed side plates knob lock
10. Paper feed side plates knob

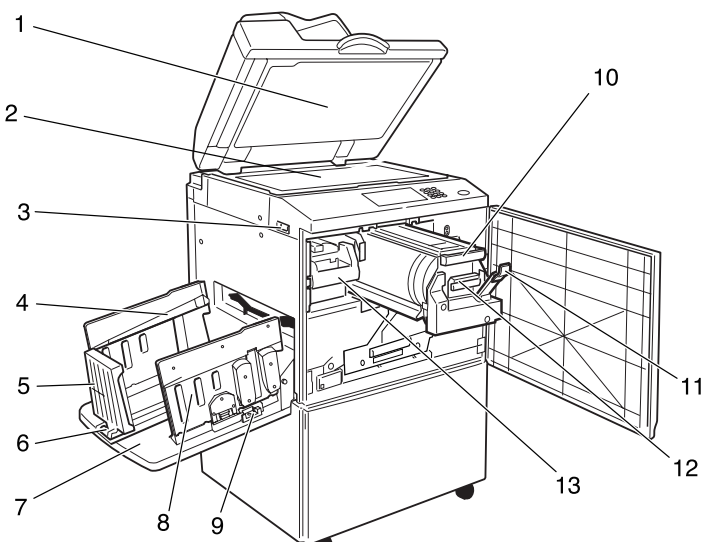


1. ARDF(Optional)
2. Exposure glass
3. Main switch
4. Paper alignment wings
5. Paper delivery end plate
6. Paper delivery end plate knob
7. Paper delivery tray
8. Paper delivery side plates
9. Paper delivery side plate knobs


10. Drum unit
11. Drum unit lock lever B1
12. Ink holder
13. Master eject unit handle E1
14. Duplex unit
15. Trailing edge guides
16. Buffer fins
17. Chocks

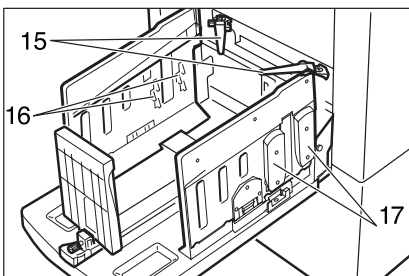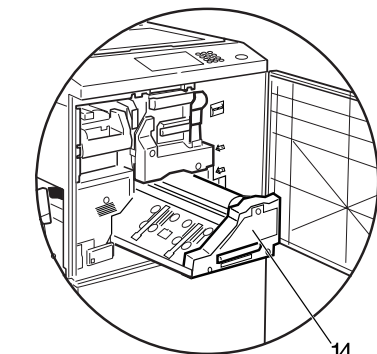

Standard Printing

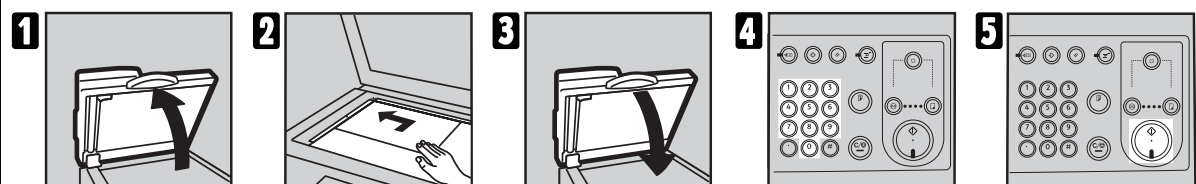


Loading Paper

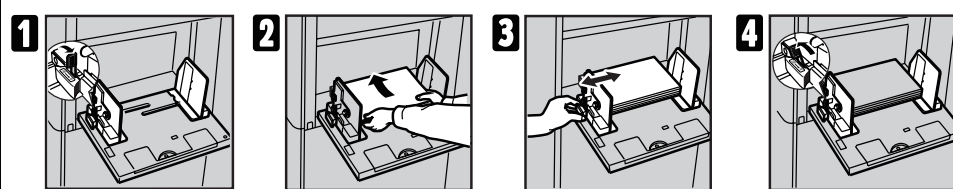


Removing the Used Master



Adding Ink


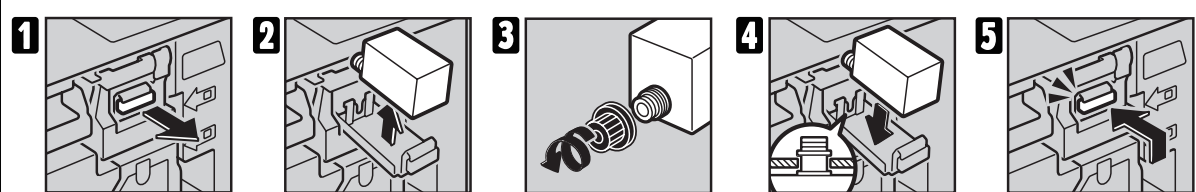


Replacing the Master Roll



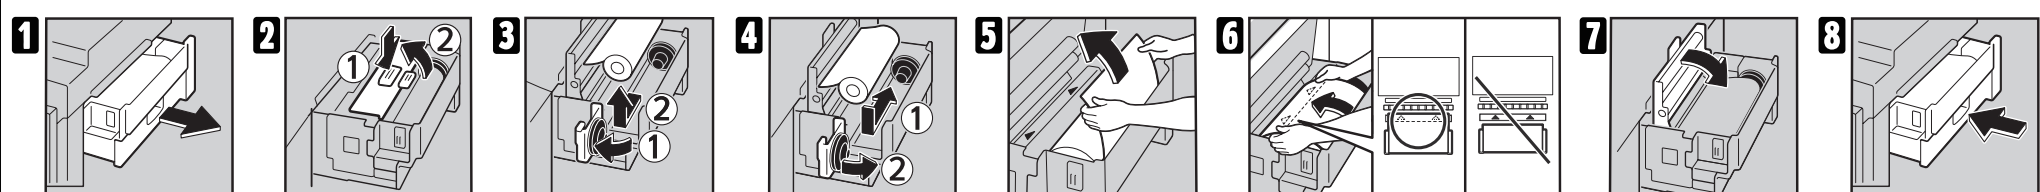


Clearing Misfeeds Paper Misfeeds in the Paper Feed Section

" A " + "A"





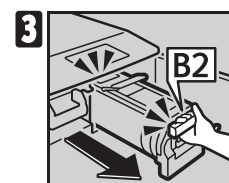
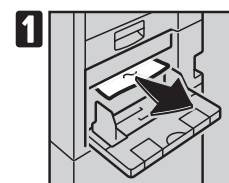


" A " + "A" + "B"

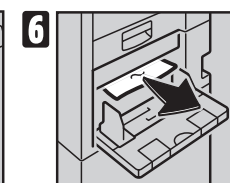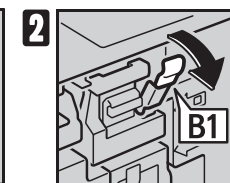
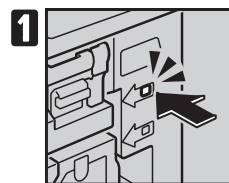


Clearing Misfeeds Master Misfeeds in the Master Eject Section

" B " + "B" + "E"





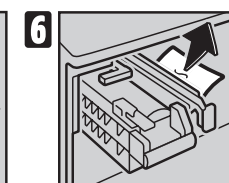
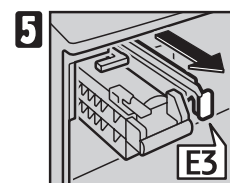
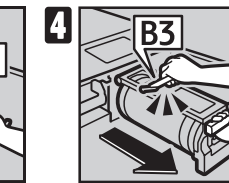
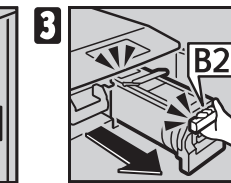
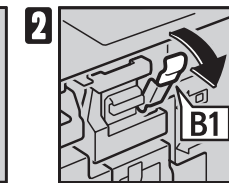
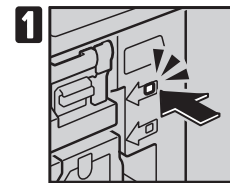


" B " + "E"

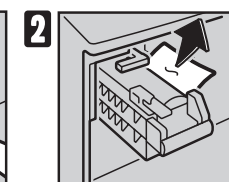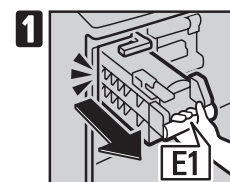










Clearing Misfeeds Paper or Master Wrapped Around the Drum

" B " + "B"

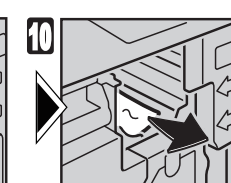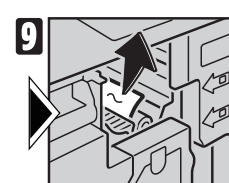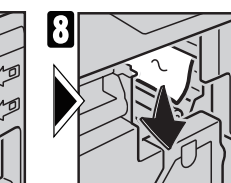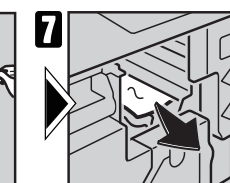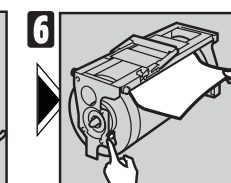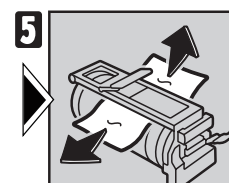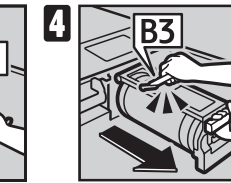
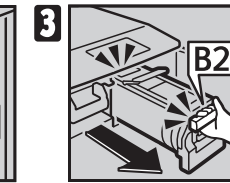
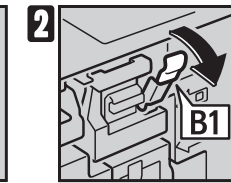
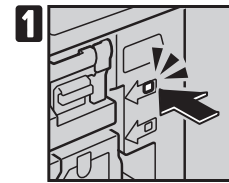


Clearing Misfeeds Paper Wrapped Around the Duplex Unit

" B " + "B" + "Z"

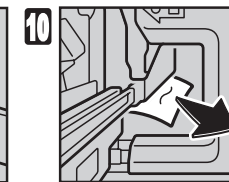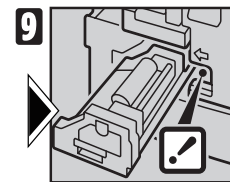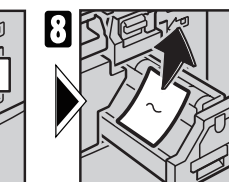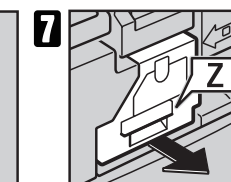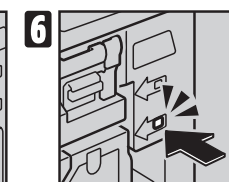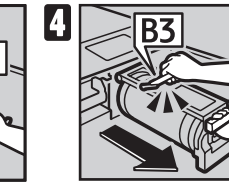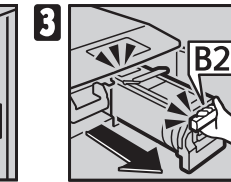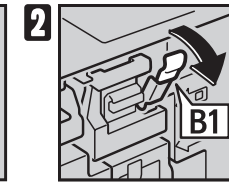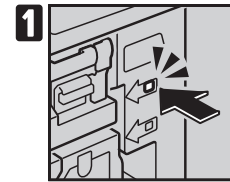


" B " + "Z"

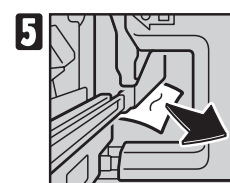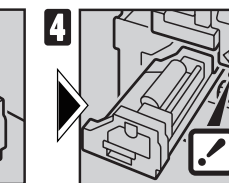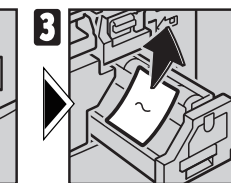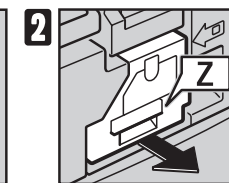






Clearing Misfeeds Paper Misfeeds in the Paper Exit Section

" B " + "C"




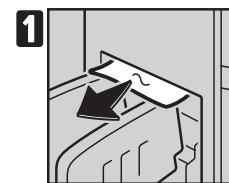


Clearing Misfeeds Master Misfeeds in the Master Feed Section

" B " + "D"

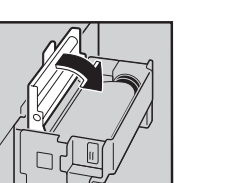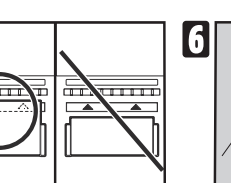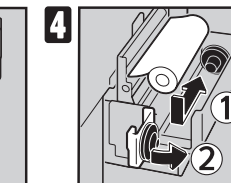
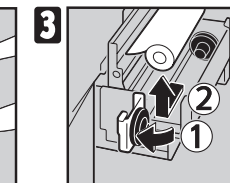
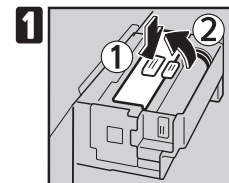


" B " + "B" + "D"

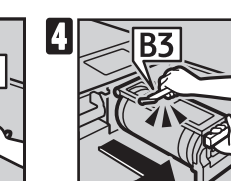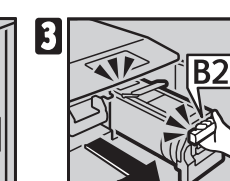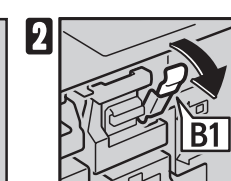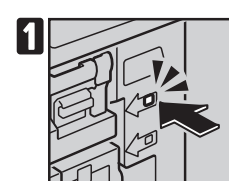

Clearing Misfeeds Original Misfeeds in the ARDF

" B " + "P"

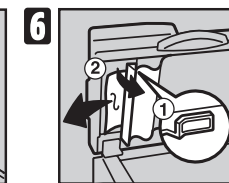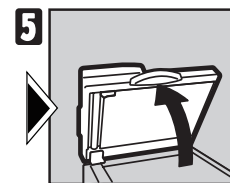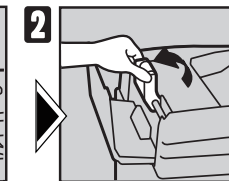

For details, see *Operating Instructions* on the CD.

Copyright © 2006 Printed in the Netherlands
GB/GB C269-9634