



# Operating Instructions Printer Reference



- 
- 1** Getting Started
  - 2** Preparing to Print
  - 3** Setting Up the Printer Driver and Canceling a Print Job
  - 4** Various Types of Printing
  - 5** Troubleshooting
  - 6** Using the Control Panel
  - 7** Appendix

## Introduction

This manual contains detailed instructions and notes on the operation and use of this machine. For your safety and benefit, read this manual carefully before using the machine. Keep this manual in a handy place for quick reference.

## Important

Contents of this manual are subject to change without prior notice. In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

## Caution:

Use of controls or adjustments or performance of procedures other than those specified in this manual might result in hazardous radiation exposure.

Two kinds of size notation are employed in this manual.

## Trademarks

Microsoft®, Windows® and Windows NT® are registered trademarks of Microsoft Corporation in the United States and/or other countries.

Adobe®, PostScript®, Acrobat® and PageMaker® are registered trademarks of Adobe Systems Incorporated.

AppleTalk, Apple, Macintosh and Mac OS are registered trademarks of Apple Computer, Incorporated. IPS-PRINT™ Printer Language Emulation Copyright© 2000, Oak Technology, Inc., All Rights Reserved.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights to those marks.

The proper names of the Windows operating systems are as follows:

- The product name of Windows® 95 is Microsoft® Windows® 95
- The product name of Windows® 98 is Microsoft® Windows® 98
- The product name of Windows® Me is Microsoft® Windows® Millennium Edition (Windows Me)
- The product name of Windows® 2000 are as follows:  
Microsoft® Windows® 2000 Server  
Microsoft® Windows® 2000 Professional
- The product name of Windows® XP are as follows:  
Microsoft® Windows® XP Professional  
Microsoft® Windows® XP Home Edition
- The product names of Windows Server® 2003 are as follows:  
Microsoft® Windows Server® 2003 Standard Edition  
Microsoft® Windows Server® 2003 Enterprise Edition  
Microsoft® Windows Server® 2003 Web Edition
- The product name of Windows® NT are as follows:  
Microsoft® Windows NT® Server 4.0  
Microsoft® Windows NT® Workstation 4.0

## Notes:

Some illustrations in this manual might be slightly different from the machine.

Certain options might not be available in some countries. For details, please contact your local dealer.

# Manuals for This Machine

The following manuals describe the operational procedures of this machine. For particular functions, see the relevant parts of the manual.

## **Note**

- ☐ Adobe Acrobat Reader/Adobe Reader is necessary to view the manuals as a PDF file.
- ☐ To view HTML manuals, a Web browser must be installed.

## ❖ **Safety Information (paper)**

Describes information about the safety precautions.

## ❖ **Easy Operation Guide (paper/PDF file - CD-ROM \*1)**

Describes information about the control panel and basic operations.

## ❖ **Operating Instructions (PDF file - CD-ROM \*1)**

Describes operations, functions, User Tools (initial setting, mode setting, etc.) and troubleshooting.

## ❖ **Network Guide (PDF file - CD-ROM \*1)**

Describes procedures for configuring the machine and computers in a network environment.

## ❖ **Printer Reference (this manual)**

Describes system settings and operations for the machine's printer function.

## ❖ **Preparations for Use as a Printer (paper/PDF file - CD-ROM \*1)**

Describes procedures for connecting the Ethernet and USB cables to the machine.

## ❖ **Manuals for DeskTopBinder Lite**

DeskTopBinder Lite is a utility included on the CD-ROM labeled "Document Management Utility".

- DeskTopBinder Lite Setup Guide (HTML - CD-ROM \*2)  
Describes the installation of, and the operating environment for DeskTopBinder Lite in detail. This guide can be displayed from the **[Setup]** dialog box when DeskTopBinder Lite is installed.
- DeskTopBinder Lite Introduction Guide (HTML - CD-ROM \*2)  
Describes operations of DeskTopBinder Lite and provides an overview of its functions. This guide is added to the **[Start]** menu when DeskTopBinder Lite is installed.

## ❖ **Other manuals**

- PostScript3 (PDF file - CD-ROM \*1)

\*1 Provided on the CD-ROM labeled "Operating Instructions"

\*2 Provided on the CD-ROM labeled "Document Management Utility"

# TABLE OF CONTENTS

<b>Manuals for This Machine .....</b>	<b>i</b>
<b>How to Read This Manual .....</b>	<b>1</b>

## 1. Getting Started

<b>Control Panel.....</b>	<b>3</b>
Display Panel .....	5
Printer Settings.....	6

## 2. Preparing to Print

<b>Connecting the Machine .....</b>	<b>12</b>
Requirements.....	13
Using the Parallel interface Cable.....	13
Using IEEE 802.11b (Wireless LAN).....	14
<b>User Tools Menu (System Settings).....</b>	<b>17</b>
Interface Settings .....	17
Network Configuration.....	18
Settings You Can Change with User Tools.....	20
<b>Installing the Software.....</b>	<b>24</b>
Auto Run .....	24
Quick Install.....	25
Installing RPCS Printer Driver.....	27
Setting Up Options - RPCS.....	32
Installing the PostScript3 printer driver .....	33
Mac OS - Installing the PostScript3 printer driver and Utilities.....	40
Mac OS X - Installing the PostScript3 printer driver.....	42
Installing the Printer Driver Using USB .....	44
Installing DeskTopBinder Lite- SmartDeviceMonitor for Client .....	45
Installing SmartDeviceMonitor for Admin .....	46
Using Adobe PageMaker Version 6.0, 6.5, or 7.0.....	47
<b>Software and Utilities Included on the CD-ROM .....</b>	<b>48</b>
Printer Drivers .....	48
Software and Utilities .....	49

## 3. Setting Up the Printer Driver and Canceling a Print Job

<b>Accessing Printer Properties.....</b>	<b>51</b>
Windows 95/98/Me - Accessing Printer Properties .....	51
Windows 2000/XP and Windows Server 2003 - Accessing Printer Properties .....	52
Windows NT 4.0 - Accessing Printer Properties .....	54
Macintosh - Setting Up for Printing .....	56
<b>Canceling a Print Job .....</b>	<b>57</b>
Canceling from a computer.....	57
Canceling on the control panel.....	58

## 4. Various Types of Printing

<b>Windows 95/98/Me - Various Types of Printing .....</b>	<b>59</b>
Duplex Printing.....	59
Storing the Print File.....	60
Printing on custom sized paper.....	61
Printing on paper with an undetectable size .....	62
When envelopes cannot be fed.....	63
<b>Windows 2000/XP and Windows Server 2003 - Various Types of Printing ....</b>	<b>65</b>
Duplex Printing.....	65
Storing the Print File.....	66
Printing on custom sized paper.....	67
Printing on paper with an undetectable size .....	68
When envelopes cannot be fed.....	69
<b>Windows NT 4.0 - Various Types of Printing.....</b>	<b>71</b>
Duplex Printing.....	71
Storing the Print File.....	72
Printing on custom sized paper.....	73
Printing on paper with an undetectable size .....	74
When envelopes cannot be fed.....	75

## 5. Troubleshooting

<b>Error &amp; Status Messages on the Display Panel .....</b>	<b>77</b>
<b>Printer does not Print .....</b>	<b>79</b>
<b>Other Printing Problems .....</b>	<b>82</b>

## 6. Using the Control Panel

<b>Online Print Features Menu .....</b>	<b>89</b>
<b>Adjusting Online Print Features .....</b>	<b>91</b>
<b>Online Print Features Settings .....</b>	<b>92</b>
General Features .....	92
List / Test Print .....	93
Host Interface.....	95
PS Menu .....	96
Administrator Tools .....	96

## 7. Appendix

<b>Printing a PDF File Directly .....</b>	<b>97</b>
Printing Method .....	97
<b>Specifications.....</b>	<b>99</b>
Options.....	100
<b>INDEX.....</b>	<b>102</b>



# How to Read This Manual

---

## Symbols

---

The following set of symbols is used in this manual.

### **Important**

If this instruction is not followed, paper might be misfed, originals might be damaged, or data might be lost. Be sure to read this.

### **Preparation**

This symbol indicates information or preparations required prior to operating.

### **Note**

This symbol indicates precautions for operation, or actions to take after abnormal operation.

### **Limitation**

This symbol indicates numerical limits, functions that cannot be used together, or conditions in which a particular function cannot be used.

### **Reference**

This symbol indicates a reference.

[    ]

Keys that appear on the machine's display panel.

[    ]

Keys and buttons that appear on the computer's display.

【    】

Keys built into the machine's control panel.


【    】

Keys on the computer's keyboard



# 1. Getting Started

## Control Panel

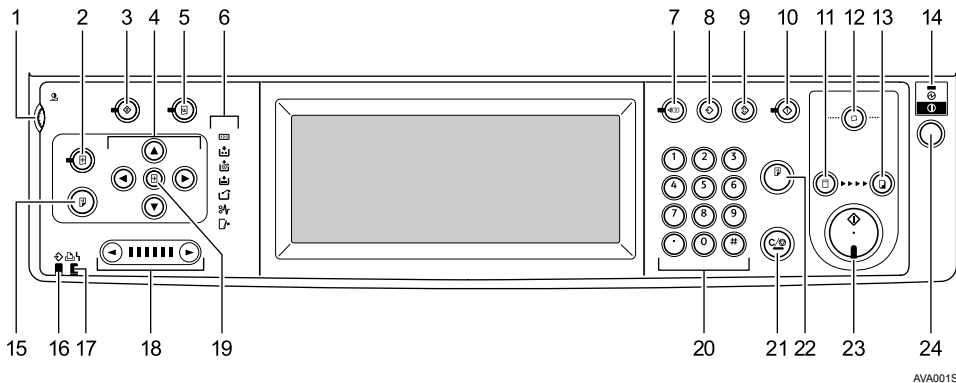

### 1. Screen contrast knob

Adjusts the brightness of the display panel.

### 2. [Image Position] key

Adjusts the position of printed images.

### 3. [User Tools] key

Press to change the default settings to meet your requirements.

### 4. Position Setting keys

Adjusts the position of printed images.

### 5. [Printer Settings] key

Press to change the default settings of on-line printing.

### 6. Indicators

### 7. [Check Modes] key

Press this key to check settings.

### 8. [Program] key

Press to register frequently used settings, or to recall registered settings.

### 9. [Clear Modes] key

Press to clear previously entered copy job settings.

### 10. [Hold Data-in] key

Press to reject the online print temporarily.

### 11. [Master Making] mode select key

Press to select the master making mode.

### 12. [Auto Cycle] key

Press to make masters and prints in a single operation.

### 13. [Print] mode select key

Press to select the print mode.

### 14. Main power indicator

The main power indicator lights up when the main power switch is turned on.

### 15. [Proof] key

Press to make a proof print.

Same as 22.

### 16. Data In indicator (Green)

- On: Master Making in progress
- Blinking: Data being received
- Off: Master Making and printing are completed.

### 17. Error indicator (Red)

- On: An error has occurred. Master Making and printing stops.
- Off: Normal status

### 18. Speed setting keys

Press to adjust the printing speed.

### **19. [Initial position] key**

Press to reset to the default image position.

### **20. Number keys**

Press to enter the desired number of prints and data for selected modes.

### **21. [Clear/Stop] key**

- Clear  
Press to delete a number entered.
- Stop  
Press to stop a job in progress.

### **22. [Proof] key**

Press to make a proof print.

### **Note**

☐ Same as 15.

### **23. [Start] key**

Press to start making masters or printing.

### **24. Operation switch**

Press this switch again to return to the ready state.

## Display Panel

The display panel shows machine status, error messages and function menus.

The function items displayed serve as selector keys. You can select or specify an item by lightly pressing the key.

When you select or specify an item on the display panel, it is highlighted like **Full Size**. Keys appearing as **OK** cannot be used.


### Important

- ☐ A force or impact of more than 30 N (about 3 kgf) will damage the display panel.

By default the screen is displayed when you the power is on.

## Common Key Operations

The display panel shows the printer status, error message, and function menu.

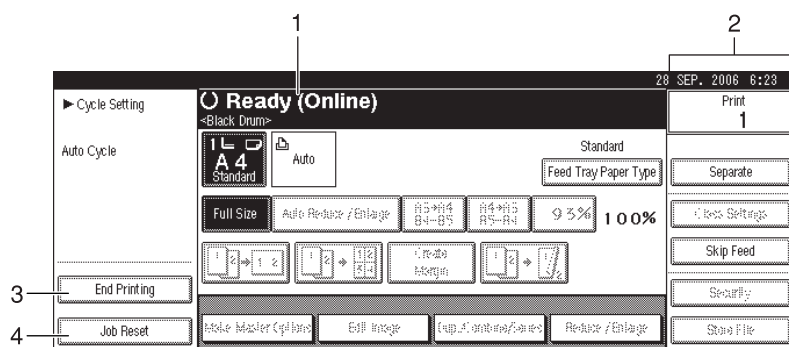

AVA005S

### 1. Machine status or messages

Displays current machine condition.

### 2. Number of prints made.

### 3. [End Printing] key

Press to cancel the current master making or printing. See p.7 "Selecting the Cycle Setting Mode"

### 4. [Job Reset] key

Press to cancel the current job.

See p.57 "Canceling a Print Job"

## ❖ Key list

[OK]	Acknowledges a selected function or entered values, and then returns to the previous display
[Cancel]	Deletes a selected function or entered values, and then returns to the previous display
[▲Prev.], [▼Next]	Moves to the previous page or the next page when all functions cannot be displayed on one page.
[OK] [Yes]	Closes displayed messages.
[Clear]	Clears entered values and does not change the settings.
[Exit]	Returns to the previous display.


## Printer Settings

It is possible to change the paper size and cycle setting mode on the Printer Settings menu.

### Selecting the Online Print Paper Size

This machine automatically detects the paper size, however, there are cases where the machine cannot detect the size of the paper. In these cases, follow the procedure below and manually make the desired settings.

**1** Press the **[Printer Settings]** key on the printer.

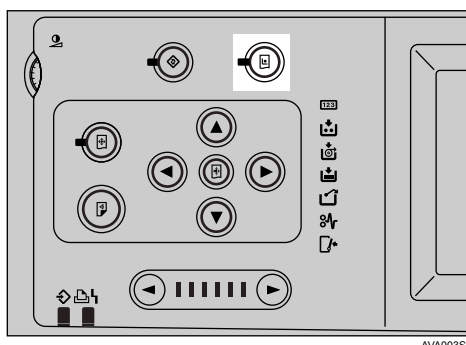

**2** Press **[Tray Paper Size: Paper Feed Tray]**.

**3** Select the paper size, and then press **[OK]**.

#### ⚠ Important


- ☐ Select a size that is bigger than the contents to be printed. If the contents are bigger than the paper size, it will cause the roller to get dirty.

**4** Press **[Exit]**.

## Selecting the Cycle Setting Mode

You can select an operation mode for master making and printing online.

### ① Auto Cycle

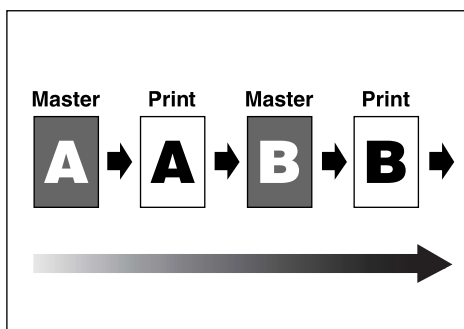

AJK172S


Master making and printing are completed continuously.

If printing is suspended using the **[Clear/Stop]** on the control panel, it stops in the print mode.

In this case, it is not possible to switch to the master making mode unless printing is completed.

To resume master making from the next page, press the **[End Printing]** on the display and terminate the printing operation.

### ② Original Page Cycle

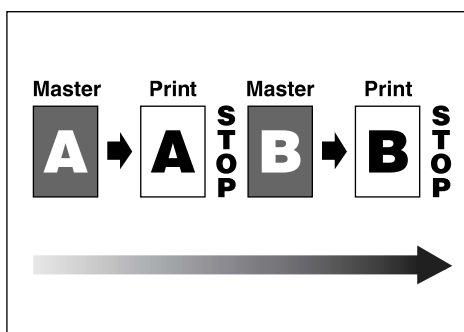

AJK175S


Operations stop briefly after both master making and printing of each page are performed.

After printing, if further data remains waiting for master making, the printer switches back to master making mode. Press the **[Start]** key when the printer has stopped to resume master making from the next page. If no further data remains, the printer will end the operation.

#### Note

- ☐ If further data remains waiting for master making, the printer switches to master making mode after making each print. However, if you need additional printing of the preceding original, switch the machine to print mode, and then press the **[Start]** key.

## ③ Master Cycle

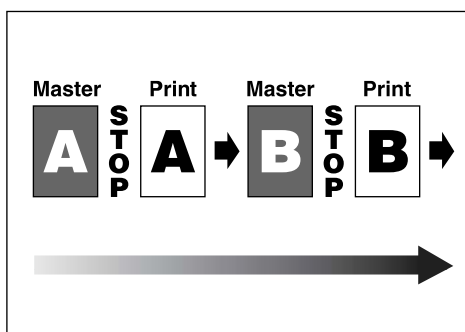

AJK174S

There is a brief pause between completion of the master and beginning the print.


The machine briefly stops after master making, but does not pause between printing and master making of the following page. When master making is concluded, the machine pauses again before switching to print mode.

Press the **[Start]** on the control panel to begin printing.

**Note**

- ☐ Since it switches to the print mode when master making concludes, to proceed to the master making of the next page without printing the master making page, press the **[End Printing]** on the display and conclude the print mode.

## ④ Master/Print Cycle

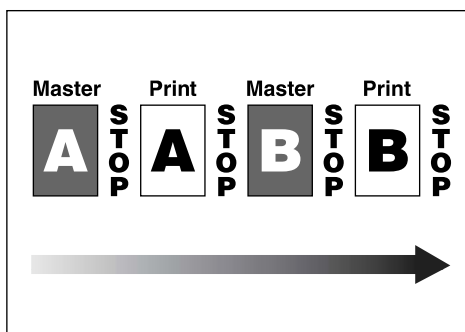

AJK173S

Operation stops briefly after each master making and print.

After printing, if further data remains waiting for master making, the printer will switch back to the master making mode.


Press the **[Start]** on the control panel to start printing. It switches to the master making mode with printing in the concluded state.

Press the **[Start]** key when the printer has stopped to resume master making from the next page. If no further data remains, the printer will end the operation.

**Note**

- ☐ If further data remains waiting for master making, the printer will switch to the master making mode at the end of the print. However, if you need additional printing still need to execute additional print after the end of the preceding print, switch the machine to the print mode, and then press the **[Start]** key.

- 1** Press the **[Printer Settings]** key.

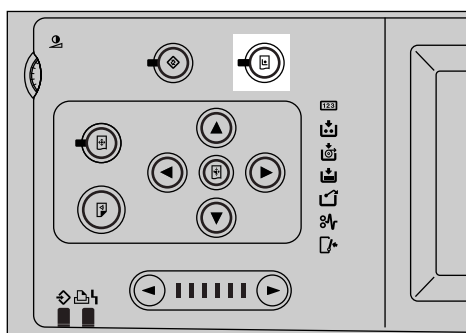

- 2** Press the **[Cycle Setting]** .
- 3** Select the Cycle Setting Mode, and then press **[OK]**.
- 4** Press the **[Exit]**.



## 2. Preparing to Print

This section gives instructions for connecting the printer and computer, configuring the printer, and installing software.

### ❖ When operating the printer with a USB or a parallel connection

- Connect the printer and computer using a USB or a parallel connection.

#### **Reference**

For details about connection using the USB, see *Preparations for Use as a Printer*.

For details about connection using the parallel cable, see p.12 “Connecting the Machine”.

- Install a printer driver from the CD-ROM labeled “Printer Drivers and Utilities”.

#### **Reference**

For details, see p.24 “Installing the Software”.

### ❖ When operating the printer under a network environment

- Configure the network using the machine's control panel.

#### **Reference**

For details, see p.17 “User Tools Menu (System Settings)”.

For details about connection using Ethernet, see *Preparations for Use as a Printer*.

For information about connection using wireless LAN, see p.12 “Connecting the Machine”.

- Install a printer driver and other utilities from the CD-ROM labeled “Printer Drivers and Utilities”.

#### **Reference**


For details, see p.24 “Installing the Software”.

### **Note**

- ☐ “Network environment” describes a situation where the printer is connected to a computer via wireless LAN.
- ☐ The IEEE 1284 parallel board for parallel connection and the IEEE 802.11b interface unit for wireless LAN connection cannot be used at the same time.
- ☐ Wireless LAN and parallel connection are optional functions.

# Connecting the Machine

2

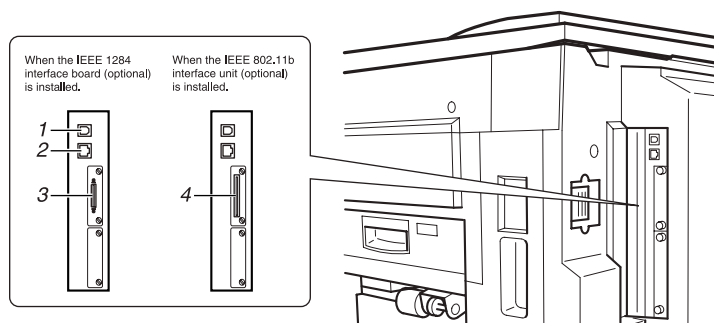

AJK204S

## 1. USB interface port

Use a USB interface cable to connect the printer to the host computer.

## 2. Ethernet interface port

Use a network interface cable to connect the printer to a network.

## 3. Parallel interface port

Connector for the parallel interface cable used when connecting to a computer.

## 4. IEEE 802.11b (wireless LAN) interface port

Use to install the IEEE 802.11b interface unit for wireless LAN connection to the network.

## Reference

For details about connection using USB and Ethernet, see *Preparations for Use as a Printer*.

---

## Requirements

---

Before using this printer, make sure all environmental and electrical requirements are met. Connect the printer to the host computer using the parallel interface port, network interface unit, or both.

Make sure all interface cables, connectors, and electrical outlets necessary to attach the printer to the host computer or network are at hand.

### Important

- ☐ The interface cable is not supplied. It is your responsibility to prepare the interface cable appropriate for the computer that you are using.

---

## Using the Parallel interface Cable

---


Connect the printer to the host computer using a parallel interface cable compliant with IEEE 1284 (available separately).

Follow these steps to connect the printer to the host computer.

### Important

- ☐ Before connecting an interface cable between the printer and a computer, make sure that the printer is not operating, and then turn off the main power switches of the printer and the computer.

- 1** Attach the parallel interface cable to the parallel interface connector of the printer, and then secure the parallel interface cable.

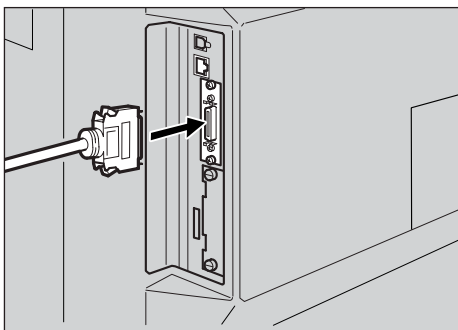


ACV014S

- 2** Attach the other end of the parallel interface cable to the port of the computer. Secure the interface cable.

## Using IEEE 802.11b (Wireless LAN)

### Setting IEEE 802.11b (Wireless LAN)

2

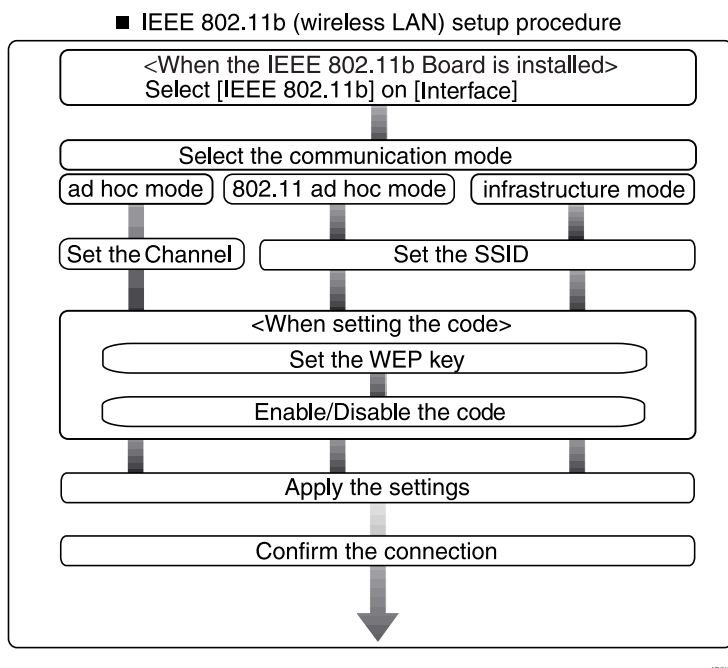


#### Note

- ☐ Select **[802.11 Ad hoc]** as the communication mode when connecting Windows XP as a wireless LAN client using Windows XP standard driver or utilities, or when not using the infrastructure mode.

## Confirming the Connection

**1** Make sure the LED of the IEEE 802.11b card is lit.

❖ When using in infrastructure mode

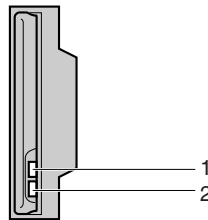


ZGDH600J

**1.** If [LAN Type] on the [Interface Settings]/[Network] screen is not set to [IEEE 802.11b], this LED does not light, even if the main power is on.

**2.** If the printer is connected properly to the network, the LED will be green in infrastructure mode. If the LED is blinking, the printer is searching for devices.

❖ When using in ad hoc mode/802.11 ad hoc mode

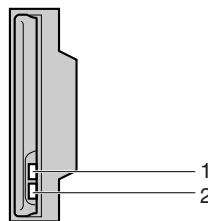

ZGDH600J

**1.** If the IEEE 802.11b card is working, the LED is orange.

**2.** If the printer is connected properly to the network, the LED is green in ad hoc mode or 802.11 ad hoc mode. If the LED is blinking, the printer is searching for devices. The LED will light after a few seconds.

## 2 Print the configuration page to verify settings.



### Reference

For details, see p.93 "Printing the configuration page".

## Checking the machine's radio wave status

2


When using the machine's infrastructure mode, you can check its radio wave status on the control panel.



### Note

- ☐ To check the radio wave status, press **[IEEE 802.11b]** under **[LAN Type]** on the **[Network]** screen.

## 1 Press the **[User Tools]** key.

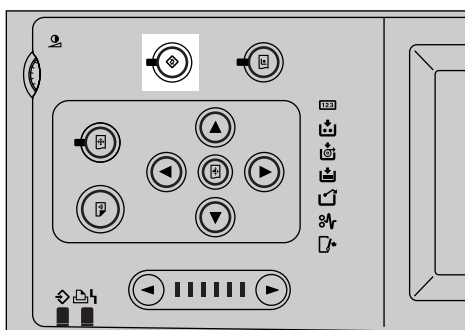

AVA002S

## 2 Press **[System Settings]**.

## 3 Press **[Interface Settings]**.

## 4 Press **[IEEE 802.11b]**.

## 5 Press **[Wireless LAN Signal]**.

The machine's radio wave status appears.

## 6 After checking radio wave status, press **[Exit]**.

## 7 Press the **[User Tools]** key to return to the User Tools menu.

# User Tools Menu (System Settings)

This section describes the network settings you can change with User Tools (System Settings). Make settings according to functions you want to use and the interface to be connected.

## Important

- ❑ These settings should be made by the systems administrator, or after consulting with the systems administrator.

## ❖ Viewing the Information Displayed in the List

● These items must be set to use the function. Be sure to set them before attempting to use the corresponding function.

For details about settings, see p.20 "Settings You Can Change with User Tools"

○ These items must be set if required.

For details about settings, see "Settings You Can Change with User Tools", *Network Guide*.

## Interface Settings

Interface	Settings		
Ethernet	Interface Settings/Network See p.20 "Interface Settings/Network".	IP Address	●
		Gateway Address	○
		NW Frame Type	○
		Effective Protocol *1	●
		Ethernet Speed	○
		LAN Type *2	●
IEEE 802.11b (wireless LAN)	Interface Settings/Network See p.20 "Interface Settings/Network". Interface Settings/IEEE 802.11b *2 See p.22 "Interface Settings/IEEE 802.11b".	IP Address	●
		Gateway Address	○
		Effective Protocol *1	●
		NW Frame Type	○
		Ethernet Speed	○
		LAN Type *2	●
		Communication Mode	●
		SSID Setting	○
		Channel	○
		WEP (Encryption) Setting	○
		Wireless LAN Signal	○
		Transmission Speed	○

\*1 Check **[Active]** is selected for TCP/IP.

\*2 Appears when the IEEE 802.11b interface unit is installed.

If Ethernet and IEEE 802.11b (wireless LAN) are both connected to the printer, the selected interface has priority.

## Network Configuration


Any change you make with User Tools remains in effect even if the main power switch or operation switch is turned off, or if the **[Clear Modes]** key is pressed.

### Configuring the network using the control panel

#### Note

- ☐ Operations for System Settings are different from normal operations. After using User Tools, press the **[User Tools]** key to exit.
- ☐ If the key operator code has been set, the key operator code entry screen appears. Enter the code, and then press the **[OK]** key. For details about the key operator code, see *Operating Instructions*.

**1** Press the **[User Tools]** key.

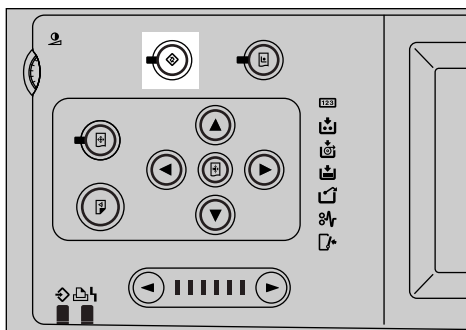

AVA002S

**2** Press **[System Settings]**.

**3** Press **[Interface Settings]**.

**4** Select the setting you want to change, and then press **[OK]**.

**5** Change the setting, and then press **[OK]**.

#### Note

- ☐ To cancel changes made to settings and return to the System Settings menu, press **[Cancel]**.

**6** Press **[Exit]**.

**7** Press the **[User Tools]** key.

#### Note

- ☐ You can also exit by pressing **[Exit]** on the User Tools main menu.

## Configuring the network using other utilities

In addition to the control panel, Web Image Monitor and SmartDeviceMonitor for Admin can also be used for configuring the network. The following table shows available settings:

### Note

- ☐ ○ Indicates printer settings can be changed.
- ☐ - Indicates the setting cannot be changed from that device.

Name on the control panel				Web Image Monitor	SmartDeviceMonitor for Admin	telnet
Interface	Network	DHCP		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
		IP Address		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
		Subnet Mask		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
		Gateway Address		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
		NW Frame Type	Auto	<input type="radio"/>	-	<input type="radio"/>
			EthernetII	<input type="radio"/>	-	<input type="radio"/>
			Ethernet802.2	<input type="radio"/>	-	<input type="radio"/>
			Ethernet802.3	<input type="radio"/>	-	<input type="radio"/>
			EthernetSNAP	<input type="radio"/>	-	<input type="radio"/>
		Active Protocol	TCP/IP	-	<input type="radio"/> *1	<input type="radio"/>
			NetWare	<input type="radio"/>	<input type="radio"/> *2	<input type="radio"/>
			SMB	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
			AppleTalk	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
		Ethernet Speed		-	-	-
		LAN Type	Ethernet	<input type="radio"/>	-	<input type="radio"/>
			IEEE 802.11b	<input type="radio"/>	-	<input type="radio"/>
	IEEE 802.11b	Comm. Mode		<input type="radio"/>	-	<input type="radio"/>
		Channel		<input type="radio"/>	-	<input type="radio"/>
		Trans. Speed		-	-	<input type="radio"/>
		SSID		<input type="radio"/>	-	<input type="radio"/>
		WEP Encryption		<input type="radio"/>	-	<input type="radio"/>
		WEP Key		<input type="radio"/>	-	<input type="radio"/>

<sup>\*1</sup> You can make the TCP/IP settings if SmartDeviceMonitor for Admin is communicating with the printer using IPX/SPX.

<sup>\*2</sup> You can make the IPX/SPX settings if SmartDeviceMonitor for Admin is communicating with the printer using TCP/IP.

## Settings You Can Change with User Tools

### Interface Settings/Network

#### ❖ IP Address

Before using this machine in the network environment, you must configure the IP address and subnet mask.

- Auto-Obtain (DHCP)
- Specify  
When you select **[Specify]**, enter the **[IP Address]** and **[Sub-net Mask]** as "xxx.xxx.xxx.xxx" ("x" indicates a number).
  - IP Address: 011.022.033.044
  - Sub-net Mask: 000.000.000.000

#### Note

- ☐ Default: *Auto-Obtain (DHCP)*
- ☐ When you select **[Specify]**, be sure not to set the same **[IP Address]** as that of another machines on the network.
- ☐ The physical address (MAC address) also appears.

#### ❖ Gateway Address

A gateway is a connection or interchange point between two networks. Configure the gateway address for the router or host computer used as a gateway.

- Gateway Address: 000.000.000.000

#### Note

- ☐ Default: *000.000.000.000*

#### ❖ Effective Protocol

Select the protocol to use in the network.

- TCP/IP:Effective/Invalid
- NetWare:Effective/Invalid
- SMB:Effective/Invalid
- AppleTalk:Effective/Invalid

#### Note

- ☐ Default: *TCP/IP: Effective, NetWare: Effective, SMB: Effective, AppleTalk: Effective*

### ❖ NW Frame Type

Select the frame type when you use NetWare.

- Auto Select
- Ethernet II
- Ethernet 802.2
- Ethernet 802.3
- Ethernet SNAP

#### Note

☐ Default: *Auto Select*

### ❖ Ethernet Speed

Set the access speed for networks.

Select a speed that matches your network environment. **[Auto Select]** should usually be selected.

- Auto Select
- 100Mbps Fixed
- 10Mbps Fixed

#### Note

☐ Default: *Auto Select*

### ❖ LAN Type

When you have installed the optional IEEE 802.11b interface unit, select interface, IEEE 802.11b (wireless LAN) or Ethernet.

- Ethernet
- IEEE 802.11b

#### Note

☐ Default: *Ethernet*

☐ Appears when the optional IEEE 802.11b interface unit is installed.

☐ If Ethernet and IEEE 802.11b (wireless LAN) are both connected to the machine, the selected interface takes precedence.

---

## Interface Settings/IEEE 802.11b

---



### Preparation

You must install the IEEE 802.11b interface unit into the printer.



### Note

- ☐ Be sure to make all settings.



### Communication Mode

Specifies the communication mode of the wireless LAN.

- 802.11 Ad hoc
- Ad hoc
- Infrastructure



### Note

- ☐ Default: *802.11 Ad hoc*



### SSID Setting

Specifies SSID to distinguish the access point in infrastructure mode or 802.11 ad hoc mode.



### Limitation

- ☐ The characters that can be used are ASCII 0x20-0x7e (32 bytes).



### Note

- ☐ Default: *blank (ASSID)*
- ☐ If blank is specified in 802.11b ad hoc mode or ad hoc mode, "ASSID" appears.



### Channel

Specifies a channel when you select 802.11b ad hoc mode or ad hoc mode.



### Note

- ☐ Default: *11*
- ☐ The following channels are available:
  - Metric version: 1-13
  - Inch version: 1-11

### ❖ WEP (Encryption) Setting

Specifies the encryption of the IEEE 802.11b (wireless LAN). If this is set to **[Active]**, you must enter the WEP key.

- ▶WEP
  - Active
  - Inactive
- ▶Encryption  
10 alphanumeric characters must be entered for 64 bit, 26 characters for 128 bit.

#### **Note**

☐ Default: *Inactive*

### ❖ Wireless LAN Signal

Shows the radio wave conditions of the access point connected in infrastructure mode.

#### **Note**

☐ Radio wave status is displayed when you press **[Wireless LAN Signal]**.

### ❖ Transmission Speed

Specifies the communication speed of the IEEE 802.11b (wireless LAN).

- Auto
- 11Mbps Fixed
- 5.5Mbps Fixed
- 2Mbps Fixed
- 1Mbps Fixed

#### **Note**

☐ Default: *Auto*

### ❖ Return to Defaults

You can return the IEEE 802.11b (wireless LAN) settings to their defaults.

- No
- Yes

# Installing the Software

This manual assumes you are familiar with general Windows procedures and practices. If you are not, see the operating instructions that come with Windows for details.

The procedure for installing the printer driver depends on the connection with the computer. With a parallel or Ethernet connection, Quick Install is also available. With a wireless LAN connection, check the printer and computer are communicating properly and then install the printer driver by following the procedure used for an Ethernet connection.

- For details about the parallel/network connection, see p.25 “Quick Install” or p.27 “Installing RPCS Printer Driver”.
- For details about the USB connection, see p.44 “Installing the Printer Driver Using USB”.

---

## Auto Run

---

Inserting the CD-ROM into the CD-ROM drive starts the installer automatically. The installer helps you install the printer drivers and software easily.

### Note

- ☐ If “plug and play” starts, click **[Cancel]** in **[New Hardware Found]**, **[Device Drive]** or **[Found New Hardware Wizard]** dialog box, and then insert the CD-ROM. The **[New Hardware Found]**, **[Device Driver Wizard]** or **[Found New Hardware Wizard]** dialog box appears depending on the system version of the Windows 95/98/Me/2000/XP, Windows Server 2003, or Windows NT 4.0.
- ☐ Auto Run might not work automatically with certain operating system settings. If this happens, launch “Setup.exe”, located on the CD-ROM root directory.
- ☐ If you want to cancel Auto Run, hold down the **[SHIFT]** key (if your operating system is Windows 2000/XP or Windows Server 2003, hold down the left **[SHIFT]** key) while inserting the CD-ROM. Keep the **[SHIFT]** key held down until the computer has finished accessing the CD-ROM.

### Limitation

- ☐ If your operating system is Windows 2000/XP, Windows Server 2003, or Windows NT 4.0, installing software using Auto Run requires Administrator permission. When you install software using Auto Run, log on using an account that has Administrators permission.

The following table shows the printer drivers and software that can be installed using Auto Run:

	Auto Run <sup>*1</sup>		
	Quick Install		Add Printer and Utility Wizard
	Network connection with TCP/IP	Parallel connection	
RPCS Printer Driver	○	○	○
PostScript3 Printer Driver			○
SmartDeviceMonitor for Admin			○
SmartDeviceMonitor for Client	○		○

<sup>\*1</sup> Available operating systems are: Windows 95/98/Me/2000/XP, Windows Server 2003, and Windows NT 4.0. Auto Run is unavailable with Macintosh.

## Quick Install

Auto Run will start the installer automatically when you insert the CD-ROM into the CD-ROM drive. By selecting Quick Install, you can easily install the RPCS printer driver. SmartDeviceMonitor for Client can also be installed provided the printer and computer are connected via the network.

### Preparation

Before starting installation, close all documents and applications.

### Limitation

☐ The following conditions are required:

- Windows 95/98/Me/2000/XP, Windows Server 2003, or Windows NT 4.0

For network connections:

- The printer must be connected to the network using an Ethernet cable.
- TCP/IP protocol must be configured.
- The IP address must be assigned to both printer and computer.
- The IEEE 802.11b interface unit is installed and the connection is properly made.

For parallel connections:

- The printer must be connected to the computer using a parallel cable.
- Bidirectional transmission must be enabled.

 **Important**

- ☐ If your system is Windows NT 4.0, we recommend that you upgrade the Windows NT 4.0 operating system to Service Pack 4 or later before installing the RPCS printer driver. Contact your Windows retailer for details about latest versions.

 **Note**

- ☐ When the printer is connected to the computer using the USB interface, Quick Install cannot be used. See p.44 “Installing the Printer Driver Using USB”.

**1** Quit all applications running.

**2** Insert the CD-ROM into the CD-ROM drive.

Auto Run will start the installer.

**3** Select a language for the interface, and then click [OK].

The following languages are available: Deutsch (German), English (English), Espanol (Spanish), Francais (French), Italiano (Italian), Nederlands (Dutch), Russian (Russian)

The default interface language is English.

**4** Click [Quick Install].

The software license agreement appears in the [License Agreement] dialog box.

**5** After reading through the agreement, click [I accept the agreement.] to agree, and then click [Next].

**6** Click the printer model you are using when the [Select Printer] dialog box appears.

 **Note**

- ☐ For TCP/IP network connection, select the printer whose IP address is displayed in the [Connect To] column.
- ☐ For parallel connection, select the printer whose printer port is displayed in the [Connect To] column.

**7** Click [Install].

## **8** Follow the instructions on the screen.

A message prompting you to restart your computer may appear. To complete installation, restart your computer.

### **Important**

- ☐ If the printer has options installed, you should make settings for them using the printer driver. See p.32 “Setting Up Options - RPCS”.

### **Note**

- ☐ If you want to change the printer name, follow the procedure below:
  - **Windows 95/98/Me/2000, and Windows NT 4.0**  
On the **[Start]** menu, point to **[Settings]**, and then click **[Printers]**. The **[Printers]** window appears. Right-click the printer icon, and then click **[Rename]**.
  - **Windows XP Professional and Windows Server 2003**  
On the **[Start]** menu, click **[Printers and Faxes]**. The **[Printers and Faxes]** window appears. Right-click the printer icon, and then click **[Rename]**.
  - **Windows XP Home Edition**  
On the **[Start]** menu, click **[Control Panel]**. Click **[Printers and Other Hardware]**, and then click **[Printers and Faxes]**. The **[Printers and Faxes]** window appears. Right-click the printer icon, and then click **[Rename]**.

## **Installing RPCS Printer Driver**

This section gives basic instructions for installing the RPCS printer driver without using Quick Install. Follow the procedures below, as appropriate.

### **Reference**

See p.25 “Quick Install” to install the RPCS printer driver using Quick Install.

### **Limitation**

- ☐ If your operating system is Windows 2000/XP, Windows Server 2003, or Windows NT 4.0, installing a printer driver using Auto Run requires Administrator permission. When you install a printer driver using Auto Run, log on using an account that has Administrator permission.
- ☐ SmartDeviceMonitor for Client, included on the CD-ROM, must be installed.

### **Important**

- ☐ If your operating system is Windows NT 4.0, we recommend that you upgrade the Windows NT 4.0 operating system to Service Pack 4 or later before installing the printer drivers. Contact your Windows retailer for details about latest versions.

 **Note**

- ❑ If you want to share the printer on a Windows 2000/XP, Windows Server 2003, or Windows NT 4.0 platform, use the **[Sharing]** tab in the **[Printer Properties]** dialog box to specify the additional driver (alternate driver). For details, see the operating instructions that come with Windows 2000/XP, Windows Server 2003, or Windows NT 4.0.
- ❑ When prompted for the additional driver (alternate driver) location, select the following folders on the CD-ROM:
  - **Windows 95/98/Me**  
RPCS: \DRIVERS\RPCS\WIN9X\_ME\ (Language)\DISK1\
  - **Windows 2000/XP and Windows Server 2003**  
RPCS: \DRIVERS\RPCS\WIN2K\_XP\ (Language)\DISK1\
  - **Windows NT 4.0**  
RPCS: \DRIVERS\RPCS\ NT4\ (Language)\DISK1\

**1** Quit all applications running.

**2** Insert the CD-ROM into the CD-ROM drive.

Auto Run will start the installer.

**3** Select a language for the interface, and then click **[OK]**.

The following languages are available: Deutsch (German), English (English), Espanol (Spanish), Francais (French), Italiano (Italian), Nederlands (Dutch), Russian (Russian)

The default interface language is English.

**4** Click **[RPCS Printer Driver]**.

The software license agreement appears in the **[License Agreement]** dialog box.

**5** After reading through the agreement, click **[I accept the agreement.]** to agree, and then click **[Next]**.

**6** Select the printer drivers you want to install when the **[Select Program]** dialog box appears, and then click **[Next]**.

**7** Select the model of the printer you are using.

To change the printer name, change it in the **[Change settings for 'Printer Name']** box.

**8** Double-click the printer name to display the printer settings.

## 9 Add the new port from SmartDeviceMonitor.

### Selecting the port type

- ① Click **[Port:]**, and then click **[Add]**.
- ② Click **[SmartDeviceMonitor]**, and then click **[OK]**.
- ③ Select the printer you want to use.

#### ❖ TCP/IP

- ① Click **[TCP/IP]**, and then click **[&Search]**.  
Available machines will be listed.
- ② Select the printer you want to use, and then click **[OK]**.

#### Note

- ☐ Machines that respond to an IP broadcast from the computer will be displayed. To print to a printer not listed here, click **[Specify Address - TCP/IP]**, and then enter the IP address or host name.
- ☐ Part of the printer's IP address is used for the port name. Under Windows 95/98/Me, avoid using an address that is partially similar to one already in use. For example, if "192.168.0.2" is already used, "192.168.0.2xx" cannot be used. Similarly, if "192.168.0.20" is already used, "192.168.0.2" cannot be used.

#### ❖ NetBEUI

- ① Click **[NetBEUI]**, and then click **[&Search]**.  
A list of machines that can be used with NetBEUI appears.
- ② Select the printer you want to use, and then click **[OK]**.

#### Note

- ☐ NetBEUI cannot be used under Windows XP or Windows Server 2003.
- ☐ Machines that respond to a broadcast from the computer will be displayed. To print to a printer not listed here, click **[Specify Address - TCP/IP]**, and then enter the NetBEUI address. Confirm the NetBEUI address on the network is on the configuration page. The NetBEUI address appears as "\\RNPxxxx\xxx" on the configuration page. Enter the machine's network path name in the form of "%Computer name\Share name". Do not enter "\\" but "%%" as head characters.
- ☐ You cannot print to machines beyond routers.

❖ **IPP**

- ① Click **[IPP]**.  
The **[IPP Setting]** dialog box appears.
- ② To specify the IP address of the printer, enter "http://machine's-ip-address/printer" or "ipp://machine's-ip-address/printer" in the **[Printer URL]** box.  
(Example: IP address is 192.168.15.16)  
**http://192.168.15.16/printer**  
**ipp://192.168.15.16/printer**
- ③ If necessary, enter the names to distinguish the printer in the **[IPP Port Name]** box. Enter a different name to those of any existing port name. If you do not do this, the address entered in the **[Printer URL]** box will be set as the IPP port name.
- ④ If a proxy server and IPP user name are used, click **[&Detailed Settings]**, and then configure the necessary settings.

 **Note**

- ☐ For details, see SmartDeviceMonitor for Client Help.
- ⑤ Click **[OK]**.

**10** Make sure the location for the selected printer appears after **[Port:]**.

**11** Configure the user code and default printer as necessary.

❖ **User Code**

User codes are eight digit codes that allow you to keep track of printing done under each code. To use this feature, the network administrator should assign user codes and inform users of them before they install the printer driver. Use the following procedures to enter a user code for registration:

- For the PostScript3 printer driver, enter the user code on the **[Job Log]** tab in the printer properties dialog box.
- For the RPCS printer driver, click the **[Printer Configuration...]** button on the **[Print Settings]** tab in the **[Printer Properties]** dialog box. Click the **[User Code...]** button. A dialog box appears. Enter the user code in the dialog box.

 **Note**

- ☐ When using the RPCS printer driver on Windows 95/98/Me, the user code cannot be changed once it is entered. To change an entered user code, uninstall the printer driver, reinstall it, and then enter a new user code.

 **Reference**

For details, see *Operating Instructions*.

❖ **Default Printer**

Select the **[Default Printer]** check box to set the printer as the default printer.

**12** Click **[Continue]** to start printer driver installation.

**13** Follow the instructions on the screen.

## Changing port settings

Follow these steps to change SmartDeviceMonitor for Client settings, such as the proxy server settings or IPP URL.

### Note

- ☐ There are no port settings for NetBEUI.

**1** In the **[Printers]** window, click the icon of the printer you want to use. On the **[File]** menu, click **[Properties]**.

### Note

- ☐ Under Windows XP and Windows Server 2003, click the icon of the printer you want to use in the **[Printers and Faxes]** window.

**2** Click the **[Details]** tab, and then click **[Port Settings]**.

The **[Port Settings]** dialog box appears.

### Note

- ☐ Under Windows 2000/XP, Windows Server 2003, and Windows NT 4.0, click the **[Ports]** tab, and then click **[Configure Port...]**. The **[Port Configuration:]** dialog box appears.
- For TCP/IP, you can configure Timeout Settings.

### Note

- ☐ If you cannot select the items on the **[Recovery/Parallel Printing]** tab, follow the procedure below.
  - ① Click **[Cancel]** to close the **[Port Settings]** dialog box.
  - ② Start SmartDeviceMonitor for Client, and then right-click the SmartDeviceMonitor for Client icon on the taskbar.
  - ③ Click **[Extended Features Settings]**, and then select the **[&Set Recovery/Parallel Printing for each port]** check box.
  - ④ Click **[OK]** to close the **[Extended Features Settings]** dialog box.
- For IPP, you can configure IPP User Settings, Proxy Settings and Timeout Settings.

### Note

- ☐ For details, see SmartDeviceMonitor for Client Help.

## Setting Up Options - RPCS

If the printer has options installed, you should set the options using the printer driver.

### ! Limitation

- ☐ Under Windows 2000/XP and Windows Server 2003, changing printer settings requires Manage Printers permission. Members of the Administrators and Power Users groups have Manage Printers permission by default. When you set up options, log on using an account that has Manage Printers permission.
- ☐ Under Windows NT 4.0, changing printer settings requires Full Control permission. Members of the Administrators, Server Operators, Print Operators, and Power Users groups have Full Control permission by default. When you set up options, log on using an account that has Full Control permission.

When setting up options, you should access the **[Printer Properties]** dialog box from Windows. You cannot set up options by accessing the **[Printer Properties]** dialog box from an application.

### RPCS printer driver

#### 1 On the **[Start]** menu, point to **[Settings]**, and then click **[Printers]**.

The **[Printers]** window appears.

#### Note

- ☐ Under Windows XP Professional or Windows Server 2003, click the **[Printers and Faxes]** window on the **[Start]** menu.
- ☐ Under Windows XP Home Edition, access the **[Printers and Faxes]** window by clicking the **[Start]** button on the taskbar, click **[Control Panel]**, click **[Printers and Other Hardware]**, and then click **[Printers and Faxes]**.

#### 2 Click the icon of the printer you want to use.

#### 3 On the **[File]** menu, click **[Properties]**.

The printer properties dialog box appears.

#### Note

- ☐ If the following message appears “Configure installed accessories in the **[Accessories]** tab of **[Printer Configuration...]**, which will open next.”, click **[OK]**, and then proceed to step 5.

#### 4 Click the **[Change Accessories...]** tab.

#### Note

- ☐ Under Windows 95/98/Me, click **[Printer Configuration...]** on the **[Print Settings]** tab, and then click **[Change Accessories...]**.

#### 5 Select the options installed in the **[Select printer options:]** list.

**6** Click [OK].

**7** Click [OK], and then close the [Printer Properties] dialog box.

---

## Installing the PostScript3 printer driver

---

This section gives basic instructions for installing the PostScript3 printer driver. Actual procedures may differ depending on the operating system. Follow the procedures below, as appropriate.

### Reference

To use the PostScript3 printer driver, the PostScript3 board must be installed on the printer. For details, see *PostScript3*.

---

### Windows 95/98/Me - Installing the PostScript3 printer driver

---

**1** Close all running applications.

**2** Insert the CD-ROM into the CD-ROM drive.

Auto Run will start the installer.

**3** Select a language for the interface, and then click [OK].

The following languages are available: Deutsch (German), English (English), Espanol (Spanish), Francais (French), Italiano (Italian), Nederlands (Dutch), Russian (Russian)

The default interface language is English.

#### Note

- ☐ The printer driver with the selected language will be installed.
- ☐ When Russian is selected, an English version is installed.

**4** Click [PostScript 3 Printer Driver].

Add Printer Wizard starts.

**5** Click [Next].

**6** Click [Local Printer], and then click [Next].

A dialog box for selecting the printer appears.

**7** Select the model of the printer you are using, and then click [Next].

**8** In the [Available ports:] box, click [Printer Port], and then click [Next].

**9** Change the name of the printer if you want to, and then click [Next].

#### Note

- ☐ Click [Yes] if you want to set the printer as the default printer.

- 10** Follow the instructions on the screen.

---

### Windows 95/98/Me - Setting up options

---

If the printer has options installed, you should make settings for them using the printer driver.

- 1** On the **[Start]** menu, point to **[Settings]**, and then click **[Printers]**.

The **[Printers]** window appears.

- 2** Click the icon of the printer you want to use.

- 3** On the **[File]** menu, click **[Properties]**.

The printer properties dialog box appears.

- 4** Click the **[Device Options]** tab.

- 5** Select the options you have installed in the **[Installable options]** area.

- 6** Click **[OK]**.

---

### Windows 2000/XP and Windows Server 2003 - Installing the PostScript3 printer driver

---

#### **Limitation**

- ☐ Installing a printer driver requires Administrator permission. When you install a printer driver, log on using an account that has Administrator permission.

#### **Note**

- ☐ If you want to share the printer on a Windows 2000/XP or Windows Server 2003 platform, use the **[Sharing]** tab in the **[Printer Properties]** dialog box to specify the additional driver (alternate driver). For details, see the operating instructions that come with Windows 2000/XP and Windows Server 2003.
- ☐ When prompted for the additional driver (alternate driver) location, select the following folders on the CD-ROM:
  - **Windows 95/98/Me:** \DRIVERS\PS\WIN9X\_ME\ (Language)\DISK1\
  - **Windows NT 4.0:** \DRIVERS\PS\NT4\ (Language)\DISK1\

- 1** Close all running applications.

- 2** Insert the CD-ROM into the CD-ROM drive.

Auto Run will start the installer.

**3 Select a language for the interface, and then click [OK].**

The following languages are available: Deutsch (German), English (English), Espanol (Spanish), Francais (French), Italiano (Italian), Nederlands (Dutch), Russian (Russian)

The default interface language is English.

**Note**

- ☐ The printer driver with the selected language will be installed.
- ☐ When Russian is selected, an English version is installed.

**4 Click [PostScript 3 Printer Driver].**

Add Printer Wizard starts.

**5 Click [Next].****6 Click [Local Printer], and then click [Next].****Note**

- ☐ Under Windows XP or Windows Server 2003, click **[Local printer attached to this computer]**, and then click **[Next]**.

A dialog box for selecting the printer port appears.

**7 Select the check box of the port you want to use, and then click [Next].**

A dialog box for selecting the printer appears.

**8 Select the model of the printer you are using, and then click [Next].****9 Change the name of the printer if you want to, and then click [Next].****Note**

- ☐ Click **[Yes]** if you want to set the printer as the default printer.

**10 Select whether or not you want to share the printer, and then click [Next].****Reference**

See *Network Guide* for information about setting up and using the printer in a network environment.

**11 Follow the instructions on the screen.**

## Windows 2000/XP and Windows Server 2003 - Setting up options

If the printer has options installed, you should make settings for them using the printer driver.

### ! Limitation

- ☐ Changing the printer settings requires Manage Printers permission. Members of the Administrators and Power Users groups have Manage Printers permission by default. When you set up options, log on using an account that has Manage Printers permission.

### 1 On the [Start] menu, point to [Settings], and then click [Printers].

The [Printers] window appears.

### Note

- ☐ Under Windows XP Professional or Windows Server 2003, click the [Printers and Faxes] window on the [Start] menu.
- ☐ Under Windows XP Home Edition, access the [Printers and Faxes] window by clicking the [Start] button on the taskbar, click [Control Panel], [Printers and Other Hardware], and then click [Printers and Faxes].

### 2 Click the icon of the printer you want to use.

### 3 On the [File] menu, click [Properties].

The printer properties dialog box appears.

### 4 Click the [Device Settings] tab.

### 5 Select the options you have installed under [Installable Options].

### 6 Click [OK].

## Windows NT 4.0 - Installing the PostScript3 printer driver

### ! Limitation

- ☐ Installing a printer driver requires Administrator permission. When you install a printer driver, log on using an account that has Administrator permission.

### Important

- ☐ The CD-ROM containing Windows NT Server operating system version 4.0, or the Windows NT Workstation operating system is required to install the printer driver.
- ☐ We recommend that you upgrade Windows NT 4.0 operating system to Service Pack 6 or later before installing the printer driver. Contact your Windows retailer for details about latest versions.

 **Note**

- ☐ If you want to share the printer on a Windows NT 4.0 platform, use the **[Sharing]** tab in the **[Printer Properties]** dialog box to specify the additional driver (alternate driver). For details, see the operating instructions that come with Windows NT 4.0.
- ☐ When prompted for the additional driver (alternate driver) location, select the following folders on the CD-ROM:
  - **Windows 95/98/Me:** \DRIVERS\PS\WIN9X\_ME\ (Language)\DISK1\

**1** Close all running applications.

**2** Insert the CD-ROM into the CD-ROM drive.

Auto Run will start the installer.

**3** Select a language for the interface, and then click **[OK]**.

The following languages are available: Deutsch (German), English (English), Espanol (Spanish), Francais (French), Italiano (Italian), Nederlands (Dutch), Russian (Russian)

The default interface language is English.

 **Note**

- ☐ The printer driver with the selected language will be installed.
- ☐ When Russian is selected, an English version is installed.

**4** Click **[PostScript 3 Printer Driver]**.

Add Printer Wizard starts.

**5** Confirm that the **[My Computer]** option is selected, and then click **[Next]**.

A dialog box for selecting the printer port appears.

**6** Select the check box of the port you want to use, and then click **[Next]**.

A dialog box for selecting the printer appears.

**7** Select the model of the printer you are using, and then click **[Next]**.

**8** Change the name of the printer if you want to, and then click **[Next]**.

 **Note**

- ☐ Click **[Yes]** if you want to set the printer as the default printer.

**9** Select whether or not you want to share the printer, and then click **[Next]**.

 **Reference**

See *Network Guide* for information about setting up and using the printer in a network environment.

**10** Follow the instructions on the screen.

## Windows NT 4.0 - Setting up options

If the printer has options installed, you should make settings for them using the printer driver.

### ! Limitation

- ☐ Changing printer settings requires Manage Printers permission. Members of the Administrators and Power Users groups have Manage Printers permission by default. When you set up options, log on using an account that has Manage Printers permission.

### 1 On the [Start] menu, point to [Settings], and then click [Printers].

The [Printers] window appears.

### 2 Click the icon of the printer you want to use.

### 3 On the [File] menu, click [Properties].

The [Printer Properties] dialog box appears.

### 4 Click the [Device Settings] tab.

### 5 Select the options you have installed under [Installable Options].

### 6 Click [OK].



### 💡 Bidirectional transmission

When bidirectional transmission is enabled, information such as paper size and feed orientation is automatically sent to the computer. You can also check printer status from your computer.

- Bidirectional transmission is supported under Windows 95/98/Me/2000/XP, Windows Server 2003, and Windows NT 4.0.
- When bidirectional transmission is running, printer status and information can be viewed by opening the printer driver screen.

To support bidirectional transmission, the following conditions are required:

#### ❖ When connecting with USB 2.0

- The port on the USB 2.0 interface and the USB port on the computer are connected using a USB interface cable (Windows 2000/XP, Windows Server 2003).

#### 📝 Note

- ☐ Under Windows 2000/XP or Windows Server 2003, [Enable bidirectional support] must be selected, and [Enable printer pooling] must not be selected on the [Ports] tab in RPCS printer driver.

### ❖ When connecting with the network

- The printer must be set to bidirectional transmission.
- SmartDeviceMonitor for Client included on the CD-ROM must be installed.

One of the following conditions must also be satisfied as well as the two requirements mentioned above:

- The port for SmartDeviceMonitor and TCP/IP must be used.
- The standard TCP/IP port is used without changing the port name (Windows 2000/XP, Windows Server 2003).
- The IP address specified in the Microsoft TCP/IP Print is used (Windows NT 4.0).
- The IP address is included in port name, if using IPP protocol.

#### Note

- ☐ Under Windows 95/98/Me, **[Enable bi-directional support for this printer]** must be selected in **[Spool Settings]** on the **[Details]** tab in RPCS printer driver.
- ☐ Under Windows 2000/XP, Windows Server 2003, or Windows NT 4.0, **[Enable bidirectional support]** must be selected, and **[Enable printer pooling]** must not be selected on the **[Ports]** tab in RPCS printer driver.

### ❖ When connecting with a parallel cable

- The computer must support bidirectional transmission.
- The printer must be set to bidirectional transmission.
- The printer parallel port and computer parallel port are connected using a parallel interface cable that supports bidirectional transmission.

#### Note

- ☐ Under Windows 95/98/Me, **[Enable bi-directional support for this printer]** must be selected in **[Spool Settings]** on the **[Details]** tab in RPCS printer driver.
- ☐ Under Windows 2000/XP, Windows Server 2003, or Windows NT 4.0, **[Enable bidirectional support]** must be selected, and **[Enable printer pooling]** must not be selected on the **[Ports]** tab in RPCS printer driver.

.....

---

## Mac OS - Installing the PostScript3 printer driver and Utilities

---

It is necessary to install a printer driver and a PPD file to print from a Macintosh. Follow this procedure to install a printer driver and a PPD file on Macintosh running OS 8.6 or later versions up to 9.2, and Mac OS X Classic mode.

### **Note**

- ☐ For installation under Mac OS X (v10.1.x), see p.42 “Mac OS X - Installing the PostScript3 printer driver”.

**1** Insert the CD-ROM into the CD-ROM drive.

**2** Double-click the CD-ROM icon.

**3** Double-click the [Mac OS] folder.

**4** Double-click the [PS Driver] folder.

**5** Double-click the folder of the language you use.

**6** Open [Disk 1], and then double-click the installer icon.

The PostScript3 printer driver installer window appears.

**7** Follow the instructions on the screen.

**8** Double-click [Extensions] in [System Folder].

**9** Double-click [Printer Descriptions].

**10** Double-click the CD-ROM icon on the desktop.

**11** Double-click the [Printer Descriptions] folder in the [Mac OS] folder.

**12** Double-click [Disk 1] in the folder of the language you use.

**13** Drag the PPD file into [Printer Descriptions] in [Extensions] in [System Folder].

**14** Restart the Macintosh.

---

## Setting up the PPD file

---

### Preparation

Make sure that the printer is connected to an AppleTalk network before performing the following procedure:

- 1** On the Apple menu, click **[Chooser]**.
- 2** Click the **[Adobe PS]** icon.
- 3** In the **[Select a PostScript Printer:]** list, click the name of the printer you want to use.
- 4** Click **[Setup]**.
- 5** Click **[Select PPD...]**.
- 6** Click the printer description file you want to use, and then click **[Select]**.
- 7** Click **[OK]**.

The PPD file is set up, and the **[Adobe PS]** icon appears at the left of the printer name in the list. Next, follow the procedure on p.41 “Setting up options” to make the option settings, or close the **[Chooser]** dialog box.

---

## Setting up options

---

- 1** On the Apple menu, click **[Chooser]**.
- 2** Click the **[Adobe PS]** icon.
- 3** In the **[Select a PostScript Printer:]** list, click the name of the printer you want to use, and then click **[Setup...]**.
- 4** Click **[Configure]**.

A list of options appears.

- 5** Select the option you want to set up, and then select the appropriate setting for it.

### Note

- ☐ If the option you want to set up is not displayed, the PPD file might not be set up correctly. Check the name of the PPD file shown in the dialog box.

- 6** Click **[OK]**.

The list of options closes.

- 7** Click **[OK]**.

- 8** Close the **[Chooser]** dialog box.

---

## Mac OS X - Installing the PostScript3 printer driver

---

It is necessary to install a PPD file to print from a Macintosh. Follow the procedures to install a PPD file on Macintosh running Mac OS X.

Printer driver is included in Mac OS. When printing under Mac OS X v10.1.x, use the printer driver included in Mac OS.

### 2

#### Preparation


You need an administrator name and a password (phrase). For details, consult your administrator.

- 1** Insert the CD-ROM into the CD-ROM drive.
- 2** Double-click the CD-ROM icon.
- 3** Double-click the [Mac OS X] folder.
- 4** Double-click the [Mac OSX PPD Installer] folder, and then double-click the installer icon.
- 5** Follow the instructions on screen.

---

#### Setting up the PPD file

---

- 1** Run [Print Center].
- 2** Click [Add].
  -  **Note**
    - ☐ Select [AppleTalk] in the first pop-up menu.
    - ☐ If the zone has been set, select the zone in the second pop-up menu.
- 3** Select the PPD file for the model you are using from the [Printer Model:] pop-up menu.
- 4** Click [Add].

---

## Selecting PPD files when using USB

---

It is necessary to select a PPD file in order to be able to use printers with USB connection. Make the setting as described below.

- 1** Run [Print Center].
- 2** Click [Add Printer].
- 3** Select [USB] in the first pop-up menu.
- 4** Select a printer and select the printer brand name of the printer in use from the [Printer Model:] pop-up menu.



### Note

- ☐ If using MAC OS X 10.1.x, a list of printer models is displayed on the [Printer Model:] pop-up menu. Select the printer model in use and proceed to step **6**.

- 5** Select the connected printer model from the list of printers and Click [Add].
- 6** Close the Printer List and close [Print Center].

---

## Setting up options

---



### Limitation

- ☐ You can make settings for all printer features, even if the necessary option is not installed due to Mac OS X Native mode limitations. Check which options are installed in the printer before you print.

## Installing the Printer Driver Using USB

This section gives basic instructions for installing printer drivers using USB. The printer drivers can be installed from the CD-ROM that comes with this printer.

### Preparation

Make sure that all other applications are closed and the computer is not printing before installation.

### Windows 2000/XP and Windows Server 2003 - Installing the printer driver using USB

#### Limitation

- ☐ Installing a printer driver requires the Administrators permission. When you install a printer driver, log on using an account that has Administrator permission.

When the USB interface cable is used for the first time, the **[Found New Hardware Wizard]** dialog box appears.

If the printer driver is already installed, the “plug and play” is displayed, and the printer with its port directed to the USB interface cable is added to the **[Printers]**<sup>\*1</sup> folder.

#### Note

- ☐ Under Windows XP, even if the printer driver has already been installed, **[Found New Hardware Wizard]** may start when connecting the printer and the computer with the USB interface cable for the first time. If this happens, install the printer driver by following the procedure below:

#### **1** Install the printer driver by referring to the instructions for installation.

#### Note

- ☐ Each printer driver is stored in the following folders on the CD-ROM:

- **RPCS:** \DRIVERS\RPCS\WIN2K\_XP\ (Language)\DISK1
- **PostScript 3:** \DRIVERS\PS\WIN2K\_XP\ (Language)\DISK1

When installation is complete, the printer with its port directed to “USB00n” appears in the **[Printers]**<sup>\*1</sup> folder. (“n” is the number of printers connected.)

<sup>\*1</sup> Under Windows XP, the folder is **[Printers and Faxes]**.

---

## Macintosh - Creating a desktop printer icon

---

When you connect the printer and your computer using USB 2.0, create a Desktop Printer icon.

### ! Limitation

- ☐ Under Mac OS X Native mode, printing is disabled when connected to the printer using USB.

- 1** Double-click **[Desktop Printer Utility]** in the **[AdobePS Components]** folder.
- 2** Select **[AdobePS]** in **[With:]** and **[Printer (USB)]** in **[Create Desktop]**, and then click **[OK]**.
- 3** Click **[Change]** in **[USB Printer Selection]**.
- 4** Select the model of the printer you are using in **[Select a USB Printer:]**, and then click **[OK]**.
- 5** Click **[Auto Setup]** in **[PostScript™ Printer Description (PPD) File]**.
- 6** Click **[Create]**.
- 7** Enter the printer name, and then click **[Save]**.  
The printer icon appears on the desktop.
- 8** Close the Desktop Printer Utility.

---

## Installing DeskTopBinder Lite- SmartDeviceMonitor for Client

---

### ! Limitation

- ☐ If your operating system is Windows 2000/XP, Windows Server 2003, or Windows NT 4.0, installation using Auto Run requires Administrator permission. To install a printer driver using Auto Run, you must log on using an account that has Administrator permission.

- 1** Close all running applications.
- 2** Insert the CD-ROM into the CD-ROM drive.  
Auto Run will start the installer.
- 3** Select a language for the interface, and then click **[OK]**.  
The default interface language is English.
- 4** Click **[DeskTopBinder - SmartDeviceMonitor for Client]**.
- 5** A message telling you to close all other applications appears.  
Confirm that all applications are closed, and then click **[Next]**.

- 6** The software license agreement appears in the [License Agreement] dialog box. After reading through its contents, click [Yes]
- 7** Click [Full install] or [Custom Install].  
[Full install] installs all required applications.  
[Custom Install] installs selected applications.
- 8** Follow the instructions on the display, and then click [Next].

---

## Installing SmartDeviceMonitor for Admin

---

### Limitation

- ☐ If your operating system is Windows 2000/XP, Windows Server 2003, or Windows NT 4.0, installation using Auto Run requires Administrator permission. To install a printer driver using Auto Run, log on using an account that has Administrator permission.

- 1** Close all running applications.
- 2** Insert the CD-ROM into the CD-ROM drive.  
Auto Run will start the installer.
- 3** Select a language for the interface, and then click [OK].  
The default interface language is English.
- 4** Click [SmartDeviceMonitor for Admin].
- 5** A message telling you to close all other applications appears.  
Confirm that all applications are closed, and then click [Next].
- 6** The software license agreement appears in the [License Agreement] dialog box. After reading through its contents, click [Yes]
- 7** Follow the instructions on the display and click [Next].

---

## Using Adobe PageMaker Version 6.0, 6.5, or 7.0

---

If you use the printer under Windows 95/98/Me/2000/XP, Windows Server 2003, or Windows NT 4.0 with Adobe PageMaker, you need to copy the PPD file to the PageMaker folder.

The PPD file is the file with the extension “.ppd” in the folder “DRIVERS\PS\WIN9X\_ME\ (Language)\DISK1\” on the CD-ROM.

The **[WIN9X\_ME]** folder, inside the **[PS]** folder, is for Windows 95/98/Me. Use the folder at a level appropriate for the operating system you are currently using.

The third folder, “(Language)” may be renamed with an appropriate language name.

Copy the file with extension “.ppd” to the PageMaker folder.

- **For PageMaker 6.0 default installation**  
The directory is “C:\PM6\RSRC\PPD4”.
- **For PageMaker 6.5 default installation**  
The directory is “C:\PM65\RSRC\USENGLISH\PPD4”.  
“USENGLISH” may vary depending on your language selection.
- **For PageMaker 7.0 default installation**  
The directory is “C:\PM7\RSRC\USENGLISH\PPD4”.  
“USENGLISH” may vary depending on your language selection.



### Note

- ❑ When using PageMaker, optional features that can be selected by the printer driver will not be active. The following procedure describes how to activate the optional printer features.
  - ① On the **[File]** menu, click **[Print]**.  
The **[Print Document]** dialog box appears.
  - ② Make the necessary settings in the **[Features]** box.

## Software and Utilities Included on the CD-ROM

The CD-ROM labeled “Printer Drivers and Utilities” is mainly used for printer functions. In this manual, “CD-ROM” refers to the “Printer Drivers and Utilities” CD-ROM, unless specified otherwise.

### 2

## Printer Drivers

Printing requires installation of a printer driver for your operating system. The following drivers are included on the CD-ROM labeled “Printer Drivers and Utilities” that comes with the printer option of this printer.

Printer Language	RPCS	PostScript3
Windows 95 <sup>*1</sup>	√	√ <sup>*13</sup>
Windows 98 <sup>*2</sup>	√	√ <sup>*13</sup>
Windows Me <sup>*3</sup>	√	√ <sup>*13</sup>
Windows 2000 <sup>*4</sup>	√	√ <sup>*14</sup>
Windows XP <sup>*5</sup>	√	√ <sup>*14</sup>
Windows Server 2003 <sup>*6</sup>	√ <sup>*7</sup>	√ <sup>*7</sup> <sup>*14</sup>
Windows NT 4.0 <sup>*8</sup>	√ <sup>*11</sup>	√ <sup>*12</sup> <sup>*13</sup>
Mac OS <sup>*9</sup>		√ <sup>*13</sup>
Mac OS X <sup>*10</sup>		√ <sup>*15</sup>

<sup>\*1</sup> Microsoft Windows 95 operating system

<sup>\*2</sup> Microsoft Windows 98 operating system

<sup>\*3</sup> Microsoft Windows Millennium Edition

<sup>\*4</sup> Microsoft Windows 2000 Server

Microsoft Windows 2000 Professional

<sup>\*5</sup> Microsoft Windows XP Professional

Microsoft Windows XP Home Edition

<sup>\*6</sup> Microsoft Windows Server 2003 Standard Edition

Microsoft Windows Server 2003 Enterprise Edition

Microsoft Windows Server 2003 Web Edition

<sup>\*7</sup> Cluster and Terminal Service are not supported.

<sup>\*8</sup> Microsoft Windows NT Server operating system version 4.0, Microsoft Windows NT Workstation operating system version 4.0 in a computer using x86 processors.

<sup>\*9</sup> Versions 8.6 to 9.2 of the Mac OS (Mac OS X Classic mode is supported.)

<sup>\*10</sup> Mac OS X 10.1 or later (Native mode)

<sup>\*11</sup> Requires Service Pack 4 or later.

<sup>\*12</sup> Requires Service Pack 6 or later.

<sup>\*13</sup> The Adobe PostScript3 printer drivers and PostScript Printer Description (PPD) files are included on the CD-ROM labeled “Printer Drivers and Utilities”.

<sup>\*14</sup> The PostScript Printer Description (PPD) files are included on the CD-ROM labeled “Printer Drivers and Utilities”.

<sup>\*15</sup> The Adobe PostScript Printer Description (PPD) installer is included on the CD-ROM labeled “Printer Drivers and Utilities”.

❖ **RPCS printer driver**

The RPCS printer drivers are included on the CD-ROM labeled "Printer Drivers and Utilities" This printer driver allows the computer to communicate with the printer via a printer language. The preset type user interface is provided in addition to the usual one.

See p.27 "Installing RPCS Printer Driver" .

❖ **Adobe PostScript3 printer drivers and PPD files**

The Adobe PostScript3 printer driver and the PPD files are included on the CD-ROM labeled "Printer Drivers and Utilities" This printer driver allows the computer to communicate with the printer via a printer language. The PPD files allow the printer driver to enable printer specific functions.

See p.33 "Installing the PostScript3 printer driver" .

---

## Software and Utilities

---

❖ **SmartDeviceMonitor for Admin**

This utility is for the system administrator to manage network printers.

**Reference**

For details, see SmartDeviceMonitor for Admin online Help.

❖ **SmartDeviceMonitor for Client**

This utility is for users to manage their own print status on the network.

**Reference**

For details, see SmartDeviceMonitor for Client online Help.

❖ **Printer Utility for Mac**

This utility allows users to download and manage a variety of fonts as well as manage printers.

**Reference**

For details, see *PostScript3* which is provided as a PDF file on the CD-ROM labeled "Operating Instructions".

 **Important**

- ☐ Software and utilities must be uninstalled before installing newer versions of Windows. Reinstall software and utilities after upgrading Windows.



# 3. Setting Up the Printer Driver and Canceling a Print Job

## Accessing Printer Properties

---

### Windows 95/98/Me - Accessing Printer Properties

---

---

#### Changing default settings

---

- 1** On the [Start] menu, point to [Settings], and then click [Printers].

The [Printers] window appears.

- 2** Click the icon of the printer whose default you want to change.

- 3** On the [File] menu, click [Properties].

The [Printer Properties] dialog box appears.

- 4** Make the settings you require, and then click [OK].

 **Note**

- ☐ With some applications, printer driver settings are not used, and the application's own settings are applied.

---

#### Making settings from an application

---

To make settings for a specific application, open the printer properties dialog box from that application. The following example describes how to make settings in WordPad for Windows 95/98/Me.

 **Note**

- ☐ Actual procedures for opening the [Printer Properties] dialog box may vary depending on the application. For details, see operating instructions for the application you are using.
- ☐ Any setting you make in the following procedure is valid for the current application only:

- 1** On the [File] menu, click [Print].

The [Print] dialog box appears.

- 2** In the [Name] list, select the printer you want to use, and then click [Properties...].

The [Printer Properties] dialog box appears.

- 3** Make the settings you require, and then click [OK].

- 4** Click [OK] to start printing.

---

## Windows 2000/XP and Windows Server 2003 - Accessing Printer Properties

---

---

### Changing default settings - Printer properties

---

#### **Limitation**

- ☐ Changing printer settings requires Manage Printers permission. Members of Administrators and Power Users groups have Manage Printers permission by default. When you set up options, log on using an account that has Manage Printers permission.

#### **1** On the [Start] menu, point to [Settings], and then click [Printers].

The [Printers] window appears.

#### **Note**

- ☐ Under Windows XP Professional and Windows Server 2003, open the [Printers and Faxes] window on the [Start] menu.
- ☐ Under Windows XP Home Edition, open the [Printers and Faxes] window by clicking [Control Panel] from the [Start] button on the taskbar, click [Printers and Other Hardware], and then click [Printers and Faxes].

#### **2** Click the icon of the printer whose default you want to change.

#### **3** On the [File] menu, click [Properties].

The [Printer Properties] dialog box appears.

#### **4** Make the settings you require, and then click [OK].

#### **Note**

- ☐ Normally you do not have to change the “Form to Tray Assignment” settings on the [Device Settings] tab in the PostScript3 printer driver.
- ☐ Settings you make here are used as default for all applications.

---

## Changing default settings - Printing preferences properties

---

### Limitation

- ☐ Changing printer settings requires Manage Printers permission. Members of the Administrators and Power Users groups have Manage Printers permission by default. When you set up options, log on using an account that has Manage Printers permission.

### **1** On the **[Start]** menu, point to **[Settings]**, and then click **[Printers]**.

The **[Printers]** window appears.

### Note

- ☐ Under Windows XP Professional and Windows Server 2003, open the **[Printers and Faxes]** window on the **[Start]** menu.
- ☐ Under Windows XP Home Edition, open the **[Printers and Faxes]** window by clicking **[Control Panel]** from the **[Start]** button on the taskbar, click **[Printers and Other Hardware]**, and then click **[Printers and Faxes]**.

### **2** Click the icon of the printer whose default you want to change.

### **3** On the **[File]** menu, click **[Printing Preferences...]**.

The **[Printing Preferences]** dialog box appears.

### **4** Make the settings you require, and then click **[OK]**.

### Note

- ☐ Settings you make here are used as default for all applications.

---

## Making settings from an application

---

To make settings for a specific application, open the **[Print]** dialog box from that application. The following example describes how to make settings in WordPad for Windows 2000/XP and Windows Server 2003.

### Note

- ☐ Actual procedures for opening the **[Print]** dialog box vary depending on the application. For details, see the operating instructions that come with the application you are using.
- ☐ Any setting you make in the following procedure is valid for the current application only.

### **1** On the **[File]** menu, click **[Print...]**.

The **[Print]** dialog box appears.

- 2** In the **[Select Printer]** list, select the printer you want to use, and then click the tab for which you want to change print settings.

 **Note**

- ☐ Under Windows XP and Windows Server 2003, click **[Preferences]** to open the **[Printing Preferences]** dialog box.

- 3** Make the settings you require.

- 4** Click **[Print]** to start printing.

Under Windows XP and Windows Server 2003, click **[OK]**, and then click **[Print]** to start printing.

3

---

## Windows NT 4.0 - Accessing Printer Properties

---

---

### Changing default settings - Printer properties

---

 **Limitation**

- ☐ Changing printer settings requires Full Control access permission. Members of Administrators, Server Operators, Print Operators, and Power Users groups have Full Control permission by default. When you change printer settings, you must log on using an account that has Full Control permission.

- 1** On the **[Start]** menu, point to **[Settings]**, and then click **[Printers]**.

The **[Printers]** window appears.

- 2** Click the icon of the printer whose default you want to change.

- 3** On the **[File]** menu, click **[Properties]**.

The **[Printer Properties]** dialog box appears.

- 4** Make the settings you require, and then click **[OK]**.

 **Note**

- ☐ Normally you do not have to change the “Form to Tray Assignment” settings on the **[Device Settings]** tab in the PostScript3 printer driver.
- ☐ Settings you make here are used as default for all applications.

---

## Changing the default settings - Default document properties

---

### **Limitation**

- ☐ Changing printer settings requires Full Control access permission. Members of the Administrators, Server Operators, Print Operators, and Power Users groups have Full Control permission by default. When you set up options, log on using an account that has Full Control permission.

### **1** On the **[Start]** menu, point to **[Settings]**, and then click **[Printers]**.

The **[Printers]** window appears.

### **2** Click the icon of the printer whose default you want to change.

### **3** On the **[File]** menu, click **[Document Defaults...]**.

The **[Default]** dialog box appears.

### **4** Make the settings you require, and then click **[OK]**.

#### **Note**

- ☐ Settings you make here are used as default for all applications.

---

## Making settings from an application

---

To make settings for a specific application, open the **[Printer Properties]** dialog box from that application. The following example describes how to make settings in WordPad for Windows NT 4.0.

### **Note**

- ☐ Actual procedures for opening the **[Printer Properties]** dialog box vary depending on the application. For details, see the operating instructions that come with the application you are using.
- ☐ Any setting you make in the following procedure is valid for the current application only.

### **1** On the **[File]** menu, click **[Print]**.

The **[Print]** dialog box appears.

### **2** In the **[Name]** list, select the printer you want to use, and then click **[Properties]**.

The **[Printer Properties]** dialog box appears.

### **3** Make the settings you require, and then click **[OK]**.

### **4** Click **[OK]** to start printing.

---

## Macintosh - Setting Up for Printing

---

---

### Making paper settings from an application

---

- 1** Open the file you want to print.
- 2** On the [File] menu, click [Page Setup...].  
The [AdobePS Page Setup] dialog box appears.
- 3** Make sure the printer you want to use is shown in the [Printer:] box.

 **Note**

- ☐ Under Mac OS X, this is called [Format for:].
- ☐ If the printer is not shown in the [Printer:] box, use the pop-up menu to display a list of available machines.

 **Reference**

The actual appearance of Page Setup depends on the application you are using. See the operating instructions that come with the Macintosh for details.

- 4** In the [Paper:] box, select the paper size.

 **Note**

- ☐ Under Mac OS X, this is called [Paper Size:].

- 5** Make the settings you require, and then click [OK].

---

### Setting up for printing from an application

---

- 1** Open the file you want to print.
- 2** On the [File] menu, click [Print:].  
The [Printer Features] dialog box appears.
- 3** Make sure the printer is selected in the [Printer:] box.
- 4** Make the settings you require, and then click [Print] to start printing.

---

# Canceling a Print Job

---

---

## Canceling from a computer

---

---

### Windows

---

- 1** Double-click the printer icon on the Windows taskbar.

A window appears, showing all the print jobs that are currently queuing to be printed. Check the current status of the job you want to cancel.

- 2** Select the name of the job you want to cancel.

- 3** On the [Document] menu, click [Cancel Printing].

 **Note**

- ☐ You can also open the print job queue window by double-clicking the printer icon in the [Printer] window.

---

### Macintosh

---

- 1** Double-click the printer icon on the desktop.

A window appears, showing all the print jobs that are currently queuing to be printed. Check the current status of the job you want to cancel.

 **Note**

- ☐ Under Mac OS X, start Print Center.

- 2** Select the name of the job you want to cancel.

- 3** Click the pause icon, and then click the trash icon.

 **Note**

- ☐ Under Mac OS X, Click [Hold], and then click [Delete].

---

## Canceling on the control panel

---

---

### Canceling before the printer starts Master Making

---

The print jobs of all pages can be canceled before the printer starts Master Making.

- 1** Press [Job Reset] on the machine's display panel.

---

### Canceling after the printer has started Master Making

---

In order to cancel the print job after Master Making has started, press “Job Reset” or “End Printing” on the display panel.

#### ❖ Pressing “Job Reset” while Master Making is in progress

If “Job Reset” is pressed while Master Making is processing a particular page, the print job will be cancelled beginning from the next page.

##### Note

- ☐ If the Master Making is processing the last page of a print job, the print job cannot be canceled

#### ❖ Pressing “Job Reset” while printing

If “Job Reset” is pressed when a particular page is being printed, the job will be canceled beginning from the next page.

##### Note

- ☐ If the last page is being printed, the next print job will be canceled. If there are no print jobs in queue, the “Job Reset” button will not function.

#### ❖ Pressing “End Printing” while printing queue is on pause

When a print job is paused, the next master making cannot begin until printing is completed. If there are any pages remaining when printing is paused, press the “End Printing” to cancel the remaining pages and master making for the next print job can begin.

# 4. Various Types of Printing

## Windows 95/98/Me - Various Types of Printing

This section introduces several printing examples from Windows 95/98 and Me.

### Reference

For details, see the operating instructions that come with the respective application.

---

### Duplex Printing

---

Prints on both sides of the sheet.

#### Limitation

- ☐ Duplex printing is possible on the following paper sizes only: A4 , B5 JIS  and  $8\frac{1}{2} \times 11$  .

**1** Display the data to be printed.

**2** On the [File] menu, click [Print...].

The [Print] dialog box appears.

**3** From [Name:], select the printer.

**4** Click [Properties].

The [Properties] dialog box appears.

**5** In the [Custom Setting name:] menu on the [Print Settings] tab, select the [Duplex].

**6** On the [Print Settings] tab, click [Add/Change Custom Settings...].

The [Add/Change Custom Settings...] dialog box appears.

**7** Click [Duplex/Booklet], and then select the opening side.

**8** Click [Save].

The screen returns to the [Properties] dialog box.

**9** Click [OK].

The screen returns to the [Print] dialog box.

**10** Click [OK].

---

## Storing the Print File

---

Use this function to store a file in the machine, and then print it from the computer or the machine's control panel later.

### ⚠ **Limitation**

- ❑ If data from PostScript3 printer driver is stored in the machine using **[Store File]**, when printing from the machine, it is possible that the data will not print in the intended direction. For details, see *PostScript3*.

**1** Display the data to be printed.

**2** On the **[File]** menu, click **[Print...]**.

The **[Print]** dialog box appears.

**3** From **[Name:]**, select the printer.

**4** Click **[Properties]**.

The **[Properties]** dialog box appears.

**5** In the **[Job type:]** menu on the **[Print Settings]** tab, select **[Store File]**.

**6** If you want to set **[User name:]**, **[File name:]** and **[Password:]**, click **[Details...]**.

The **[Details...]** dialog box appears.

**7** Set **[User name:]**, **[File name:]**, and **[Password:]**.

**8** Click **[OK]**.

The screen returns to the **[Properties]** dialog box.

**9** Click **[OK]**.

The screen returns to the **[Print]** dialog box.

**10** Click **[OK]**.

---

## Printing on custom sized paper

---

Printing on custom sized paper

### Important

- ☐ Be sure to load paper in the paper feed tray.

**1** Display the data to be printed.

**2** On the [File] menu, click [Print...].

The [Print] dialog box appears.

**3** From [Name:], select the printer.

**4** Click [Properties].

The [Properties] dialog box appears.

**5** In the [Original size:] menu on the [Print Settings] tab, click [Custom paper size...].

The [Custom Paper Sizes] dialog box appears.

**6** Enter the paper size in [Short edge:] and [Long edge:].

### Note

- ☐ Specify [Measurement Unit...] if required.

**7** Select [Place as portrait] or [Place as landscape] according to the paper orientation.

**8** Click [OK].

The screen returns to the [Properties] dialog box.

**9** Click [OK].

The screen returns to the [Print] dialog box.

**10** Click [OK].

## Printing on paper with an undetectable size

This machine automatically detects the paper size, however, there are cases where the machine cannot detect the size of the paper. In these cases, follow the procedure below and manually make the desired settings.


### Important

- ☐ Be sure to load paper in the paper feed tray.

### Note

- ☐ If you make these settings frequently, it is convenient to define a default size by selecting **[Tray Paper Size: Paper Feed Tray]** in Online Print menu on the control panel.

- 4** **1** Press the **[Printer Settings]** key on the printer.

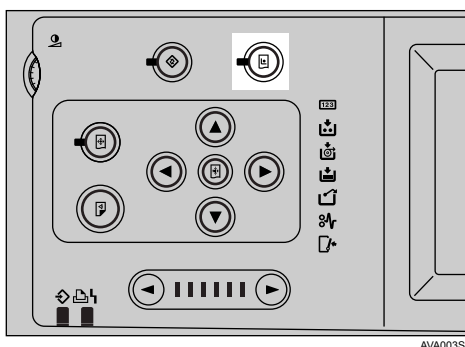

- 2** Press **[Tray Paper Size: Paper Feed Tray]**.

- 3** Select the paper size, and then press **[OK]**.

### Important

- ☐ Select a size that is bigger than the contents to be printed. If the contents are bigger than the paper size, it will cause the roller to get dirty.

- 4** Select the paper size on the computer's printer driver.

### Important


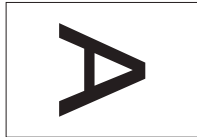





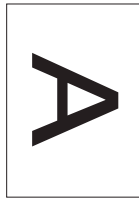
- ☐ Select the same paper size selected in the **[Tray Paper Size: Paper Feed Tray]** setting on the machine.

- 5** Print from the computer.


## When envelopes cannot be fed

Envelopes cannot be fed in well because the seal may get caught. In that case, you can rotate and print the image by 180 degrees using the rotate function in the printer driver.

The following chart shows how the image is rotated.

Paper Feed Direction	Original Image	Rotate: Off	Rotate: 180°
Short Edge Feed	Portrait	← 	← 
	Landscape	← 	← 
Long Edge Feed	Portrait	← 	← 
	Landscape	← 	← 

- 1** Rotate the envelopes 180 degrees and place them in the paper feed tray.

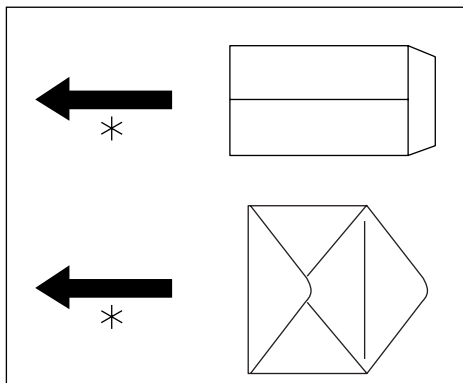

GRENVE1E

4

\*Paper feed direction

- 2** On the printer driver's [Misc.] tab, select [Rotate by 180 degrees].
- 3** Click [OK].  
The screen returns to the [Print] dialog box.
- 4** Click [OK] to start printing.

# Windows 2000/XP and Windows Server 2003 - Various Types of Printing

This section introduces several printing examples from Windows 2000/XP and Windows Server 2003.

## Reference

For Details, see the operating instructions that come with your respective application.

---

## Duplex Printing

---

Prints on both sides of the sheet.

### Limitation

- ☐ Duplex Printing is possible on the following paper sizes only: A4 , B5 JIS  and 8<sup>1</sup>/<sub>2</sub>" × 11" .

**1** Display the data to be printed.

**2** On the [File] menu, click [Print...].

The [Print] dialog box appears.

**3** From [Select Printer], select the printer.

**4** Click [Preferences].

The [Printing Preferences] dialog box appears.

**5** In the [Custom Setting name:] menu on the [Print Settings] tab, select the [Duplex].

**6** On the [Print Settings] tab, click [Add/Change Custom Settings...].

The [Add/Change Custom Settings...] dialog box appears.

**7** Click [Duplex/Booklet] and select the open side.

**8** Click [Save].

The screen returns to the [Printing Preferences] dialog box.

**9** Click [OK].

The screen returns to the [Print] dialog box.

**10** Click [Print].

---

## Storing the Print File

---

Use this function to store a file in the machine, and then print it from the computer or the machine's control panel later.

### ⚠ **Limitation**

- ❑ If data from PostScript3 printer driver is stored in the machine using **[Store File]**, when printing from the machine, it is possible that the data will not print in the intended direction. For details, see *PostScript3*.

**1** Display the data to be printed.

**2** On the **[File]** menu, click **[Print...]**.

The **[Print]** dialog box appears.

**3** From **[Select Printer]**, select the printer.

**4** Click **[Preferences]**.

The **[Printing Preferences]** dialog box appears.

**5** In the **[Job type:]** menu on the **[Print Settings]** tab, select **[Store File]**.

**6** If you want to set **[User name:]**, **[File name:]** and **[Password:]**, click **[Details...]**.

The **[Details...]** dialog box appears.

**7** Set **[User name:]**, **[File name:]**, and **[Password:]**.

**8** Click **[OK]**.

The screen returns to the **[Printing Preferences]** dialog box.

**9** Click **[OK]**.

The screen returns to the **[Print]** dialog box.

**10** Click **[Print]**.

---

## Printing on custom sized paper

---

It is possible to make settings for custom sized paper.

### Important

- ☐ Be sure to load paper in the paper feed tray.

**1** Display the data to be printed.

**2** On the [File] menu, click [Print...].

The [Print] dialog box appears.

**3** From [Select Printer], select the printer.

**4** Click [Properties].

The [Properties] dialog box appears.

**5** In the [Original size:] menu on the [Print Settings] tab, click [Custom paper size...].

The [Custom Paper Sizes] dialog box appears.

**6** Enter the paper size in [Short edge:] and [Long edge:].

### Note

- ☐ Specify [Measurement Unit...] if required.

**7** Select [Place as portrait] or [Place as landscape] according to the paper orientation.

**8** Click [OK].

The screen returns to the [Properties] dialog box appears.

**9** Click [OK].

The screen returns to the [Print] dialog box.

**10** Click [Print].

## Printing on paper with an undetectable size

This machine automatically detects the paper size, however, there are cases where the machine cannot detect the size of the paper. In these cases, follow the procedure below and manually make the desired settings.


### Important

- ☐ Be sure to load paper in the paper feed tray.

### Note

- ☐ If you make these settings frequently, it is convenient to define a default size by selecting **[Tray Paper Size: Paper Feed Tray]** in the Online Print menu on the control panel.

- 4** **1** Press the **[Printer Settings]** key on the printer.

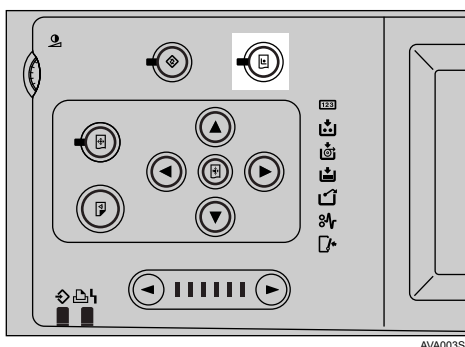

- 2** Press **[Tray Paper Size: Paper Feed Tray]**.

- 3** Select the paper size, and then press **[OK]**.

### Important

- ☐ Select a size that is bigger than the contents to be printed. If the contents are bigger than the paper size, it will cause the roller to get dirty.

- 4** Select the paper size on the computer's printer driver.


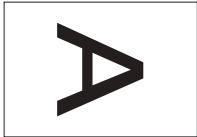





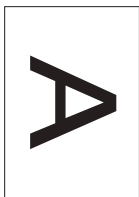
### Important

- ☐ Select the same paper size selected in the **[Tray Paper Size: Paper Feed Tray]** setting on the machine.


- 5** Print from the computer.

## When envelopes cannot be fed

Envelopes cannot be fed in well because the seal may get caught. In that case, you can rotate and print the image by 180 degrees using the rotate function in the printer driver. The following chart shows how the image is rotated.

Paper Feed Direction	Original Image	Rotate: Off	Rotate: 180°
Short Edge Feed	Portrait	← 	← 
	Landscape	← 	← 
Long Edge Feed	Portrait	← 	← 
	Landscape	← 	← 

- 1** Rotate the envelopes 180 degrees and place them in the paper feed tray.

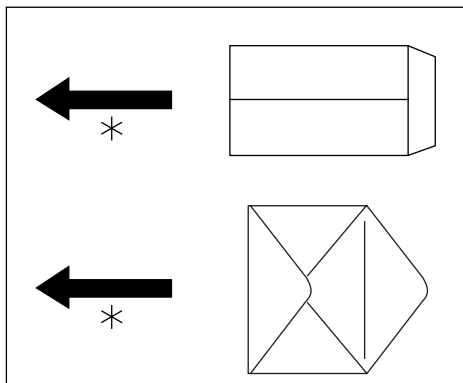

GRENVE1E

4

\*Paper feed direction

- 2** On the printer driver's [Misc.] tab, select [Rotate by 180 degrees].
- 3** Click [OK].  
The screen returns to the [Print] dialog box.
- 4** Click [Print] to start printing.

# Windows NT 4.0 - Various Types of Printing

This section introduces several printing examples from Windows NT 4.0.

## Reference

For details, see the operating instructions that come with your respective application regarding details on settings.

---

## Duplex Printing

---

Prints on both sides of the sheet.

### Limitation

- ☐ Duplex Printing is possible on the following paper sizes only: A4 , B5 JIS  and  $8\frac{1}{2}'' \times 11''$  .

**1** Display the data to be printed.

**2** On the [File] menu, click [Print...].

The [Print] dialog box appears.

**3** From [Name:], select the printer.

**4** Click [Properties].

The [Properties] dialog box appears.

**5** In the [Custom Setting name:] menu.

**6** On the [Print Settings] tab, click [Add/Change Custom Settings...].

The [Add/Change Custom Settings...] dialog box appears.

**7** Click [Duplex/Booklet] and select the opening side.

**8** Click [Save].

The screen returns to the [Properties] dialog box.

**9** Click [OK].

The screen returns to the [Print] dialog box.

**10** Click [OK].

---

## Storing the Print File

---

Use this function to store a file in the machine, and then print it from the computer or the machine's control panel later.

### ⚠ **Limitation**

- ❑ If data from PostScript3 printer driver is stored in the machine using **[Store File]**, when printing from the machine, it is possible that the data will not print in the intended direction. For details, see *PostScript3*.

**1** Display the data to be printed.

**2** On the **[File]** menu, click **[Print...]**.

The **[Print]** dialog box appears.

**3** From **[Name:]**, select the printer.

**4** Click **[Properties]**.

The **[Properties]** dialog box appears.

**5** In the **[Job type:]** menu on the **[Print Settings]** tab, select **[Store File]**.

**6** If you want to set **[User name:]**, **[File name:]**, and **[Password:]**, click **[Details...]**.

The **[Details...]** dialog box appears.

**7** Set **[User name:]**, **[File name:]**, and **[Password:]**.

**8** Click **[OK]**.

The screen returns to the **[Properties]** dialog box.

**9** Click **[OK]**.

The screen returns to the **[Print]** dialog box.

**10** Click **[OK]**.

---

## Printing on custom sized paper

---

It is possible to make settings for custom sized paper.

### Important

- ☐ Be sure to load paper in the paper feed tray.

**1** Display the data to be printed.

**2** On the [File] menu, click [Print...].

The [Print] dialog box appears.

**3** From [Name:], select the printer.

**4** Click [Properties].

The [Properties] dialog box appears.

**5** In the [Original size:] menu on the [Print Settings] tab, click [Custom paper size...].

The [Custom Paper Sizes] dialog box appears.

**6** Enter the paper size in [Long edge:] and [Short edge:].

### Note

- ☐ Specify [Measurement Unit...] if required.

**7** Select [Place as portrait] or [Place as landscape] according to the paper orientation.

**8** Click [OK].

The screen returns to the [Properties] dialog box.

**9** Click [OK].

The screen returns to the [Print] dialog box.

**10** Click [OK].

## Printing on paper with an undetectable size

This machine automatically detects the paper size, however, there are cases where the machine cannot detect the size of the paper. In these cases, follow the procedure below and manually make the desired settings.


### Important

- ☐ Be sure to load paper in the paper feed tray.

### Note

- ☐ If you make these settings frequently, it is convenient to define a default size by selecting **[Tray Paper Size: Paper Feed Tray]** in the Online Print menu on the control panel.

- 4** **1** Press the **[Printer Settings]** key on the printer.

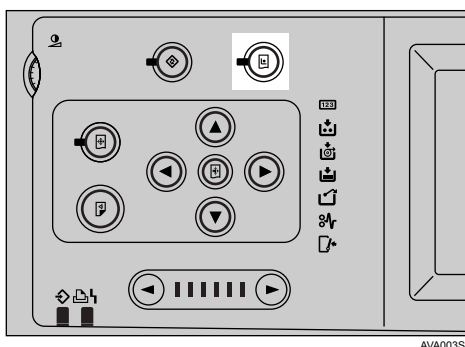

- 2** Press **[Tray Paper Size: Paper Feed Tray]**.

- 3** Select the paper size, and then press **[OK]**.

### Important

- ☐ Select a size that is bigger than the contents to be printed. If the contents are bigger than the paper size, it will cause the roller to get dirty.

- 4** Select the paper size on the computer's printer driver.

### Important






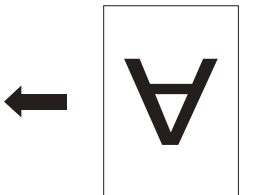
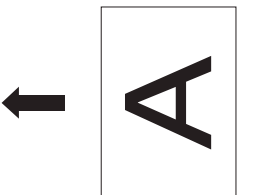
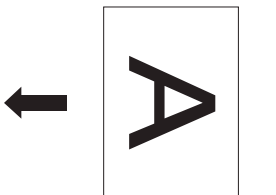
- ☐ Select the same paper size selected in the **[Tray Paper Size: Paper Feed Tray]** setting on the machine.

- 5** Print from the computer.


# When envelopes cannot be fed

Envelopes cannot be fed in well because the seal may get caught. In that case, you can rotate and print the image by 180 degrees using the rotate function in the printer driver.

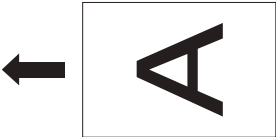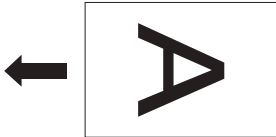The following chart shows how the image is rotated.

Paper Feed Direction	Original Image	Rotate: Off	Rotate: 180°
Short Edge Feed	Portrait		
	Landscape		
Long Edge Feed	Portrait		
	Landscape		

- 1** Rotate the envelopes 180 degrees and place them in the paper feed tray.

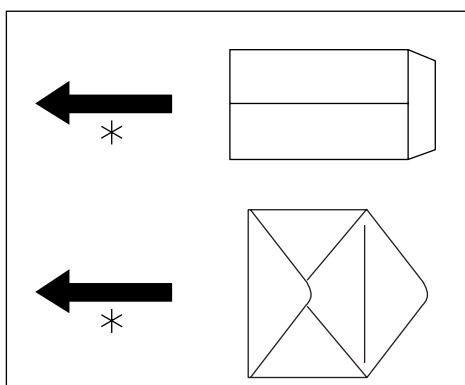

GRENVE1E

4

\*Paper feed direction

- 2** Click [Add/Change Custom Settings...] on the printer driver's [Print Settings] tab.
- 3** On the printer driver's [Misc.] tab, select [Rotate by 180 degrees].
- 4** Click [OK].  
The screen returns to the [Print] dialog box.
- 5** Click [OK] to start printing.


# 5. Troubleshooting

## Error & Status Messages on the Display Panel

Messagges/Seond messages	Descriptions and Solutions
Ethernet board Error.	An error has occurred in the Ethernet module. Turn off the main power switch, and back on again. If the message appears again, contact your sales or service representative.
Wireless card error.	IEEE 802.11b card was not inserted when the printer was turned on, or it was pulled out after the printer turned on. Turn off the printer and check the IEEE 802.11b card is inserted correctly. Then, turn the printer on again. If the message appears again, contact your sales or service representative.
Wireless board error.	An error has occurred in the IEEE 802.11b module. Turn off the main power switch, and back on again. If the message appears again, contact your sales or service representative.
Master Processing...	The master is being made.
Memory switch error.	An error has occurred in the memory unit. Turn off the main power switch, and back on again. If the message appears again, contact your sales or service representative.
Optional RAM error.	An error has occurred in the SDRAM module. Turn off the main power switch, and back on again. If the message appears again, contact your sales or service representative.
Printing...	Data is being printed. Wait until the job is finished.
Parallel I/F board error.	An error has occurred in the parallel I/F board. Turn off the main power switch, and back on again. If the message appears again, contact your sales or service representative.
DIMM value error.	An error has occurred in the PostScript3 bored. Turn off the main power switch, and back on again. If the message appears again, contact your sales or service representative.
HDD board error.	An error has occurred in the HDD board. Turn off the main power switch, and back on again. If the message appears again, contact your sales or service representative.
Print is not finished.	Printing is not finished. Printing has been interrupted. Perform one of the following procedures: <ul style="list-style-type: none"><li>• Press the <b>[Start]</b> key, and printing will restart. Before the print amount display reaches 0, press the <b>[Start]</b> key to print.</li><li>• Press <b>[End Printing]</b> , and printing will stop. The interrupted prints will not be performed.</li></ul>
Ready<Online>	Master Making or print data is on the spool. This is not an error. Press the <b>[Start]</b> key to begin master making or printing.

Messages/Second messages	Descriptions and Solutions
Ready	The Master Making or print data is not in the spool. This is not an error. The message will change when printing starts from the computer.
Resetting Job...	The data spooled is dumped. Wait until the job is finished.
Open the Paper Feed Tray.	The paper feed tray is not set correctly. Set the paper feed tray correctly.
USB interface error.	An error has occurred in the USB interface. Turn off the main power switch, and back on again. If the message appears again, contact your sales or service representative.
Waiting...	Waiting for data from the computer. Wait until the job is finished.

# Printer does not Print

Possible Cause	Solutions
Is the power on?	Turn on the printer.
Does the Start key stay red?	If so, check the error message or warning status on the display and take the required action.
Are there any error messages on the display panel?	Check the error message, and take the required action.
Is the interface cable properly connected?	Connect the interface cable properly. If there are any connectors or screws, make sure that they are fastened securely.
Are you using the correct interface cable?	Be sure to use the correct one. If the cable is damaged or worn, replace it with a new one.
Did you connect the interface cable after turning on the main switch?	Be sure to connect the interface cable before turning on the main switch.
Is the specified paper set?	Set the specified paper in the paper feed tray.
Does the Error indicator stay red?	Check the error message, and take the required action.
Is the Data In indicator blinking or lit?	If it is not, the data does not reach the printer. Check the printer cable connection. Also confirm that the printer port settings are correct.
Can you make a proof print?	If you cannot print a system configuration list or a PS Font List from the printer, the printer might be out of order. Contact your sales or service representative.
Is "Waiting" displayed?	Perform one of the following procedures: <ul style="list-style-type: none"> <li>• Wait until the job is finished.</li> <li>• Cancel by pressing <b>[Job Reset]</b>.</li> </ul>
Is the signal status satisfactory when using IEEE 802.11b interface unit in infrastructure mode?	To check signal status, press the <b>[UserTools]</b> key, and then select <b>[System Settings]</b> . On the <b>[Interface Settings]</b> , select <b>[IEEE 802.11b]</b> , and then select <b>[Wireless LAN Signal]</b> . If signal quality is poor, remove objects that might cause interference.   <b>Note</b> <input type="checkbox"/> You can check signal status only when using IEEE 802.11b interface unit in infrastructure mode.
When using IEEE 802.11b interface unit, is the SSID correctly set?	Check using the machine's control panel that the SSID is correctly set. see "User Tools Menu (System Settings)", <i>Network Guide</i> .
When using IEEE 802.11b interface unit, is the access point correctly set?	Check access point settings when in infrastructure mode. Depending on the access point, client access may be limited by MAC address.  Also, check that there are no problems in transmission between access point and wired clients, and between access point and wireless clients.

Possible Cause	Solutions
When using IEEE 802.11b interface unit, is the LED on the wireless LAN card blinking or lit?	Confirm that the orange LED is lit and the green LED is lit or blinking during transmission.
Is the IEEE 802.11b interface being used in ad hoc mode?	Turn the main power off and back on. See “Turning On the Power”, General Settings Guide. Otherwise, configure <b>[Network]</b> in <b>[Interface Settings]</b> in <b>[System Settings]</b> . See “Setting Up the Machine on a Network”, <i>Network Guide</i> .

If you cannot solve the problem by taking the preceding actions, contact your sales or service representative.

### **Note**

- ☐ If the Data In indicator is not blinking or lit, you can check the computer port settings using the following procedure.

#### ❖ **If the printer is connected to the computer using the interface cable**

- ☐ Check that the printer port setting is correct. For USB, specify USB00(n) as the printer port setting ( “n” is the number of printers on the network).
- ☐ For a parallel port connection, port LPT1 or LPT2 should be set.

#### • **Windows 95/98/Me**

- ① Click the **[Start]** button, point to **[Settings]**, and then click **[Printers]**.
- ② Click the icon of the printer. On the **[File]** menu, click **[Properties]**.
- ③ Click the **[Details]** tab.
- ④ In the **[Print to the following port:]** list, confirm the correct port is selected.

#### • **Windows 2000**

- ① Click the **[Start]** button, point to **[Settings]**, and then click **[Printers]**.
- ② Click the icon of the printer. On the **[File]** menu, click **[Properties]**.
- ③ Click the **[Ports]** tab.
- ④ In the **[Print to the following port(s)]** list, confirm the correct port is selected.

#### • **Windows XP Professional and Windows Server 2003**

- ① Click the **[Start]** button, and then click **[Printers and Faxes]**.
- ② Click the icon of the printer. On the **[File]** menu, click **[Properties]**.
- ③ Click the **[Ports]** tab.
- ④ In the **[Print to the following port(s)]** list, confirm the correct port is selected.

#### • **Windows XP Home Edition**

- ① Click the **[Start]** button, click **[Control Panel]**, click **[Printers and Other Hardware]**, and then click **[Printers and Faxes]**.
- ② Click the icon of the printer. On the **[File]** menu, click **[Properties]**.
- ③ Click the **[Ports]** tab.
- ④ In the **[Print to the following port(s)]** list, confirm the correct port is selected.

- **Windows NT 4.0**







- ① Click the **[Start]** button, point to **[Settings]**, and then click **[Printers]**.
- ② Click the icon of the printer. On the **[File]** menu, click **[Properties]**.
- ③ Click the **[Ports]** tab.
- ④ In the **[Print to the following port(s)]** list, confirm the correct port is selected.



- ❖ **Network Connection**

- ☐ Contact your network administrator.

# Other Printing Problems



5

Status	Possible Causes, Descriptions, and Solutions
Multiple pages are fed through the printer at once.	Remove all paper from the paper feed tray and fan it gently to get air between the sheets. Then, load it back into the paper feed tray.
Cannot print in duplex mode	<p>You cannot use thick paper with duplex printing.</p> <p>Specify one of the following duplex-compatible paper size: A4 , B5 JIS  and 8 1/2" × 11" .</p>
Printing of Duplex data has been canceled.	If different paper sizes are mixed in the data, select A4  , B5 JIS  and 8 1/2" × 11"  from <b>[Fit to paper size]</b> . If using Postscript3 printer driver, originals with different sizes cannot be printed in Duplex mode.
A blank page is automatically printed.	Depending on the application, when printing a document from Postscript3 printer driver with an odd number of pages in duplex mode, a blank page might be added automatically. To avoid this, set <b>[Blank Page Print]</b> to disable in the PS Menu on the control panel.
The image is printed on the reverse side of the paper.	Load paper with the other side facing up.
Paper misfeeds occur frequently.	Use the recommended paper. Avoid using curled, folded, wrinkled, perforated or glossy paper.
The display panel error message stays on after removing the misfed paper.	Open the front cover of the printer and then close it.
A print instruction was issued from the computer, but printing did not start.	User code management may have been set. Ask the administrator about valid user codes. To print, the user code must be entered from the printer driver.
Photo images are coarse.	Some applications reduce print resolution.
Images are cut off or excess is printed.	<p>You may be using paper smaller than the size selected in the application. Use the same size paper as that selected in the application. If you cannot load paper of the correct size, use the reduction function to reduce the image, and then print.</p> <p>See the printer driver Help.</p>
Page layout is not as expected.	<p>Print areas differ depending on the printer used. Information that fits on a single page on one printer may not fit on a single page of another printer.</p> <p>Adjust the <b>[Printable area:]</b> setting on the <b>[Printer Configuration...]</b> tab in the RPCS printer driver.</p> <p>See the printer driver Help.</p>

Status	Possible Causes, Descriptions, and Solutions
It takes a long time to complete a print job.	<p>Photographs and other data intensive pages take a long time for the printer to process, simply wait when printing such data. Changing the following settings with the printer driver may help speed up printing:</p> <ul style="list-style-type: none"> <li>• <b>RPCS</b> Click <b>[Change User Settings...]</b> on the <b>[Print Quality]</b> tab in the <b>[Printer Properties]</b> dialog box, and then select the <b>[Fast]</b> value for <b>[Image processing priority:]</b> on the <b>[Image Adjustments]</b> tab in the <b>[Change User Settings...]</b> dialog box.</li> </ul> <p> <b>Note</b></p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Under Windows 2000/XP and Windows Server 2003, click <b>[Change User Settings...]</b> on the <b>[Print Quality]</b> tab in the <b>[Printing Preferences]</b> dialog box, and then select the <b>[Fast]</b> value for <b>[Image processing priority:]</b> on the <b>[Image Adjustments]</b> tab in the <b>[Change User Settings...]</b> dialog box.</li> <li><input type="checkbox"/> Under Windows NT 4.0, click <b>[Change User Settings...]</b> on the <b>[Print Quality]</b> tab in the <b>[Document Defaults]</b> dialog box, and then select the <b>[Fast]</b> value for <b>[Image processing priority:]</b> on the <b>[Image Adjustments]</b> tab in the <b>[Change User Settings...]</b> dialog box.</li> </ul> <ul style="list-style-type: none"> <li>• <b>PostScript3</b> Select <b>[PostScript (optimize for speed)]</b> for <b>[PostScript output format:]</b> on the <b>[PostScript]</b> tab in the <b>[Printer Properties]</b> dialog box.</li> </ul> <p> <b>Note</b></p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Under Windows 2000/XP and Windows Server 2003, click <b>[Advanced...]</b> on the <b>[Paper/Quality]</b> tab in the <b>[Printing Preferences]</b> dialog box, and then select <b>[PostScript output options : optimize for speed]</b> for <b>[PostScript Options]</b> in the <b>[Advanced...]</b> dialog box.</li> <li><input type="checkbox"/> Under Windows NT 4.0, click <b>[Advanced...]</b> in the <b>[Document Defaults]</b> dialog box, and then select <b>[PostScript output options : optimize for speed]</b> for <b>[PostScript Options]</b> in the <b>[Advanced...]</b> dialog box.</li> </ul> <p>See the printer driver Help.</p>
	<p>The data is so large or complex that it takes time to process. If the <b>Data In</b> indicator is blinking, data is being processed. Simply wait until printing resumes.</p>
	<p>The data is so large or complex that it takes time to process. If the <b>Data In</b> indicator is blinking, data is being processed. Simply wait until printing resumes.</p>
It takes too much time to resume printing.	<p>The printer was in Energy Saver mode. It usually takes time for the machine to return to ready mode. Simply wait until printing resumes. See <i>Operating Instructions</i>.</p>

Status	Possible Causes, Descriptions, and Solutions
Images are printed in the wrong orientation.	The feed orientation you selected and the feed orientation selected in the printer driver's option setup might not be the same. Set the machine's feed orientation and the printer driver's feed orientation accordingly. See the printer driver Help.
<Only when using PostScript3 printer driver under Windows> The data which uses proportional fonts cannot be printed exactly as viewed on the screen.	<ul style="list-style-type: none"> <li>Under Windows 95/98/Me Select <b>[Substitute printer fonts for True Type Fonts when applicable]</b> in the <b>[Fonts]</b> tab.</li> <li>Under Windows 2000/XP and Windows Server 2003 Click <b>[Advanced...]</b> on the <b>[Paper/Quality]</b> tab or on the <b>[Layout]</b> tab to display the <b>[Advanced Options]</b> dialog box. Select <b>[Download as softfont]</b> in <b>[TrueType Font:]</b> under <b>[Graphic]</b>.</li> <li>Under Windows NT 4.0 Click the <b>[Advanced]</b> tab on the <b>[Properties]</b> dialog box. Select <b>[Download as softfont]</b> in <b>[TrueType Font]</b> under <b>[Graphics]</b>.</li> </ul>
<Only when using PostScript3 printer driver under Windows> Combine printing cannot be done as specified.	Make sure that the same orientation is set, as well as the same paper size set in the application. <ul style="list-style-type: none"> <li>Under Windows 95/98/Me, check the <b>[Paper]</b> tab.</li> <li>Under Windows 2000/XP and Windows Server 2003, check the <b>[Layout]</b> tab.</li> <li>Under Windows NT 4.0, check the <b>[Page Setup]</b> tab.</li> </ul>
<Only when using PostScript3 printer driver under Windows> Auto Magnification cannot be done as specified.	If a different size has been set, select the correct paper size and orientation.
<Only when using PostScript3 printer driver under Windows> Printing cannot be done even if the data is being received in a network environment.	<ul style="list-style-type: none"> <li>Windows 95/98/Me Click <b>[Advanced...]</b> on the <b>[PostScript]</b> tab to display the <b>[Advanced PostScript Options]</b> dialog box. Make sure to clear both the <b>[Send CTRL+D after job]</b> check box and the <b>[Send CTRL+D before job]</b> check box.</li> <li>Windows 2000/XP and Windows Server 2003 Make sure to select <b>[No]</b> in both <b>[Send CTRL+D Before Each Job:]</b> and <b>[Send CTRL+D After Each Job:]</b> in the <b>[Device Settings]</b> tab.</li> <li>Windows NT 4.0 Make sure to select <b>[No]</b> in both <b>[Send CTRL+D Before Each Job]</b> and <b>[Send CTRL+D After Each Job]</b> in the <b>[Device Settings]</b> tab.</li> </ul>
<Mac OS only> The printer is not displayed in the Chooser.	Make sure that the printer and the Macintosh are connected in the Apple talk environment.
<Mac OS X only> The printer is not displayed in the Printer list.	
<Macintosh only> It takes a long time for the <b>[Print]</b> dialog box to be displayed.	Depending on the processing speed of the Macintosh system, the dialog box display may take time.

Status	Possible Causes, Descriptions, and Solutions
<Macintosh only> It takes a long time to print from the Macintosh G3 or G4 via a hub.	When the printer is connected to a Macintosh computer equipped with the G3 or G4 processor via a hub, it may take a long time to transfer data on a 100BASE-TX from the Macintosh to the printer.
The same page is being master made many times.	Make sure to clear the <b>[Collate]</b> check box in the <b>[Print]</b> dialog box of the application.  < Windows 2000/XP and Windows Server 2003 only > Even if the check mark is cleared in the <b>[Collated]</b> check box, master making may be done every time a page is going to be printed. In this case, make sure to clear the <b>[collated]</b> check box displayed when selecting <b>[Copy Count]</b> in <b>[Advanced]</b> dialog box of the printer driver.
Fine dot patterns are not printed	<ul style="list-style-type: none"> <li>• <b>RPCS</b> Change the <b>[Dithering:]</b> setting under the <b>[Image Adjustments]</b> tab in the <b>[Change User Settings]</b> dialog box under the <b>[Print Quality]</b> tab in the <b>[Printer Properties]</b> dialog box.</li> <li>• <b>PostScript3</b> Change the <b>[Dithering:]</b> setting in the <b>[Advanced]</b> dialog box under the printer driver's <b>[Print Quality]</b> tab.</li> </ul>
Solid lines are printed as broken lines.	In the RPCS printer driver <b>[Change User Settings]</b> dialog box, change the <b>[Dithering:]</b> setting on the <b>[Image Adjustments]</b> tab. For details, see the printer driver Help.
Two or more sheets are fed together.	In the RPCS printer driver <b>[Change User Settings]</b> dialog box, change the <b>[Dithering:]</b> setting on the <b>[Image Adjustments]</b> tab. For details, see the printer driver Help.
The set option cannot be selected in the print menu.	The option may not be set correctly. <ul style="list-style-type: none"> <li>• <b>Windows95/98/Me</b> Set the option correctly in the <b>[Device Options]</b> tab.</li> <li>• <b>Windows 2000/XP and Windows Server 2003</b> Set the option correctly in the <b>[Device Settings]</b> tab.</li> <li>• <b>Windows NT 4.0</b> Set the option correctly in the <b>[Device Settings]</b> tab.</li> <li>• <b>Mac OS</b> Set the option configuration correctly in <b>[Chooser]</b> in the Apple menu.</li> </ul>

Status	Possible Causes, Descriptions, and Solutions
PDF Direct Print is not executed (PDF file is not printed).	Set the value in <b>[RAM Disk]</b> on the <b>[PS Menu]</b> to 2 MB or more.  <b>Reference</b> For details about RAM Disk, see p.96 “PS Menu”.
	When printing a PDF with a password set, set the password of the PDF file using the <b>[Change PDF Password]</b> menu in <b>[General Features]</b> or Web Image Monitor.  <b>Reference</b> For details about <b>[Change PDF Password]</b> , see p.92 “General Features”. For details about Web Image Monitor, see Help.
	PDF files not allowed to be printed by the PDF file security setting cannot be printed.
As a result of printing using PDF Direct Print, characters are missing or misshapen.	Before printing, embed the font in the PDF file to be printed.
The paper size appears on the control panel and printing is not performed with PDF Direct Print.	When using PDF Direct Print, printing will be performed only when paper of the size set within the PDF file is loaded. When a message indicating a paper size appears, either load paper of the indicated size in the paper tray or perform Form Feed. If <b>[Tray Paper Size: Paper Feed Tray]</b> in the online print feature menu is set to <b>[Auto Detect]</b> , printing proceeds even if the size of the paper loaded in the paper feed tray differs from the page size of the PDF file.
The printing data is left in the machine's input buffer.	Do not use NetWare to configure form feed. Form feed is controlled by the printer driver on Windows. If NetWare form feed is configured, the printer may not print properly. Follow the procedure below to disable form feed according to the operating system used: <ul style="list-style-type: none"> <li>• Under Windows 95/98/Me, clear the <b>[Form feed]</b> check box on the <b>[Printer Settings]</b> tab in the printer properties dialog box.</li> <li>• Under Windows 2000/XP, Windows Server 2003, or Windows NT 4.0, clear the <b>[Form feed]</b> check box on the <b>[NetWare Settings]</b> tab in the printer properties dialog box.</li> </ul>

 **Note**

- ❑ A PostScript error could mean that the PostScript data is erroneous or that there is a lack of memory. Some PostScript errors can be avoided if the memory is expanded. If you still cannot print as expected, consult your sales or service representative. For information on your nearest sales or service representative, consult the store where you purchased this printer.
- ❑ The following is the memory assigned for PostScript.

General memory	128 MB (64 + 64 MB, Factory settings)	192 MB (64 + 128 MB)	320 MB (64 + 256 MB )
Assigned memory	15.0 MB	27.0 MB	47.0 MB



# 6. Using the Control Panel

Though the factory default settings of the printer are suitable for most printing jobs, “Online Print Features” menu gives you access to a number of settings that control basic printer operations. The Online Print Features settings you make are retained even when the printer is turned off.

## **Reference**

For details about settings other than the Online Print Features, see the *Operating Instructions*.

## Online Print Features Menu

The following items are listed in the “Online Parameters” menu.

- General Features
- List / Test Print
- Host Interface
- PS Menu
- Administrator Tools


Functions in the following table can be selected:

Menu	Function menu
General Features	Hold Data-in
	Tray Paper Size: Paper Feed Tray
	Custom Paper Size: Paper Feed Tray
	Print Size Priority
	Cycle Setting
	Memory Over Flow
	Spool Printing
	Change PDF Password
	Print Error Report
List / Test Print	Configuration Page
	PDF Configuration / Font Page
	PS Configuration / Font Page
Host Interface	I/O Buffer
	I/O Timeout
PS Menu <sup>*1</sup>	Data Format
	RAM Disk
	Blank Page Print
Administrator Tools	Return to Defaults

<sup>\*1</sup> Appears when the PostScript3 board is installed.

# Adjusting Online Print Features

- 1** Press the **[User Tools]** key.

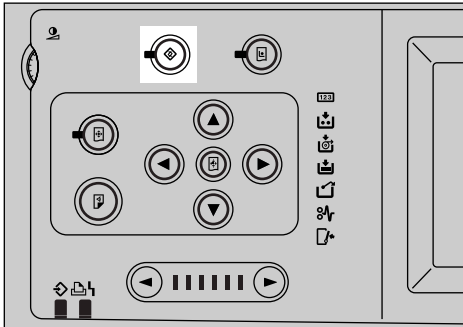

AVA002S

- 2** Press **[Online Print Features]**.
- 3** Select the item you want to change, and then press **[OK]**.
- 4** Make any setting you require, and then press **[OK]**.

**Note**

- ☐ To change the value entered, press the **[Clear/Stop]** key before pressing the **[OK]** key. Then enter the new value.
- ☐ Press **[Cancel]** to return to the previous menu without changing any data.

- 5** Press the **[User Tools]** key to return to the standby display.

**Note**

- ☐ The settings are not canceled even if the main switch is turned off or the **[Clear Modes]** key is pressed.
- ☐ You can also return to the standby display by pressing the **[Exit]** key.

# Online Print Features Settings

## General Features

### ❖ Hold Data- in

You can select online print mode and choose whether the machine accepts or rejects online print data from the computer.



 


#### Note

- ☐ Default: *Off*
- ☐ Set the mode "On" to reject the online print.
- ☐ Set the mode "Off" to accept the online print.

### ❖ Tray Paper Size: Paper Feed Tray

You can select the size of the paper loaded in the paper feed tray.

#### Note

- ☐ Default: *Auto Detect*
- ☐ The machine cannot detect the following paper sizes automatically. When printing on the following sizes, select the desired paper size on "Tray Paper Size: Paper Feed Tray" menu before printing.
  - A5 , HLT , 8K , 16K  

### ❖ Custom Paper Size: Paper Feed Tray

You can specify the custom paper size of the paper loaded in the paper feed tray.

#### Note

- ☐ Default: *210mm x 297mm*

### ❖ Print Size Priority

You can choose to specify the paper size on the printer driver or the control panel.

#### Note

- ☐ Default: *Machine Size*

### ❖ Cycle Setting

You can select the Cycle Setting mode.

#### Note

- ☐ Default: *Auto Cycle*

### ❖ Memory Overflow

You can specify whether or not to print an error report when a memory overflow occurs.

#### Note

- ☐ Default: *Do not Print*

❖ **Spool Printing**

You can select the Spool printing mode.

 **Note**

☐ Default: *Off*

❖ **Change PDF Password**

Set the password for the PDF file executing PDF Direct Print.

 **Note**

☐ Default: *Not Set*

❖ **Print Error Report**

You can specify whether or not to print an error report when a RPCS error or PostScript error occurs.

 **Note**

☐ Default: *Off*

---

## List / Test Print

---

❖ **Configuration page**

You can print the system controller data.

❖ **PDF Configuration Page**

You can print the controller's PDF font list.

❖ **PS Configuration Page**


You can print the controller's PostScript font list.

---

### Printing the configuration page

---

**1** Press the **[User Tools]** key.

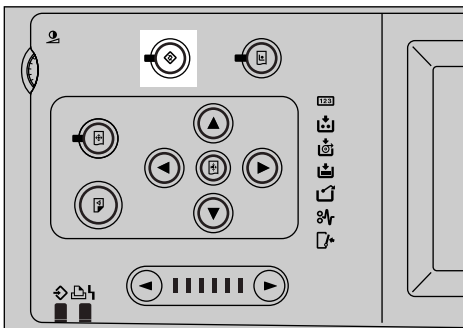

AVA002S

**2** Press **[Online Print Features]**.

**3** Select **[List / Test Print]**.

**4 Press the type of configuration page you want.**

Confirmation message appears.

**5 Press[Yes].**

The configuration page is printed.

---

**Interpreting the configuration page**

---

---

**System Reference**

---

**❖ Printer ID**

Displays the serial number assigned to the board by its manufacturer.

**❖ Firmware Version**

- **System Version**  
Displays the version number of the system firmware.
- **Engine**  
Displays the version number of the engine.
- **Panel Version**  
Displays the version number of the panel.

**❖ Controller Option**

This item(s) appears when the controller option(s) is installed.

**❖ HDD**

Displays the capacity of the HDD.

**❖ Printer Language**

Displays the version number of the Printer Description Language.

**❖ Options**

Displays the optional trays installed.

---

**Paper Input**

---

Displays the settings made under the Print Size menu.

---

**System**

---

Displays the settings made under the System menu.

---

**PS Menu**

---

Displays the settings made under PS Menu.

---

## PDF Menu

---

Displays the settings of PDF Resolution.

---

## Host Interface

---

Displays the settings of I/O Buffer and I/O Timeout.

---

## Network Setup

---

Displays the settings made under the Interface menu.

When DHCP is active on the network, the actual IP address, subnet mask and gateway address appear in parentheses on the configuration page.

---

## IEEE 802.11b

---

Displays the settings of IEEE 802.11b

---

## Interface Information

---

Displays the interface information.

---

## Host Interface

---

### ❖ I/O Buffer

Sets the capacity of the reception buffer.

#### Note

☐ Default: 128 KB

### ❖ I/O Timeout

Sets the time to enable the interface after data stops being received. When the time set here is exceeded, the printer will not receive further data via the interface.

#### Important

☐ If the set time is too short, a time out might occur while one data is being received. As a result, data from another interface might cut in and be printed, or the emulation retrieval might start to replace the emulation before the data is completely received.

#### Note

☐ Default: 15 seconds

---

## PS Menu

---

### ❖ Data Format

You can specify the data format for PostScript print jobs.



#### Note

☐ Default: *Binary Data*

☐ Under Mac OS X, select “TBCP” when you print with a USB connection.

### ❖ RAM Disk

You can select the RAM disk capacity for PostScript.



#### Note

☐ Default: *4 MB*

### ❖ Blank Page Print

Select whether or not to print blank pages.

---

## Administrator Tools

---

### ❖ Return to Defaults

You can reset the settings back to their defaults. However, the “IP Address”, “Network”, and the “Ethernet Speed” settings remain in effect.

## Printing a PDF File Directly

You can send PDF files directly to the printer to print without opening a PDF application.

### ❗ Limitation

- ☐ To use this function, the PostScript3 board must be installed on the printer.
- ☐ This is possible for genuine Adobe PDF files only.
- ☐ Version 1.3, 1.4, and 1.5 PDF files are compatible.
- ☐ Transparency and JBIG2 (functions of PDF version 1.4) are not compatible.
- ☐ PDF version 1.5 only functions are not compatible.
- ☐ When you make the **[Layout]** setting using the printer driver, be sure to select **[Portrait]** or **[Landscape]** according to the actual orientation of the PDF print job.

---

## Printing Method

---

### ❖ Using DeskTopBinder Lite/professional

PDF files registered with DeskTopBinder Lite/professional can be sent directly to the printer for printing.

#### Note

- ☐ The RPCS printer driver must be installed.
- ☐ Use DeskTopBinder Lite on the provided CD-ROM labeled "Document Management Utility". PDF file direct printing is supported only by DeskTopBinder Lite/professional Version 3.1.1.0 or later.
- ☐ PDF Direct Print settings can be made from PDF Direct Print properties.
- ☐ To print password-protected PDF files, you must do the following:
  - Enter the PDF password using PDF Direct Print properties.
  - On the control panel, select **[Change PDF Password]** on the **[Online Print Features]** in the User Tools menu to set the PDF password.

#### Reference

For details, see DeskTopBinder Lite/professional Help.

To check which version of DeskTopBinder Lite/professional you have, see DeskTopBinder Lite/professional Help or the DeskTopBinder Lite Readme file on the provided CD-ROM labeled "Document Management Utility".

### ❖ **Using commands**

From Windows, you can print PDF files directly, using commands such as “ftp” and “lpr”.

### **Reference**

- For details about printing using commands under Windows, see “Printing Files Directly from Windows”, *Network Guide*.

# Specifications

This section contains the machine's electrical and hardware specifications, including information about its options.

Component	Specifications
Resolution	<ul style="list-style-type: none"> <li>• RPCS 400 dpi</li> <li>• PostScript3 400 dpi</li> </ul>
Printing speed	60-135 ppm (Duplex Printing max 120ppm)
Interface	Standard: <ul style="list-style-type: none"> <li>• USB 2.0 interface</li> <li>• Ethernet interface (100BASE-TX/10BASE-T)</li> </ul> Option: <ul style="list-style-type: none"> <li>• IEEE 802.11b wireless LAN interface</li> <li>• IEEE 1284 parallel interface</li> </ul>
Network protocol	TCP/IP, IPX/SPX, NetBEUI <sup>*1</sup> , AppleTalk
Printer language	Standard: RPCS Option: PostScript3
Fonts	Standard: Arial PostScript3 (Option):136 fonts (Type 2:24, Type 14:112)
Memory	128 MB (64 MB + 64 MB)
Operating systems supported by this printer	Windows 95/98/Me/2000/XP Windows Server 2003 Windows NT 4.0 Mac OS 8.6 to 9.2 Mac OS X
Required network cable	100BASE-TX/10BASE-T unshielded twisted-pair (UTP, Category/Type5) cable.

<sup>\*1</sup> To use NetBEUI, use the SmartDeviceMonitor port.

---

## Options

---

### ! Limitation

- ❑ Only one optional interface can be installed in the printer at a time. Therefore, the IEEE 802.11b interface unit and the IEEE 1284 parallel board cannot be installed concurrently.

---

### IEEE 802.11b I/F Unit Type 1

---

#### ❖ Transmission spec:

Based on IEEE 802.11b (wireless LAN)

#### ❖ Protocol:

TCP/IP, NetBEUI, IPX/SPX, AppleTalk

#### Note

- ❑ SmartDeviceMonitor and Web Image Monitor are supported.

#### ❖ Data transfer speed:

Auto select from below speed  
1Mbps, 2Mbps, 5.5Mbps, 11Mbps

#### ❖ Frequency range:

- Inch version:  
2412-2462 MHz (1-11 channels)
- Metric version:  
2412-2472 MHz (1-13 channels)

#### ❖ Transmittable distance:

1Mbps 400 m <sup>\*1</sup>  
2Mbps 270 m <sup>\*1</sup>  
5.5Mbps 200 m <sup>\*1</sup>  
11Mbps 140 m <sup>\*1</sup>

<sup>\*1</sup> These figures are a guideline for outdoor use. In general, the transmittable distance indoors is 10-100 m, depending on environment.

#### ❖ Transmission mode:

802.11 ad hoc, ad hoc, and infrastructure mode

---

## IEEE 1284 Parallel Board Type 1

---

❖ **Transmission spec.:**

IEEE 1284

❖ **Required cable**

Standard IEEE 1284 compliant Micro Centronics 36 pin cable



**Note**

☐ Use the cable supplied with this machine.

---

## PostScript3 Board Type 2

---



**Reference**

*PostScript3*

---

## Memory Unit Type C 128MB/256MB

---

❖ **Module Type:**

SO-DIMM (Small Outline Dual-in-line Memory Module)

❖ **Memory Type:**

SDRAM (Synchronous Dynamic RAM)

❖ **Number of Pins:**

144 pins

---

## Extension HDD Type 1

---

❖ **Data Capacity**

40 GB or more

# INDEX

## A

---

Administrator Tools, 96

## B

---

Bidirectional transmission, 38  
Blank Page Print  
    *PS Setting*, 96

## C

---

Canceling a Print Job, 57  
CD-ROM, 48  
Channel, 22  
Common key operations, 5  
Communication Mode, 22  
Configuration page  
    *List / Test Print*, 93  
Connecting the Machine, 12  
Controller Option  
    *System Reference*, 94  
Control panel, 3  
Cycle Setting Mode  
    *Printer Settings*, 7

## D

---

Data Format  
    *PS Setting*, 96  
Data In indicator, 83  
DeskTopBinder Lite -  
    SmartDeviceMonitor for Client, 45  
Display panel, 5  
Display panel, Messages, 77

## E

---

Effective Protocol, 20  
End Printing key  
    *Display Panel*, 5  
Error, 77  
Ethernet Speed, 21

## F

---

Firmware Version  
    *System Reference*, 94  
Fonts, 99

## G

---

Gateway Address, 20  
General Features, 89, 92

## H

---

Hard Disk  
    *System Reference*, 94  
Hold Data- in key, 3  
Host Interface, 89, 95  
    *Interpreting the configuration page*, 95

## I

---

IEEE 1284 Parallel Board Type 1, 101  
IEEE 802.11b, 12, 14  
    *Interpreting the configuration page*, 95  
IEEE 802.11b I/F Unit Type 1, 100  
Interface, 99  
Interface Information  
    *Interpreting the configuration page*, 95  
Interface Setting/Network, 20  
Interface Settings, 22  
Interpreting the configuration page  
    *List / Test Print*, 94  
I/O Buffer  
    *Host Interface*, 95  
I/O Timeout  
    *Host Interface*, 95  
IP Address, 20

## J

---

Job Reset key  
    *Display Panel*, 5

## L

---

LAN Type, 21  
List / Test Print, 89, 93

## M

---

Macintosh  
    *Canceling a Print Job*, 57  
    *setting up, printer driver*, 56  
Mac OS  
    *PostScript3 printer driver, installing*, 40  
Mac OS X  
    *PostScript3 printer driver, installing*, 42  
Memory, 99  
Messages, 77

## N

---

- Network Cable, 99
- Network protocol, 99
- Network Setup
  - Interpreting the configuration page, 95*
- NW Frame Type, 21

## O

---

- Online Print Features Menu, 89
- Online Print Features Settings, 92
- Online Print Paper Size
  - Printer Settings, 6*
- Operating system, 99
- Options, 100
  - System Reference, 94*

## P

---

- PageMaker, 47
- Paper Input
  - Interpreting the configuration page, 94*
- Parallel interface Cable, 13
- Parallel interface port, 12
- PDF Direct Print, 97
- PDF Menu
  - Interpreting the configuration page, 95*
- PostScript3 Board Type 2, 101
- PostScript3 printer driver, 49
  - Mac OS, installing, 40*
  - Mac OS X, installing, 42*
  - PostScript 3 printer driver, installing, 33*
  - Windows 2000/XP and Windows Server 2003, installing, 34*
  - Windows 95/98/Me, installing, 33*
  - Windows NT 4.0, installing, 36*
- Printer driver
  - Auto Run, 24*
  - installing, USB connection, 44*
  - PostScript3, 48*
  - Printer properties, Windows 2000/XP and Windows Server 2003, 52*
  - Printer properties, Windows 95/98/Me, 51*
  - Printer properties, Windows NT 4.0, 54*
  - Quick Install, 25*
  - RPCS, 48*
  - setting up, Macintosh, 56*
- Printer ID
  - System Reference, 94*
- Printer Language, 99
  - System Reference, 94*

- Printer Settings, 6
- Printer Settings key, 3
- Printer Utility for Mac, 49
- Printing a PDF File Directly
  - PDF Direct Print, 97*
- Printing Method
  - PDF Direct Print, 97*
- Printing speed, 99
- PS Menu, 89, 96
  - Interpreting the configuration page, 94*

## Q

---

- Quick Install, 25

## R

---

- RAM Disk
  - PS Setting, 96*
- Resolution, 99
- Return to Defaults, 23
- RPCS, 49
  - Windows 2000/XP and Windows Server 2003, installing, 27*
  - Windows 95/98/Me, installing, 27*
  - Windows NT 4.0, installing, 27*

## S

---

- SmartDeviceMonitor for Admin, 46, 49
- SmartDeviceMonitor for Client, 49
- Software
  - Quick Install, 25*
- Specifications, 99
- SSID Setting, 22
- Start key, 4
- System
  - Interpreting the configuration page, 94*
- System Reference
  - Interpreting the configuration page, 94*

## T

---

- Transmission Speed, 23
- Troubleshooting, 77

## U

---

- USB connection
  - printer driver, installing, 44*
- User Tools key, 3

## W

---

WEP (Encryption) Setting, 23

Windows 2000

*canceling a job, 57*

Windows 2000/XP and Windows Server  
2003

*PostScript3 printer driver, installing, 34*

*printer properties, printer driver, 52*

*RPCS, installing, 27*

Windows 95/98/Me

*canceling a job, 57*

*PostScript3 printer driver, installing, 33*

*printer properties, printer driver, 51*

*RPCS, installing, 27*

Windows NT 4.0

*canceling a job, 57*

*PostScript3 printer driver, installing, 36*

*printer properties, printer driver, 54*

*RPCS, installing, 27*

Windows XP

*canceling a job, 57*

Wireless LAN Signal, 23



## Operating Instructions Printer Reference

