

## Errata for *Operating Instructions*

Page	Error	Correction
p.6 “Indicators”	6. Printer error indicator 7. Data In indicator	6. Printer error indicator On: An error has occurred. Master Making and printing stops. Off: Normal status 7. Data In indicator On: Data waiting for Master Making and printing is in the machine. Blinking: Data is being received, or Master Making or printing is in progress. Off: Master Making and printing are completed.

(For C2640750, C2648697, C2648698)

Printed in Japan  
Copyright©2006  
C264-8625