

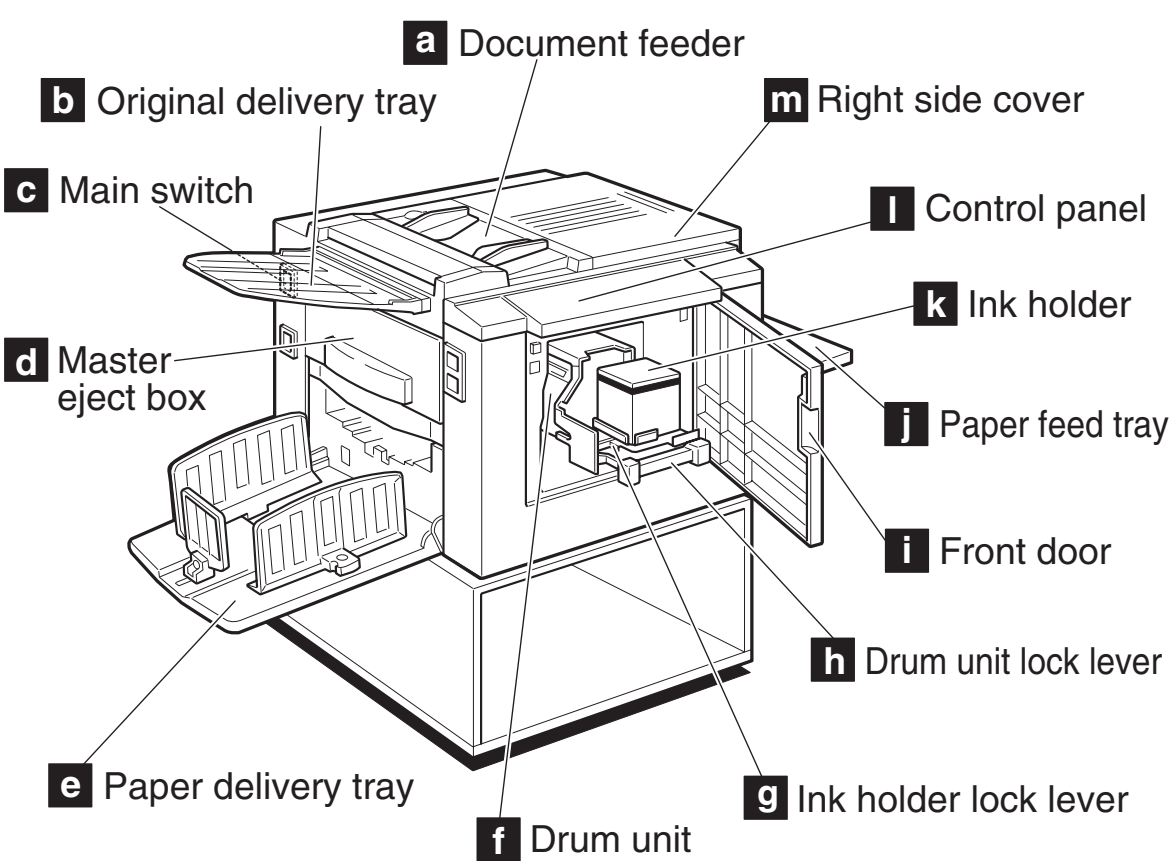


OPERATING INSTRUCTION CHART


Auto Cycle Printing (see p.28)

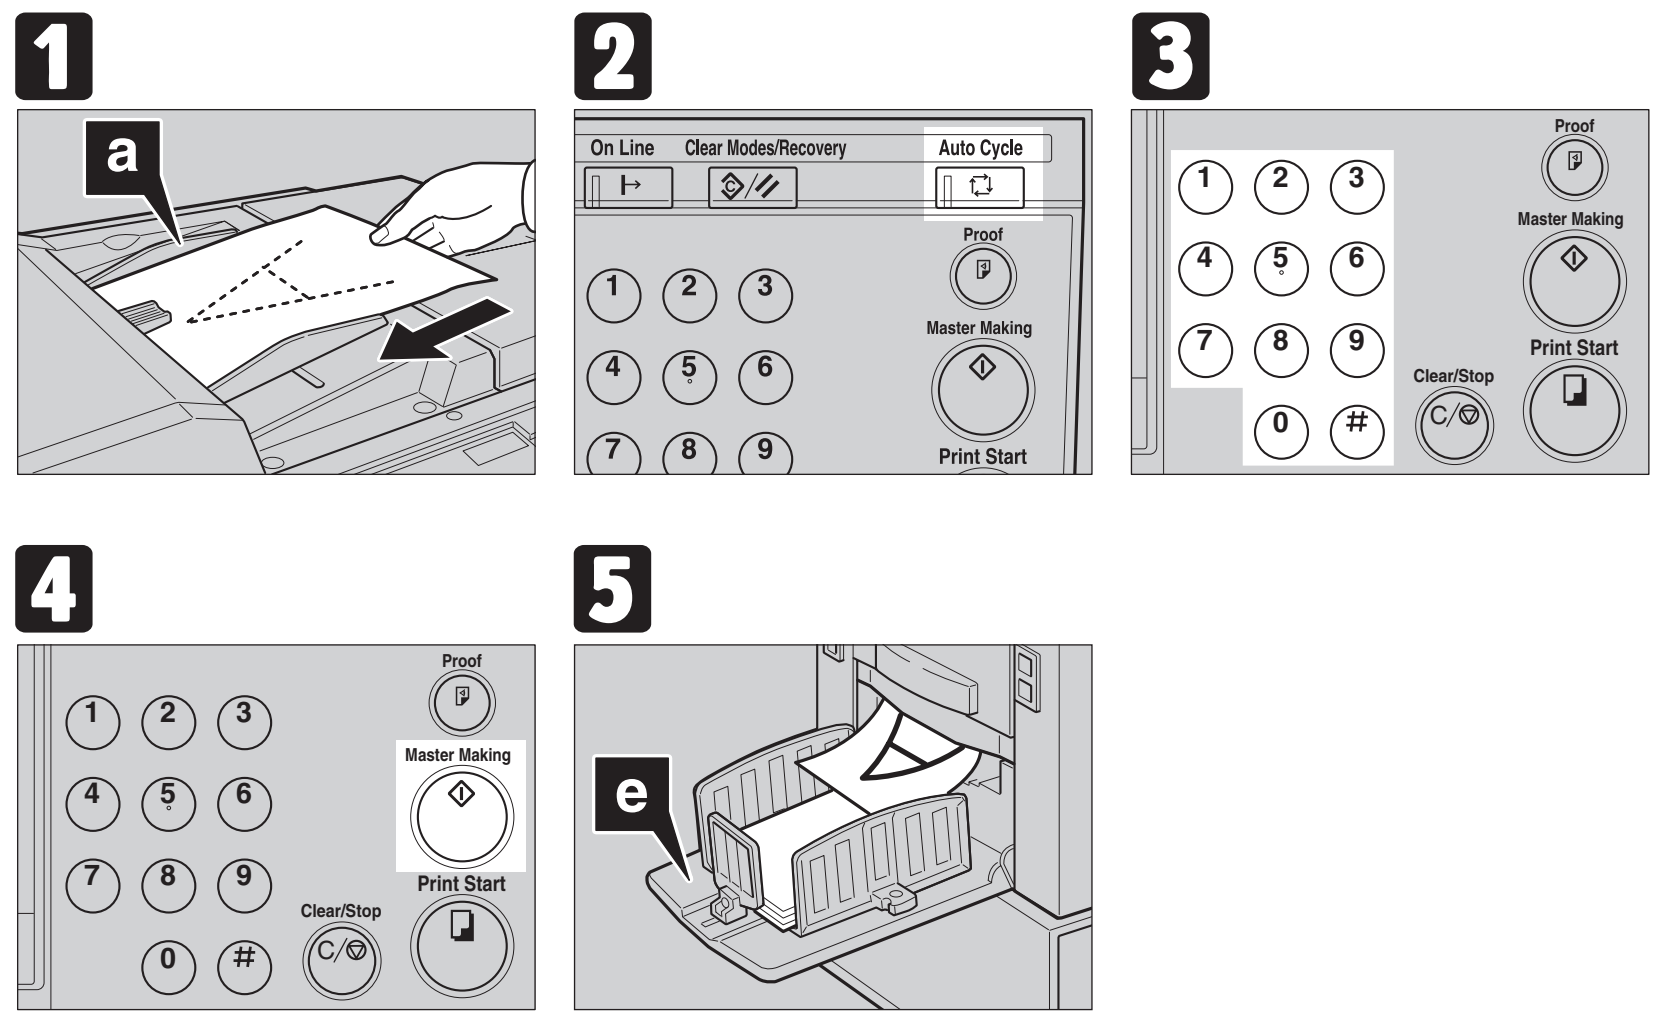


Load New Ink (see p.39)

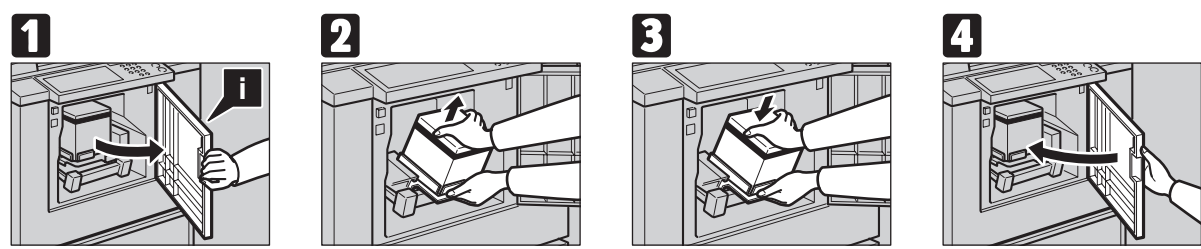


Load New Master Roll (see p.41)

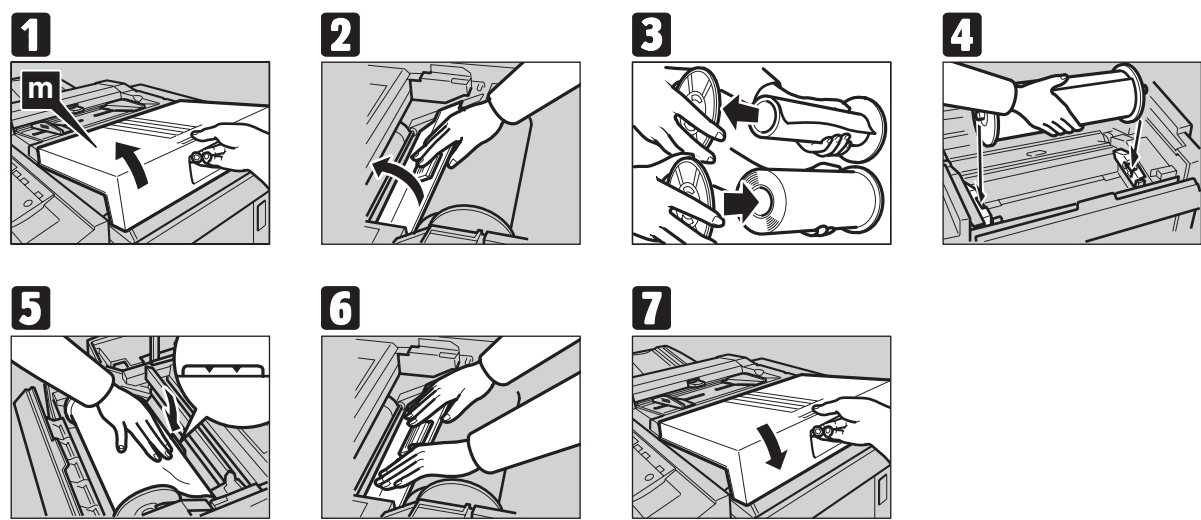


Empty the Master Eject Box (see p.57)

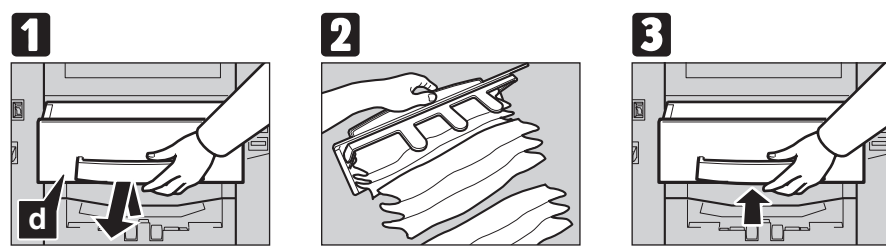

+ A Load More Paper (see p.37)

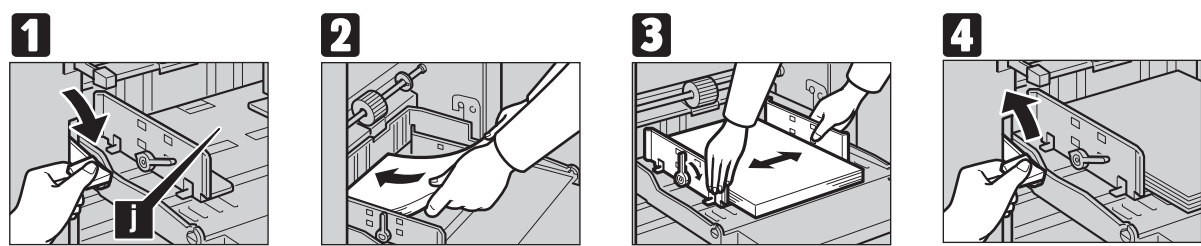

Cover or Unit Door is Open (see p.55)

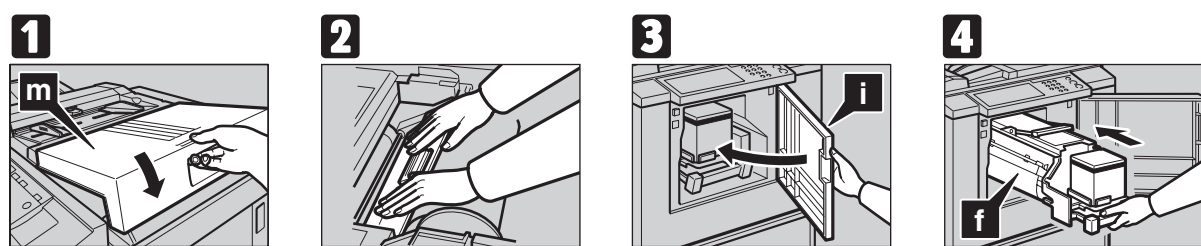

Clearing Misfeeds (see p.45)

