

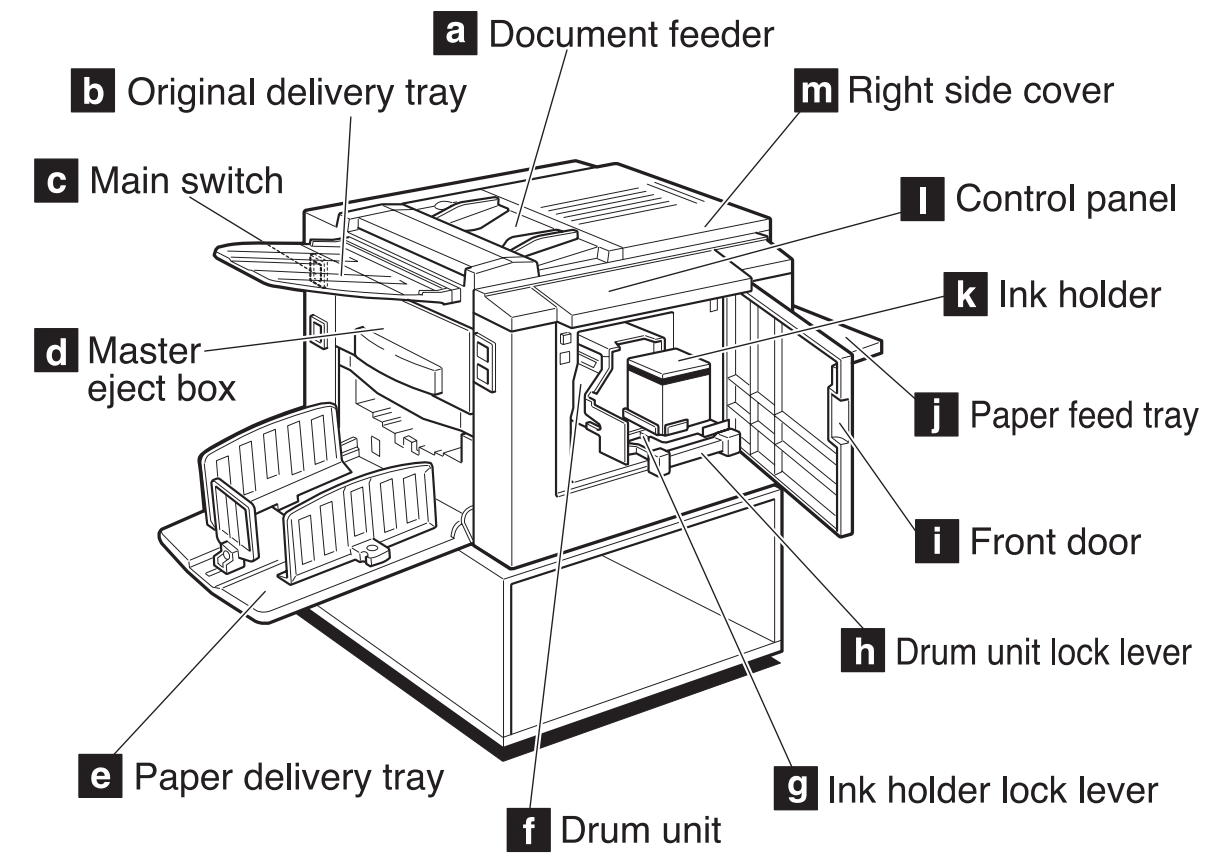


OPERATING INSTRUCTION CHART


Standard Printing (see p.15)

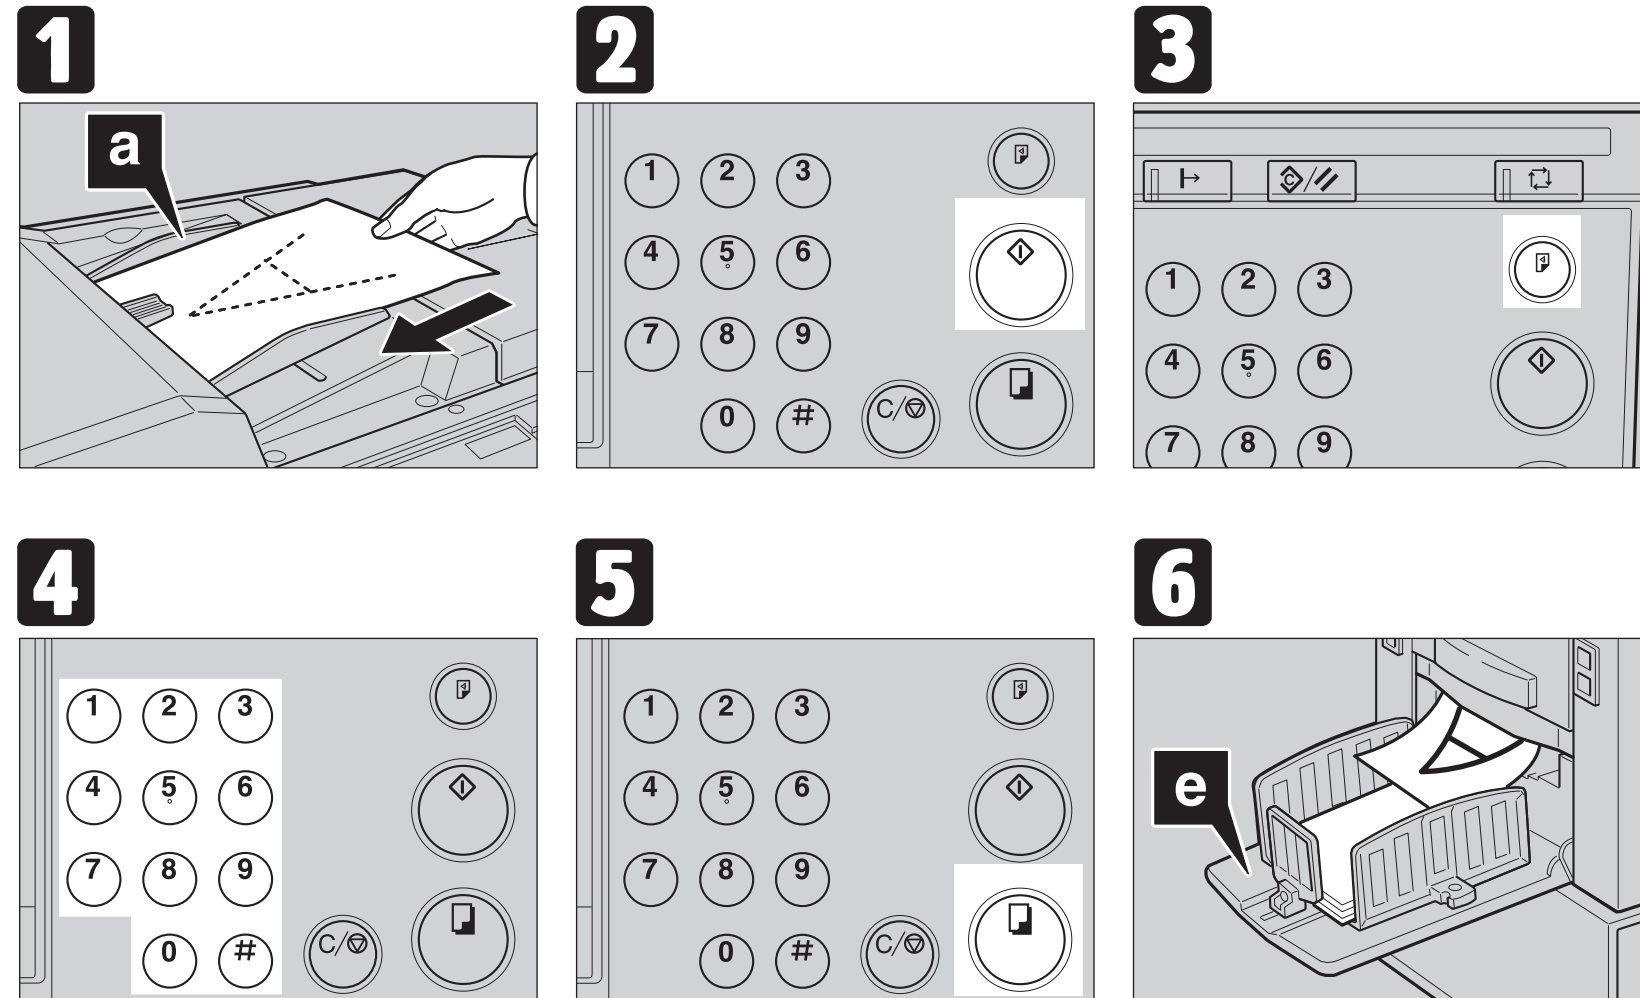


Load New Ink (see p.39)

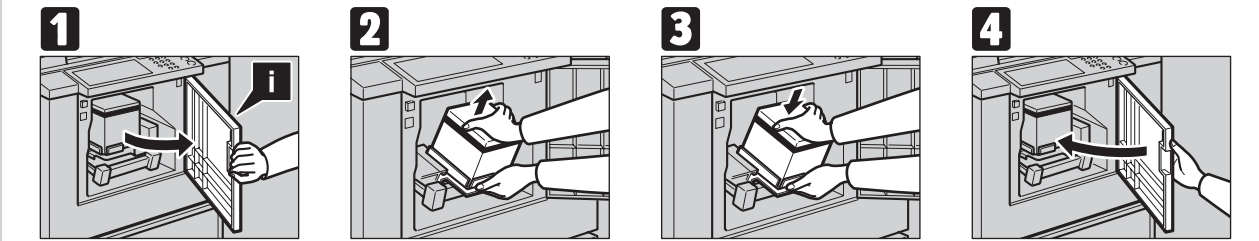


Load New Master Roll (see p.42)

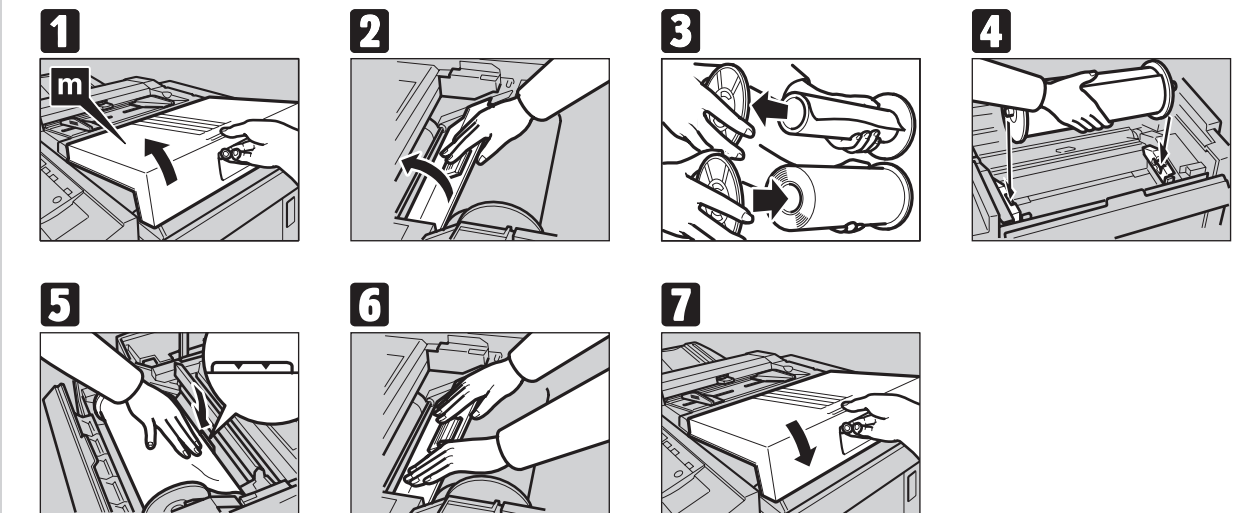


Empty the Master Eject Box (see p.60)

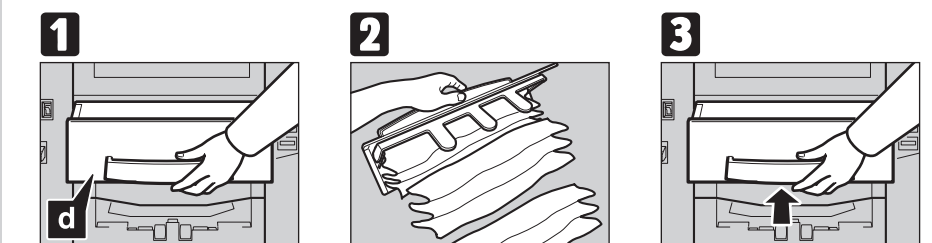

+ A Load More Paper (see p.37)

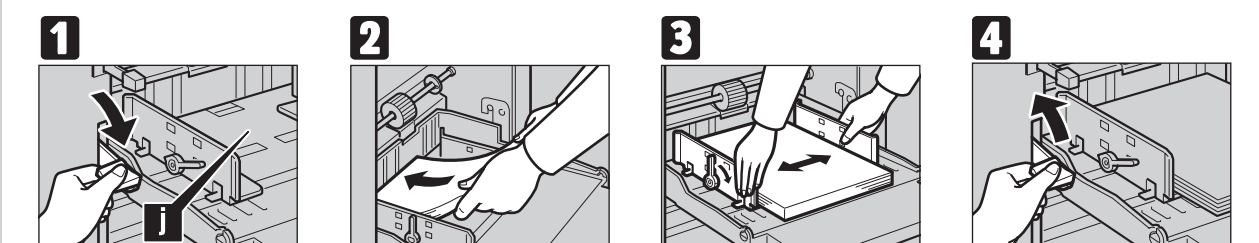

Cover or Unit Door is Open (see p.58)

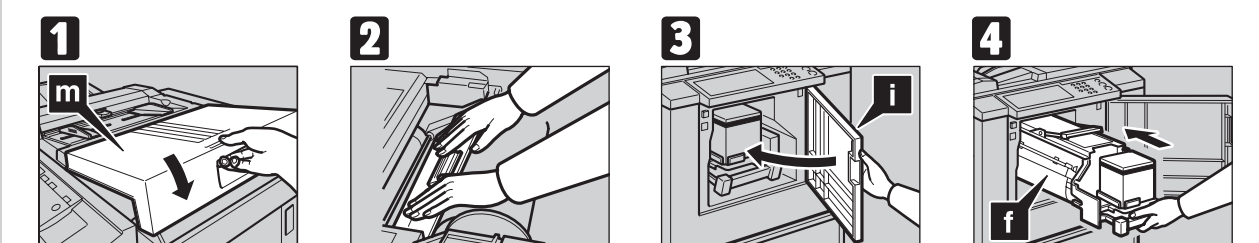

Clearing Misfeeds (see p.45)

