



RIGOH



# Priport JP8000



**Operating Instructions** 














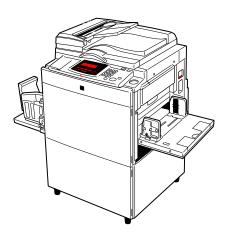

Read this manual carefully before you use this product and keep it handy for future reference.

For safety, please follow the instructions in this manual.













Priport JP8000 Operating Instructions



#### RICOH COMPANY, LTD.

15-5, Minami Aoyama 1-chome, Minato-ku, Tokyo 107-8544, Japan Phone: +81-(0)3-3479-3111

## **Overseas Affiliates** Spain RICOH CORPORATION RICOH ESPAÑA S.A. 5 Dedrick Place West Caldwell, New Jersey 07006 Phone: +1-973-882-2000

#### The Netherlands

U.S.A.

RICOH EUROPE B.V. Groenelaan 3, 1186 AA, Amstelveen Phone: +31-(0)20-5474111

#### **United Kingdom**

RICOH UK LTD. Ricoh House, 1 Plane Tree Crescent, Feltham, Middlesex, TW13 7HG Phone: +44-(0)20-8261-4000

#### Germany

RICOH DEUTSCHLAND GmbH Mergenthalerallee 38-40, 65760 Eschborn Phone: +49-(0)6196-9060

#### France

RICOH FRANCE S.A. 383, Avenue du Général de Gaulle BP 307-92143 Clamart Cedex Phone: +33-(0)1-40-94-38-38 Avda. Litoral Mar, 12-14, 08005 Barcelona Phone: +34-(0)93-295-7600

#### Italy

RICOH ITALIA SpA Via della Metallurgia 12, 37139 Verona Phone: +39-045-8181500

#### Hong Kong

 
RICOH HONG KONG LTD. 21/F., Tai Yau Building, 181, Johnston Road, Wan Chai, Hong Kong Phone: +852-2862-2888

#### Singapore

RICOH ASIA PACIFIC PTE.LTD. 260 Orchard Road, #15-01/02 The Heeren, Singapore 238855 Phone: +65-830-5888

Printed in The Netherlands EE (GB) C235-8600









#### Introduction

This manual contains detailed instructions on the operation and maintenance of this machine. To get maximum versatility from this machine all operators should carefully read and follow the instructions in this manual. Please keep this manual in a handy place near the machine.

Please read the Safety Information before using this machine. It contains important information related to USER SAFETY and PREVENTING EQUIPMENT PROBLEMS.



#### Notes:

Some illustrations might be slightly different from your machine.

Certain options might not be available in some countries. For details, please contact your local dealer.

Two kinds of size notation are employed in this manual. With this machine refer to the metric version.

For good print quality, Ricoh recommends that you use genuine Ricoh master and ink.

Ricoh shall not be responsible for any damage or expense that might result from the use of parts other than genuine Ricoh parts in your Ricoh office product.

#### **Power Source**

220 - 240V, 50/60Hz, 1.5A or more

 
Please be sure to connect the power cord to a power source as above. For details about power source,  $\Rightarrow$  P.200 "Power Connection".















## ( (

**Declaration of Conformity** 

"The Product complies with the requirements of the EMC Directive 89/336/EEC and the Low Voltage Directive 73/23/EEC."

In accordance with IEC 60417, this machine uses the following symbols for the main power switch:

means POWER ON.

O means POWER OFF.











## **Safety Information**

When using your equipment, the following safety precautions should always be followed.

## **Safety During Operation**

In this manual, the following important symbols are used:

#### **⚠ WARNING**

Indicates a potentially hazardous situation which, if instructions are not followed, could result in death or serious injury.

#### **A CAUTION:**

Indicates a potentially hazardous situation which, if instructions are not followed, may result in minor or moderate injury or damage to property.

#### **↑ WARNING:**

- Connect the power cord directly into a wall outlet and never use an extension cord
- Disconnect the power plug (by pulling the plug, not the cable) if the power cable or plug becomes frayed or otherwise damaged.
- To avoid hazardous electric shock, do not remove any covers or screws other than those specified in this manual.
- Turn off the power and disconnect the power plug (by pulling the plug, not the cable) if any of the following conditions exists:
  - You spill something into the equipment.
  - You suspect that your equipment needs service or repair.
  - Your equipment's cover has been damaged.







 




#### **A CAUTION:**

- Protect the equipment from dampness or wet weather, such as rain, snow, and so on.
- Unplug the power cord from the wall outlet before you move the equipment. While moving the equipment, you should take care that the power cord will not be damaged under the equipment.
- When you disconnect the power plug from the wall outlet, always pull the plug (not the cable).
- Do not allow paper clips, staples, or other small metallic objects to fall inside the equipment.
- For environmental reasons, do not dispose of the equipment or expended supply waste at household waste collection points. Disposal can take place at an authorized dealer or at appropriate collection sites.
- Be careful not to cut yourself on any sharp edges when you reach inside the machine to remove misfed sheets of paper or masters.
- Our products are engineered to meet high standards of quality and functionality, and we recommend that you only use the expendable supplies available at an authorized dealer.









## **How to Read This Manual**

#### **Symbols**

In this manual, the following symbols are used:

#### **MARNING:**

This symbol indicates a potentially hazardous situation that might result in death or serious injury when you misuse the machine without following the instructions under this symbol. Be sure to read the instructions, all of which are described in the Safety Information section.

#### **⚠** CAUTION:

This symbol indicates a potentially hazardous situation that might result in minor or moderate injury or property damage that does not involve personal injury when you misuse the machine without following the instructions under this symbol. Be sure to read the instructions, all of which are described in the Safety Information section.

\* The statements above are notes for your safety.

### **#**Important

If this instruction is not followed, paper might be misfed, originals might be damaged, or data might be lost. Be sure to read this.

### Preparation

This symbol indicates the prior knowledge or preparations required before operating the machine.

#### Note

This symbol indicates precautions for operation, or actions to take after misoperation.

#### Limitation

This symbol indicates numerical limits, functions that cannot be used together, or conditions in which a particular function cannot be used.

#### **₽** Reference

This symbol indicates a reference.

. 1

Keys that appear on the machine's display panel.

Keys built into the machine's operation panel.












## **Making Prints**

Before making prints using this machine, you have to make a master by pressing the [Start] key. When you press the [Start] key, the machine scans the original image and makes a master. This procedure describes how to make basic prints.

Place your originals in one of the following two ways:


Placing originals on the exposure glass

1 Place a single page face down.

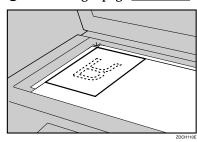


Inserting originals in the optional document feeder


• Insert a stack of originals <u>face</u> up.

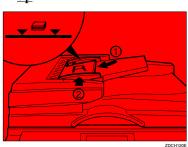

Press the [Start] key.

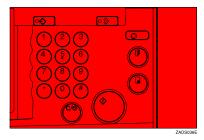

Press the [Proof] key.

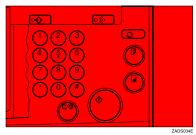

Check the print image.

### 

 
For changing the image position,  $\Rightarrow$  P.23 "Adjusting the Position of Printed Images".





To increase the image density, press the [ ◀] key. ⇒ P.24 "Adjusting the Image Density of Prints".












To decrease the image density, press the  $[ \blacktriangleright ]$  key.  $\Rightarrow$  P.24 "Adjusting the Image Density of Prints".

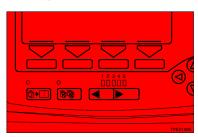

**4** Enter the desired number of prints with the number keys.

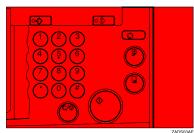

Press the [Print] key.

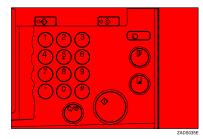

When the print job has finished, press the [Clear Modes/Energy Saver] key. Previously entered job settings will be cleared.











## What You Can do with this Machine

Below is a quick summary of this machine's features and where to look in this manual for more information.

- **♦ Standard Printing** ⇒ P.19 "Standard Printing".
- **♦ Energy Saver Mode**⇒ P.22 "Energy Saver Mode"
- **♦ Adjusting the Print Image Position**⇒ P.23 "Adjusting the Position of Printed Images".

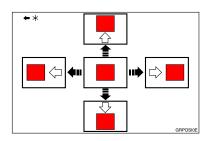


- \*. Paper feed direction
- **♦ Adjusting the Print Image Density** ⇒ P.24 "Adjusting the Image Density of Prints".
- **♦ Tint Mode**⇒ P.25 "Tint Mode".

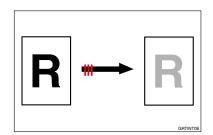

**♦ Changing the Printing Speed**⇒ P.26 "Changing the Printing Speed".


#### Reducing and Enlarging Using Preset Ratios

⇒ P.28 "Reducing and Enlarging Using Preset Ratios".

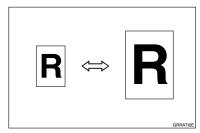


#### Auto Magnification

⇒ P.30 "Auto Magnification".

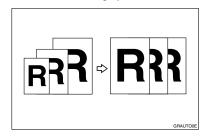

#### Zoom

⇒ P.33 "Zoom".

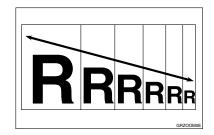











Directional Magnification (%)

 $\Rightarrow$  P.35 "Directional Magnification (%)".

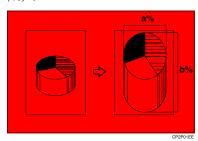

Directional Magnification (Size)

 $\Rightarrow$  P.37 "Directional Magnification (Size)".

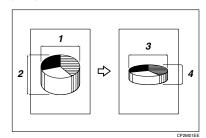


Erasing Center and Edge Margins

⇒ P.39 "Erasing Center and Edge Margins".

#### Edge Erase

 ⇒ P.40 "Edge Erase".



Printing on Various Kinds of Paper

⇒ P.41 "Printing onto Various Kinds of Paper".

### Selecting Original Modes

⇒ P.44 "Selecting Original Modes".

#### Economy Mode


⇒ P.48 "Economy Mode".

#### Auto Cycle

⇒ P.49 "Auto Cycle".


#### All Class Mode

⇒ P.50 "All Class Mode".

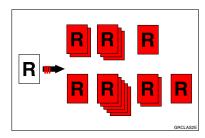


#### Auto Class Mode

⇒ P.52 "Auto Class Mode".

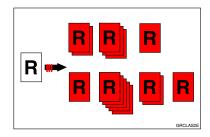

#### Manual Class Mode

 $\Rightarrow$  P.55 "Manual Class Mode with One Original".

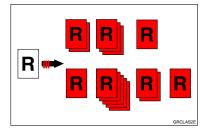













#### Manual Class Mode with 2 or More Originals

 $\Rightarrow$  P.57 "Manual Class Mode with 2 or More Originals".

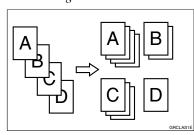


#### Class Mode

⇒ P.59 "Class Mode".

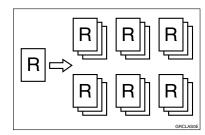


#### Combining Originals

⇒ P.61 "Combine Originals".

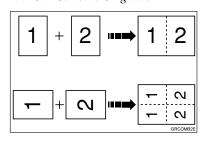

#### **♦** Auto Combine Mode

⇒ P.66 "Auto Combine Mode".

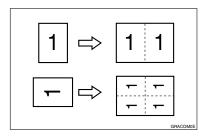

#### Skip Feed Printing

⇒ P.68 "Skip Feed Printing".

#### Programs

⇒ P.70 "Programs".

#### **❖** Security Mode


 $\Rightarrow$  P.73 "Security Mode".

### Quality Start Mode

⇒ P.74 "Quality Start Mode".

#### Job Separation

 $\Rightarrow$  P.76 "Job Separation".

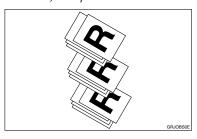

#### Conserving the Master

 $\Rightarrow$  P.78 "Conserving the Master".

#### On Line Printing


 $\Rightarrow$  P.79 "On Line Printing".

#### Making Color Prints

⇒ P.128 "Making Color Prints".

#### Printing in Two Colors

 $\Rightarrow$  P.130 "Printing in Two Colors".

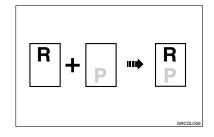


#### Image Rotation

 $\Rightarrow$  P.81 "Image Rotation".

#### Make-up Printing

 ⇒ P.93 "Make-up Printing".













## **♦** Merging Images

 
 $\Rightarrow$  P.104 "Image Overlay".

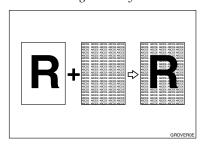




#### Data Stamp

⇒ P.107 "Date Stamp".

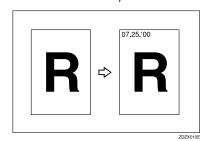


#### Page Stamp

 $\Rightarrow$  P.109 "Page Stamp".

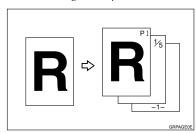


### Stamp


 $\Rightarrow$  P.112 "Stamp".

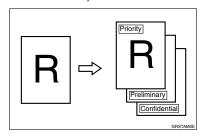

### **♦** Memory Combine

 
 $\Rightarrow$  P.114 "Memory Combine".




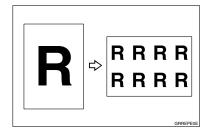

### Sorting Prints into Sets

 ⇒ P.133 "Sort/Class Sort".

 


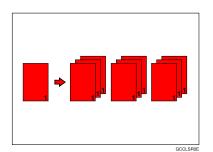















**♦ Original Storage** ⇒ P.99 "Original Storage".

 **♦ Storage Overlay** ⇒ P.104 "Image Overlay".

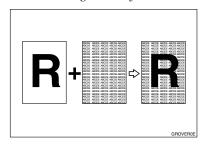

















## **TABLE OF CONTENTS**

Machine Exterior	-
Machine Interior	2
Options	4
Operation Panel	6
Panel Display Layout	
1. Operation	
Print Paper 1	1-
Originals 1	13
Printing Preparations	1 5
Entering a User Code to Use the Machine 1	18
Standard Printing	
Energy Saver Mode	22
Adjusting the Position of Printed Images	2;
Adjusting the Image Density of Prints	24
Tint Mode	2!
Changing the Printing Speed 2	2(
Stopping a Multi-print Run  Stopping a Multi-print Run to Print Another Original	27
Reducing and Enlarging Using Preset Ratios 2	28
Auto Magnification 3	3(
Zoom 3	
Directional Magnification (%)	
Directional Magnification (Size)	
Erasing Center and Edge Margins 3	
Edge Erase	1(

 








Printing onto various Kinds of Paper	
Printing onto Thick Paper	
Printing onto Standard Paper	
Printing onto Envelopes Printing onto Special Kinds of Paper	
·	
Selecting Original Modes	44
Letter/Photo Mode PrintingPhoto Mode Printing	
Pencil Mode Printing	
Economy Mode	
Auto Cycle	
All Class Mode	
Auto Class Mode	52
Manual Class Mode with One Original	55
Manual Class Mode with 2 or More Originals	57
Class Mode	59
Combine Originals	61
Auto Combine Mode	
Skip Feed Printing	68
Programs	70
Storing a Program	70
Protecting a Program	
Removing Program Protection	
Recalling a Program	
Security Mode	
Quality Start Mode	
Using Quality Start Manually	
Job Separation	76
Conserving the Master	78
On Line Printing	79
Auto On Line	
Image Rotation	
Make-up Printing Features	
Main Features	
Make-up Modes for Designated Areas	82
Make-up Modes for Outside Designated Areas  Background Patterns	
Command Sheets for Make-Up Printing	86
Making a Command Sheet	
Command Sheets and Finished Prints	









Make-up Printing	93
Make-up Samples	96
Original Storage	99 101 101
Image Overlay	104 105 105
Date Stamp	
Page Stamp	
Stamp	
Memory Combine	115
2. Optional Functions	
Optional Document Feeder  Originals	123 124 125
Color Printing Using the Optional Color Drum	<b>128</b> 128 128
Changing the Drum Size	132
Sort/Class Sort	
SortClass Sort	
3. Combination Chart	
Combination Chart	137











## 4. User Tools

  Accessing the User Tools	139
User Tools Menu	
1. System	
2. Set Operat'n Mode	
4. Mode Setting	
5. Stamp	
6. Administrator Mode	
7. On Line Mode	
User Tool Menus in Detail	154
1-6 Time Setting	154
3-4 Reproduction Ratio	154
3-5 Class Enter No	155
3-11 Margin Erase Area	156
4-11 No. of Skip Feed	
4-14 No. of Q.start	
4-19 Type of Paper	
5-4 Stamp Position	
5-7 Position (Date)	
5-10 Position (Page)	162
5-11 Make/Chg. Pattern	163
6-1 Check Counter	
6-5 Chg. User Code	
6-6 Del. User Code	
5. Troubleshooting	
If Your Machine does not Operate as You Want	169
If You Cannot Make Prints as You Want	172
Combine Originals Mode	172
Loading Paper	173
% Clearing Misfeeds	174
"% + A" Paper Misfeeds in the Paper Feed Section	
"% + A + B" Paper Misfeeds in the Paper Feed Section	
"% + B" Paper or Master Wrapped around the Drum	176
"औr + C" Paper Misfeeds in the Paper Exit Section	178
"% + D" Master Misfeeds in the Master Feed Section	
"% + D + B" Master Misfeeds in the Master Feed Section	
"% + B + E" Master Misfeed in the Master Eject Section	
"औr + E" Master Misfeeds in the Master Eject Section	
"% + P" Original Misfeeds Occur When Using the Optional Document Feeder	
"% + R1" Paper Misfeeds in the Optional Sorter	
"% + R2" Paper Misfeeds in the Optional Sorter" "% + R3" "% + R4" Paper Misfeeds in the Optional Sorter	104
of + Do of + D4 rapel ivilaleeus III lile Optional Softei	104










When the Open Cover/Unit Indicator (🕩 Lights	185
When the Add Ink Indicator (🖭) Lights	186
When the Master End Indicator ( is) Lights	188
When the Master Eject Indicator (ゴ) Lights	190
When Other Indicators are Lit	191
When Prints are not Delivered in a Neat Stack	
When the Machine Cannot Detect the Paper Size	192
Poor Printing	
Dirty BackgroundBlack Lines/Stained Prints	
Faint Prints	
6. Remarks	
Do's and Don'ts	197
Where to Put Your Machine	199 200
Machine Clearance	
Maintaining Your Machine  Cleaning the Main Frame  Cleaning the Optional Document Feeder	202
7. Specifications	
Main Frame	205
Document Feeder (Option)	209
Sorter (Option)	
Twin Color Press Roller Printing System TC-II (Option)	
Consumables	
INDEX	213






  


















## **Machine Exterior**

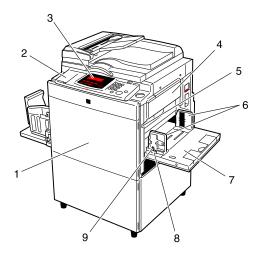

ZDCH040E-2

#### 1. Front door

Open to access the inside of the machine.

### 2. Flip up cover

Flip up to access the keys underneath.

#### 3. Operation panel

 $\Rightarrow$  P.6 "Operation Panel".

#### 4. Master tray

Open this unit when installing the master.

#### 5. Paper feed tray down key

Press to lower the Paper feed tray.

### 6. Paper feed side plates

Prevent paper being fed skewed.

### 7. Paper feed tray

Set paper here.

#### 8. Paper feed side plates knob

Use to move the side plates.

## 9. Paper feed side plates knob lock

Fix to the paper feed side plates knob.















## **Machine Interior**

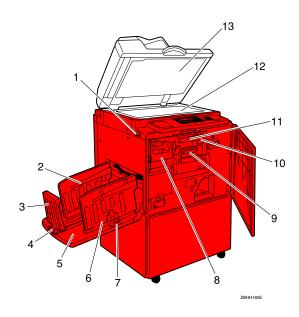

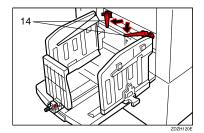

#### 1. Main switch

Use to turn the power on or off.

#### 2. Paper alignment wings

Lift or lower the wings depending on the type of paper being used.

#### 3. Paper delivery end plate

This plate aligns the leading edge of prints.

#### 4. Paper delivery end plate knob

Use to move the end plate.

#### 5. Paper delivery tray

Completed prints are delivered here.

#### 6. Paper delivery side plates

These plates align the prints on the paper delivery tray.

#### 7. Paper delivery side plate knobs

Use to move the side plates.

#### 8. Handle E1

Use to pull out the master eject unit.











#### 9. Ink holder

Set the ink cartridge in this holder.

#### 10. Drum unit lock lever B1

Lower to unlock and pull out the drum unit.

#### 11. Drum unit

The master is wrapped around this unit.

#### 12. Exposure glass

Position originals here face down for printing.

## 13. Platen cover or document feeder (option)

Lower this cover over an original on the exposure glass.

### 14. Trailing edge guides

Swing out these guides when you use A4,  $8^1/_2$ " × 11"  $\square$   $\square$  paper.










## **Options**

## **❖** Document feeder

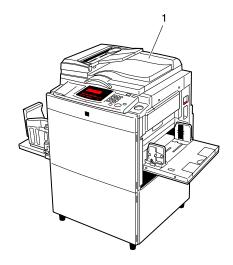

ZDCH040I

## 1. Document Feeder












#### Sorter

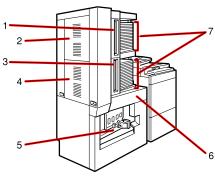

ZBHP05

- 1. Upper tray cover
- 2. Upper side cover
- 3. Lower tray cover
- 4. Lower side cover

- 5. Paper delivery tray
- **6.** Front cover
- 7. Trays

### Note

## $\square$ Other options:

- Color Drums: A3, 11" × 17" drum
- Color Drums: A4,  $8^1/2^{"} \times 11^{"}$  drum
- Key Counter
- PC Controller
- Twin color press roller printing system TC-II














## **Operation Panel**

## **Keys**

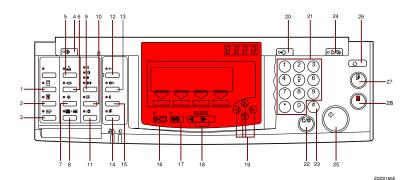

#### 1. [Quality Start] key

⇒ P.74 "Quality Start Mode".

#### 2. [Security] key

 $\Rightarrow$  P.73 "Security Mode".

### 3. [Skip Feed] key

Press to select skip feed printing.  $\Rightarrow$  P.68 "Skip Feed Printing".

#### 4. [User Tools] key

Press to change the default settings to meet your requirements.

#### 5. [Stamp] key

Press to select the Stamp mode. ⇒ P.107 "Date Stamp", ⇒ P.109 "Page Stamp", ⇒ P.112 "Stamp".

#### 6. [Make-Up] key

Press to select the Make-up mode.  $\Rightarrow$  P.93 "Make-up Printing".

#### 7. [Overlay] key

Press to select the Image Overlay mode. ⇒ P.104 "Image Overlay".

#### 8. [Edge Erase] key

Press to select Edge Erase mode.  $\Rightarrow$  P.40 "Edge Erase".

#### 9. [Image Density] key

Press to make prints darker or lighter. ⇒ P.24 "Adjusting the Image Density of Prints".

#### 10. [Economy Mode] key

Press to save ink.  $\Rightarrow$  P.48 "Economy Mode".

#### 11. [Original Storage] key

Press to select the Original Storage function.  $\Rightarrow$  P.99 "Original Storage".

#### 12. [On Line] key

⇒ P.79 "On Line Printing"

#### 13. [Auto On Line] key

 $\Rightarrow$  P.79 "On Line Printing".

#### 14. [Job Separator] key

 $\Rightarrow$  P.76 "Job Separation".

#### 15. [Sorter] key

Press to select the optional Sort or Class Sort mode.

### 16. [Combine] key

Press to combine originals onto 1 print. ⇒ P.61 "Combine Originals", ⇒ P.114 "Memory Combine", ⇒ P.66 "Auto Combine Mode".









#### 17. [Class] key

Press to select All Class, Auto Class, Manual Class, or Class mode. ⇒ P.50 "All Class Mode", ⇒ P.52 "Auto Class Mode", ⇒ P.55 "Manual Class Mode with One Original", ⇒ P.57 "Manual Class Mode with 2 or More Originals", ⇒ P.59 "Class Mode".

#### *18.* [ ◀] [ ▶] keys (Speed keys)

Press to adjust the printing speed. ⇒ P.24 "Adjusting the Image Density of Prints", ⇒ P.26 "Changing the Printing Speed".

#### 19. [◁][▷][△][▽] keys

Press to shift the image forward, backward, right, or left. ⇒ P.23 "Adjusting the Position of Printed Images".

Also use to highlight items you wish to select on the panel display.

#### 20. [Program] key

Press to enter or recall programs.  $\Rightarrow$  P.70 "*Programs*".

#### 21. Number keys

Press to enter the desired number of prints and data for selected modes.

#### 22. [Clear/Stop] key

Press to stop printing.

#### 23. [#] key

Use to enter data in selected modes.

#### 24. [Clear Modes/Energy Saver] key

Press to clear any previously entered job settings.

#### 25. [Start] key

Press to make a master.

#### 26. [Auto Cycle] key

Use to process the master and make prints in one operation.  $\Rightarrow$  P.49 "Auto Cycle".

#### 27. [Proof] key

Press to make proof prints.

#### 28. [Print] key

Press to start printing.










#### **Indicators**

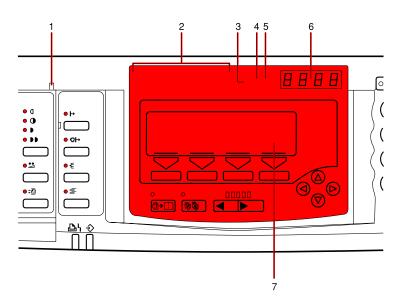

#### 1. Special feature indicator

Lights to indicate that special features have been selected. To access the special features, lift up the cover on the left side of the operation panel.

### 2. Monitor indicators

These indicators light to inform you of the status of the machine. ⇒ P.169 "If Your Machine does not Operate as You Want".

#### 3. A3/11" $\times$ 17" drum indicator

Lights when the A3,  $11" \times 17"$  drum unit is installed.  $\Rightarrow$  P.132 "Changing the Drum Size".

#### **4.** A4, $8^{1}/_{2}$ " × 11" drum indicator

Lights when the A4,  $8^1/_2$ "×11" drum unit is installed.  $\Rightarrow$  P.132 "Changing the Drum Size".

#### 5. Color drum indicator

Lights when the color drum unit is installed.  $\Rightarrow$  P.128 "Color Printing Using the Optional Color Drum".

#### 6. Counter

Displays the number of prints entered. While printing, it shows the number of prints remaining.

#### 7. Panel display

⇒ P.9 "Panel Display".









## **Panel Display**

The panel display shows the machine status, error messages, and function men-



- 1. Items for the selected function.
- 2. These keys correspond to the selectable items shown above them on the panel display. To select an item shown on the panel display, press the key directly below it.
- 3. Machine status or messages.
- 4. Items which can be selected.

## **#**Important

☐ Do not apply a strong shock or force of about 30N or more to the panel display or it could be damaged.

#### Note

- □ When you select an item on the panel display, it is highlighted (e.g. Auto). Items shown grayed-out (e.g. ○K) cannot be selected.
- ☐ Common panel display items:

[OK]	Confirm a function selection or enters a value.	
[Cancel]	Cancel a function selection or entered value and returns to the previous display.	
[Prev.][Next]	When there are too many items to fit on the panel display, use these keys to move between pages.	
	Press to highlight items you wish to select on the panel display.	
[Select]	Selects a value.	
[Exit]	Returns to the previous display.	









## **Panel Display Layout**

 
The basic elements used on the panel display are shown below. Understanding their meaning helps you use this machine's features quickly and easily.

Sample display when selecting the [Original] key



- 1. Machine status or message.
- 2. Available functions.
- 3. Illustrations of displays in this manual show the next key to be pressed whitened out.

E.g. **▼** means "Press the **[Original]** key".



- 1. Available functions.
- 2. Cancels the settings and returns to the previous display.
- 3. Confirms the settings.








## **Print Paper**

The following limitations apply:

	Paper Size		Paper
	Metric	Inch	Weight
Paper feed tray	A3 □, B4 □, A4 □ □, B5 □ □, A5 □, B6 □, A6 □, Others (Vertical: 70 - 297mm, Horizontal: 148 - 432mm)	11"×17" □, 8¹/2"×14" □, 8¹/2"×11" □ □, 5¹/2"×8¹/2" □ □, Others (Vertical: 2.76" -11.7", Horizontal: 5.83" - 17")	47.1 - 209.3g/ m <sup>2</sup> ,12.5 - 55.6 lb

#### Non-recommended paper:

- · Roughly cut paper
- Paper of different thickness in the same stack
- Envelopes heavier than 85g/m<sup>2</sup>, 22 lb.
- Folded, curled, creased, or damaged paper
- Torn paper
- Slippery paper
- Rough paper
- Paper with any kind of coating (such as carbon)
- Short grain paper
- Thin paper that has low stiffness
- Paper that is prone to generate a lot of paper dust
- Grained paper loaded with the direction of the grain perpendicular to the feed direction
- Certain types of long thin envelopes e.g. international mail envelopes

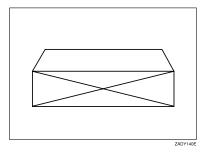







#### Operation

• The following types of envelopes:

Envelopes with glue or gum	Envelopes with windows	Envelopes with round tags	Open envelopes
			Less than 150mm 6.0"

If you print on rough grained paper, the copy image might be blurred.

You can use A3 ( $297 \times 420$ mm) or  $11" \times 17"$  originals or printing paper. When you want to print the entire image of an A3,  $11" \times 17"$  original, select Reduce mode because the maximum print areas are as follows:

 
- Metric version: 290 × 409mm, 11.4" × 16.1"
- Inch version: 290 × 419mm, 11.4" × 16.4"

When you use A3,  $11" \times 17"$  and  $209.3g/m^2$ , 55.6 lb paper, slow the printing speed down to setting 1, 2, or 3.

#### **#Important**

☐ Correct curls in the paper before placing it in the machine. When you cannot correct the paper curl, stack the paper with the curl face down or face up as shown in the illustration. If paper is curled, it might wrap around the drum or stains might appear.

	Right	Wrong
Thin Paper		
Thick Paper		









## **Originals**

The machine can detect the following original sizes placed on the exposure glass:

Metric version	A3D, B4D, A4DD, B5DD
Inch version	$11" \times 17" \square 7, 8^{1}/_{2}" \times 14" \square 7, 8^{1}/_{2}" \times 11" \square \square$

If the machine cannot detect the original sizes properly, select the area to copy with the **[Edge Erase]** key.  $\Rightarrow$  P.40 "Edge Erase". The machine may not detect the original size properly when:

- Originals contain index tabs.
- Originals are OHP transparencies or are translucent.
- Originals are dark.
- Originals contain solid images.
- Originals are of sizes other than those listed above.


If you do not lift the platen cover more than 30cm, 12" when you place another original, the machine might not detect the next original size correctly.

The maximum original size you can place on the exposure glass is  $304.8 \times$ 432mm, 12" × 17".

If you use originals that have bold letters or solid images at the leading edges, you might get prints with dirty edges. In this case, place the original face down with the widest margin toward the paper delivery tray or raise the printing speed.


Place originals after correction fluid and ink have completely dried. Not taking this precaution could mark the exposure glass and cause marks to be printed.

In most situations, place originals as shown below.

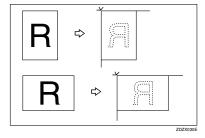

When the original is placed in a direction that differs from the print paper, the machine automatically rotates the original image by 90° to match the print paper direction.

 
The first 8mm, 0.32", of the leading edge and the last 2mm, 0.08", of the trailing edge cannot be printed. Make sure the leading edge margin is at least 8mm, 0.32", and the trailing edge margin is at least 2mm, 0.08".








Originals

 




#### Operation

 

a = 8mm, 0.32"





 










## **Printing Preparations**

## **Loading Paper**

Carefully open the paper feed tray.




2 Lift the paper feed side plates.

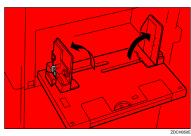

#### Note


☐ When loading larger paper, slide out the extender.


Make sure that the paper feed side plates knob lock lever is raised (lock is released), and then grasp the paper feed side plates knob and adjust the paper feed side plates to match the paper size.

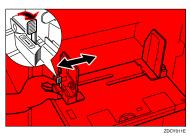

#### **#Important**

 ☐ Always adjust the position with the lock lever for the paper feed side plates in the raised position (lock released).



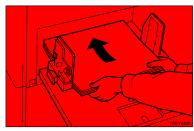

#### Note

☐ Correct the paper curl before loading the paper. If you cannot do so, stack the paper with the curl face down.

## 

⇒ P.11 "Print Paper"












Operation

Make sure that the paper feed side plates are touching both sides of the paper, and then push the lock lever for the side plates down to lock the side plates into position.

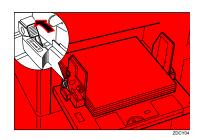

### **#**Important


☐ Always make sure that you push the lock lever for the side plates down to lock the side plates into position.

#### Note


☐ Make sure that the paper size and direction in the panel display correspond with the actual paper size and direction set on the paper feed tray.

## **Setting Up The Paper Delivery Tray**

Raise the paper delivery tray slightly, and then gently lower it with your hand.

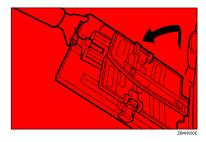

Raise each paper delivery side plate, and then grasp the side plate knobs and move the paper delivery side plates to match the print paper size.

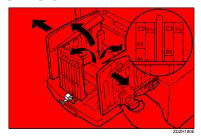


#### Note

☐ The inside of the plates should align with the paper size.

When you use thick paper (128 g/ $m^2$  to 209.3 g/ $m^2$ , 34 lb to 55.6 lb)

 Adjust the side plates to match the paper size scale on the main frame side.










When you use standard paper (47.1 g/m<sup>2</sup> to 105 g/m<sup>2</sup>, 12.5 lb to 28 lb)

- Adjust the side plates to match the paper size scale on the end plate side.
- **3** Lower or lift the paper alignment wings by turning the left and right knobs.

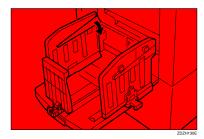

#### Note

- ☐ When the guides are up, you might not be able to load the unit to full capacity (1,000 sheets) depending on the paper you are using.
- $\hfill \square$  Lift the paper alignment wings when B5 prints are curled.

When you use 81.4 g/m<sup>2</sup>, 21.6 lb or thicker paper

1 Lower the paper alignment wings.

When you use 81.4 g/m<sup>2</sup>, 21.6 lb or thinner and B5 or smaller paper


1 Lower the paper alignment wings.

When you use 81.4 g/m<sup>2</sup>, 21.6 lb or thinner and A4,  $8^{1}/_{2} \times 11^{"}$  or larger paper


**1** Lift the paper alignment wings.

When you use A4, 8  $^{1}/_{2}$ " × 11" □ paper

1 Swing out the guides as shown in the illustration.

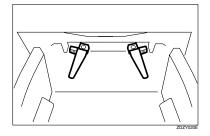

4 Turn on the main switch.

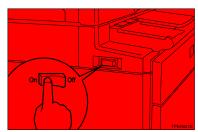

#### Note

☐ You can have the machine display how much ink and master are left when you switch it on. See "User Tools—Ink/Master Left" in  $\Rightarrow$  P.146 "4. Mode Setting".









# Entering a User Code to Use the Machine

If user codes are turned on, operators must enter their user code before they can use the machine. The machine keeps count of the number of copies made under each user code.

#### Note


- □ If you want to use this feature, you must turn it on and register the user codes with the user tools. You can register up to 20 user codes. See "Set User Code" and "Reg. User Code" ⇒ P.152 "6. Administrator Mode".
- ☐ When user codes are turned on, the machine will prompt you for your user code when you turn on the main switch or after the machine has been reset.
- **1** Enter your 4-digit user code with the number keys.

Please input user code, then press # key. User Code :----


#### Note

- ☐ User codes are not displayed on the panel display.
- ☐ To change the number entered, press the [Clear/Stop] key and enter the new number.

# Press the [#] key.

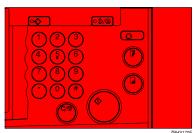


 - Make your prints.
- To prevent others from making prints with your user code, hold down the [Clear Modes/Energy Saver] key, and then press the [Clear/Stop] key.

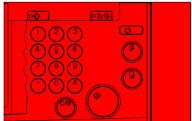











# **Standard Printing**

1 Make sure that the machine is ready for printing.

OReady for	Master	Making/ Prin	iting
		≣IA4⊡²	0.0mm
Letter	100%	Std.	0.0mm
Original	Ratio	[Ppr.Type]	Image %

If user codes are turned on, enter your user code with the number keys, and then press the [#] key.

### 

⇒ P.18 "Entering a User Code to Use the Machine"

Make sure that there are no previous settings remaining.

#### Note


- ☐ To clear any previous settings, press the [Clear Modes/Energy Saver] key.
- 4 Lift the platen cover.




#### Note

☐ Be sure to lift the platen cover more than 30cm, 12".


Place the original face down on the exposure glass. The original should be aligned to the rear left corner.

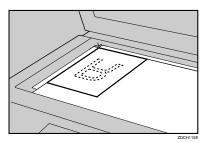

- 6 Lower the platen cover.
- Make your desired settings.
- Press the [Start] key.

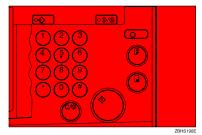

 
A trial print is delivered to the paper delivery tray.








Press the [Proof] key and check the image density and the image position of the proof print.

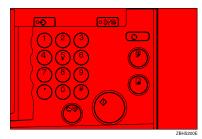

#### Note


- $\ \square$  If the image position is not correct, adjust it using the [Image **%]** key.  $\Rightarrow$  P.23 "Adjusting the Position of Printed Images".
- ☐ If the image density is slightly dark or light, adjust the image density using the [ ◀][ ▶] keys. ⇒ P.24 "Adjusting the Image Density of Prints".
- Enter the number of prints required with the number keys.

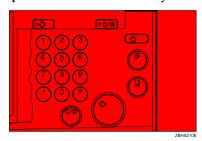

#### Note


☐ To change the number entered, press the [Clear/Stop] key and enter the new number.

# Press the [Print] key.

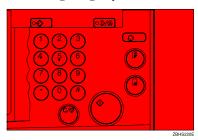

 - ☐ To stop the machine during a multi-print run, press the [Clear/ Stop] key.
- ☐ To return the machine to the initial condition after printing, and then press the [Clear Modes/ **Energy Saver**] key.










# **Removing Prints**

Pull the front paper delivery side plate down towards you to open it.

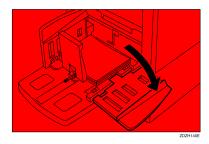


Note

- ☐ You cannot open the rear paper delivery side plate.
- Remove the prints from the paper delivery tray and close the paper delivery side plate.




When your machine is equipped with the optional sorter


Lift the lever and slide out the paper deliver tray.

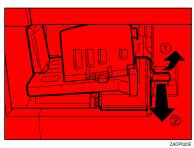

Pull the front paper delivery side plate down towards you to open it, and then remove the prints.

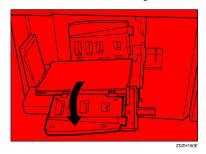

3 Slide in the paper delivery tray.

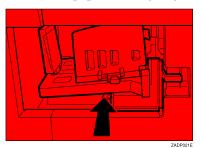










# **Energy Saver Mode**

 

You can press the [Clear Modes/Energy Saver] key to cancel Energy Saver mode and the machine returns to the ready condition.

 
If you press the [Clear Modes/Energy Saver] key for more than three seconds, the machine will enter Quality Standby mode to remove ink from inside the ink drum then it will enter Energy Saver mode.

Quality Standard mode helps to reduce excess ink when printing. It reduces recovery time from Energy Saver mode.

Energy Saver mode uses less electricity.

See "Energy Saving"  $\Rightarrow$  P.141 "1. System".

- $\square$  You can change the setting so that the machine does not enter Quality Standby mode.  $\Rightarrow$  P.22 "Energy Saver Mode".
- ☐ Quality Standby mode lasts for a few seconds.
- ☐ You can change the time the machine waits before Energy Saver mode starts. ⇒ P.22 "Energy Saver Mode".
- ☐ The machine will not automatically enter Energy Saver mode in the following cases:
  - If there is no ink
  - If the originals or paper are jammed
  - If the machine is making master or printing
  - If the machine is printing the second page of a combined print job
  - If the machine is loading original images in memory
  - If there is no paper
  - If there is no master
  - If the paper delivery box is full
  - If there are originals still on the machine
  - If the cover open message is displayed
  - If the settings have been reset to their defaults
  - If there are prints in the paper delivery tray of the sorter
  - If the User Code entry screen is displayed










# **Adjusting the Position of Printed Images**

Use the following procedure to adjust the position of print images as required.

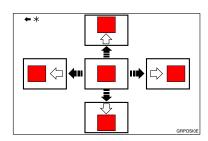

\*. Paper feed direction

#### Limitation

☐ For 308 mm, 12.2"-width paper, you can only adjust the position of the print image 5 mm, 0.2" up or down.

#### Note

☐ When the main switch is turned off, the position returns to the de-

# Press the [Image %] key.


⊖Ready for	Master	Making/ Pri	nting
		≣A4₽	0.0mm
Letter	100%	Std.	0.0mm
Original)	Ratio	Ppr.Type	Image 🤲




#### 🔗 Note

☐ You can skip step **1** and adjust the image position directly by pressing the  $[ \triangleleft ], [ \triangleright ], [ \triangle ]$ , and [∇] keys.

### 2 Adjust image position using the $[\triangleleft], [\triangleright], [\triangle], and [\triangledown] keys.$

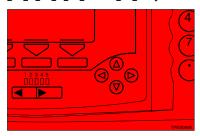

- ☐ When you shift the image forwards, leave a 10mm, 0.4" margin at the leading edge. If there is no margin, paper might wrap around the drum and cause a misfeed.
- $\square$  The [ $\triangleleft$ ] and [ $\triangleright$ ] keys shift the image up to 15mm, 0.6" each way in 0.5mm, 0.02" steps.
- $\square$  The  $[\triangle]$  and  $[\nabla]$  keys shift the image up to 10mm, 0.4" each way in 0.5mm, 0.02" steps.
- Press the [OK] key.
- 4 Press the [Proof] key to check the image position.

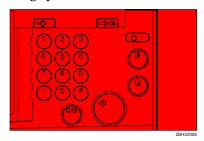












# **Adjusting the Image Density of Prints**

There are two ways to adjust the image density of prints:


- Before making a master Use the [Image Density] key.
- ◆ After making a master Use the [ ◀][ ▶] (Speed) keys.

### **Before Making a Master**

Press the [Image Density] key to adjust the image density.

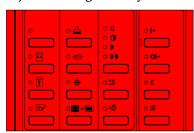

Press the [Start] key.

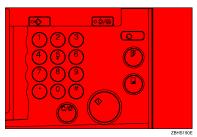

### **After Making a Master**

To increase the image density, press the [◀] key. To reduce the image density, press the [▶] key.



- Note
- ☐ The faster the printing speed becomes, the lighter the printing density is. If you want darker prints, decrease the printing speed.








Tint Mode

# **Tint Mode**

Use this function to make halftone prints.

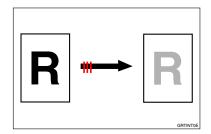

Press the [Original] key.






**2** Select the [Tint] with the  $[\leftarrow]$   $[\rightarrow]$ or [◁] [▷] keys.





Press the [Start] key.

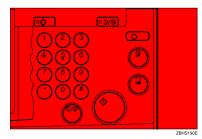


















# **Changing the Printing Speed**



Use the 【◀】 or 【▶】 key to adjust the printing speed. The relationship between printing speed and print quality depends on the type of paper you use.

Press the [▶] key to increase the speed and press the [◄] key to reduce the speed.

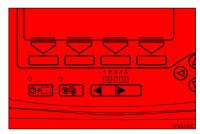

- ☐ The following speeds are available:
  - Setting 1: 60 sheets/minute
  - Setting 2: 75 sheets/minute
  - Setting 3 (default): 90 sheets/minute
  - Setting 4: 105 sheets/minute
  - Setting 5: 120 sheets/minute
- ☐ The faster the printing speed becomes, the lighter the printing density is, and vice versa.
- ☐ When the machine is used in low temperature conditions, the image density might decrease. In this case, slow the printing speed down to setting 1 or 2.











# Stopping a Multi-print Run

## **Stopping a Multi-print Run to Print Another Original**

1 Press the [Clear/Stop] key.

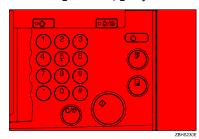


- **2** Set the original.
- Benter the number of prints and press the [Start] key.

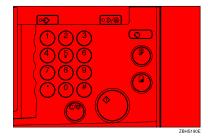


# **Changing the Number of Prints Entered and Checking Completed Prints**

Press the [Clear/Stop] key.

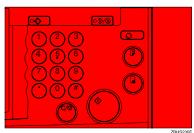

- 2 Change the number of prints or check the completed prints.
  - Note
  - ☐ To change the number of prints, press the [Clear/Stop] key, and then re-enter the number of prints with the number keys.
- Press the [Print] key.

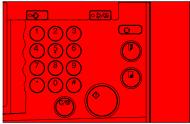
















# Reducing and Enlarging Using Preset Ratios

 

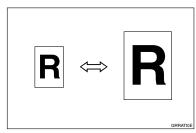



☐ The leading edge of the print image does not shift when a print image is made with this function.

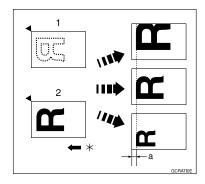

- 1. Place on the exposure glass
- 2. Place in the optional document feeder
- \*. Paper feed direction
- a = 8mm, 0.32"


- ☐ You can select a ratio regardless of the size of an original or printing paper. With some ratios, parts of the image might not be printed or margins will appear on prints.
- □ You can change the preset reproduction ratios with the user tools.
   See "Reproduction Ratio" ⇒ P.154
   "3-4 Reproduction Ratio".
- ☐ Prints can be reduced or enlarged as follows:


#### Metric version

  Ratio (%)	Original → Print paper size
141	$A4 \rightarrow A3, A5 \rightarrow A4, B5 \rightarrow B4$
122	$A4 \rightarrow B4, A5 \rightarrow B5$
115	$B4 \rightarrow A3$ , $B5 \rightarrow A4$
93	_
87	$A3 \rightarrow B4, A4 \rightarrow B5$
82	$B4 \rightarrow A4$ , $B5 \rightarrow A5$
71	$A3 \rightarrow A4, A4 \rightarrow A5, B4 \rightarrow B5$

#### Inch version

Ratio (%)	Original → Print paper size
155	$5^{1}/_{2}" \times 8^{1}/_{2}" \rightarrow 8^{1}/_{2}" \times 14"$
129	$\begin{vmatrix} 8^{1}/2" \times 11" \to 11" \times 17", 5^{1}/2" \\ \times 8^{1}/2" \to 8^{1}/2" \times 11" \end{vmatrix}$
121	$8^{1}/_{2}" \times 14" \rightarrow 11" \times 17"$
93	_
77	$8^{1}/_{2}" \times 14" \rightarrow 8^{1}/_{2}" \times 11"$
74	$11"\times15"\rightarrow8~^{1}/_{2}"\times11"$
65	$11" \times 17" \rightarrow 8^{1}/_{2}" \times 11", 8^{1}/_{2}"$ $\times 11" \rightarrow 5^{1}/_{2}" \times 8^{1}/_{2}"$









Reducing and Enlarging Using Preset Ratios

1 Press the [Ratio] key.

OReady for	Master	Making/ Prin	nting
		I≣IA4₽	0.0mm
Letter	100%	Std	0.0mm
[Original][	Ratio	][Por.Type][	Image %



Select the desired ratio with the [←] [→] or [◆] [▶] keys.

Rat	io				Se	lect	with	<>
71	82	87	93 100	115	122	141	Auto	Mag.
	<b>←</b>		<b>→</b>		Cance	e∏	01	$\overline{\Box}$



- Press the [OK] key.
- 4 Make sure that the original and the print paper are the correct size.
- Place your original on the exposure glass or in the optional document feeder.
- Press the [Start] key.



- Check the image position of the trial or proof print.
  - Note
  - $\square$  If the image position is not correct, adjust it using the [Image **%**] key (⇒ P.23 "Adjusting the Position of Printed Images").
- **8** Make your prints.















# **Auto Magnification**

 

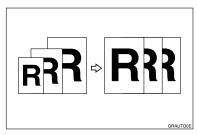




- ☐ The range of ratios from which the machine can select depends on where you place the original:
  - On the exposure glass: 50 200%
- ☐ The table below shows the reproduction ratios that can be selected for various combinations of original and paper size.

#### Metric version

  
Original	A3□	B4□	A4□	A4 □	B5 <b>□</b>	B5 🔽	A5□ *2	A5 □ *2
Paper								
A3□	100%	115%	141%		163%		200%	
B4□	87%	100%	122%		141%		173%	
A4□	71%	82%	100%	100% *1	115%	115% *1	141%	141% *1
A4 🔽	71% *1	82% *1	100% *1	100%	115% *1	115%	141% *1	141%
B5 <b>□</b>	61%	71%	87%	87% *1	100%	100% *1	122%	122% *1
B5 <b>□</b>	61% *1	71% *1	87% *1	87%	100% *1	100%	122% *1	122%
A5□	50%	50%	71%	71% *1	82%	82% *1	100%	100% *1
B6 <b>□</b>		50%	61%	61% *1	71%	71% *1	87%	87% *1

The machine automatically rotates the original image by 90° to match the paper direction and selects an appropriate reproduction ratio.  $\Rightarrow$  P.81 "Image Rotation".

\*2 Set these originals in the optional document feeder.







#### Inch version

Original	11"×17"	$8^1/_2" \times 14"$	8 <sup>1</sup> / <sub>2</sub> "×11"	8 <sup>1</sup> / <sub>2</sub> "×11"	$8^1/_2$ " × $5^1/_2$ "	$8^1/_2 \times 5^1/_2$ "
Paper	₽	₽	₽	D	<b>□</b> *2	<b>□</b> *2
11"×17"□	100%	121%	129%		200%	
8 <sup>1</sup> / <sub>2</sub> "×14"  □	77%	100%			155%	
8 <sup>1</sup> / <sub>2</sub> "×11"  □	65%	77%	100%	100% *1	129%	129% *1
8 <sup>1</sup> / <sub>2</sub> "×11"  □	65% *1	77% *1	100% *1	100%	129% *1	129%
8 <sup>1</sup> / <sub>2</sub> "×5 <sup>1</sup> / <sub>2</sub> "	50%	61%	65%	65% *1	100%	100% *1

The machine automatically rotates the original image by 90° to match the paper direction and selects an appropriate reproduction ratio.  $\Rightarrow$  P.81 "Image Rotation". Set these originals in the optional document feeder.

 $\square$  Depending on the original type, a suitable reproduction ratio might not be able to be selected.  $\Rightarrow$  P.13 "Originals" and  $\Rightarrow$  P.123 "Originals".

- 1 Place your original on the exposure glass or in the optional document feed-
- **2** Press the [Ratio] key.





Select [Auto] with the  $[\rightarrow]$  or  $[\triangleright]$  key.

Rat	io				Sel	ect	with	<>
71	82	87	93 100	115	122	141	Auto	Mag.
	<b>←</b>	$\neg$	<b>→</b>	الو	Cance	eT)	01	



Press the [OK] key.








Auto Magnification






# Press the [Start] key.

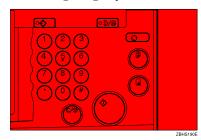

**6** Check the image position of the trial or proof print.

 - $\square$  If the image position is not correct, adjust it using the **[lmage %]** keys ( $\Rightarrow$  P.23 "Adjusting the Position of Printed Images").
- Make your prints.










# Zoom

Use this function to fine-tune the reproduction ratio in 1% steps.

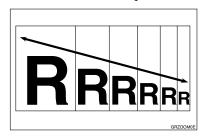



- ☐ The range in which you can select a ratio depends on where you place the original:
  - On the exposure glass: 50–200%
- 1 Press the [Ratio] key.

○Ready for	Master	Making/ Pri	nting
		I≣IA4 ⊡	0.0mm
Letter	100%	Std.	0.0mm
Original	Ratio	Ppr.Type	Image %



**2** Select [Mag.] with the  $[\rightarrow]$  or  $[\triangleright]$ key.

Rat	io				Se	lect	with	<:
71	82	87	93 100	115	122	141	Auto	Mag
_	<u></u>	$\neg$			Cance	<u>.</u>	01	
	•			11 '	JOH 100	- 1	ļ .	n



#### Note

☐ To select a custom ratio, select the closest ratio with the  $[\leftarrow]$  $[\rightarrow]$  or  $[\triangleleft]$   $[\triangleright]$  keys. Then press the  $[\Delta]$  or  $[\nabla]$  key and go to step 6.

# Press the [OK] key.

4 Make sure that [Zoom] is selected.

Magnification	Select with <
Zoom Direct.Mag.(%)	Direct.Mag.(size)
[ ← ][ → ][	Cancel   OK

 
- Press the [OK] key.
- Select the desired reproduction ratio in one of the following ways:

#### Note

 $\square$  To change the value entered, press the [Clear/Stop] key and enter the new value.

Using the  $[\leftarrow] [\rightarrow]$  or  $[\triangleleft] [\triangleright]$ keys

 Adjust the ratio with the [←]  $[\rightarrow]$  or  $[\triangleleft][\triangleright]$  keys.

















#### Using the number keys


• Enter the ratio with the number keys.

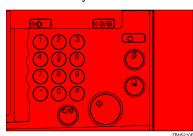

2 Press the [#] key.

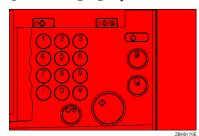

- Press the [OK] key.
- Make sure that the original and the print paper are the correct size.
- Place your original on the exposure glass or in the optional document feeder.
- Press the [Start] key.

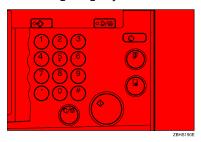

Check the image position of the trial or proof print.

- Note
- ☐ If the image position is not correct, adjust it using the [Image �] key (⇒ P.23 "Adjusting the Position of Printed Images").
- Make your prints.












# **Directional Magnification (%)**

Use this function to choose different reproduction ratios for the horizontal and vertical directions. The result is a squeezing or stretching effect.

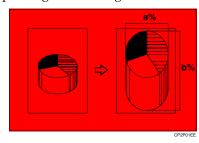



- ☐ The range in which you can select ratios depends on where you place the original:
  - On the exposure glass: 50 -200%
- Press the [Ratio] key.

OReady for	r Master	Making/ Pri	nting
		≣A4⊡	0.0mm
Letter	100%	Std.	0.0mm
Original	Ratio	[Ppr.Type]	Image %



**2** Select [Mag.] with the  $[\rightarrow]$  or  $[\triangleright]$ key.

Rat	io				Se	lect	with	<>
71	82	87	93 100	115	122	141	Auto	Mag.
	←		$\rightarrow$		Cance	eΠ	01	(




Press the [OK] key.

### 4 Select [Direct.Mag.(%)] with the $[\rightarrow]$ or [▷] key.





 - Press the [OK] key.
- 6 Enter the vertical and horizontal ratio.



#### Note

☐ To change the value entered, press the [Clear/Stop] key and enter the new value.

Adjusting ratios with the  $[\leftarrow][\rightarrow]$ or [◁] [▷] keys

- 1 Adjust the vertical ratio with the  $[\leftarrow] [\rightarrow]$  or  $[\triangleleft] [\triangleright]$  keys.
- ② Press the [∇] key.
- 3 Adjust the horizontal ratio with the  $[\leftarrow] [\rightarrow]$  or  $[\triangleleft] [\triangleright]$  keys.

Entering ratios with the number keys

- Enter the vertical ratio with the number keys.
- 2 Press the [#] key.
- 3 Enter the horizontal ratio with the number keys.
- 4 Press the [#] key.














- Press the [OK] key.
- Make sure that the original and the print paper are the correct size.
- Place your original on the exposure glass or in the optional document feeder.
- Press the [Start] key.

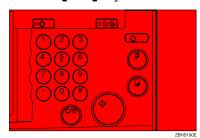

Check the image position of the trial or proof print.



- ☐ If the image position is not correct, adjust it using the [Image �] key (⇒ P.23 "Adjusting the Position of Printed Images").
- Make your prints.










# **Directional Magnification (Size)**

Use this function to have the machine select suitable reproduction ratios based upon the dimensions of the print you require, and the size of the original you specify.

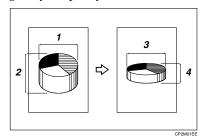

- 1. Horizontal original size
- 2. Vertical original size
- 3. Horizontal print size
- 4. Vertical print size



☐ You can enter the sizes within the following ranges:

Metric version	1 - 999mm (in 1mm steps)
Inch version	0.1" - 99.9" (in 0.1" steps)

- ☐ The range of ratios from which the machine can select depends on where you place the original:
  - On the exposure glass: 50-200%
- ☐ If the calculated ratio is over the maximum or under the minimum ratio, it is corrected within the range of the ratio automatically.

1 Press the [Ratio] key.

OReady for	<sup>r</sup> Master	Making/ Prim	nting
		⊫A4⊡	0.0mm
Letter	100%	Std.	0.0mm
Original	Ratio	(Ppr.Type	Image %

 


**2** Select [Mag.] with the  $[\rightarrow]$  or  $[\triangleright]$ key.





- Press the [OK] key.
- 4 Select [Direct.Mag.(Size)] with the [→] or [▷] key.





Press the [OK] key.



 








6 Enter the vertical original size with the number keys and press the [#] key.




#### Note

- ☐ To change the value entered, press the [Clear/Stop] key and enter the new value.
- ☐ Up to 999mm, 99.9" can be entered.
- Enter the vertical print size with the number keys, and then press the [#] key.
- Enter the horizontal original size with the number keys, and then press the [#] key.
- Enter the horizontal print size with the number keys.
- Press the [OK] key.

The machine will select appropriate reproduction ratios for the vertical and horizontal directions.

- Make sure that the original and the print paper are the correct size.
- Place your original on the exposure glass or in the optional document feeder.


Press the [Start] key.

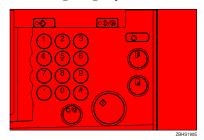

Check the image position of the trial or proof print.

 - ☐ If the image position is not correct, adjust it using the [Image %] key (⇒ P.23 "Adjusting the Position of Printed Images").
- Make your prints.










# **Erasing Center and Edge Margins**

When printing from thick books, or similar originals, the binding margin at the center and the edges might appear on prints. To prevent this, perform the following steps.

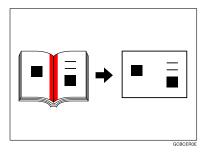


**#**Important

- ☐ Be sure to keep the platen cover at an angle of at least 25 degrees with the exposure glass.
- If you do not press hard on the book while it is scanned, the margin at the center might no be erased completely.


#### Note

- ☐ If your originals have solid images at the edges, the machine might recognize the solid images as shadows and not copy them. In this case, use Edge Erase mode so that only the shadows are not copied. ⇒ P.40 "Edge Erase"
- Set the book on the exposure glass.

**2** Keep the platen cover at an angle of at least 25 degrees with the exposure glass.

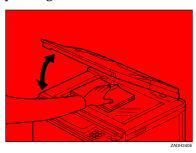

Press the [Start] key.

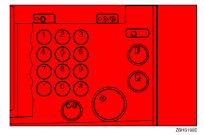

- ☐ Press hard on the book with your hand while it is scanned.
- Check the image position of the trial or proof print.
  - Note
  - ☐ If the image position is not correct, adjust it using the [Image %] key (⇒ P.23 "Adjusting the Position of Printed Images").
- Make your prints.












# **Edge Erase**

 
This function erases all four margins of the original image.

#### Using Edge Erase mode




#### When not using Edge Erase mode

 When printing from thick books, or similar originals, the binding margin at the center and the edges might appear on prints. The machine erases these margins automatically. If you do not use Edge Erase mode using the following kind of originals, the images to be printed might be also erased.



#### ✓ Note

- ☐ You can adjust the size of the margins with the user tools. The default is 2mm, 0.1".  $\Rightarrow$  P.156 "3-11 Margin Erase Area".
- Press the [Edge Erase] key.

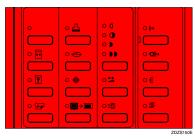


2 Select the size and direction of the original with the  $[\leftarrow]$   $[\rightarrow]$  or  $[\triangleleft]$ [ ▷ ] keys.

Margin	Erase			Select	with <>
A3□	84 ☞	A4₽	A4 ₽	B5□	B5 [7
A5□	A5 🗗	A6□	A6 🖸	<b>*</b> (7	0×165)
←	. The	$\rightarrow$	Ca	ıncel	OK




- Press the [OK] key.
- 4 Place your original on the exposure glass or in the optional document feeder.
- Press the [Start] key.

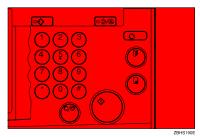

Check the image position of the trial or proof print.

 - ☐ If the image position is not correct, adjust it using the [Image **%]** key ( $\Rightarrow$  P.23 "Adjusting the Position of Printed Images").
- Make your prints.









# **Printing onto Various Kinds of Paper**

Before printing onto thick paper, thin paper, envelopes or special kinds of paper loaded in the paper feed tray, you must select the paper type.

### **Printing onto Thick Paper**

If you wish to print onto thick (128 to 209.3g/m<sup>2</sup>, 34 to 55.6 lb or heavier) paper, perform the following steps.

# Press the [Ppr.Type] key.

OReady for	Master	Making/ Pri	nting
		⊫A3⊡	0.0mm
Letter	100%	Std.	0.0mm
Original [	Ratio	[Ppr.Type]	Image %



### **2** Select [Thick] with the $[\rightarrow]$ or $[\triangleright]$ key.





Press the [OK] key.

## **Printing onto Standard Paper**

If you wish to print onto standard  $(47.1 \text{ to } 105\text{g/m}^2, 12.5 \text{ to } 28 \text{ lb})$  paper, perform the following steps.

# Press the [Ppr.Type] key.

OReady for	Master	Making/ Pri	nting
		⊫A3⊡	0.0mm
Letter	100%	Std.	0.0mm
Original	Ratio	Ppr.Type	Image %



# 2 Make sure that [Std.] is selected.

Paper T	уре		Select	with <>
Std.	Thick	Special	User1	Uper2
<b>←</b>	$\neg \cap$	<u>→</u> )[8	Select )	ОК

Press the [OK] key.

## **Printing onto Envelopes**

# 1 Press the [Ppr.Type] key.

OReady for	r Master	Making/ Pri	nting
		⊫A3⊡	0.0mm
Letter	100%	Std.	0.Omm
Original	Ratio	[Ppr.Type]	Image ᇮ











Sapphire\_gb3\_FM.book Page 42 Monday, December 11, 2000 10:21 AM



Operation

 
**2** Select [Special] with the  $[\rightarrow]$  or **[**▶] key.





Press the [OK] key.


4 Place the envelopes in the paper feed tray as shown in the illustration.



\*. Paper feed direction



- ☐ When you use envelopes, the paper feed tray capacity is about 150 sheets  $(85g/m^2, 22 lb)$ or enough to load a stack up to 105mm, 4.1" high.
- If your envelopes do not feed in well, lift the paper feed tray a little, and then lower it so that it slants up slightly.

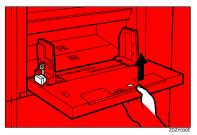

# **Printing onto Special Kinds of Paper**

#### Preparation

To use this function, you have to register the special paper type in [User1] or [User2] with the user tools.  $\Rightarrow$  P.159 "4-19 Type of Paper".

Press the [Ppr.Type] key.

OReady for	<sup>r</sup> Master	Making/ Pr	inting
		⊫A3⊡	0.0mm
Letter	100%	Std.	0.0mm
Original	Ratio	Ppr.Type	∏mage ∞

 


2 Select [User1] or [User2] with the  $[\leftarrow] [\rightarrow] \text{ or } [\triangleleft] [\triangleright] \text{ keys.}$ 





Press the [OK] key.





Printing onto Various Kinds of Paper



# To prevent paper misfeeds:

 
Sapphire\_gb3\_FM.book Page 43 Monday, December 11, 2000 10:21 AM

If paper misfeeds occur frequently, even if you select a suitable paper type, follow the steps below.

① Press the [Select] key.



② Select the type of paper misfeed and frequency with the  $[ \triangleleft ]$ ,  $[ \triangleright ]$ ,  $[\Delta]$ , or  $[\nabla]$  keys.



③ Press the [OK] key.

If paper misfeeds occur frequently in the paper exit section, even if you use standard or thin paper and select the **[Std.]**, do the following:

① Set the wing guide to the "Down" position with the user tools. See "Deflector Angle"  $\Rightarrow$  P.146 "4. Mode Setting".

If A4 – B5,  $8^1/2^{"} \times 11^{"}$  thick paper is not delivered properly to the paper delivery tray, do the following:

① Set the wing guide to the "Up" position with the user tools. See "Deflector Angle" ⇒ P.146 "4. Mode Setting".











# **Selecting Original Modes**

Select one of the following five modes to match your originals:

#### Letter mode

Select when originals contain only letters (no pictures).

#### Letter/Photo mode

Select when originals contain photographs or pictures with letters.

#### Photo mode

Select when originals contain photographs or pictures with delicate tones.

#### Pencil mode

Select when originals are written in pencil.

#### Tint mode

Select when you want to make halftone printing.

#### Note

- ☐ You can adjust the sharpness of text in Letter mode with the user tools (see "Adjusting sharpness of letters"  $\Rightarrow$  P.146 "4. Mode Setting").
- ☐ When using Photo mode to print originals with both text and photographs, the text will appear lighter. To avoid this, select Letter/Photo mode. Alternatively, use the optional Make-up mode to specify Letter mode for text areas and Photo mode for photograph areas.

### **Letter/Photo Mode Printing**

### Preparation

You can adjust the contrast of the image.

# Press the [Original] key.

⊖Ready	for	Master	Making/	Printin	Ĕ
			I≣IA4G	7	0.0mm
Letter	•	100%	Std.		0.0mm
Origina	വ	Ratio	Ppr.Tv	/pe   Imai	ge ‰



### **2** Select [Letter/Photo] with the $[\rightarrow]$ or [▷] key.



 


# Press the [Contrast] key.














# Adjust the contrast with the [←] [→] or [◁] [▷] keys.







- ☐ Use "High" to produce a clear print of people's faces.
- ☐ Use "Low" to produce a clear prints of landscapes and scenery etc.
- Press the [OK] key.
- Place your original on the exposure glass or in the optional document feeder.
- Press the [Start] key.

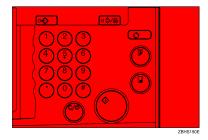

Check the image position of the trial or proof print.

#### Note

- □ If the image position is not correct, adjust it using the [Image %] key (⇒ P.23 "Adjusting the Position of Printed Images").
- Make your prints.

# **Photo Mode Printing**

Press the [Original] key.





Select [Photo] with the  $[\rightarrow]$  or  $[\triangleright]$  key.

Driginal Mode	Select with ←→
Letter Letter/Photo	Photo Pencil Tint
<u>←</u>	(Contract) OK



Press the [OK] key.





Adjusting the photo mode contrast

### • Press the [Contrast] key.













2 Adjust the contrast with the [←][→] or [▷] keys.





3 Press the [OK] key.



- ☐ Use "High" to produce a clear print of people's faces.
- ☐ Use "Low" to produce a clear prints of landscapes and scenery etc.
- Select the dot pattern with the [←] [→] or [▷] keys.






Note

☐ Four dot patterns are available:

- Setting 1: clearest
- Setting 2: clearer than setting 3
- Setting 3: clearer than setting 4
- Setting 4: clearer than the standard setting
- Press the [OK] key.
- Place your original on the exposure glass or in the optional document feeder.

Press the [Start] key.

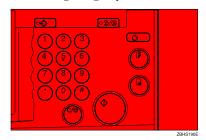

- Check the image position of the trial or proof print.
  - Note
  - ☐ If the image position is not correct, adjust it using the [Image �] key (⇒ P.23 "Adjusting the Position of Printed Images").
- Make your prints.









# **Pencil Mode Printing**



- $\square$  Originals written in pencil should be placed on the exposure glass.
- Press the [Original] key.

OReady for	Master	Making/ Pri	nting
		I≣IA4 ⊡	0.0mm
Letter	100%	Std.	0.0mm
Original)	Ratio	Ppr.Type	Image %




2 Select [Pencil] with the [→] or [▷] key.





- Press the [OK] key.
- 4 Place your original on the exposure gĺass.
- Press the [Start] key.

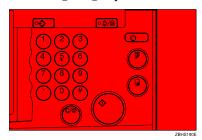

### Check the image position of the trial or proof print.

- ☐ If the image position is not correct, adjust it using the [Image **%**] key (⇒ P.23 "Adjusting the Position of Printed Images").
- Make your prints.














# **Economy Mode**

When you want to save ink, select Economy mode.




☐ Prints will be lighter in this mode.



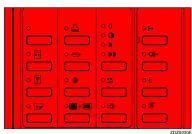


2 Place your original on the exposure glass or in the optional document feeder.



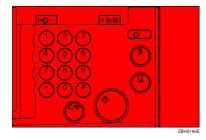

4 Check the image position of the trial or proof print.

 - ☐ If the image position is not correct, adjust it using the [Image **%]** key ( $\Rightarrow$  P.23 "Adjusting the Position of Printed Images").
- Make your prints.











# **Auto Cycle**


Use the [Auto Cycle] key to process masters and make prints in a single operation.

#### Note


- ☐ When you use the optional document feeder, it is not necessary to place originals one by one. All originals are fed and prints are completed after you press the [Start] key.
- Place your original on the exposure glass or in the optional document feeder.

#### Note

- ☐ You can place up to 50 originals into the optional document feeder.
- Enter the number of prints required with the number keys.

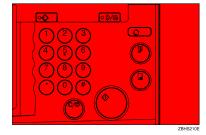


Press the [Start] key.

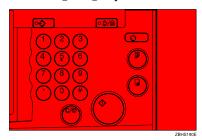


4 Check the image position of the trial or proof print.

#### Note

- ☐ If the image position is not correct, adjust it using the [Image %] key (⇒ P.23 "Adjusting the Position of Printed Images").
- Press the [Auto Cycle] key.

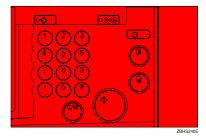


Press the [Print] key.

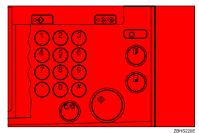

 - ☐ Repeat steps **1** through **2** until all originals are printed when you are placing originals on the exposure glass.
- ☐ If you placing the original in the optional document feeder, originals are fed and prints are completed automatically.











## **All Class Mode**




You have to store the number of students in each class with the user tools.  $\Rightarrow$  P.155 "3-5 Class Enter No."

Use the **[Class]** key to make sets of prints from the same original. All the stored numbers of prints are made for each set.

This feature is useful for teachers who frequently make multiple print sets for all the classes e.g. notes, handouts, test etc.


Using a standard print mode, the teacher would have to stand by the machine entering the number of prints and pressing the [Print] key for each class. However, All Class mode allows you to store the number of students in each class into the machine memory beforehand with the user tools. Whenever you need to make print sets for all the classes, place your original, select [ALL] and press the [Start] key. Print sets will be made containing the correct number of prints for each class.

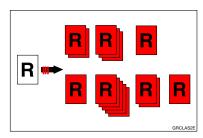

#### Note

- □ When you choose All Class mode, Job Separation mode is automatically turned on. The job separator pulls the top sheet of the each set delivered to the paper delivery tray to mark the end of each printed set. The next cycle begins automatically. ⇒ P.76 "Job Separation"
- ☐ You can cancel Job Separation mode in All Class mode with the user tools (see "Auto Separate" ⇒ P.146 "4. Mode Setting").


# 1 Press the [Class] key.

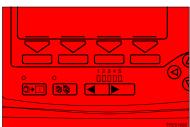


2 Make sure that the [ALL] is selected.



  - Press the [OK] key.
- Place one original on the exposure glass or in the optional document feeder.








All Class Mode

# Press the [Start] key.

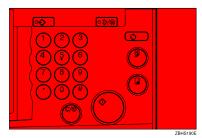

Check the image position of the trial or proof print.

- $\hfill \square$  If the image position is not correct, adjust it using the [Image \$] key ( $\Rightarrow$  P.23 "Adjusting the Position of Printed Images").
- Make your prints.













•



Operation

## **Auto Class Mode**


### Preparation

You have to store the number of students in each class with the user tools.  $\Rightarrow$  P.155 "3-5 Class Enter No.".

Use the **[Class]** key to make sets of prints from the same original. The stored numbers of prints are made for each set.


This feature is useful for teachers who frequently make multiple print sets for their classes, ex. notes, handouts, tests etc.

Using a standard print function, the teacher would have to stand by the machine entering the number of prints and pressing the [Print] key for each class. However, Auto Class mode allows you to store the number of students in each class into the machine memory beforehand with the user tools. Then, whenever you need to make print sets for several classes, place your original, select the classes who need prints and press the [Start] key. Print sets will be made containing the correct number of prints for each class.

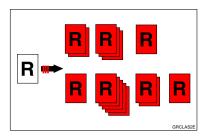

#### Note

- □ When you set Auto Class mode, Job Separation mode is automatically turned on. The job separator pulls the top sheet of the each set delivered to the paper delivery tray to mark the end of each printed set. The next cycle begins automatically. ⇒ P.76 "Job Separation".
- ☐ You can cancel Job Separation mode in Auto Class mode with the user tools (see "Auto Separate" ⇒ P.146 "4. Mode Setting").
- 1 Press the [Class] key.

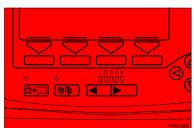


Select [By-class] with the [→] or [▷] key.






- Press the [OK] key.
- 4 Select the desired classes for each grade.

Se	lect	Cla	388	with	ᇮ,	Enter		
1	_	_		3 4 3 4				
	Pre	v .	ìĊ	Next	٦ſ	Select	٦٢	OK

 

 





# Selecting classes with the $[\triangleleft]$ , $[\triangleright]$ , $[\triangle]$ , or $[\triangledown]$ key

● Select the desired class for the 1<sup>st</sup> grade with the [▷] key.

The number of students is displayed on the counter.

### Note

- ☐ When you want to select all the classes, select [ALL].
- 2 Press the [Select] key.

#### Note

- ☐ Repeat steps ① and ② until you have finished designating classes for the 1st grade.
- □ To cancel a class selection, select that class with the [▷],
   [▷],
   [△], or [▽] key, and then press the [Cancel] key.
- ☐ When you want to select many classes for one grade, first select [ALL] and press the [Select] key, and then deselect the unnecessary classes with the [Cancel] key.

### **③** Press the [∇] key.

Now you can select classes for the  $2^{nd}$  grade.


- Select the desired class for the 2<sup>nd</sup> grade with the [▷], [▷], [▷], [△], or [♡] key.
- 6 Press the [Select] key.

#### Note

☐ Repeat steps ③ to ⑤ until you have finished designating all the desired classes.

# Selecting classes with the number keys


• Enter the desired grade and class with the number keys.

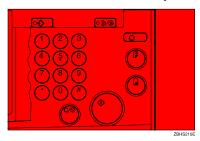

#### 🔗 Note

- ☐ For example, to select grade 2 class 4, enter 24.
- ☐ When you want to select all the classes for one grade, enter the grade number followed by 0.

### 2 Press the [#] key.

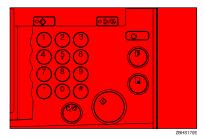

### Note

- □ To cancel a class, select that class with the [ □ ], [ ▷ ], [ △ ], or [ □ ] key, and then press the [Cancel] key.
- ☐ Repeat steps ① and ② until you have finished selecting all the desired classes.










Place one original on the exposure glass or in the optional document feeder.



Press the [Start] key.

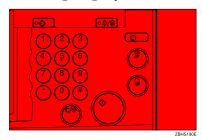


Check the image position of the trial or proof print.



 - ☐ If the image position is not correct, adjust it using the [Image  $\diamondsuit$ ] key ( $\Rightarrow$  P.23 "Adjusting the Position of Printed Images").
- Make your prints.











Manual Class Mode with One Original

### Manual Class Mode with One Original


Use the **[Class]** key to make sets of prints from the same original. Various numbers of prints are made for each set.

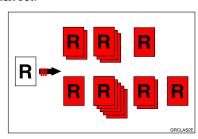

- Note
- □ When you set the Manual Class mode, Job Separation mode is automatically turned on. The job separator pulls the top sheet of each set delivered to the paper delivery tray to mark the end of each printed set. The next cycle begins automatically. ⇒ P.76 "Job Separation".
- □ To stop Job Separation mode from automatically turning on, use the user tools. (see "Auto Separate" ⇒ P.146 "4. Mode Setting").
- Press the [Class] key.

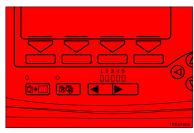

 
Select [Manual] with the [→] or [▷] key.





- Press the [OK] key.
- Enter the desired number of prints for the first set with the number keys.

Manual:		Input	No.	with	ten	keys
1:	2:	3:		4:	_ 5	:
6:	7:	8:		9:	_ 10	:
<b>←</b>	)		Canc	eT ] [	0	(

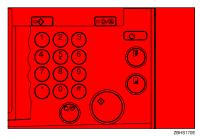











6 Enter the desired number of prints for the second set with the number keys.

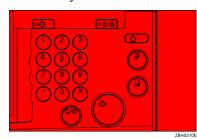


- Note
- ☐ Repeat steps **6** and **7** for each
- ☐ The maximum number of sets that can be made is 20.
- Press the [OK] key.
- Place one original on the exposure glass or in the optional document feeder.
- Press the [Start] key.

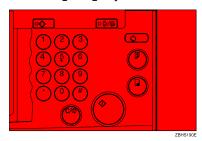

- Check the image position of the trial or proof print.
  - Note
  - ☐ If the image position is not correct, adjust it using the [Image **%**] key (⇒ P.23 "Adjusting the Position of Printed Images").
- Make your prints.



 






### Manual Class Mode with 2 or More **Originals**

### Preparation

To use this function, you have to select "by each original" with the "Class Manual Set" setting in the user tools. See "Class Manual Set"  $\Rightarrow$  P.146 "4. Mode Setting".


Use the [Class] key to make sets of prints from different originals. Various numbers of prints are made for each set.

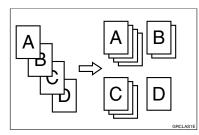

#### Note


- ☐ When you set Manual Class mode, Job Separation mode is automatically turned on. The job separator pulls the top sheet of the each set delivered to the paper delivery tray to mark the end of each printed set. The next cycle begins automatically.  $\Rightarrow$  P.76 "Job Separation".
- ☐ You can suspend Job Separation mode whenever you set the Manual Class mode with the user tools. (see "Auto Separate"  $\Rightarrow$  P.146 "4. Mode Setting").
- ☐ With the optional document feeder, you can place several originals and make prints of all of them at once. ⇒ P.126 "Manual Class Mode with Two or More Originals Using the Document Feeder".

1 Press the [Class] key.

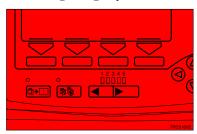


Manual Class Mode with 2 or More Originals

 **2** Select [Manual] with the  $[\rightarrow]$  or 【▶】key.



- Press the [OK] key.
- 4 Enter the desired number of prints for the first original with the number keys.

ı	Manual:		Input	No.	with	ten	keys
	1:	2:	3:		4:	- 5:	:
	6:	7:	8:		9:	- 10:	
	←	$\bigcap$		Canc	eT ] [	()	

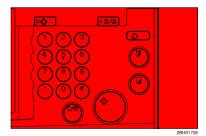








Sapphire\_gb3\_FM.book Page 58 Monday, December 11, 2000 10:21 AM



Operation


6 Enter the desired number of prints for the second original with the number keys.

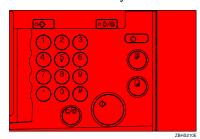

Press the [#] key.



- ☐ Repeat steps **6** and **7** for each original.
- $\square$  Up to 20 classes can be set.
- Press the [OK] key.
- Place the first original face down on the exposure glass.
- Press the [Start] key.

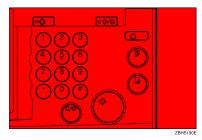


Check the image position of the trial or proof print.


### Note

☐ If the image position is not correct, adjust it using the [Image **⋄**] keys ( $\Rightarrow$  P.23 "Adjusting the Position of Printed Images").


Press the [Auto Cycle] key.

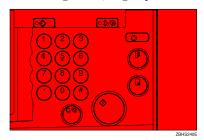

Press the [Print] key.

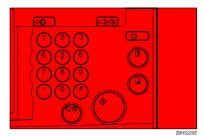



After the first set is completed, place the second original on the exposure glass, and then press the [Start] key.

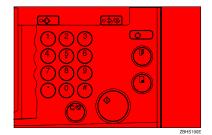

Note

  ☐ Repeat step ☐ until you have finished printing.











### **Class Mode**

Use the [Class] key to make sets of prints from the same original. The same numbers of prints are made for each set.

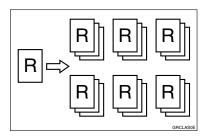


### Note

- □ When you choose Class mode, Job Separation mode is automatically turned on. The job separator pulls the top sheet of each set delivered to the paper delivery tray to mark the end of each printed set. The next cycle begins automatically. ⇒ P.76 "Job Separation".
- □ You can suspend Job Separation mode whenever you set the Class mode with the user tools. See "Auto Separate" ⇒ P.146 "4. Mode Setting".
- Press the [Class] key.

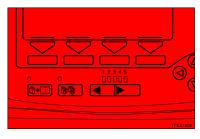


 
Select [Same-NO.] with the [→] or [▷] key.





 - Press the [OK] key.
- With the number keys, enter the desired number of prints for each set.



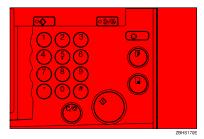











With the number keys, enter the number of sets you wish to make.

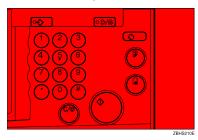

### Note


- ☐ Up to 99 sets can be selected for an original.
- Press the [OK] key.
- Place one original on the exposure glass or in the optional document feeder.
- Press the [Start] key.

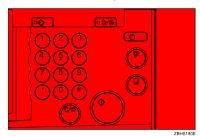

Check the image position is the trial or proof print.

### Note

 - ☐ If the image position is not correct, adjust it using the [Image %] key. ⇒ P.23 "Adjusting the Position of Printed Images".
- **11** Make your prints.





Combine Originals






### **Combine Originals**

Sapphire\_gb3\_FM.book Page 61 Monday, December 11, 2000 10:21 AM

You can combine originals in two ways:

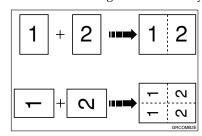

◆ 2 single-sided originals → 1 single-sided print with 2 images

Combine two single-sided originals onto one single-sided print with the two images placed side-by-side.

◆ 2 single-sided originals → 1 single-sided print with 4 images

Combine two single-sided originals onto one single-sided print with each image duplicated (total of four images).

#### Note

- $\square$  You can also use Memory Combine mode.  $\Rightarrow$  P.114 "Memory Combine".
- ☐ You can set the machine to cancel Combine Originals mode after finishing your print job with the user tools. See "Cancel Comb." ⇒ P.146 "4. Mode Setting".
- □ Any image closer than 8mm, 0.32" to the leading edge of the first original will not be printed. Any image closer than 4mm, 0.16" to the leading edge of the second original will also not be printed. When the image is too close to the leading edge, use copies of the originals with the image shifted at least 8mm, 0.32" for the first original (4mm, 0.16" for the second original) from the leading edge.
- ☐ You can select different image settings for the first and second original.
- ☐ Make sure that the paper feed side plates touch the paper lightly, and that the paper size and direction shown on the panel display match the size and direction of paper actually placed in the paper feed tray. Either case can cause the two original images not to appear at the proper position on prints.
- $\square$  The following tables list the combinations that can be used with the Combine feature (2 single-sided originals  $\rightarrow$  1 single-sided print with 2 images).











#### Metric version

		Original Size						
		A4 □	B5 <b>□</b>	A5 🔽	B6 <b>□</b>	A6 <b>□</b>		
Paper Size	A3□	100%	115%	141%	163%	200%		
	B4□	87%	100%	122%	141%	173%		
	A4□	71%	82%	100%	115%	141%		
	B5□	61%	71%	87%	100%	122%		
	A5□	50%	58%	71%	82%	100%		

#### Inch version

		Original Size	
		8 <sup>1</sup> / <sub>2</sub> "×11" □	$5^1/_2$ " $\times 8^1/_2$ " $\square$
Paper Size	11"×17"□	100%	129%
	8 <sup>1</sup> / <sub>2</sub> "×14" <b>□</b>	77%	100%
	8 <sup>1</sup> / <sub>2</sub> "×11" <b>□</b>	65%	100%
	$5^1/_2$ " $\times 8^1/_2$ "	50%	65%

 $\hfill\Box$  The following tables list the combinations that can be used with the Combine feature (2 single-sided originals  $\to$  1 single-sided print with 4 images).

 
#### Metric version

Original Size								
		A3□	B4□	A4□	B5□	A5□	B6 <b>□</b>	A6□
Paper	A3□	50%	58%	71%	82%	100%	115%	141%
Size	B4□	-	50%	61%	71%	87%	100%	122%
	A4□	-	-	50%	58%	71%	82%	100%
	B5□	-	-	-	50%	61%	71%	87%
	A5□	-	-	-	-	50%	58%	71%

### Inch version

		Original Size			
		11"×17" <b>□</b>	$8^{1}/_{2}" \times 14"$	$8^{1}/_{2}" \times 11"$	$5^1/_2$ " $\times 8^1/_2$ "
Paper Size	11"×17"□	50%	65%	65%	100%
	8 <sup>1</sup> / <sub>2</sub> "×14"□	-	50%	50%	77%
	8 <sup>1</sup> / <sub>2</sub> "×11"□	-	-	50%	77%
	$5^1/_2$ " × $8^1/_2$ " $\Box$	-	-	-	50%










Combine Originals


- ☐ If a suitable reproduction ratio is not selected, images might not completely appear on prints.
- ☐ Originals reading from left to right.

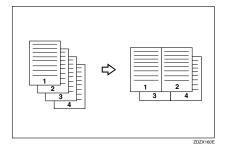

### 


When you use the optional document feeder with this function,  $\Rightarrow$  P.125 "Combine Printing with the Document Feeder".

### 1 Place the first original face down.

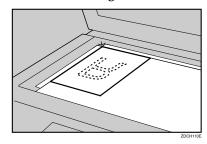



- $\square$  When you place original sideways ( $\square$ ), the top should be toward the operation panel as shown above.
- **2** Enter the number of prints using the number keys.

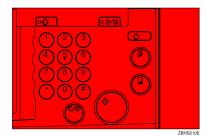















**E** Check the print paper size and the reproduction ratio.

#### Note

- ☐ To have the machine choose a suitable ratio automatically, use Auto Magnification mode. ⇒ P.30 "Auto Magnification".
- Press the [Combine] key.

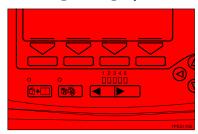


 Select [Combine 2] or [Quadruple] with the  $[\leftarrow]$   $[\rightarrow]$  or  $[\triangleleft]$  keys.





- Press the [OK] key.
- Press the [Start] key.

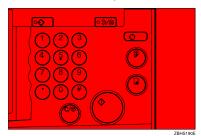










The beeper sounds after the first original has been stored. Place the second original face down.

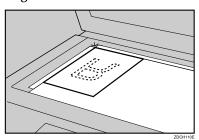




 ${f 1}{f 2}$  Check the image position of the trial or proof print.



  $\square$  If the image position is not correct, adjust it using the [Image \$] key ( $\Rightarrow$  P.23 "Adjusting the Position of Printed Images").














### **Auto Combine Mode**



To use this function, you have to select Auto Combine mode with the user tools. See "Combine" ⇒ P.146 "4. Mode Setting".

You can have images duplicated in two ways:

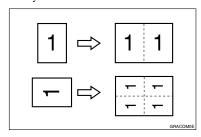

◆ 1 single-sided original → 1 single-sided print of 2 images

The original image is duplicated twice on one print.

◆ 1 single-sided originals → 1 singlesided print of 4 images


The original image is duplicated four times on one print.

### 

⇒ P.61 "Combine Originals" for details.

1 Place your original on the exposure glass or in the optional document feeder.


2 Enter the number of prints using the number keys.

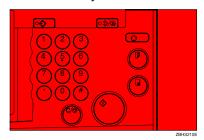


Check the print paper size and the reproduction ratio.

#### Note


- ☐ To have the machine choose a suitable ratio automatically, use Auto Magnification mode. ⇒ P.30 "Auto Magnification".
- Press the [Combine] key.

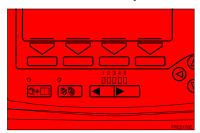

  Select [Repeat 2] or [Repeat 4] with the  $[\leftarrow] [\rightarrow]$  or  $[\triangleleft] [\triangleright]$  keys.










Auto Combine Mode

- 6 Press the [OK] key.
- Press the [Start] key.

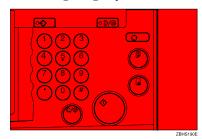

Check the image position of the trial or proof print.

- Note
- ☐ If the image position is not correct, adjust it using the [Image ♣] key (⇒ P.23 "Adjusting the Position of Printed Images").
- Make your prints.












### **Skip Feed Printing**

You can increase the time between prints using the [Skip Feed] key. By default, when one sheet of paper is fed, the drum rotates twice. However, you can select the number of drum rotations. This gives you a chance to remove prints one by one from the paper delivery tray or insert one sheet of paper between two prints. If you use this function, you can also use paper longer than 432mm, 17.0" in spite of the maximum length limitations of paper.

#### Note

- ☐ For every sheet of paper fed, the drum rotations twice by default. You can change this default setting with the user tools. See "No. of Skip Feed" ⇒ P.146 "4. Mode Setting".
- ☐ The maximum length of paper in Skip Feed mode is 460mm, 18.1".
- ☐ When you use paper longer than 432mm, 17.0", prints will not be delivered to the paper delivery tray properly, so lower the paper delivery end plate and take the prints by hand.
- Place your original on the exposure glass or in the optional document feeder.
- Press the [Skip Feed] key.

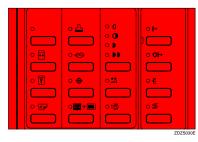


If necessary select the number of drum rotations per sheet of paper fed with the [←] [→] or [▷] keys.







#### Note

  - You can also select the number of rotations with the number keys.
- ☐ You can select from 2 to 9 rotations.
- □ By default, the machine asks you to confirm the number of rotations. You can have this step omitted by adjusting the user tool settings. See "No. of Skip Feed" ⇒ P.146 "4. Mode Setting".
- Press the [OK] key.
- Press the [Start] key.

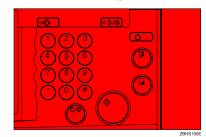







Skip Feed Printing

# 6 Check the image position of the trial or proof print.

 
### Note

☐ If the image position is not correct, adjust it using the [Image �] key (⇒ P.23 "Adjusting the Position of Printed Images").

### Make your prints.

### Note

☐ After printing is completed, the Skip Feed setting returns to default.









### **Programs**


You can store up to 9 frequently used print job settings in machine memory and recall them for future use.

### Note

- ☐ Stored programs are not cleared when you turn off the main switch.
- ☐ Stored programs cannot be deleted. If you want to change a stored program, overwrite it.

### Storing a Program

- 1 Set the print settings you want to put into memory.
- Press the [Program] key.

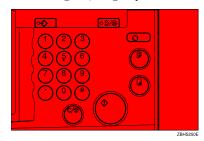

Select [Store] with the  $[\rightarrow]$  or  $[\triangleright]$ key.



### **Protecting a Program**

If you want to prevent someone from

Press the [OK] key.

### Note

- ☐ The program numbers (1 to 9) will be displayed in the panel display.
- ☐ If a user program has been protected, that program number will not appear in the panel display. To change a protected user program,  $\Rightarrow$  P.70 "Protecting a Program".
- ☐ If all the user programs have been protected, you cannot store any settings. Press the [Cancel] key.
- **5** Select the program number you want to store the settings in with the  $[\leftarrow] [\rightarrow]$  or  $[\triangleleft] [\triangleright]$  keys.





#### Note

 
- ☐ You can also select the program number with the number keys.
- 6 Press the [OK] key.

#### Note

☐ If this program number is already used, the machine asks whether you wish to overwrite it or not. Press the [Yes] or [No] key.

writing over your program, do the following:






**Programs** 






1 Press the [Program] key.

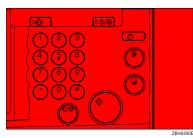

 Select [Protect] with the [→] or [▷] key.





- Press the [OK] key.
- Select the program number you want to protect with the [←] [→] or [▷] keys.







- Note
- □ Already protected program numbers are shown with a black background (e.g. 1).
- ☐ You can also select the program number with the number keys.
- Press the [Select] key.
- 6 Press the [OK] key.

### **Removing Program Protection**

1 Press the [Program] key.

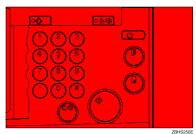

 2 Select [Protect] with the [→] or [▷] key.







- Press the [OK] key.
- Select the program number you want to remove protection from with the [←] [→] or [▷] keys.





  - Note
- ☐ Already protected program numbers are shown with a black background (e.g. **1**).
- ☐ You can also select the program number with the number keys.
- Press the [Cancel] key.
- 6 Press the [OK] key.












### **Recalling a Program**


1 Press the [Program] key.

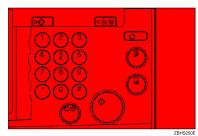

2 Make sure that [Recall] is selected.




 - Press the [OK] key.
  - Note
  - Programs that have been stored beforehand are represented by a number.
- Select the program number you want to recall with the  $[\leftarrow] [\rightarrow]$  or  $[\triangleleft] [\triangleright]$  keys.






  
- Note
- ☐ You can also select the program number with the number keys.
- Press the [OK] key.





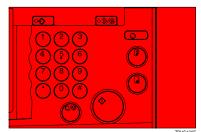













### **Security Mode**

This function prevents others from making prints of confidential documents from the master. For example, if you want to print some documents with sensitive information, use this function after making your prints so that nobody can access that master again.

- **1** Make your prints.
- 2 Press the [Security] key.

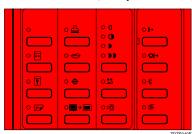


### Press the [Yes] key.

 



### Note

 - ☐ If you set Security Mode, you cannot make prints after finishing one job even you press the [Proof] key or the [Print] key. Press the **[Exit]** key.
- ☐ You cannot cancel Security mode even if you turn off the main switch.
- ☐ If you make the next master, Security mode is canceled.
- ☐ You cannot pull out the drum unit before making the next master.









### **Quality Start Mode**

If the machine is not used for a long period of time or you change the color drum unit, the ink on the drum might dry causing print quality to deteriorate. To solve this problem, you can have the machine carry out a few idle spins of the drum before a print run. This will restore image quality and save you having to make a repeat print run.

You can use this feature in two ways:

### Manual Quality Start

Choose Quality Start mode for the next print run manually using the [ Quality Start ] key.

#### Auto Quality Start

Have the machine check automatically how long ago the machine was used before each print run. If the machine has not been used for a long time, Quality Start will be used for the print job. By default, Auto Quality Start mode is on. You can turn it off with the user tools. See "Setting Q.start"  $\Rightarrow$  P.146 "4. Mode Setting".

 
You can set whether Auto Quality Start mode is used for Before print and After print by selecting Yes or No in Auto Quality Start mode with the user tools.  $\Rightarrow$  P.146 "4. Mode Setting".

If Before print is selected for Auto Quality Start mode, the machine carries out a few idle spins before a print run.

If After print is selected for Auto Quality Start mode, the machine carries out ink removal before entering Energy Saver mode to prevent ink bleeding for the print.

#### Note

- ☐ You can change the number of spins in Manual Quality Start mode with the user tools. See "Idling for Q.start"  $\Rightarrow$  P.146 "4. Mode Setting".
- ☐ You can change the number of spins after the fixed time period has passed in Auto Quality Start mode with the user tools. See "No. of Q.start" ⇒ P.146 "4. Mode Setting".
- ☐ Use this mode in combination with Energy Saver mode to produce even better results.











### **Using Quality Start Manually**

1 Press the [Quality Start] key.

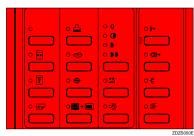

- Place your original on the exposure glass or in the optional document feeder.
- Press the [Start] key.

The drum unit idles.

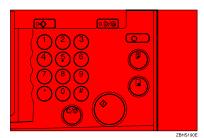

4 Make your prints.














### **Job Separation**

The print on the top of each print set in the paper delivery tray is pulled by the job separator. This function is useful when you make 2 or more print sets.

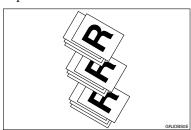

#### **A** CAUTION:

 While printing, do not touch the belt at the end of the paper delivery tray or the job separator. Otherwise you might be injured.

#### I imitation

☐ In Job Separation mode, the following limitations apply:

#### Metric version

 
Minimum paper size	Maximum paper weight	Paper delivery tray capacity
Length: 210mm	127.9g/m <sup>2</sup>	600 sheets (64g/m²)
Width: 128mm		

#### Inch version

Minimum paper size	Maximum paper weight	Paper delivery tray capacity
Length: 8.3"	34 lb	600 sheets (17 lb)
Width: 5.1"		

#### Note

- ☐ When you use thin paper, it is not recommended to use Job Separation mode. The job separator might tear the paper.
- ☐ If the job separator touches the print image, prints might be marked. In this case, it is not recommended to use Job Separation mode.
- □ When you do not use Job Separation mode, you can select the machine condition after each print set is fed out to the paper delivery tray with the user tools. See "Auto Class" ⇒ P.146 "4. Mode Setting".
- ☐ If there are less than 10 sheets of paper in the paper delivery tray, the machine may not be able to use Job Separation mode.








Job Separation

### Press the [Job Separator] key.

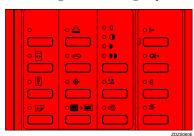

2 Make your prints.

### **𝒯** Note

☐ After the last page of each print set is fed out to the paper delivery tray, the job separator pulls the last sheet of each group in Job Separation mode. The next Job separation begins.














### **Conserving the Master**



The machine automatically changes the master length depending on the paper size you use. This saves both master and ink.

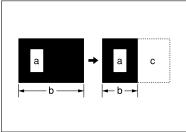

GRMSAV

- a = Images on the master
- b = Masters
- c = Area that you can save master and ink

#### Limitation

☐ The optional document feeder is required.



- ☐ This function is turned on when you use A4 ☐, 8¹/₂" × 11" ☐ or B5 ☐ paper and you set 2 or more originals in the optional document feeder.
- ☐ This function does not apply to the last page.
- □ You can cancel Master Saving mode with the user tools. See "Master length"  $\Rightarrow$  P.146 "4. Mode Setting". You can also save master using the optional A4,  $8^1/2$ " × 11" drum.  $\Rightarrow$  P.132 "Changing the Drum Size".









### On Line Printing

On Line printing allows you to use this machine as a PC printer.


### Limitation

☐ The optional PC controller is required.

#### Note

- $\square$  Before printing onto A5  $\square$ ,  $5^1/_2$ "  $\times$  $8^{1}/_{2}$ "  $\square$ , or non-standard size paper, you need to select the paper size with the [Ppr.Type] key.
- ☐ When printing onto thick paper, thin paper or special kinds of paper from the paper feed tray, select the paper type before pressing the (On Line) key.  $\Rightarrow$  P.41 "Printing onto Various Kinds of Paper".

### Press the [On Line] key.

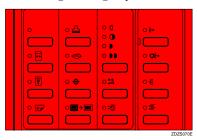

### When a print job has not finished printing while in online mode

If print job has not finished printing and the job is interrupted, the machine cannot receive data from the PC. To print the next job from the PC, cancel the interrupted print job.

### • Press the [fin PRINT] key.

Print is not f	inished.		
	⊫	A3□	0.0mm
		Std.	0.0mm
fin PRNT Pnt	.Size Pp	r.Type Ima	age %



When printing onto A5  $\square$ ,  $5^1/2^{"} \times 8^1/2^{"}$  $\square$ , or non-standard paper sizes

#### • Press the [Ppr.Type] key.

⊖Ready			<online></online>
		⊫A3⊡	0.0mm
	Auto	Std.	0.0mm
	Pnt.Size	[Ppr.Type]	Image %



#### **2** Select A5 $\Box$ , $5^{1}/_{2}$ " $\times$ $8^{1}/_{2}$ " $\Box$ , or Custom (non-standard) with the $[\leftarrow]$ or $[\rightarrow]$ key.

Ppr.S	ize[On	line]		Select	with	$\leftarrow \rightarrow$
A3□	B4 □	A4₽	A4 ₽	85□	B5 <b>₽</b>	
A5□	A5 🗗	Cardo	⊋ Cu:	stom 🛭	uto	
↓		$\rightarrow$		ancel	01	















When printing onto standard paper sizes or sizes other than A5  $\square$ ,  $5^1/2^* \times 8^1/2^* \square$ 

• Refer to the PC controller manual.


### **Auto On Line**

You can select whether the machine automatically switches to On Line mode when it receives data from a PC.

### Preparation

- The default setting for On Line mode is On. However, you can change the setting to Off if required.
- You can press the [Auto On Line] key to switch Auto On Line on or off. If the Auto On Line indicator is lit, Auto On Line is active. If the indicator is off, Auto On Line is inactive.
- When the Auto On Line indicator is lit, Auto On Line has priority when data is received from a PC. If you want to prevent the machine from interrupting a print job when it receives data from a PC, press the [Auto On Line] key so the Auto On Line indicator goes off and Auto On Line is inactive.

### Press the [Auto On Line] key.

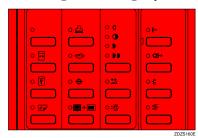







80



 


Image Rotation

### **Image Rotation**

When your original setting direction is different from the paper direction, the machine automatically rotates the original image by 90° to match the paper direction.

#### Note

☐ The following tables list the combinations that can be used in Image Rotation mode.

#### Metric version

	Original	A3□	B4□	A4□	A4 🗸	B5 <b>□</b>	B5 <b>□</b>	A5□☆	A5 <b>□</b> ☆
Paper									
A4□					*		*		*
A4 🔽		*	*	*		*		*	
B5□					*		*		*
B5 <b>□</b>		*	*	*		*		*	
A5□					*		*		*
B6 <b>□</b>					*		*		*

★: The machine automatically rotates the original image by 90° to match the paper direction.

 
☆: Place these originals in the optional document feeder.

#### Inch version

Original	11"×17"	$8^1/_2$ " × 14"		$8^1/_2" \times 11"$	5 <sup>1</sup> / <sub>2</sub> "×8 <sup>1</sup> / <sub>2</sub> "	5 <sup>1</sup> / <sub>2</sub> "×8 <sup>1</sup> / <sub>2</sub> "
Paper		┏	₽	D	₽☆	₽☆
8 <sup>1</sup> / <sub>2</sub> "×11" <b>□</b>				*		*
8 <sup>1</sup> / <sub>2</sub> "×11"□	*	*	*		*	
$5^1/2" \times 8^1/2"$				*		*
لح_ا						

- ★: The machine automatically rotates the original image by 90° to match the paper direction.
- ☆: Place these originals in the optional document feeder.

- ☐ If you select Zoom mode, non-standard size originals or paper, the image will not be rotated.
- ☐ It takes longer than usual to make masters in Image Rotation mode.
- ☐ You can cancel Image Rotation mode with the user tools. See "Auto Rotation"  $\Rightarrow$  P.146 "4. Mode Setting".











### **Make-up Printing Features**

 
Make-up mode enables you to do more than just make an exact copy of the original. A variety of editing and image processing functions allow you to quickly and easily customize your prints.

### **Main Features**

Command sheets allow you to create special effects without cutting and pasting—up to 4 commands can be given for an original. By combining Make-up modes and printing with different color drums, you can create a variety of printing effects.

### **Make-up Modes for Designated Areas**

Mode		Sample	
Design	ated Area	Command sheet/Original (Closed area method)	Print
1.	Letter mode	WORLD  Wild company and specific and specifi	WORLD  Word companies and the control of the contro
2.	Photo mode	HAWAII  Finance rivity good  Gurrenar vacadion.	HAWAII  Plane why your florener variation.
3.	Delete Area mode	Hellol How as year  THE	Hello! How as yea?
4.	Outline mode	WAR.	Market Market











### Make-up Printing Features

Mode Designated Area		Sample		
		Command sheet/Original (Closed area method)	Print	
5.	P./N. mode (Positive Negative mode)	BALLET	BALLET	
6.	Solid mode (Image Pattern mode)	BALLET	BALLET	
7.	All Page Pattern mode (Area Pattern mode)	LUNCH MENU	LUNCH MENU	
8.	All + Outline (Image Outline and Area Pattern mode)	CAT	CAT	













Sapphire\_gb3\_FM.book Page 84 Monday, December 11, 2000 10:21 AM



Operation

### **Make-up Modes for Outside Designated Areas**

Mode		Sample		
Undesignated Area		Command sheet/Original	Print	
1.	Letter mode: The area outside designated areas is printed in Letter mode.	HAWAII Penerary or por flarence realests.	HAWAII  Plants errory your Plants are greater	
2.	Photo mode: The area outside designated areas is printed in Photo mode.	WORLD  Wands compare and prophens devices are experienced with the compare and prophens devices are experienced with the compared with the	WORLD  Waste Lower or and pringlened devices are suppoped with	
3.	Save Area mode: The area outside the designated areas is deleted.	HAWAII  Please only your Business validary.		
4.	Outline mode: The area outside the designated area is printed in Outline mode.	HAWAII	HAWAII	



 $\hfill\square$  In Make-up mode, commands must be given for both designated areas and areas outside the designated areas.










### **Background Patterns**

Sapphire\_gb3\_FM.book Page 85 Monday, December 11, 2000 10:21 AM

A total of 164 background patterns is available in Make-up mode:

- 40 basic patterns
- 40 patterns similar to the basic patterns but with patterns elements at 4 times the size.
- 90° rotations of all the basic and enlarged patterns.
- 4 registered user patterns.

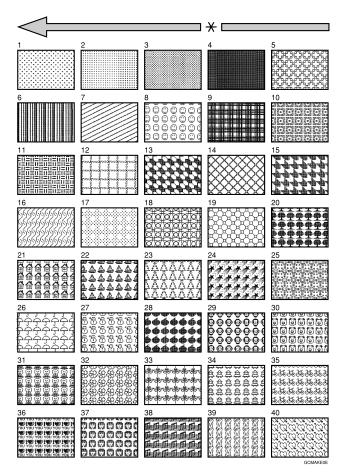

\*. Paper Feed Direction



- $\hfill\Box$  The basic patterns are numbered 1 to 40.
- $\hfill \square$  You can make your own make-up background patterns with the user tools.  $\Rightarrow$  P.163 "5-11 Make/Chg. Pattern".













### **Command Sheets for Make-Up Printing**

Command sheets are fed first so that the machine can recognize the areas of the original which are to be edited as designated areas.

### **Command Sheets**

The command sheet is a sheet of paper for designating areas to be edited. Command sheets must be made on white or translucent paper, and should be the same size as the original.

Do not designate areas within 5 mm, 0.2" from the top.



 
- ☐ Poor quality paper (such as newsprint, recycled paper, etc.) should not be used for command sheets because any dark spots or streaks will be read as designated areas.
- ☐ Do not use blotting paper or other absorbent paper for command sheets because ink might leak through the paper and get the exposure glass dirty.

### **Making a Command Sheet**


There are two ways of designating areas: the diagonal line method and the closed area method.


### Peatures

• You can combine up to 4 command sheets when making a master.



   You cannot use both the closed and diagonal line method on the same command sheet.











There is no limit to the number of areas you can designate on a single command sheet.



· If designated areas on two or more command sheets overlap, the last command sheet will apply for the overlapping portion.









• If you use Outline mode for letter images with a thickness of less than 3mm, 0.12", the print image might come out as expected.
















### Notes

 The image might differ depending on how the designated area is drawn, so remember the following when making the command sheet:

Designated area	Area recognized	Preferred designated area
Part of the designated area is surrounded by 3 sides of the entire area.		Make a space of at least 2mm, 0.08", in front of the area surrounded by 3 sides (relative to the feed direction).  1 1 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2
Double line pattern.	Only the outer line is recognized.	Make a gap of at least 2mm, 0.08" in width.
The designated area is surrounded by 3 sides of another designated area.		Make a space of at least 2mm, 0.08" in front of the area surrounded by 3 sides (relative to the feeding direction).
Non-closed line		Designate the area with a closed line.









Command Sheets for Make-Up Printing

### **Diagonal line method**




   $\hfill \square$  A diagonal line must be drawn through the area that you wish to edit.






 2 Draw a line using a felt tip pen (black, red or blue) with a thickness of at least 1mm.



### Note

- $\square$  Make sure there is no break in the line.
- ☐ The diagonal line can be drawn from left to right or vice versa.
- ☐ Draw the line at least 2mm, 0.08", away from the image so that the whole image can be recognized.

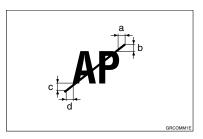

a, b, c, d = 2mm, 0.08"










☐ The line marking the designated area should be more than 2mm, 0.08", from any neighboring image.

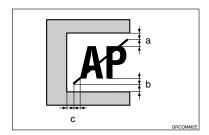


a, b, c = 2mm, 0.08"

#### Closed area method

 Note


 $\Box$  The line designating the area must be a closed loop.

1 Put the command sheet on top of the original.



 2 Using a black, red, or blue felt tip pen, draw a line around the area to designate. The line should have a thickness of at least 1mm.














# Command Sheets for Make-Up Printing




- $\square$  Make sure there is no break in the line.
- $\square$  Draw the line at least 2mm, 0.08", away from the image so that the whole image can be recognized.

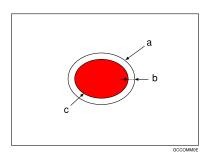

a = Line marking the designated area

- b = 2mm, 0.08"
- c = Image within the designated area
- ☐ The line marking the designated area should be more than 2mm, 0.08", from any neighboring image.

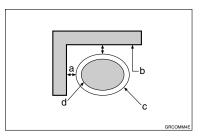


a = 2mm, 0.08"

b = Neighboring image

c = Line marking the designated area

 d = Image within the designated area
















# **Command Sheets and Finished Prints**


The following illustrations will help you understand how to draw a command sheet.

### Drawing a command sheet using a diagonal line

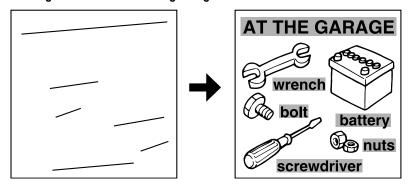


The diagonal line method is easy to use for designating rectangular areas. It is also more precise, but it is difficult to use for designating complex areas.

### Drawing a command sheet using a closed line

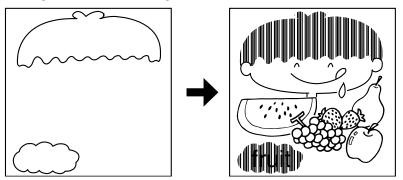

 The closed line method is easier to use for complex areas, but it is less precise. It also takes longer to draw a command sheet with the closed line method.













# Make-up Printing

1 Press the [Make-Up] key.

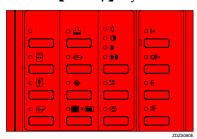

 2 Make sure that [1] is selected. Then press the [OK] key.





3 Select the frame shape with the [←] [→] or [◁] [▷] keys.

 


Select with <-->

Press the [OK] key.


Area[1]

**5** Select the mode for the first command sheet with the  $[\leftarrow]$   $[\rightarrow]$  or [◁][▷][△][▽] keys.






 
- 6 Press the [OK] key.
- **1** If necessary, select the pattern for the first command sheet with the  $[ \land ], [ \land ], [ \land ], \text{ or } [ \lor ] \text{ key. Then}$ press the [OK] key.



  If necessary, select the size and direction of the pattern you selected in step  $\mathbf{0}$  with the  $[\leftarrow]$   $[\rightarrow]$ or [◁] [▷] keys.













# Press the [OK] key.

#### Note

- ☐ Follow steps **2 ©** for the other command sheets.
- ☐ You can select a pattern registered with the user tools for only one command sheet.
- ☐ To change the value entered, press the [Clear/Stop] key and enter the new value.
- After you have finished designating modes for all the command sheets, select [Outside Area] with the [←] [→] or [▷] keys.





Select the mode for the outside area with the [←] [→] or [▷] keys.

 
Dutside	(Area)	2	elect wi	th <>
Letter	Photo	SaveArea	Outline	;
←	- ۱۲	→ Can	icel	OK



# Press the [OK] key.

#### Note

- When you select Photo mode for both inside and outside areas, you cannot select different dot patterns and contrast.
- □ When you want to confirm your settings, press the [Make-Up] key twice. Then press the [OK] key repeatedly until the panel display reaches the setting you want to confirm.
- If you have selected Photo mode, select the dot pattern and the contrast with the [←] [→] or [▷] keys.









#### Mote

- ☐ Four dot patterns settings are available:
  - · Setting 1: clearest
  - Setting 2: clearer than setting 3
  - Setting 3: clearer than setting 4
  - Setting 4: clearer than the standard setting

# Press the [OK] key.










Place the first command sheet face down on the exposure glass and press the [Start] key.

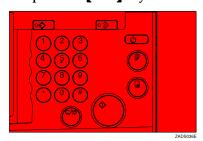

The beeper sounds after the command sheet is scanned.



- ☐ Repeat step **E** for the other command sheets.
- Place the original face down on the exposure glass or face up into the document feeder and press the [Start] key.

### Note

- ☐ If a command sheet or original misfeeds from the document feeder, remove the misfed sheet or original and reset it in the document feeder.
- ☐ It is not necessary to reset the previous command sheets or original.











# Make-up Samples

# 1

# Sample 1

- ① Command Sheet No. 1, Frame shape □, Designated area: Delete Area mode
- ② Outside area: Letter mode
- 3 Print

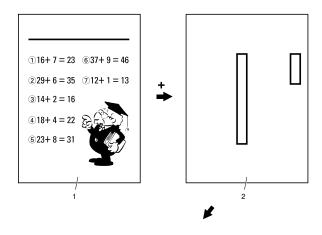

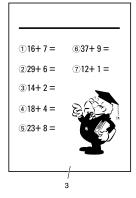

- 1. Original
- 2. Command sheet No.1














# Sample 2

- ① Command Sheet No. 1, Frame shape/, Designated area: All + Outline No. 30
- $\ \, \ \, \ \, \ \,$  Command Sheet No. 2 Frame shape  $\ \, \ \, \ \, \ \, \ \,$  Designated area: All page pattern No. 17
- 3 Outside area: Fn1
- 4 Print

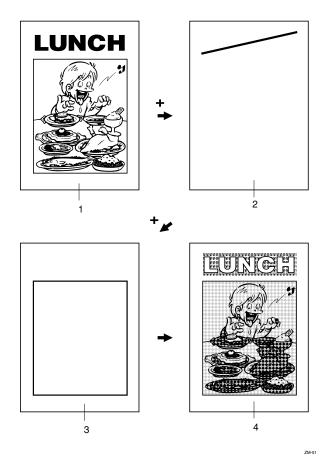

- 1. Original
- 2. Command sheet No.1
- 3. Command sheet No.2
- 4. Print
















# Sample 3

- ① Print the original as it is
- ② Change the drum unit for color printing
- $\ \, \mbox{3}$  Command Sheet No. 1, Frame shape  $\ \, \square$  , Designated area: All page pattern No. 39
- ④ Outside area: Letter mode
- ⑤ Print

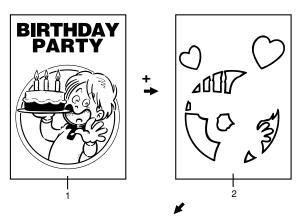




ZM-5

1. Original

 - 3. Print
- 2. Command sheet No.1









# **Original Storage**

You can store frequently used originals in machine memory and then easily recall them later to make prints whenever they are needed.

# Preparation

- You can store up to 8 Original Storage settings in machine memory.
- The number of Original Storage settings you can store depends on the type of originals.
- You may not be able to store Original Storage settings for some types of original.
- The machine remembers Original Storage settings even after the power to the machine has been switched off or the [Clear Modes/Energy Saver] key has been pressed to clear.

# **Storing Original**


Store the print images of the originals you want to use frequently.



☐ You can use this feature with:

- Reproduction Ratio
- Selecting Original Modes
- Adjusting the Image Density of Prints
- Edge Erase

# 1 Press the [Original Storage] key.

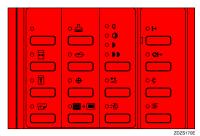

**2** Select [Store] with the  $[\rightarrow]$  or  $[\triangleright]$  key.





Press the [OK] key.










4 Select the desired number to store with the  $[\leftarrow][\rightarrow]$  or  $[\triangleleft][\triangleright]$  keys.





**5** Place the original on the exposure glass as shown, then press the [Start] key.

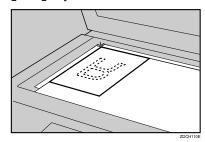

### Note

☐ If print images for an original have already been stored in machine memory, check the stored images and choose whether to overwrite them or not. To overwrite the images, press the [Yes] key. To keep the images, press the [No] key.

 




☐ If you select overwrite, the document stored in memory will be erased unless it is write protected.


### Non-standard size originals

• If you place non-standard size originals, this display will be shown. Press the [OK] key.





 2 Enter the vertical length with the number key, and then press the [#] key.



3 Enter the number of horizontal width with the number key, and then press the [#] key.



4 Place your originals on the exposure glass, and then press the [Start] key.










# **Selecting Stored Original**

To select the images of originals that have been stored in machine memory, do the following:

1 Press the [Original Storage] key.

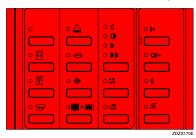

**2** Select [Select] with the  $[\leftarrow][\rightarrow]$  or [◁][▷] keys.



- Press the [OK] key.
- 4 Select the number of the stored original with the  $[\leftarrow][\rightarrow]$  or [◁][▷] keys.




- Press the [OK] key.
- 6 Press the [Start] key.

# **Protecting Stored Original**

If you want to protect the images of originals stored in machine memory, do the following:

## **Protecting Original**

Press the [Original Storage] key.

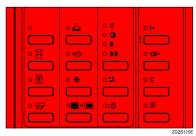

**2** Select [Protect] with the  $[\rightarrow]$  or [▷] key.





- Press the [OK] key.
- 4 Select the number of the protecting with the  $[\leftarrow][\rightarrow]$  or  $[\triangleleft][\triangleright]$  keys.

Protecting Original	Select	with←→
0		
(Status: 2000/09/01	12:10 A	3┏)
$\leftarrow$ $\rightarrow$	Select	OK



- Press the [Select] key.
- 6 Press the [OK] key.












Sapphire\_gb3\_FM.book Page 102 Monday, December 11, 2000 10:21 AM



Operation

## Removing Original Protection

1 Press the [Original Storage] key.

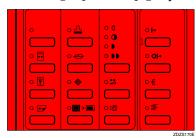

**2** Select [Protect] with the  $[\rightarrow]$  or **[▶]** key.





Press the [OK] key.

Press the [Cancel] key.

Protecting	Original	Select	with ←→
1			
(Status:	: 2000/09/01	12:10 A	3┏)
<b>←</b>	$\longrightarrow$	Cancel	OK




# **Deleting Stored Original**

If you want to delete the images of originals stored in machine memory, do the following:

# **#Important**

- ☐ You cannot restore the images once they have been deleted.
- Press the [Original Storage] key.

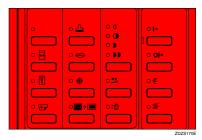

2 Select [Delete] with the  $[\rightarrow]$  or  $[\triangleright]$ key.





3 Select the desired number to delete with the  $[\leftarrow][\rightarrow]$  or  $[\triangleleft][\triangleright]$ keys.

Delete Original	Select with ←-		
<b>1</b> 2 5 7 8			
(Status: 2000/09/01	12:10 A3□7)		
$\leftarrow$ $\rightarrow$	Cancel OK		











Original Storage

# 4 Select the [Yes] or [No] key.





# Note

 
Press the [No] key if you do not wish to delete the Stored Original.














# **Image Overlay**

The machine can merge two different originals onto the same print paper.


Two types of merging are available:

#### Overlay

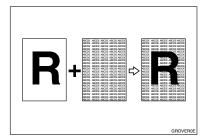

Two different originals are merged onto the same print paper.

#### Format

 


The image of the original which is copied first will become the background image for all copies. The following originals will be copied with this background.

#### On Line overlay

When your machine is equipped with the optional PC controller, an image sent from a PC and the original image can be merged onto the same print paper.


### Storage overlay

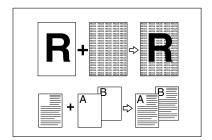


Combines the images of originals stored in Original Storage with the originals placed on the machine.

# Storage overlay


# 1 Press the [Overlay] key.

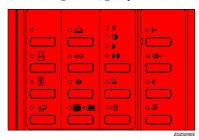

# Select [Storage overlay] with the [←][→] or [▷] keys.

 



 








# Press the [OK] key.

#### Note


- ☐ If the one of original storage is already chosen, the display in step ② does not shown. Skip to step ③.
- Press the [OK] key.
- Place your originals, and then press the [Start] key.

# On Line overlay

1 Press the [On Line] key.

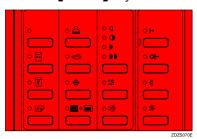

Press the [Overlay] key.

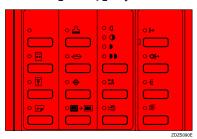


# Place you originals and print start with your PC.

### Limitation

- The optional PC controller is required to use On Line Overlay mode.
- ☐ In order to get a correct print image, the size of the original and the PC image should be identical.

# Overlay.Format

Press the [Overlay] key.

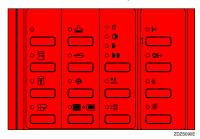


Select one of Image Overlay modes with the [←] [→] or [▷]
 | keys.





 Press the [OK] key.









Sapphire\_gb3\_FM.book Page 106 Monday, December 11, 2000 10:21 AM




Operation

4 Place your originals, and then press the [Start] key.

Placing originals on the exposure glass

1 Placing the first original on the exposure glass.

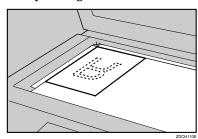

2 Press the [Start] key.


### Note

- ☐ When you select [Format] in step **2**, the original for the template should be placed first.
- ☐ To change the background image in Format mode, press the [#] key. Then place the next original for the template and press the [Start] key.
- 3 Place the next original on the exposure glass.
- 4 Press the [Start] key.

#### Note

☐ When you select [Format] in step **2**, repeat steps **3** and **4**. Placing originals in the optional document feeder

1 Place originals in the document feeder.

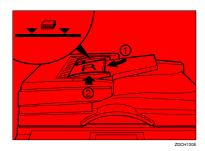


2 Press the [Start] key.

### Note

 - ☐ When you select [Format] in step **2**, the original for the template should be on the
- ☐ To change the background image in Format mode, press the [#] key. Then set the next original for the template and press the **[Start]** key.










# **Date Stamp**

Use this function to have the date stamped on prints.

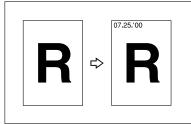

# Preparation

Before you use this function, you have to set the machine's internal clock with the user tools.  $\Rightarrow$  P.154 "1-6 Time Setting".

### Limitation

 
- ☐ The font size of the date cannot be changed.
- ☐ If you select Page Stamp and Date Stamp together, the last stamp direction selected takes priority.

## Note

- ☐ The default format of Date Stamp is "Month Day Year". You can change this setting with the user tools. See "Date Style Set"  $\Rightarrow$  P.150 "5. Stamp".
- ☐ You can edit the Date Stamp position.  $\Rightarrow$  P.161 "5-7 Position (Date)".

☐ The Date Stamp directions on the panel display and actual print images are as follows:

Date Stamp direction on the display	Print image	
07.25.'00 ZDZXX40E	07.25.00 ZDZX050E	07.25.00 ZDZX060E
07.25:00 ZDZX076E	07.25:00 ZDZX000E	07.25.'00 ZDZX090E
0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,	00.00 862.75 202X110E	0,0 9,5 7,0 2,0 2,0 2,0 2,0 2,0 2,0 2,0 2,0 2,0 2
0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,	00.959 100 ZDZX140E	S S S S S S S S S S S S S S S S S S S













1 Press the [Stamp] key.

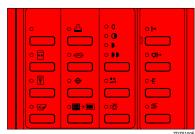

2 Make sure that [Date] is selected.



 - Press the [OK] key.
- 4 Select the desired position and direction with the  $[\leftarrow] [\rightarrow]$  or  $[\triangleleft]$ [▷] keys.





- Press the [OK] key.
- 6 Select the [Yes] or [No] key.






Note

☐ Press the [Yes] key if you wish to set the other Stamp functions. Place your original, and then press the [Start] key.


Placing your original ( $\square$ ) on the exposure glass

1 Place your original as shown in the illustration.

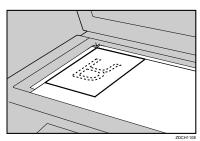

Placing your originals (□) in the optional document feeder

1 Place your originals as shown in the illustration.

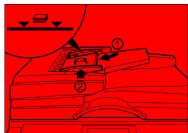












# Page Stamp

Use this function to have page numbers stamped on prints.

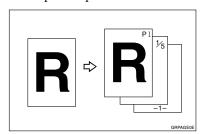

Three numbering formats are available:


- P1, P2,...., P5
- 1/5, 2/5,...., 5/5
- -1-, -2-,...., -3-

### Limitation

- ☐ The size and font of Page Stamp cannot be changed.
- ☐ If you select Page Stamp and Date Stamp together, the last stamp direction selected takes priority.




☐ Check the following table for the relationship between the Page Stamp direction on the panel display and the actual print image:

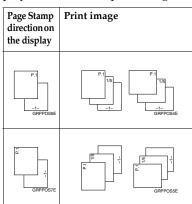

- ☐ You can edit the preset page numbering position with the user tools.  $\Rightarrow$  P.162 "5-10 Position (Page)".
- □ [P1, P2,..., P5] is the default format. You can change this default setting with the user tools. See "Type(Page)"  $\Rightarrow$  P.150 "5. Stamp".



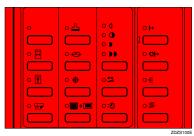

2 Select [Page] with the  $[\rightarrow]$  or  $[\triangleright]$ 





- Press the [OK] key.
- 4 Select the desired format with the  $[\leftarrow] [\rightarrow] \text{ or } [\triangleleft] [\triangleright] \text{ keys.}$















# Press the [OK] key.

If you selected [P1,P2] or [-1-,-2-]

1 Enter the first page number with the  $[\leftarrow] [\rightarrow]$  or  $[\triangleleft] [\triangleright]$ keys.

Page Stamp	ing	Select	with <>
First Pag (Set the		ge number t	o print)
( ← )	→ ···········	Cancel	OK



#### Note

- ☐ You can also enter the page number with the number keys.
- ☐ To change the value entered, press the [Clear/Stop] key and enter the new value.
- 2 Press the [OK] key.

If you selected [1/5,2/5]

Enter the last page number with the  $[\leftarrow] [\rightarrow]$  or  $[\triangleleft] [\triangleright]$ keys.

Page Stamping	Select with <>
Last Page :5	
(Set number of ori	ginals to print)
← →	Cancel OK



### Note

- ☐ You can also enter the page number with the number keys.
- ☐ To change the value entered, press the [Clear/Stop] key and enter the new value.

 
- 2 Press the [OK] key.
- 3 Enter the first page number with the  $[\leftarrow] [\rightarrow]$  or  $[\triangleleft] [\triangleright]$ keys.

Page Stamping	Select with <>
First Page : 1	
(Set the init. pag	e <u>number to print)</u>
←	Cancel OK



#### Note

- ☐ You can also enter the page number with the number keys.
- ☐ To change the value entered, press the [Clear/Stop] key and enter the new value.
- 4 Press the [OK] key.
- **6** Select the desired orientation with the  $[\leftarrow] [\rightarrow]$  or  $[\triangleleft] [\triangleright]$  keys.





- Press the [OK] key.
- Select the [Yes] or [No] key.





#### Note

☐ Press the **[Yes]** key if you wish to set the other Stamp modes.





110






Place your original, and then press the [Start] key.

Placing your originals (□) on the exposure glass

1 Place the first original as shown in the illustration.

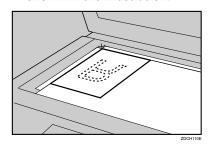


Note

 $\square$  Repeat step  $\square$  for the other originals.

Placing your originals ( $\square$ ) in the optional document feeder

1 Place your originals as shown in the illustration.

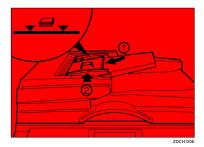

Note

☐ The first original should be on the top.


















# Stamp

Operation



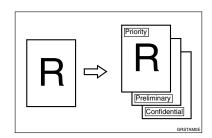

One of the following 3 messages can be stamped on prints.

CONFIDENTIAL

**PRIORITY** 


**PRELIMINARY** 

### Limitation

☐ Only one message can be stamped at a time.

#### Note

- ☐ You can change some Stamp settings (size, density, or position) with the user tools. See "Size", "Stamp Density", "Stamp Position"  $\Rightarrow$  P.150 "5. Stamp".
- ☐ The message "CONFIDENTIAL" is selected as a default. You can change this setting with the user tools. See "Type"  $\Rightarrow$  P.150 "5. Stamp".
- 1 Press the [Stamp] key.

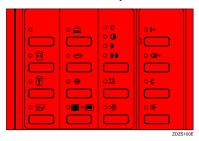


**2** Select [Stamp] with the  $[\leftarrow]$   $[\rightarrow]$  or [◁][▷] keys.






 - Press the [OK] key.
- 4 Select the desired message with the  $[\leftarrow] [\rightarrow]$  or  $[\triangleleft] [\triangleright]$  keys.





 - Press the [OK] key.
- 6 Select the page to be stamped with the  $[\leftarrow] [\rightarrow]$  or  $[\triangleleft] [\triangleright]$  keys.





Press the [OK] key.








Stamp

Select the stamp position with the [\(\rightarrow\)] [\(\rightarrow\)] [\(\rightarrow\)] keys.

Stamp Position	Select with <>
← →	Cancel OK



 - Press the [OK] key.
- Select the [Yes] or [No] key.






- Note
- $\square$  Press the **[Yes]** key if you wish to set the other Stamp modes.
- Place your original and press the [Start] key.


Placing your original  $(\square)$  on the exposure glass (contact glass)

1 Set your original as shown in the illustration.

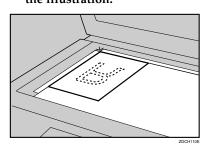

Placing your originals (  $\ensuremath{\square}$  ) in the optional document feeder

1 Place your originals as shown in the illustration.

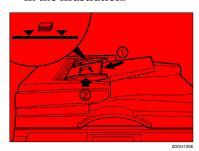














# **Memory Combine**

You can combine originals in four ways:

 - ♦ 4 single-sided originals → 1 single-sided print of 4 images 4 one-sided pages are printed onto 1 one-sided sheet, 4 original images on one side.
- ♦ 8 single-sided originals → 1 single-sided print of 8 images 8 one-sided pages are printed onto 1 one-sided sheet, 8 original images on one side.
- ◆ 16 single-sided originals → 1 single-sided print of 16 images 16 one-sided pages are printed onto 1 one-sided sheet, 16 original images on one side.
- Repeating an image over the entire print 1 original image is printed repeatedly.
- ☐ A separation line between images can be printed with the user tools. See "Comb. Sep. Line"  $\Rightarrow$  P.146 "4. Mode Setting".








Memory Combine






# Combining Several Single-sided Originals onto one Single-sided Print

 
♦ 4 single-sided originals → 1 single-sided print of 4 images




 $\clubsuit$  8 single-sided originals  $\rightarrow$  1 single-sided print of 8 images

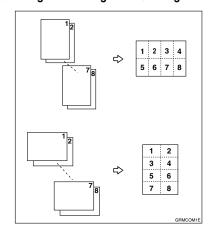

 ◆ 16 single-sided originals → 1 single-sided print of 16 images

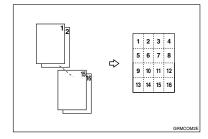











#### Limitation

- $\square$  To use "16 one-sided originals  $\rightarrow$  1 one-sided print of 16 images" mode, the optional document feeder is required.
- ☐ If the calculated ratio is under the minimum ratio, it is corrected within the range of the ratio automatically. However, with some ratios, parts of the image might not be copied.
- ☐ The machine cannot copy originals different in size and direction.

### Note

- ☐ The number of originals printed (combined) can be 4, 8, or 16.
- In this mode, the machine selects the reproduction ratio automatically. This reproduction ratio depends on the print paper size and the number of originals.
- ☐ When the original is placed at a different direction from the print paper, the machine automatically rotates the original image by 90° to match the print paper direction.
- □ You can set the machine to cancel Memory Combine mode after finishing your print job with the user tools. See "Cancel Comb." ⇒ P.146 "4. Mode Setting".
- ☐ Refer to the following table when you select the original and paper sizes.

### Placing originals in the optional document feeder (metric version)

Original	A3□	B4 <b>□</b>	A4 <b>□</b> □	B5 <b>□</b> □	A5 🕽 🗗
Paper					
A3□	*3	*3	*2	*2	*1
B4 <b>□</b>		*3	*3	*2	*2
A4 🕽 🗗			*3	*3	*2
B5 <b>□</b> □				*3	*3

 
<sup>\*1</sup> You can use these original and paper sizes in Combine 4, 8, 16 Originals mode.

 
### Placing originals in the optional document feeder (inch version)

Original	11"×17"□	8 <sup>1</sup> / <sub>2</sub> "×14" <b>□</b>	$8^1/_2$ " × 11" $\square$	$8^{1}/_{2}" \times 5^{1}/_{2}" \square \square$
Paper				
11"×17"□	*3	*3	*2	*1
8 <sup>1</sup> / <sub>2</sub> "×14" <b>□</b>		*3	*3	*2
8 <sup>1</sup> / <sub>2</sub> "×11" □□			*3	*2
$5^1/_2$ " $\times 8^1/_2$ " $\square$				*3

You can use these original and paper sizes in Combine 4, 8, 16 Originals mode.

<sup>\*3</sup> You can use these original and paper sizes in Combine 4 Originals mode.





You can use these original and paper sizes in Combine 4, 8 Originals mode.

<sup>\*3</sup> You can use these original and paper sizes in Combine 4 Originals mode.

You can use these original and paper sizes in Combine 4, 8 Originals mode.



Memory Combine

### Placing originals on the exposure glass (metric version)

Original	A3□	B4 <b>□</b>	A4 🕽 🗗	B5 <b>□</b> □
Paper				
A3□	*2	*2	*1	*1
B4 <b>□</b>		*2	*2	*1
A4 🕽 🗗			*2	*2
B5				*2


You can use these original and paper sizes in Combine 4, 8 Originals mode.

### Placing originals on the exposure glass (inch version)

Original	11"×17"□	$8^1/_2$ " × 14" $\Box$	$8^1/_2$ " × 11" $\square$
Paper			
11"×17"□	*2	*2	*1
8 <sup>1</sup> / <sub>2</sub> "×14" <b>□</b>		*2	*2
8 <sup>1</sup> / <sub>2</sub> "×11" □□			*2
$5^1/_2$ " $\times 8^1/_2$ " $\square$			

 $<sup>^{*1}</sup>$  You can use these original and paper sizes in Combine 4, 8 Originals mode.  $^{*2}$  You can use these original and paper sizes in Combine 4 Originals mode.


# Press the [Combine] key.

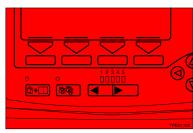

# **2** Select [Memory Combine] with the $[\rightarrow]$ or $[\triangleright]$ key.

 Combine		Select w	ith <>
Combine 2	Quadruple	Memory	combine
(Print 2 or	iginals in 1	page)	
<b>←</b>	→ Ca	ncel	OK










You can use these original and paper sizes in Combine 4 Originals mode.





 - Press the [OK] key.
- 2 Select your desired mode.








- Press the [OK] key.
- 6 Place your originals.


Placing your original  $(\square)$  on the exposure glass

• Place your original as shown in the illustration.

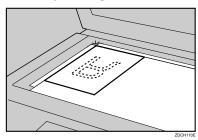

Placing your originals  $(\ensuremath{\,\square})$  in the optional document feeder

• Place your originals as shown in the illustration.

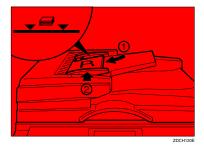

 $\Box$  The first original should be on the top.













# Press the [Start] key.
  
### Note


☐ Even if the number of originals is less than the number required in the selected mode, prints can be made as shown in the illustration. In this case, press the [#] key after all the originals have been scanned.





☐ When placing an original on the exposure glass or one sheet at a time in the optional document feeder, repeat steps **G** and **Z**. After placing the last original, press the [#] key, and then the [Start] key.

# Repeat

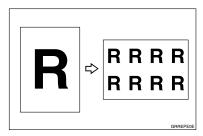


#### Limitation


☐ Part of the repeated image might not be printed depending on the paper size, direction and reproduction ratio.

#### Note

  - ☐ The number of repeated images depends on the original and paper size, and reproduction ratio.
- ☐ Check the following table for the relationship between the direction of the original and paper, and the number of repeated images.













**♦** Example: copying A4 □ originals onto A3□ paper.

The number of repeated images	Reproduction ratio	Print image
4	71%	GRREPESE

◆ Example: copying A5□ originals placed in the optional document feeder onto A3

□ paper.

Number of repeated images	Reproduction ratio	Print image
16	50%	GAREPE4E

♦ Example: copying  $8^{1}/_{2}$ " × 11"  $\Box$  originals onto 11" × 17"  $\Box$  paper.

	ge
2 100%	GREPESE

◆ Example: copying A5

originals placed in the optional document feeder onto A4 paper.

Number of repeated images	Reproduction ratio	Print image
8	50%	GAPEPESE










# Press the [Combine] key.




 **2** Select [Memory Combine] with the  $[\rightarrow]$  or  $[\triangleright]$  key.





 - Press the [OK] key.
- 4 Select [Repeat] with the  $[\rightarrow]$  or  $[\triangleright]$  key.






- Press the [OK] key.
- **6** Select the reproduction ratio.

 ⇒ P.28 "Reducing and Enlarging Using Preset Ratios".















# **2** Set your original.

 
Placing your original  $(\square)$  on the exposure glass



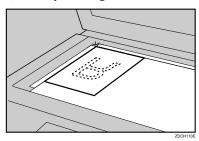


Placing your originals ( $\square$ ) in the optional document feeder

• Place your originals as shown in the illustration.

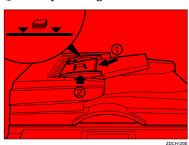

8 Press the [Start] key.

 



# 2. Optional Functions

# **Optional Document Feeder**

Insert a stack of originals in the document feeder. It will be fed automatically.

# **Originals**

Placing the following originals in the document feeder might cause misfeeds or damage to the originals.

Place the following kinds of originals on the exposure glass:

- Originals heavier than 128g/m<sup>2</sup>, 34 lb
- Originals lighter than 52g/m<sup>2</sup>, 14 lb
- Originals smaller than 148mm  $\times$  210mm, 5.9"  $\times$  8.3"
- Originals larger than 297mm  $\times$  864mm, 11.6"  $\times$  34.0"
- Stapled or clipped originals
- Perforated or torn originals
- Curled, folded, or creased originals
- Originals with any kind of coating, such as thermal fax paper, art paper, aluminum foil, carbon paper, or conductive paper
- Bound originals such as books
- Damaged originals
- Originals with glue on them
- Pasted originals
- Originals written in pencil
- Thin originals that are a little stiff
- Originals with index tabs
- Transparent originals such as OHP transparencies or translucent paper


The following original sizes placed in the document feeder can be detected.

Metric version	A3 🗗, B4 🗗, A4 🞵 🗗, B5 🞵 🗗, A5 🗓 🗗
Inch version	$11" \times 17" \square, 8^1/_2" \times 14"$ $\square, 8^1/_2" \times 11" \square \square, 5^1/_2"$
	$\times 8^1/2$ " $\square$



☐ Place originals after correction fluid and ink have completely dried. Not taking this precaution could mark the exposure glass and cause marks to be printed.

For standard printing functions, set originals as shown below.

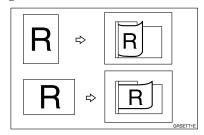

If the original is place in a different direction from the print paper, the machine automatically rotates the original image by 90° to match the print paper direction.

You cannot place originals of different sizes at the same time.

When you use thin originals, place one original at a time in the document feeder or place them on the exposure glass.










#### Optional Functions

The first 8mm, 0.32", of the leading edge and the last 2mm, 0.08" of the trailing edge cannot be printed. Make sure the leading edge margin is at least 8mm, 0.32", and the trailing edge margin is at least 2mm, 0.08".

Do not stack originals above the limit mark.

# **Placing Originals in the Document Feeder**

- Adjust the guide to the original
- 2 Insert the aligned originals face up into the document feeder.

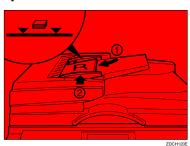


### Limitation

☐ Approximately 50 originals  $(80g/m^2, 21 lb)$  can be inserted at one time in the document feeder. The first (top) original will be fed first.


#### Note

- ☐ To avoid a multi-sheet feed, shuffle the originals before placing them in the document feeder.
- ☐ The guides must fit snugly against both sides of the stack.

Adjust any print settings as necessary, and then press the [Start] key.

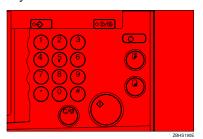



4 Make your prints.

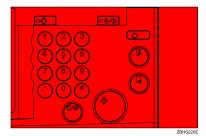

#### Note

  ☐ If the next original has been placed in the document feeder before the machine stops, that original is fed automatically and a trial print is delivered to the paper delivery tray after the print of the first original is completed. Check the image position of the trial print of the next original. If necessary, make proof prints using the [Proof] key to check the image position again.










# Combine Printing with the Document Feeder

### 


⇒ P.61 "Combine Originals" for details.

1 Insert the 2 originals face up.

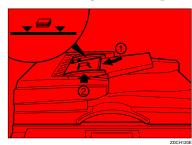

### Note

- ☐ The first original will be printed on the left side of the paper.
- 2 Enter the number of prints with the number keys.

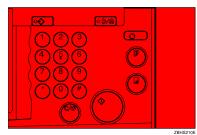


Check the print paper size and the reproduction ratio.

### Note

☐ To have the machine choose a suitable ratio automatically, use Auto Magnification mode. ⇒ P.30 "Auto Magnification".

Press the [Combine] key.

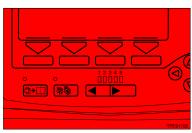



Select [Combine 2] or [Quadruple] with the  $[\leftarrow][\rightarrow]$  or  $[\triangleleft][\triangleright]$  keys.


Combine		Select	with <>
Combine	Quadruple	Memor	y combine
(Print 2	originals in 1	page)	
<b>←</b>	→ Ca	ncel	OK



  - Press the [OK] key.
- Press the [Start] key.

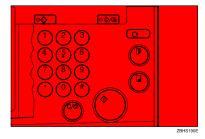







Optional Functions

8 Check the image position of the trial or proof print.

### Note

- $\square$  If the image position is not correct, adjust it using the [Image **⋄**] key (⇒ P.23 "Adjusting the Position of Printed Images").
- ☐ After the first original has been stored, the second original is fed.
- ☐ If you place only one original, the beeper sounds after the first original has been scanned in. Place the second original and any print settings you require. Then press the [Start] key.

### **Manual Class Mode with Two** or More Originals Using the **Document Feeder**

### 

⇒ P.57 "Manual Class Mode with 2 or More Originals".

Press the [Class] key.



2 Select [Manual] with the  $[\rightarrow]$  or [▷] key.







- Press the [OK] key.
- 4 Enter the desired number of prints for the first original with the number keys.

Manual:		Input	No.	with	ten	keys
1:	2:	3:		4:	- 5:	
6:	7:	8:		9:	- 10:	
—	)	$\neg \cap$	Cand	eT ]:"	- 0	

Press the [#] key.

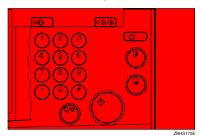

6 Enter the desired number of prints for the second original with the number keys.

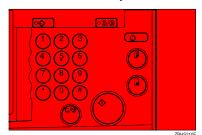










## Press the [#] key.

### Note


- ☐ Repeat steps **6** and **7** for each original.
- ☐ Up to 20 classes can be set.
- Press the [OK] key.
- Place your originals face up in the document feeder.

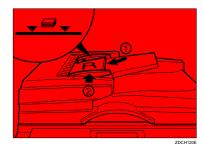

### Note

☐ The originals are fed from the top of the stack. Make sure that the originals are placed in the correct sequence with the first original on the top.


# Press the [Start] key.

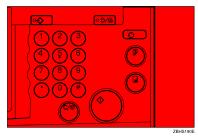

# Check the image position of the trial or proof print.


### Note

- □ If the image position is not correct, adjust it using the [Image %] key (⇒ P.23 "Adjusting the Position of Printed Images").
- Press the [Auto Cycle] key.

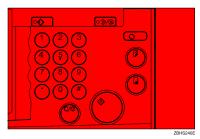


### Note

 - ☐ In Auto Cycle mode, printing starts automatically after a trial print is delivered.
- Press the [Print] key.

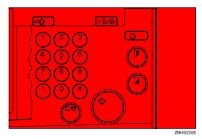





Optional Functions



# Color Printing Using the Optional Color Drum


Color drum units are available as options in addition to the standard black unit. For making color prints, a separate drum unit is necessary for each color.



☐ If the ink on the color drum dries, use the Quality Start mode.  $\Rightarrow$  P.74 "Quality Start Mode".

### **Making Color Prints**

1 Make sure that the color drum indicator is lit.

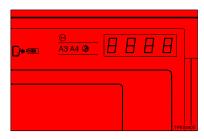


- Press the [Start] key.
- Check the image position of the trial or proof print.



- ☐ If the image position is not correct, adjust it using the [Image %] key (⇒ P.23 "Adjusting the Position of Printed Images").
- 4 Make your prints.


## **Changing the Color Drum Unit**

- 1 Open the front door.
- 2 Lower the drum unit lock lever B1.

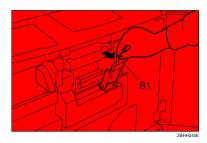





☐ Make sure the green light beside the drum unit lock lever is on before sliding out the drum. If the light is off, close the front door, wait for five seconds, and then open.

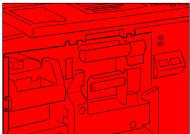

ZADH

 


 






3 Pull the drum unit handle out slowly (B2).

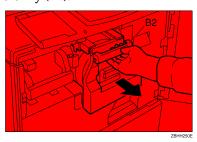


Lift the upper drum stay (B3) a little to unlock the drum unit, and then pull out the drum unit while holding the drum unit handle (B2) and the upper drum stay (B3).

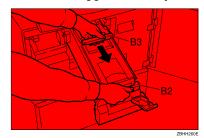


**#**Important


- ☐ Be careful not to let the drum unit fall.
- 5 Make sure the optional color drum lock is securely set.

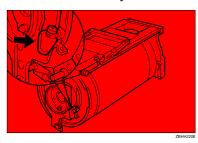


1 Insert the color drum unit along the guide rail.

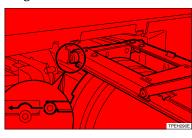


**1** Lower the drum unit lock lever (B1) of the inserted drum.

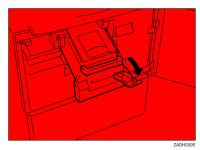

8 Slide in the drum unit until it locks in position.

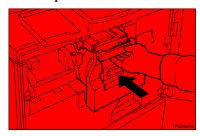

2 Lift drum unit lock lever B1.

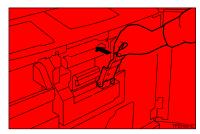









Sapphire\_gb3\_FM.book Page 130 Monday, December 11, 2000 10:21 AM



Optional Functions


Close the front door.

### Note

☐ Make sure that the **Open Cover**/ Unit indicator turns off, and the Color Drum indicator turns on.


### **Printing in Two Colors**

After printing in one color, you can print in another color on the same side of the print.

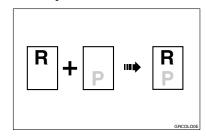


### Note


- ☐ Let the ink on the prints dry for a while before printing on them again.
- ☐ If the prints are not dry, the paper feed roller might become dirty. In this case, wipe the roller with a cloth.
- ☐ You cannot print in two colors at one time.
- 1 Prepare the two originals. Place the first original on the exposure glass.

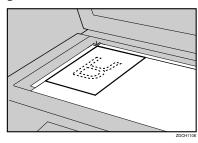

2 Enter the number of prints with the number keys.

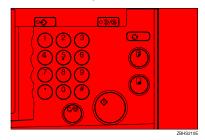


Press the [Start] key.

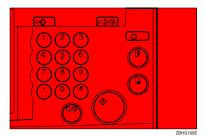



4 Check the image position of the trial or proof print.

#### Note

   
- ☐ If the image position is not correct, adjust it using the [Image **⋄**] key ( $\Rightarrow$  P.23 "Adjusting the Position of Printed Images").
- Press the [Print] key.

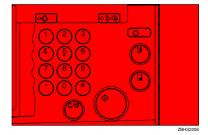










**1** Remove the prints from the paper delivery tray and place them on the paper feed tray again as shown in the illustration.

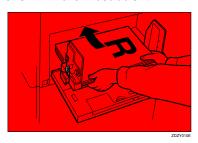

**7** Change the drum unit. ⇒ P.128 "Changing the Color Drum Unit".



- Place the second original and press the [Start] key.
- **9** Check the image position.
- Press the [Print] key.









**Optional Functions** 

# Changing the Drum Size

To save costs on master rolls and ink, you can shorten the length of each master by changing to an optional smaller drum.

## Printing Area (At 23°C/73°F, 65% RH)

#### Metric version

	A3 drum	More than 290 × 410mm, 11.4" × 16.2"
Ī	A4 drum	More than $290 \times 200$ mm

#### Inch version

11"×17"	More than 290 × 420mm,
drum	11.4" × 16.6"
8 <sup>1</sup> / <sub>2</sub> "×11" drum	More than 11.4" × 7.8"

### **Master Cut Length**

 
A3 drum...320mm × 530mm, 12.5" × 20.9", 255 masters/roll

 $11" \times 17"$  drum... $320 \times 540$ mm,  $12.5" \times$ 21.3", 245 masters/roll

Optional A4,  $8^1/2$ " × 11" drum...320mm × 325mm, 12.5" × 12.8", 410 masters/roll



 $\square$  For changing the drum unit,  $\Rightarrow$ P.128 "Changing the Color Drum Unit".









# **Sort/Class Sort**

Use this function to have the machine scan your originals and automatically sort the prints.

### Note


- $\Box$  The optional sorter is required.
- ☐ The paper sizes that can be used with the Sort and Class Sort modes are as follows:

Metric version	A3□, B4□, A4□□, B5□
Inch version	11"×17"□,81/2"× 14"□,81/2"×11" □□

- ☐ The maximum bin capacity is as follows:
  - 50 sheets (52 80g/m², 13.9 21.2 lb)
  - 40 sheets (81 105g/m², 21.5 27.8 lb)
- ☐ If the prints have many images, the bin capacity might be reduced.
- ☐ When the number of prints exceeds the bin capacity, the machine does the following:


Number of Sets	Operation
1 - 20 sets	Prints continue to be delivered to the 21st bin.
21 - 40 sets	Printing stops. Printing restarts when you remove all prints from the bins and press the [Print] key.

□ When you make less than 20 sets of prints with the Sort/Class Sort mode (first job), the prints are delivered to the lower tray bin. If you make prints (less than 20 sets) of another original with the Sort/Class Sort mode (second job) without removing the previously made prints from the bin, the prints of the second job will be delivered to the upper tray bin of the sorter.

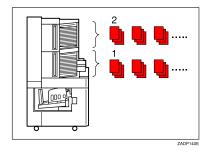

 - 1: First Job
- 2: Second Job
- ☐ When you remove prints from the bins, be careful not to rub the printed side against the bin. Otherwise, the printed side might be marked with ink. This is likely to occur especially when printing documents with many images or solid areas. An easy solution is to place a blank sheet of paper on top of the stack of originals before you make the master and prints.








#### Optional Functions

☐ If you cannot remove prints from the sorter bins, you can widen the gap between bins by pressing the green button. If you hold down the button, the bins ripple open.

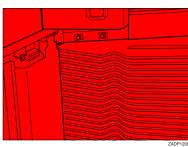

☐ When the optional document feeder is installed and the Sort mode or Class Sort mode is activated with the Auto Cycle mode, the machine can make the master and prints in one operation.  $\Rightarrow$  P.49 "Auto Cycle".

### Sort

Use this function to have print sets sorted in sequential order.



 $\square$  When the number of prints exceeds 40 sets, the prints are delivered to the paper delivery tray with the Job Separation mode.

Number of sets	Where prints are delivered
1 - 40 sets	Sorter  RIP
41 sets -	Paper Delivery Tray (Job Separation mode)

1 Press the [Sorter] key.

 


2 Make sure that [Sort] is selected.



- Enter the number of prints using the number keys.
- 4 Place the originals.
- Press the [Start] key.
- 6 Press the [Print] key.
  - Note
  - ☐ A trial print is delivered to the paper delivery tray.
  - ☐ The prints are delivered to the bin at the bottom of the sorter.
  - ☐ When you place the originals in the optional document feeder, the machine automatically continues making their masters without you having to press the [Start] key after page 2. Repeat step 6 for the reset of the originals.











### **Class Sort**

Use this function when copying a single-page original to have the same number of prints stacked in each bin.

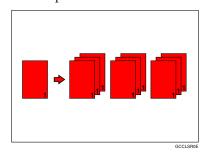

Note

- ☐ The maximum number of sets that you can enter for the Class Sort mode is 38.
- ☐ If prints remain in the sorter, the maximum number of sets that you can enter is 18.
- 1 Press the [Sorter] key.

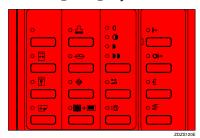

2 Select [Class Sort] with the [→] or [▷] key.





Press the [OK] key.

With the number keys, enter the desired number of prints for each set, and then press the [#] key.



With the number keys, enter the desired number of sets, and then press the [#] key.

 


- 6 Press the [OK] key.
- Place your originals.
- Press the [Start] key, and then press the [Print] key.



- If you wish to make prints of another original with the Class Sort mode, repeat the procedure after step 2.
- ☐ The prints are delivered to the bin at the bottom of the sorter.








Optional Functions



 2









# 3. Combination Chart

# **Combination Chart**

This combination chart shows which modes can be used together.

☆	means that these modes can be used together.
X	means that these modes cannot be used together.
*1	means that these modes cannot be used together (the function chosen second takes priority)
*2	means that these modes cannot be used together (the function chosen first takes priority)

		Fu	nci	ior	ı ci	105	en :	sec	one	1																							
		Letter, Photo, Letter/Photo, Pencil, Tint mode	Economy mode	☆ Auto Cycle	□ Preset Reduce/Enlarge	☆ Zoom	△ Auto Magnification Selection	□ Directional Magnification (%)	Directional Magnification (size)	Combine Originals (2 Images on one sheet)	Combine Originals (4 Images on one sheet)	Memory Combine mode (4 Originals)	Memory Combine mode (8 Originals)	Memory Combine mode (16 Originals)	Edge Erase	All Class mode	Auto Class mode	Manual Class mode	Class mode			★ Form	Storage Overlay		¬ Page Stamp	Stamp	Repeat		▲ Original Storage	Skip Feed	Sort	Class Sort	On Line
	Letter, Photo, Letter/Photo, Pencil, Tint mode	-	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	*1	*1	☆	☆	☆	*1
	Economy mode	☆		☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆
	Auto Cycle	☆	☆		☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆
	Preset Reduce/ Enlarge	☆	☆	☆	-	*1	*1	*1	*1	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	*1	☆	☆	☆	*1
	Zoom	☆	☆	☆	*1	-	*1	*1	*1	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	*1	☆	☆	☆	*1
	Auto Mag- nification Selection	☆	☆	☆	*1	*1	-	*1	*1	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	*1	☆	*1	☆	☆	☆	*1
earlier	Directional Magnifica- tion (%)	☆	☆	☆	*1	*1	*1		*1	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	*1	☆	☆	☆	*1
pecified o	Directional Magnifica- tion (size)	☆	☆	☆	*1	*1	*1	*1		☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	本	☆	☆	本	☆	☆	☆	☆	*1	☆	☆	本	*1
Function specified earlier	Combine Originals (2 Images on one sheet)	☆	☆	☆	☆	☆	☆	☆	☆		*1	*1	*1	*1	☆	☆	☆	☆	☆	☆	*2	*2	*2	*2	*2	*2	*1	☆	*2	☆	☆	☆	*1



 






### Combination Chart

		Fu	nct	tion	ı cł	os	en	sec	one	d																							
		Je																															
		Letter, Photo, Letter/Photo, Pencil, Tint mode	Economy mode	Auto Cycle	Preset Reduce/Enlarge	Zoom	Auto Magnification Selection	Directional Magnification (%)	Directional Magnification (size)	Combine Originals (2 Images on one sheet)	Combine Originals (4 Images on one sheet)	Memory Combine mode (4 Originals)	Memory Combine mode (8 Originals)	Memory Combine mode (16 Originals)	Edge Erase	All Class mode	Auto Class mode	Manual Class mode	Class mode	Job Separation	Overlay	Form	Storage Overlay	∴ Date Stamp	Page Stamp	Stamp	Repeat	Make-up	Original Storage	Skip Feed	Sort	Class Sort	On Line
	Combine	☆	☆	☆	☆	☆	☆	☆	☆	*1		*1	*1	*1	☆	☆	☆	☆	☆	☆	*2	*2	*2	*2	*2	*2	*1	☆	*2	☆	☆	☆	*1
	Originals (4 Images on																																
	one sheet)																																
	Memory	☆	☆	☆	☆	☆	☆	☆	☆	*1	*1		*1	*1	☆	☆	☆	☆	☆	☆	*2	*2	*2	*2	*2	*2	*1	*2	*2	☆	☆	☆	*1
	Combine																																
	mode (4																																
	Originals)									*1	*1	*1		*1							*2	*2	*2	*2	*2	*2	*1	*2	×				*1
	Memory Combine	☆	☆	☆	☆	☆	☆	☆	☆	"1	1	"1	_	"1	☆	☆	☆	☆	☆	☆	"2	"2	.7	"2	.7	.7	"1	"2	*2	☆	☆	☆	"1
	mode (8																																
	Originals)																																
	Memory	☆	☆	☆	☆	☆	☆	☆	☆	*1	*1	*1	*1	-	☆	☆	☆	☆	☆	☆	*2	*2	*2	*2	*2	*2	*1	*2	*2	☆	☆	☆	*1
	Combine																																
	mode (16																																
	Originals) Edge Erase	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆		☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	*1	☆	☆	☆	*1
	All Class	ν Ω	쑈	₩	₩	₩ W	₩	₩	₩	₩ \$	쑈	쑈	₩ W	₩	☆	м	*1	*1	*1	₩	₩ \$	쑈	₩	₩ \$	ν Δ	쑈	쑈	₩ \$	1 ☆	쑈	*2	*2	*1
	mode	M	×	A	×	M	M	M	A	×	×	M	M	M	M		1	1	1	×	×	M	×	×	×	M	×	×	×	M	_	_	1
	Manual	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	*1	*1	-	*1	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	*2	*2	*1
	Class mode																																
	Class mode	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	*1	*1	*1	-	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	*2	*2	*1
	Job Separa- tion	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆		☆	☆	*1	☆	☆	☆	☆	☆	☆	☆	☆	X	☆
	Overlay	☆	☆	☆	☆	☆	☆	☆	☆	*2	*2	*2	*2	*2	☆	☆	☆	☆	☆	☆		*1	*1	*2	*2	*2	*2	*2	*2	☆	☆	☆	*1
	Form	샀	샀	₩	₩	☆	ν Ω	₩	₩	*2	*2	*2	*2	*2	샀	₩	☆	☆	☆	₩	*1			*2	*2	*2	*2	*2	*2	☆	ĭ ☆	☆	*1
	Storage	☆	☆	☆	☆	☆	☆	☆	*2	*2	*2	*2	*2	☆	☆	☆	☆	☆	☆	*1	*1		☆	☆	☆	*2	*2	*2	*2	☆	☆	☆	*1
	Overlay																																
	Date Stamp	☆	☆	☆	☆	☆	☆	☆	☆	*2	*2	*2	*2	*2	☆	☆	☆	☆	☆	☆	*2	*2	☆	_	☆	☆	*2	☆	*2	☆	☆	☆	*1
	Page Stamp	☆	☆	☆	☆	☆	☆	☆	☆	*2	*2	*2	*2	*2	☆	☆	☆	☆	☆	☆	*2	*2	☆	☆	-	☆	*2	☆	*2	☆	☆	☆	*1
	Stamp	☆	☆	☆	☆	☆	☆	☆	☆	*2	*2	*2	*2	*2	☆	☆	☆	☆	☆	☆	*2	*2	*2	☆	☆ \$		*2	☆	*2	☆	☆	☆	*1
	Repeat Make up	☆ *2	公人	☆	☆	☆	*2	☆	☆	*1	*1	*1	*1	*1	公人	☆	☆	☆	公人	☆	*2	*2	*2	*2	*2 *2	*2	 *2	*2	*2	☆	☆	☆	*1 *1
earlier	Make-up Original	*2	☆	☆	☆ *2	☆ *2	☆ *2	☆ *2	☆ *2	☆ *2	☆ *2	*2 *2	*2 *2	*2 *2	☆ ☆	☆	☆	☆	☆	☆ *2	*1 *2	*1 *2	*2 ☆	*2 *2	*2 *2	*2 *2	*2	E	- ☆	☆	☆	☆	*1
eaı	Storage	4	M	M	~	~	~	4	-	4		~	~	~	M	M	M	M	M	4	4	4	M	4	_	4	4	_	M	M	M	M	1
fied	Skip Feed	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆		☆	☆	☆
specified	Sort	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	*2	*2	*2	*2	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	-	*1	☆
ds 1	Class Sort	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	*2	*2	*2	*2	Х	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	*1	-	Χ
Function	On Line	*2	☆	☆	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	☆	*2	*2	*2	*2	*2	*2	*2	*2	*2	☆	☆	Χ	
nuc	Image Rota-	☆	☆	☆	☆	Х	☆	X	X	Χ	X	☆	☆	☆	☆	☆	☆	☆	☆	☆	Χ	Χ	X	Χ	X	X	Χ	Χ	X	☆	☆	☆	Χ
丘	tion	l			Ì	Ì						Ì	Ì		Ì		Ì			Ì					Ì	Ì			Ì				






# **Accessing the User Tools**

The user tools allow you to customize various default settings. This section is intended for the machine administrator.

Press the [User Tools] key.

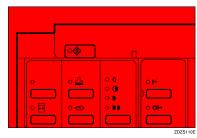


Select the desired user tools menu. ⇒ P.141 "User Tools Menu".

User Tools 1/2	Select with ∞
1 System	2 Set Operat'n Mode
3 Initial Setting	4 Mode Settig
Prev. Next	Cancel OK

Using the  $[ \triangleleft ]$ ,  $[ \triangleright ]$ ,  $[ \triangle ]$ , or  $[ \triangledown ]$  key

Search for the desired user tool number (1 to 7) with the [▷], [▷], [△], or [♡] key.

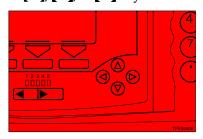


Note

- ☐ **[Next]**: Press to go to the next page.
- ☐ [Prev.]: Press to go back to the previous page.
- 2 Press the [OK] key.
- Search for the desired user tool number of each function with the [▷], [▷], [△], or [▽] key.
- 4 Press the [OK] key.

Using the number keys

Enter the desired user tool number (1 to 7) with the number keys.

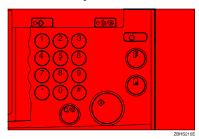

- 2 Press the [OK] or [#] key.
- 3 Enter the desired user tool number of each function with the number keys.
- 4 Press the [OK] or [#] key.








Change the settings by following the instructions on the panel display, and then press the [OK] key.

### Note

- $\square$  To change the value entered, press the [Clear/Stop] key before pressing the [OK] key. Then enter the new value.
- $\square$  [Cancel]: Press to return to the previous menu without changing any data.
- Press the [User Tools] key to return to the standby display.

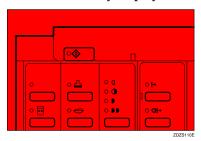

### Note

- ☐ The settings are not canceled even if the main switch is turned off or the [Clear Modes/ **Energy Saver**] key is pressed.
- ☐ You can also return to the standby display by pressing the [Cancel] key.







# **User Tools Menu**

# 

For accessing the user tools,  $\Rightarrow$  P.139 "Accessing the User Tools".

# 1. System

No.	Mode	Description
1	Auto Reset	The machine returns to its initial condition automatically after your job is finished. The automatic reset time can be set from 1 to 5 minutes or off (0 minute).
		<ul><li>✓ Note</li><li>□ Default: Off</li></ul>
2	R. Cntr. Display	Use to display the total number of masters and prints.
		<b> ∅</b> Note
		☐ A trial print delivered to the paper delivery tray after pressing the <b>[Start]</b> key will not be counted.
3	Reset R. Counter	Choose whether the total number of masters and prints is reset.
		☐ Default: Not clear
4	mm/inch	Choose the units of measurement shown on the panel display.
		□ Default:
		Metric version: mm
		Inch version: inch
5	Language on LCD	The language used for panel display messages can be selected.
		□ Default: English
6	Time Setting	Use to set the machine's internal clock.
		Ø Note
		☐ The clock must be adjusted if you change the clock to daylight saving time/summer time, or return to standard time.
		₽ Reference
		For setting the clock, $\Rightarrow$ P.154 "1-6 Time Setting".











No.	Mode	Description
7	Data Print	Use to print out the following data.
		☐ Available settings:
		<ul> <li>Log Data (Number of prints made, how many times paper misfeeds occur and so on.)</li> </ul>
		Reset Counters (Number of prints and master made under each user code.)
		Store Class (Registered number of students in each class.)
8	Energy Saving	You can set the time until the Energy Saver mode starts.
		☐ Default: 3 Min. (minutes)













# 2. Set Operat'n Mode

No.	Mode	Description
1	Min. Quantity	The minimum print quantity can be set between 0 and 9999.
		Example: If you specify 20 as minimum number of prints, runs of 20 or more prints will be accepted, print runs of less than 20 prints will not be accepted.
		<b>∅</b> Note
		☐ Default: 0
2	Max. Quantity	The maximum print quantity can be set between 0 and 9999.
		<b> ∅</b> Note
		☐ Default: 9999
3	CopyCount Display	The counter can be set to show the number of prints made (Up), or the number of prints left to be made (Down).
		<b> ∅</b> Note
		☐ Default: Down
5	Panel Beeper	Turns the beeper on or off.
		☐ Default: STD. (standard)
		☐ Available settings:
		ALL OFF (The beeper does not sound when you press keys or when warning messages appear on the panel display.)
		STD. (When you press a key, the beeper does not sound. When warning messages appear on the panel display, the beeper sounds.)
		<ul> <li>ALL ON (The beeper sounds when you press a key or when warning messages appear on the panel display.)</li> </ul>
6	LCD Contrast	You can adjust the brightness of the panel display.
7	Delivery Capaci-	You can set the maximum number to make prints.
	ty	<b> ∅</b> Note
		☐ Default: Yes (1000 sheets)













# 3. Initial Setting

No.	Mode	Description
1	Paper Type	Specifies the paper type at power on.
		<b> ∅</b> Note
		☐ Default: Std. (Standard)
2	MSTR Makg. Dn-	Specifies the image density at power on.
	sity	<b> ∅</b> Note
		☐ Default: Std. (Standard)
3	Original Priority	Specifies the original mode at power on.
		<b> ∅</b> Note
		☐ Default: Letter
4	Reproduct'n Ra-	Adjust a fixed reproduction ratio between 50 and 200%.
	tio	<b> ∅</b> Note
		☐ Default:
		• Metric version: 71%, 82%, 87%, 93%, 100%, 115%, 122%, 141%
		• Inch version: 65%, 74%, 77%, 93%, 100%, 121%, 129%, 155%
		₽ Reference
		For setting the ratios, $\Rightarrow$ P.154 "3-4 Reproduction Ratio" 3–4 Reproduction ratio.
5	Class Enter No.	Before using All Class or Auto Class mode, register the number of students in each class with this function.
		<b>∅</b> Note
		☐ You can store student numbers for up to 9 grades with 12 classes in each, giving a maximum of 108 classes. Each class can have up to 9999 students.
		Reference
		For registering the number of students, $\Rightarrow$ P.155 "3-5 Class Enter No." 3–5 Class NO.
6	LT/Photo Contrast	Specifies the contrast level for Letter/Photo when the power is switched on or after mode settings are cleared.
		<ul><li>✓ Note</li><li>□ Default: Standard</li></ul>
7	LT/Photo Priority	Specifies the screen image in Letter/Photo mode when you press the [Original] key.
		<b> ∅</b> Note
		☐ Default: Letter











User Tools Menu

No.	Mode	Description
8	Photo Contrast	Specifies the contrast level for Photo when the power is switched on or after mode settings are cleared.
		<b>⊘</b> Note
		☐ Default: Standard
9	Photo(Screen)	Specifies the screen image in Photo mode when you press the <b>[Original]</b> key.
		✓ Note
		☐ Default: Standard
10	Eco.Mode ON/ OFF	Specifies whether Economy Mode is set to On or Off when the power is switched on or after mode settings are cleared.
		✓ Note
		☐ Default: Off
11	Margin Eras.Area	Adjust the erase edges margin.
		<b>⊘</b> Note
		☐ Default: 2 <i>mm</i> , 0.1"
12	Ratio Priority	You can set the primary ratio on the display when you press the <b>[Ratio]</b> key.

















# 4. Mode Setting

No.	Mode	Description
1	Auto Cycle ON/ OFF	Specifies whether Auto Cycle mode is selected at power on.  Note
		□ Default: ON
2	Class Manual Set	You can use one original or multiple originals in Manual Class mode.
		<ul><li>✓ Note</li><li>□ Default: Std. (One original)</li></ul>
3	Ignore Paper Size	If you are making prints on non-standard paper and the original image does not entirely appear on the print, set paper size detection to "Ignore". The machine will not detect the paper length.
		<ul><li>✓ Note</li><li>□ Default: Not to ignore</li></ul>
4	No Orig. Size DF	When you set long originals in the optional document feeder, set original detection to "Ignore". The machine will not detect the original size.
		<ul><li>✓ Note</li><li>□ Default: Not to ignore</li></ul>
5	No Orig. Size	When you place originals of non standard sizes on the exposure glass, set original detection to "Ignore". The machine will not detect the original size.
		<ul><li>✓ Note</li><li>□ Default: Not to ignore</li></ul>
6	Background ON/ OFF	When you make prints in Photo, Letter/Photo, or Tint mode, the background of the prints might become dirty. Turn Background On to improve the clarity of your prints.
		<ul><li>✓ Note</li><li>□ Default: W/O back. correction (off)</li></ul>
7	Longer Paper	You can select whether you can use paper longer than 432mm, 17.0" or not.
		<ul><li>✓ Note</li><li>□ Default: Not to use</li></ul>
8	Combine	If you select "Automatic (Auto Combine mode)", you can make two or four identical images on one sheet by pressing the [Combine] key and [Start] key.
		<ul><li>✓ Note</li><li>□ Default: Normal (Combine Originals mode)</li></ul>
		$\nearrow$ Reference For using Auto Combine mode, ⇒ P.66 "Auto Combine Mode".

4











User Tools Menu

No.	Mode	Description
9	Comb. Sep. Line	You can select a separation line in Memory Combine mode.  Note Default: None Available settings:  a b c c c c c c c c c c c c c c c c c c
10	Cancel Comb.	Specifies whether Combine Originals or Memory Combine mode is cleared after finishing your print job.  Note  Default: Not to cancel
11	No. of Skip Feed	Specifies the number of drum rotations in Skip Feed mode at power on. You can also select whether you can change the number of drum rotations temporarily when you press the [Skip Feed] key. ⇒ P.68 "Skip Feed Printing".  Note Default: Panel display: Display Number of Skip Feed: 2  Reference For changing the number of rotations, ⇒ P.157 "4-11 No. of Skip Feed".
12	Idling for Q.start	When you use the Manual Quality Start mode, you can select how many times the drum unit idles.  Note  Default: 7







 







No.	Mode	Description
13	Setting Q.start	If the machine is not used for a long period of time, the ink on the drum might dry causing image quality to deteriorate. The Auto Quality Start mode automatically recovers image density quality after a selected time has passed. If Auto Quality Start mode is set to "Not to use", you can regain print quality by making a few extra prints or you can use the Manual Quality Start mode.
		<b><i>≫</i></b> Note
		☐ Default:
		Before print: Yes
		After print: Yes
14	No. of Q.start	You can select how many times the drum unit idles after the fol- lowing time periods have passed in Auto Quality Start mode.
		<b><i>अ</i></b> Note
		$\square$ Default: $\Rightarrow$ P.158 "4-14 No. of Q.start".
		☐ To increase the print image density, increase the number of drum rotations, and vice versa.
		₽ Reference
		For changing the number of idle spins, $\Rightarrow$ P.158 "4-14 No. of Q.start".
15	Deflector Angle	You can change the angle of the wing guide depending on the paper type you use.
		<b><i>⋑</i></b> Note
		☐ Default: Auto
		☐ Available settings:
		<ul> <li>Up (Select this setting when standard thickness or thin paper misfeeds at the paper exit section occur frequently.)</li> </ul>
		<ul> <li>Down (Select this setting when A4 – B5, 8<sup>1</sup>/<sub>2</sub>" × 11" thick paper is not delivered properly to the paper delivery tray.)</li> </ul>
16	Auto Class	When you do not use the Job Separation mode, you can select the machine's condition after each printing set is fed out to the paper delivery tray.
		<b> ∅</b> Note
		☐ Default: Stop
		☐ Available settings:
		<ul> <li>Start printing automatically (After the last page of each printing set is fed out to the paper delivery tray, the ma- chine stops for a few seconds. Then, the next cycle begins.)</li> </ul>
		Stop (After the last page of each printing set is fed out to the paper delivery tray, the machine stops. If you press the [Print] key, the next cycle begins.)





User Tools Menu

400	
•	

 

No.	Mode	Description
17	Auto Separate	Specifies whether Job Separation mode is automatically carried out when you make prints in All Class, Auto Class, Manual Class, or Class mode.
		<ul><li>✓ Note</li><li>□ Default: ON</li></ul>
18	Ink/Master Left	Specifies whether you can check the amount of ink and master.
		<ul> <li>✔ Note</li> <li>□ Default: OFF</li> <li>□ Available settings:</li> <li>• OFF (You cannot check the remaining amount of ink or master.)</li> </ul>
		ON (When the remaining amount of ink or master is less than half, the panel display indicates these amounts when you turn on the main switch.)
		Check remaining volume (You can see the remaining amounts of ink and master regardless of these amounts.)
19	Type of Paper	When one kind of paper misfeeds occur frequently, you can register its paper type in "User1" or "User2".
		Reference For registering a special paper type, $\Rightarrow$ P.159 "4-19 Type of Paper".
20	Auto Rotation	When the direction in which your original is placed differs from that of the paper, the machine automatically rotates the original image by 90° to match the paper direction. You can cancel this setting.
		<ul><li>✓ Note</li><li>□ Default: ON</li></ul>
21	Master length	The machine determines the master length according to the number of originals placed in the optional document feeder and the paper sizes. If you wish to use A3/11" $\times$ 17" master regardless of the number of originals set and the paper sizes, select "A3".
		<ul><li>✓ Note</li><li>□ Default: Auto</li></ul>
25	Jogger	You can set priority for the image or aligning the prints when using the sorter.
		<ul><li>✓ Note</li><li>□ Default: Every page</li></ul>
27	Cancel Stor.O.lay	Specifies whether settings for Storage Overlay are retained, or not, when a storage overlay job has finished.
		<ul><li>✓ Note</li><li>□ Default: Not to cancel</li></ul>














# 5. Stamp

 No.	Mode	Description
1	Туре	You can select the stamp message at power on with the Stamp mode.
		<b> ∅</b> Note
		☐ Default: CONFIDENTIAL
2	Size	You can edit the preset stamp sizes.
		<b> ∅</b> Note
		☐ Default: Standard
		☐ Adjustment values:
		Double size
3	Stamp Density	You can select the style of the stamps.
		<b>∅</b> Note
		☐ Default: Solid-fill
4	Stamp Position	You can edit the preset stamp position.
		<b>∌</b> Note
		□ Default: $\Rightarrow$ P.160 "5-4 Stamp Position".
		□ Available settings: $\Rightarrow$ P.160 "5-4 Stamp Position".
		Reference
		For adjusting the stamp position, $\Rightarrow$ P.160 "5-4 Stamp Position".
5	Date Style Set	You can select the style of the date stamp.
		Note
		Default: Month Day Year
6	Date Position Set	You can select the date stamp direction at power on in Date Stamp
U	Date I osition set	mode.
		<b>∌</b> Note
		☐ Default: <i>Upper Left</i>
7	Position(Date)	You can edit the date stamp position.
		Note
		□ Default: $\Rightarrow$ P.161 "5-7 Position (Date)".
		□ Available settings: $\Rightarrow$ P.161 "5-7 Position (Date)".
		₽ Reference
		For adjusting the date stamp position, $\Rightarrow$ P.161 "5-7 Position
		For adjusting the date stamp position, $\Rightarrow$ F.161 3-7 Position (Date)".
l		








No.	Mode	Description
8	Type(Page)	You can select the page numbering style at power on in Page Stamp mode.
		✓ Note
		☐ Default: <i>P1,P2</i>
9	Direction(Page)	You can select the page numbering direction at power on in Page Stamp mode.
		<b>∌</b> Note
		□ Default:
		• When you select "P1,P2" or "1/5,2/5" with the "Type(Page)" user tool: <i>Upper Right</i>
		When you select "-1-,-2-" with the "Type(Page)" user tool:     Down Center
10	Position(Page)	You can edit the page numbering position.
		<b>𝚱</b> Note
		□ Default: $\Rightarrow$ P.162 "5-10 Position (Page)".
		□ Available settings: $\Rightarrow$ P.162 "5-10 Position (Page)".
		PReference
		For adjusting the page numbering position, $\Rightarrow$ P.162 "5-10 Position (Page)".
11	Make/Chg. Pat-	Make your own background pattern in Make-up mode.
	tern	<b> ∅</b> Note
		☐ You can edit the 40 preset patterns.
		₽ Reference
		For changing the background pattern, ⇒ P.163 "5-11 Make/ Chg. Pattern".







 







# 6. Administrator Mode

### User Codes

If user codes are turned on, operators must enter their user codes before they can operate the machine. The machine keeps count of the number of copies made under each user code. Turn this function on with the "Set User Code(s)" user tool. You can also turn on Key Operator Code mode so that only the key operator (administrator) can use the functions below.

Cruit	of Code filode so that o	nly the key operator (administrator) can use the functions below.
1	Check Counter	You can check the number of masters and copies made under each user code.
		₽ Reference
		For checking the number of masters and copies, $\Rightarrow$ P.164 "6-1 Check Counter".
2	Reset Counters	You can clear each or all user code counters.
		<b> ∅</b> Note
		☐ Default: Single
		₽ Reference
		For clearing the number of masters and copies, $\Rightarrow$ P.165 "6-2 Reset Counters".
3	Set User Code	Selects User Code mode. For details about User Code mode, ⇒ P.152 "6. Administrator Mode" Use Code(s).
		Enter the key Operator Code if you have already set it. $\Rightarrow$ P.152 "6. Administrator Mode"
		<b>∅</b> Note
		☐ Default: Not to use
4	Reg. User Code	You can register user codes.
		<b> ∅</b> Note
		☐ Up to 20 user codes (up to 4 digits) can be registered.
5	Chg. User Code	You can change user codes.
		<b>∅</b> Note
		☐ The number of copies made under the old code is added to that made under the new user code.
		₽ Reference
		For changing the user codes, $\Rightarrow$ P.166 "6-5 Chg. User Code".
6	Del. User Code	You can delete user codes.
		<b> ∅</b> Note
		☐ The number of copies made under the deleted code is also deleted.
		₽ Reference
		For deleting user codes, $\Rightarrow$ P.166 "6-6 Del. User Code".









7	Key Operator Code	Use to turn Key Operator Code mode on or off.
		Note     Default: Not to use     Default: Not to use     Note     Not     Not
8	Reg/Chg KeyOp- Code	You can register or change key operator codes. (up to 4 digits)
9	Restrict. Access	In Key Counter mode, you have to set the key counter before making prints. (To turn on Key Counter mode, contact your service representative.) If Key Counter mode is on, Restricted Access is turned on ("To use") automatically. If you turn Restricted Access off ("Not to use"), you can make prints without inserting the key counter.
		<ul><li>✓ Note</li><li>□ Default: Not to use</li></ul>

 
# 7. On Line Mode

No.	Mode	Description
1	Set aut-O/L def	Specifies whether Auto On Line mode is set to On or Off when power is switched on or after mode settings are cleared.
		<ul><li>✓ Note</li><li>□ Default: On</li></ul>
2	Ppr. Size [Online]	Specifies the paper size when you press the [On Line] key.  Note Default: Auto














## **User Tool Menus in Detail**

## 1-6 Time Setting

1 Press the [User Tools] key.

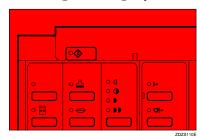

2 Make sure that "1" is selected, and then press the [OK] key.






Enter 6 with the number keys, and then press the [OK] or [#] key.

System 1/2	Select with ⊗				
1 Auto Reset	2 R. Cntr. Display				
3 Reset R.Counter	4 mm/inch				
Prev. Next	Cancel OK				

4 Enter the year with the number

Time Setting	With	Ten	keys	and	Enter
Present: y2000m	3d22	18:	6:42		
Change : y <mark>2000</mark> m	3d22	18:	6:29		
← →		Cano	cel		)K

Press the [#] key.

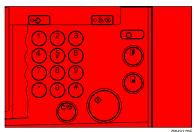


- **6** Enter the month with the number keys.
- Press the [#] key.

  - ☐ Follow steps **6** and **7** for the "date", "hour", "minute", and "second".
- Press the [OK] key.

# 3-4 Reproduction Ratio

Press the [User Tools] key.

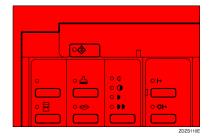











Enter 3 with the number keys, and then press the [OK] or [#] key.

User Tools 1/2	Select with ⋄
1 System	2 Set Operat'n Mode
3 Initial Setting	4 Mode Settig
Prev. Next	Cancel OK

Enter 4 with the number keys, and then press the [OK] or [#] key.

Initial Settina	s 1/4	Select with ⋄
1 Paper Type	2 MST	R Makg. Dosity
3 Original Pr	iority 4 Rep	roduct'n Ratio
Prev. No	ext   Cano	el OK

Select the ratio you want to adjust with the [←] [→] or [▷] keys.


Repro	duct	ion	Rati	0	Sel	ect w	ith <:
71	82	87	93	100	115	122	141
		$\cap$	<b>→</b>		Adjus	ŧ.)ſ	OK



- Press the [Adjust.] key.
- Enter the desired ratio with the [←] [→] or [▷] keys.
  - Note
  - ☐ You can also enter the ratio with the number keys.
- **7** Press the [OK] key twice.

### 3-5 Class Enter No.

Press the [User Tools] key.

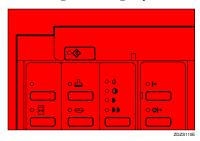

Enter 3 with the number keys, and then press the [OK] or [#] key.

User Tools	1/2		Sele	ct with ⊹
1 System			2 Set Ope	rat'n Mode
3 Initial	Setting		4 Mode Se	ttig
Prev.	Next	Ŋſ	Cancel	OK

Enter 5 with the number keys, and then press the [OK] or [#] key.

Initial Setting 1/4	Select with ⋄%
1 Paper Type	2 MSTR Makg. Dosity
3 Original Priority	4 Reproduct'n Ratio
Prev. Next	Cancel OK


Select the grade with the [←] [→] or [▷] keys.

Class Enter	No.		Se	elect	t wi	th <-	>
[2]	3] [4]	[5]	[6]	[7]	[8]	[9]	
←	<b>→</b>		Ent	ter		OK	



 Press the [Enter] key.













[or [d] Select the class with the [←] [→] or [d] [b] keys.

Class E	nter No.		Sele	ct w	i th	10Key	y #
[1]	1: 30	2:	30	3:	30	4:	30
	5:	6:_		7:_		8:	
←	$ \longrightarrow $	$\neg$ $\cap$	Can	cel	$\cap$	OK	$\neg$



Enter the number of students with the number keys, and then press the [#] key.






- ☐ Repeat steps ☐ and ☐ until you have finished registering number of students in each class.
- Press the [OK] key.



- ☐ Repeat steps ☐ through ☐ until you have finished registering the number of students in each class for the each grades.
- Press the [OK] key.

# 3-11 Margin Erase Area

Press the [User Tools] key.

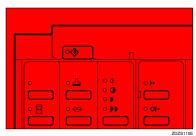

Enter 3 with the number keys, and then press the [OK] or [#] key.

User Tools 1/2	Select with ∞
1 System	2 Set Operat'n Mode
3 Initial Setting	4 Mode Settig
Prev. Next	Cancel OK

Enter 11 with the number keys, and then press the [OK] or [#] key.


Initial Set	ting 1/4	Sele	ct with ⊹
1 Paper Ty	pe	2 MSTR Mal	kg. Dnsity
3 Original	Priority	4 Reprodu	ct'n Ratio
Prev.	Next	Cancel	OK

Select the original size you will use with the [←] [→] or [▷] keys.

Margin	Erase	Initi	al set	ting w	ith <>	
A3□	84₽	A4₽	A4 ₽	85□	B5 [7	٦
A5□	A5 🖟	A6□	A6 🗗	×(10	0x148)	
$\frown$		$\rightarrow$	Se	lect	OK	٦



 Press the [Select] key.










# 6 Adjust the erase edge margin.

If you selected A3 to A6 or 11"  $\times$ 17" to  $5^{1}/_{2}$ "  $\times$   $8^{1}/_{2}$ "

 1 Adjust the erase edge margin with the  $[\leftarrow] [\rightarrow]$  or  $[\triangleleft] [\triangleright]$ keys.





### Note

☐ You can also enter the ratio with the number keys and the **[#]** key.

### If you selected X

1 Enter the erase edge margin with the number keys.


Set Erase Area with 10Key			
≭ :Width to erase Omm			
Size ↑ 50mm → 58mm			
( ← )( → )( Cancel )( OK			

- 2 Press the [#] key.
- 3 Enter the vertical length with the number keys.
- 4 Press the [#] key.
- 6 Enter the horizontal width with the number keys.
- **6** Press the **[#]** key.
- Press the [OK] key twice.

### 4-11 No. of Skip Feed

The following procedure explains how to change the number of drum rotations.

Press the [User Tools] key.

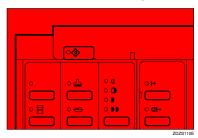

Enter 4 with the number keys, and then press the [OK] or [#]

User Tools 1/2	Select with ⋄
1 System	2 Set Operat'n Mode
3 Initial Setting	4 Mode Settig
Prev. Next	Cancel OK

Enter 11 with the number keys, and then press the [OK] or [#] key.

Mode Setting 1/7	Select with ⋄
1 Auto Cycle ON/OFF 2	Class Manual Set
3 Ignore Paper Size 4	No Orig. Size DF
Prev. Next	Cancel OK

Press the [Change] key.

Skip Feed		Select	with <>
Display (Number of	Not dis Skip Feed		
<b>←</b>		Change	OK













**5** Change the number of drum rotations while one sheet of paper is fed with the  $[\leftarrow] [\rightarrow]$  or  $( \ ) \ \ )$ keys.

Number of	Skip Feed	Select	with <>
Number of	Skip Feed:	3 (2-9)	
(←→ 01	r 10Key, pr	ress #)	
<u></u>	)	Cancel	OK



#### Note

- ☐ You can also change the number of rotations with the number keys.
- 6 Press the [OK] key.

### 4-14 No. of Q.start




☐ The default settings are as follows:

		Tim	ne pe	riod	
		0-4 hours	4 – 24 hours	24 – 72 hours	More than 72 hours
ure	Low Tmp. *1	0	7	7	7
erat	Normal Tmp. *2	0	5	5	5
Temperature	High Tmp. *3	0	5	5	5

 $<sup>(10-15^{\</sup>circ}\text{C}, 50-59^{\circ}\text{F})$ 

Press the [User Tools] key.

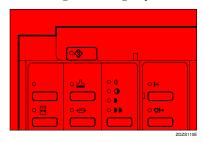


2 Enter 4 with the number keys, and then press the [OK] or [#] key.

User Tools 1/2	Select with ⋄
1 System	2 Set Operat'n Mode
3 Initial Setting	4 Mode Settig
Prev. Next	Cancel   OK

Enter 14 with the number keys, and then press the [OK] or [#]

Mode Setting 1/7	Select with 🍪
1 Auto Cycle ON/OFF	2 Class Manual Set
3 Ignore Paper Size	4 No Orig. Size DF
Prev. Next	Cancel OK

 
4 Select the temperature at which you use this machine with the  $[\leftarrow]$  $[\rightarrow]$  or  $[\triangleleft]$   $[\triangleright]$  keys.





Press the [OK] key.




 

 $<sup>(15 - 28^{\</sup>circ}\text{C}, 59 - 82.4^{\circ}\text{F})$ 


 $<sup>(28 - 30^{\</sup>circ}\text{C}, 82.4 - 86^{\circ}\text{F})$ 

 **6** Select the time period you want to change how many times the drum unit idles with the  $[\leftarrow] [\rightarrow]$  or  $[\triangleleft]$ [ ▷ ] keys.





 - Press the [OK] key.
- 8 Select the number of drum rotations with the  $[\leftarrow] [\rightarrow]$  or  $[\triangleleft] [\triangleright]$ keys.






Press the [OK] key.

# 4-19 Type of Paper

Press the [User Tools] key.

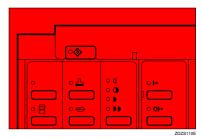

User Tool Menus in Detail

2 Enter 4 with the number keys, and then press the [OK] or [#] key.

User Tools 1/2	Select with ⋄
1 System	2 Set Operat'n Mode
3 Initial Setting	4 Mode Settig
Prev. Next	Cancel OK

Enter 19 with the number keys, and then press the [OK] or [#] key.

Mode Setting 1/7	Select with ⋄
1 Auto Cycle ON/OFF 2	Class Manual Set
3 Ignore Paper Size 4	No Orig. Size DF
Prev. Next	Cancel OK

 
4 Select [User1] or [User2] with the  $[\leftarrow] [\rightarrow] \text{ or } [\triangleleft] [\triangleright] \text{ keys.}$ 





Press the [OK] key.















**6** Select the paper type and misfeed condition with the [←] or [→] key.

Jser1		Select v	vi th <>
Standard :	No feed	Double feed	
Thick Pap:	No feed	Double feed	Medium
<b>←</b>	$\rightarrow$	Cancel	OK



**7** Press the [OK] key.

Press the [Cancel] key.

## 5-4 Stamp Position


### **𝒯** Note

 $\square$  The default position and available settings of each stamp are as follows:

Stamp positions	Default	Available settings
a t b b c c c c c c c c c c c c c c c c c	a = 24mm, 0.96" b = 24mm, 0.96"	a = 8 - 104mm, 0.32" - 4.16" b = 8 - 144mm, 0.32" - 5.76"
D D GRSPOS1E	a = 24mm, 0.96" b = 0mm, 0" c = center line	a = 8 - 104mm, 0.32" - 4.16" b = -72 - 72mm, - 2.88" - 2.88"
GRSPOS2E	a = 24mm, 0.96" b = 24mm, 0.96"	a = 8 - 104mm, 0.32" - 4.16" b = 8 - 144mm, 0.32" - 5.76"
GRSPOSSE	a = 24mm, 0.96" b = 24mm, 0.96"	a = 8 - 104mm, 0.32" - 4.16" b = 8 - 144mm, 0.32" - 5.76"

Stamp positions	Default	Available settings
b b a GRSPOS4E	a = 24mm, 0.96" b = 0mm, 0" c = center line	a = 8 - 104mm, 0.32" - 4.16" b = -72 - 72mm, - 2.88" - 2.88"
b a GRSPOSSE	a = 24mm, 0.96" b = 24mm, 0.96"	a = 8 - 104mm, 0.32" - 4.16" b = 8 - 144mm, 0.32" - 5.76"
a c GRSPOS6E	a = 0mm, 0" b = 24mm, 0.96" c = center line	a = -52 - 52mm, - 2.08" - 2.08" b = 8 - 144mm, 0.32" - 5.76"
c da	a = 0mm, 0" b = 0mm, 0" c = center line	a = -52 - 52mm, - 2.08" - 2.08" b = -72 - 72mm, - 2.88" - 2.88"
D C a GRSPOSSE	a = 0mm, 0" b = 24mm, 0.96" c = center line	a = -52 - 52mm, - 2.08" - 2.08" b = 8 - 144mm, 0.32" - 5.76"

# Press the [User Tools] key.

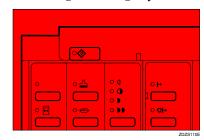





160





2 Enter 5 with the number keys, and then press the [OK] or [#] key.

User Tools 1/2	Select with ⋄		
1 System	2 Set Operat'n Mode		
3 Initial Setting	4 Mode Settig		
Prev. Next	Cancel OK		

Enter 4 with the number keys, and then press the [OK] or [#] key.

Stamp 1/3	Select with ⋄
1 Type	2 Size
3 Stamp Density	4 Stamp Position
Prev. Next	Cancel OK

4 Select the stamp position you want to adjust with the [←] [→] or [▷] keys.





- Press the [Change] key.
- Adjust the horizontal stamp position with the [△] or [∇] key, and then press the [▷] key.

Stamp Position	Select with ⋄
Top Right: ↔ 24mm	\$ 24mm
(↔: 8~144	↑: 8~104)
	Cancel OK

#### Note

- ☐ The value increases or decreases in 4mm, 0.16" steps.
- Adjust the vertical stamp position with the [△] or [▽] key.
- Press the [OK] key twice.


# 5-7 Position (Date)

#### Note

 
☐ The default position and available settings of each date stamp are as follows:

Stamp positions	Default	Available settings
GRDPOSGE	a = 8mm, 0.32" b = 20mm, 0.80"	a = 8 - 40mm,0.32" - 1.60" b = 8 - 40mm,0.32" - 1.60"
b. GRDPOS2E	a = 20mm, 0.80" b = 12mm, 0.48"	
a ↑ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓	a = 20mm, 0.80" b = 8mm, 0.32"	

Press the [User Tools] key.

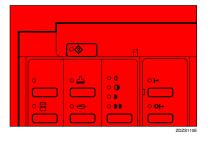







**User Tools** 

2 Enter 5 with the number keys, and then press the [OK] or [#]

 
User Tools 1/2	Select with ⋄	
1 System	2 Set Operat'n Mode	
3 Initial Setting	4 Mode Settig	
Prev. Next	Cancel OK	

3 Enter 7 with the number keys, and then press the [OK] or [#] key.

Stamp 1/3	Select with ⋄%
1 Type	2 Size
3 Stamp Density	4 Stamp Position
Prev. Next	Cancel OK

4 Select the date stamp direction you want to adjust with the  $[\leftarrow]$  $[\rightarrow]$  or  $[\triangleleft]$   $[\triangleright]$  keys.





- Press the [Change] key.
- diust the horizontal date stamp position with the [△] or [▽] key, and then press the [>] key.

Position(Date Stampin	ng) Select with ≪
Top Left(H.):↔	20mm
(↔:	3∼40 ‡:8∼40)
	Cancel OK

#### Note

- ☐ The value increases or decreases in 4mm, 0.16" steps.
- Adjust the vertical date stamp position with the  $[\Delta]$  or  $[\nabla]$  key.
- Press the [OK] key twice.

# 5-10 Position (Page)

#### Note

- ☐ The default position and available settings of each page stamp are as follows:
  - ◆ P1 or <sup>1</sup>/<sub>5</sub>

Stamp positions	Default	Available settings
a 1 P.11 b	a = 8mm, 0.32" b = 12mm, 0.48"	a = 8 - 40mm,0.32" - 1.60" b = 8 - 40mm,0.32" - 1.60"
da bada griposie	a = 12mm, 0.48" b = 12mm, 0.48"	1.00

Stamp positions	Default	Available settings
in i	a = 8mm, 0.32"	a = 8 - 40mm,0.32" - 1.60"
GRPPOSSE	a = 8mm, 0.32"	a = 8 - 40mm,0.32" - 1.60"










Press the [User Tools] key.

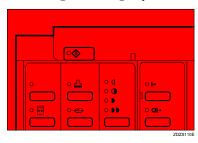


Enter 5 with the number keys, and then press the [OK] or [#] key.

User Tools 1/2	Select with ⋄		
1 System	2 Set Operat'n Mode		
3 Initial Setting	4 Mode Settig		
Prev. Next	Cancel   OK		

Enter 10 with the number keys. Then press the [OK] or [#] key.

Stamp 1/3	Select with ေ
1 Type	2 Size
3 Stamp Density	4 Stamp Position
Prev. Next	Cancel OK

 Select the page numbering direction you want to adjust with the [←] [→] or [▷] keys.





Press the [Change] key.


Adjust the horizontal page numbering position with the [△] or [∇] key, and then press the [▷] key.

Position(Page Stamping)	Selec	t with	%
Top Right(H.): ↔ 12mm		8mm	
(↔:8~40	1:8	$\sim$ 40)	
Can	cel (	OK	$\neg$

- Note
- ☐ The value increases or decreases in 4mm, 0.16" steps.
- Adjust the vertical page numbering position with the [△] or [▽] key.
  - Note
  - ☐ You need not follow step **1** when you select "-1-" as the direction in step **1**.
- Press the [OK] key twice.

# 5-11 Make/Chg. Pattern

1 Press the [User Tools] key.

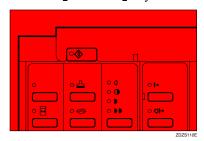

Enter 5 with the number keys, and then press the [OK] or [#] key.

User Tools 1/2		Select with ⋄		
1 System		2	Set Ope	rat'n Mode
3 Initial Setting		4	Mode Se	ettig
Prev.	Next		ancel	OK











**User Tools** 

Enter 11 with the number keys, and then press the [OK] or [#] key.

Stamp 1/3	Select with «
1 Type	2 Size
3 Stamp Density	4 Stamp Position
Prev. Next	Cancel OK

**1** Select the background pattern with the [▷], [▷], [△], or [▽] key.


Select Pat	tern	Select with ⋄%			
Prev.	Next	Change	OK		

Press the [Change] key.

Move the cursor to the position you wish to edit with the [▷], [▷], [△], or [▽] key.

 pattern 01 X:00)Y:00)
 Add dot with Enter. Del. dot with Clear.
 Cancel OK

Press the [#] or [Clear/Stop] key to edit the pattern.

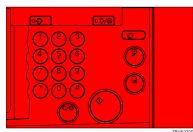


Note

- $\square$  To add a dot, press the [#] key.
- ☐ To remove a dot, press the **[Clear/Stop]** key.
- ☐ Repeat steps ② and ② until you have finished editing the pattern.
- Press the [OK] key twice.

## 6-1 Check Counter

Press the [User Tools] key.

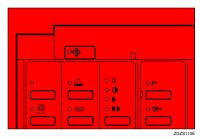

Enter 6 with the number keys, and then press the [OK] or [#] key.

User Tools 1/2	Select with ⋄%∘
1 System	2 Set Operat'n Mode
3 Initial Settin	g 4 Mode Settig
Prev. Next	Cancel OK

Make sure that 1 is selected, and then press the [OK] key.

Administrator Mode	1/3 Select with ≪
1 Check Counter	2 Reset Counters
3 Set User Code	4 Reg. User Code
Prev. Next	Cancel OK



Note

The number of masters and prints made under the first user code will be displayed in the panel display.















4 Keep pressing the  $[\rightarrow]$  or  $[\triangleright]$  key to display the number of masters and prints made under your user code.


Check Counter	1/	2	Enter
User Code :			→Next) rint:0000000
Master making ← )(	→	) ]	rint:0000000 Nk



**5** Press the [OK] key after checking the number of masters and prints made under your user code.

#### **6-2 Reset Counters**

Press the [User Tools] key.

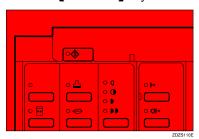


2 Enter 6 with the number keys, and then press the [OK] or [#] key.

User Tools 1/2	Select with ⋄
1 System	2 Set Operat'n Mode
3 Initial Setting	4 Mode Settig
Prev. Next	Cancel OK

Enter 2 with the number keys, and then press the [OK] or [#] key.

Administrato	r Mode	1/3	Select	with	%
1 Check Counter		2 Reset Counters			
3 Set User	3 Set User Code		4 Reg. User Code		
Prev.	Next	Can	cel	OK	

 4 Select [Single] or [All] with the [←]  $[\rightarrow]$  or  $[\triangleleft]$   $[\triangleright]$  keys.





Press the [OK] key.

If you selected [Single]

**1** Keep pressing the  $[\rightarrow]$  or  $[\triangleright]$ key to display the number of masters and prints made under your user code.

Reset Counters	1/ 2 3	Select wi	th <>
User Code : 11			
Master making:(	1000000	Print:	0000000
( ← ) ( →	Car	ncel )	OK )



- **2** Press the [OK] key.
- 3 Press the [Yes] key.
- 4 Press the [Cancel] key twice.

If you selected [AII]

• Press the [Yes] key.












Sapphire\_gb3\_FM.book Page 166 Monday, December 11, 2000 10:21 AM



**User Tools** 

# 6-5 Chg. User Code

Press the [User Tools] key.

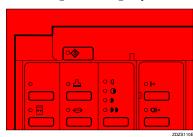

2 Enter 6 with the number keys, and then press the [OK] or [#] key.



Enter 5 with the number keys, and then press the [OK] or [#] key.

ĺ	Administra	tor Mode	1/3	Select	with	%
	1 Check Counter 3 Set User Code		2 Reset Counters			
			4 Re	g. User	Code	
	Prev.	Next	Car	ncel	OK	$\neg$


**4** Keep pressing the  $[\rightarrow]$  or  $[\triangleright]$  key to display your user code.

Change User Co	ode 1/2	Select Code
User Code :		
Master making ←		Print:0000000
	-	



Press the [OK] key.


6 Enter the new user code with the number keys.

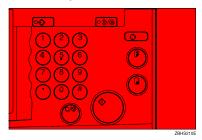

Press the [OK] key.

### 6-6 Del. User Code

Press the [User Tools] key.

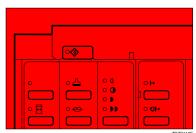

2 Enter 6 with the number keys, and then press the [OK] or [#] key.

User Tools 1/2	Select with ∘%∘	
1 System	2 Set Operat'n Mode	
3 Initial Setting	4 Mode Settig	
Prev. Next	Cancel OK	

Enter 6 with the number keys, and then press the [OK] or [#] key.

Administra	tor Mode	1/3	Select	with	%
1 Check Co	ounter	2 Re	eset Cour	nters	
3 Set User Code		4 Re	eg. User	Code	
Prev.	Next	Car	ncel	OK	







User Tool Menus in Detail

# **4** Keep pressing the [→] or [▷] key to display your user code.

 
Delete Us	er Code 1/5	Select Code
	de : 1111 (←F	
Master ma	king:0000000	Print: 0000000
←	)	ancel OK



- Press the [OK] key.
- 6 Press the [Yes] key.












User Tools

 4









# If Your Machine does not Operate as You Want

If a malfunction or a misfeed occurs, the following messages will appear on the panel display.

Message	Meaning	
Check the original direc-	The paper is not placed in the same direction as the original.	
tion.	Place the original in the same direction as the paper.	
	If you press the $\mbox{\bf [Print]}$ key, the selected paper will be used for printing.	
Size of original and paper is not the same.	Set a paper size that matches the reproduction ratio you have selected and your original.	
	The reproduction ratio selected by Auto Magnification mode is too big or too small.	
	<b>∅</b> Note	
	☐ You can make prints if you press the [Print] key.	
Set original.	Make prints after confirming whether there is an original on the exposure glass.	
	Make sure that you have changed the original on the exposure glass before pressing the <b>[Start]</b> key.	
Max. quantity: ****	The number of prints exceeds the maximum print quantity.	
	You can change the maximum number of prints that can be made in one operation with the user tools. See "Max. Quantity" $\Rightarrow$ P.143 "2. Set Operat'n Mode".	
Min. quantity: ****	The number of prints does not exceed the minimum print quantity.	
	You can change the minimum number of prints that can be made in one operation with the user tools. See "Min. Quantity" $\Rightarrow$ P.143 "2. Set Operat'n Mode".	
Drum unit is not set. Set	Slide in the drum until it clicks.	
Drum unit.	Make sure that the drum is completely set in position.	
Communication error	Turn the main switch off and on.	
Turn the main switch off then on	If the message appears again, contact your service representative.	
Over loaded for the de-	Remove the paper from the delivery tray.	
livery tray	₽ Reference	
Please remove the paper	See "Delivery Capacity" ⇒ P.143 "2. Set Operat'n Mode".	



 






Message	Meaning	
Print image is larger than the selected paper	The master image previously printed is larger than the paper, the image overflows the paper size.	
size. Change the paper size.	Make prints again after pressing the <b>[Exit]</b> key and selecting the paper size again.	
	<b><i>→</i></b> Note	
	☐ If you press the [Exit] key to disappear the message and press the [Print] key, the machine starts to make the prints. However, the image might not fit on the paper.	
Cannot sort thick papers	The paper type is set as the "Thick" or "Special".	
	Press the [Exit] key to disappear the message and select the paper type except Thick and Special.	
	If you cannot change the paper type, press the <b>[Exit]</b> key to disappear the message and disable sorter mode.	
	<b><i>I</i></b> Note	
	☐ If you press the <b>[Exit]</b> the message will be disappeared, but it will be displayed again when making the master or prints.	
Cannot sort irregular	The custom size is selected.	
sized papers.	Press the [Exit] key to disappear the message and use paper other than the custom size.	
	If you cannot change the paper type, press the <b>[Exit]</b> key to disappear the message and disable sorter mode.	
	☐ If you press the <b>[Exit]</b> key the message will be disappeared but it will be displayed again when making the master or prints.	
Non-sort tray is not set correctly	Slide in the delivery tray of the sorter correctly.	
Sorter is full.	The number of prints exceeds the capacity of the bin. Remove the pa-	
Please remove the paper	per from the sorter.	
Papers are left on the sort tray.	Remove the paper from the sorter tray.	
Please remove.		
Switch on the sorter	If the sorter power plug is pulled out, plug it in and turn it on.	
Or communication error.	If the message appears again, there was an error connecting to the sorter.	
	Contact your service representative.	











If Your Machine does not Operate as You Want

# 🎖 When a service call message is shown on the panel display

Press the [Exit] key. Then turn the main switch off and back on again. If a service code appears again, contact your service representative.

#### Note

- ☐ If a service code appears on the panel display after you turn the main switch off and on a few times, do not continue turning it on and off. Leave the machine off.
- ☐ When you make masters continuously using originals with solid images, "SC-03-03" tends to appear on the panel display. In this case, turn off the main switch and wait for a while. Then turn on the main switch.













# If You Cannot Make Prints as You Want

Problem	Cause	Action	
Misfeeds occur frequently.	Improper paper type is selected.	Select proper paper type. ⇒ P.41 "Printing onto Various Kinds of Paper".	
When you try to set several functions at a time, you cannot set some functions.	Some functions cannot be used together.	⇒ P.137 "Combination Chart".	
Parts of the image are not	Erase margin is too wide.	Set a narrower erase margin	
printed in Edge Erase mode.	Edge margins of original are too narrow.	with the user tools. $\Rightarrow$ P.156 "3-11 Margin Erase Area".	
Prints are blank or parts of the image are not printed.	The paper feed side plates are not set correctly.	Make sure that the paper feed side plates touch the paper lightly and the proper paper size is displayed in the panel display.	
2nd printing with another drum is unsatisfactory.	The 1st print image is still wet.	Wait until the 1st image becomes dry.	
An uneven solid image appears.	Large solid image wrinkles the master.	Increase the print speed or select photo mode.	

# **Combine Originals Mode**

Problem	Cause	Action
Prints are blank or parts of the image are not printed.	Original size and direction are not correct.	You cannot use originals of different sizes and directions in Combine Originals mode. Use originals of same size and direction.
Print image is not correct.	Original set order is not correct.	Place originals face up into the optional document feeder. The first original should be on the top.
		Place original face down on the exposure glass. The first original should be set first.











# **Loading Paper**

The **Load Paper** indicator (**L**) lights when the paper feed tray runs out of paper.


### Limitation

 $\square$  Load paper when the paper feed tray is empty. Do not add paper when some paper is left in the tray. Doing so may cause multiple feeds or misfeeds.

## 

For available paper sizes,  $\Rightarrow$  P.11 "Print Paper".

1 Raise the lock lever for the paper feed side plates to release the lock.

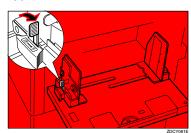

2 Load the paper in the paper feed tray.




#### Note

 $\hfill\Box$  Correct any paper curl before loading the paper.

Adjust the paper feed side plates to match the paper size.



4 Push the lock lever for the paper feed side plates down to lock the side plates into position.

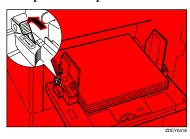

#### Note

☐ Make sure that the paper size and direction shown on the panel display match the size and direction of paper loaded in the paper feed tray.













# **%** Clearing Misfeeds

#### A CAUTION:



 
Be careful not to cut yourself on any sharp edges when you reach inside the machine to remove misfed sheets of paper or masters.

#### Note

- ☐ After clearing misfeeds, make sure that all the doors, covers, and units are closed and the ¾ indicator is off.
- ☐ To prevent misfeeds, do not leave any torn scraps of paper, originals, or masters in the machine.
- ☐ When clearing misfeeds, do not turn off the main switch. If you do, your print settings will be cleared.
- If misfeeds occur repeatedly, please contact your service representative.

# "% + A" Paper Misfeeds in the Paper Feed Section

1 Remove the misfed paper.



# To prevent paper misfeeds:

Check the following before restarting the printing run.

• Did you select an appropriate paper type with the [Ppr.Type] key?

OReady for	Master	Making/ Pri	nting
		⊫A4⊡	0.0mm
Letter	100%	Std.	0.0mm
Original	Ratio	[Ppr.Type]	Image «



Are the side pads in the correct positions?



To print on thin paper (47.1g/m<sup>2</sup>, 12.5 lb), slide the levers behind the paper feed side plates in the direction of the arrow (see illustration).















 When paper is curled, correct the curl as shown.

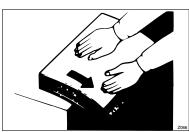

 When paper edges stick together or paper is not fed in, shuffle the paper as shown.



• When printing onto postcards or thick paper, lower the printing speed to setting 1 or 2. ⇒ P.26 "Changing the Printing Speed".

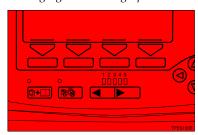

 When a multi-feed occurs or the paper is skewed, make sure that the paper feed side plates are properly adjusted. When you load paper on the paper feed tray, make sure that the paper edge touches the back fence and paper is placed on the proper paper size scale. Only use paper where the leading edge has two right angle corners.

# 

- 1 Open the front door.
- **2** Lower drum unit lock lever (B1).



Take out the drum.





- Note
- ☐ For taking out the drum unit, ⇒ P.128 "Changing the Color Drum Unit".
- Pull out the misfed paper gently from the inside.



 








5 If you cannot remove the misfed paper, remove paper from the paper feed tray.



**6** Set the drum unit and close the front door.



 $\square$  For setting the drum unit,  $\Rightarrow$ P.128 "Changing the Color Drum Unit"

# To prevent paper misfeeds:

⇒ P.174 ""**%** + A" Paper Misfeeds in the Paper Feed Section".

# "% + B" Paper or Master Wrapped around the Drum

 
When the master is wrapped around the drum

- 1 Open the front door.
- **2** Lower drum unit lock lever (B1).




Take out the drum.






 - Note
- $\square$  For taking out the drum unit,  $\Rightarrow$ P.128 "Changing the Color Drum Unit".
- 4 While pressing the drum lock, grasp the edge of the master (the white area) and peel it off.



 - E Return the drum lock to its original position.
- **6** Set the drum unit and close the front door.
  - Note
  - $\square$  For setting the drum unit,  $\Rightarrow$ P.128 "Changing the Color Drum Unit"











#### When paper is wrapped around the drum

- 1 Open the front cover.
- 2 Lower drum unit lock lever B1.



Take out the drum.





#### Note

- $\square$  For taking out the drum unit,  $\Rightarrow$ P.128 "Changing the Color Drum Unit".
- 4 Remove the misfed paper from the drum.



5 If you cannot find misfed paper in step 4, remove misfed paper from the pressure cylinder.

**1** Set the drum unit and close the front door.

#### Note

 
 $\square$  For setting the drum unit,  $\Rightarrow$ P.128 "Changing the Color Drum Unit"

#### When paper is misfed inside the machine

- **1** Open the front cover.
- **2** Lower drum unit lock lever (B1).



Take out the drum.





### Note

 $\square$  For taking out the drum unit,  $\Rightarrow$ P.128 "Changing the Color Drum Unit".

















4 Remove the misfed paper from the inside as shown in the illustration.



- **1** If you cannot remove the misfed paper, remove paper from the pressure cylinder.
- Set the drum unit and close the front door.



 $\square$  For setting the drum unit,  $\Rightarrow$ P.128 "Changing the Color Drum Unit"


# To prevent paper misfeeds:

If the paper is curled or the original's leading edge margin is too narrow, the following action is necessary.

When you use curled paper, correct the curl as shown.



· When the leading edge margin of the original is less than 8mm, 0.32" or there is a solid image on the leading edge, insert the original with the widest margin first or make a leading edge margin by making a copy.

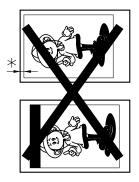

\*: Less than 8mm, 0.32"

# "% + C" Paper Misfeeds in the **Paper Exit Section**

 
Slowly, but firmly pull out the misfed paper.



# 🎖 To prevent paper misfeeds:

When thin paper misfeeds in the paper exit section, reduce the printing speed with the [◀][▶] [Speed] keys (⇒ P.26 "Changing the Printing Speed"). If you cannot reduce the printing speed, close the trailing edge guides or move the end plate toward the paper delivery tray edge.









# "%+ D" Master Misfeeds in the Master Feed Section

- 1 Pull out the master tray until it
- 2 Open the master guide.



- 3 Open the master tray cover (1).
- 4 Remove the master roll (2).



**5** Reset the master roll (1).



- ☐ The master roll must be positioned as shown in the illustration in step 6.
- **6** Close the master tray cover (2).



Insert the paper edge of the master roll as shown in the illustration until the master edge reaches the arrow mark.



8 Close the master guide.



Push in the master tray until it stops.



- 1 Open the front door.
- **2** Lower drum unit look lever (B1).









 






Take out the drum.





#### Note

- $\square$  For taking out the drum unit,  $\Rightarrow$ P.128 "Changing the Color Drum Unit".
- 4 Pull out the misfed master from inside.



5 Set the drum unit and close the front door.

 $\square$  For setting the drum unit,  $\Rightarrow$ P.128 "Changing the Color Drum Unit"

 
# "% + B + E" Master Misfeed in the Master Eject Section

- 1 Open the front door.
- **2** Lower drum unit lock lever B1.



3 Take out the drum.





#### Note

- $\square$  For taking out the drum unit,  $\Rightarrow$ P.128 "Changing the Color Drum Unit".
- 4 Grasp handle (E1) and pull out the master eject unit until it stops.



 


 














- d Return lever (E3) and the master eject unit to their original position.
- **7** Set the drum unit and close the front door.



 $\square$  For setting the drum unit,  $\Rightarrow$ P.128 "Changing the Color Drum Unit"

# "% + E" Master Misfeeds in the Master Eject Section

- 1 Open the front door.
- 2 Grasp handle (E1) and pull out the master eject unit until it stops.



Check where the misfed master is. Remove the misfed master.




A Return the master eject unit to its original position and close the front door.

 
# 🖫 If master misfeeds often occur

If the master misfeed occurs often, turn scraps of the master might be left in the bottom of the master tray. Remove turn scraps of the master.

1 Slide out the master tray.

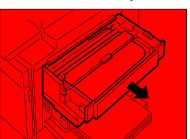
















2 Open the black cover at the bottom of the master tray and remove turn scraps of the master.

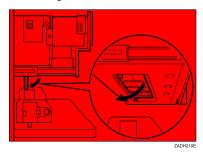

Close the black cover and slide in the master tray.



☐ Make sure that you securely close the black cover before sliding in the master tray.




1 Open the document feeder (ADF) cover.



2 Pull out the misfed original gently.



- If you cannot remove misfed original in step 2, open the document
- 4 Pull the green knob towards you and remove the misfed original.

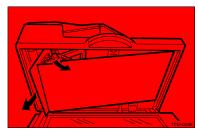

- B Return the document feed sheet to its original position.
- **6** Close the document feeder (ADF) cover until it clicks in position and if necessary, close the document feeder.















# To prevent original misfeeds:

Placing the following kinds of originals on the exposure glass.


- Originals heavier than 128g/m<sup>2</sup>, 34
- Originals lighter than 52g/m<sup>2</sup>, 14
- Originals smaller than 148mm × 210mm, 5.9" × 8.3"
- $\bullet$  Originals larger than 297mm  $\times$ 864mm,  $11.6" \times 34.0"$
- Stapled or clipped originals
- Perforated or torn originals
- Curled, folded, or creased originals
- Originals with any kind of coating, such as thermal fax paper, art paper, aluminum foil, carbon paper, or conductive paper
- Bound originals such as books
- Damaged originals
- Originals with glue on them
- Pasted originals
- Originals written in pencil
- Thin originals that have low stiffness
- Originals with index tabs
- Transparent originals such as OHP transparencies or translucent paper

#### Mote /


- ☐ Do not mix different sizes of originals in the optional document feeder.
- ☐ Remove staples or clips of originals. Fan originals that have had staples or clip removed.
- ☐ Do not stack originals above the limit mark.

# "% + R1" Paper Misfeeds in the Optional Sorter

1 Open the front cover.

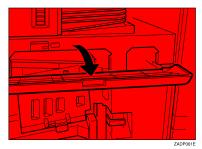


**2** Remove the misfed paper.

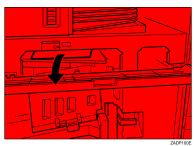

Close the front cover.





 









# "¾ + R2" Paper Misfeeds in the Optional Sorter

1 Open the upper and lower side covers and check if there is a misfed paper.

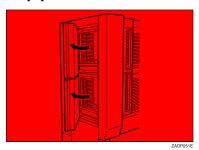

**2** Remove the misfed paper.

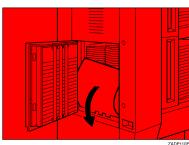


#### Note


- ☐ The illustration describes how to remove misfed paper from the lower tray. Follow the same procedure for removing misfeeds in the upper tray.
- Close the upper and lower side covers.

# **Misfeeds in the Optional** Sorter


1 When R3 is displayed, open the lower tray cover of the sorter. When R4 is displayed, open the upper tray cover of the sorter.

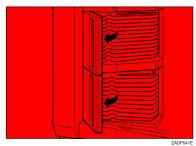


2 If the misfed paper is deep inside of the bin and you cannot remove it, press the green button 2 while pressing the button ①. When the misfed paper is pushed out, remove it from the sorter.

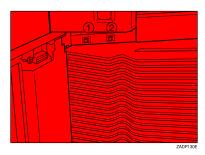

Close the upper or lower tray cov-

 

 






# When the Open Cover/Unit Indicator (□+) Lights


☐ Make sure that the following doors/covers are closed.

Front door Close the front door completely.

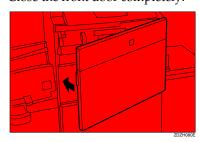

Optional document feeder (ADF) cov-


Close the document feeder (ADF) cover until it locks in position.

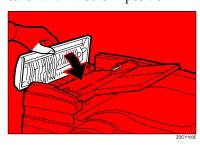

Upper tray cover of the optional sorter Close the upper tray cover of the sorter.




 Lower tray cover of the optional sorter Close the lower tray cover of the sorter.

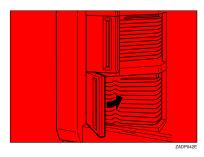


Upper and lower covers of the optional sorter

Close the upper and lower covers of the sorter.

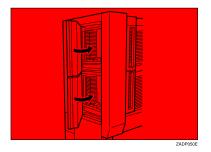

Front cover of the optional sorter Close the front cover of the sorter.

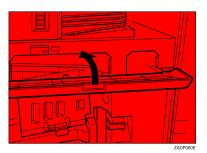













# When the Add Ink Indicator (₺) Lights

The **Add Ink** indicator (**\(\Ld)\)** lights when it is time to supply ink.

If ink comes into contact with your eyes, rinse immediately in running water. In the case of any abnormal symptoms, consult a doctor.

Keep the ink or ink container out of the reach of children.

#### **⚠** CAUTION:

 
If ink is ingested, force vomiting by drinking a strong saline solution and consult a doctor immediately.

#### **↑** CAUTION:

Our products are engineered to meet high standards of quality and functionality, and we recommend that you only use the expendable supplies available at an authorized dealer.



- $\square$  Be sure to supply ink of the same color as the current drum.
- ☐ Ink is readily removed from skin by waterless hand cleaners followed by washing with soap and water.
- ☐ Be careful not to get any ink on your clothing.
- ☐ Store ink under low temperature and humidity conditions.
- ☐ Do not store ink where it will be exposed to heat or direct sunlight.
- ☐ Store on a flat surface.
- 1 Open the front door.
- **2** Pull out the ink holder.













**3** Remove the used ink cartridge.

 

 **4** Remove the cap of the new ink cartridge.




**5** Insert the new cartridge into the ink holder.



Note

 $\square$  Always supply ink of the same color.

 **6** Return the ink holder to its original position until it clicks.




Close the front door.

 The machine will start idling to supply ink to the drum.















# When the Master End Indicator (ம்) Lights

The Master End indicator ( ight) lights when it is time to replace the master roll or when you need to set the master roll.

#### **⚠** CAUTION:

- Our products are engineered to meet high standards of quality and functionality, and we recommend that you only use the expendable supplies available at an authorized dealer.
- **1** Pull out the master feed unit until it stops.
- 2 Open the master guide.



- Open the master feed unit cover (1).
- 4 Remove the used master roll (2).



 
#### Note

- ☐ When the **Master End** indicator is lit, it is necessary to replace the master roll even if some master remains on the old roll.
- **5** The new master roll must be positioned as shown in the illustration (1).
- **6** Close the master feed unit cover (2).









When the Master End Indicator ( ) Lights



8 Close the master guide.



Push in the master feed unit until it stops.

















# When the Master Eject Indicator (立) Lights

The Master Eject indicator (🖒) lights when it is time to empty the master eject unit or when you need to set the master eject unit.



Troubleshooting

- ☐ Ink is readily removed from skin by waterless hand cleaners followed by washing with soap and water.
- ☐ Be careful not to get any ink on your clothing while emptying the master eject unit.
- 1 Prepare the trash box.
- 2 Open the front door.
- **3** Grasp handle E1 and pull out the master eject unit until it stops.



Pull up handle E2 and pull out the master eject unit completely.



Grasp the master eject unit upper handle and turn it clockwise with one hand while holding handle E1 with other hand (1).

 
Remove the used master by pushing down the master eject unit upper handle towards the trash box (2).

 


#### Note

- If you cannot remove the used masters completely, repeat step
   until all the masters are removed.
- Reinstall the master eject unit until it clicks in position.
- **8** Close the front cover.











# When Other Indicators are Lit

Indicator	Meaning and action		
TPES270E	The key counter (option) is not set. Insert the key counter.		
(Metric version)     (Matric version)     (Matric version)     (Metric version)     (Metric version)     (Metric version)     (Metric version)     (Metric version)     (Metric version)	Color drum unit is installed.		
(Metric version)      (Matric version)      TPESSOE      (Inch version)      Tressoon      TPESSOON	A3/11" $\times$ 17" drum unit is set.		
(Metric version)      A3 A4 A TPESSOOE      (Inch version)      Drum 17 8½ 6	$A4/8^1/2" \times 11"$ drum unit is set.		













Sapphire\_gb3\_FM.book Page 192 Monday, December 11, 2000 10:21 AM




Troubleshooting

# When Prints are not Delivered in a Neat Stack

# When Printing on Small Size **Paper**


1 Adjust the end plate angle by turning the screw clockwise or counterclockwise.

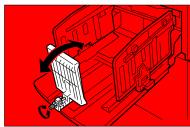

# When the Machine Cannot **Detect the Paper Size**

If the paper size is not detected correctly when printing with the sorter, prints might not be delivered in a neat stack. To solve this, do one of the following:

Raise the lock lever for the paper feed side plates to release the lock.

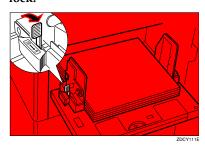



Re-adjust the paper feed side plates so that there is no space between the paper feed side plates and paper, and then lock the side plates in position.



Note

  - ☐ Make sure that the paper size and direction in the panel display match the actual paper size and direction place on the paper feed tray.
- $\Box$  If the paper on the paper feed tray has a solid image on its back side, the machine may not be able to detect the size correctly. Place a sheet of paper of the same size without an image on the back at the bottom of the paper stack.









# **Poor Printing**

### **Dirty Background**

If the background of prints is dirty, the drum unit might be dirty.

#### **⚠** CAUTION:

If ink comes into contact with your eyes, rinse immediately in running water. In the case of any abnormal symptoms, consult a doctor.

#### A CAUTION:

Keep the ink or ink container out of the reach of children.


#### **⚠** CAUTION:

• If ink is ingested, force vomiting by drinking a strong saline solution and consult a doctor immediately.

#### Note

- ☐ To avoid getting dirty background prints when printing onto paper smaller than the original image, select a suitable reduction ratio or use larger print pa-
- ☐ When printing onto paper that does not absorb ink well, like postcards, the background of prints might get dirty. In this case, lower the printing speed or use Skip Feed mode to dry the ink on the prints.

# 1 Turn off the main switch.

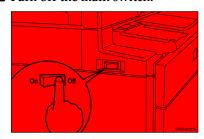











**2** Pull out the drum unit.



 
- Note
- $\square$  For taking out the drum unit,  $\Rightarrow$  P.128 "Changing the Color Drum Unit".
- While pressing the drum lock, turn the drum until you can see the trailing edge of the master.



4 With a dry soft cloth, remove any ink that has accumulated on the trailing edge of the drum unit.



- **#**Important
- ☐ Do not use benzine, thinner, or other organic liquids—doing so can damage the machine.









Poor Printing


 $oldsymbol{5}$  Turn the drum unit and lock it after cleaning it.

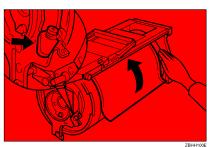

**6** Insert the drum unit until it locks in position, and then lower the drum unit lock lever.

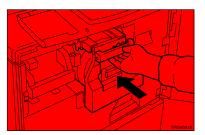

- Close the front door.
- 8 Turn on the main switch.

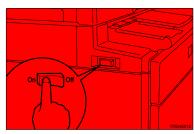















#### **Black Lines/Stained Prints**

Check the platen cover and clean it if dirty.  $\Rightarrow$  P.202 "Cleaning the platen cover".

Check the exposure glass and clean it if dirty. ⇒ P.202 "Cleaning the exposure glass".

Check the sheet of the optional document feeder and clean it if dirty.  $\Rightarrow$  P.203 "Cleaning the Sheet".



☐ When black lines or stains still appear on prints even if you clean the above, please contact your service representative.

#### **Faint Prints**

If the machine is not used for a long period of time or you change the color drum unit, the ink on the drum might dry causing print quality to deteriorate. To solve this problem, use Quality Start mode. ⇒ P.74 "Quality Start Mode".

If the print density is still too light even if you use Quality Start mode, remake the master.









## 6. Remarks

## Do's and Don'ts

### **⚠** CAUTION:

Unplug the power cord from the wall outlet before you move the equipment. While moving the equipment, you should take care that the power cord will not be damaged under the equipment.

### **#Important**

- ☐ Make sure that ❖ indicator on the PC controller operation panel is off before unplugging the power cord.
- While printing, do not turn off the main switch.
- While printing, do not unplug the power cord.
- While printing, do not open the door or covers.
- While printing, do not move the machine.
- Open and close the door and covers softly.
- When printing onto paper that contains images on the back, make sure there is a 10mm (0.4") margin at the back leading edge. If there is no margin, the machine might wrongly detect that paper is wrapped around the drum and stop
- When you use envelope or pasted print paper, the leading edge of print might be damaged.
- Make sure to make a few trial prints to check the image position because the image position of the trial print might not correspond with that of the origi-
- The leading edge of the prints might become stained if the edge touches the image of prints on the paper delivery tray.
- Print ink on the paper delivery tray might stick to the back side of the next print.
- Press the [Proof] key to perform a test print as the image density of the first few prints might be light.
- When the machine is on and the power source is less than 90% of the specified amount, printing quality will decrease. Therefore, make sure the supply from your electrical outlet is at least 90% of the required amount.
- When you make a lot of prints from a small image, ink might ooze out from the edges of the master, especially under high temperature and when printing in two or more colors. In this case, make a new master.
- Remove the paper from the tray before relocating the machine. If you relocate the machine leaving the paper on the tray, reset the paper after the relocation. If the main switch of the machine is turned on without resetting the paper correctly, the sensor might be broken.







 




 
- If the printed paper is stored for more than one day, the paper may become wrinkled. If this paper is used, wrinkles may also appear on the master. If the paper will be stored for more than one day, store it in its original wrapping paper or other protective covering.
- Shadowing may occur if the printed image at the rear edge of the paper is a solid color, when the printing speed is set to 1. If this occurs, print the image with the printing speed set to 3.
- If there are fine lines within 5mm to 10mm, 0.2" to 0.4" of the edge of the image, shadowing may occur.
- Depending on the type of paper being used, speckles may appear within 5mm to 10mm, 0.2" to 0.4" of the edge of the image at around 1000 prints.













## Where to Put Your Machine

### **Environment**

Your machine's location should be carefully chosen because environmental conditions greatly affect its performance.

### **Optimum environmental conditions**

### **⚠** CAUTION:

- Keep the equipment away from humidity and dust. Otherwise a fire or an electric shock might occur.
- Do not place the equipment on an unstable or tilted surface. If it topples over, it could cause injury.

### **⚠** CAUTION:

If you use the equipment in a confined space, make sure there is a continuous air turnover.

### **⚠** CAUTION:

 
- After you move the equipment, use the caster fixture to fix it in place. Otherwise the equipment might move or come down to cause a personal injury.
- Temperature: 10 30°C, 50 86°F
- Humidity: 20 90% RH
- A strong and level floor.
- The machine must be level within 5mm, 0.2" both front to rear and left to right.

### **Environments to avoid**

- Locations exposed to direct sunlight or strong light (more than 1500 lux).
- Locations directly exposed to cool air from an air conditioner or heated air from a heater (sudden temperature changes might cause condensation within the machine).
- Places where the machine might be subjected to frequent strong vibration.
- Dusty areas.
- Areas with corrosive gases.







6







### **Power Connection**

### **⚠ WARNING:**

- Only connect the machine to the power source described on the inside front cover of this manual. Connect the power cord directly into a wall outlet and do not use an extension cord.
- Do not damage, break or make any modifications to the power cord. Do not place heavy objects on it. Do not pull it hard nor bend it more than necessary. These actions could cause an electric shock or fire.

### A CAUTION:

Unplug the power cord from the wall outlet before you move the equipment. While moving the equipment, you should take care that the power cord will not be damaged under the equipment.

### **⚠** CAUTION:

When you disconnect the power plug from the wall outlet, always pull the plug (not the cable).


Make sure the plug is firmly inserted in the outlet.




### **Machine Clearance**

Place the machine near the power source, providing clearance as shown.

### Main frame

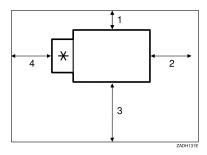

 - \*. Paper delivery tray
- 1. More than 10cm, 4.0"
- 2. More than 60cm, 23.7"
- 3. More than 60cm, 23.7"
- 4. More than 60cm, 23.7"






Where to Put Your Machine





## Main frame with the optional sorter

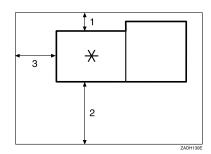

- \*. Optional sorter
- 1. More than 20cm, 8.0"
- 2. More than 100cm, 40.0"
- 3. More than 60cm, 23.7"













## **Maintaining Your Machine**

To maintain high print quality, clean the following parts and units regularly.

### Cleaning the machine

Wipe the machine with a soft, damp cloth. Then wipe it with a dry cloth to remove the water.

## Important

- ☐ Do not use chemical cleaner or organic solvent, such as thinner or benzene. If they get into the machine or melt plastic parts, a failure might occur.
- ☐ Do not clean parts other than those specified in this manual. Such parts should be cleaned by your service representative.

### Cleaning the platen cover

- 1 Lift the platen cover.
- 2 Clean the platen cover with a damp cloth and wipe it with a dry cloth.



☐ If you do not clean the platen cover, marks on the cover will be printed.

## Cleaning the Main Frame


### Cleaning the exposure glass

- 1 Lift the platen cover or document feeder.
- Clean (1) and (2).



## Cleaning the paper feed roller (Paper

Wipe off the paper dust on the paper feed roller with a damp cloth, and then wipe it with a dry cloth.

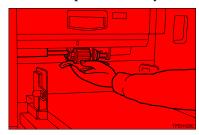

☐ If you do not clean the paper feed roller, paper misfeeds tend to occur.













## **Cleaning the Optional Document Feeder**

## **Cleaning the Sheet**

- 1 Lift the document feeder.
- Clean the sheet with a damp cloth and wipe it with a dry cloth.



 


☐ If you do not clean the sheet, marks on the sheet will be printed.







 












## 7. Specifications

## **Main Frame**

### **Configuration:**

Floor standing (with custom table or cabinet.).

### Printing Process:

Full automatic one drum system

### Original Type:

Sheet/Book

### Original Size:

Maximum 300mm  $\times 432$ mm, 11.9"  $\times 17.0$ "

### Pixel Density:

600dpi

### ❖ Image Mode:

Photo mode Letter mode Letter/Photo mode Pencil mode Tint mode

### Reduction Ratios:

- Inch version: 93%, 77%, 74%, 65%
- Metric version: 93%, 87%, 82%, 71%

### Enlargement Ratios:

- Inch version: 155%, 129%, 121%
- Metric version: 141%, 122%, 115%

### ❖ Zoom:

From 50% to 200% in 1% steps

### Directional Magnification:

Vertical:

From 50% to 200% in 1% steps

• Horizontal:

From 50% to 200% in 1% steps









### Specifications

### Printing Area:

- A3 drum:
  - Inch version: More than 290 × 420mm, 11.4" × 16.6"
  - Metric version: More than 290mm × 410mm, 11.4" × 16.2"
- A4 drum: More than 290mm  $\times 200$ mm, 11.4"  $\times 7.8$ "

### Print Paper Size:

Maximum:  $297 \text{mm} \times 432 \text{mm}, 11.6" \times 17.0"$ Minimum: 70mm  $\times$  148mm, 2.8"  $\times$  5.9"

### **♦** Leading Edge Margin:

Less than 8mm, 0.32"

### Print Paper Weight:

•  $47.1 - 209.3 \text{g/m}^2$ , 12.5 - 55.6 lb

### Print Speed:

60 – 120rpm (5 steps)

### First Copy Time (Master Process Time):

Less than 31 seconds (A3,  $11" \times 17" \square$ ) Less than 25 seconds (A4,  $8^1/2^{"} \times 11^{"} \square$ )

### Second Copy Time (First Print Time):

Less than 32 seconds (A3,  $11" \times 17"$ ) Less than 26.5 seconds (A4,  $8^1/2^{"} \times 11"$ )

### Color Printing:

Drum unit replacement system

### Image Position:

- Vertical:
  - Inch version: ± 10mm, ± 0.4"
  - Metric version: ± 15mm, ± 0.6"
- Side:

 
 $\pm$  10mm,  $\pm$  0.4" (for either side)

### **♦** Paper Size and Paper Capacity:

 $1,000 \text{ sheets } (80g/m^2, 20 \text{ lb})$ 

### **♦** Paper Delivery Tray Capacity:

 $1,000 \text{ sheets } (80\text{g/m}^2, 20 \text{ lb})$ 











## **♦** Master Eject Unit Capacity:

- A3 drum More than 70 masters
- A4 drum 100 masters

### riangle Dimensions (W imes D imes H):

	Width	Depth	Height
Stored	625mm, 24.6"	650mm, 25.6"	575mm, 22"
Stored with document feeder	625mm, 24.6"	650mm, 25.6"	684mm, 26.9"
Set up	1,405mm, 55.4"	650mm, 25.6"	575mm, 22"
Set up with cabinet	1,405mm, 55.4"	650mm, 25.6"	1,010mm, 39.8"
Set up with cabinet and document feeder (when you use A4, $8^1/2^{"} \times 11^{"}$ or smaller paper)	1,215mm, 47.8"	650mm, 25.6"	1,120mm, 44.1"
Set up with cabinet and document feeder (when you use B4, $8^1/2^{"} \times 14^{"}$ or larger paper)	1,405mm, 55.4"	650mm, 25.6"	1,120mm, 44.1"



### ♦ Weight:

• Machine: Less than 105kg, 231.5 lb

### ♦ Noise Emission \*1

Sound power level

	Mainframe only	Complete System *3
Stand-by		38dB (A)
During printing	120cpm	79dB (A)

## Sound pressure level \*2

 
	Mainframe only	Complete System *3
Stand-by		20dB (A)
During printing	120 cpm	64dB (A)

 $<sup>^{*1}\,\,</sup>$  The above measurements made in accordance with ISO 7779 are actual value.

<sup>\*3</sup> The Complete System consists of mainframe and sorter.







<sup>\*2</sup> It is measured at the position of the operator.



### Specifications

### **❖** Power Consumption:

- Making a master: Less than 0.24kW
- Printing: Less than 0.24kW

### **❖** Optional Equipment:

 
- Drum unit: Color Drums A3, 11" × 17" A4, 8<sup>1</sup>/<sub>2</sub>" × 11"
- Key Counter
- Document Feeder
- PC Controller

## Note

 $\hfill \square$  Specifications are subject to change without notice.













Document Feeder (Option)

## **Document Feeder (Option)**

### Original Type:

Sheet

### Original Weight:

 $52.3g/m^2$  to  $127.9g/m^2$ , 13.9 lb to 34 lb

### Original Size:

Max. 297mm × 420mm, 11.6" × 16.5" Min. 149mm × 210mm, 5.9" × 8.3"

### **❖** First Copy Time (Master Process Time):

Less than 34 seconds (A3,  $11" \times 17"$ ) Less than 28.5 seconds (A4,  $8^1/_2" \times 11"$ )

### Second Copy Time (First Print Time):

Less than 35 seconds (A3,  $11" \times 17"$ ) Less than 30 seconds (A4,  $8^1/_2" \times 11"$ )

### Original Capacity:

50 sheets (80g/m², 20 lb) 7.5mm, 0.3" height













Specifications

## Sorter (Option)

### Number of Bins:

40 bins

### ◆ Paper Sizes:

Bins: A3  $\square$ , B4  $\square$ , A4  $\square$   $\square$ , B5  $\square$ , 11" × 17"  $\square$ , 8<sup>1</sup>/<sub>2</sub>" × 14"  $\square$ , 8<sup>1</sup>/<sub>2</sub>" × 11"  $\square$   $\square$  Paper delivery tray: A3  $\square$ , B4  $\square$ , A4  $\square$   $\square$ , B5  $\square$   $\square$ , A5  $\square$ , B6  $\square$ , A6  $\square$ , 11" × 17"  $\square$ , 8<sup>1</sup>/<sub>2</sub>" × 14"  $\square$ , 8<sup>1</sup>/<sub>2</sub>" × 11"  $\square$   $\square$ , 5<sup>1</sup>/<sub>2</sub>" × 8<sup>1</sup>/<sub>2</sub>"  $\square$   $\square$ 

### Sort Bin Capacity:

50 sheets  $(80g/m^2, 20 lb)$ 

### Paper Weight:

 $52 - 105g/m^2$ , 13.9 - 27.8 lb

### Power Consumption:

144W

### ightharpoonup Dimensions (W $\times$ D $\times$ H):

 
 $900 \times 650 \times 1,700$ mm, 35.5"  $\times 25.6$ "  $\times 67.0$ "

 
### Weight

Approx. 148kg, 326.3 lb

☐ Specifications are subject to change without notice.







Twin Color Press Roller Printing System TC-II (Option)

# Sapphire\_gb3\_FM.book Page 211 Monday, December 11, 2000 10:21 AM



## Twin Color Press Roller Printing System TC-II (Option)

### Configuration:

Floor standing (with custom table or cabinet)

### Printing Process:

Twin color press roller printing system

### Print Paper Size:

Maximum: 297mm × 432mm, 11.6" × 17.0" Minimum:  $70\text{mm} \times 250\text{mm}$ ,  $2.8" \times 9.8"$ 

### Print Paper Weight:

• 52.3 - 209.3g/m<sup>2</sup>, 13.9 - 55.6 lb

### Print Speed:

90 – 120cpm (3 steps)

### Color Printing:

Drum unit replacement system

### Paper Size and Paper Capacity:

 $1,000 \text{ sheets } (80\text{g/m}^2, 20 \text{ lb})$ 

### **♦** Paper Delivery Tray Capacity:

 $1,000 \text{ sheets } (80\text{g/m}^2, 20 \text{ lb})$ 

### ♦ Dimensions (W × D × H):

	Width	Depth	Height
Stored	920 mm, 36.2"	630 mm, 24.8"	555 mm, 21.9"
Set up	1,610 mm, 63.4"	630 mm, 24.8"	555 mm, 21.9"

### Weight:

• Machine: Less than 88kg, 194 lb

### Power Consumption:

• Printing: 0.55kW(Max)

 
### Optional Equipment:

• Drum unit: color Drums A3,  $11" \times 17"$ 



☐ Specifications are subject to change without notice.













## Consumables

Name	Size	Remarks
Master:	Length: 140m, 520ft/roll Width: 320mm, 12.6" 2 Rolls/case	A3 drum More than 255 masters can be made per roll A4 drum 410 masters can be made per roll
Ink-Black	1,000ml/pack	Environmental conditions: -5 to 40°C 10 – 95% RH
Ink-Red	1,000ml/pack	
Ink-Blue		
Ink-Green		
Ink-Brown		
Ink-Purple		
Ink-Yellow		
Ink-Navy		
Ink-Maroon		
Ink-Teal		
Ink-Orange		
Ink-Gray		
Ink-Violet		
Ink-Hunter green		
Ink-Burgundy		
Ink-Gold		
High Density Ink-Black		
High Density Ink-Blue		
High Density Ink-Green		
High Density Ink-Reflex Blue		
High Density Ink-Red		
High Density Ink-Navy		
High Density Ink-Teal		



 $\hfill \square$  Specifications are subject to change without notice.











## **INDEX**

[ $\triangleleft$ ][ $\triangleright$ ] keys (Speed keys), 7 [ $\triangleleft$ ][ $\triangleright$ ][ $\triangle$ ][ $\nabla$ ], 7

16 single-sided originals →
1 single-sided print of 16 images, 114
1 single-sided original →
1 single-sided print of 2 images, 66
1 single-sided originals →
1 single-sided print of 4 images, 66
2 single-sided originals →
1 single-sided print with 2 images, 61
2 single-sided originals →
1 single-sided print with 4 images, 61
4 single-sided originals →
1 single-sided print of 4 images, 114
8 single-sided originals →
1 single-sided print of 4 images, 114

### Α

 $A3/11" \times 17"$  drum indicator, 8 A3/11" × 17" drum unit, 191  $A4/81/2" \times 11"$  drum indicator, 8  $A4/81/2" \times 11"$  drum unit, 191 accessing the user tools, 139 Add Ink Indicator (**\(\Ldot\)**), 186 adjusting the image density of prints, 24 adjusting the position of printed images, 23 Administrator Mode, 152 All Class mode, 50 Auto Class, 148 Auto Class mode, 52 Auto Combine mode, 66 Auto Cycle, 49 [Auto Cycle] key, 7 Auto Cycle ON/OFF, 146 Auto Magnification, 30 [Auto On Line] key, 6 Auto Ouality Start, 74 Auto Reset, 141 Auto Rotation, 149 Auto Separate, 149

### В

Background ON/OFF, 146 background patterns, 85 black line/stain, 196

### C

Cancel, 9 Cancel Comb., 147 changing the printing speed, 26 Check Counter, 152, 164 Chg. User Code, 152, 166 Class Enter No., 144, 155 [Class] key, 7 Class Manual Set. 146 Class mode, 59 Class Sort, 133, 135 clearing misfeeds, 174 [Clear Modes/Energy Saver] key, 7 [Clear/Stop] key, 7 closed area method, 90 color drum, 128, 191 color drum indicator, 8 color printing, 128 combination chart, 137 Combine, 146 [Combine] key, 6 combine originals, 61 Combine printing with the document feeder, 125 Comb. Sep. Line, 147 command sheet, 86 consumables, 212 CopyCount Display, 143 counter, 8

### D

Data Print, 142 Date Position Set, 150 Date Stamp, 107 Date Style Set, 150 Deflector Angle, 148 Delivery Capacity, 143 Del. User Code, 152, 166 diagonal line method, 89 Directional Magnification (%), 35 Directional Magnification (Size), 37 Direction(Page), 151 dirty background, 193 document feeder (ADF), 4 drum size, 132 drum unit, 3 drum unit handle B2, 129 drum unit lock lever B1, 3









### Е

Eco.Mode ON/OFF, 145 Economy mode, 48 [Economy Mode] key, 6 Edge Erase, 40 [Edge Erase] key, 6 Energy Saver mode, 22 Energy Saving, 142 envelopes, 41 environment, 199 erasing center and edge margins, 39 Exit, 9 exposure glass, 3

flip up cover, 1 Format, 104 front door, 1

handle E1, 2

Idling for Q.start, 147 Ignore Paper Size, 146 [Image Density] key, 6 Image Overlay, 104 Image Rotation, 81 indicators, 8 Initial Setting, 144 ink, 186, 212 ink holder, 3 Ink/Master Left, 149

 
Job Separation, 76 [Job Separator] key, 6 Jogger, 149

Key counter, 5, 191, 208 Key Operator Code, 153 keys, 6

Language on LCD, 141 LCD Contrast, 143 Letter mode, 44 Letter/Photo mode printing, 44 Loading Paper, 15 loading paper, 173 Load Paper indicator (**≜**), 173 Longer Paper, 146 LT/Photo Contrast, 144 LT/Photo Priority, 144

machine clearance, 200 machine exterior, 1 machine interior, 2 main switch, 2 maintaining your machine, 202 Make/Chg. Pattern, 151, 163 [Make-Up] key, 6 Make-up printing, 93 Make-up printing features, 82 Make-up samples, 96 Manual Class mode with 2 or more originals, 57 Manual Class mode with One Original, 55 Manual Class mode with two or more originals using the document feeder, 126 Manual Quality Start, 74 master, 188, 212 Master Eject indicator (☎), 190 Master End Indicator (👛), 188 Master length, 78, 149 master misfeed in the master eject section, 180 master misfeeds in the master eject section, 181 master misfeeds in the master feed section, 179 master tray, 1 Max. Quantity, 143 Memory Combine, 114 Min. Quantity, 143 mm/inch, 141 Mode Setting, 146 monitor indicators, 8 MSTR Makg. Dnsity, 144









Next, 9 No. of Q.start, 148, 158 No. of Skip Feed, 147, 157 No Orig. Size, 146 No Orig. Size DF, 146 Number keys, 7

OK, 9 [On Line] key, 6 On Line Overlay, 104 On Line printing, 79 Open Cover/Unit Indicator ([]\*), 185 operation panel, 1,6 optional document feeder, 123 options, 4, 208, 209, 210 original misfeeds, 182 Original mode, 44 Original Priority, 144 originals, 13, 123 Overlay, 104 [Overlay] key, 6

Page Stamp, 109 Panel Beeper, 143 panel display, 8,9 panel display layout, 10 paper alignment wings, 2 paper delivery end plate, 2 paper delivery side plates, 2 paper delivery tray, 2 paper feed side plates, 1 Paper feed side plates knob, 1 Paper feed tray, 1 Paper feed tray down key, 1 paper misfeeds in the paper exit section, 178 paper misfeeds in the paper feed section, 174, 175 paper or master wrapped around the drum, 176 Paper Type, 41, 42, 43, 144 PC controller, 79, 105 Pencil mode printing, 47 Photo Contrast, 145 Photo mode printing, 45 Photo(Screen), 145 platen cover, 3 poor printing, 193

Position(Date), 150 Position(Page), 151 power connection, 200 Prev., 9 printing in two colors, 130 [Print] key, 7 print paper, 11, 41, 173 Program, 70 [Program] key, 7 [Proof] key, 7 protecting a program, 71

### Q

[#] key, 7 [Quality Start] key, 6 Quality Start mode, 74

### R

R. Cntr. Display, 141 recalling a program, 72 reducing and enlarging using preset ratios, 28 Reg/Chg KeyOpCode, 153 Reg. User Code, 152 Remarks, 197 removing program protection, 71 Repeat, 119 repeating an image over the entire print, 114 Reproduction Ratio, 154 Reproduct'n Ratio, 144 Reset Counters, 152, 165 Reset R. Counter, 141 Restricted Access, 153

### S

Safety Information, i [Security] key, 6 Security mode, 73 Select, 9 service call, 171 Set Operat'n Mode, 143 Setting Q.start, 148 Setting Up The Paper Delivery Tray, 16 Set User Code, 152 Size, 150 [Skip Feed] key, 6 Skip Feed printing, 68 Sort, 133, 134 [Sorter] key, 6 special feature indicator, 8 special kinds of paper, 42







specifications, 205 Stamp, 112, 150 Stamp Density, 150 [Stamp] key, 6 Stamp Position, 150, 160 standard paper, 41 standard printing, 19 [Start] key, 7 stopping a multi-print run, 27 Storage Overlay, 104 storing a program, 70 System, 141

thick paper, 41 Time Setting, 141, 154 Tint Mode, 25 trailing edge guides, 3 Troubleshooting, 169 Type, 150 Type of Paper, 149, 159 Type(Page), 151

user code, 18, 152 user tools, 139 [User Tools] key, 6 user tools menu, 141

what you can do with this machine, vi where to put your machine, 199

### Z

Zoom, 33

