

ARDF Type 4640 (C686)

ARDF Type 4640 (C686)


PARTS CATALOG

This catalog gives the numbers and names of parts on this machine.

1.EXTERIOR (C686).....	2
2.ORIGINAL FEED SECTION 1 (C686)	4
3.ORIGINAL FEED SECTION 2 (C686)	6
4.ORIGINAL TRANSFER SECTION (C686)	8
5.ORIGINAL EXIT (C686).....	10
6.DRIVE SECTION (C686).....	12
7.FRAME SECTION (C686)	14
8.DECALS AND DOCUMENTS (C686).....	16
PARTS INDEX.....	20

Month ,date ' Year

1.EXTERIOR (C686)

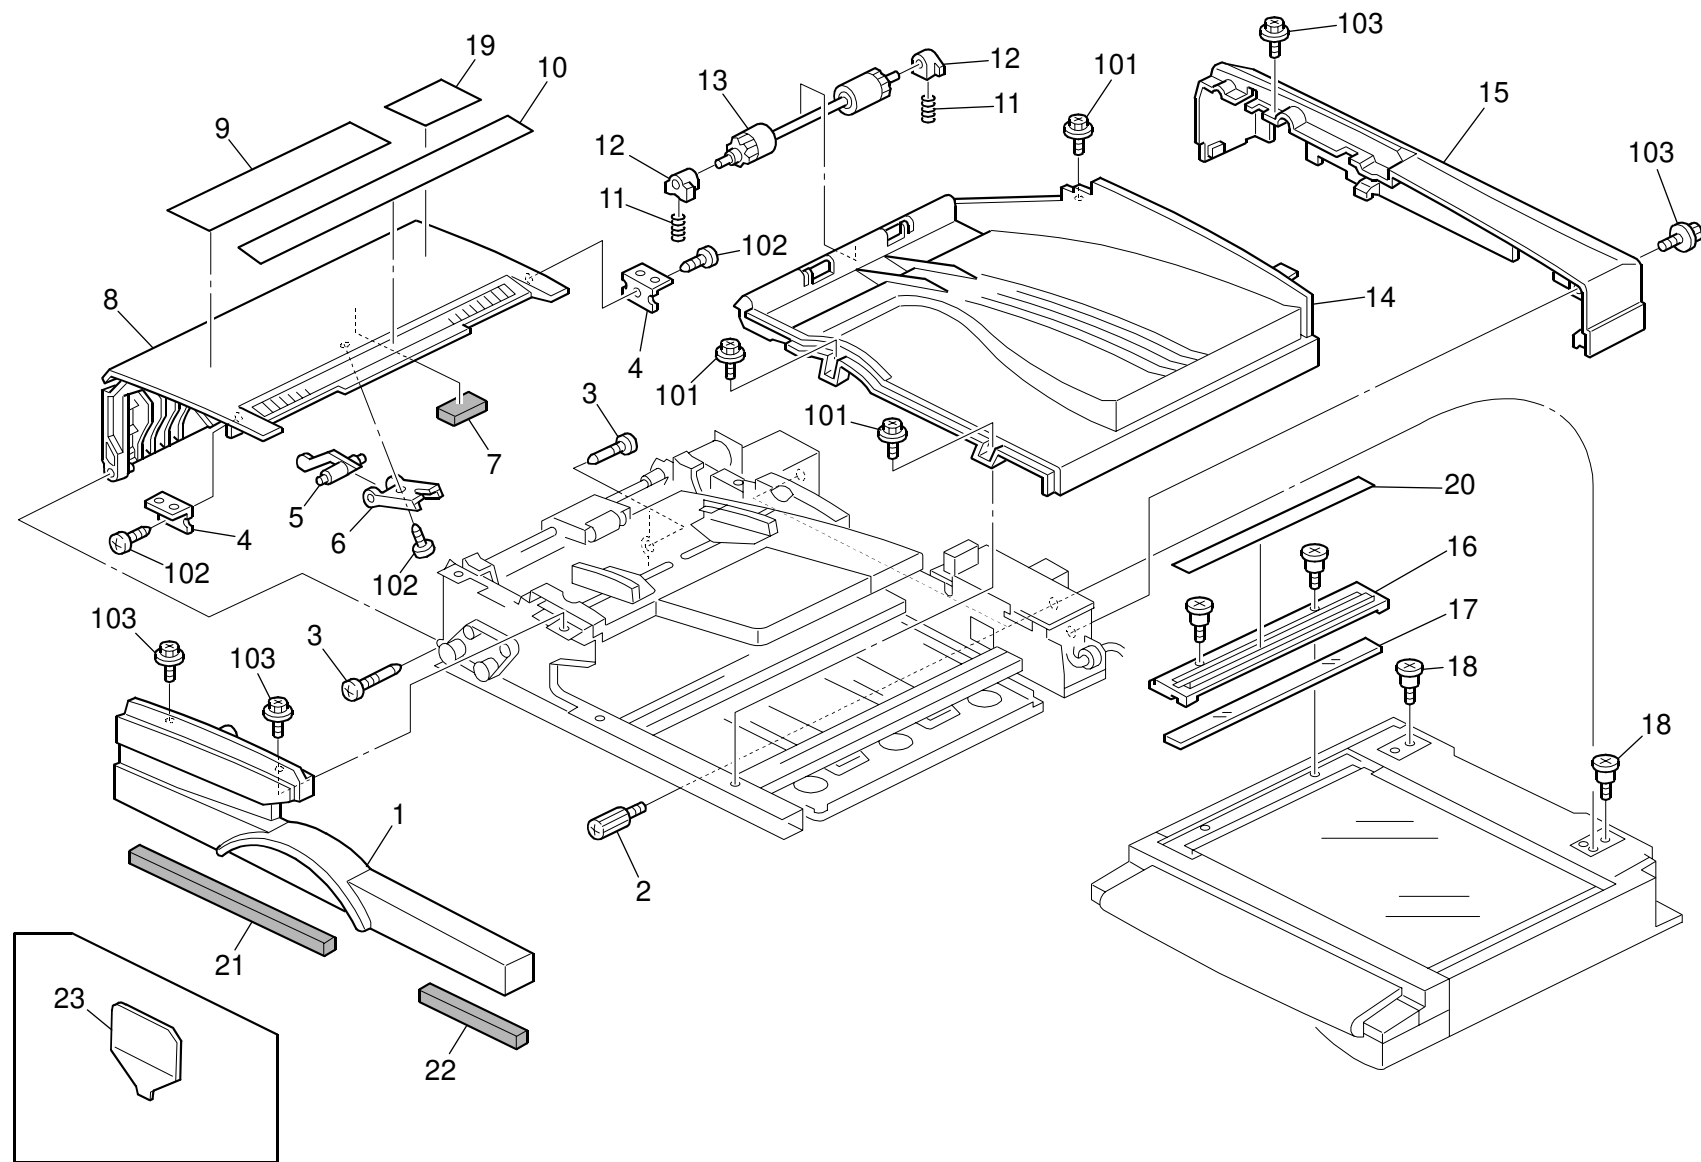


1.EXTERIOR (C686)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B386 4811	Front Cover	
2	B714 3115	Knob Screw:Document Feeder:Fix	
3	AA14 3788	Pin:Guide Plate:Paper Feed	
4	B386 4873	Positioning Plate	
5	A859 4871	Original Sensor Feeler	
6	A859 4872	Feeler Bracket	
7	A859 4881	Cushion Paper Feed	
8	B386 4842	Left Cover	
9	B814 6014	Decal - Misfeed Removal	
10	B813 6021	Decal - Size Indication Cover	
11	AA06 3311	Transport Roller Spring	
12	A859 4836	Bushing- Exit Driven Roller	
13	A859 4837	Exit Driven Roller	
14	B386 4871	Upper Cover	
15	B386 4821	Rear Cover	
16	B386 7102	Scale:Machine Or Copier:Adhesion	
17	AC01 3004	Exposure Glass	
18	A859 7211	Stepped Screw	
19	C642 1373	Decal:Caution:Original:Exp	
20	B814 6054	Decal:Scale:Machine or Copier:Inch	
21	B386 4874	Sponge:Cover:Front	
22	B386 4872	Sponge:Cover:Front Right	
23	B386 3118	Standard Screw Driver:Document Feeder	

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0452 3008N	Tapping Screw - M3x8	
103	0451 3008N	Tapping Screw - M3x8	

2.ORIGINAL FEED SECTION 1 (C686)

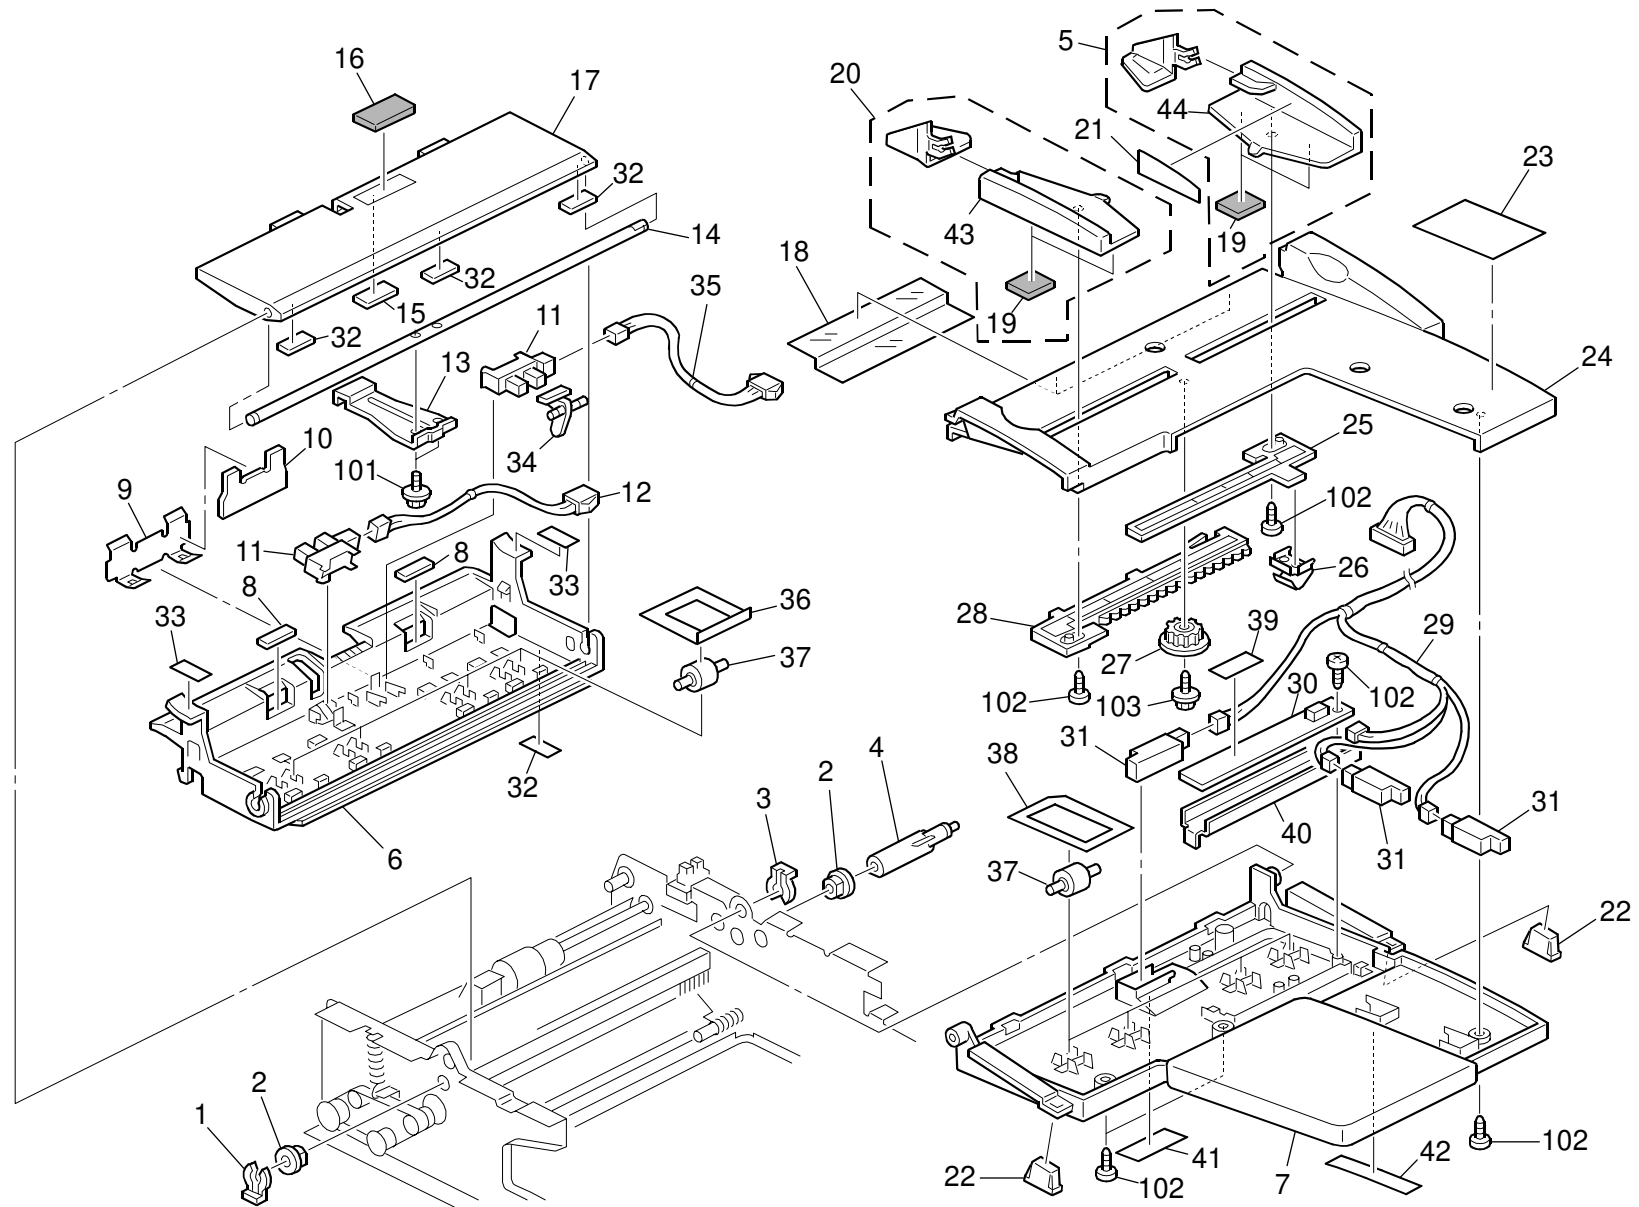


2.ORIGINAL FEED SECTION 1 (C686)

Index No.	Part No.	Description	Q'ty Per Assembly
1	5447 2681	Snap Ring	
2	H060 2126	Bushing - M6x7	
3	5215 2621	Snap Ring - M6	
4	A859 2355	Pressure Plate Lever	
5	B386 4651	Rear Side Fence Ass'y	
6	A859 2311	Guide Plate - Paper Feed	
7	B810 4630	Paper Tray:Behind:Alps-f	
8	A859 2319	Base Cushion	
9	A859 2317	Guide - Separation Pad	
10	A859 2315	Separation Pad	
11	AW02 0141	Photointerruptor	
12	B617 5720	Harness - Registration Sensor	
13	B386 2353	Pressure Plate - Base	
14	A859 2354	Base Shaft	
15	A859 4876	Left Cushion	
16	A859 2352	Pressure Plate Pad	
17	B386 2351	Original Feed Plate	
18	A858 4681	Sheet - Paper Tray	
19	A351 4951	Guide Pad - Side Fence	
20	B386 4641	Front Side Fence Ass'y	
21	B814 6043	Decal - Side Fence	
22	G012 1531	Magnet	
23	C642 1371	Decal:Original Table	
24	B386 4621	Upper Original Table	
25	A859 4662	Rack- Rear Side Fence	
26	A859 4663	Electrode Plate- Side Fence	
27	A859 4665	Gear - 16Z	
28	A859 4661	Rack- Front Side Fence	
29	B617 5715	Harness - Original Tray	
30	B386 5550	Paper Size Sensor Board	
31	AW01 0112	Photo Refiection Sensor:Original Table	
32	B386 2356	Base Cushion - Behind	
33	A858 6022	Decal Blue	
34	A858 2319	Reverse Sensor Feeler	
35	B617 5706	Harness - Reverse Sensor	

Index No.	Part No.	Description	Q'ty Per Assembly
36	A858 2313	Spring Plate - Pressure Roller	
37	A858 4671	Roller Driven	
38	A858 4676	Spring Plate - Pressure Roller	
39	A859 4664	Sheet - Paper Size Sensor Board	
40	B386 4693	Mylar Seal	
41	B386 4692	Mylar Seal - 16x45	
42	B386 4691	Mylar Seal - 28x107	
43	B386 4710	Front Side Fence	
44	B386 4720	Rear Side Fence	
101	0451 3006N	Tapping Screw - 3x6	
102	0452 3008N	Tapping Screw - M3x8	
103	0450 3008N	Tapping Screw - M3x8	

3.ORIGINAL FEED SECTION 2 (C686)

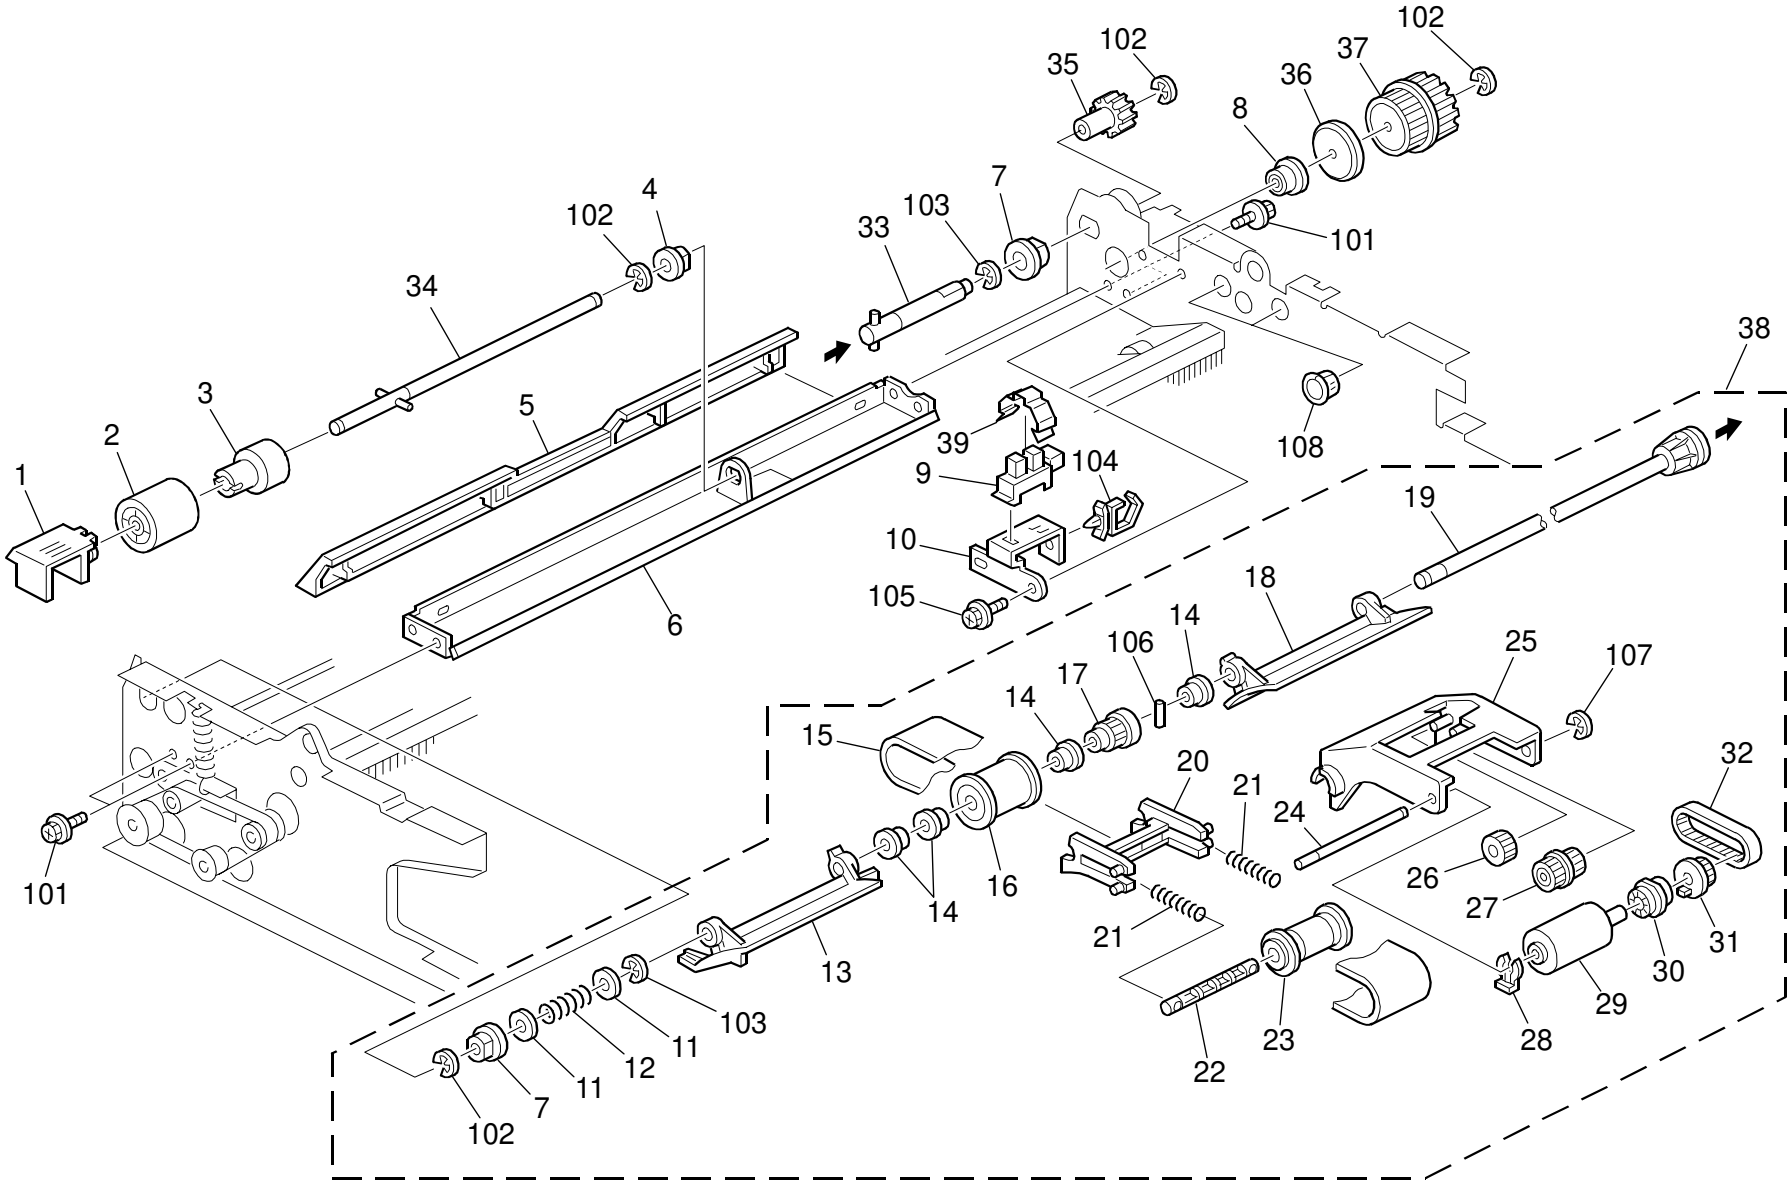


3.ORIGINAL FEED SECTION 2 (C686)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A859 2220	Reverse Roller Cover	
2	A859 2241	Reverse Roller	
3	A294 6700	Torque Limiter - 53mnxm	
4	5053 0447	Bushing - 6mm	
5	A859 1621	Separation Guide	
6	B386 1610	Separation Stay	
7	5304 1639	Bushing - 8mm	
8	A859 2230	Ball Bearing - 6x13x5	
9	AW02 0141	Photointerruptor	
10	B386 1123	Sensor Bracket	
11	AA13 2013	Spacer	
12	AA06 3435	Compression Spring:Paper Feed:Joint	
13	A859 2132	Front Guide - Paper Feed	
14	A628 1225	Bushing - 8mm	
15	A859 2141	Belt Paper Feed	
16	A859 2114	Drive Roller - Paper Feed Belt	
17	A859 2121	Gear - 22Z	
18	A859 2131	Rear Guide - Paper Feed	
19	A859 2120	Drive Shaft - Paper Feed Belt	
20	C682 2110	Holder:Belt	
21	B386 3320	Spring:Belt:Paper Feed:8n	
22	A859 2112	Drive Shaft - Paper Feed Belt	
23	B387 2113	Roller - Paper Feed Belt	
24	A859 2162	Pick-up Roller Shaft	
25	G412 3821	Holder - Pick Up	
26	A859 2167	Gear - 22Z	
27	G412 3831	Pulley - 22Z	
28	5206 2686	Snap Ring	
29	B386 2171	Pickup Roller	
30	A859 2163	Pick-up Collar	
31	A859 2164	Pulley - 2Z	
32	A859 2166	Timing Belt - 2XL	
33	A859 4216	Shaft Electromagnetic Clutch	
34	A859 2210	Reverse Roller Shaft	
35	A858 4231	Gear - 20Z	

Index No.	Part No.	Description	Q'ty Per Assembly
36	A859 4222	Pulley Flange	
37	A858 4221	Gear - 31Z	
38	C682 2100	Belt Unit:Paper Feed:Ass'y	
39	B386 1128	Spring Plate Sensor On Off Detector	
101	0454 3006Q	Tapping Screw - M3x6	
102	0720 0040E	Retaining Ring - M4	
103	0720 0060E	Retaining Ring - M6	
104	1105 0109	Cord Keep	
105	0451 3006N	Tapping Screw - 3x6	
106	0632 0100G	Pin - 2x10mm	
107	0720 0030E	Retaining Ring - M3	
108	1106 0193	Bushing - 7.9mm	

4.ORIGINAL TRANSFER SECTION (C686)

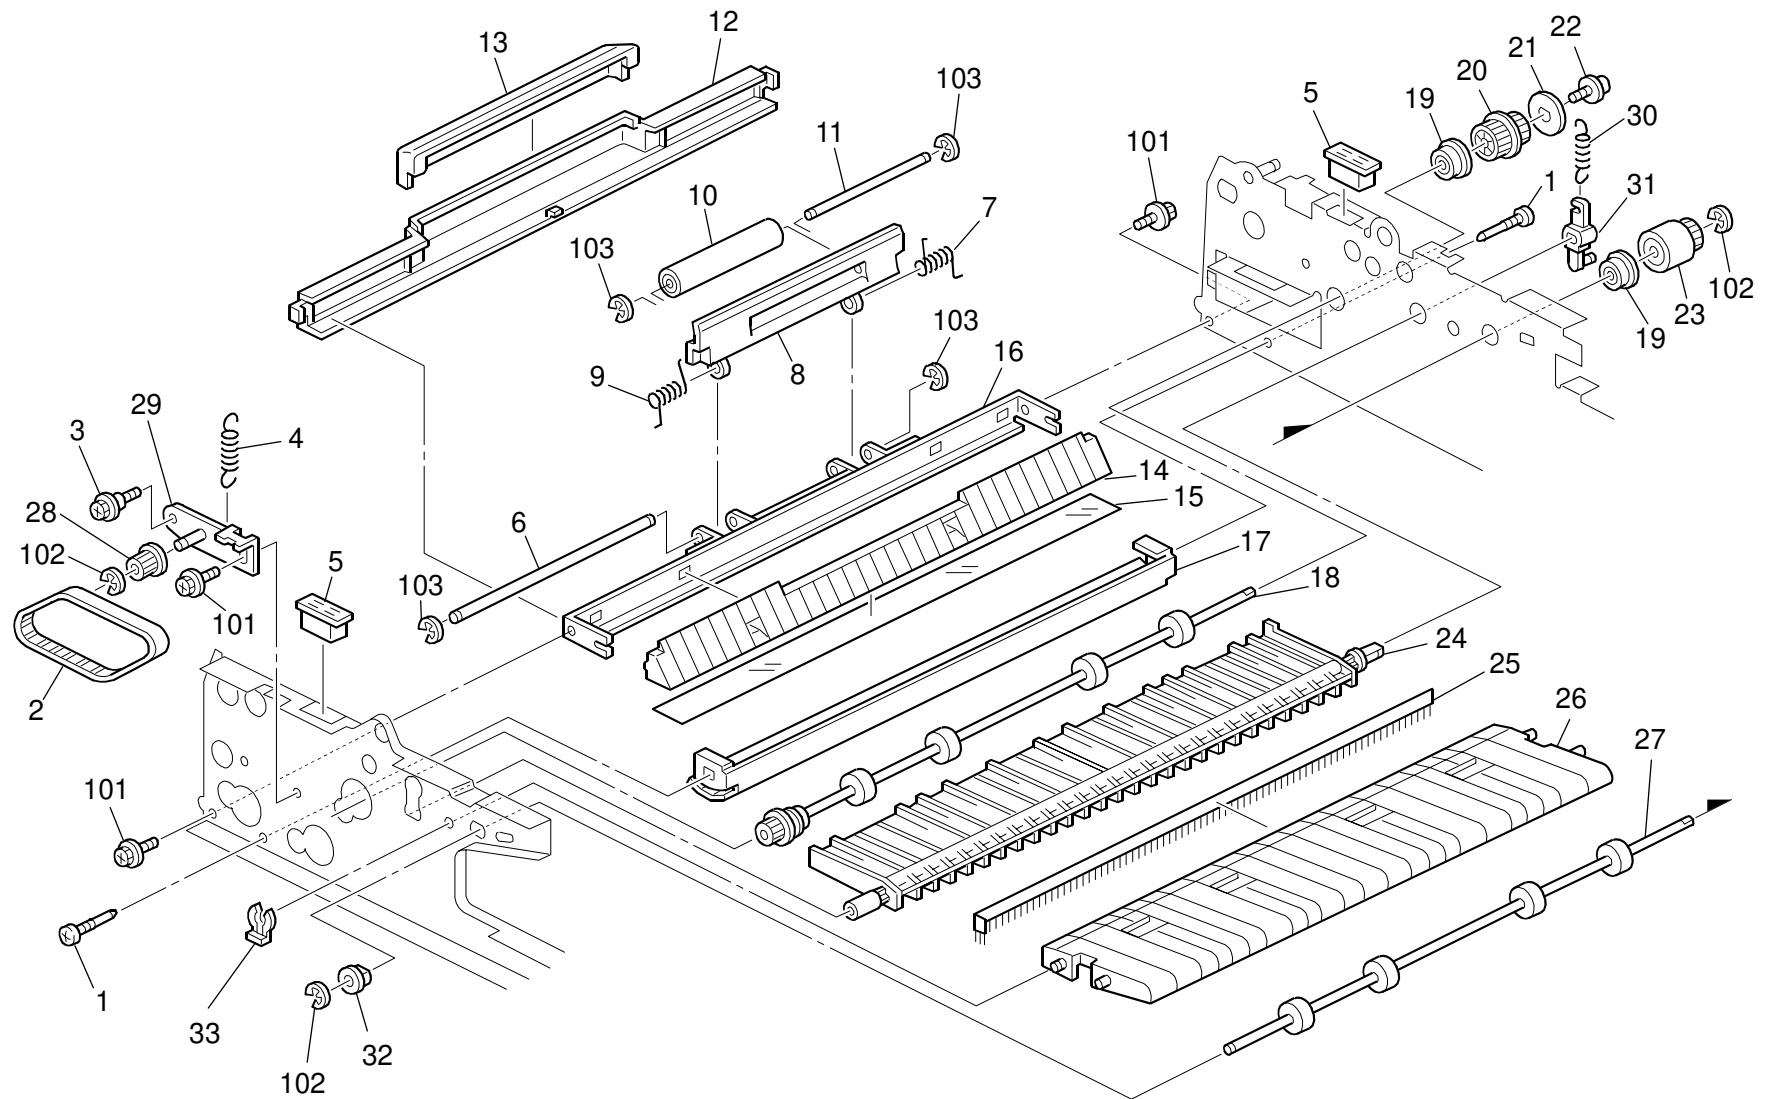


4.ORIGINAL TRANSFER SECTION (C686)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AA14 3788	Pin:Guide Plate:Paper Feed	
2	A859 4331	Timing Belt - 2XL	
3	AA14 3790	Screw:CONTACT POINT	
4	A859 4341	Tension Spring	
5	AG07 0513	Magnet Catch	
6	A859 3317	Contact Point Shaft	
7	B386 3322	Torsion Spring:Pressure:Front:20n	
8	A859 3316	Pullout Lever	
9	B386 3321	Torsion Spring:Pressure:Rear:20n	
10	B386 3387	Roller:Driven:Transport Roller:Middle: DIA15.8EP45	
11	A859 3313	Pressure Driven Shaft	
12	B386 4881	Left Lower Cover	
13	B386 4856	Cover - Transport Driven Roller	
14	A859 1723	Left Lower Guide	
15	G412 3611	Guide Mylar	
16	B386 1710	Left Lower Stay	
17	B386 3513	Guide:Exposure Glass	
18	B386 3130	Exit Roller - Drive	
19	A859 2230	Ball Bearing - 6x13x5	
20	A859 4271	Pulley - 31/32Z	
21	A859 4272	Flange	
22	B386 2214	Screw:M3X5	
23	A858 4392	Torque Limiter	
24	A858 3710	Exchange Reverse Powl	
25	A859 3225	Discharge Brush	
26	B386 4861	Reverse Tray	
27	B386 3140	Reverse Roller - Drive	
28	A859 4321	Pulley-20z	
29	B386 4311	Adjusting Pin - M6	
30	A858 3717	Tension Spring - Exchange Powl	
31	A858 3715	Exchange Powl Lever	
32	5053 0447	Bushing - 6mm	
33	5447 2681	Snap Ring	

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0720 0040E	Retaining Ring - M4	
103	0720 0030E	Retaining Ring - M3	

5.ORIGINAL EXIT (C686)

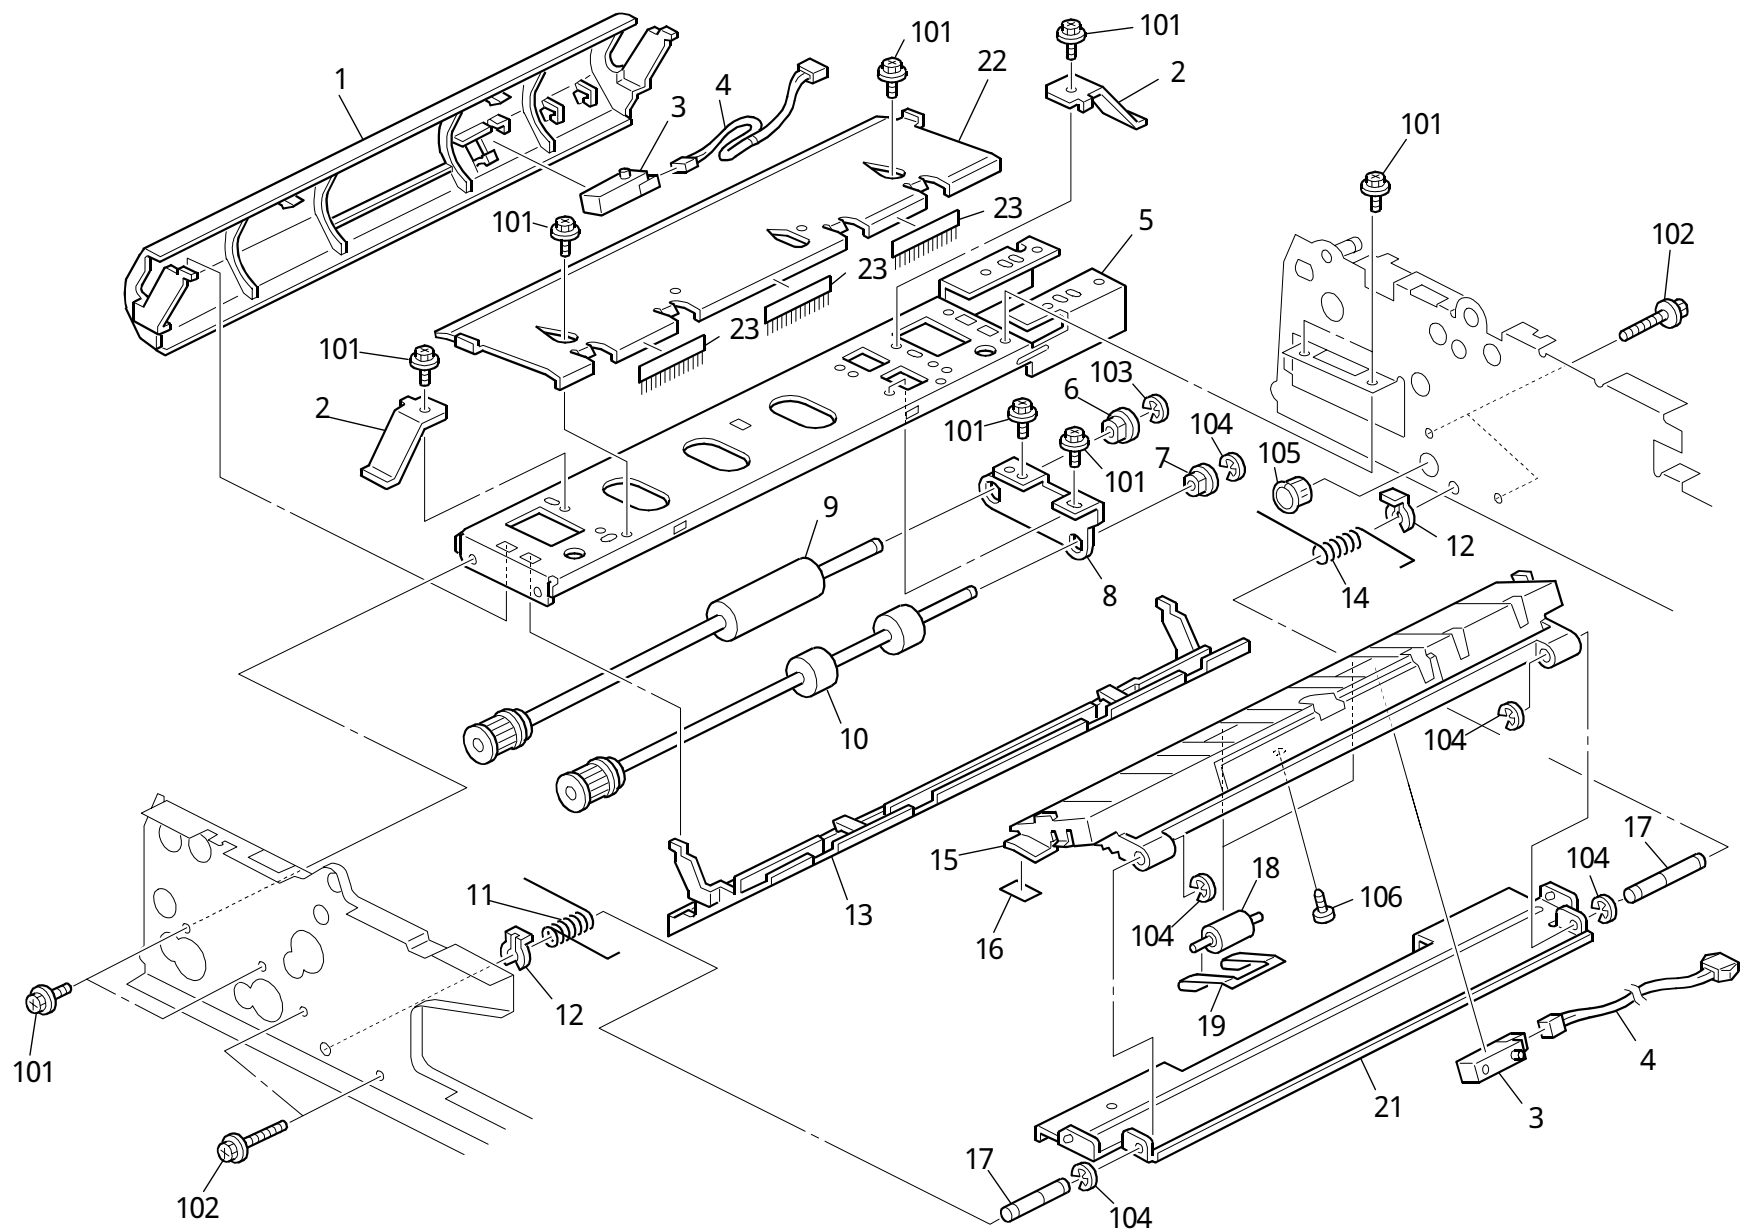


5.ORIGINAL EXIT (C686)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A859 3210	Guide Plate - Transport Roller	
2	A859 1322	Spring Plate:Guide:Exposure Glass	
3	AW01 0109	Photo Refiection Sensor:Ps117ed1	
4	B617 5705	Sensor Relay Harness	
5	B386 1311	Left Stay	
6	5304 1639	Bushing - 8mm	
7	5053 0447	Bushing - 6mm	
8	B386 1320	Bracket - Transport Roller	
9	A859 3110	Transport Roller	
10	B386 3121	Transport Roller - Middle	
11	A859 3431	Front Spring	
12	5447 2681	Snap Ring	
13	A859 3220	Guide Plate - Upper Exit	
14	A859 3430	Rear Spring	
15	A859 3411	Exit Guide Plate	
16	A859 6023	Decal Green	
17	A859 3412	Shaft - Exit Guide Plate	
18	B386 3389	Roller:Driven:Middle:Ep35	
19	A859 3425	Spring Plate	
21	B386 3410	Cover:Guide Plate:Exit:Ass'y	
22	B386 3234	Guide Plate:Reverse:Ass'y	
23	A858 3236	Discharge Brush:L50	

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0451 4014N	Tapping Screw:M4x14	
103	0720 0060E	Retaining Ring - M6	
104	0720 0040E	Retaining Ring - M4	
105	1106 0193	Bushing - 7.9mm	
106	0452 3008N	Tapping Screw - M3x8	

6.DRIVE SECTION (C686)

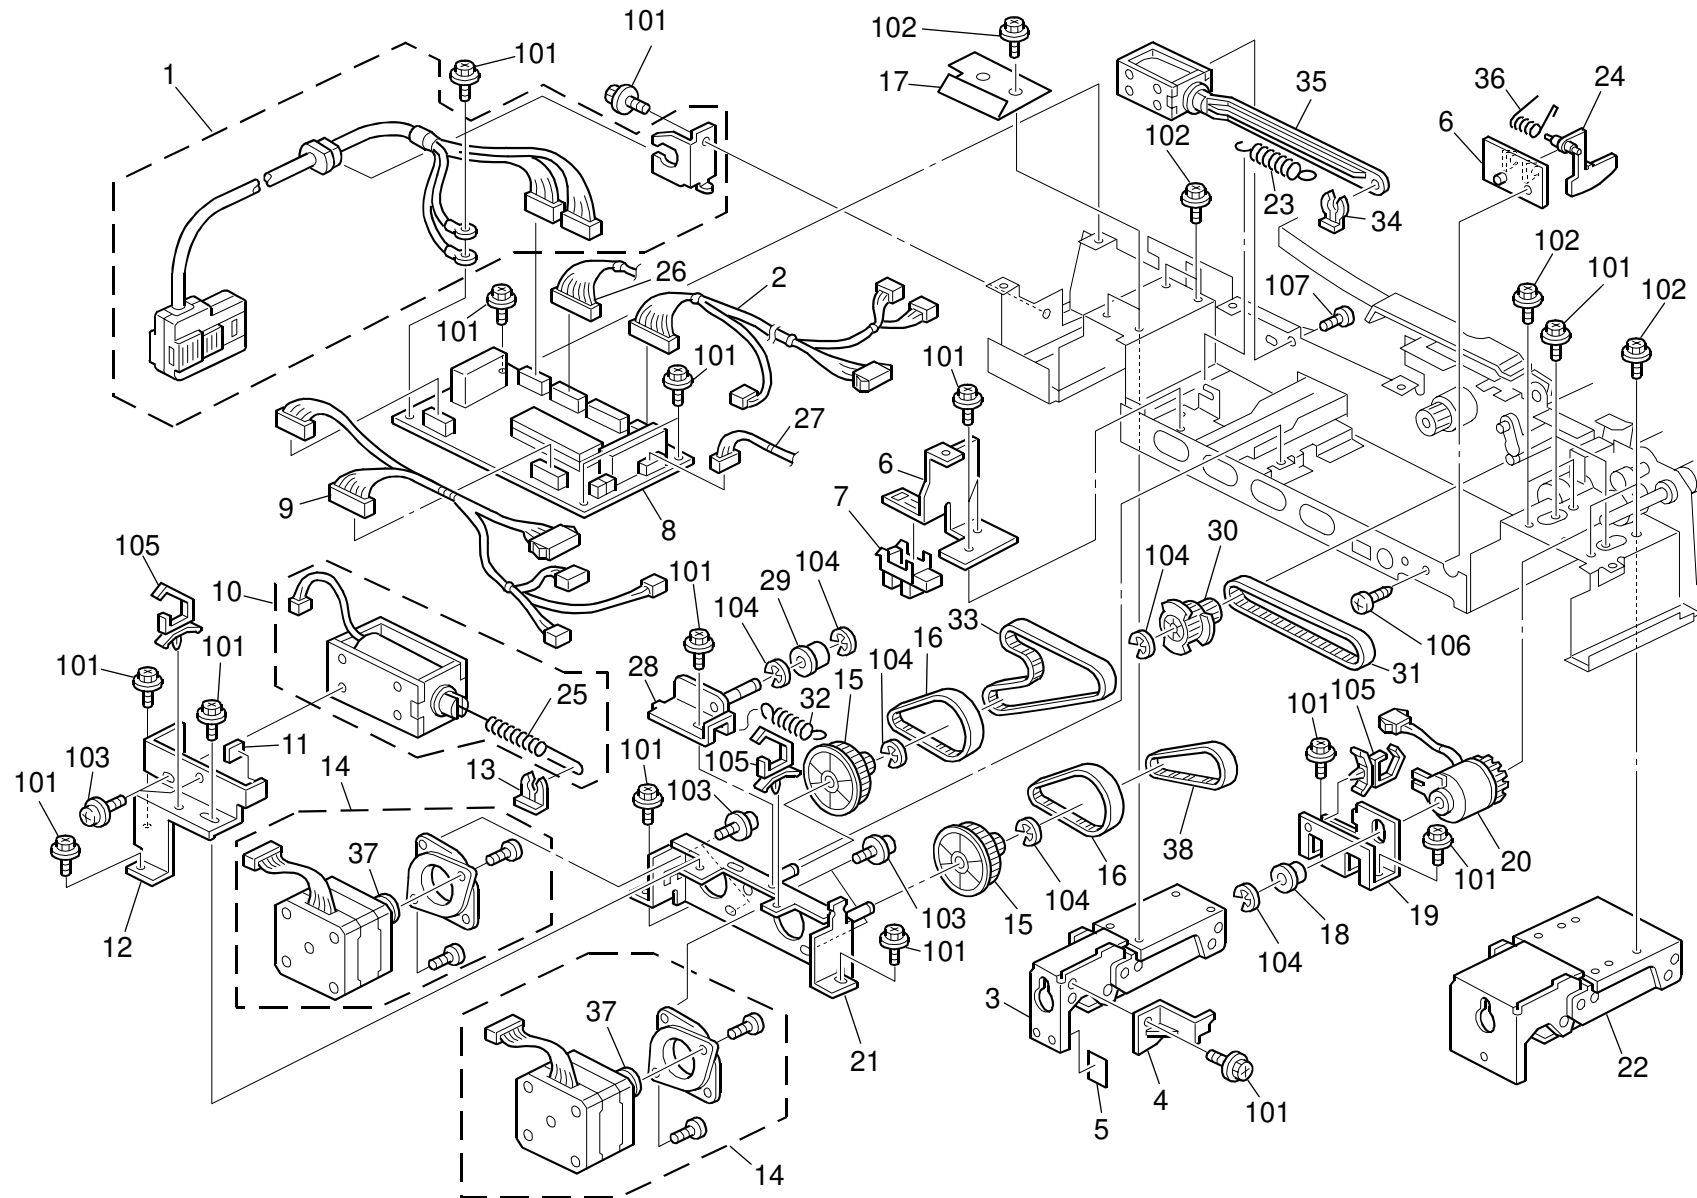


6.DRIVE SECTION (C686)

Index No.	Part No.	Description	Q'ty Per Assembly
1	C682 5800	Harness - Interface	
2	B386 5700	Harness:Sensor:Main	
3	B386 1832	Hinge:Right:Ass'y	
4	A859 1841	Filter - Df Open Sensor	
5	A334 4678	Rack Shield Mylar	
6	B386 1121	APS Feeler	
7	AW02 0141	Photointerruptor	
8	C686 5500	PCB:Main Control	
9	C682 5703	Harness:Stepper Motor	
10	B386 4421	DC Solenoid:Base:Ass'y	
11	A028 3264	Stopper Cushion	
12	B386 4411	Solenoid Bracket	
13	5206 2686	Snap Ring	
14	C682 3321	Stepper Motor:Ass'y	
15	C682 4111	Timing Pulley:S2m:T16/T65	
16	AA04 3319	Timing Belt:40S2M156	
17	5304 1639	Bushing - 8mm	
18	5304 1639	Bushing - 8mm	
19	B386 1315	Bracket - Electromagnetic Clutch	
20	AX21 0092	Magnetic Clutch:Z30	
21	B379 4111	Bracket - Motor	
22	B386 1812	Hinge:Left:Ass'y	
23	A859 4197	Tension Spring - Motor	
24	B386 1125	APS Feeler Bracket	
25	A859 2358	Tension Spring:Base	
26	B386 5713	Harness:Original Tray:Connecting	
27	B386 5701	Harness:Sensor:Exit:Connecting	
28	B379 4131	Adjusting Pin - Idler	
29	A859 4141	Pulley Idler	
30	A858 4251	Coupled Pulley - 20/32z	
31	A858 4261	Timing Belt - 2XL	
32	A858 4134	Idler Tension Spring	
33	A858 4181	Timing Belt - 2XL	
34	5447 2681	Snap Ring	
35	A858 4431	DC Solenoid - 24v	

Index No.	Part No.	Description	Q'ty Per Assembly
36	B387 1951	Spring - Paper Size Sensor	
37	G412 3323	Timing Pulley:Motor:T16:S2M	
38	B700 1802	Timing Belt:B40S2M134:	
101	0451 3006N	Tapping Screw - 3x6	
102	0451 4006N	Tapping Screw - 4x6	
103	0951 3006N	Screw - M3X6	
104	0720 0040E	Retaining Ring - M4	
105	1105 0487	Harness Clamp	
106	0452 3008N	Tapping Screw - M3x8	
107	0353 0040N	Screw - M3X4	

7.FRAME SECTION (C686)

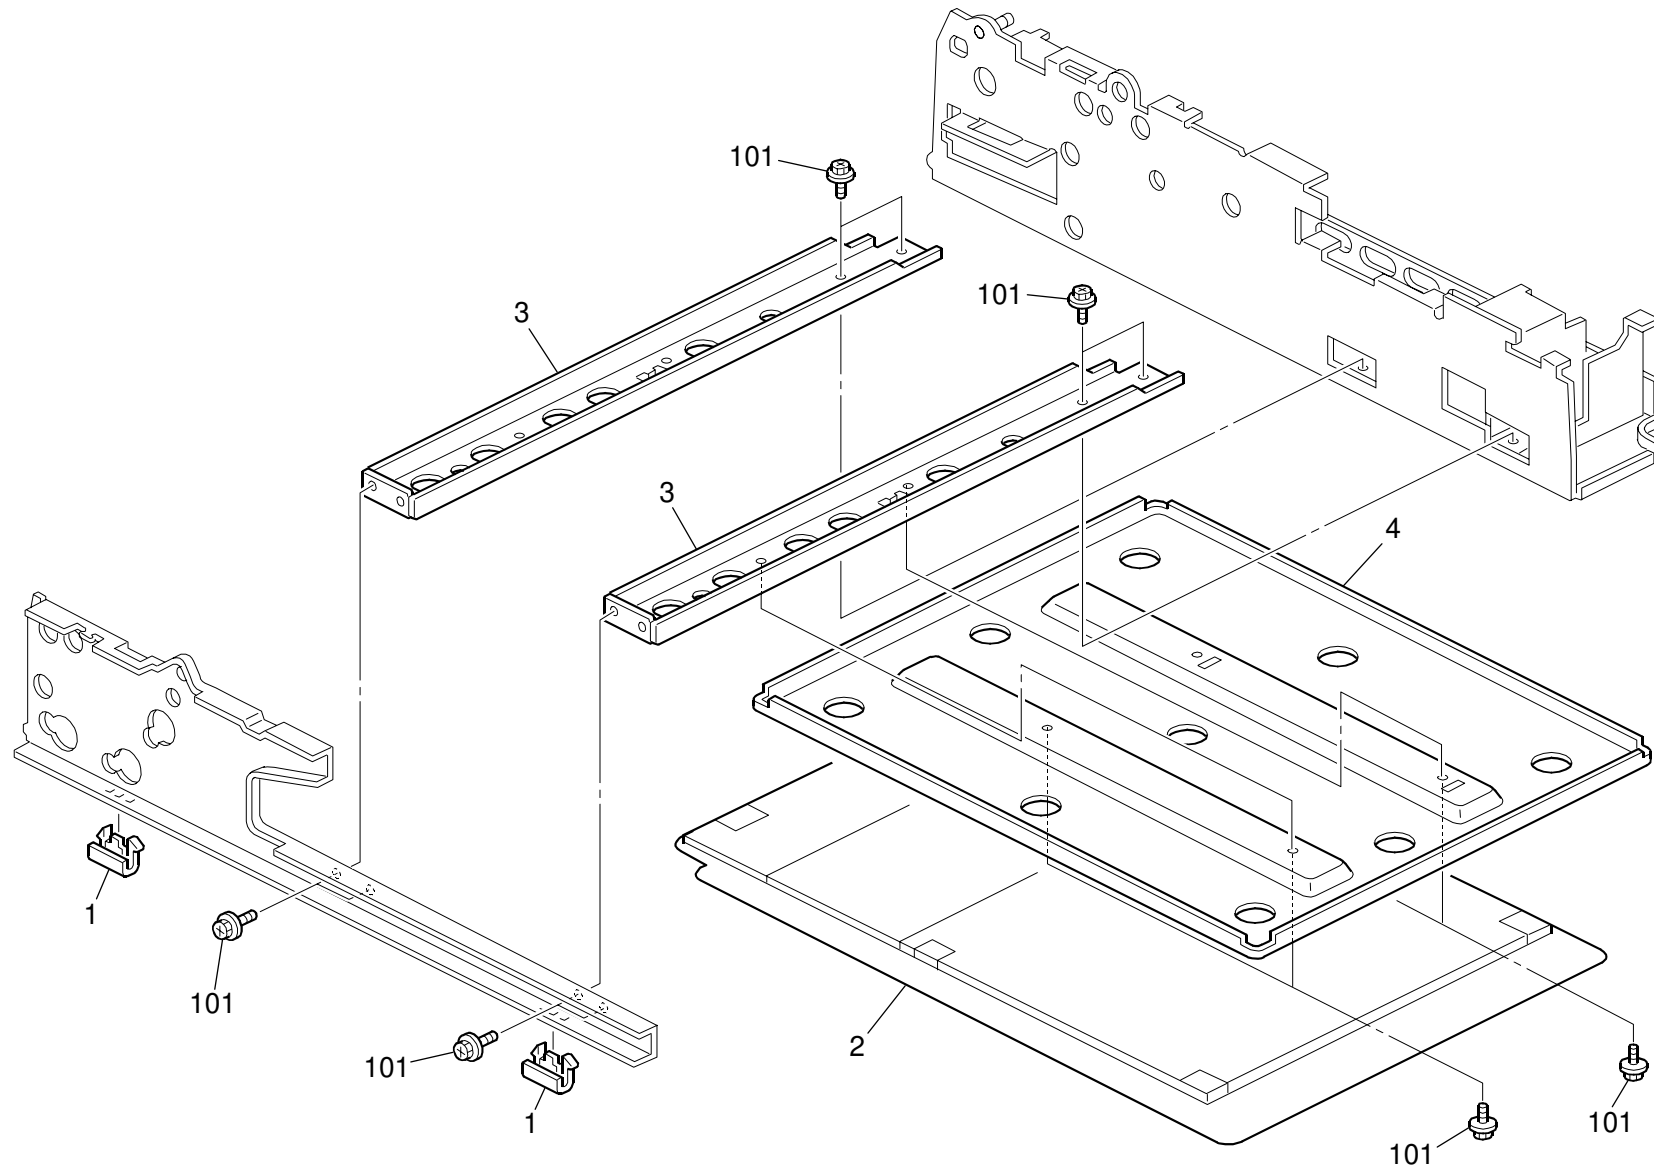


7.FRAME SECTION (C686)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A859 1221	Spacer	
2	B386 3634	Sheet:Ass'y	
3	B386 1511	Middle Stay	
4	B386 3615	Base - Platen Cover	

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	

8.DECALS AND DOCUMENTS (C686)

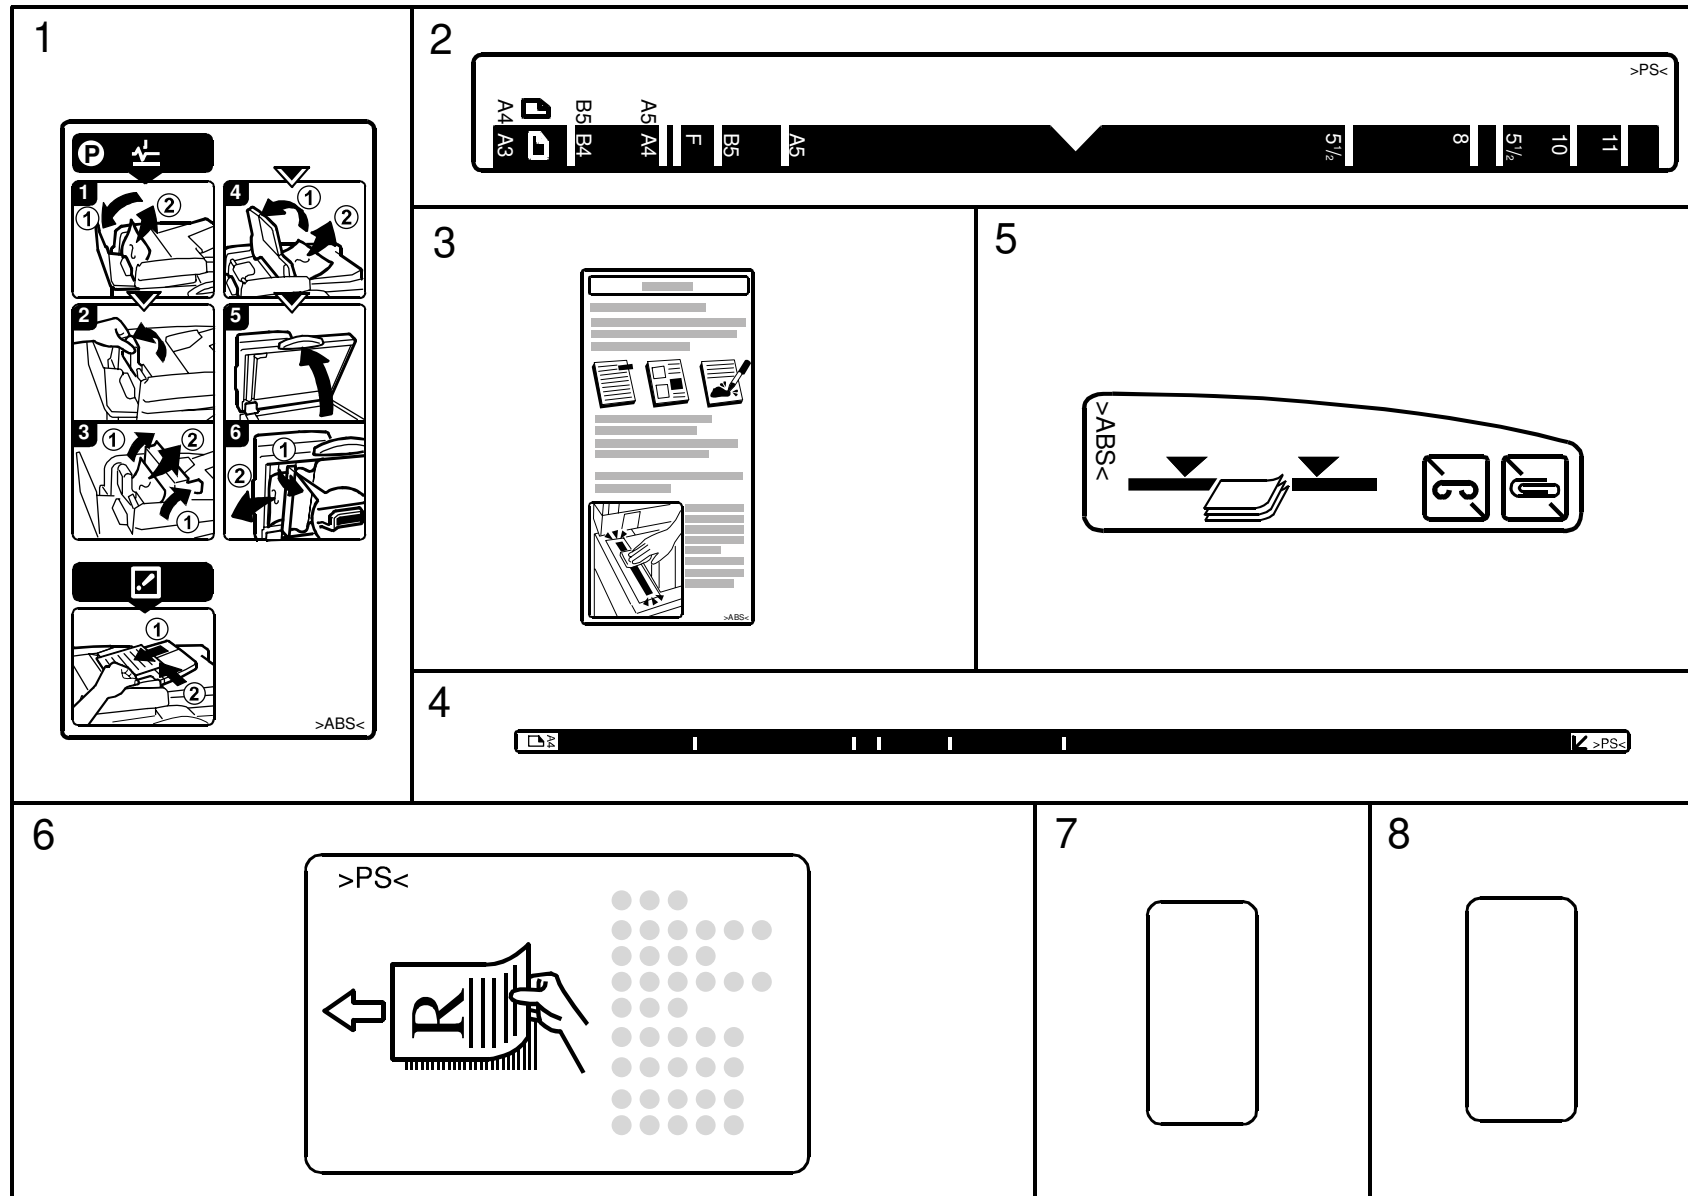

8.DECALS AND DOCUMENTS (C686)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B814 6014	Decal - Misfeed Removal	
2	B813 6021	Decal - Size Indication Cover	
3	C642 1373	Decal:Caution:Original:Exp	
4	B814 6054	Decal:Scale:Machine or Copier:Inch	
5	B814 6043	Decal - Side Fence	
6	C642 1371	Decal:Original Table	
7	A858 6022	Decal Blue	
8	A859 6023	Decal Green	

Index No.	Part No.	Description	Q'ty Per Assembly

Parts Index

Parts Index

Part No.	Description	Page and Index No.
C682 2100	Belt Unit:Paper Feed:Ass'y	7 -38
C682 2110	Holder:Belt	7 -20
C682 3321	Stepper Motor:Ass'y	13 -14
C682 4111	Timing Pulley:S2m:T16/T65	13 -15
C682 5703	Harness:Stepper Motor	13 -9
C682 5800	Harness - Interface	13 -1
C686 5500	PCB:Main Control	13 -8

Part No.	Description	Page and Index No.
A028 3264	Stopper Cushion	13 -11
A294 6700	Torque Limiter - 53mnm	7 -3
A334 4678	Rack Shield Mylar	13 -5
A351 4951	Guide Pad - Side Fence	5 -19
A628 1225	Bushing - 8mm	7 -14
A858 2313	Spring Plate - Pressure Roller	5 -36
A858 2319	Reverse Sensor Feeler	5 -34
A858 3236	Discharge Brush:L50	11 -23
A858 3710	Exchange Reverse Powl	9 -24
A858 3715	Exchange Powl Lever	9 -31
A858 3717	Tension Spring - Exchange Powl	9 -30
A858 4134	Idler Tension Spring	13 -32
A858 4181	Timing Belt - 2XL	13 -33
A858 4221	Gear - 31Z	7 -37
A858 4231	Gear - 20Z	7 -35
A858 4251	Coupled Pulley - 20/32z	13 -30
A858 4261	Timing Belt - 2XL	13 -31
A858 4392	Torque Limiter	9 -23
A858 4431	DC Solenoid - 24v	13 -35
A858 4671	Roller Driven	5 -37
A858 4676	Spring Plate - Pressure Roller	5 -38
A858 4681	Sheet - Paper Tray	5 -18
A858 6022	Decal Blue	5 -33
A858 6022	Decal Blue	17 -7
A859 1221	Spacer	15 -1
A859 1322	Spring Plate:Guide:Exposure Glass	11 -2
A859 1621	Separation Guide	7 -5
A859 1723	Left Lower Guide	9 -14
A859 1841	Filter - Df Open Sensor	13 -4
A859 2112	Drive Shaft - Paper Feed Belt	7 -22
A859 2114	Drive Roller - Paper Feed Belt	7 -16
A859 2120	Drive Shaft - Paper Feed Belt	7 -19
A859 2121	Gear - 22Z	7 -17
A859 2131	Rear Guide - Paper Feed	7 -18
A859 2132	Front Guide - Paper Feed	7 -13

Part No.	Description	Page and Index No.
A859 2141	Belt Paper Feed	7 -15
A859 2162	Pick-up Roller Shaft	7 -24
A859 2163	Pick-up Collar	7 -30
A859 2164	Pulley - 2Z	7 -31
A859 2166	Timing Belt - 2XL	7 -32
A859 2167	Gear - 22Z	7 -26
A859 2210	Reverse Roller Shaft	7 -34
A859 2220	Reverse Roller Cover	7 -1
A859 2230	Ball Bearing - 6x13x5	7 -8
A859 2230	Ball Bearing - 6x13x5	9 -19
A859 2241	Reverse Roller	7 -2
A859 2311	Guide Plate - Paper Feed	5 -6
A859 2315	Separation Pad	5 -10
A859 2317	Guide - Separation Pad	5 -9
A859 2319	Base Cushion	5 -8
A859 2352	Pressure Plate Pad	5 -16
A859 2354	Base Shaft	5 -14
A859 2355	Pressure Plate Lever	5 -4
A859 2358	Tension Spring:Base	13 -25
A859 3110	Transport Roller	11 -9
A859 3210	Guide Plate - Transport Roller	11 -1
A859 3220	Guide Plate - Upper Exit	11 -13
A859 3225	Discharge Brush	9 -25
A859 3313	Pressure Driven Shaft	9 -11
A859 3316	Pullout Lever	9 -8
A859 3317	Contact Point Shaft	9 -6
A859 3411	Exit Guide Plate	11 -15
A859 3412	Shaft - Exit Guide Plate	11 -17
A859 3425	Spring Plate	11 -19
A859 3430	Rear Spring	11 -14
A859 3431	Front Spring	11 -11
A859 4141	Pulley Idler	13 -29
A859 4197	Tension Spring - Motor	13 -23
A859 4216	Shaft Electromagnetic Clutch	7 -33
A859 4222	Pulley Flange	7 -36

Part No.	Description	Page and Index No.
A859 4271	Pulley - 31/32Z	9 -20
A859 4272	Flange	9 -21
A859 4321	Pulley-20z	9 -28
A859 4331	Timing Belt - 2XL	9 -2
A859 4341	Tension Spring	9 -4
A859 4661	Rack- Front Side Fence	5 -28
A859 4662	Rack- Rear Side Fence	5 -25
A859 4663	Electrode Plate- Side Fence	5 -26
A859 4664	Sheet - Paper Size Sensor Board	5 -39
A859 4665	Gear - 16Z	5 -27
A859 4836	Bushing- Exit Driven Roller	3 -12
A859 4837	Exit Driven Roller	3 -13
A859 4871	Original Sensor Feeler	3 -5
A859 4872	Feeler Bracket	3 -6
A859 4876	Left Cushion	5 -15
A859 4881	Cushion Paper Feed	3 -7
A859 6023	Decal Green	11 -16
A859 6023	Decal Green	17 -8
A859 7211	Stepped Screw	3 -18
B379 4111	Bracket - Motor	13 -21
B379 4131	Adjusting Pin - Idler	13 -28
B386 1121	APS Feeler	13 -6
B386 1123	Sensor Bracket	7 -10
B386 1125	APS Feeler Bracket	13 -24
B386 1128	Spring Plate Sensor On Off Detector	7 -39
B386 1311	Left Stay	11 -5
B386 1315	Bracket - Electromagnetic Clutch	13 -19
B386 1320	Bracket - Transport Roller	11 -8
B386 1511	Middle Stay	15 -3
B386 1610	Separation Stay	7 -6
B386 1710	Left Lower Stay	9 -16
B386 1812	Hinge:Left:Ass'y	13 -22
B386 1832	Hinge:Right:Ass'y	13 -3
B386 2171	Pickup Roller	7 -29
B386 2214	Screw:M3X5	9 -22

Part No.	Description	Page and Index No.
B386 2351	Original Feed Plate	5 -17
B386 2353	Pressure Plate - Base	5 -13
B386 2356	Base Cushion - Behind	5 -32
B386 3118	Standard Screw Driver:Document Feeder	3 -23
B386 3121	Transport Roller - Middle	11 -10
B386 3130	Exit Roller - Drive	9 -18
B386 3140	Reverse Roller - Drive	9 -27
B386 3234	Guide Plate:Reverse:Ass'y	11 -22
B386 3320	Spring:Belt:Paper Feed:8n	7 -21
B386 3321	Torsion Spring:Pressure:Rear:20n	9 -9
B386 3322	Torsion Spring:Pressure:Front:20n	9 -7
B386 3387	Roller:Driven:Transport Roller:Middle: DIA15.8EP45	9 -10
B386 3389	Roller:Driven:Middle:Ep3 5	11 -18
B386 3410	Cover:Guide Plate:Exit:Ass'y	11 -21
B386 3513	Guide:Exposure Glass	9 -17
B386 3615	Base - Platen Cover	15 -4
B386 3634	Sheet:Ass'y	15 -2
B386 4311	Adjusting Pin - M6	9 -29
B386 4411	Solenoid Bracket	13 -12
B386 4421	DC Solenoid:Base:Ass'y	13 -10
B386 4621	Upper Original Table	5 -24
B386 4641	Front Side Fence Ass'y	5 -20
B386 4651	Rear Side Fence Ass'y	5 -5
B386 4691	Mylar Seal - 28x107	5 -42
B386 4692	Mylar Seal - 16x45	5 -41
B386 4693	Mylar Seal	5 -40
B386 4710	Front Side Fence	5 -43
B386 4720	Rear Side Fence	5 -44
B386 4811	Front Cover	3 -1
B386 4821	Rear Cover	3 -15
B386 4842	Left Cover	3 -8
B386 4856	Cover - Transport Driven Roller	9 -13
B386 4861	Reverse Tray	9 -26
B386 4871	Upper Cover	3 -14

Part No.	Description	Page and Index No.
B386 4872	Sponge:Cover:Front Right	3 -22
B386 4873	Positioning Plate	3 -4
B386 4874	Sponge:Cover:Front	3 -21
B386 4881	Left Lower Cover	9 -12
B386 5550	Paper Size Sensor Board	5 -30
B386 5700	Harness:Sensor: Main	13 -2
B386 5701	Harness:Sensor: Exit:Connecting	13 -27
B386 5713	Harness:Original Tray:Connecting	13 -26
B386 7102	Scale:Machine or Copier:Adhesion	3 -16
B387 1951	Spring - Paper Size Sensor	13 -36
B387 2113	Roller - Paper Feed Belt	7 -23
B617 5705	Sensor Relay Harness	11 -4
B617 5706	Harness - Reverse Sensor	5 -35
B617 5715	Harness - Original Tray	5 -29
B617 5720	Harness - Registration Sensor	5 -12
B700 1802	Timing Belt:B40 S2M134:	13 -38
B714 3115	Knob Screw:Document Feeder:Fix	3 -2
B810 4630	Paper Tray:Behind:Alps-f	5 -7
B813 6021	Decal - Size Indication Cover	3 -10
B813 6021	Decal - Size Indication Cover	17 -2
B814 6014	Decal - Misfeed Removal	3 -9
B814 6014	Decal - Misfeed Removal	17 -1
B814 6043	Decal - Side Fence	5 -21
B814 6043	Decal - Side Fence	17 -5
B814 6054	Decal:Scale:Machine or Copier:Inch	3 -20
B814 6054	Decal:Scale:Machine or Copier:Inch	17 -4
C642 1371	Decal:Original Table	5 -23
C642 1371	Decal:Original Table	17 -6
C642 1373	Decal:Caution:Original:Exp	3 -19
C642 1373	Decal:Caution:Original:Exp	17 -3
G012 1531	Magnet	5 -22
G412 3323	Timing Pulley:Motor:T16:S2M	13 -37
G412 3611	Guide Mylar	9 -15
G412 3821	Holder - Pick Up	7 -25
G412 3831	Pulley - 22Z	7 -27

Part No.	Description	Page and Index No.
H060 2126	Bushing - M6x7	5 -2

Part No.	Description	Page and Index No.
AA04 3319	Timing Belt:40S2M156	13 -16
AA06 3311	Transport Roller Spring	3 -11
AA06 3435	Compression Spring:Paper Feed:Joint	7 -12
AA13 2013	Spacer	7 -11
AA14 3788	Pin:Guide Plate:Paper Feed	3 -3
AA14 3788	Pin:Guide Plate:Paper Feed	9 -1
AA14 3790	Screw:CONTACT POINT	9 -3
AC01 3004	Exposure Glass	3 -17
AG07 0513	Magnet Catch	9 -5
AW01 0109	Photo Refiection Sensor:Ps117ed1	11 -3
AW01 0112	Photo Refiection Sensor:Original Table	5 -31
AW02 0141	Photointerruptor	5 -11
AW02 0141	Photointerruptor	7 -9
AW02 0141	Photointerruptor	13 -7
AX21 0092	Magnetic Clutch:Z30	13 -20

Part No.	Description	Page and Index No.
0353 0040N	Screw - M3X4	13 -107
0450 3008N	Tapping Screw - M3x8	5 -103
0451 3006N	Tapping Screw - 3x6	3 -101
0451 3006N	Tapping Screw - 3x6	5 -101
0451 3006N	Tapping Screw - 3x6	7 -105
0451 3006N	Tapping Screw - 3x6	9 -101
0451 3006N	Tapping Screw - 3x6	11 -101
0451 3006N	Tapping Screw - 3x6	13 -101
0451 3006N	Tapping Screw - 3x6	15 -101
0451 3008N	Tapping Screw - M3x8	3 -103
0451 4006N	Tapping Screw - 4x6	13 -102
0451 4014N	Tapping Screw:M4x14	11 -102
0452 3008N	Tapping Screw - M3x8	3 -102
0452 3008N	Tapping Screw - M3x8	5 -102
0452 3008N	Tapping Screw - M3x8	11 -106
0452 3008N	Tapping Screw - M3x8	13 -106
0454 3006Q	Tapping Screw - M3x6	7 -101
0632 0100G	Pin - 2x10mm	7 -106
0720 0030E	Retaining Ring - M3	7 -107
0720 0030E	Retaining Ring - M3	9 -103
0720 0040E	Retaining Ring - M4	7 -102
0720 0040E	Retaining Ring - M4	13 -104
0720 0040E	Retaining Ring - M4	9 -102
0720 0040E	Retaining Ring - M4	11 -104
0720 0060E	Retaining Ring - M6	7 -103
0720 0060E	Retaining Ring - M6	11 -103
0951 3006N	Screw - M3X6	13 -103
1105 0109	Cord Keep	7 -104
1105 0487	Harness Clamp	13 -105
1106 0193	Bushing - 7.9mm	7 -108
1106 0193	Bushing - 7.9mm	11 -105
5053 0447	Bushing - 6mm	7 -4
5053 0447	Bushing - 6mm	9 -32
5053 0447	Bushing - 6mm	11 -7
5206 2686	Snap Ring	7 -28

Part No.	Description	Page and Index No.
5206 2686	Snap Ring	13 -13
5215 2621	Snap Ring - M6	5 -3
5304 1639	Bushing - 8mm	7 -7
5304 1639	Bushing - 8mm	11 -6
5304 1639	Bushing - 8mm	13 -17
5304 1639	Bushing - 8mm	13 -18
5447 2681	Snap Ring	5 -1
5447 2681	Snap Ring	9 -33
5447 2681	Snap Ring	11 -12
5447 2681	Snap Ring	13 -34