

DF Type 20 (C642)

DF Type 20 (C642)


PARTS CATALOG

This catalog gives the numbers and names of parts on this machine.

1.Exterior (C642)	2
2.Original Feed Section 1 (C642)	4
3.Original Feed Section 2 (C642)	6
4.Original Transfer And Frame (C642)	8
5.Electrical Section (C642)	10
6.Decals And Documents (C642)	12
Parts Index	15

March ,24 ' 2006

1.Exterior (C642)

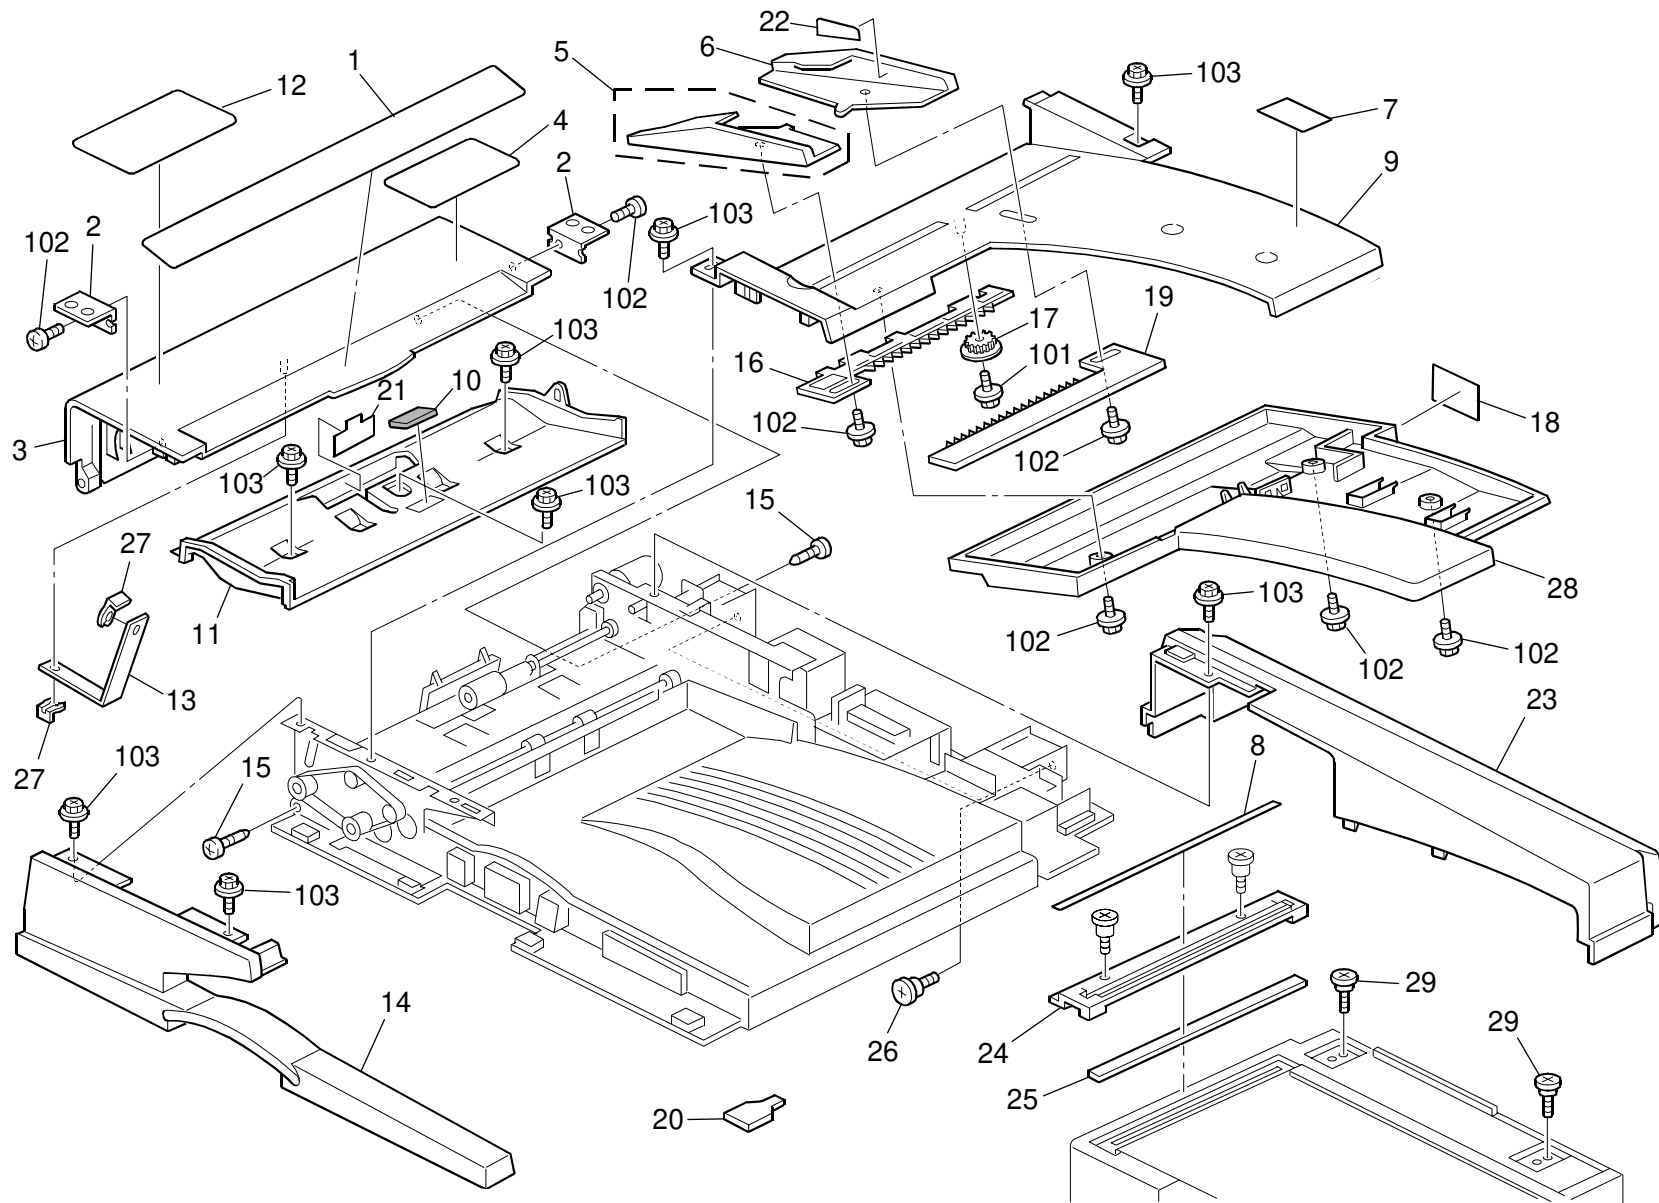


1.Exterior (C642)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B813 6021	Decal - Size Indication Cover	1
2	B387 4873	Positioning Plate	2
3	B387 4841	Left Cover	1
4	B652 2379	Decal:Caution:Original:5-lang	1
5	B387 4640	Front Side Fence	1
6	B813 4656	Side Fence - Rear	1
7	C600 6941	Decal Original Insert	1
8	C642 1363	Decal:Scale:Main:Inch	1
8	C642 1362	Decal:Scale:Main:Mm	1
9	B387 4605	Upper Original Table	1
10	A859 2352	Pressure Plate Pad	1
11	B387 2310	Guide Plate - Paper Feed	1
12	B387 6013	Decal - Removal Misfeed	1
13	B387 4875	Left Cover Band	1
14	B387 4812	Front Cover	1
15	AA14 3788	Pin:Guide Plate:Paper Feed	1
16	B387 4661	Front Rack - Side Fence	1
17	A859 4665	Gear - 16z	1
18	C642 6121	Cover:Original Table:Rear	1
19	B387 4671	Rear Rack - Side Fence	1
20	B386 3118	Standard Screw Driver:Document Feeder	1
21	B387 2321	Separation Guide Mylar	1
22	B813 6043	Decal - Side Fence	1
23	B387 4822	Rear Cover	1
24	B386 7102	Scale:Machine Or Copier:Adhesion	1
25	AC01 3004	Exposure Glass	1
26	A548 6121	Screw - M4	2
27	5206 2686	Snap Ring	1
28	B813 4621	Original Table	1
29	A859 7211	Stepped Screw	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0450 3008N	Tapping Screw - M3x8	
102	0452 3008N	Tapping Screw - M3x8	
103	0451 3006N	Tapping Screw - 3x6	

2.Original Feed Section 1 (C642)

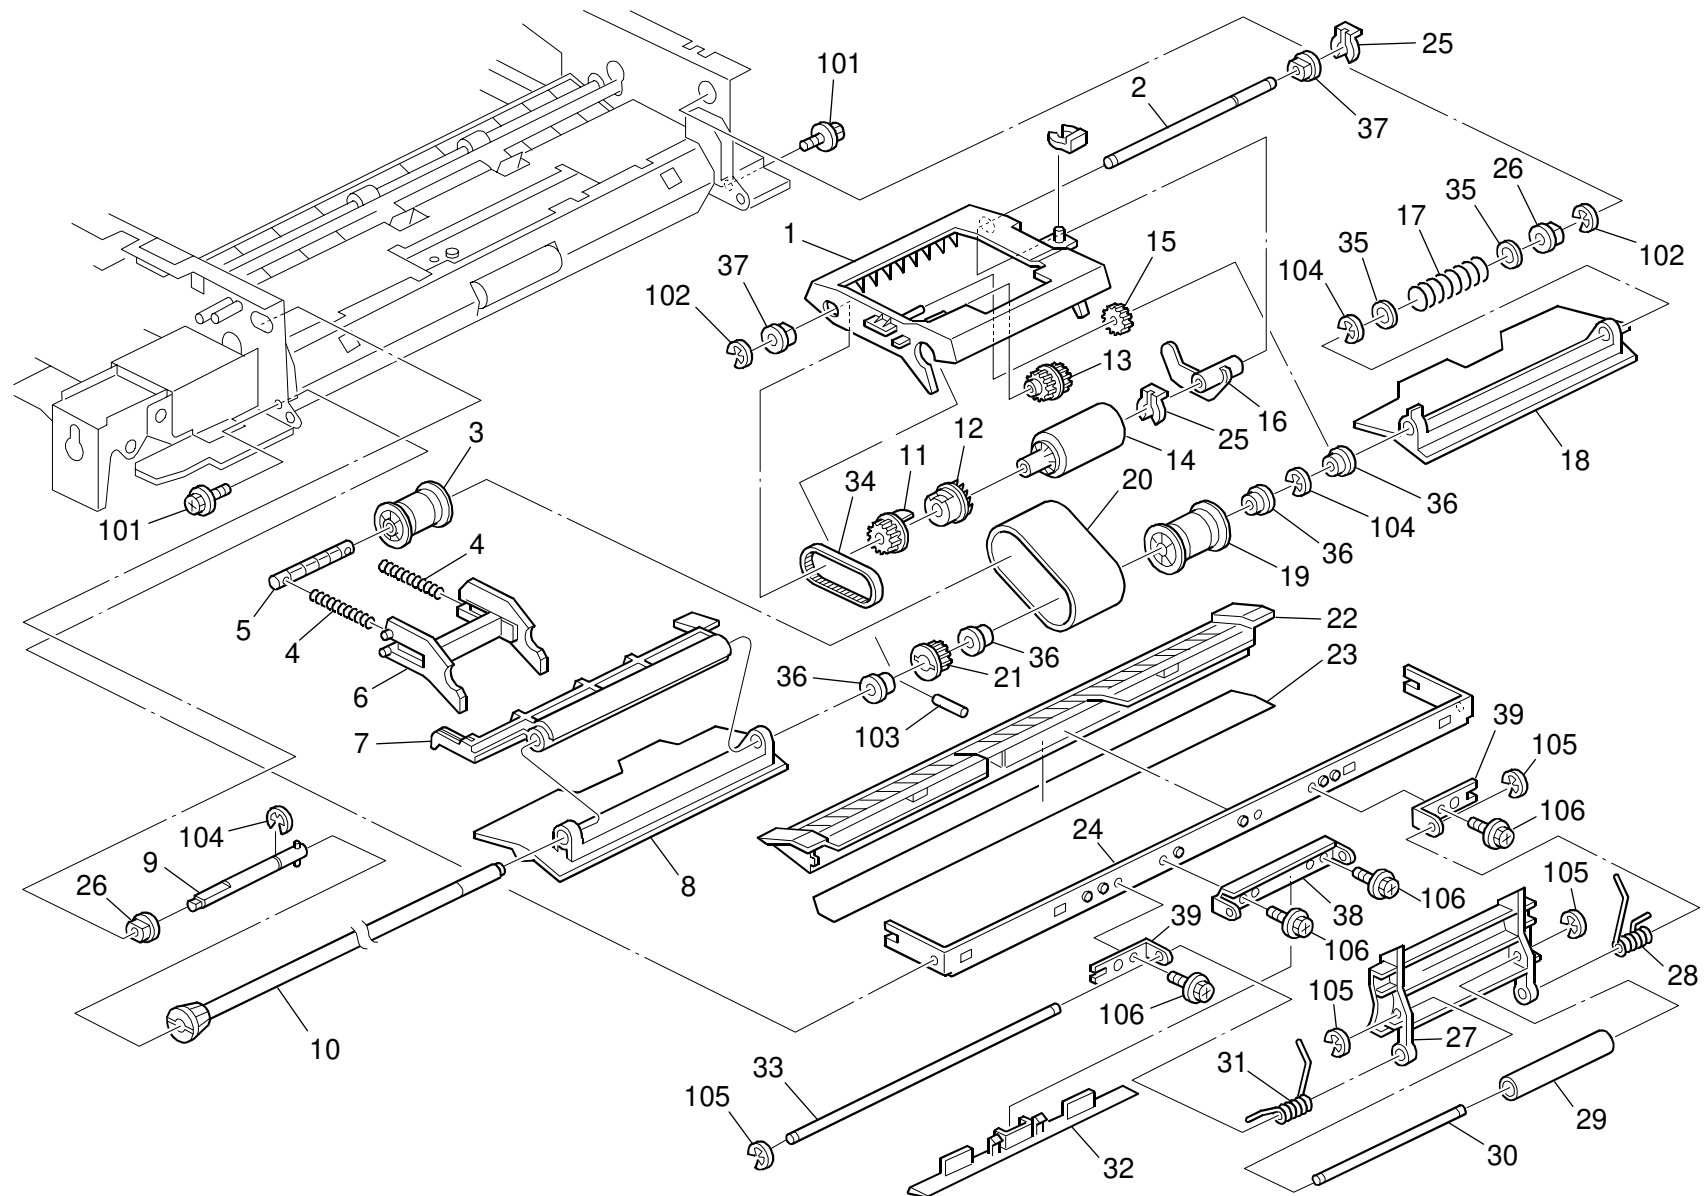


2.Original Feed Section 1 (C642)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B387 2151	Pickup Holder	1
2	B387 2162	Pickup Roller Shaft	1
3	B387 2113	Roller - Paper Feed Belt	1
4	B386 3320	Spring:Belt:Paper Feed:8n	2
5	A859 2112	Drive Shaft - Paper Feed Belt	1
6	B387 2111	Belt Holder	1
7	B387 2133	Pickup Arm	1
8	B387 2131	Rear Feed Guide	1
9	B387 4216	Feed Clutch Shaft	1
10	B387 2120	Shaft - Paper Feed Belt	1
11	B387 2164	Timing Pulley - 20z	1
12	B387 2163	Pickup Collar	1
13	G412 3831	Pulley - 22z	1
14	B387 2161	Pickup Roller	1
15	A859 2167	Gear - 22z	1
16	B387 4872	Original Sensor Feeler	1
17	AA06 3435	Compression Spring:Paper Feed:Joint	1
18	B387 2132	Front Feed Guide	1
19	A859 2114	Drive Roller - Paper Feed Belt	1
20	A859 2141	Belt Paper Feed	1
21	A859 2121	Gear - 22z	1
22	B387 1721	Left Lower Guide	1
23	B387 1722	Entrance Guide	1
24	B387 1711	Left Lower Stay	1
25	5447 2681	Snap Ring	2
26	5304 1639	Bushing - 8mm	2
27	B387 3322	Cover - Transport Driven Roller	1
28	B387 3318	Front Pressure Spring	1
29	B813 3315	Transport Roller	1
30	B387 3313	Shaft - Transport Driven Roller	1
31	B387 3319	Rear Pressure Spring	1
32	B387 3321	Spring Cover	1
33	B387 3317	Main Shaft - Transport Driven	1
34	A859 2166	Timing Belt - 2xl	1
35	AA13 2013	Spacer	2

[illegible]

3.Original Feed Section 2 (C642)

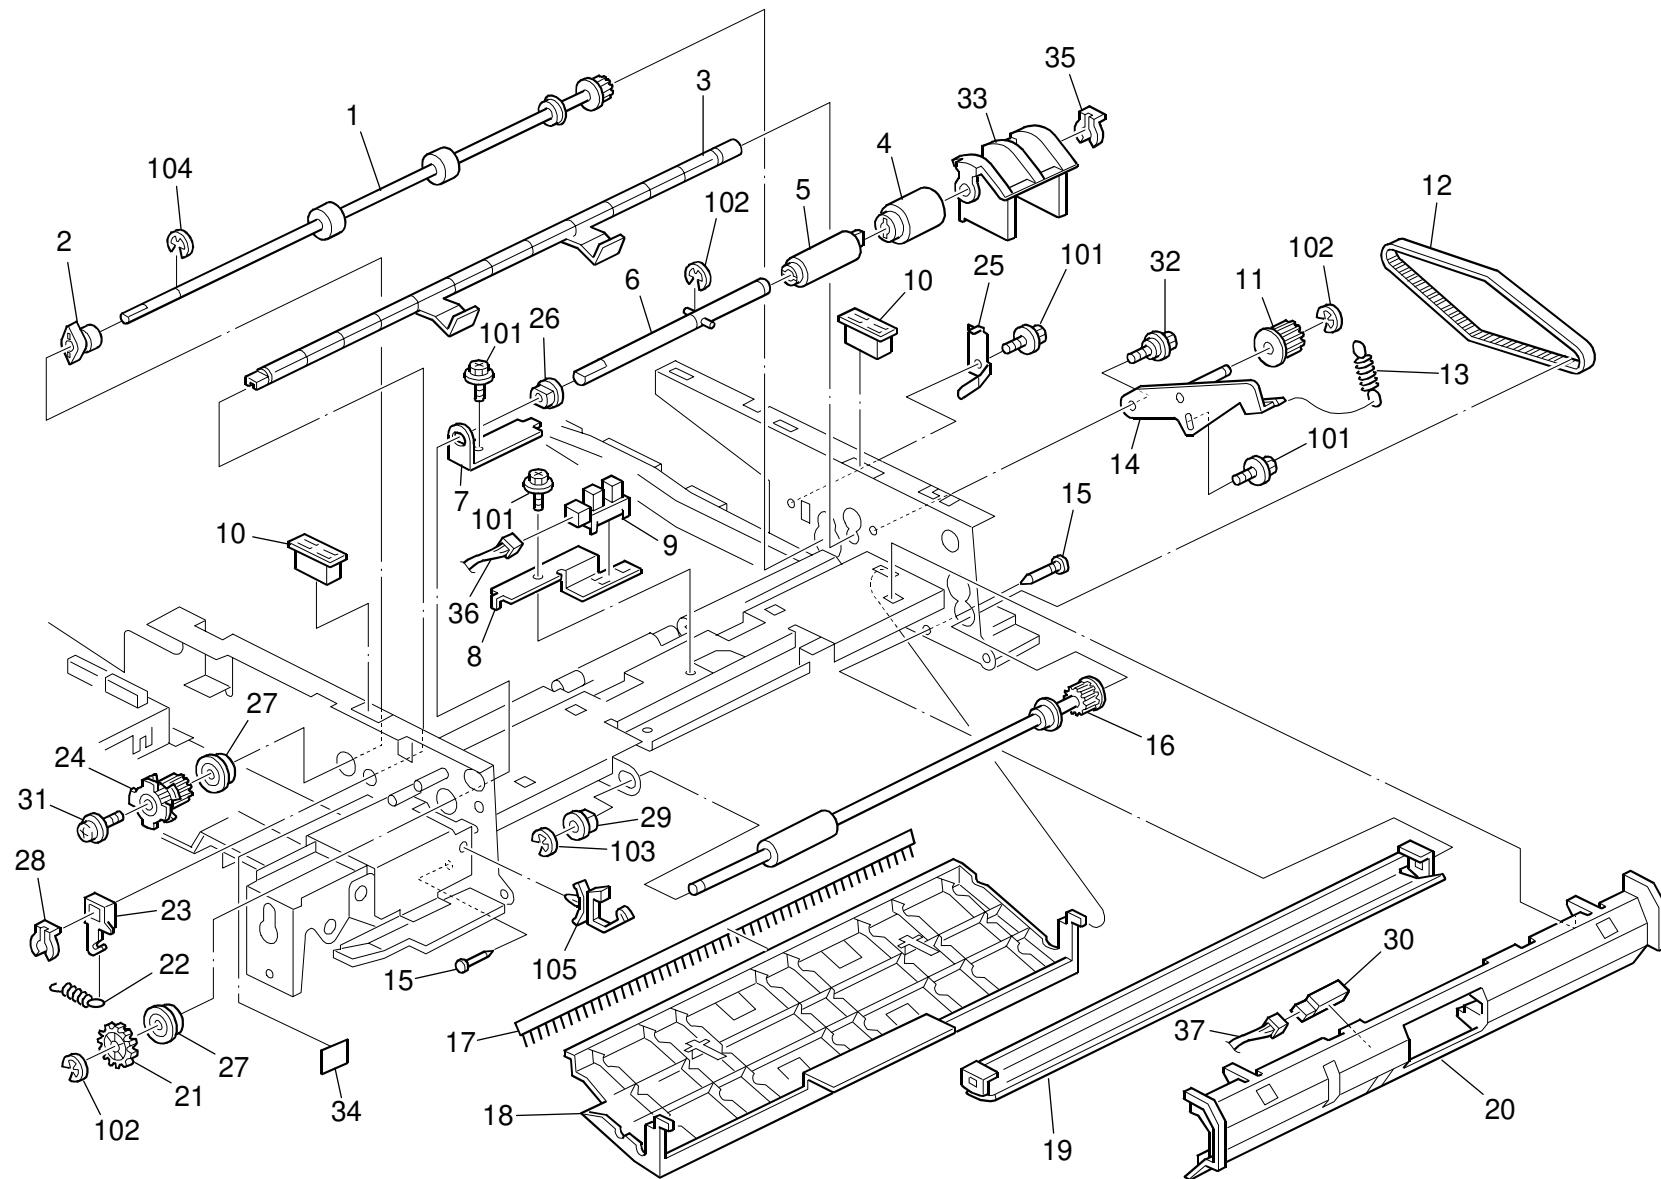


3.Original Feed Section 2 (C642)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B387 3130	Exit Roller	1
2	B387 2421	Original Stopper Cam	1
3	B387 2411	Original Stopper	1
4	B387 1671	Reverse Roller	1
5	B387 2250	Torque Limiter - 40mnxm	1
6	B387 2210	Reverse Roller Shaft	1
7	B387 1612	Bracket - Reverse Roller Shaft	1
8	B387 1331	Original Sensor Bracket	1
9	AW02 0141	Photointerruptor	1
10	AG07 0513	Magnet Catch	2
11	A859 4321	Pulley-20z	1
12	B387 4331	Timing Belt - 2xl	1
13	B387 4342	Adjusting Bracket Spring	1
14	B387 4311	Adjusting Bracket	1
15	AA14 3788	Pin:Guide Plate:Paper Feed	2
16	B387 3110	Left Transport Roller	1
17	B387 3225	Discharge Brush	1
18	B387 3220	Guide Plate - Upper Exit	1
19	B386 3513	Guide:Exposure Glass	1
20	B387 3210	Guide Plate - Transport Roller	1
21	B387 4221	Gear - 28z	1
22	B387 2435	Original Stopper Spring	1
23	B387 2431	Original Stopper Lever	1
24	B387 4271	Coupled Pulley - 20/30z	1
25	B387 1221	Exit Grounding Plate	1
26	5053 0447	Bushing - 6mm	1
27	A859 2230	Ball Bearing - 6x13x5	2
28	5215 2621	Snap Ring - M6	1
29	5304 1639	Bushing - 8mm	1
30	AW01 0109	Photo Refiection Sensor:Ps117ed1	1
31	B386 2214	Screw:M3x5	1
32	AA14 3790	Screw:Contact Point	1
33	B387 2220	Reverse Roller Cover	1
34	B387 2316	Cushion:Stopper Pawl	1
35	5447 2681	Snap Ring	1

Index No.	Part No.	Description	Q'ty Per Assembly
36	B616 5720	Harness - Sensor Original	1
37	B616 5715	Harness - Sensor Registration	1
101	0451 3006N	Tapping Screw - 3x6	
102	0720 0040E	Retaining Ring - M4	
103	0720 0060E	Retaining Ring - M6	
104	0720 0050E	Retaining Ring - M5	
105	1105 0516	Clamp	

4.Original Transfer And Frame (C642)

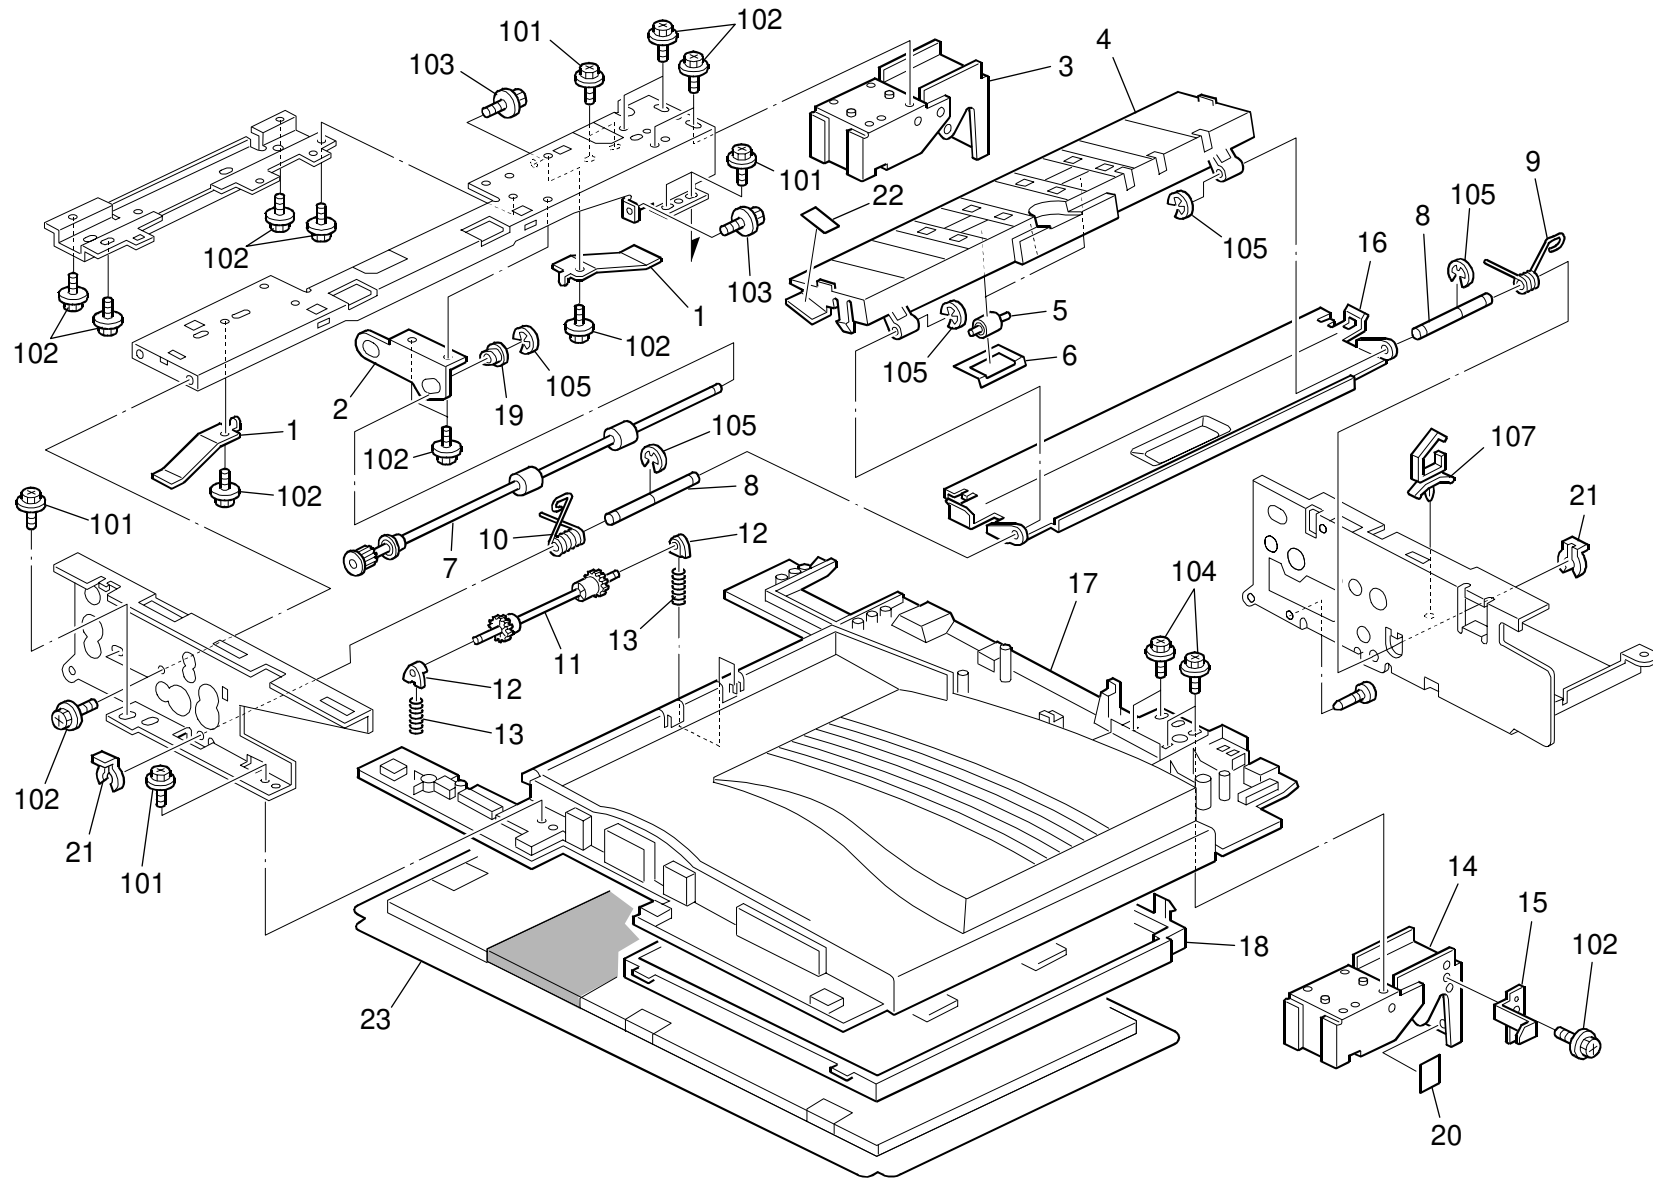


4.Original Transfer And Frame (C642)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B387 1322	Spring Plate	2
2	B387 1320	Transport Roller Bracket	1
3	B813 1811	Left Hinge	1
4	B387 3411	Exit Guide Plate	1
5	B386 3389	Roller:Driven:Middle:Ep35	2
6	B387 3425	Spring Plate	2
7	B387 3120	Right Transport Roller	1
8	B387 3412	Shaft - Exit Guide Plate	1
9	B387 3430	Rear Spring - Exit Guide Plate	1
10	B387 3431	Front Spring - Exit Guide Plate	1
11	B387 1921	Driven Exit Roller	1
12	A859 4836	Bushing- Exit Driven Roller	2
13	AA06 3311	Transport Roller Spring	2
14	B813 1831	Right Hinge	1
15	B813 1841	Feeler - On Off Detector	1
16	B387 3413	Cover - Exit Guide Plate	1
17	B387 1912	Base	1
18	B387 1932	Base - Platen Cover	1
19	5053 0447	Bushing - 6mm	1
20	A334 4678	Rack Shield Mylar	1
21	5447 2681	Snap Ring	2
22	A859 6023	Decal Green	1
23	B813 3600	Sheet Ass'y	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0450 4008N	Tapping Screw - M4x8	
102	0451 3006N	Tapping Screw - 3x6	
103	0454 3006Q	Tapping Screw - M3x6	
104	0451 3008N	Tapping Screw - M3x8	
105	0720 0040E	Retaining Ring - M4	
106	0452 3008N	Tapping Screw - M3x8	
107	1105 0516	Clamp	

5. Electrical Section (C642)

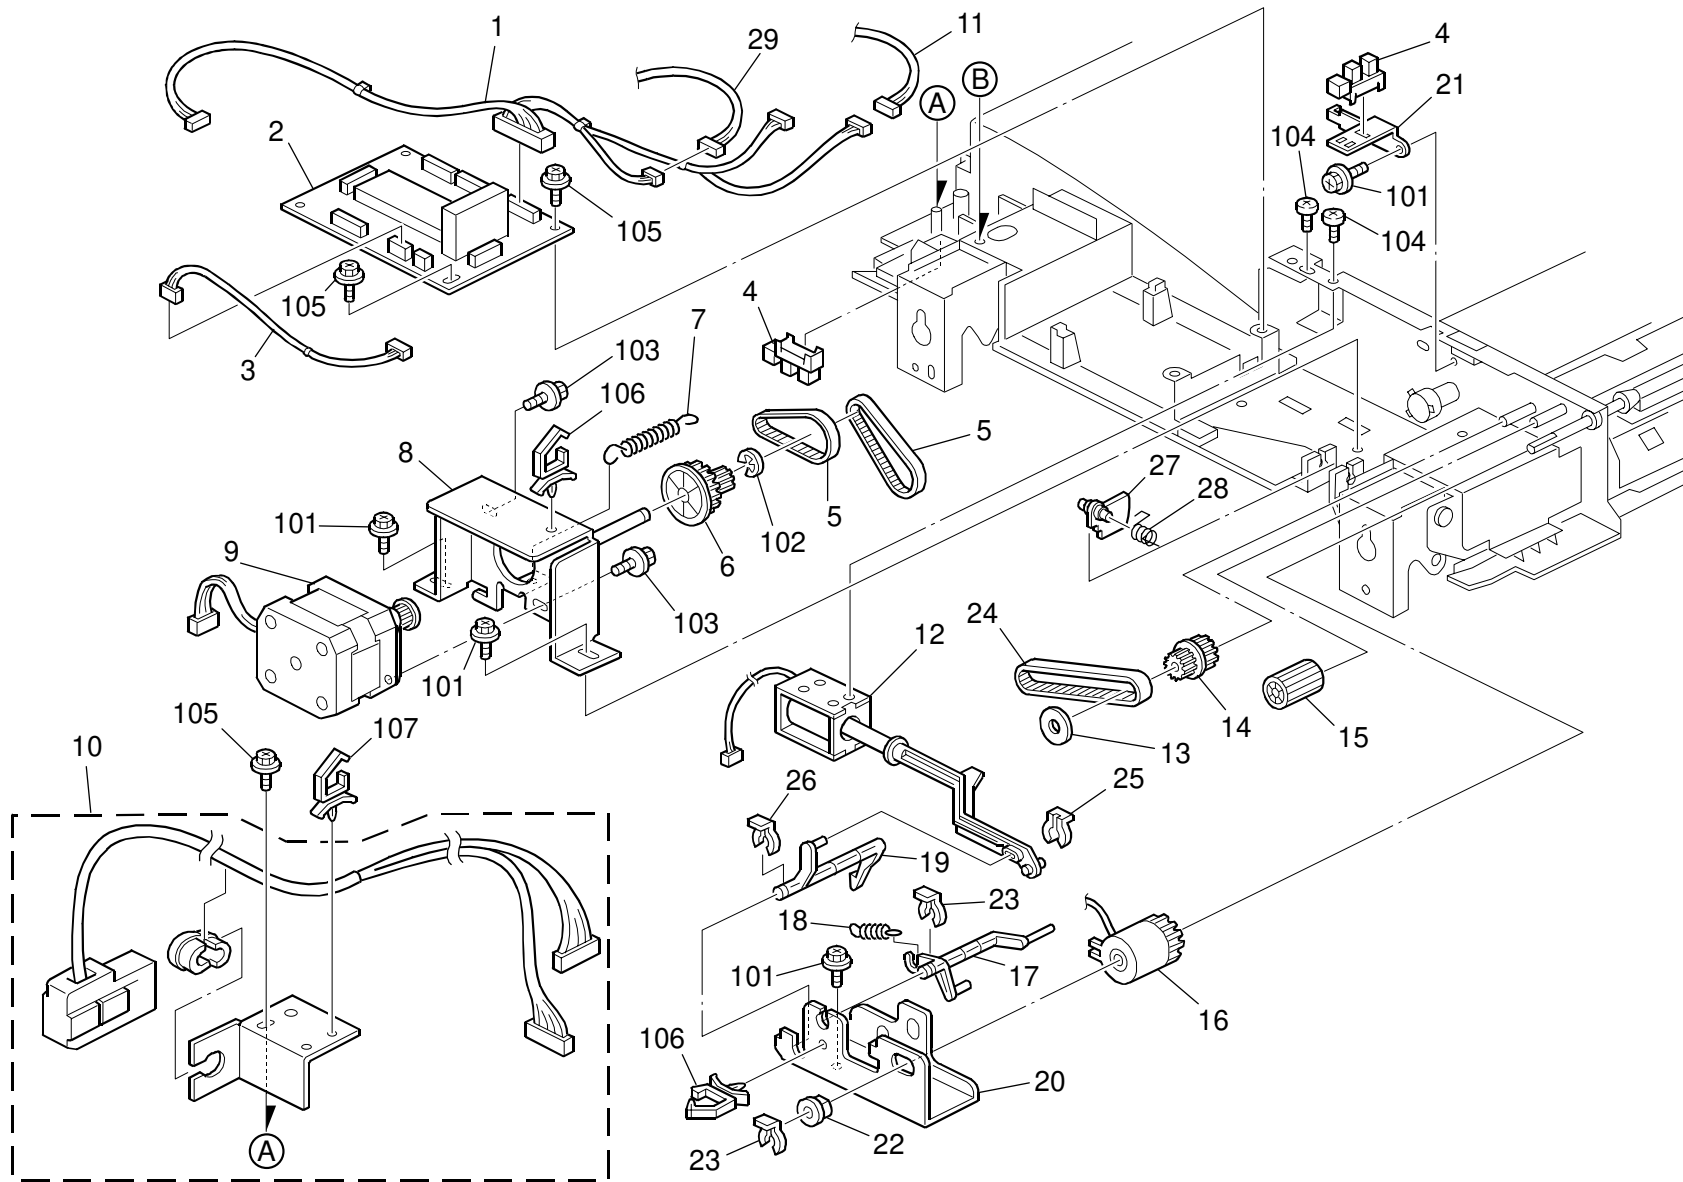


5.Electrical Section (C642)

Index No.	Part No.	Description	Q'ty Per Assembly
1	C642 5286	Harness:Sensor:Main:Ass'y	1
2	C642 5100	PCB:ADF:Ass'y	1
3	C642 5287	Harness:Connecting:Magnetic Clutch:Ass'y	1
4	AW02 0141	Photointerruptor	2
5	A859 4171	Timing Belt - 2xl	2
6	A661 1884	Pulley - 20t/48t	1
7	B387 4198	Transport Motor Spring	1
8	B387 4111	Transport Motor Bracket	1
9	B813 4125	Stepper Motor Ass'y	1
10	C642 6060	Harness:Interface:Ass'y	1
11	B616 5715	Harness - Sensor Registration	1
12	B813 4421	DC Solenoid Ass'y	1
13	B387 4222	Flange	1
14	B387 4231	Gear/pulley - 20/21z	1
15	B387 4241	Gear - 20z	1
16	AX21 0092	Magnetic Clutch:Z30	1
17	B387 2355	Pickup Lever	1
18	B387 2375	Pickup Spring	1
19	B387 2365	Stopper Pawl Lever	1
20	B387 1316	Feed Clutch Bracket	1
21	B387 1123	Bracket - Cover Open Sensor	1
22	5304 1639	Bushing - 8mm	1
23	5447 2681	Snap Ring	2
24	B387 4251	Timing Belt -2xl	1
25	5206 2686	Snap Ring	1
26	C101 2360	Snap Ring	1
27	B387 1941	Feeler - Paper Size Sensor	1
28	B387 1951	Spring - Paper Size Sensor	1
29	B616 5720	Harness - Sensor Original	1


Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0720 0040E	Retaining Ring - M4	
103	0951 3006N	Screw - M3x6	
104	0353 0040N	Screw - M3x4	
105	0452 3008N	Tapping Screw - M3x8	
106	1105 0516	Clamp	
107	1105 0488	Harness Clamp	

6.Decals And Documents (C642)

 1



2

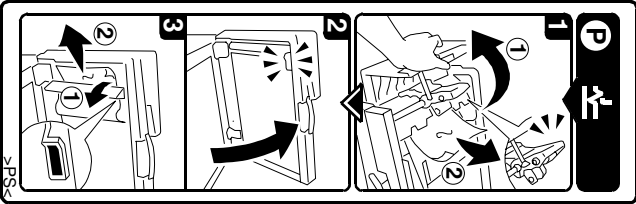

3

>PS<

Face up
Face haut
Bild oben
Faccia in su

Boca arriba
原稿面上向き
送信面上向き



4

>PS<

A4 A3 B5 B4 A5 A4 F B5 A5 5 1/2 8 8 1/2 10 11

5


A3 A4 B5 B4 A5 A4 F B5 A5 5 1/2 8 8 1/2 10 11

>PS<

11 10 8 8 1/2 5 1/2

>PS<

6

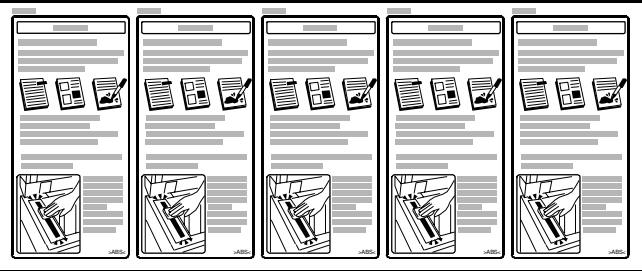

12

6.Decals And Documents (C642)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B813 6043	Decal - Side Fence	1
2	B387 6013	Decal - Removal Misfeed	1
3	C600 6941	Decal Original Insert	1
4	B813 6021	Decal - Size Indication Cover	1
5	C642 1362	Decal:Scale:Main:Mm	1
5	C642 1363	Decal:Scale:Main:Inch	1
6	B652 2379	Decal:Caution:Original:5-lang	1

Index No.	Part No.	Description	Q'ty Per Assembly

Parts Index

Parts Index

Part No.	Description	Page and Index No.
C642 1362	Decal:Scale:Main:Mm	3 - 8
C642 1362	Decal:Scale:Main:Mm	13 - 5
C642 1363	Decal:Scale:Main:Inch	3 - 8
C642 1363	Decal:Scale:Main:Inch	13 - 5
C642 5100	PCB:ADF:Ass'y	11 - 2
C642 5286	Harness:Sensor:Main:Ass'y	11 - 1
C642 5287	Harness:Connecting:Magnetic Clutch:Ass'y	11 - 3
C642 6060	Harness:Interface:Ass'y	11 - 10
C642 6121	Cover:Original Table:Rear	3 - 18

Part No.	Description	Page and Index No.
A334 4678	Rack Shield Mylar	9 - 20
A548 6121	Screw - M4	3 - 26
A628 1225	Bushing - 8mm	5 - 36
A661 1884	Pulley - 20t/48t	11 - 6
A859 2112	Drive Shaft - Paper Feed Belt	5 - 5
A859 2114	Drive Roller - Paper Feed Belt	5 - 19
A859 2121	Gear - 22z	5 - 21
A859 2141	Belt Paper Feed	5 - 20
A859 2166	Timing Belt - 2xl	5 - 34
A859 2167	Gear - 22z	5 - 15
A859 2230	Ball Bearing - 6x13x5	7 - 27
A859 2352	Pressure Plate Pad	3 - 10
A859 4171	Timing Belt - 2xl	11 - 5
A859 4321	Pulley-20z	7 - 11
A859 4665	Gear - 16z	3 - 17
A859 4836	Bushing- Exit Driven Roller	9 - 12
A859 6023	Decal Green	9 - 22
A859 7211	Stepped Screw	3 - 29
B386 2214	Screw:M3x5	7 - 31
B386 3118	Standard Screw Driver:Document Feeder	3 - 20
B386 3320	Spring:Belt:Paper Feed:8n	5 - 4
B386 3389	Roller:Driven:Middle:Ep35	9 - 5
B386 3513	Guide:Exposure Glass	7 - 19
B386 7102	Scale:Machine Or Copier:Adhesion	3 - 24
B387 1123	Bracket - Cover Open Sensor	11 - 21
B387 1221	Exit Grounding Plate	7 - 25
B387 1316	Feed Clutch Bracket	11 - 20
B387 1320	Transport Roller Bracket	9 - 2
B387 1322	Spring Plate	9 - 1
B387 1331	Original Sensor Bracket	7 - 8
B387 1612	Bracket - Reverse Roller Shaft	7 - 7
B387 1671	Reverse Roller	7 - 4
B387 1711	Left Lower Stay	5 - 24
B387 1712	Center Bracket - Left Lower Stay	5 - 38
B387 1713	Outer Bracket - Left Lower Stay	5 - 39

Part No.	Description	Page and Index No.
B387 1721	Left Lower Guide	5 - 22
B387 1722	Entrance Guide	5 - 23
B387 1912	Base	9 - 17
B387 1921	Driven Exit Roller	9 - 11
B387 1932	Base - Platen Cover	9 - 18
B387 1941	Feeler - Paper Size Sensor	11 - 27
B387 1951	Spring - Paper Size Sensor	11 - 28
B387 2111	Belt Holder	5 - 6
B387 2113	Roller - Paper Feed Belt	5 - 3
B387 2120	Shaft - Paper Feed Belt	5 - 10
B387 2131	Rear Feed Guide	5 - 8
B387 2132	Front Feed Guide	5 - 18
B387 2133	Pickup Arm	5 - 7
B387 2151	Pickup Holder	5 - 1
B387 2161	Pickup Roller	5 - 14
B387 2162	Pickup Roller Shaft	5 - 2
B387 2163	Pickup Collar	5 - 12
B387 2164	Timing Pulley - 20z	5 - 11
B387 2210	Reverse Roller Shaft	7 - 6
B387 2220	Reverse Roller Cover	7 - 33
B387 2250	Torque Limiter - 40mnm	7 - 5
B387 2310	Guide Plate - Paper Feed	3 - 11
B387 2316	Cushion:Stopper Pawl	7 - 34
B387 2321	Separation Guide Mylar	3 - 21
B387 2355	Pickup Lever	11 - 17
B387 2365	Stopper Pawl Lever	11 - 19
B387 2375	Pickup Spring	11 - 18
B387 2411	Original Stopper	7 - 3
B387 2421	Original Stopper Cam	7 - 2
B387 2431	Original Stopper Lever	7 - 23
B387 2435	Original Stopper Spring	7 - 22
B387 3110	Left Transport Roller	7 - 16
B387 3120	Right Transport Roller	9 - 7
B387 3130	Exit Roller	7 - 1
B387 3210	Guide Plate - Transport Roller	7 - 20

Part No.	Description	Page and Index No.
B387 3220	Guide Plate - Upper Exit	7 - 18
B387 3225	Discharge Brush	7 - 17
B387 3313	Shaft - Transport Driven Roller	5 - 30
B387 3317	Main Shaft - Transport Driven	5 - 33
B387 3318	Front Pressure Spring	5 - 28
B387 3319	Rear Pressure Spring	5 - 31
B387 3321	Spring Cover	5 - 32
B387 3322	Cover - Transport Driven Roller	5 - 27
B387 3411	Exit Guide Plate	9 - 4
B387 3412	Shaft - Exit Guide Plate	9 - 8
B387 3413	Cover - Exit Guide Plate	9 - 16
B387 3425	Spring Plate	9 - 6
B387 3430	Rear Spring - Exit Guide Plate	9 - 9
B387 3431	Front Spring - Exit Guide Plate	9 - 10
B387 4111	Transport Motor Bracket	11 - 8
B387 4198	Transport Motor Spring	11 - 7
B387 4216	Feed Clutch Shaft	5 - 9
B387 4221	Gear - 28z	7 - 21
B387 4222	Flange	11 - 13
B387 4231	Gear/pulley - 20/21z	11 - 14
B387 4241	Gear - 20z	11 - 15
B387 4251	Timing Belt -2xl	11 - 24
B387 4271	Coupled Pulley - 20/30z	7 - 24
B387 4311	Adjusting Bracket	7 - 14
B387 4331	Timing Belt - 2xl	7 - 12
B387 4342	Adjusting Bracket Spring	7 - 13
B387 4605	Upper Original Table	3 - 9
B387 4640	Front Side Fence	3 - 5
B387 4661	Front Rack - Side Fence	3 - 16
B387 4671	Rear Rack - Side Fence	3 - 19
B387 4812	Front Cover	3 - 14
B387 4822	Rear Cover	3 - 23
B387 4841	Left Cover	3 - 3
B387 4872	Original Sensor Feeler	5 - 16
B387 4873	Positioning Plate	3 - 2

Part No.	Description	Page and Index No.
B387 4875	Left Cover Band	3 - 13
B387 6013	Decal - Removal Misfeed	3 - 12
B387 6013	Decal - Removal Misfeed	13 - 2
B616 5715	Harness - Sensor Registration	11 - 11
B616 5715	Harness - Sensor Registration	7 - 37
B616 5720	Harness - Sensor Original	11 - 29
B616 5720	Harness - Sensor Original	7 - 36
B652 2379	Decal:Caution:Original:5-lang	13 - 6
B652 2379	Decal:Caution:Original:5-lang	3 - 4
B813 1811	Left Hinge	9 - 3
B813 1831	Right Hinge	9 - 14
B813 1841	Feeler - On Off Detector	9 - 15
B813 3315	Transport Roller	5 - 29
B813 3600	Sheet Ass'y	9 - 23
B813 4125	Stepper Motor Ass'y	11 - 9
B813 4421	DC Solenoid Ass'y	11 - 12
B813 4621	Original Table	3 - 28
B813 4656	Side Fence - Rear	3 - 6
B813 6021	Decal - Size Indication Cover	13 - 4
B813 6021	Decal - Size Indication Cover	3 - 1
B813 6043	Decal - Side Fence	3 - 22
B813 6043	Decal - Side Fence	13 - 1
C101 2360	Snap Ring	11 - 26
C600 6941	Decal Original Insert	3 - 7
C600 6941	Decal Original Insert	13 - 3
G412 3831	Pulley - 22z	5 - 13

Part No.	Description	Page and Index No.
AA06 3311	Transport Roller Spring	9 - 13
AA06 3435	Compression Spring:Paper Feed:Joint	5 - 17
AA13 2013	Spacer	5 - 35
AA14 3788	Pin:Guide Plate:Paper Feed	3 - 15
AA14 3788	Pin:Guide Plate:Paper Feed	7 - 15
AA14 3790	Screw:Contact Point	7 - 32
AC01 3004	Exposure Glass	3 - 25
AG07 0513	Magnet Catch	7 - 10
AW01 0109	Photo Refiection Sensor:Ps117ed1	7 - 30
AW02 0141	Photointerruptor	7 - 9
AW02 0141	Photointerruptor	11 - 4
AX21 0092	Magnetic Clutch:Z30	11 - 16

Part No.	Description	Page and Index No.
0353 0040N	Screw - M3x4	11 - 104
0353 0060N	Bind Screw - M3x6	5 - 106
0450 3008N	Tapping Screw - M3x8	3 - 101
0450 4008N	Tapping Screw - M4x8	9 - 101
0451 3006N	Tapping Screw - 3x6	3 - 103
0451 3006N	Tapping Screw - 3x6	5 - 101
0451 3006N	Tapping Screw - 3x6	9 - 102
0451 3006N	Tapping Screw - 3x6	7 - 101
0451 3006N	Tapping Screw - 3x6	11 - 101
0451 3008N	Tapping Screw - M3x8	9 - 104
0452 3008N	Tapping Screw - M3x8	9 - 106
0452 3008N	Tapping Screw - M3x8	11 - 105
0452 3008N	Tapping Screw - M3x8	3 - 102
0454 3006Q	Tapping Screw - M3x6	9 - 103
0632 0100G	Pin - 2x10mm	5 - 103
0720 0030E	Retaining Ring - M3	5 - 105
0720 0040E	Retaining Ring - M4	11 - 102
0720 0040E	Retaining Ring - M4	5 - 102
0720 0040E	Retaining Ring - M4	9 - 105
0720 0040E	Retaining Ring - M4	7 - 102
0720 0050E	Retaining Ring - M5	7 - 104
0720 0060E	Retaining Ring - M6	7 - 103
0720 0060E	Retaining Ring - M6	5 - 104
0951 3006N	Screw - M3x6	11 - 103
1105 0488	Harness Clamp	11 - 107
1105 0516	Clamp	9 - 107
1105 0516	Clamp	11 - 106
1105 0516	Clamp	7 - 105

Part No.	Description	Page and Index No.
5053 0447	Bushing - 6mm	7 - 26
5053 0447	Bushing - 6mm	9 - 19
5053 0447	Bushing - 6mm	5 - 37
5206 2686	Snap Ring	3 - 27
5206 2686	Snap Ring	11 - 25
5215 2621	Snap Ring - M6	7 - 28
5304 1639	Bushing - 8mm	5 - 26
5304 1639	Bushing - 8mm	11 - 22
5304 1639	Bushing - 8mm	7 - 29
5447 2681	Snap Ring	7 - 35
5447 2681	Snap Ring	5 - 25
5447 2681	Snap Ring	9 - 21
5447 2681	Snap Ring	11 - 23