


Sargas-PJ1 (PJ WXL6280 / PJ WUL6280 / PJ LW6000 / PJ LU6000)

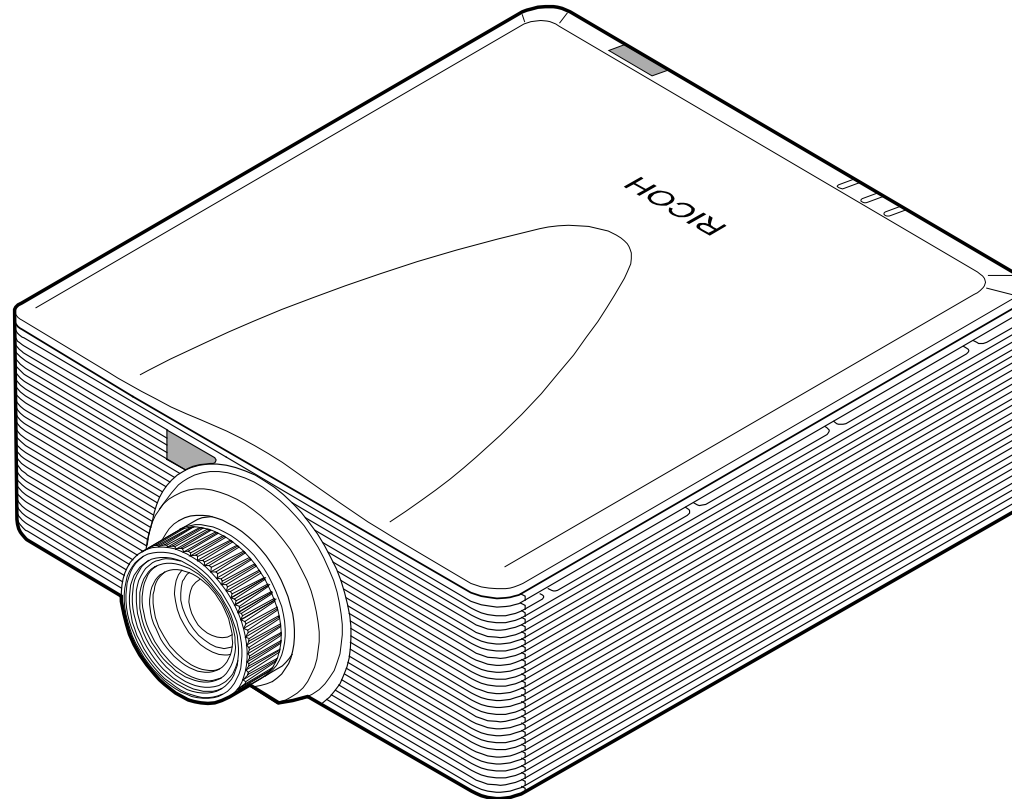


PARTS CATALOG

This catalog gives the numbers and names of parts on this machine.

1. Projector 1	1 P
2. Projector 2	3 P
3. Projector 3	5 P
4. Projector 4	7 P
5. Parts Index	9 P

1. Projector 1

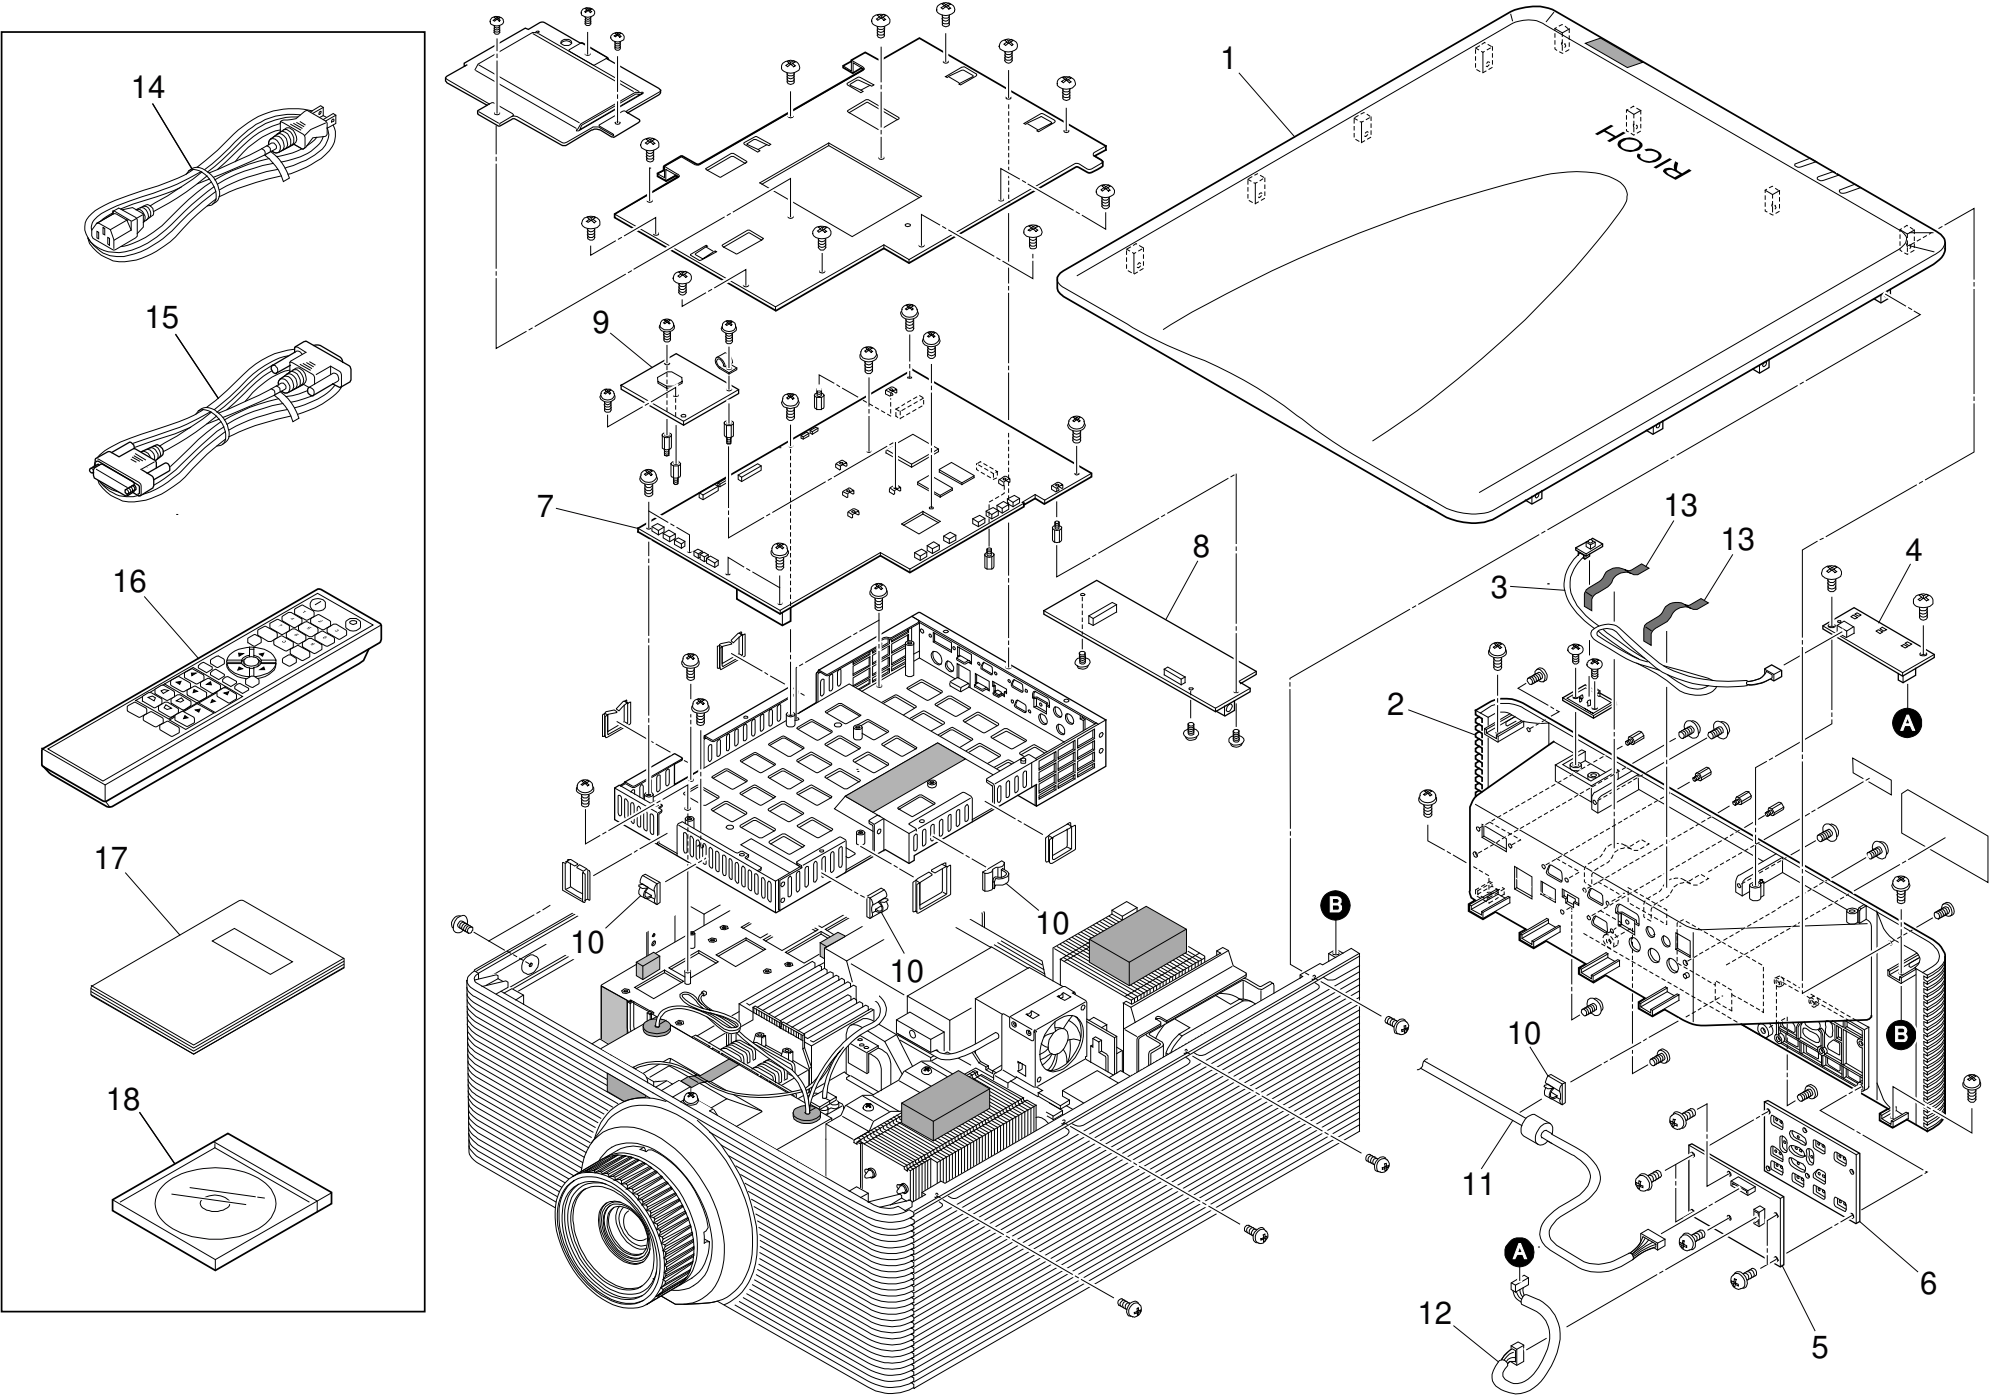


1. Projector 1

Index No.	Part No.	Description	Q'ty Per Assembly
1	Y0951122	COVER:UPPER:ASS'Y	1
2	Y0951240	COVER:REAR:ASS'Y	1
3	Y0955023	PCB:SENSOR:RECEIVER:REMOTE CONTROL	1
4	Y0955022	PCB:WARNING	1
5	Y0955021	PCB:OPERATION SUB-UNIT	1
6	Y0951152	SHEET:OPERATION SUB-UNIT	1
7	Y0965001	PCB:MAIN:WX:(PJ WXL6280 / PJ LW6000)	1
	Y0955004	PCB:MAIN:WU:(PJ WUL6280 / PJ LU6000)	1
8	Y0955010	PCB:SUB	1
9	Y0955015	PCB:LAN	1
10	Y0951096	CLAMP	4
11	Y0955040	HARNESS:OPERATION SUB-UNIT:MAIN	1
12	Y0955046	HARNESS:OPERATION SUB-UNIT:WARNING	1
13	Y0671665	SEAL:60X17	2
14	Y0956078	POWER SUPPLY CORD:(CHN) (PJ WXL6280 / PJ WUL6280 / PJ LW6000 / PJ LU6000)	1
	Y0956077	POWER SUPPLY CORD:(EU) (PJ WXL6280 / PJ WUL6280)	1
	Y0956076	POWER SUPPLY CORD:(NA) (PJ WXL6280 / PJ WUL6280)	1
15	Y0206084	CABLE VGA 15P 1.8M BLK ES526	1
16	Y0956021	REMOTE CONTROL	1
17	Y0956001	QUICK START CARD FOR READ THIS FIRST, WWW, PJ WUL6280 / PJ WXL6280	1
	Y0956002	QUICK START CARD FOR READ THIS FIRST, CHN, PJ LW6000 / PJ LU6000	1
18	Y0956011	USER'S GUIDE MULTILINGUAL (CD), PJ WUL6280 / WXL6280	1

[illegible]


2. Projector 2

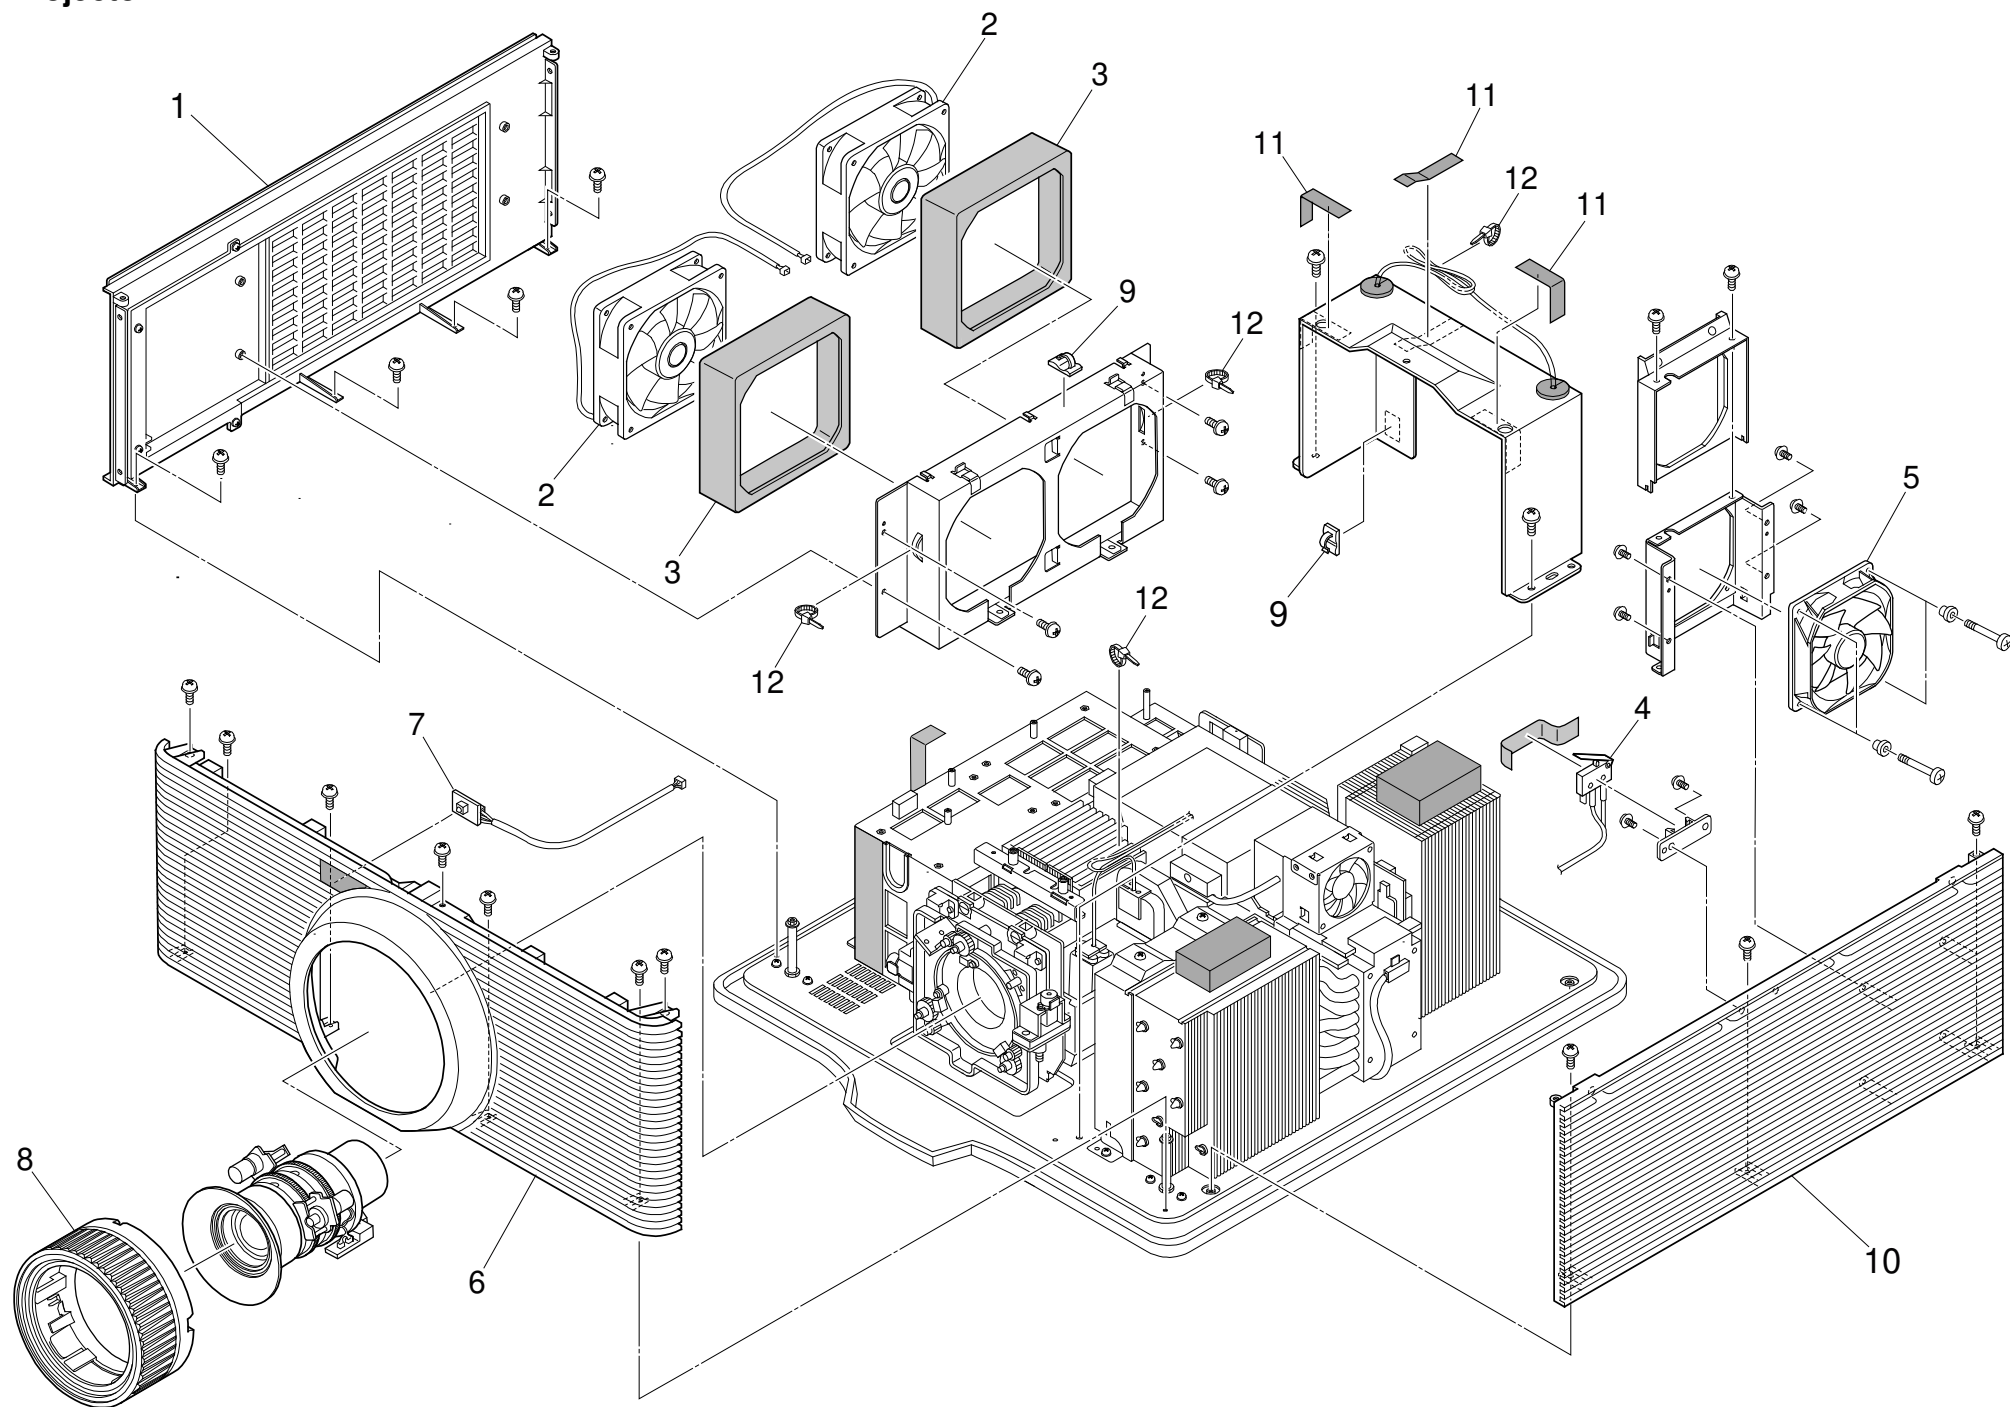

2. Projector 2

[illegible][illegible]


3. Projector 3

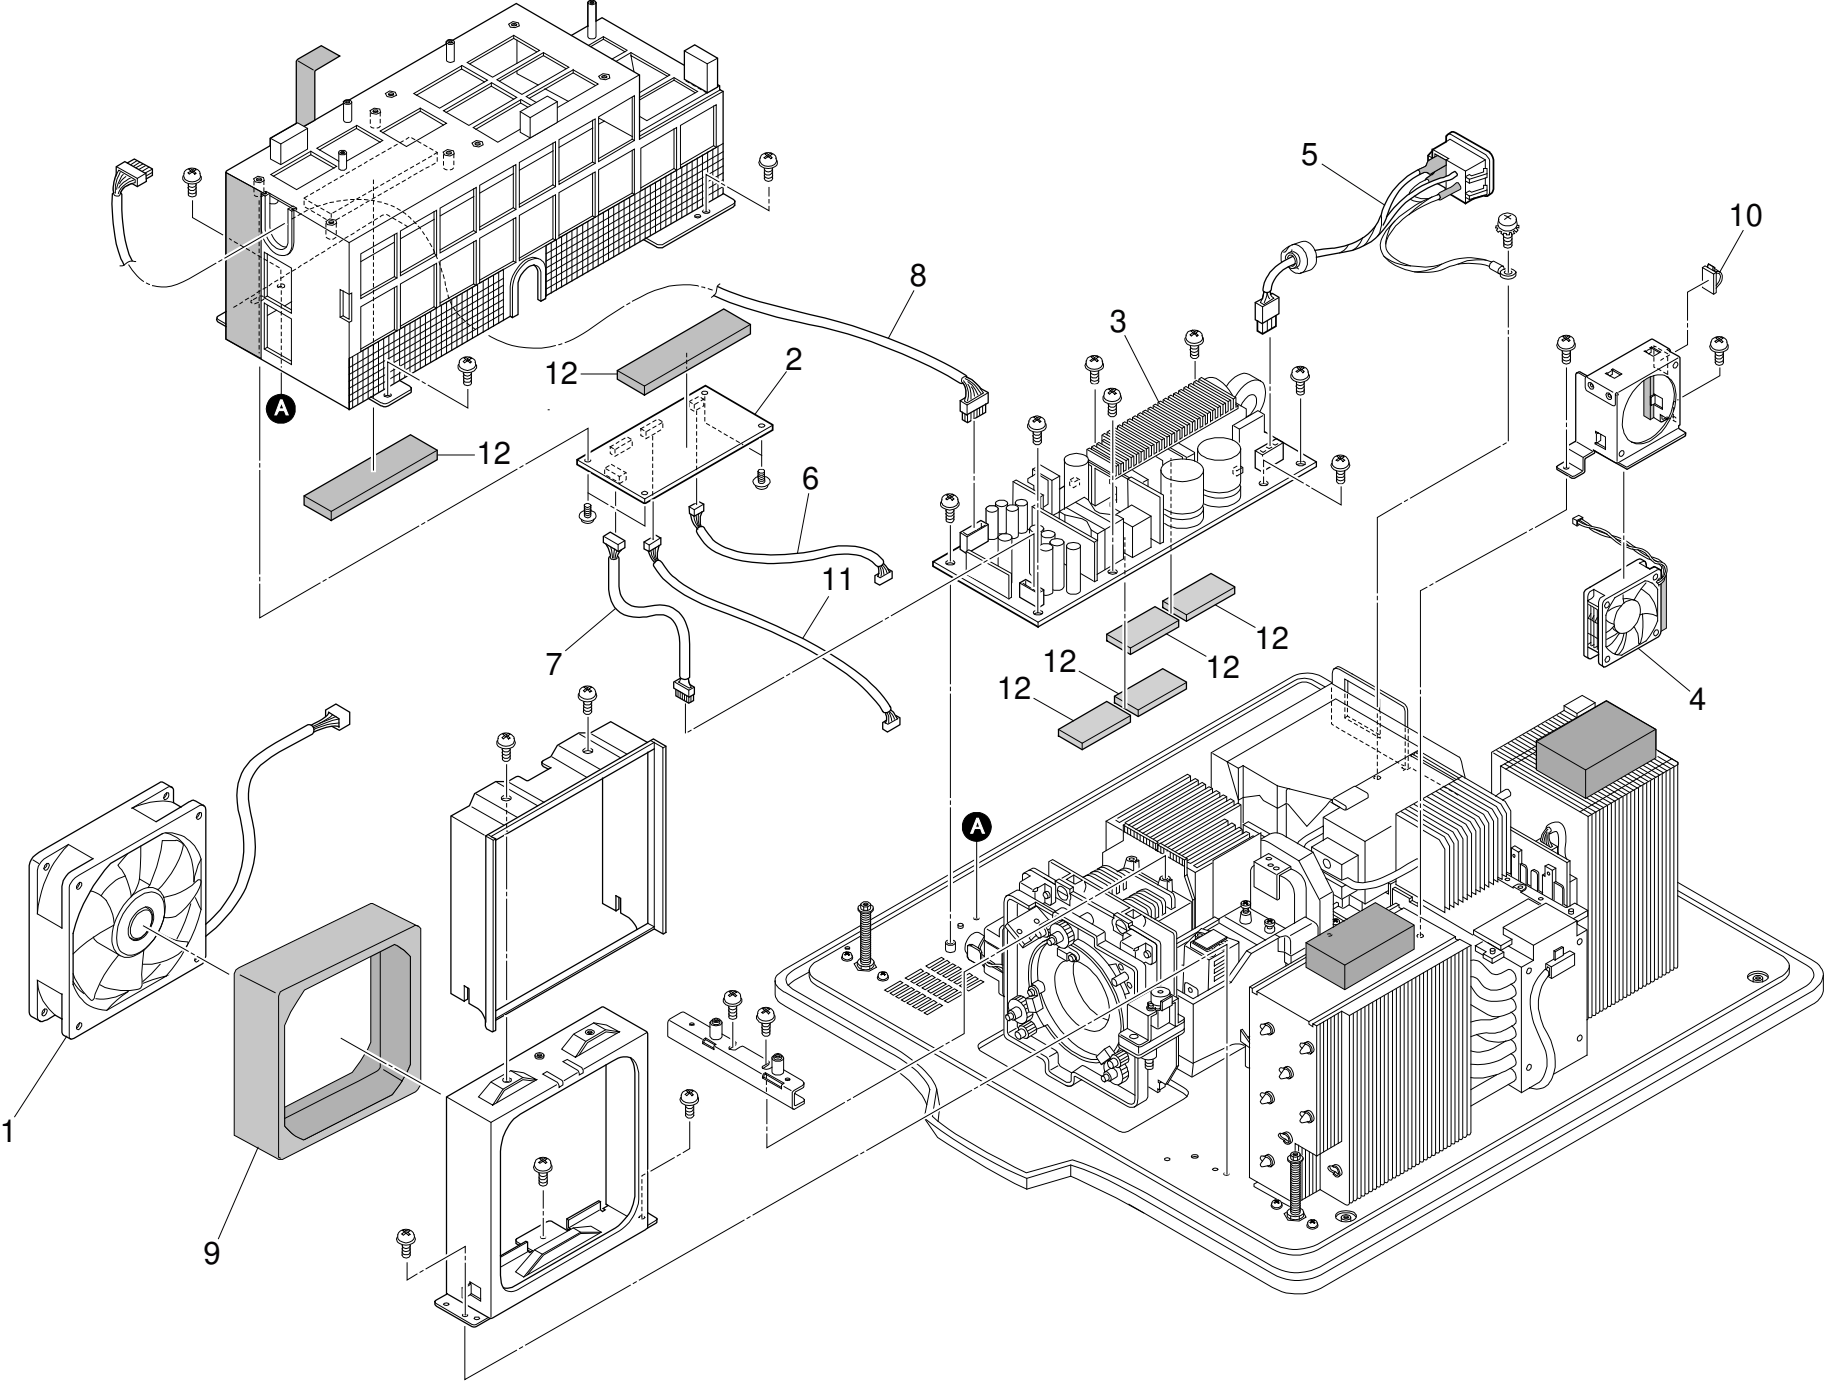

3. Projector 3

[illegible][illegible]

4. Projector 4

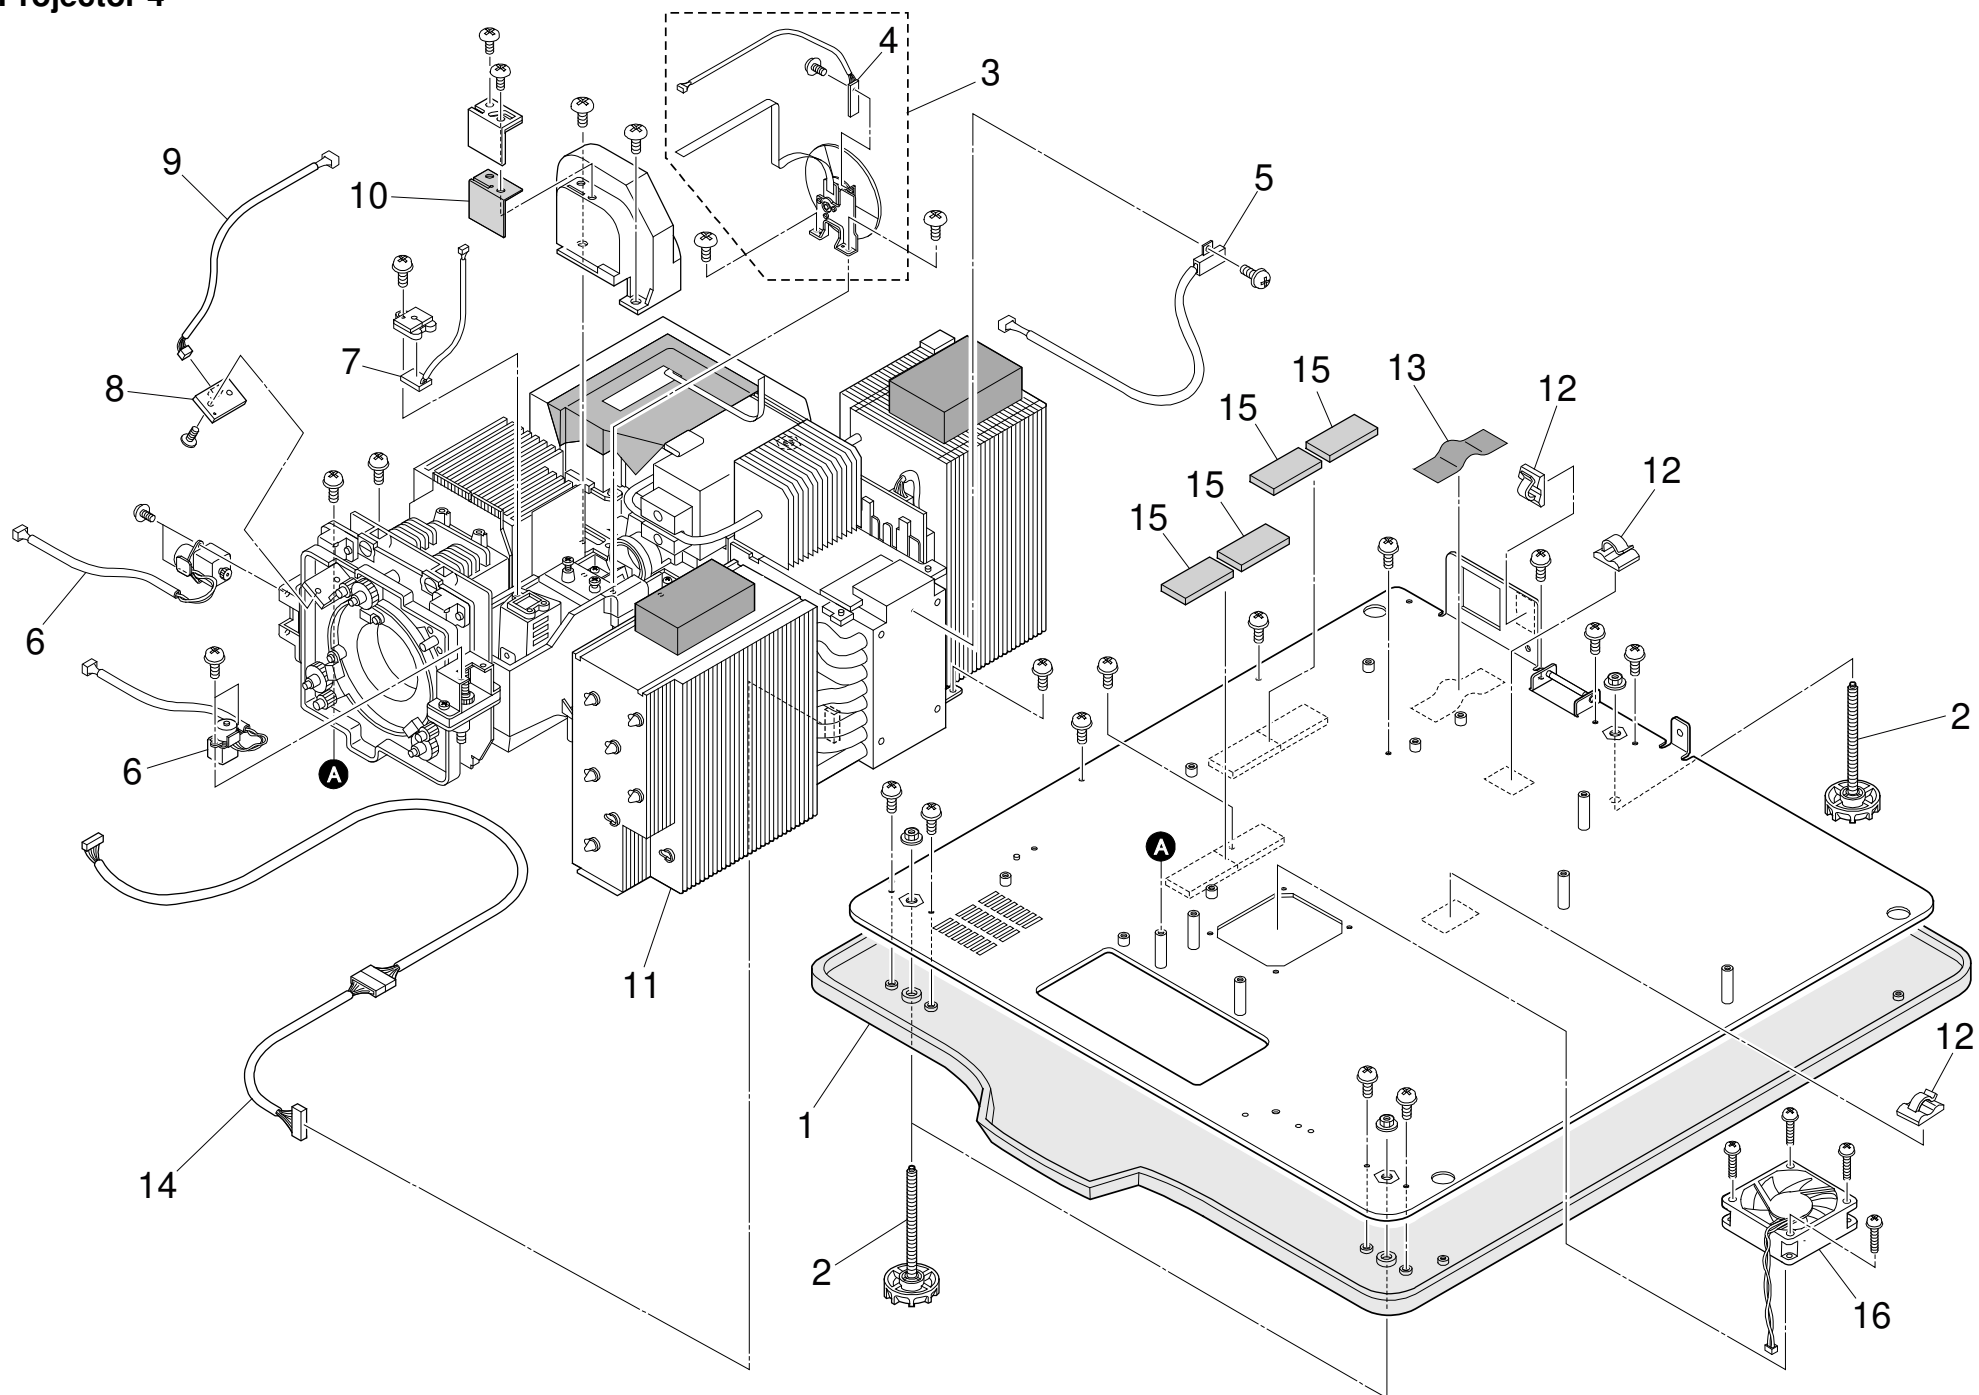

4. Projector 4

[illegible][illegible]

5. Parts Index

Part No.	Description	Page and Index No.
Y0206084	CABLE VGA 15P 1.8M BLK ES526	2 - 15
Y0413144	BASE:CONNECTOR:LENS	8 - 8
Y0671665	SEAL:60X17	2 - 13
Y0671665	SEAL:60X17	4 - 11
Y0671665	SEAL:60X17	8 - 13
Y0682456	FAN:AXIAL:MM120X25	4 - 2
Y0682456	FAN:AXIAL:MM120X25	6 - 1
Y0882030	FAN:MM105X30	4 - 5
Y0951001	BASE	8 - 1
Y0951020	ADJUSTING PIN:RUBBER FOOT	8 - 2
Y0951091	CUSHION:FAN:75X25	4 - 3
Y0951091	CUSHION:FAN:75X25	6 - 9
Y0951092	SPONGE	8 - 10
Y0951095	CLAMP	4 - 12
Y0951096	CLAMP	2 - 10
Y0951096	CLAMP	4 - 9
Y0951096	CLAMP	6 - 10
Y0951096	CLAMP	8 - 12
Y0951122	COVER:UPPER:ASS'Y	2 - 1
Y0951152	SHEET:OPERATION SUB-UNIT	2 - 6
Y0951181	COVER:FRONT	4 - 6
Y0951185	COVER:LEFT:BLACK:ASS'Y	4 - 1
Y0951187	COVER:RIGHT:ASS'Y	4 - 10
Y0951200	COVER:FRONT:LENS:ASS'Y	4 - 8
Y0951240	COVER:REAR:ASS'Y	2 - 2
Y0952030	FAN:AXIAL:7525	8 - 16
Y0952040	POWER SUPPLY UNIT	6 - 3
Y0952100	THERMOSTAT:POWER SUPPLY UNIT	8 - 5
Y0953000	OPTICAL UNIT:SARGAS:WU (PJ WUL6280 / PJ LU6000)	8 - 11
Y0953001	OPTICAL UNIT:SARGAS:W (PJ WXL6280 / PJ LW6000)	8 - 11
Y0953010	OPTICAL FILTER:CW:ASS'Y	8 - 3
Y0953020	PCB:SENSOR:CW:MAIN	8 - 4

Part No.	Description	Page and Index No.
Y0953060	SHEET:DIGITAL MICROMIRROR DEVICE	6 - 12
Y0953060	SHEET:DIGITAL MICROMIRROR DEVICE	8 - 15
Y0953500	OPTICS SENSOR	8 - 7
Y0955004	PCB:MAIN:WU:(PJ WUL6280 / PJ LU6000)	2 - 7
Y0955010	PCB:SUB	2 - 8
Y0955015	PCB:LAN	2 - 9
Y0955020	PCB:LDDRIVER	6 - 2
Y0955021	PCB:OPERATION SUB-UNIT	2 - 5
Y0955022	PCB:WARNING	2 - 4
Y0955023	PCB:SENSOR:RECEIVER:REMOTE CONTROL	2 - 3
Y0955023	PCB:SENSOR:RECEIVER:REMOTE CONTROL	4 - 7
Y0955024	DC MOTOR:MOVE	8 - 6
Y0955025	FAN:MM55X15	6 - 4
Y0955040	HARNESS:OPERATION SUB-UNIT:MAIN	2 - 11
Y0955041	HARNESS:POWER SUPPLY UNIT:MAIN	6 - 8
Y0955042	HARNESS:LDDRIVER:LIGHT SOURCE	6 - 11
Y0955043	HARNESS:LDDRIVER:POWER SUPPLY UNIT	6 - 7
Y0955044	HARNESS:LDDRIVER:MAIN	6 - 6
Y0955045	HARNESS:LDDRIVER:LIGHT SOURCE	8 - 14
Y0955046	HARNESS:OPERATION SUB-UNIT:WARNING	2 - 12
Y0955047	HARNESS:ZOOM:MAIN	8 - 9
Y0955048	HARNESS:INLET	6 - 5
Y0955500	PUSH SWITCH:COVER:RIGHT:POWER SUPPLY UNIT	4 - 4
Y0956001	QUICK START CARD FOR READ THIS FIRST, WWW, PJ WUL6280 / PJ WXL6280	2 - 17
Y0956002	QUICK START CARD FOR READ THIS FIRST, CHN, PJ LW6000 / PJ LU6000	2 - 17
Y0956011	USER'S GUIDE MULTILINGUAL (CD), PJ WUL6280 / WXL6280	2 - 18
Y0956021	REMOTE CONTROL	2 - 16
Y0956076	POWER SUPPLY CORD:(NA) (PJ WXL6280 / PJ WUL6280)	2 - 14
Y0956077	POWER SUPPLY CORD:(EU) (PJ WXL6280 / PJ WUL6280)	2 - 14
Y0956078	POWER SUPPLY CORD:(CHN) (PJ WXL6280 / PJ WUL6280 / PJ LW6000 / PJ LU6000)	2 - 14
Y0965001	PCB:MAIN:WX:(PJ WXL6280 / PJ LW6000)	2 - 7
		-