


Model: Mira-PJ		Date: 26-Jun-17	No.: RY0AF001
Subject: How to access service mode		Prepared by: T. Sakakibara	
From: VC Product Support Section, Office Services Business Group			
Classification:	<input checked="" type="checkbox"/> Troubleshooting <input type="checkbox"/> Mechanical <input type="checkbox"/> Paper path <input type="checkbox"/> Product Safety	<input type="checkbox"/> Part information <input type="checkbox"/> Electrical <input type="checkbox"/> Transmit/receive <input type="checkbox"/> Other (     )	<input type="checkbox"/> Action required <input checked="" type="checkbox"/> Service manual revision <input type="checkbox"/> Retrofit information <input type="checkbox"/> Tier 2

## How to access service mode:

Press [Power], [Left], [Left], [Menu] to access service mode. Same as by remote controller.  
Press [Power] again to quit service mode any time.

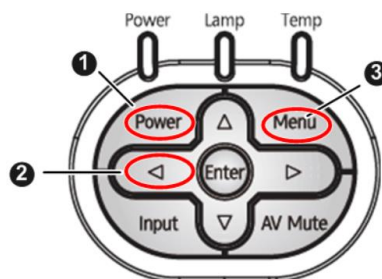

## Service mode

Some descriptions and appearance might be slightly different.

