

RICOH

Notes on Installing the Projector on a Wall or Projection Screen

For users


- Do not install the projector by yourself. Contact your sales or service representative if you want to install the projector on a wall or projection screen.

For sales or service representatives

- Use brackets that are strong enough to support the projector. The projector weighs about 3.0 kg (6.7 lb.).
- The projector must be installed in a location that is sturdy enough to support the full weight of the projector and brackets.
- Use only the screws (three M4x14 screws) provided with the projector to attach the brackets to the projector.
- Use all three of the projector's screw holes to attach the brackets. The locations of the screw holes are shown in the diagrams below. Make sure that the screws are tightened firmly.


■How to attach the brackets to the projector

〈When using the wall mount brackets〉

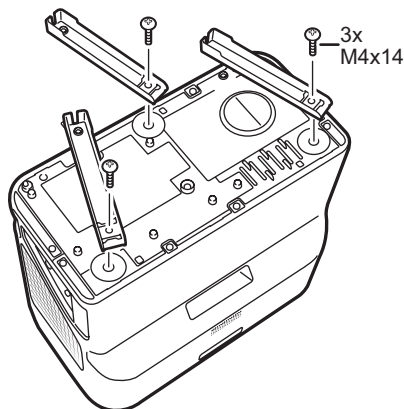

CTX007

〈When using the projection screen bracket〉

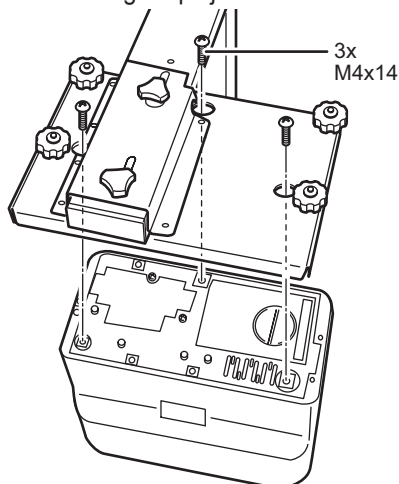

CTX008

© 2012 Ricoh Co., Ltd.

Printed in China

EN (GB) EN (US) EN (AU)

Y012-7565



Y0127565